

# 43192 Cinderella's Royal Carriage LED lighting Kit (Standard style) GC135

## Instructions for installing this kit:



### Step 1

### Test:

This product has 2 bags, and the battery box is a gift. (Without battery)




Parts in bag 1 and parts in bag 2. Please confirm that the number of parts in all bags is accurate (the parts used in this article are all samples and may be slightly different from the finished product, please forgive me).







The power supplies that can be used with the USB power cord are as follows.

# USB connectors to connect devices

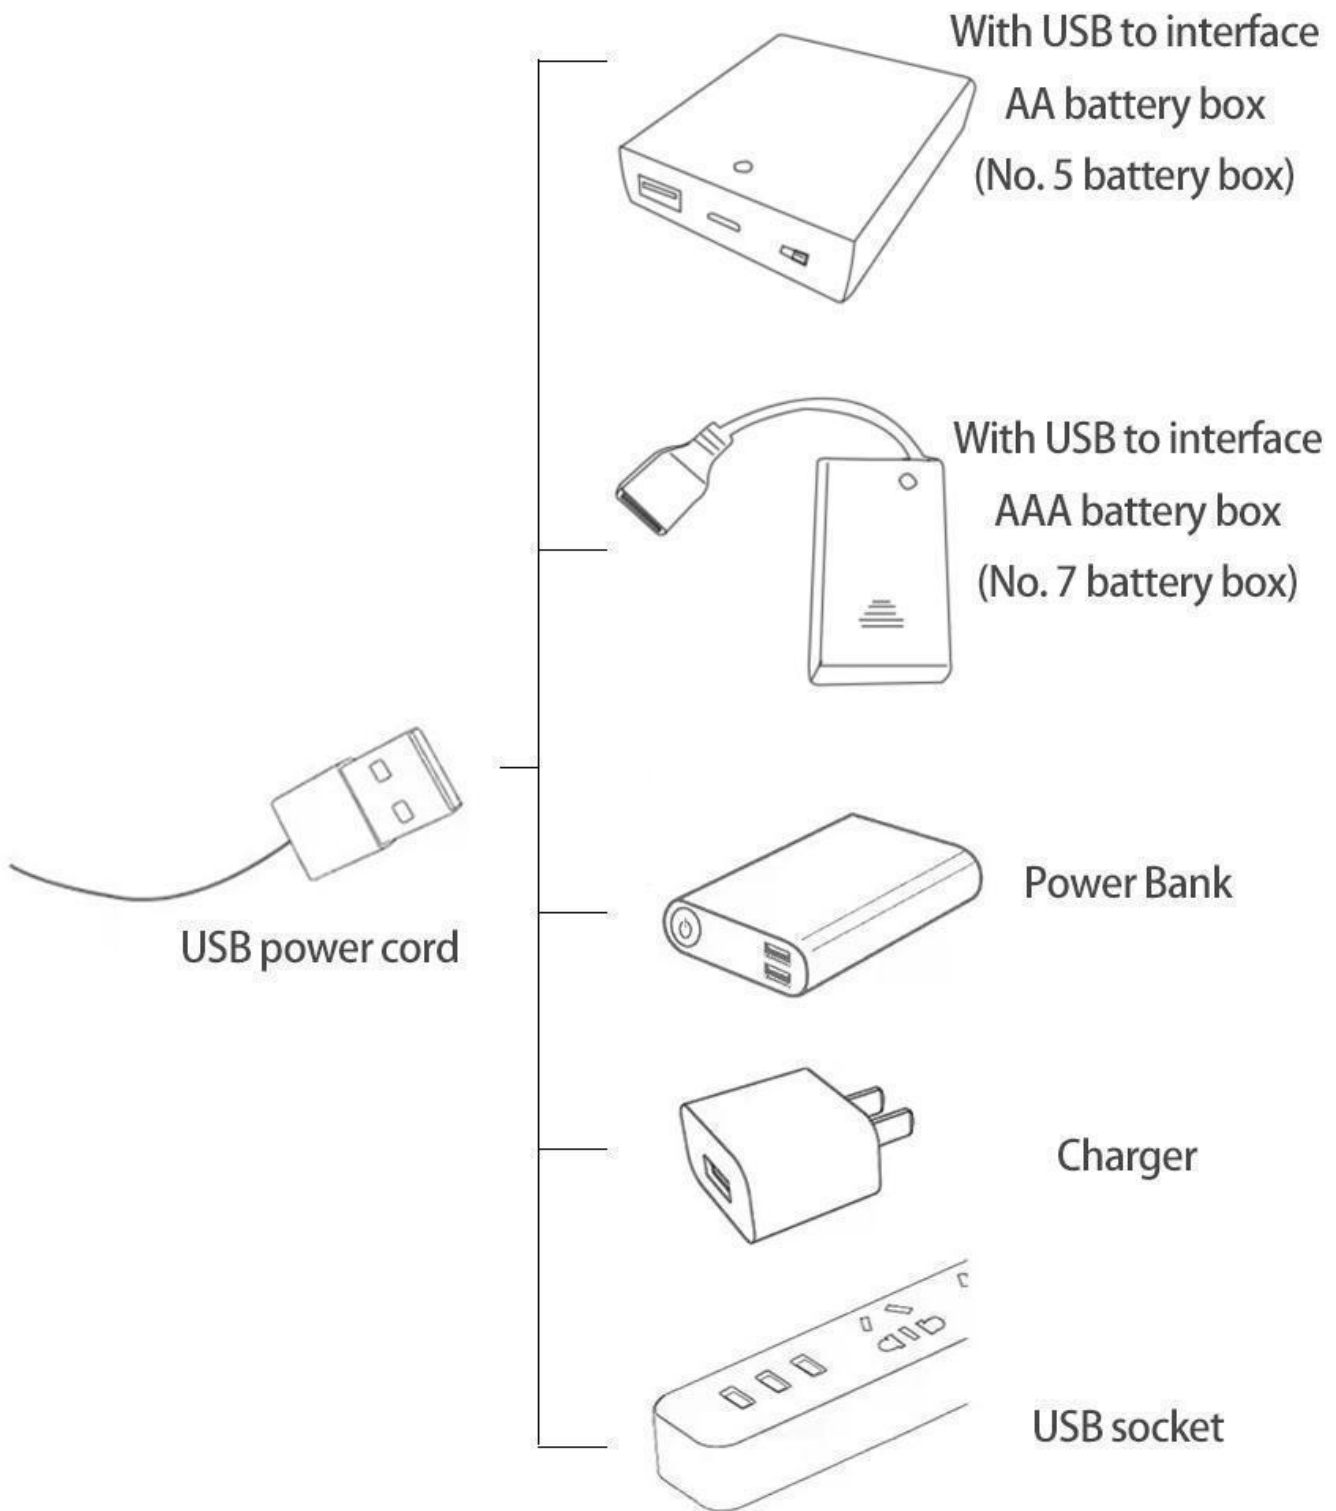




Open the coin cell battery compartment (battery not included).

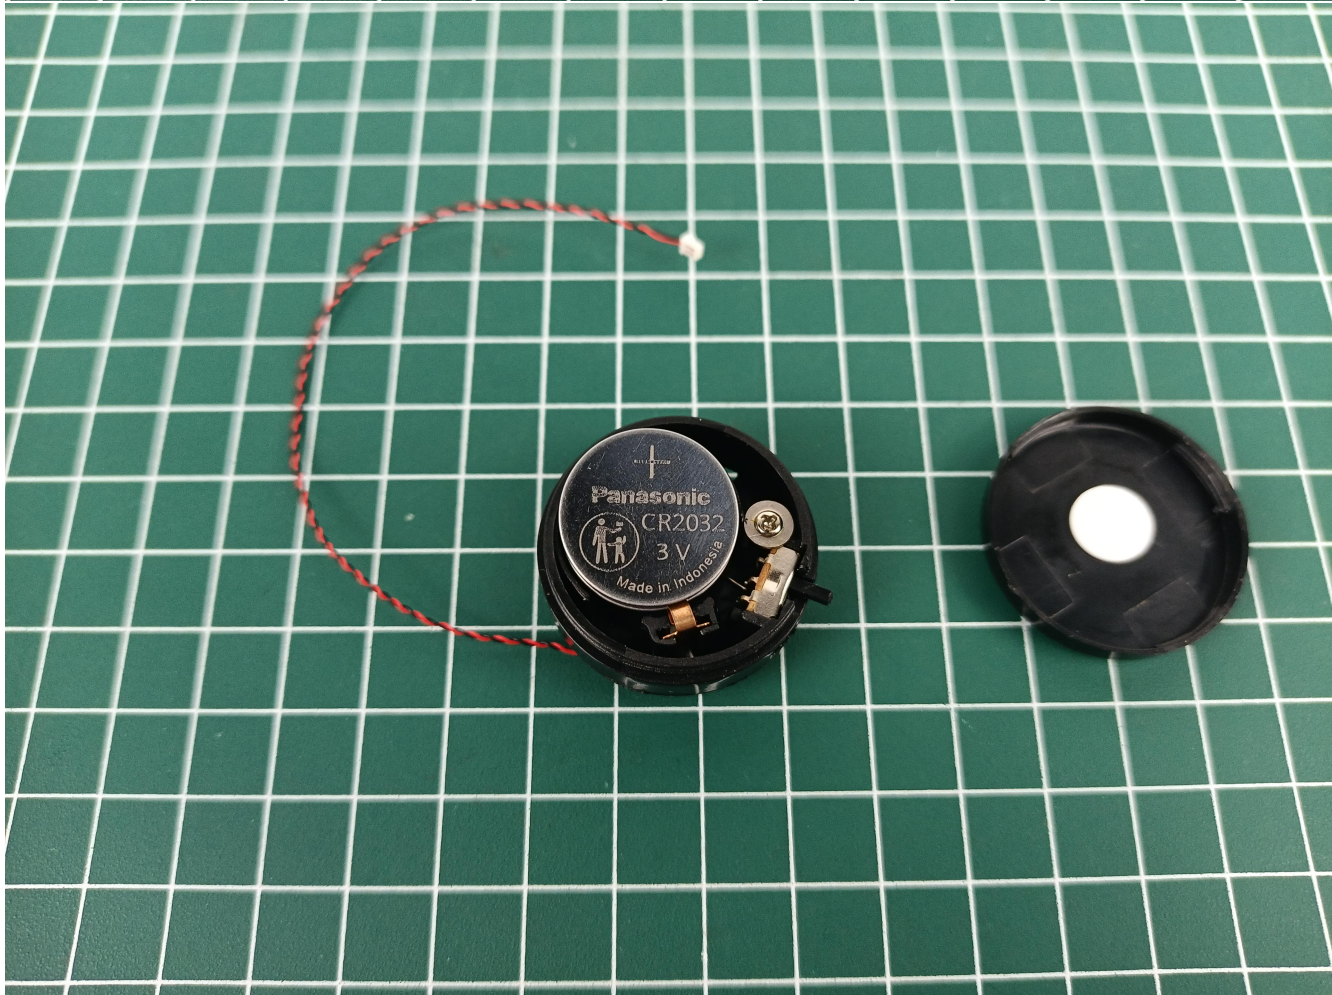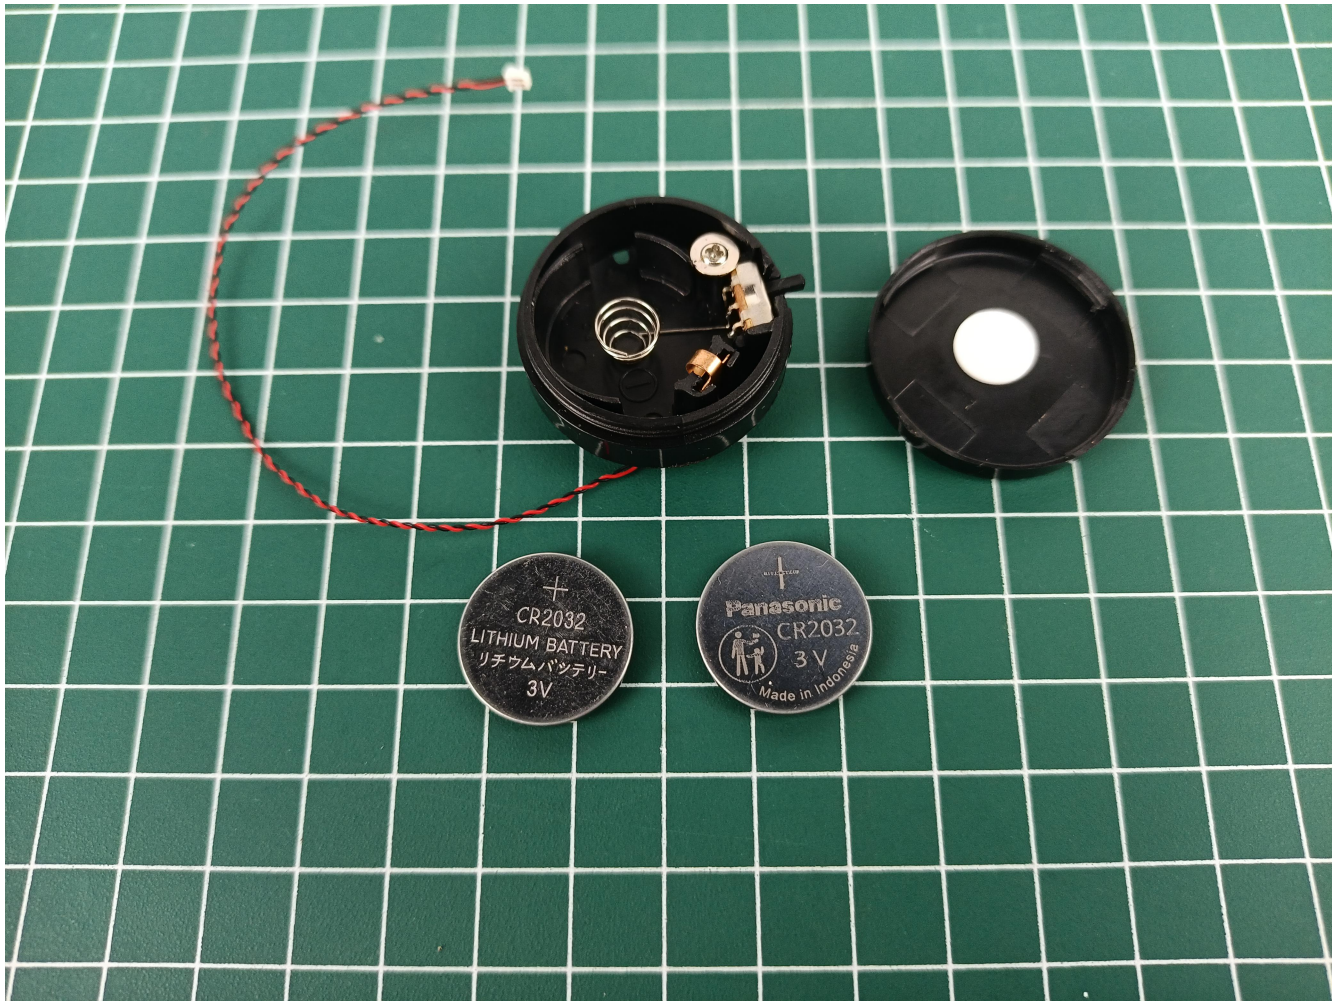





Take out the button battery box and the expansion board respectively.

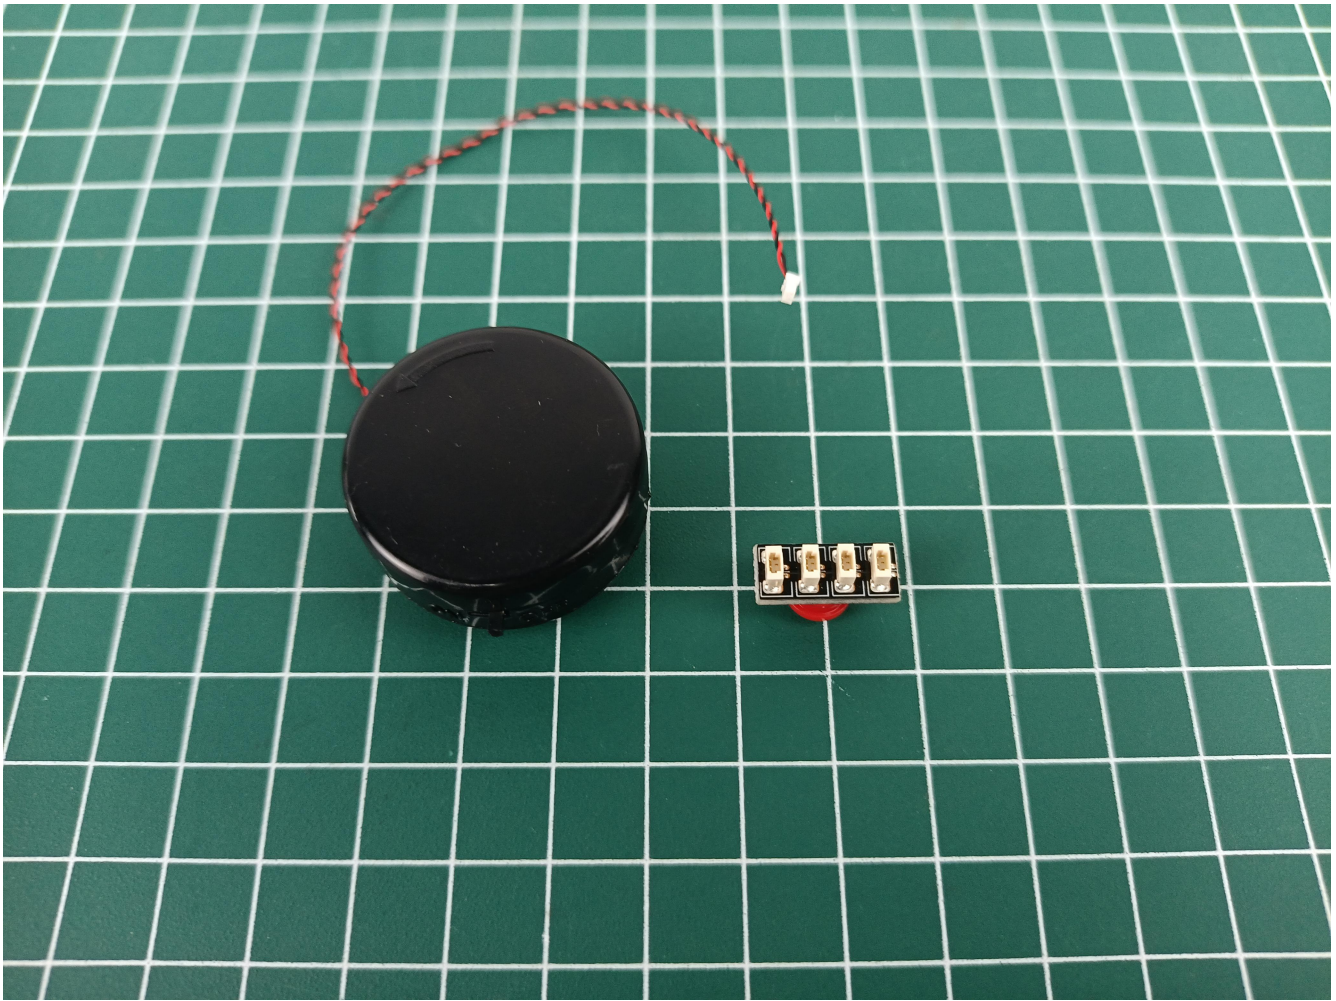




Tear off the seal of the expansion board.



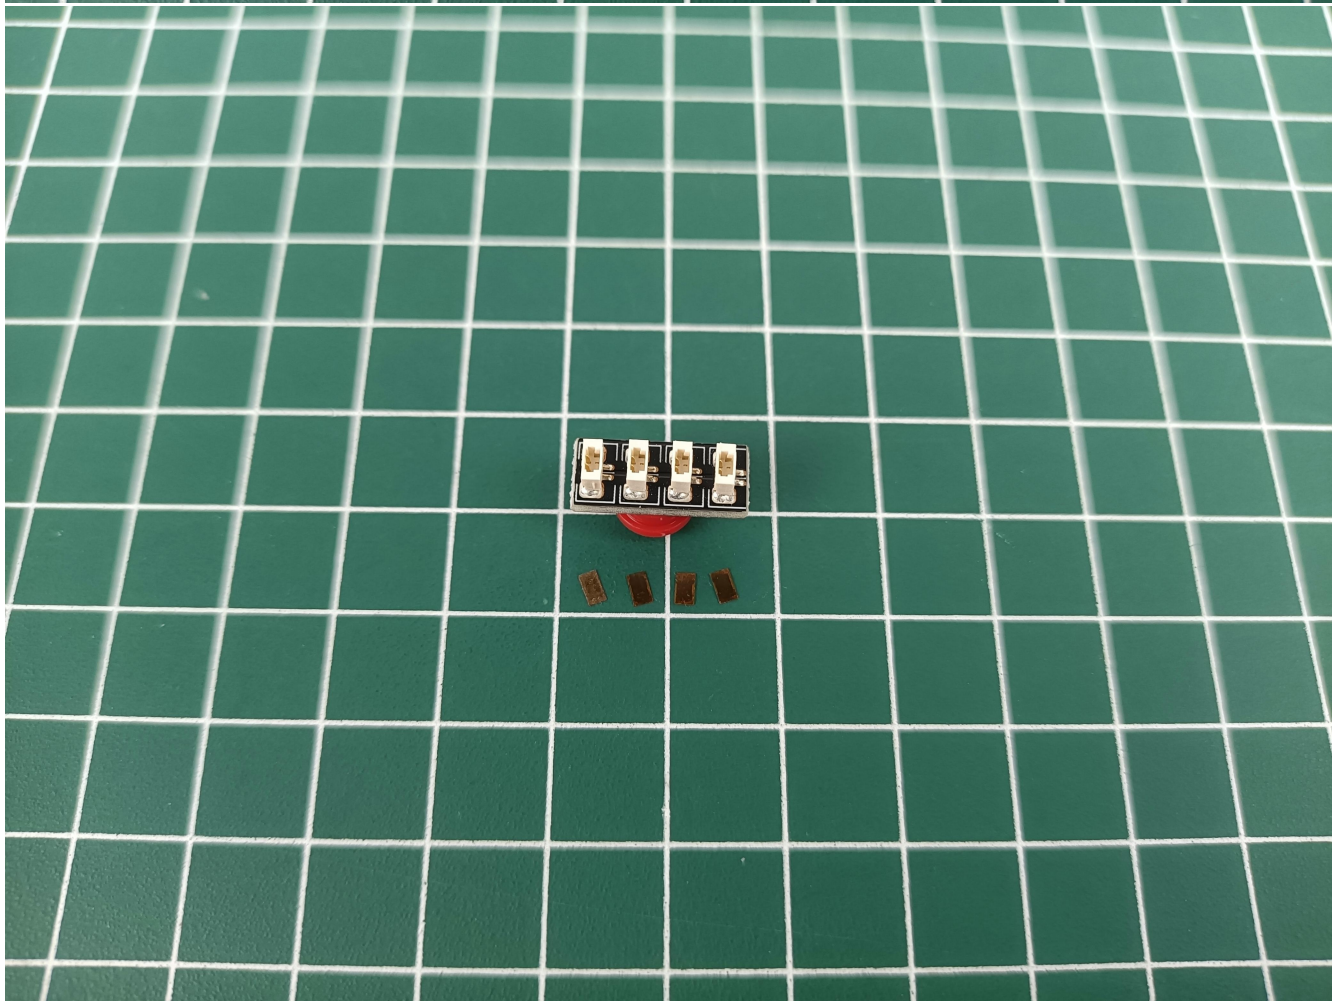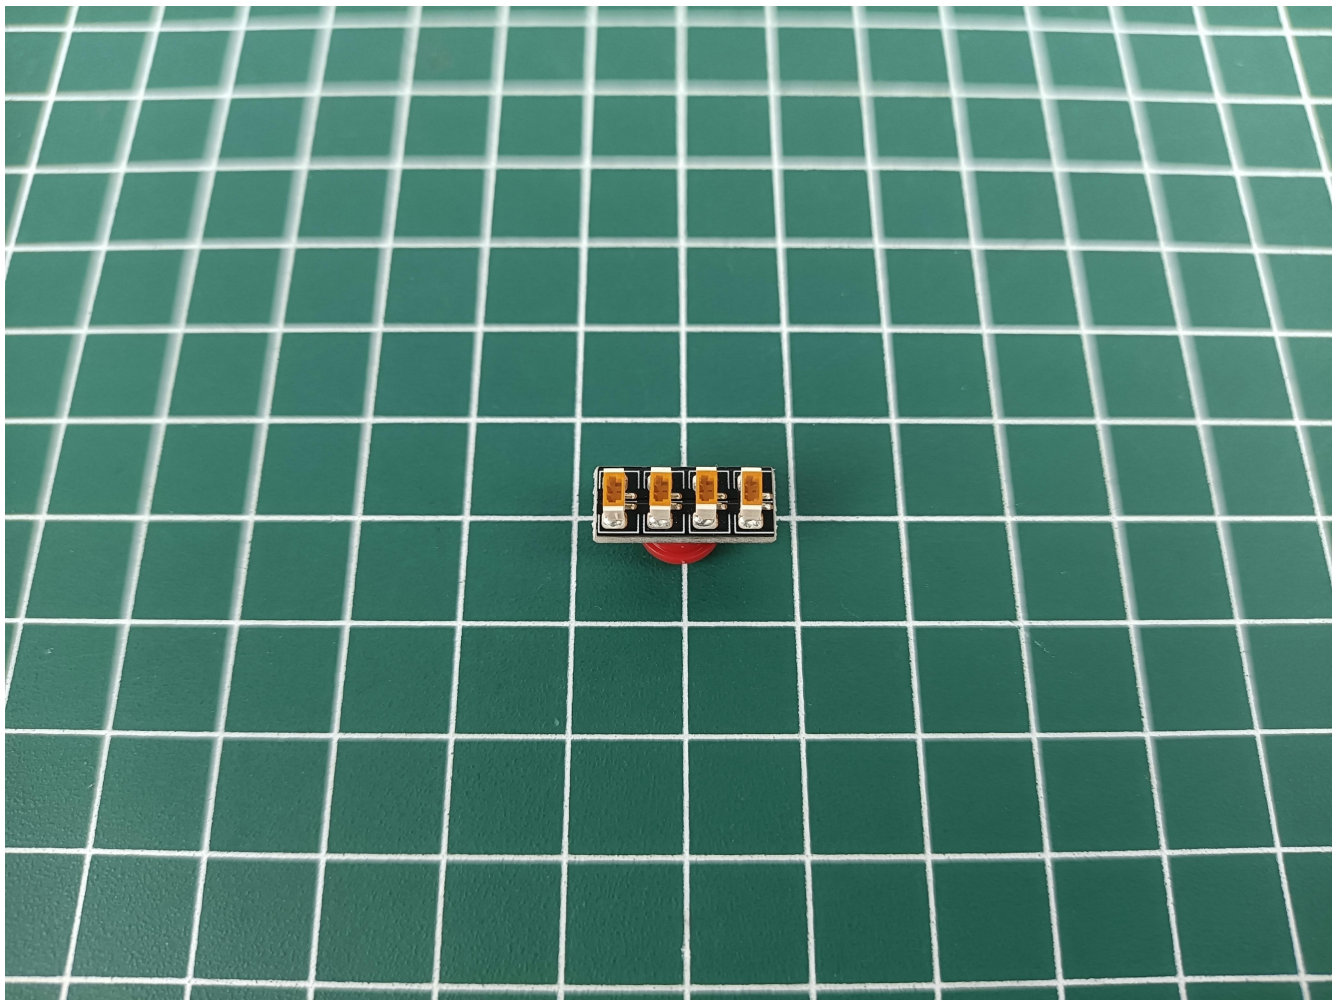




Please pay attention to the use of the interface. The interface is small. Please use it carefully: the = number of the 2P interface is aligned with the = number of the expansion board. The equal sign on the expansion board refers to the two solder joints on the outside, not the two inside the jack Metal pin.

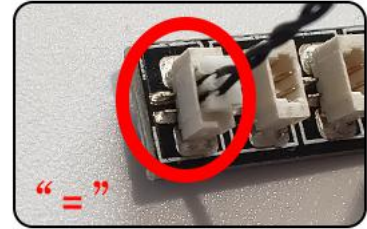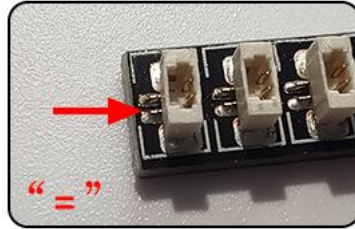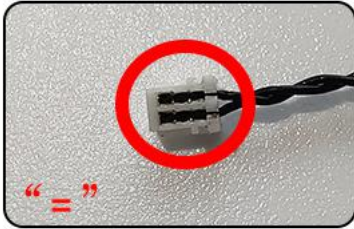

Connect the cable of the coin cell battery box to the expansion board.

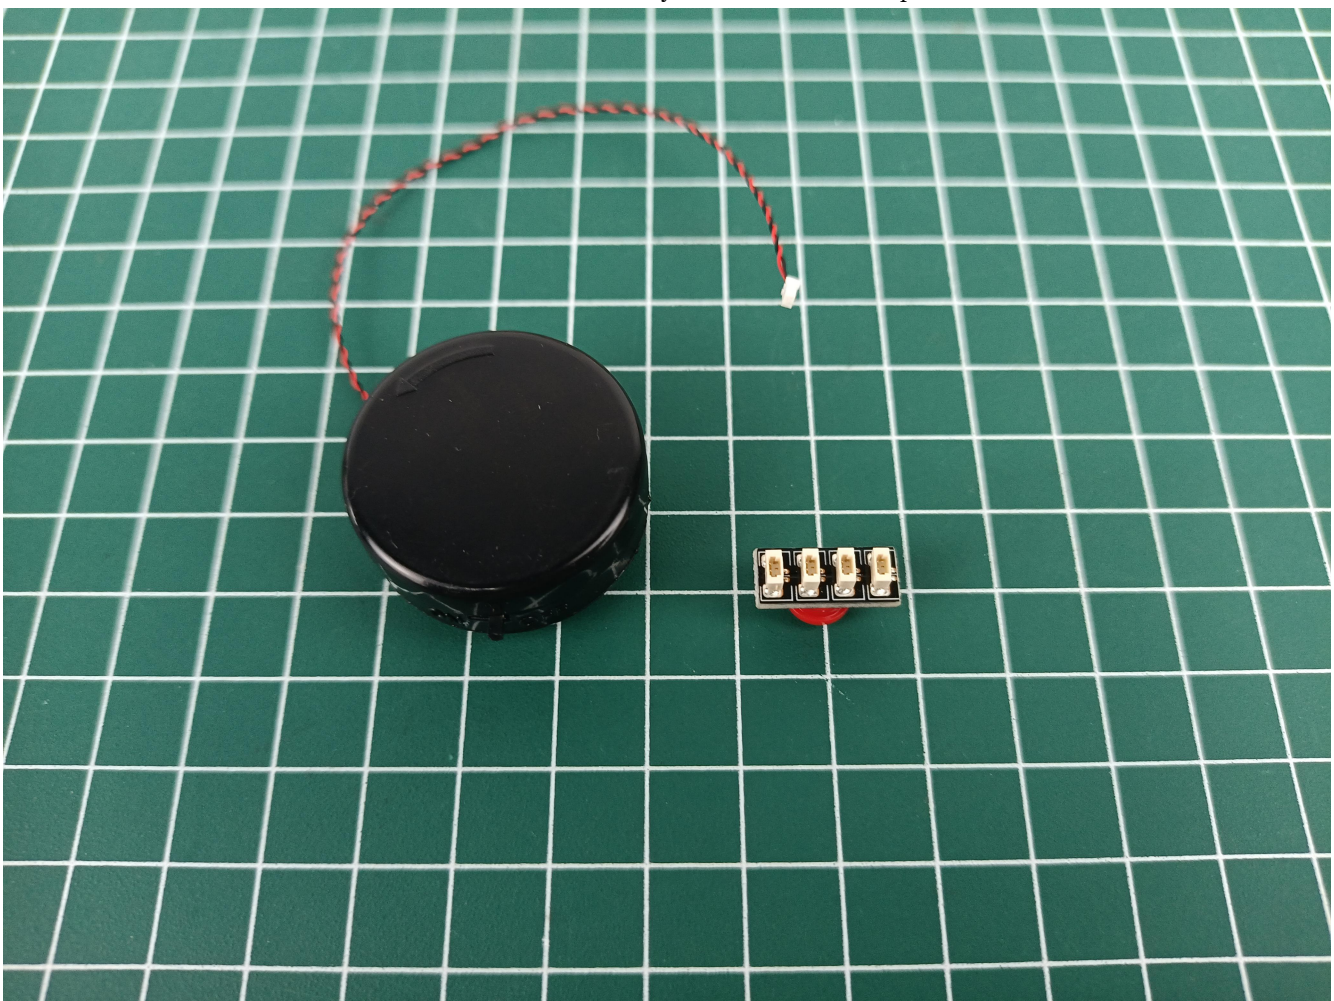



Take out the lighting from the No. 1 bag.






Turn on the battery box switch and connect the battery box cable to the expansion board. Test whether the lighting is normal, if there is any abnormality, please contact us in time.



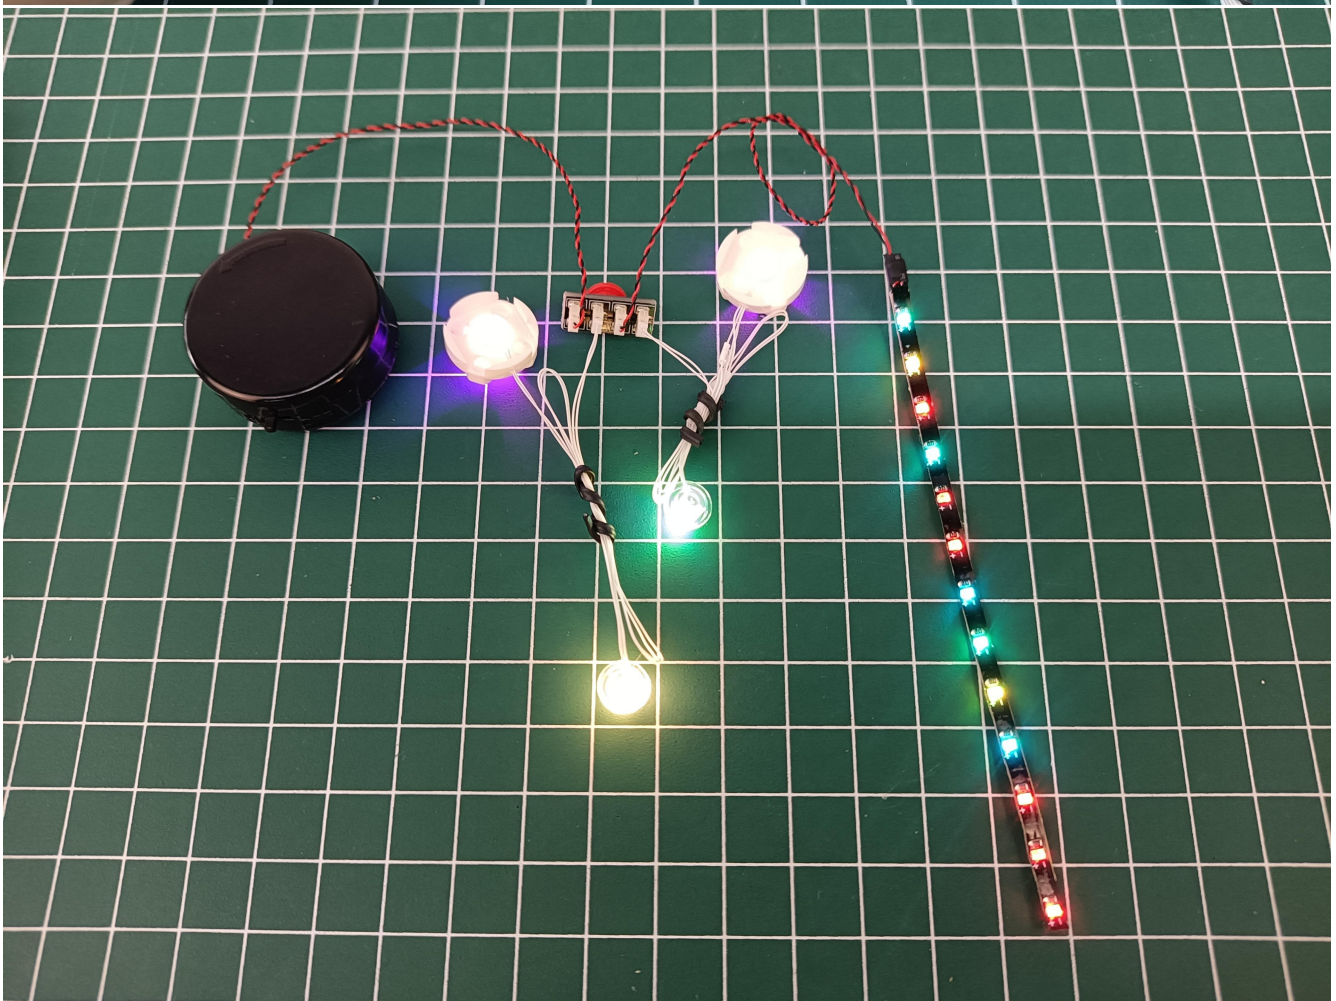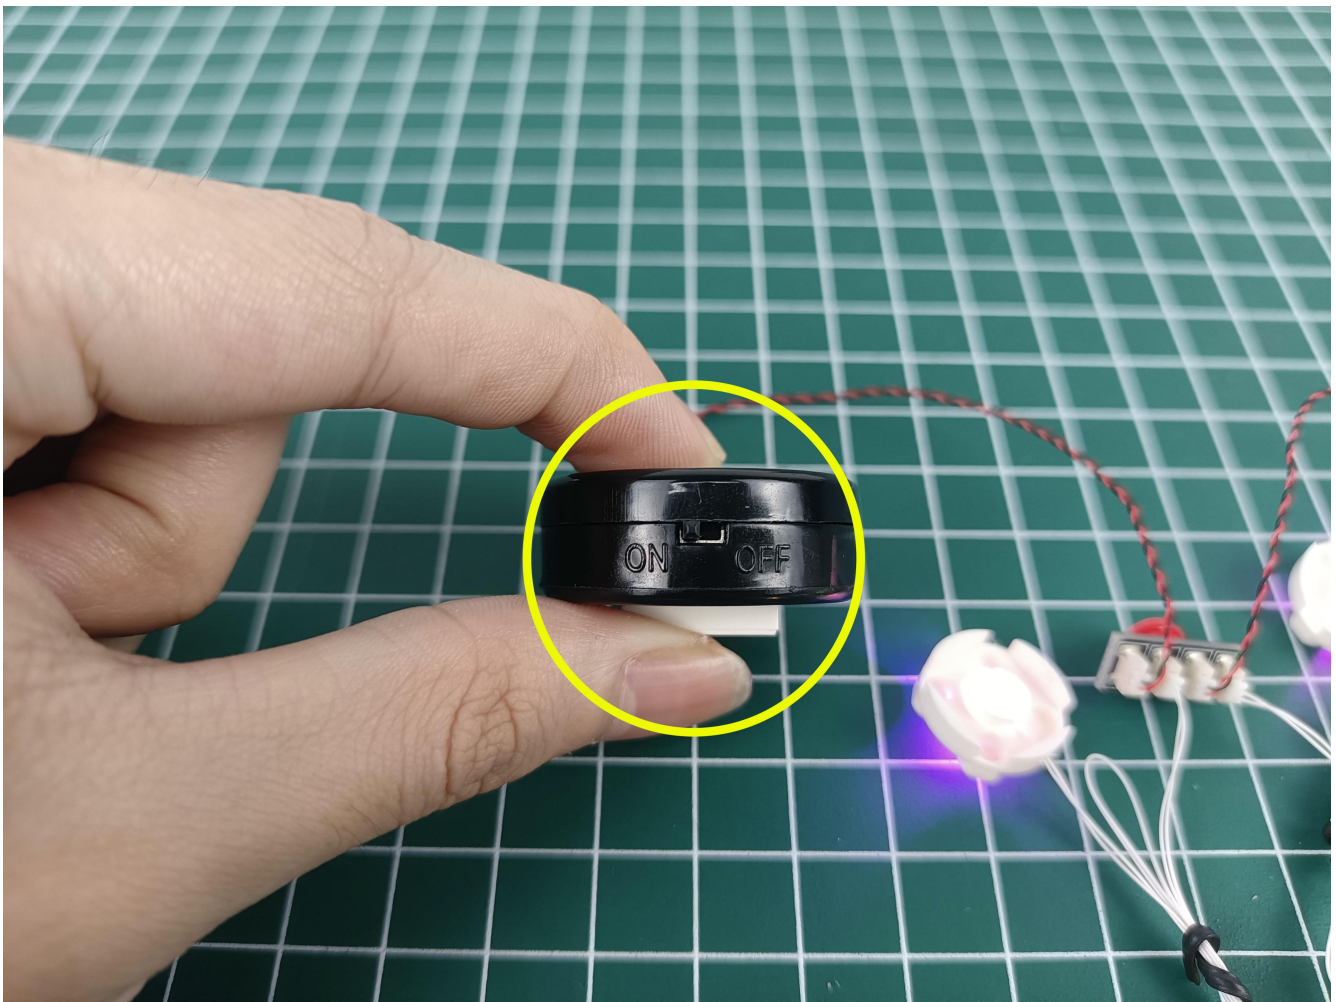



After the test is complete, unplug the lighting from the expansion board.

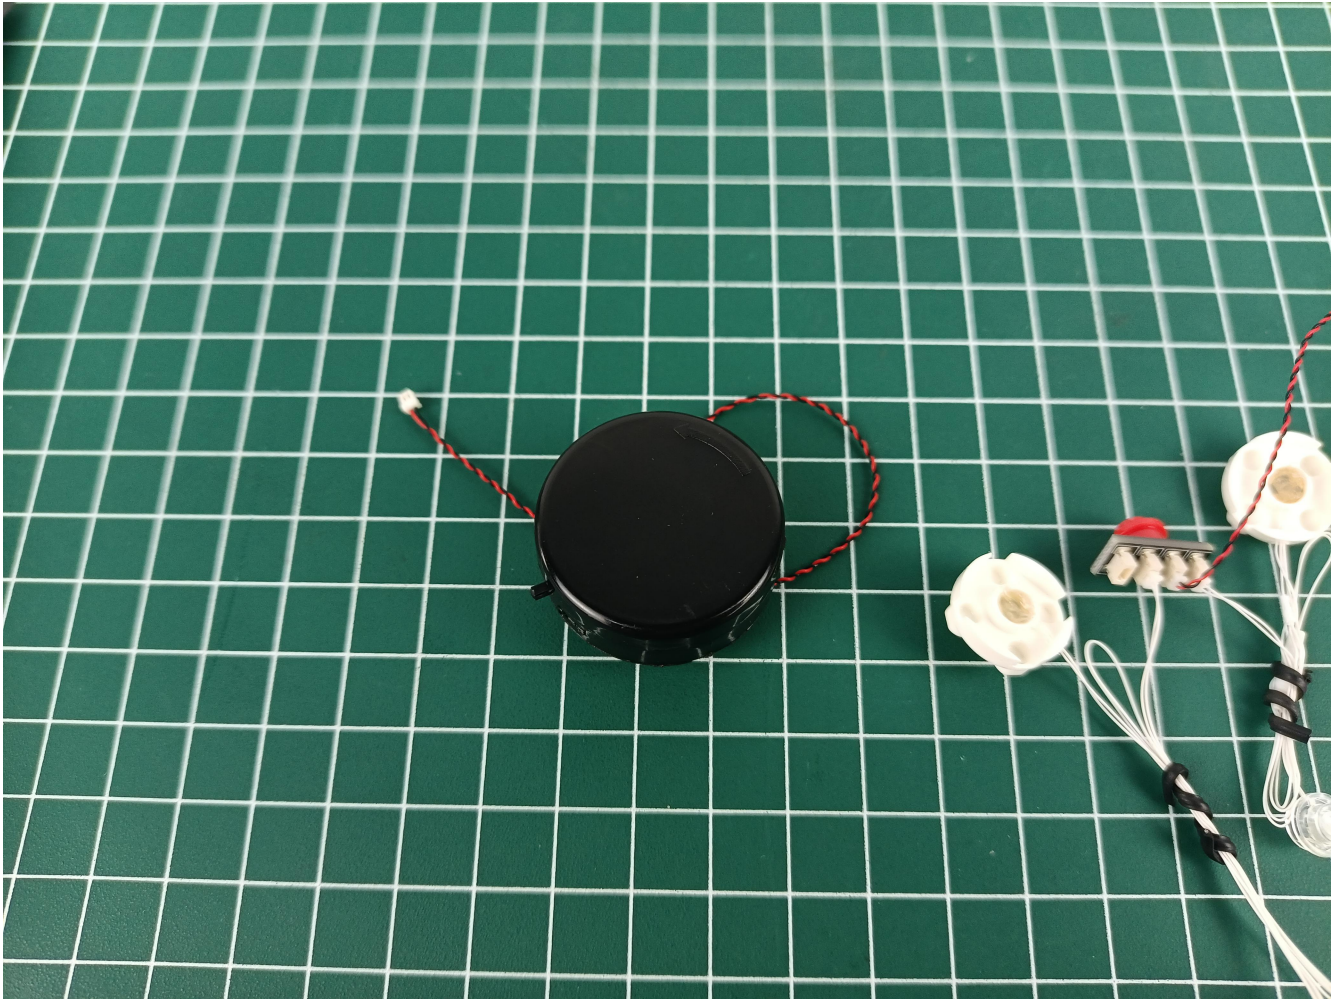


Put the non-abnormal lighting parts back into the original bag first. In order to avoid not lighting up after installation, the lighting in other bags should be tested in the same way before installation.




Next is how to use the USB power cord.



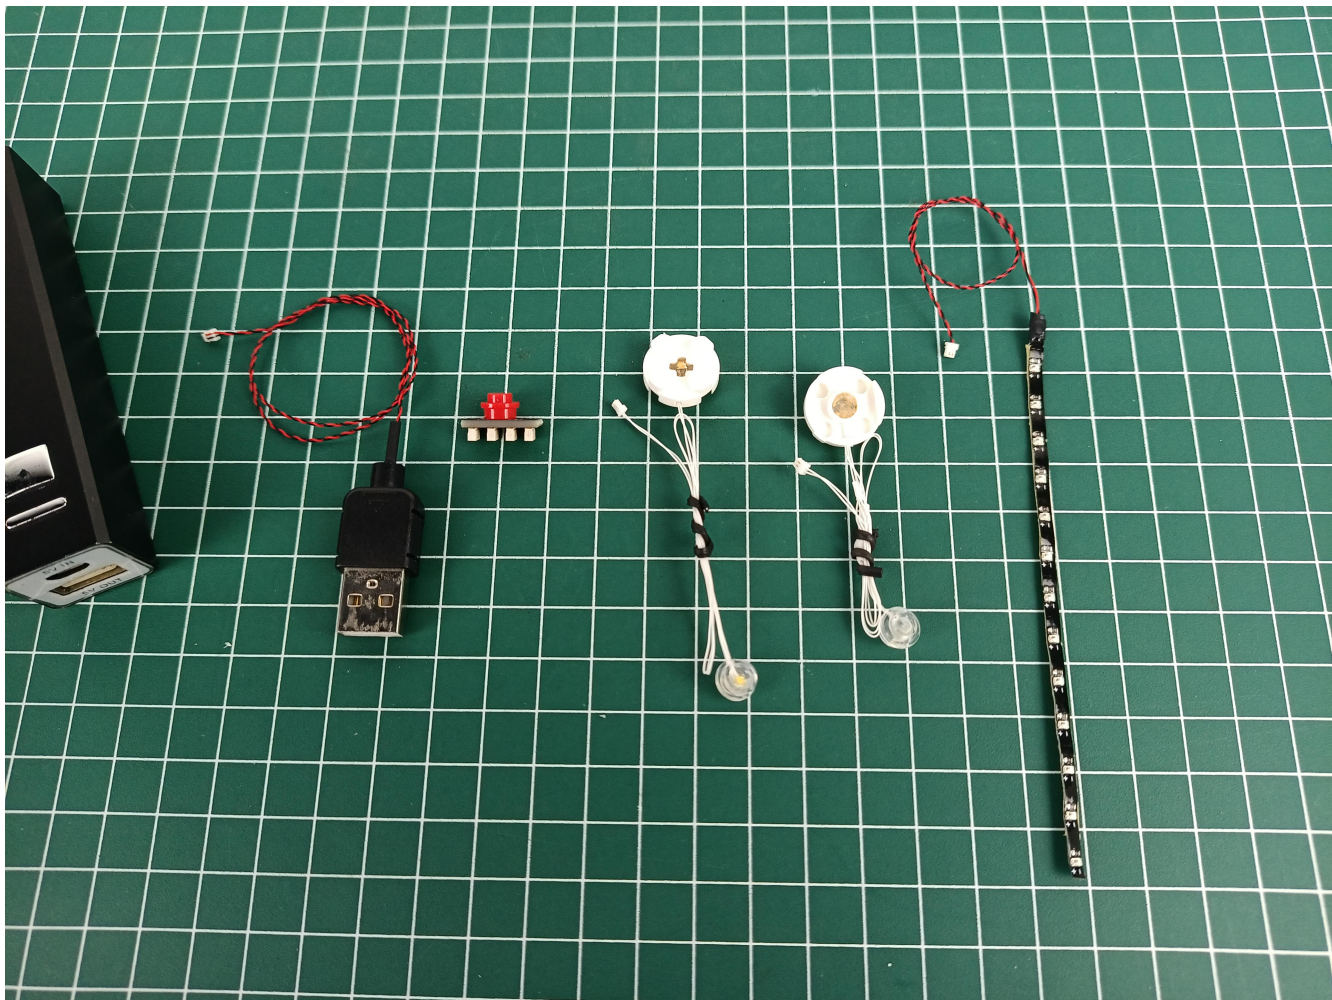


Connect them to the expansion board. Test whether the lighting is normal, if there is any abnormality, please contact us in time.

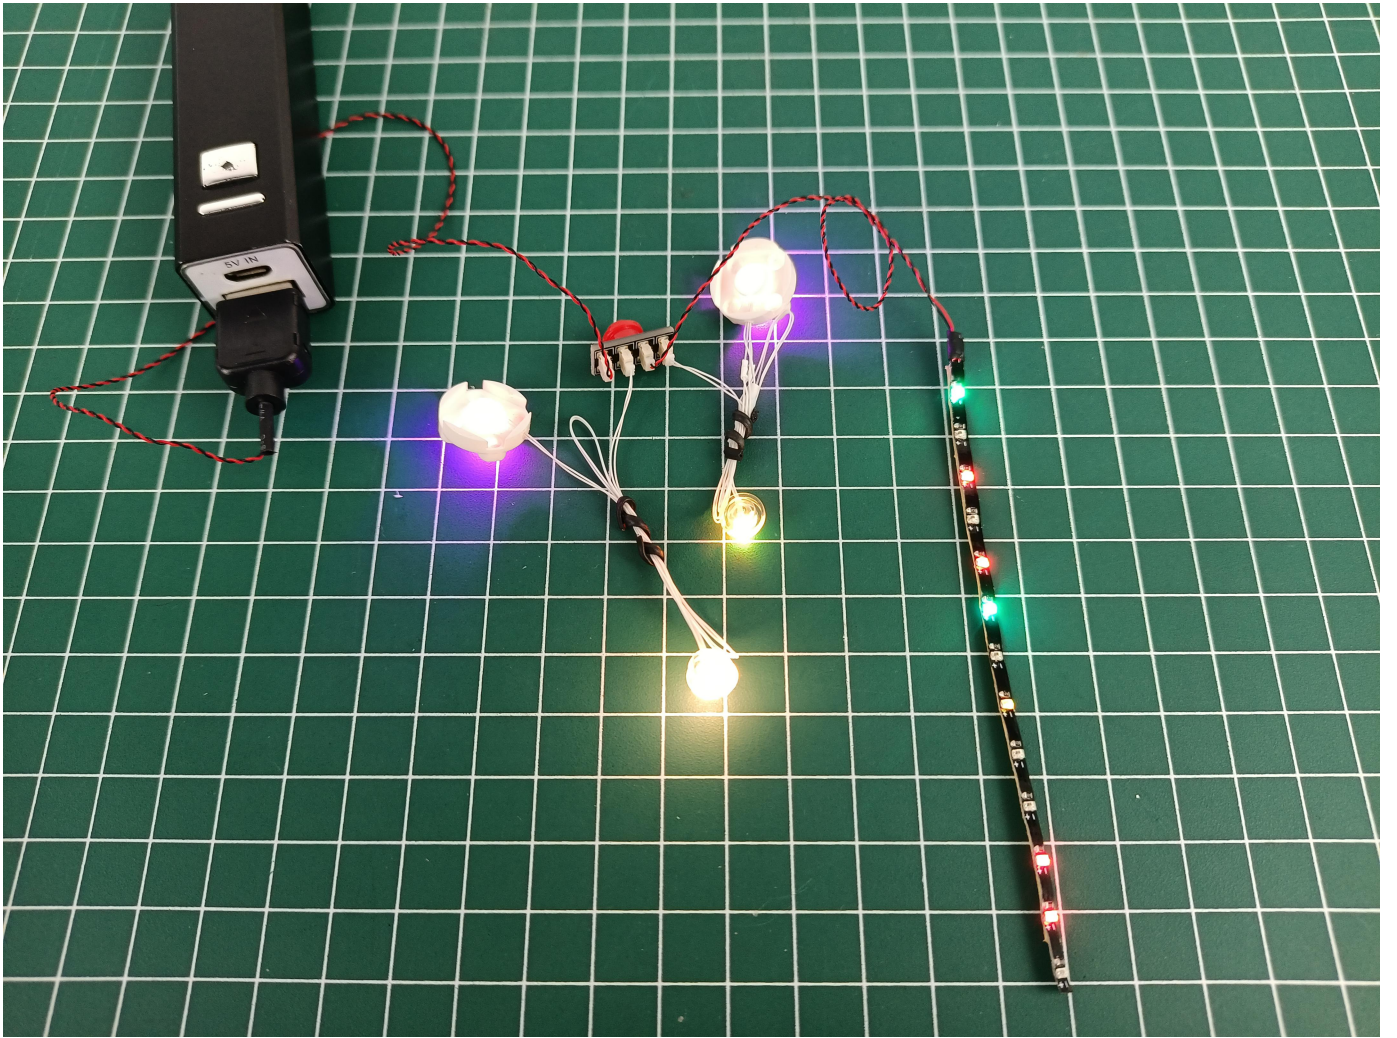

After the test is complete, unplug the lighting from the expansion board.



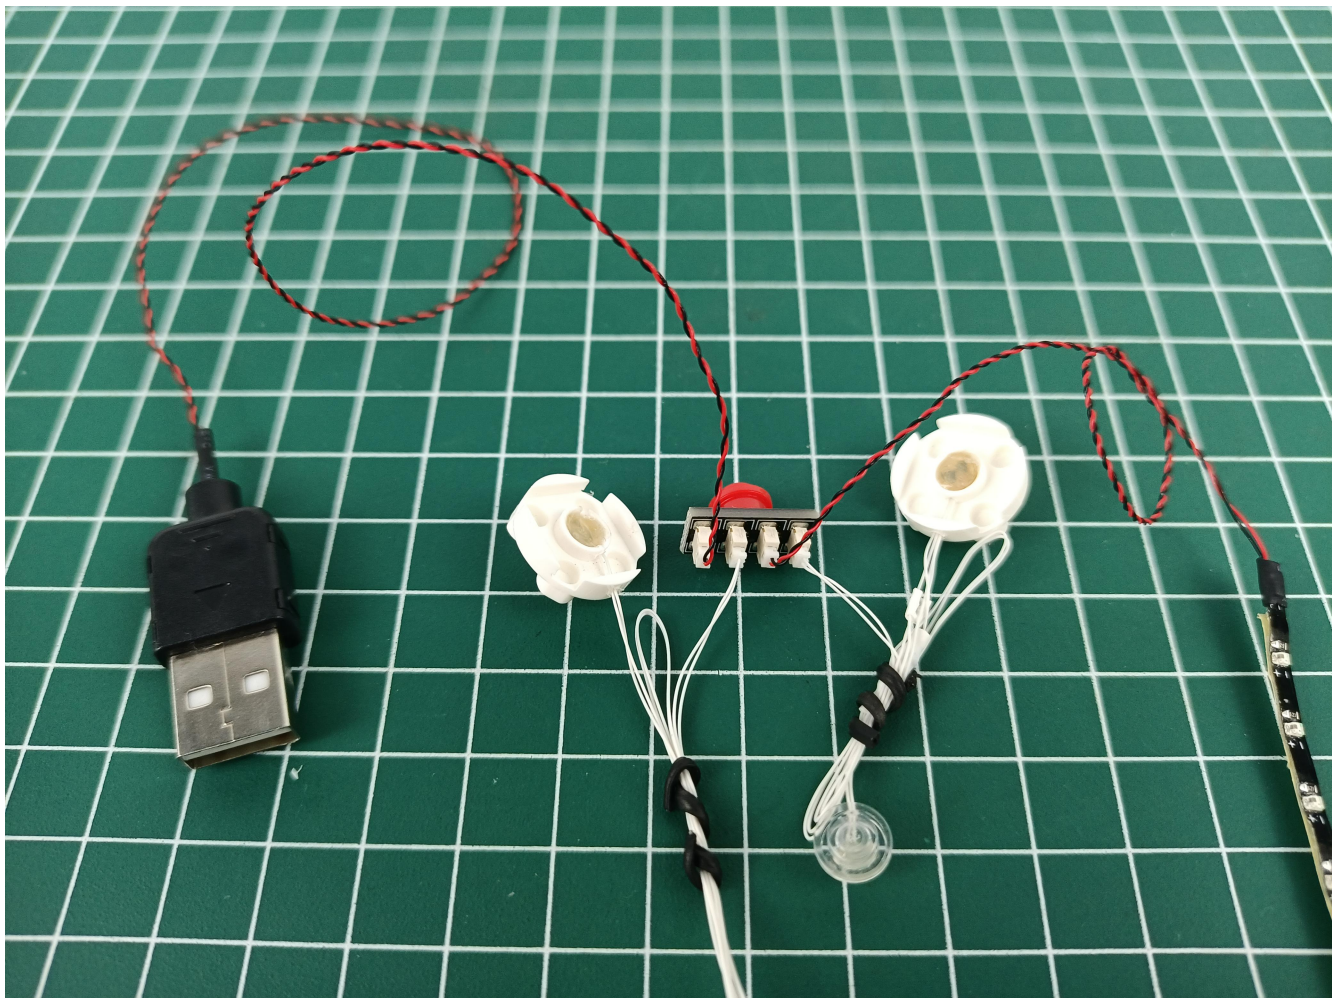


Put the non-abnormal lighting parts back into the original bag first. In order to avoid not lighting up after installation, the lighting in other bags should be tested in the same way before installation.







**Note:**

Please be careful when installing. The lamp wire is relatively slender and cannot be pressed on the raised position of the building block. It should pass along the gap, otherwise the lamp wire will be pinched.


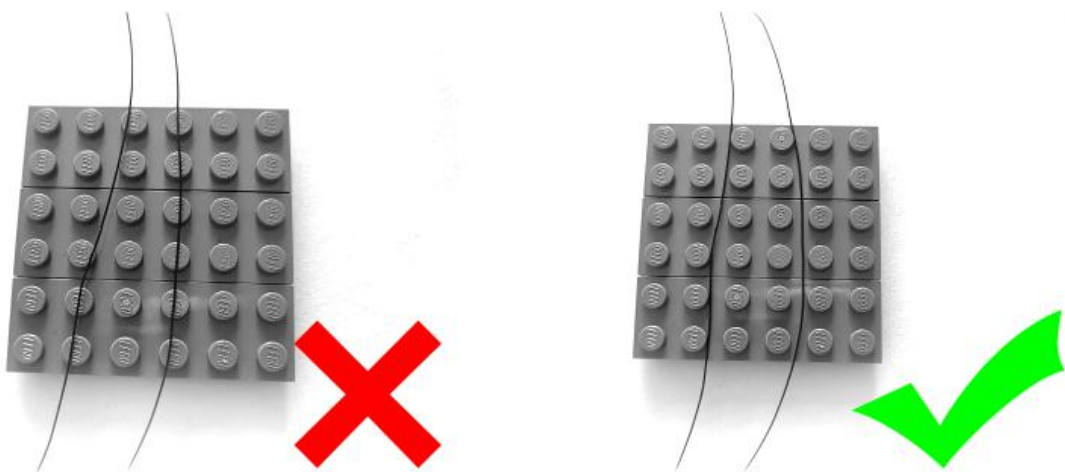


**start installation:**




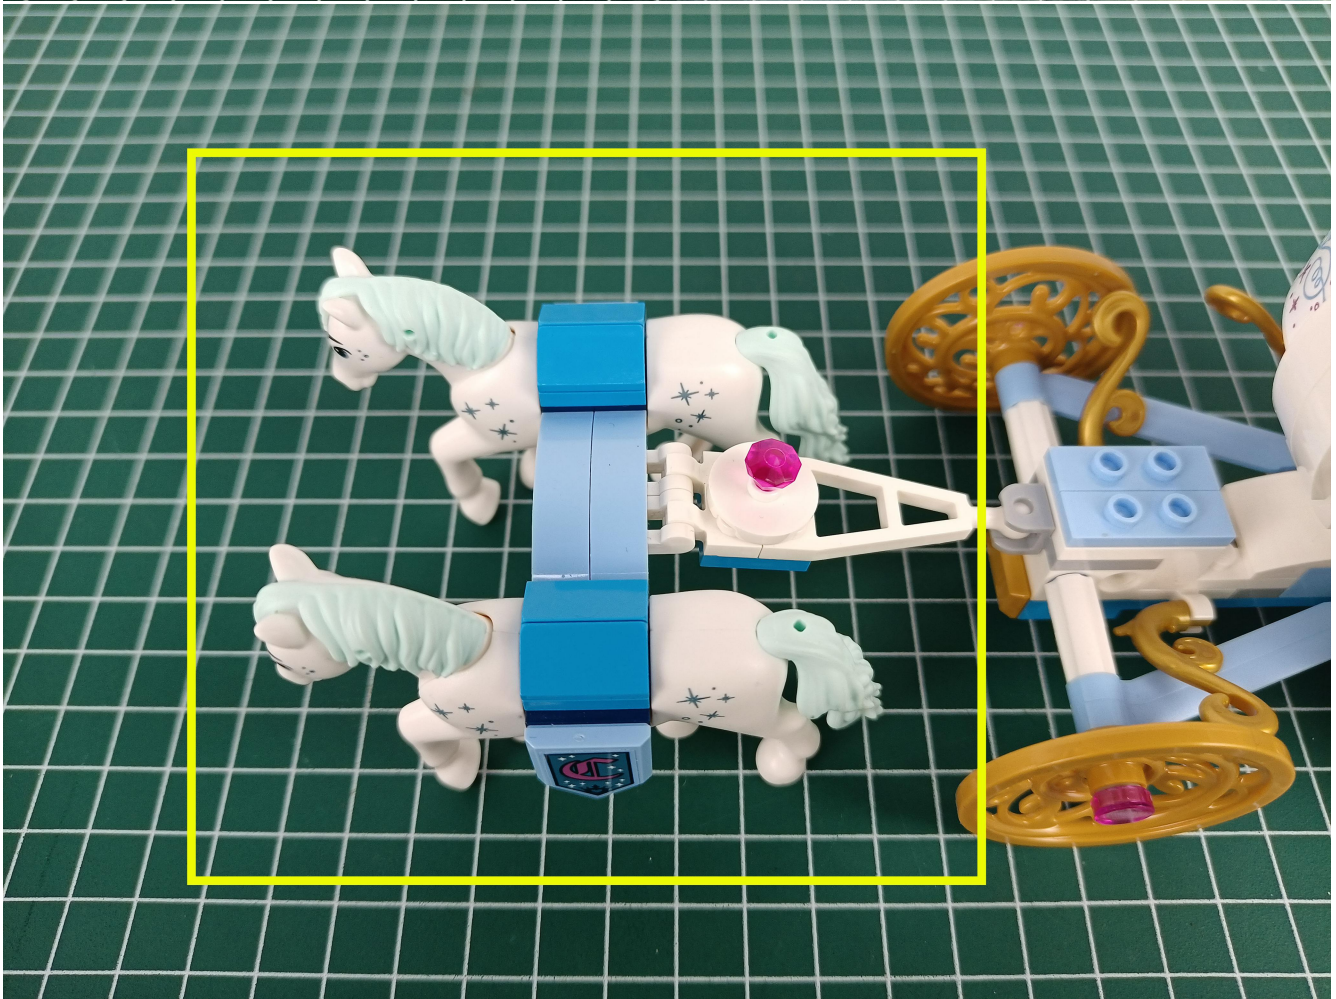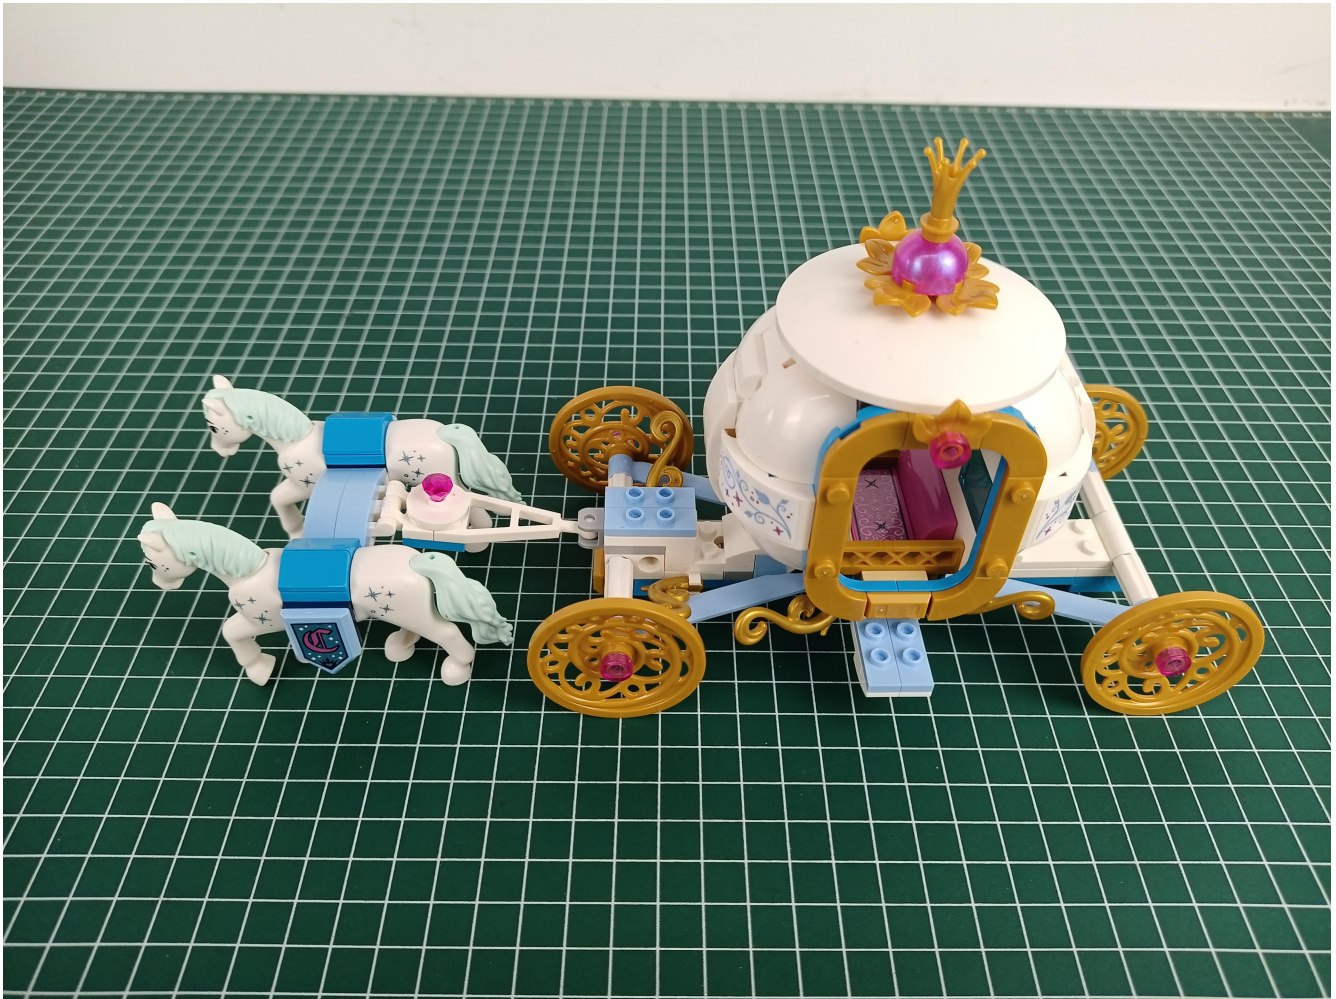





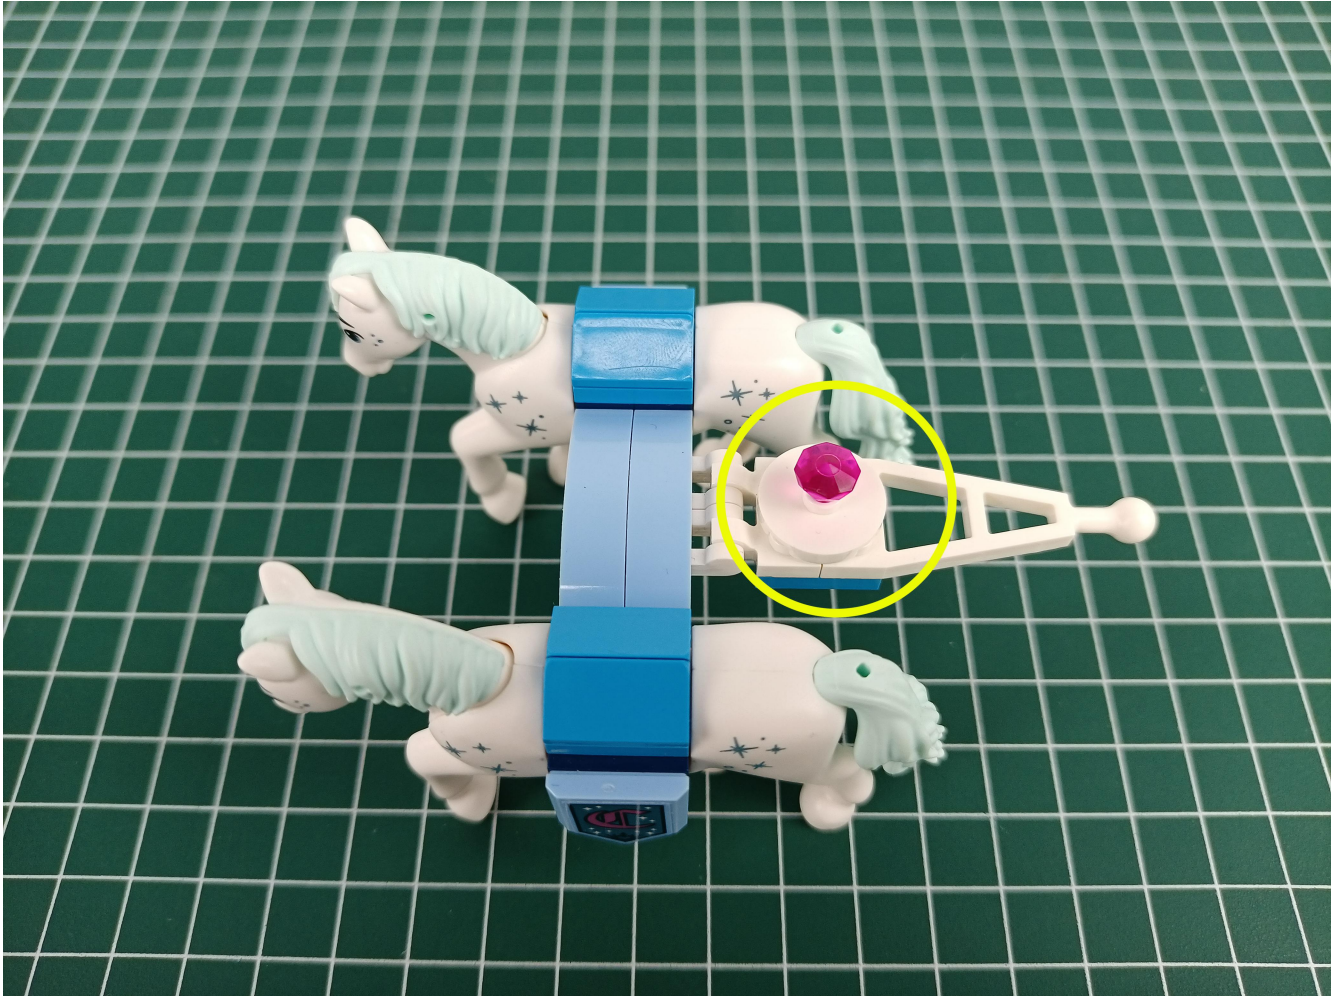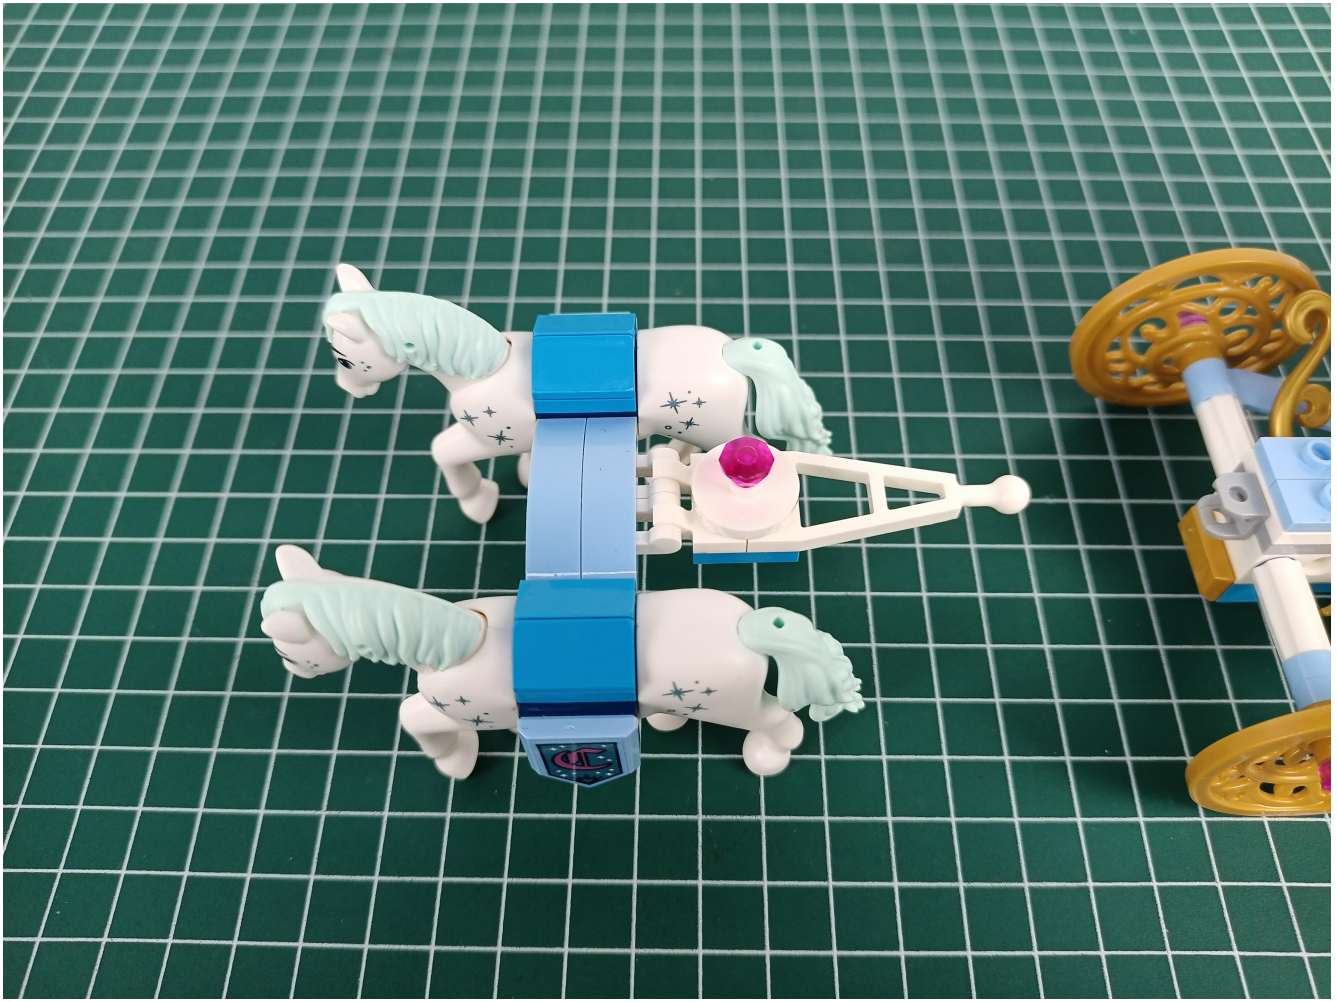





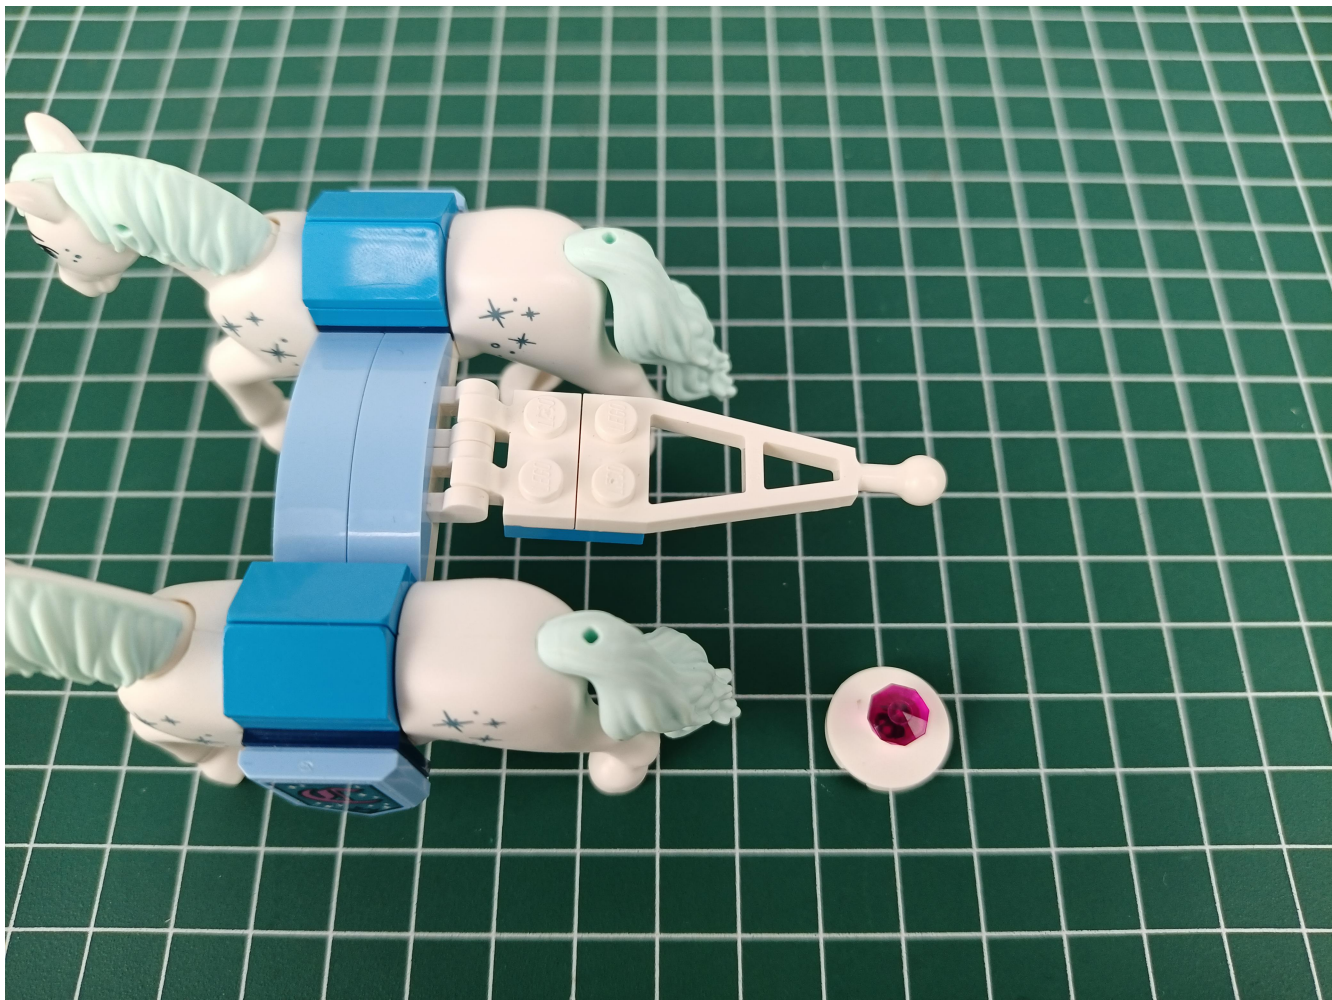





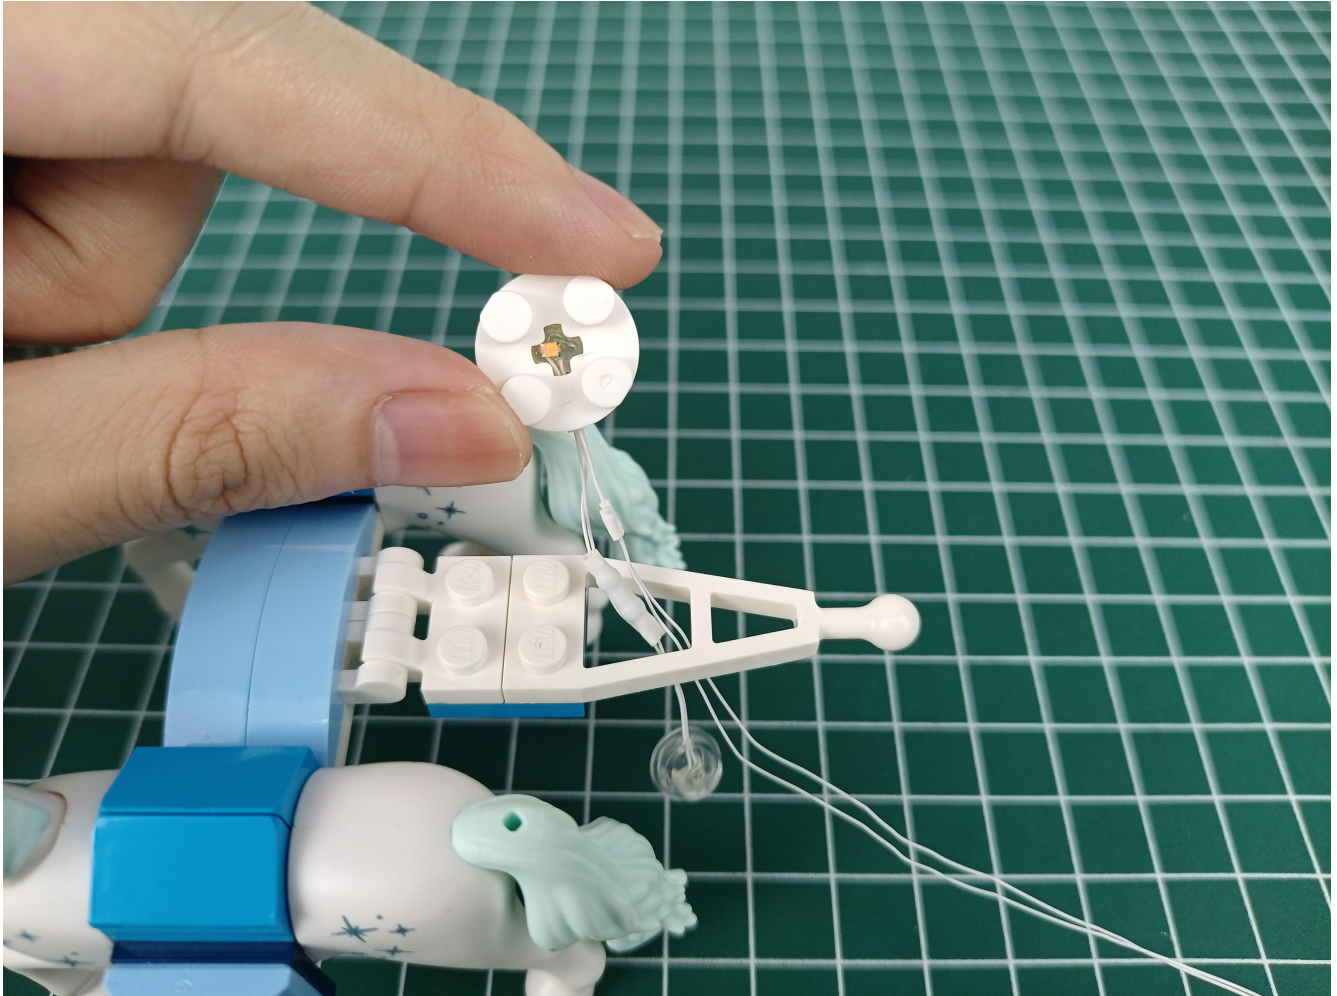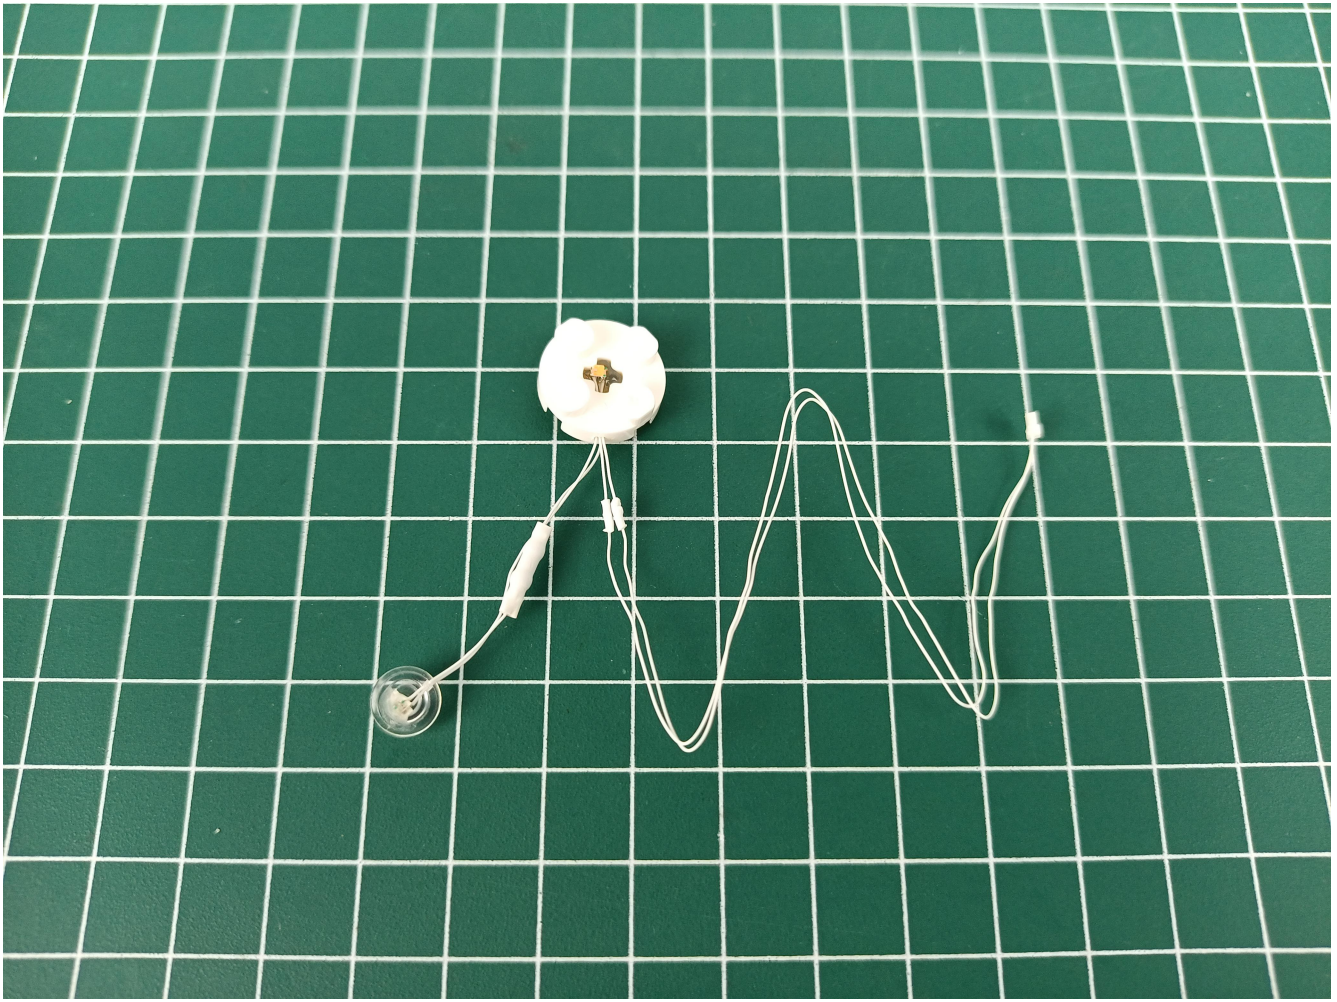





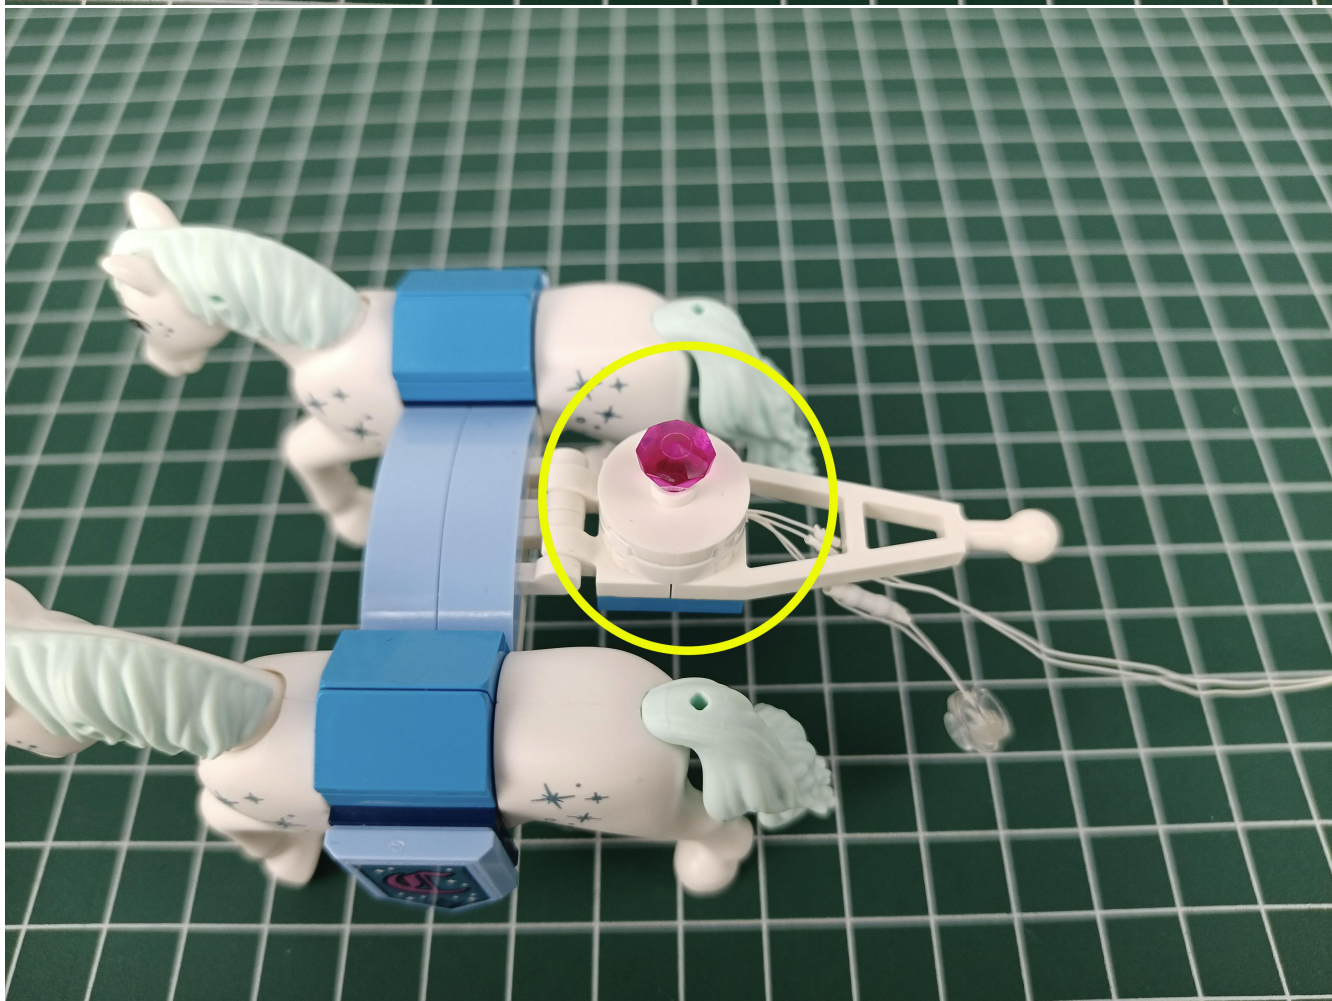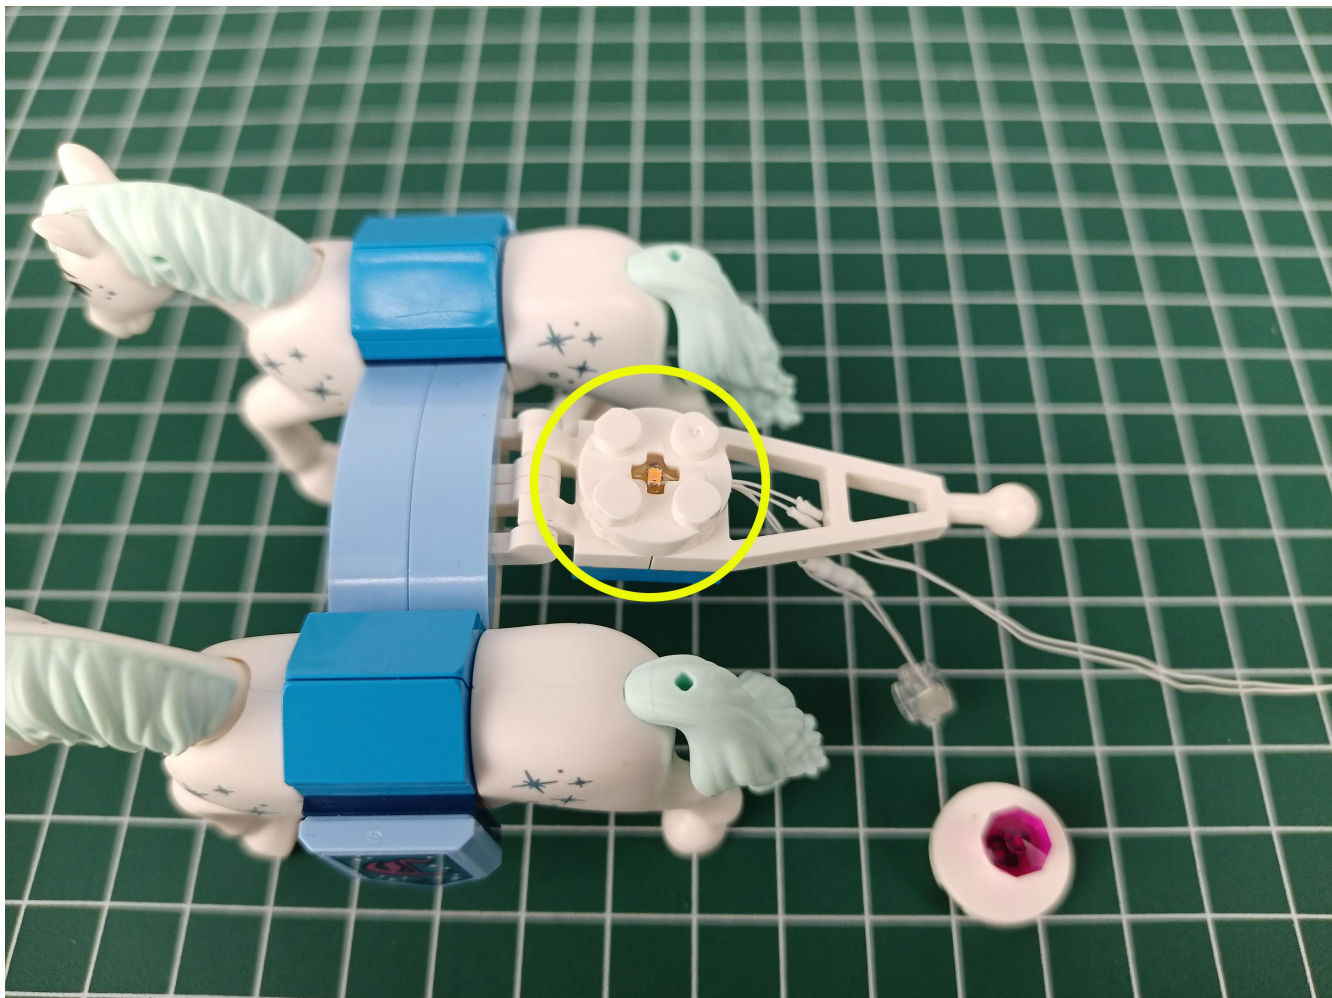





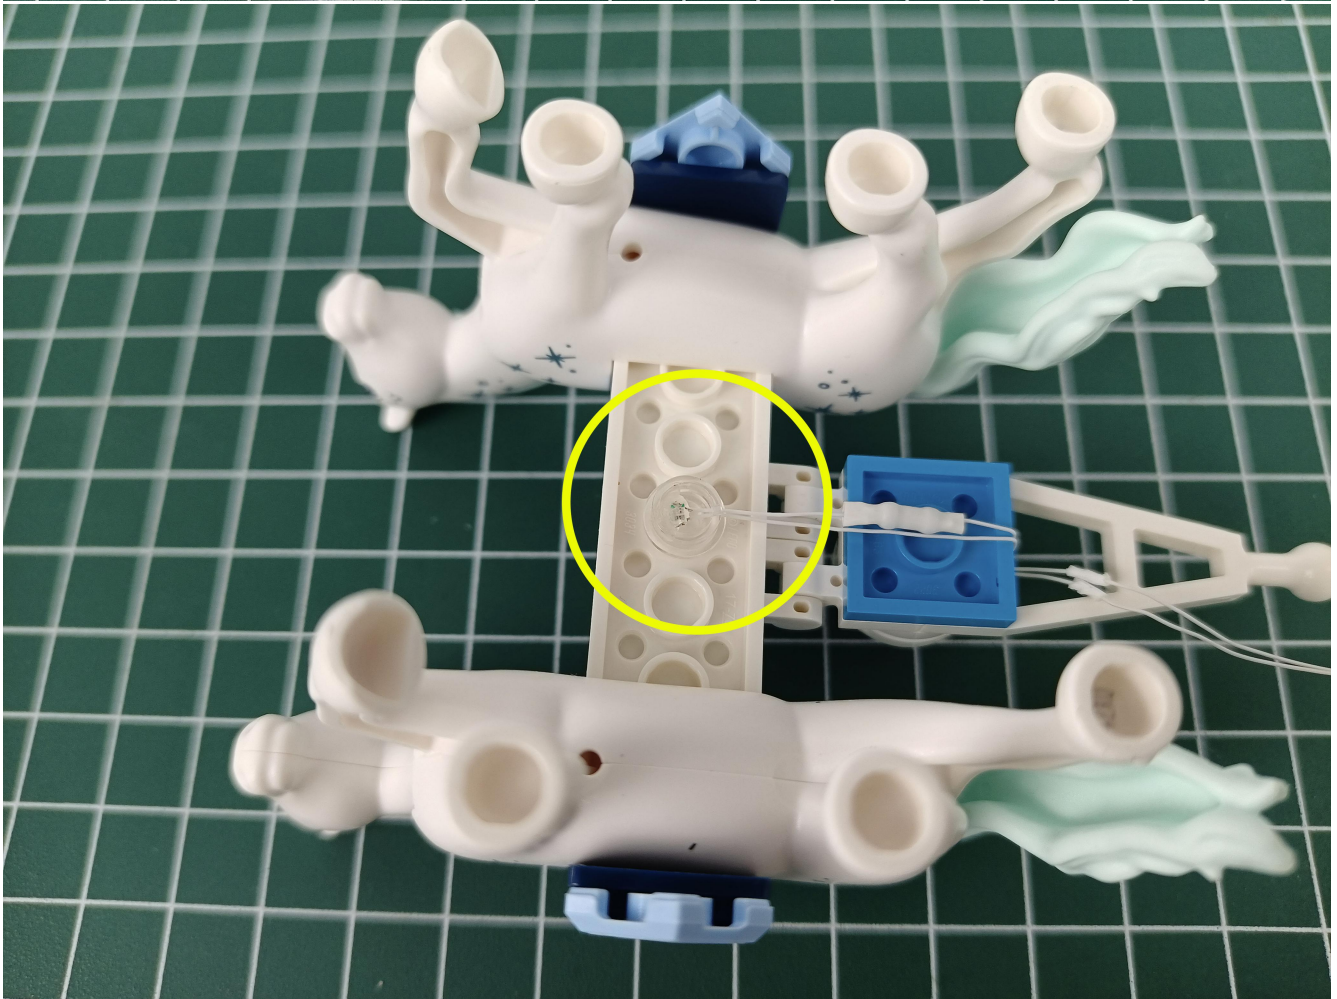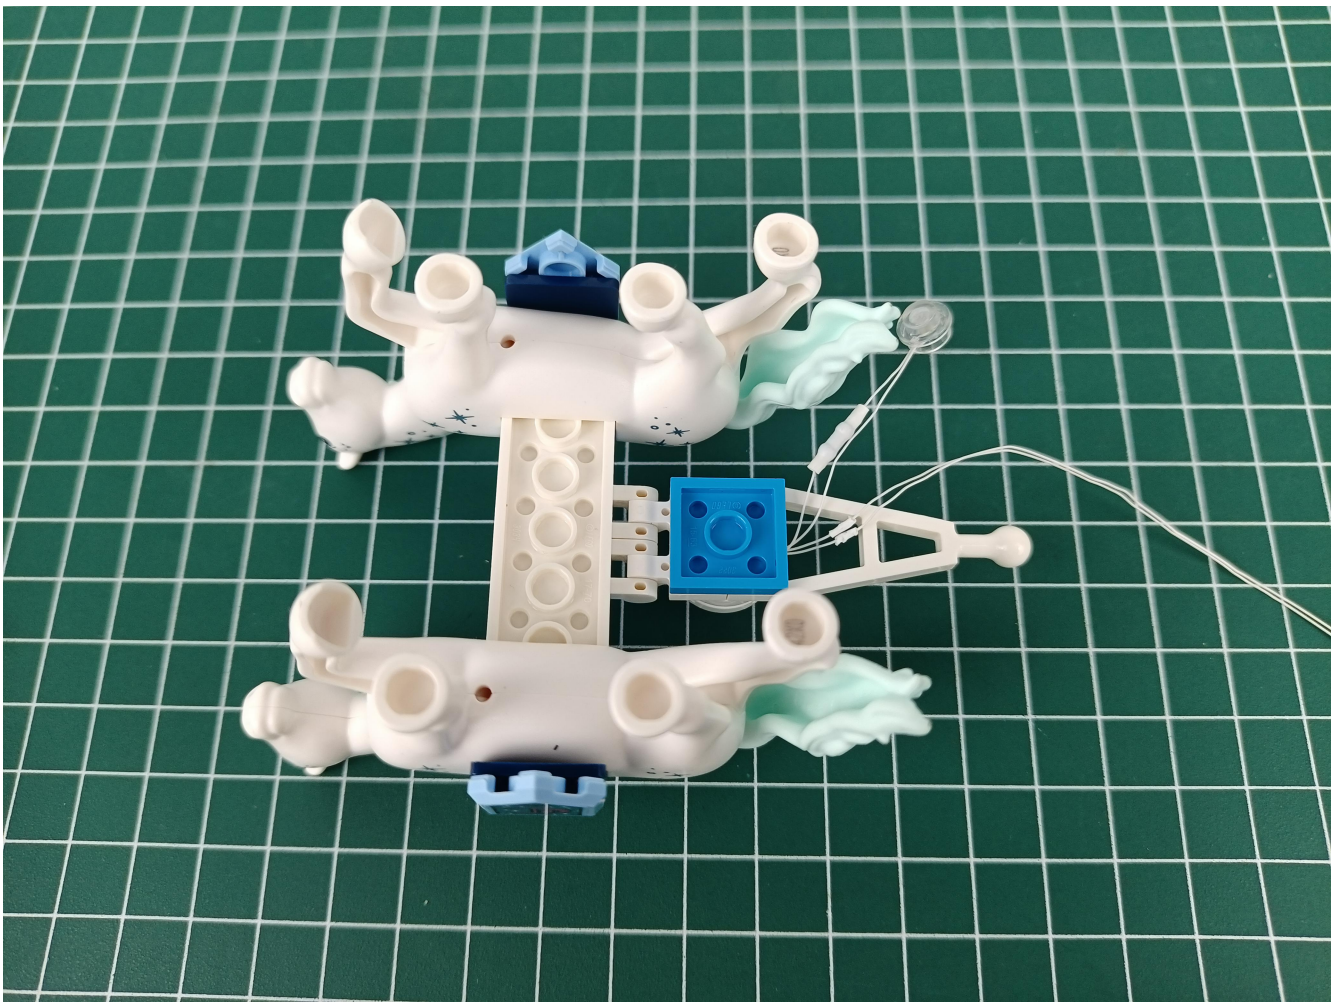





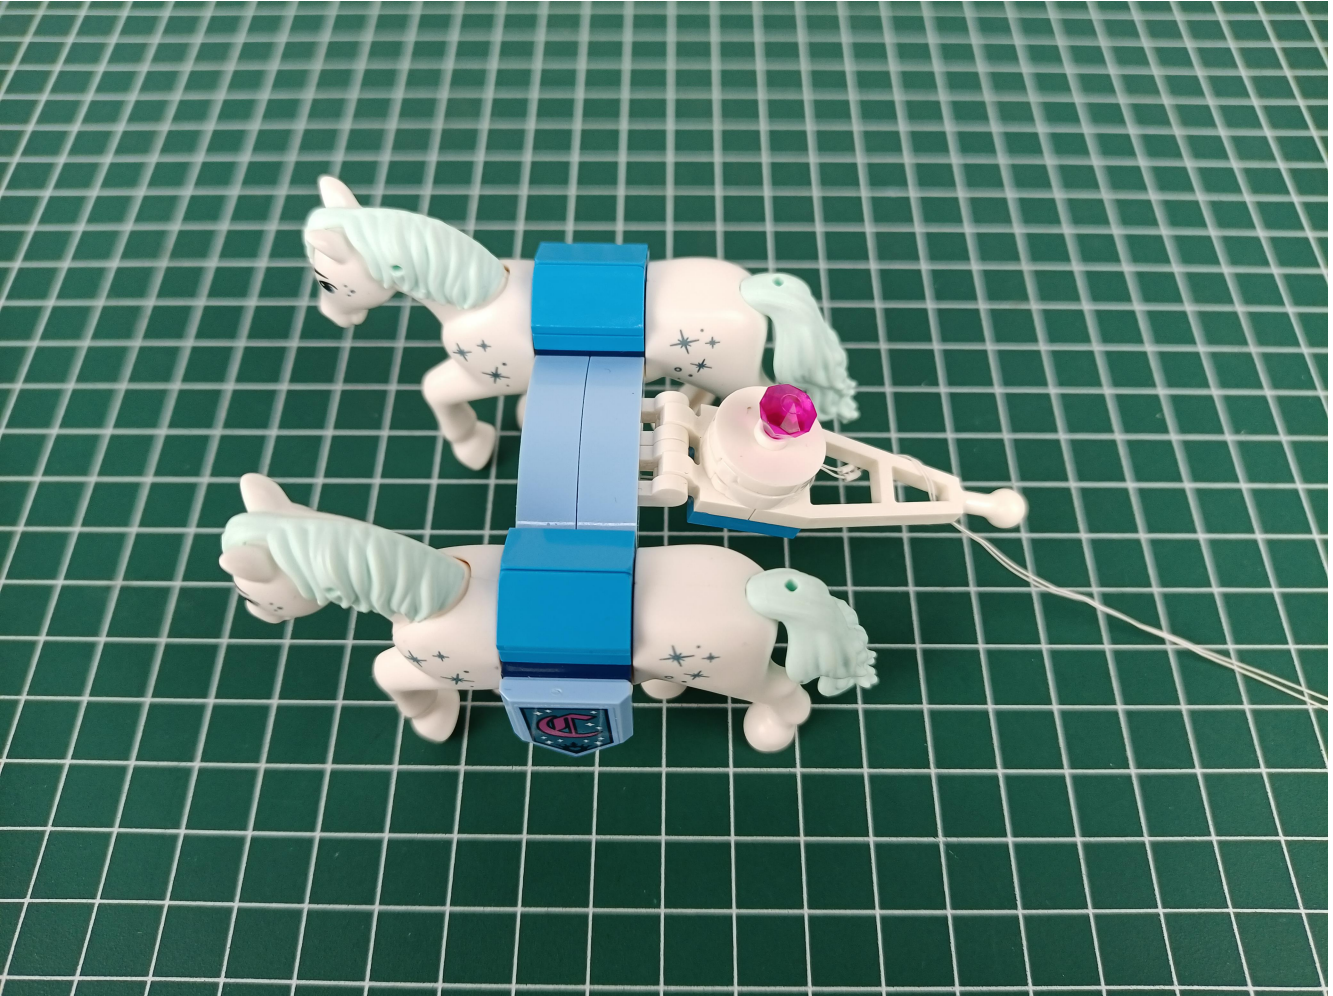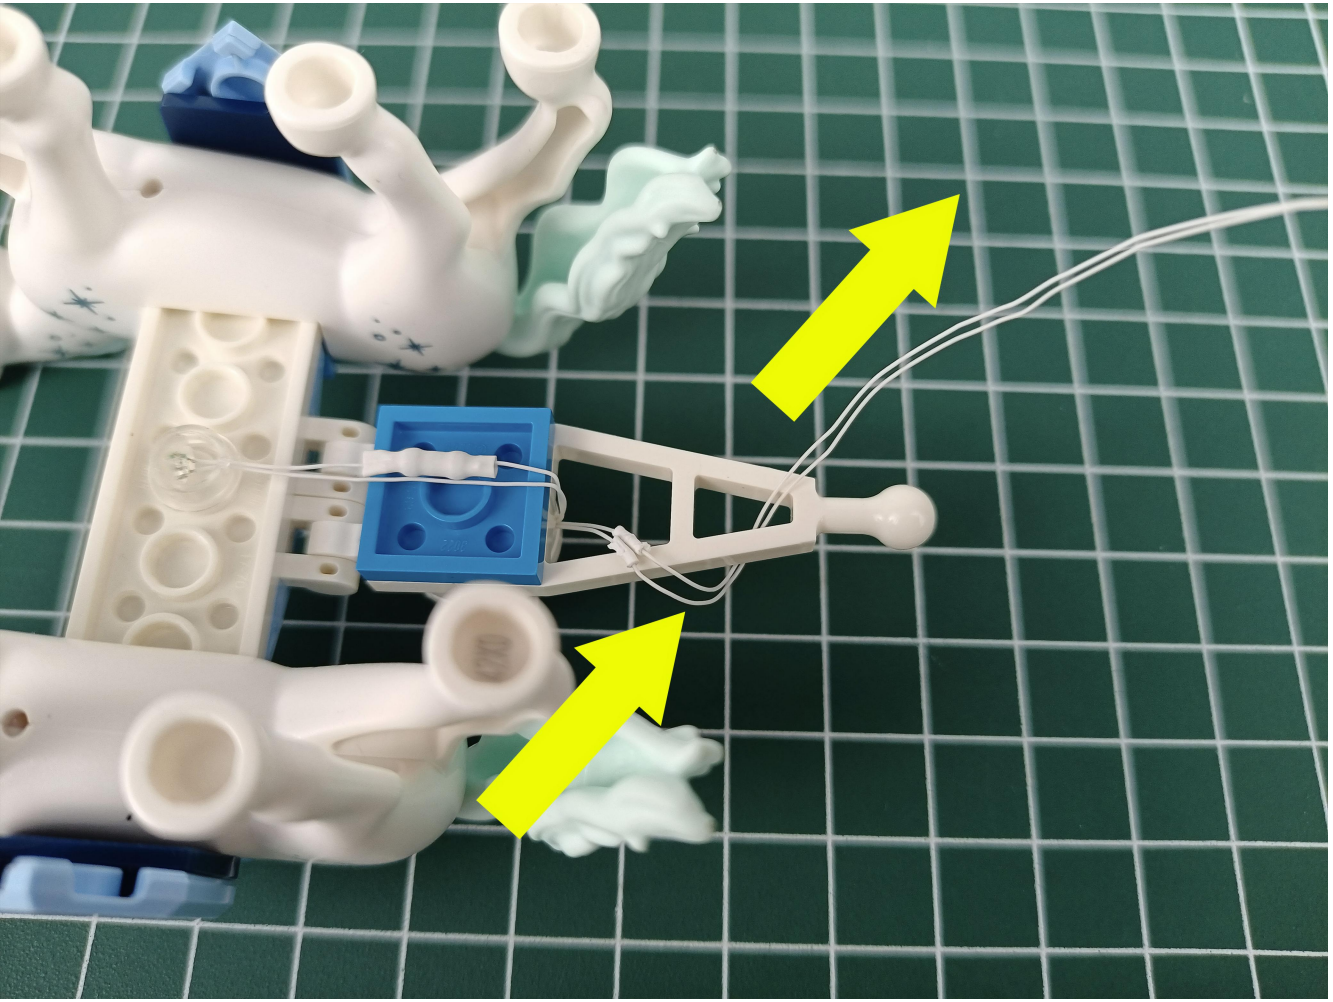




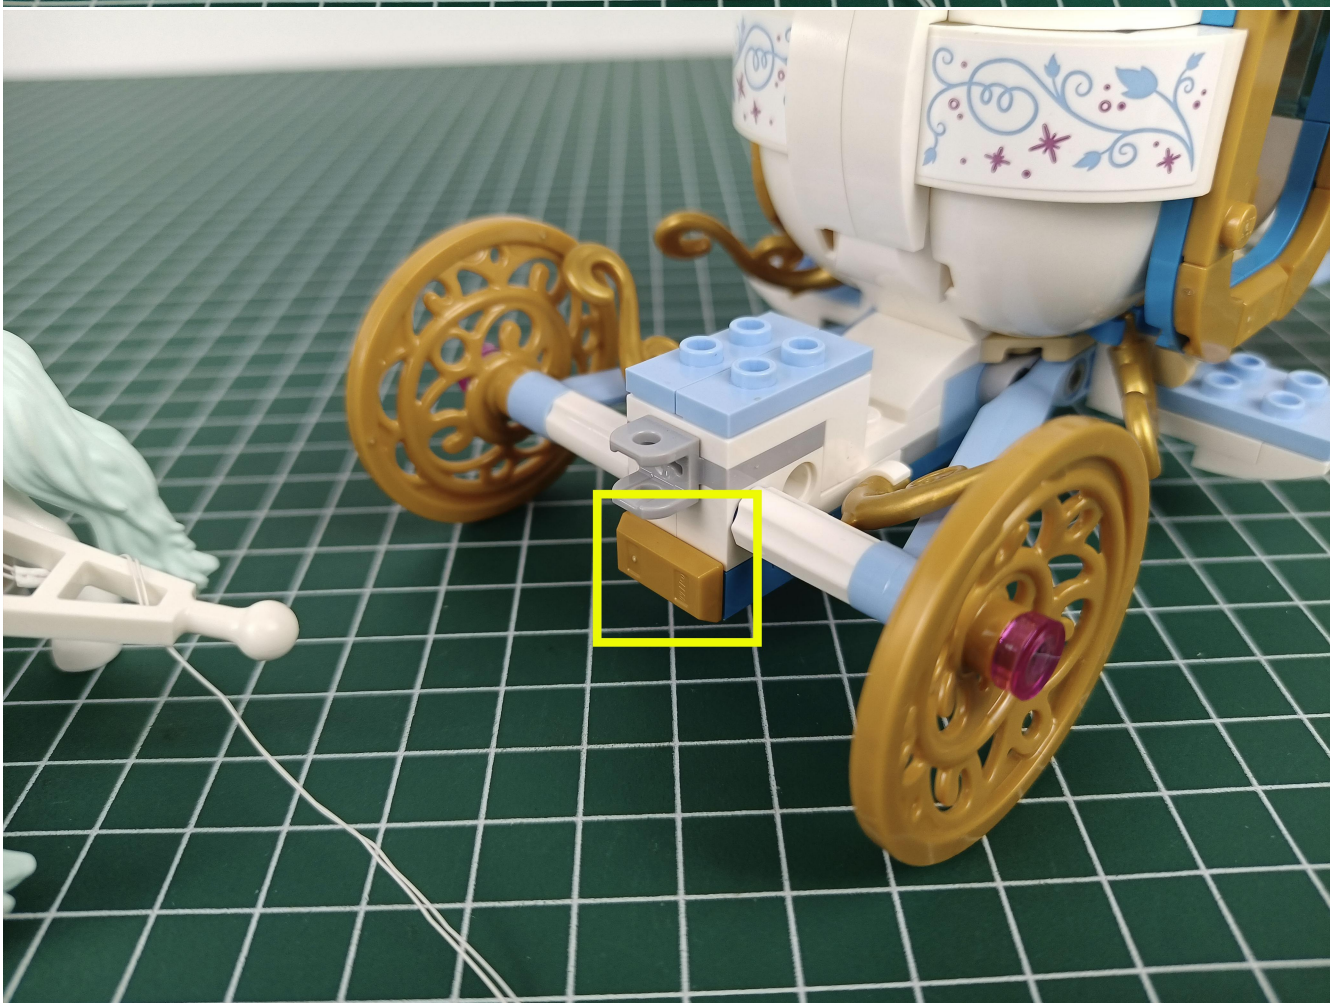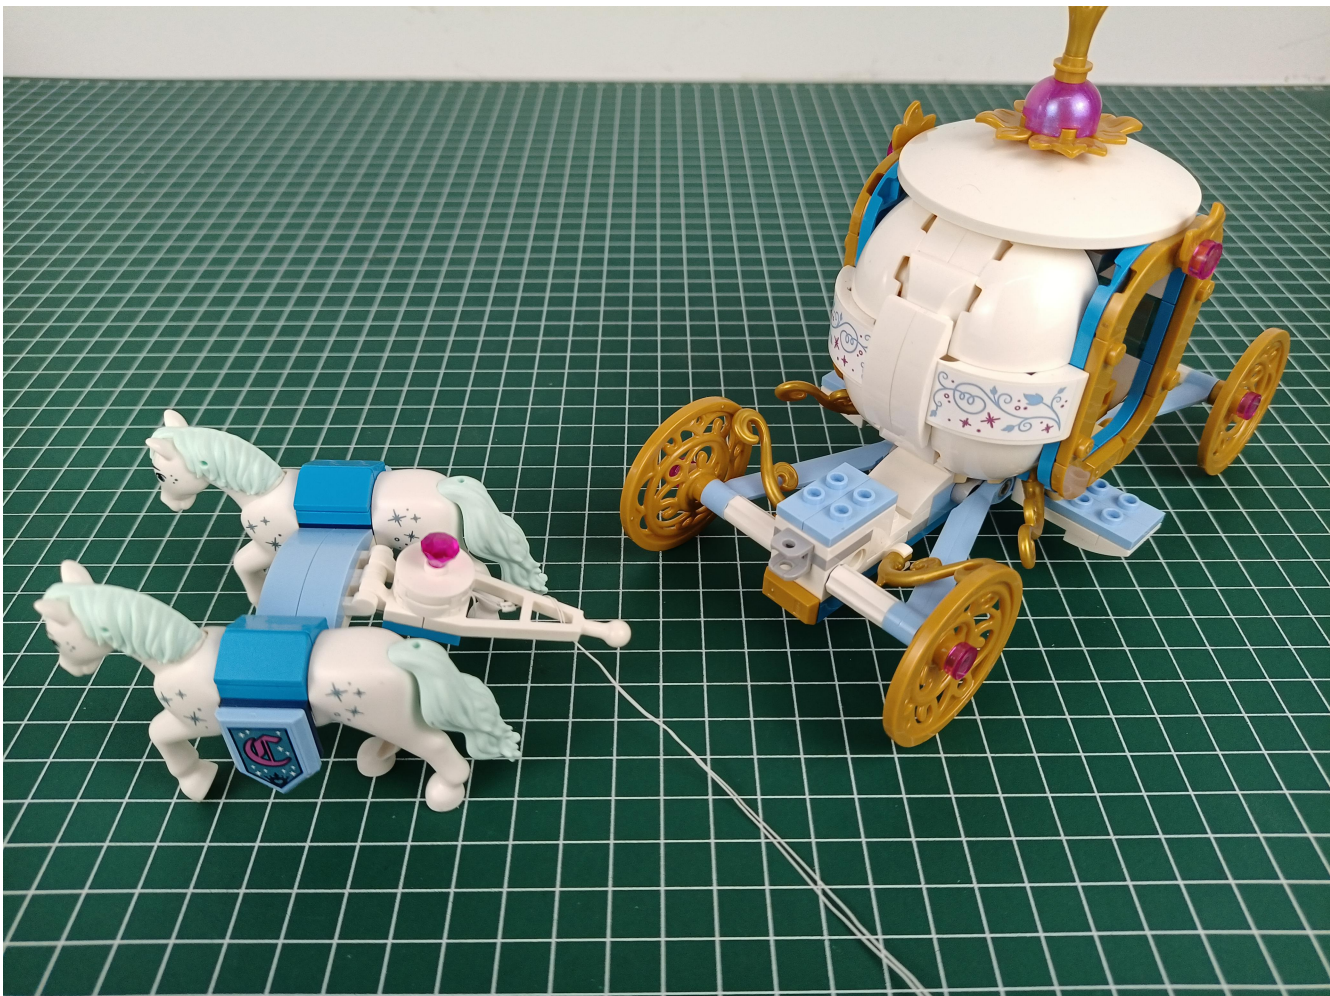





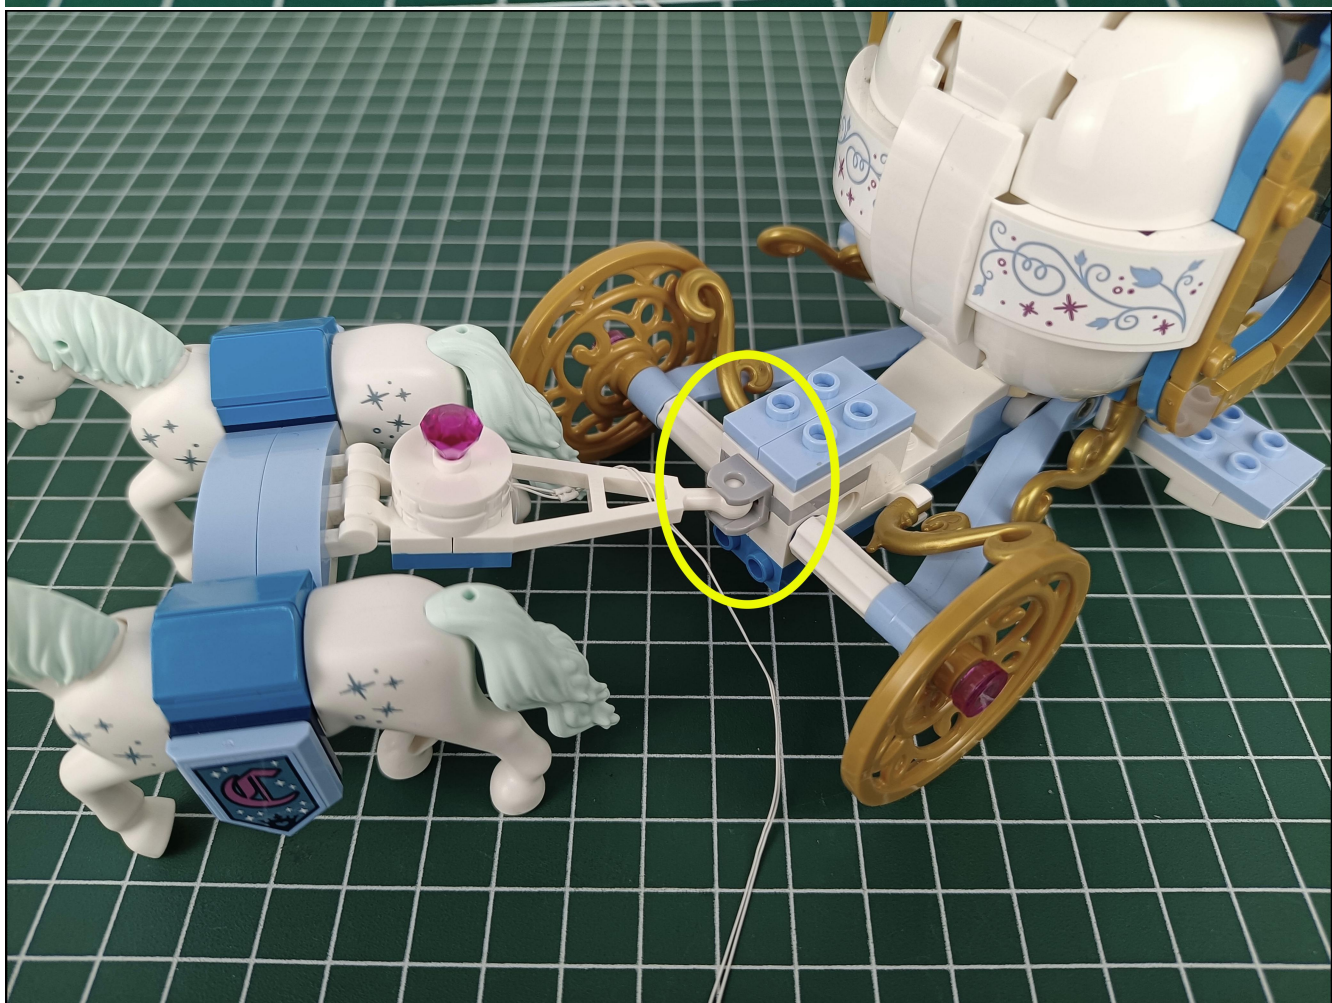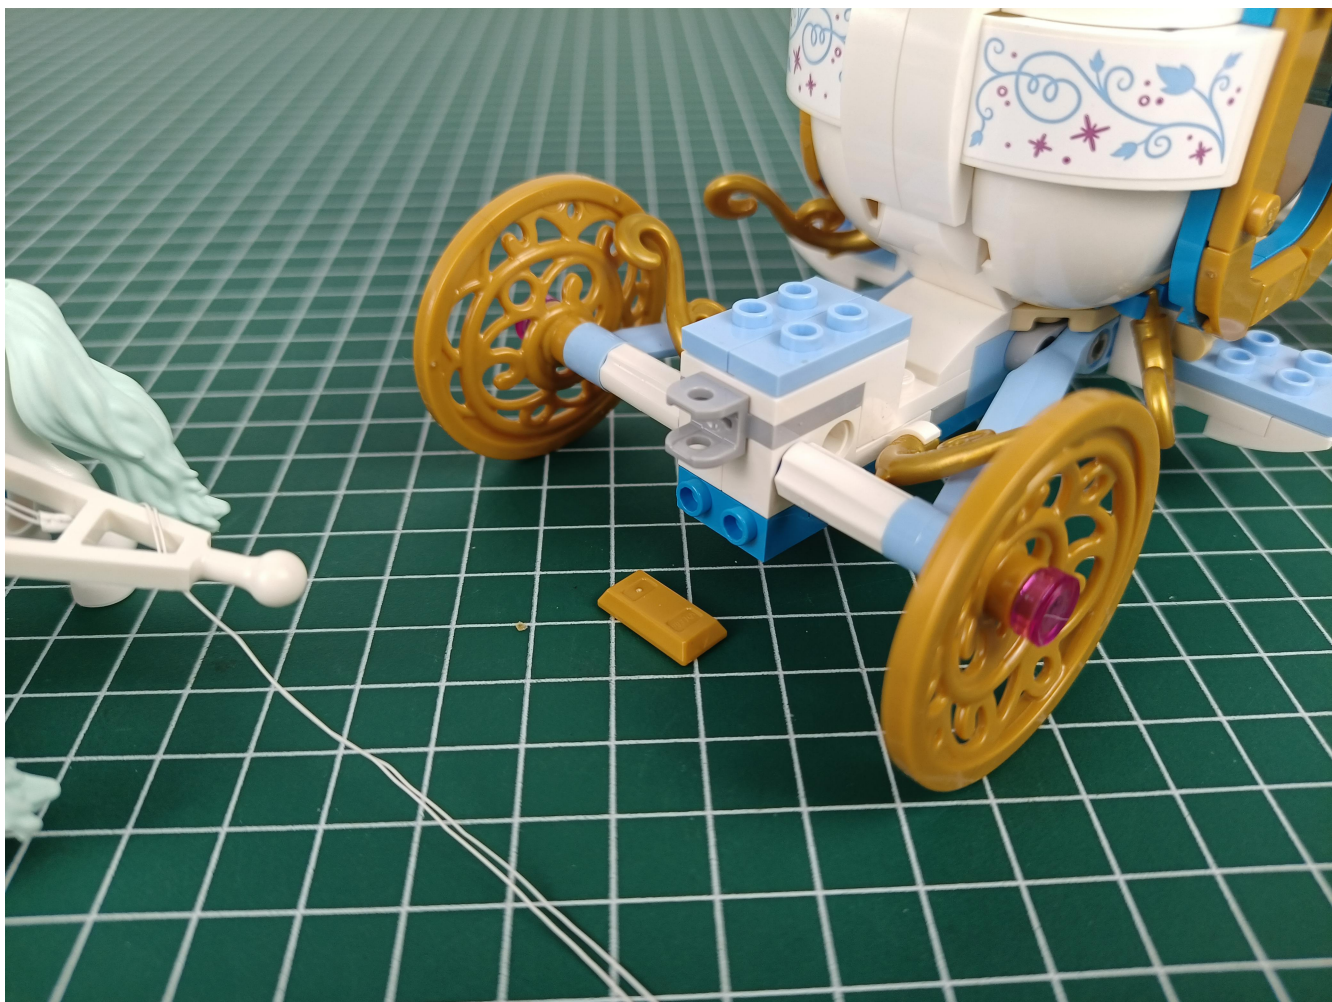




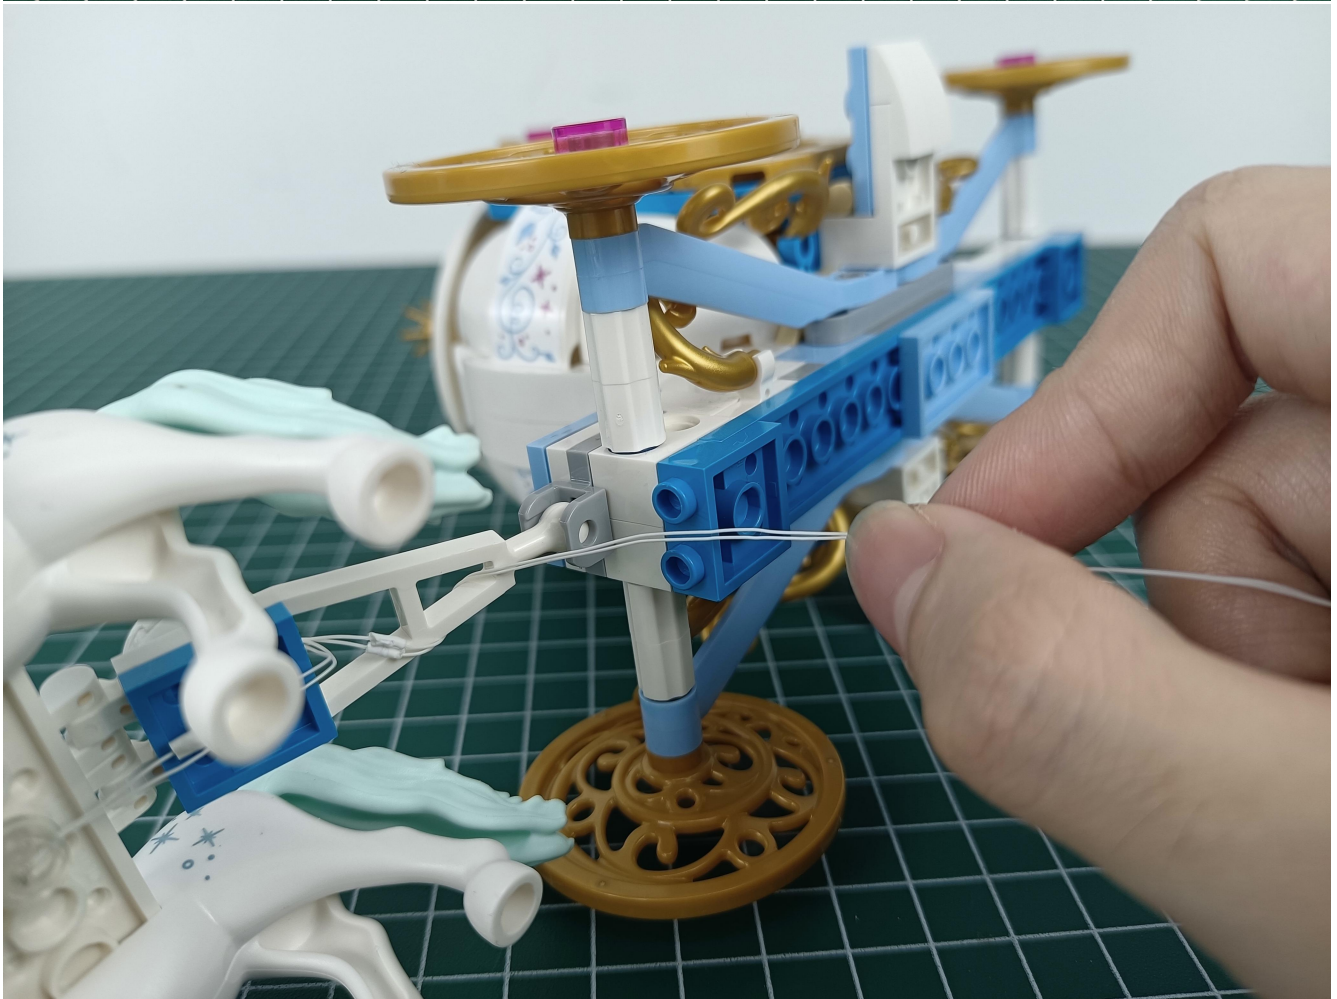





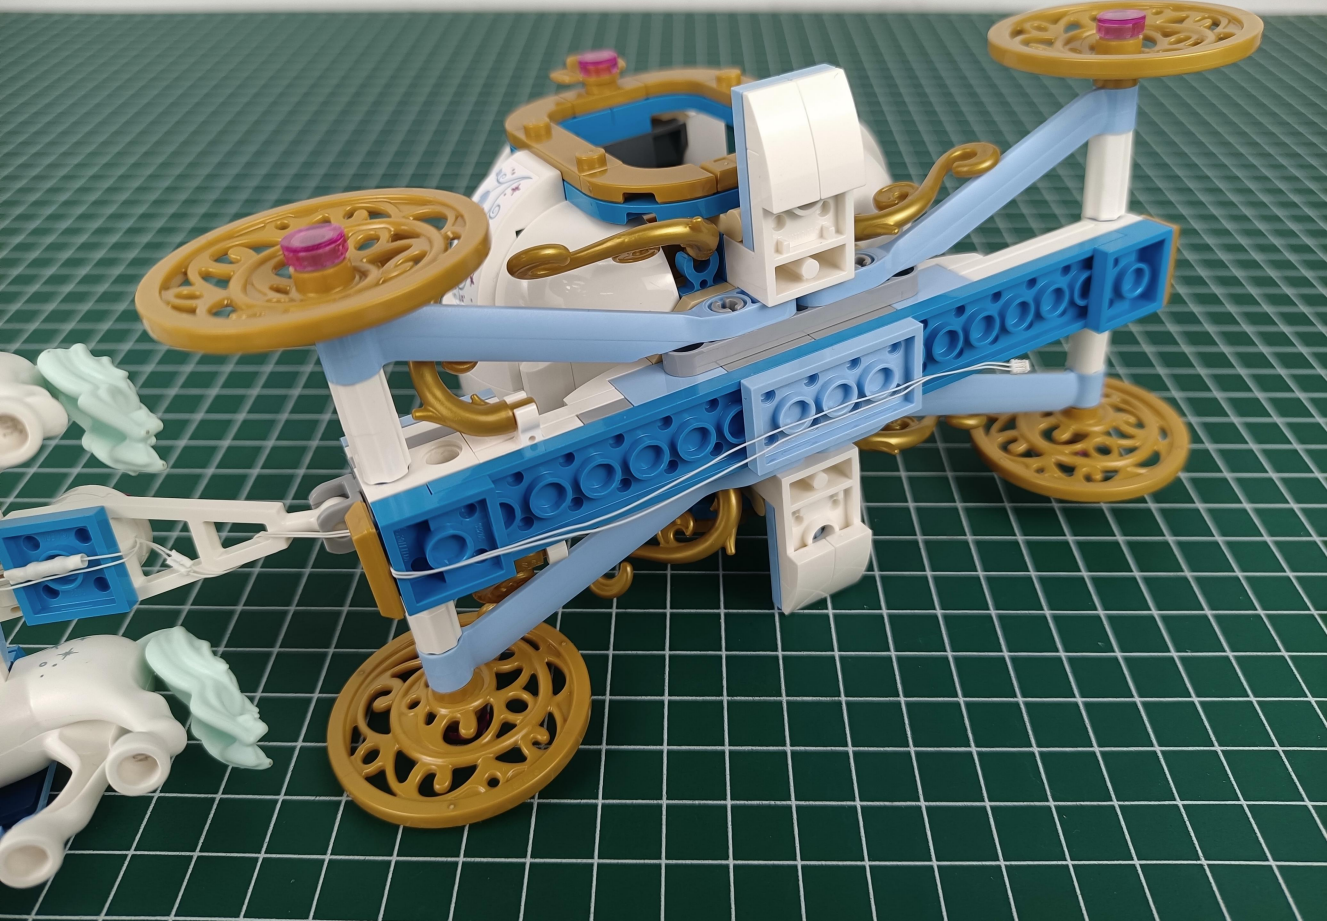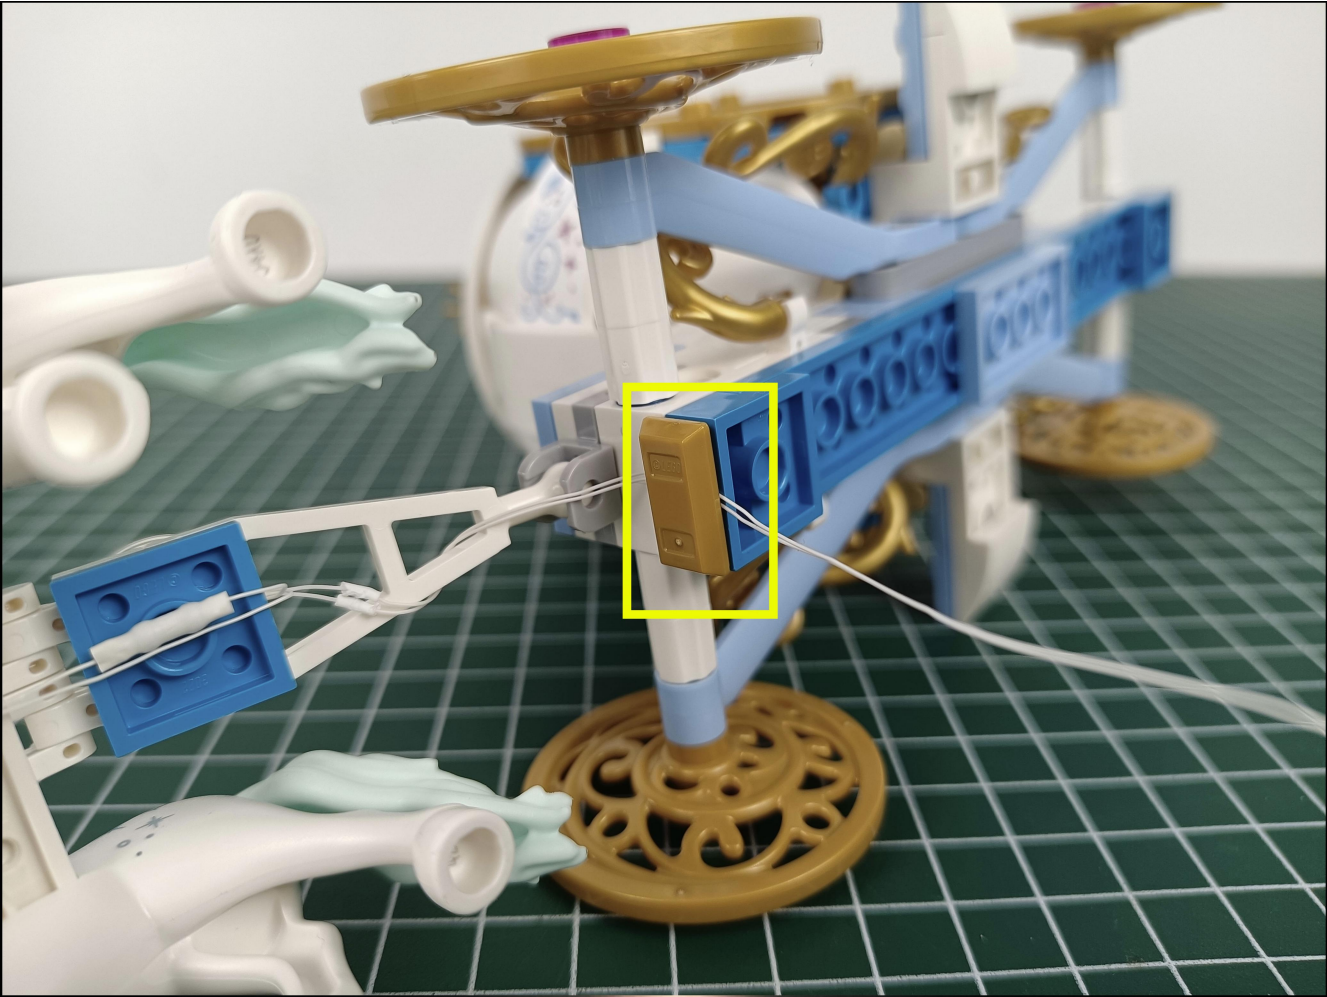




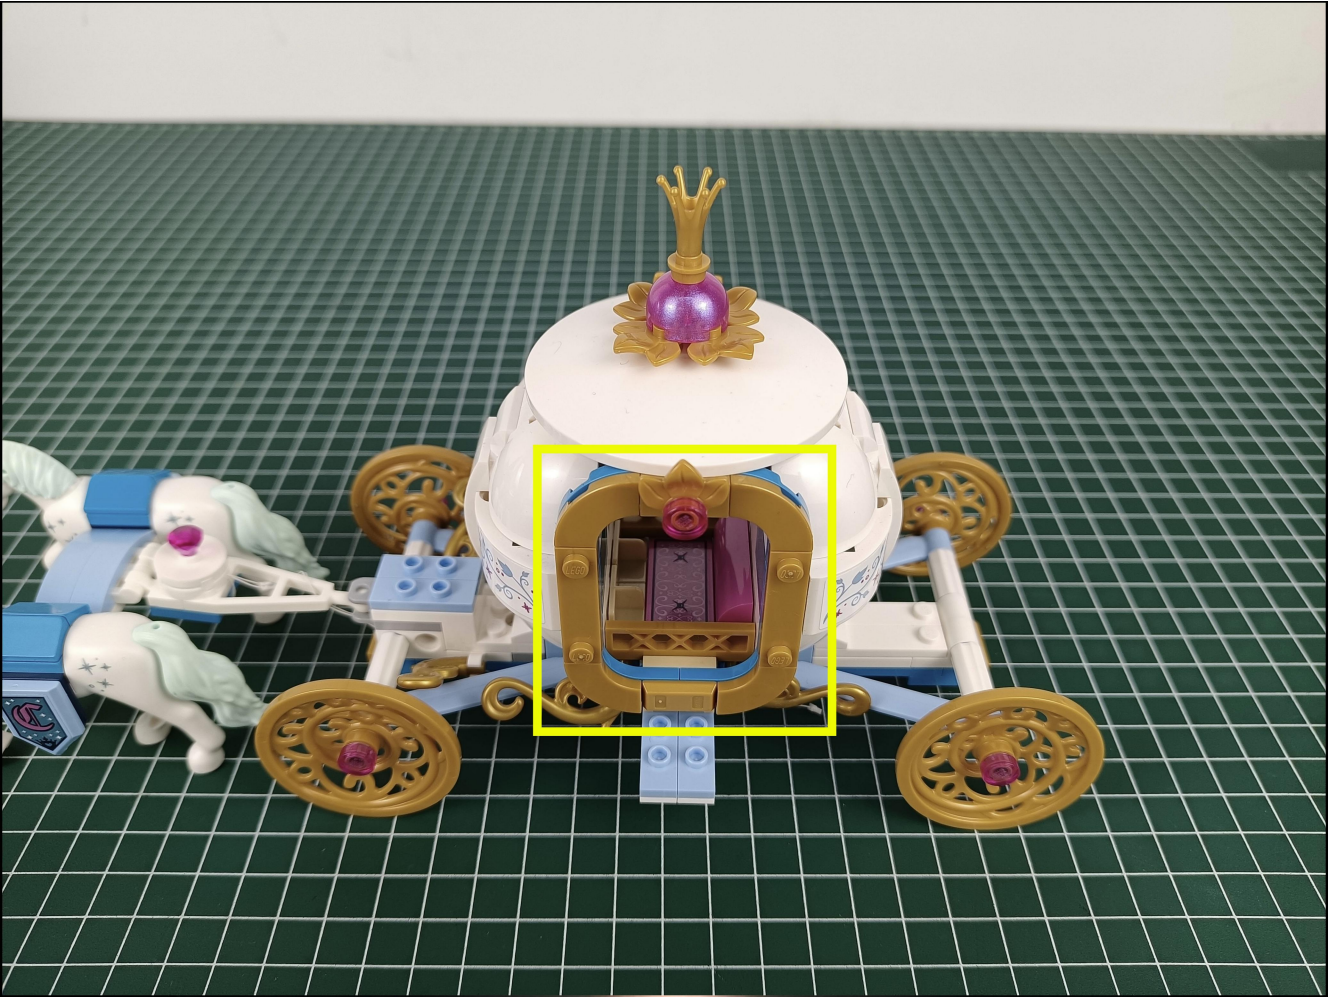





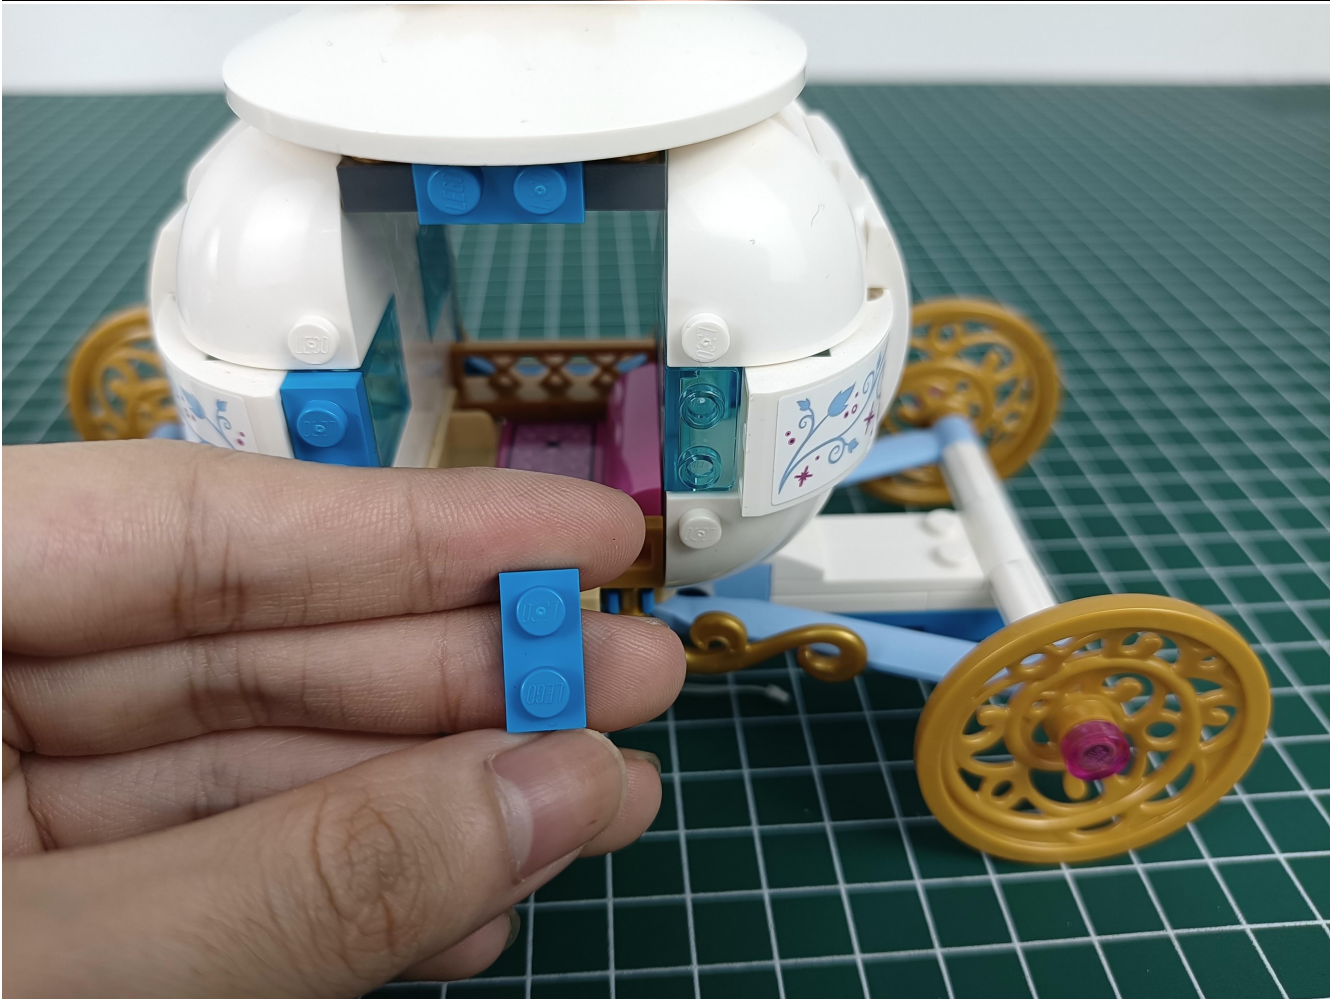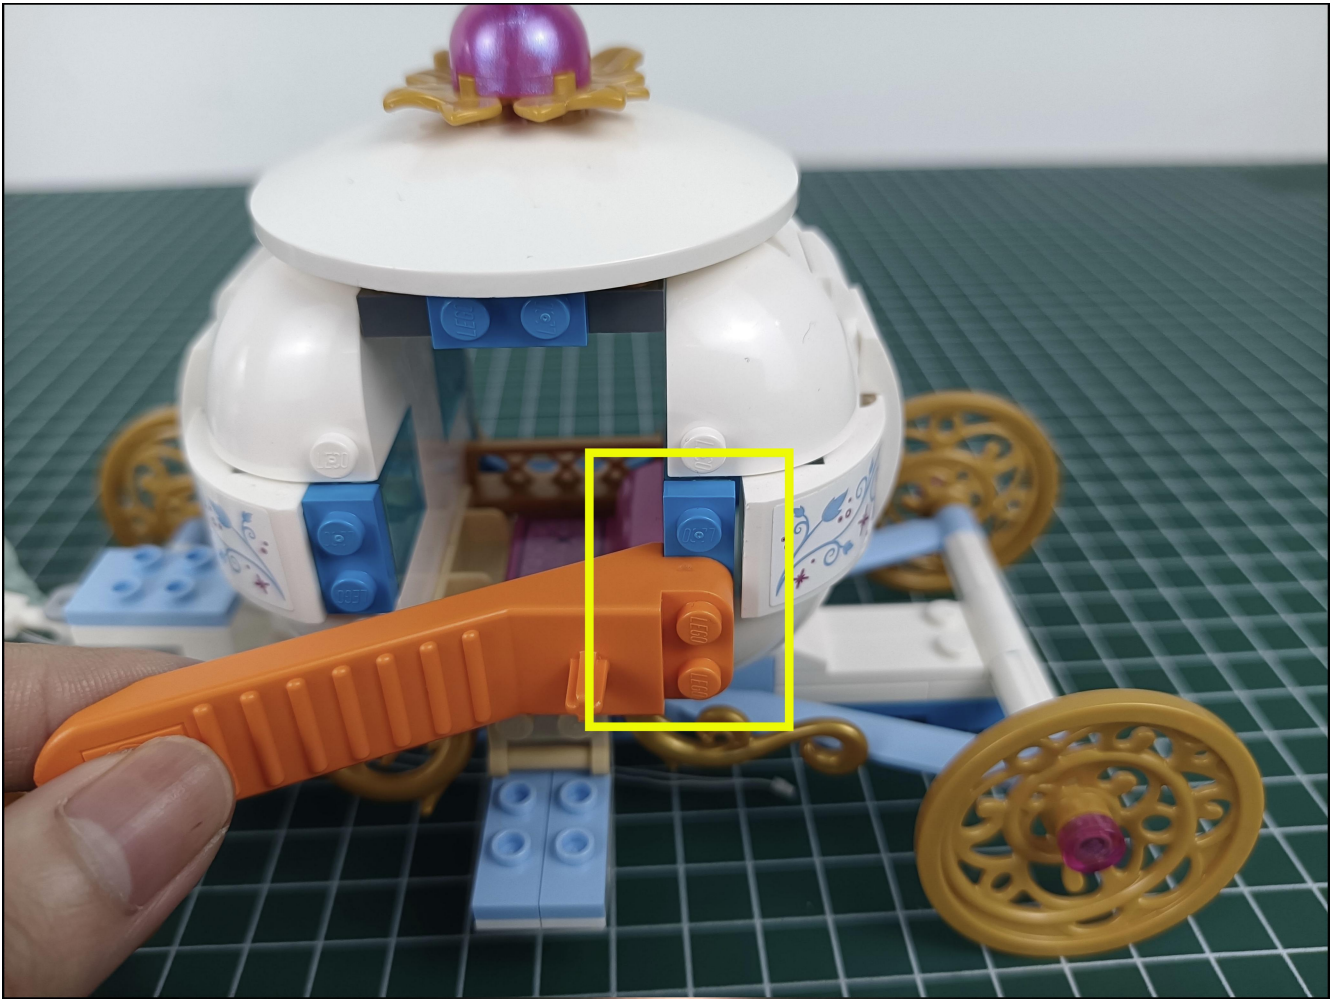




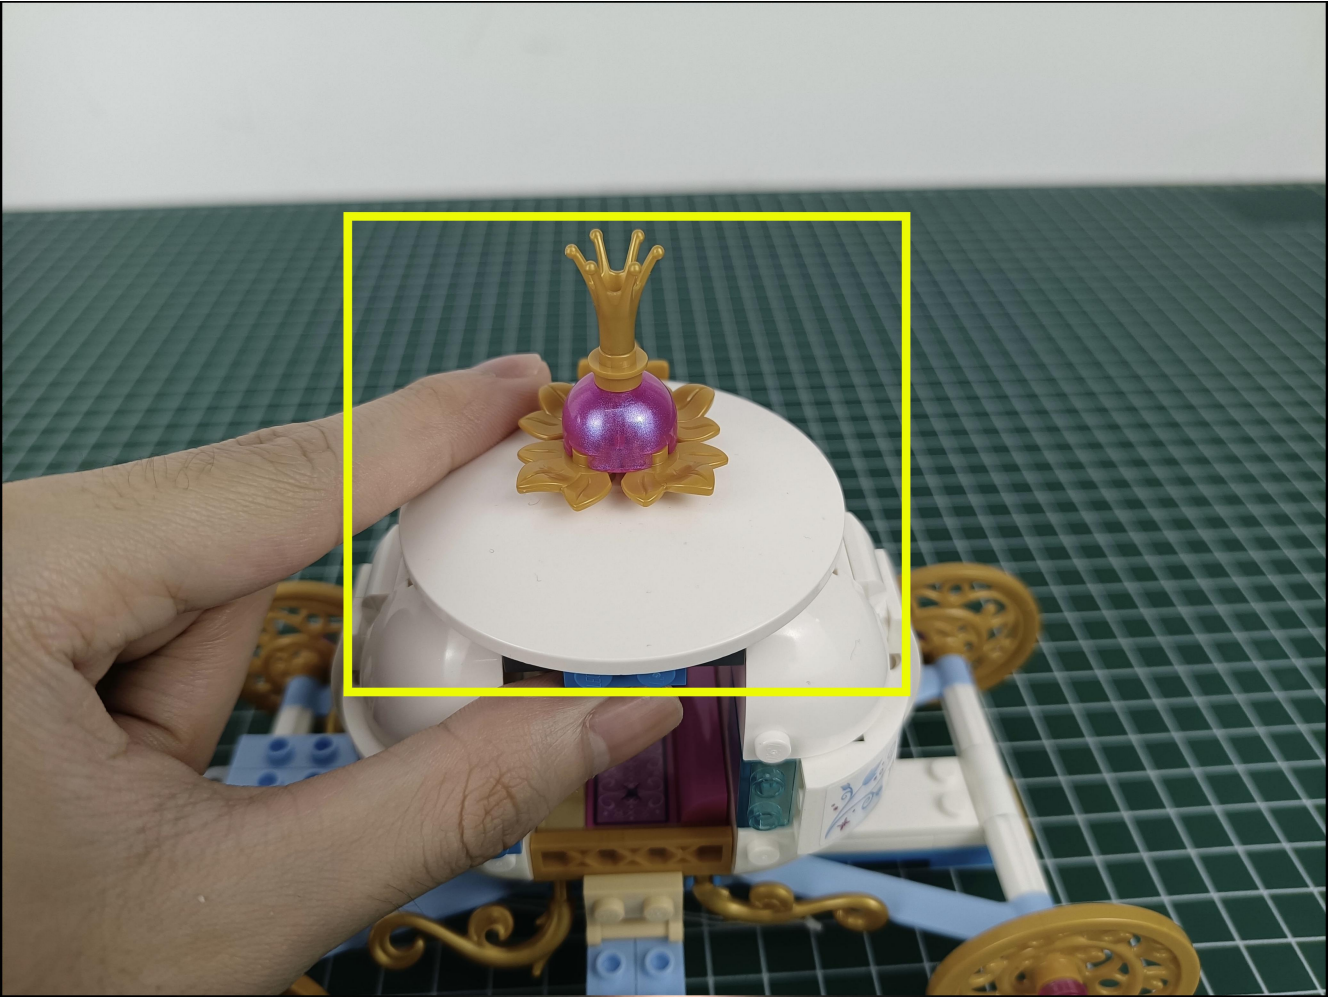




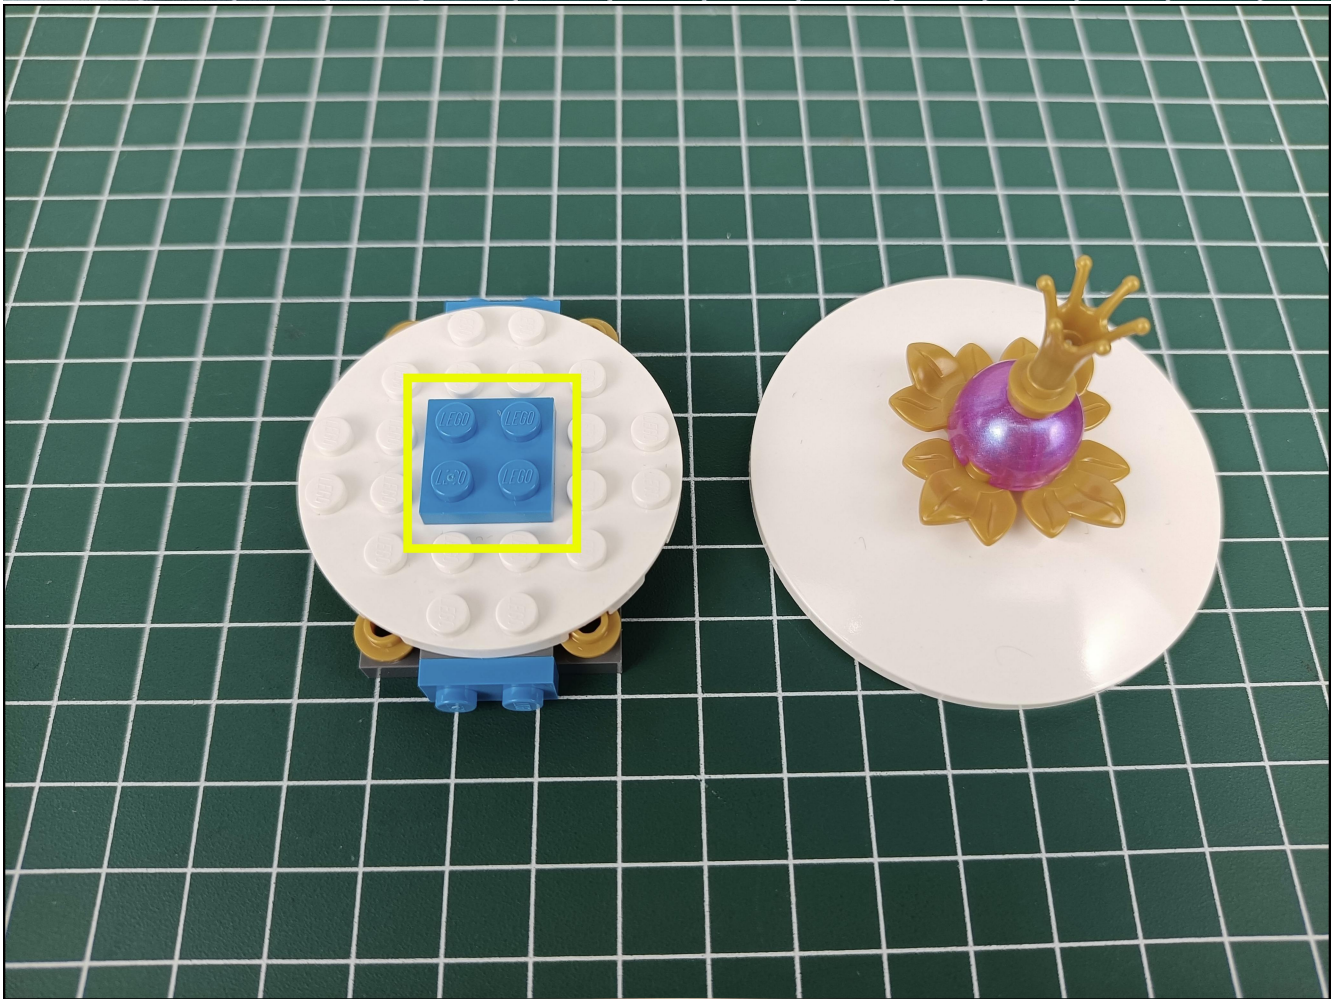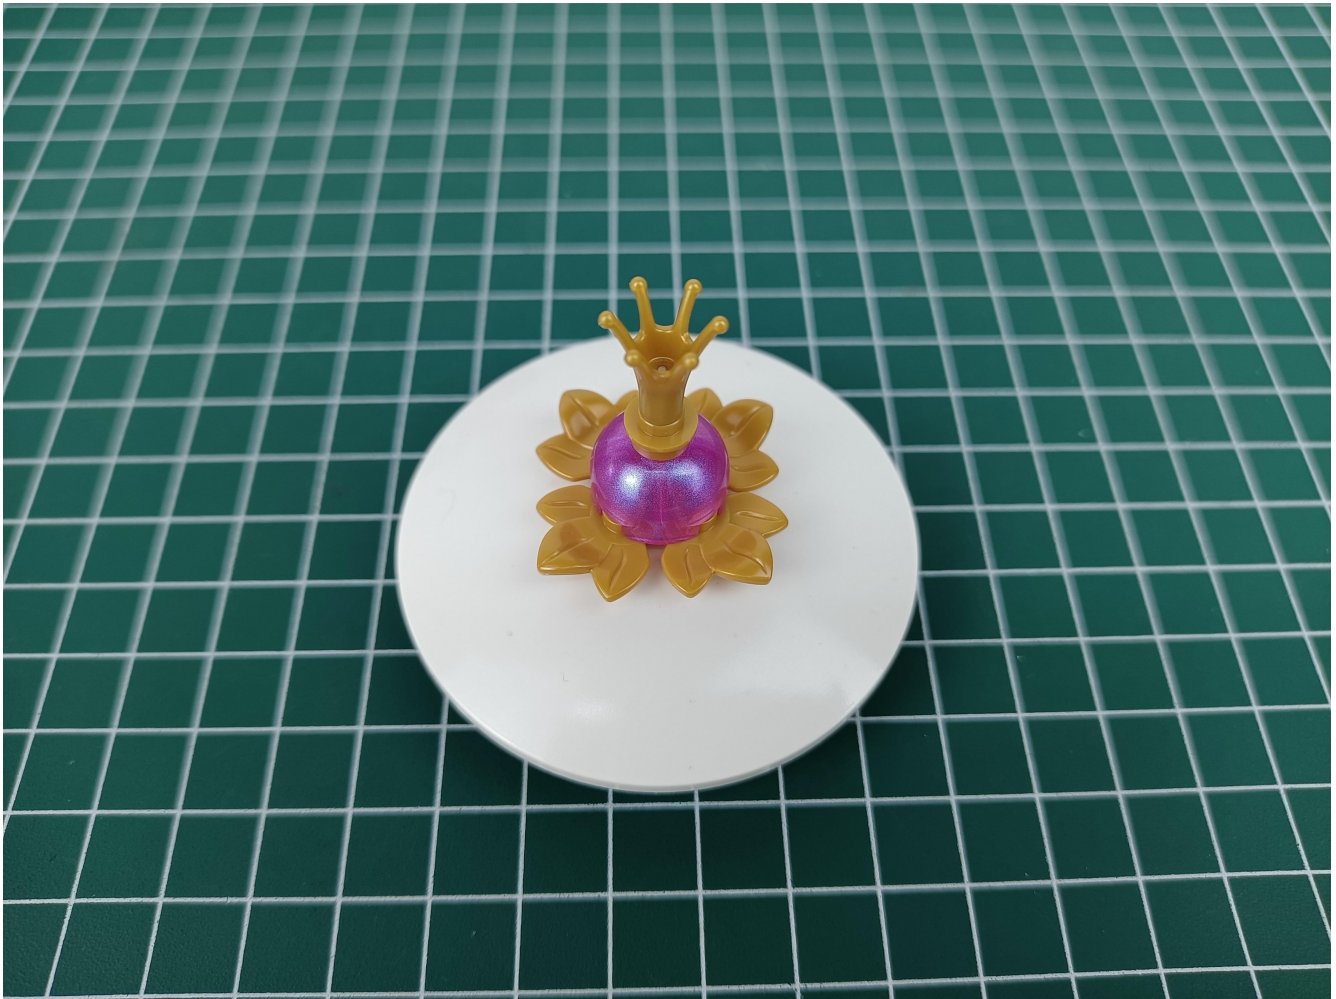



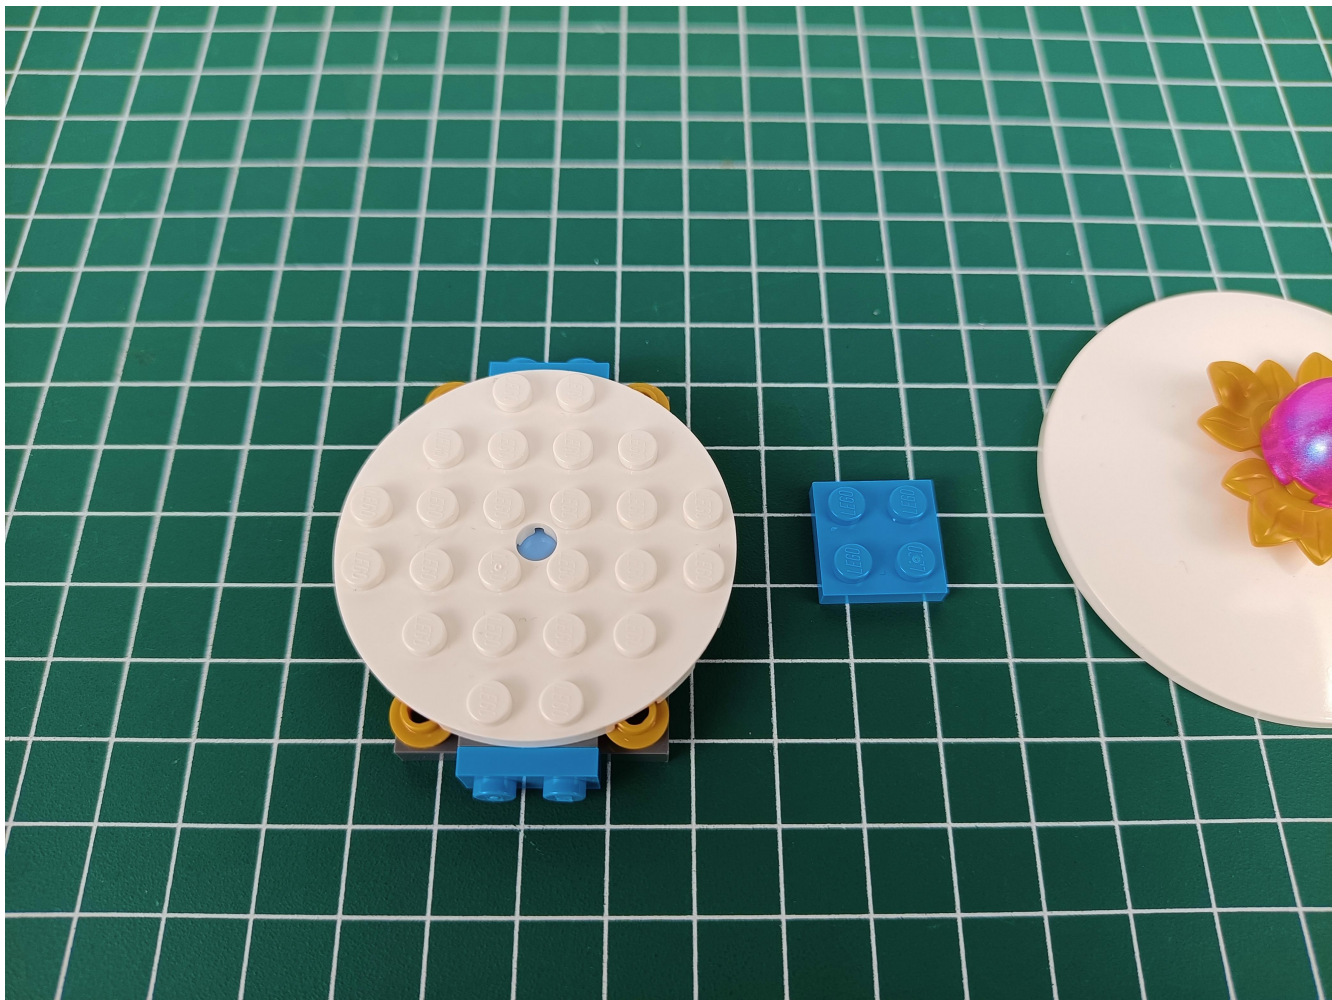





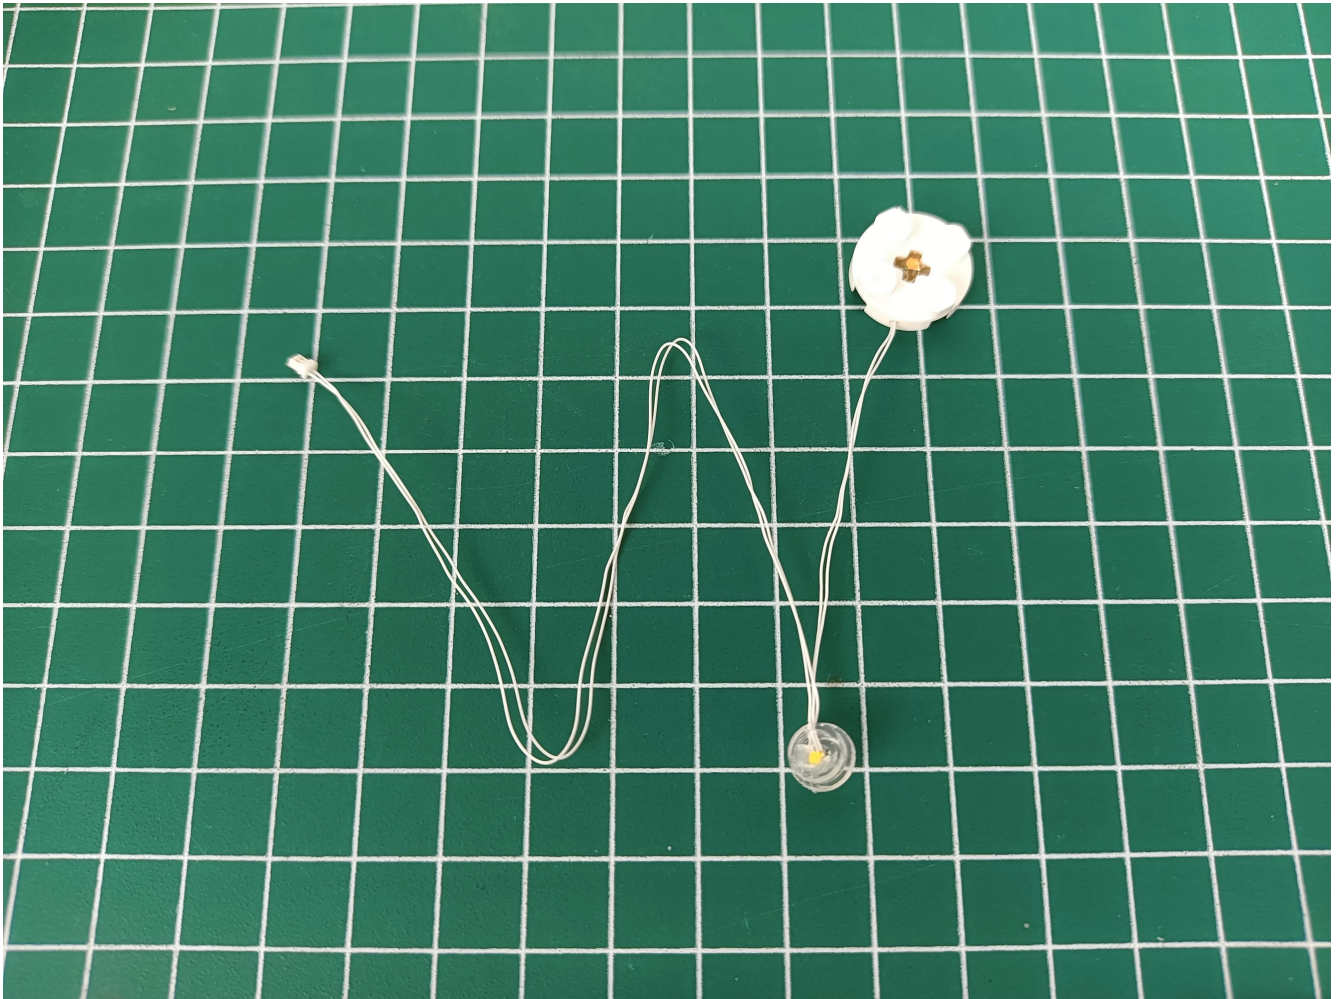


**Note:**



Please be careful when installing. The lamp wire is relatively slender and cannot be pressed on the raised position of the building block. It should pass along the gap, otherwise the lamp wire will be pinched.

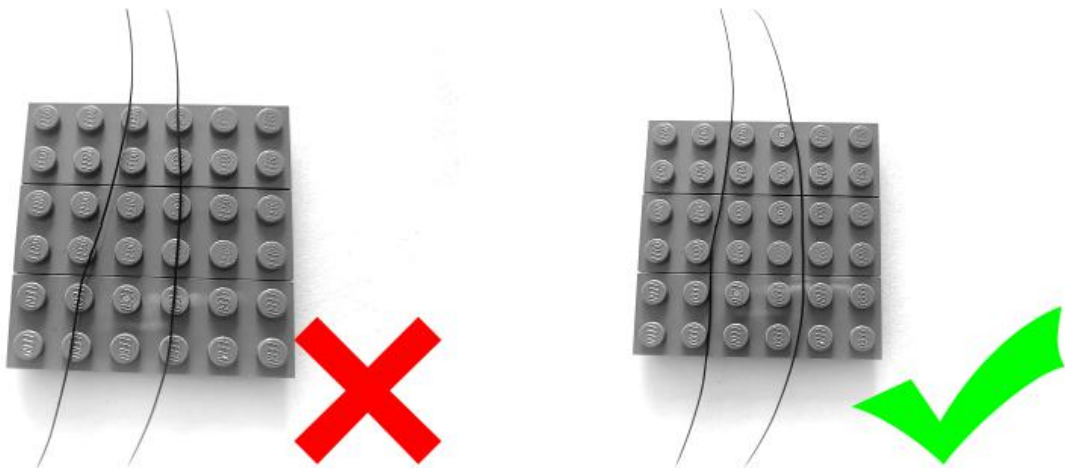





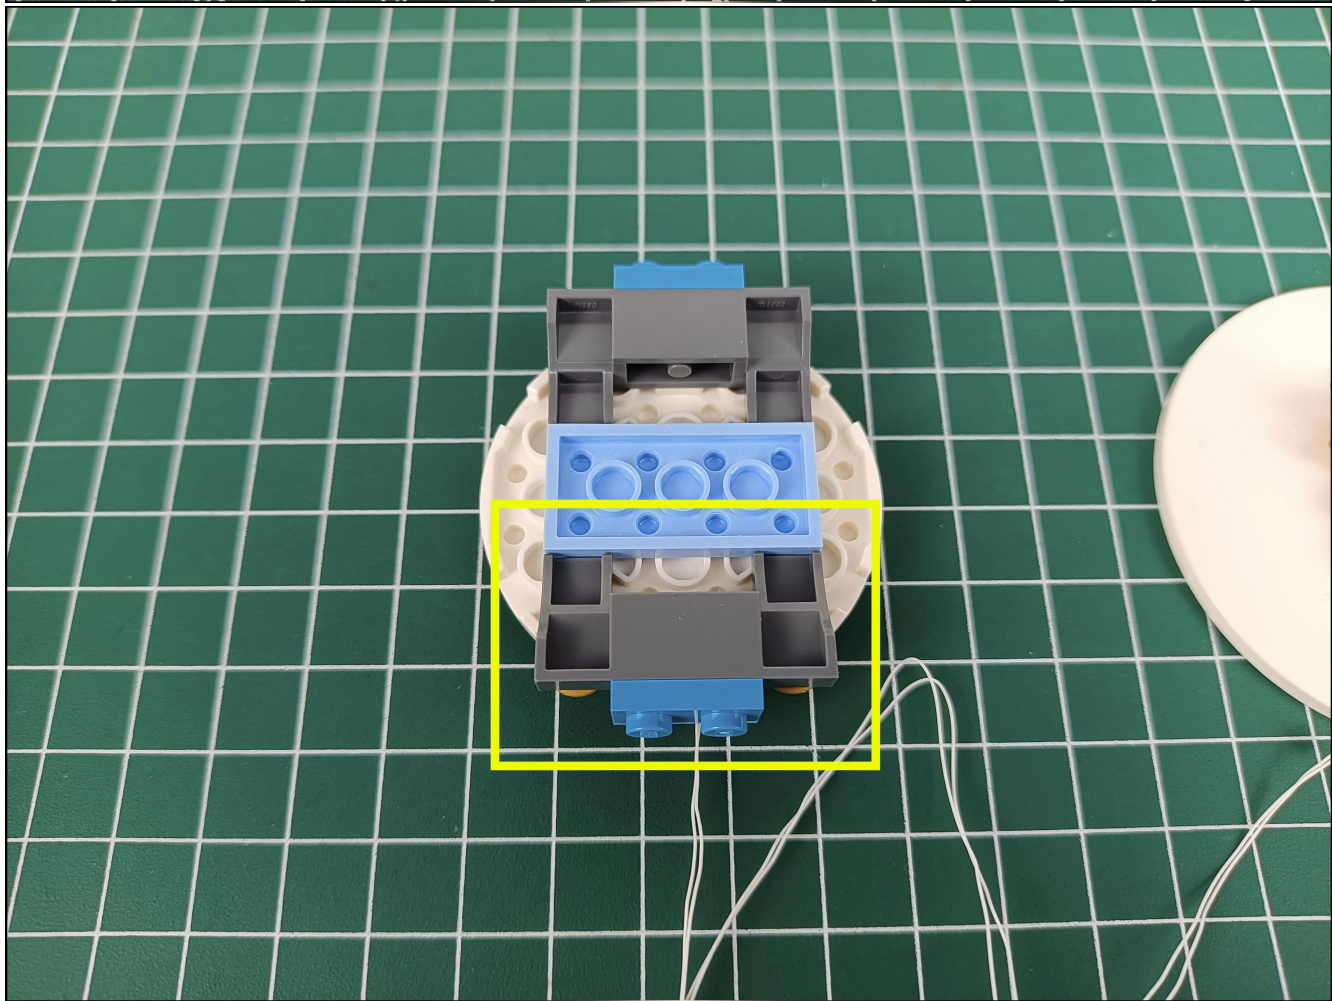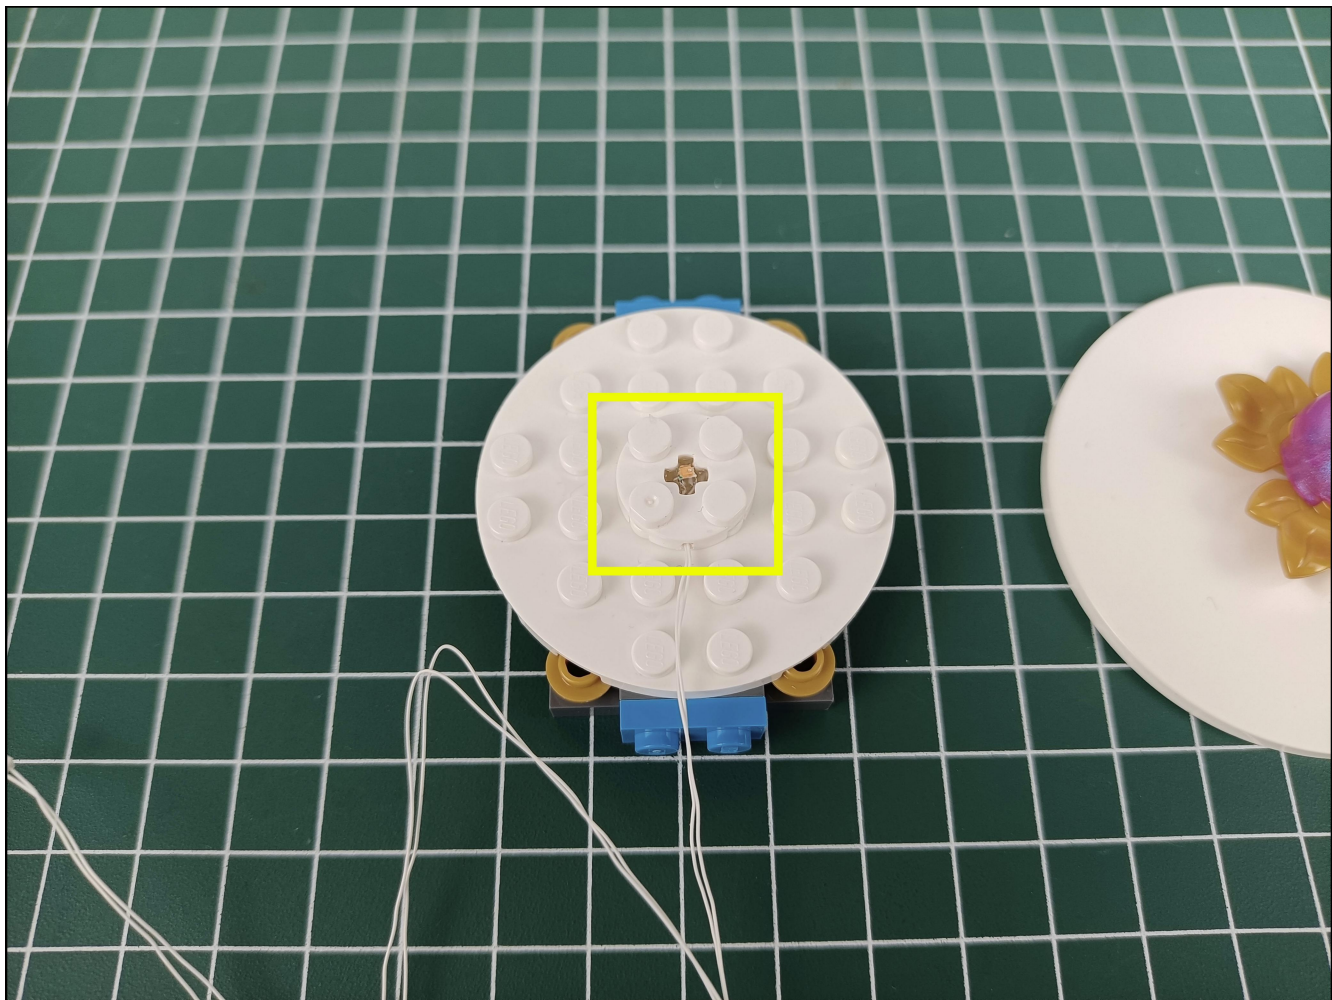





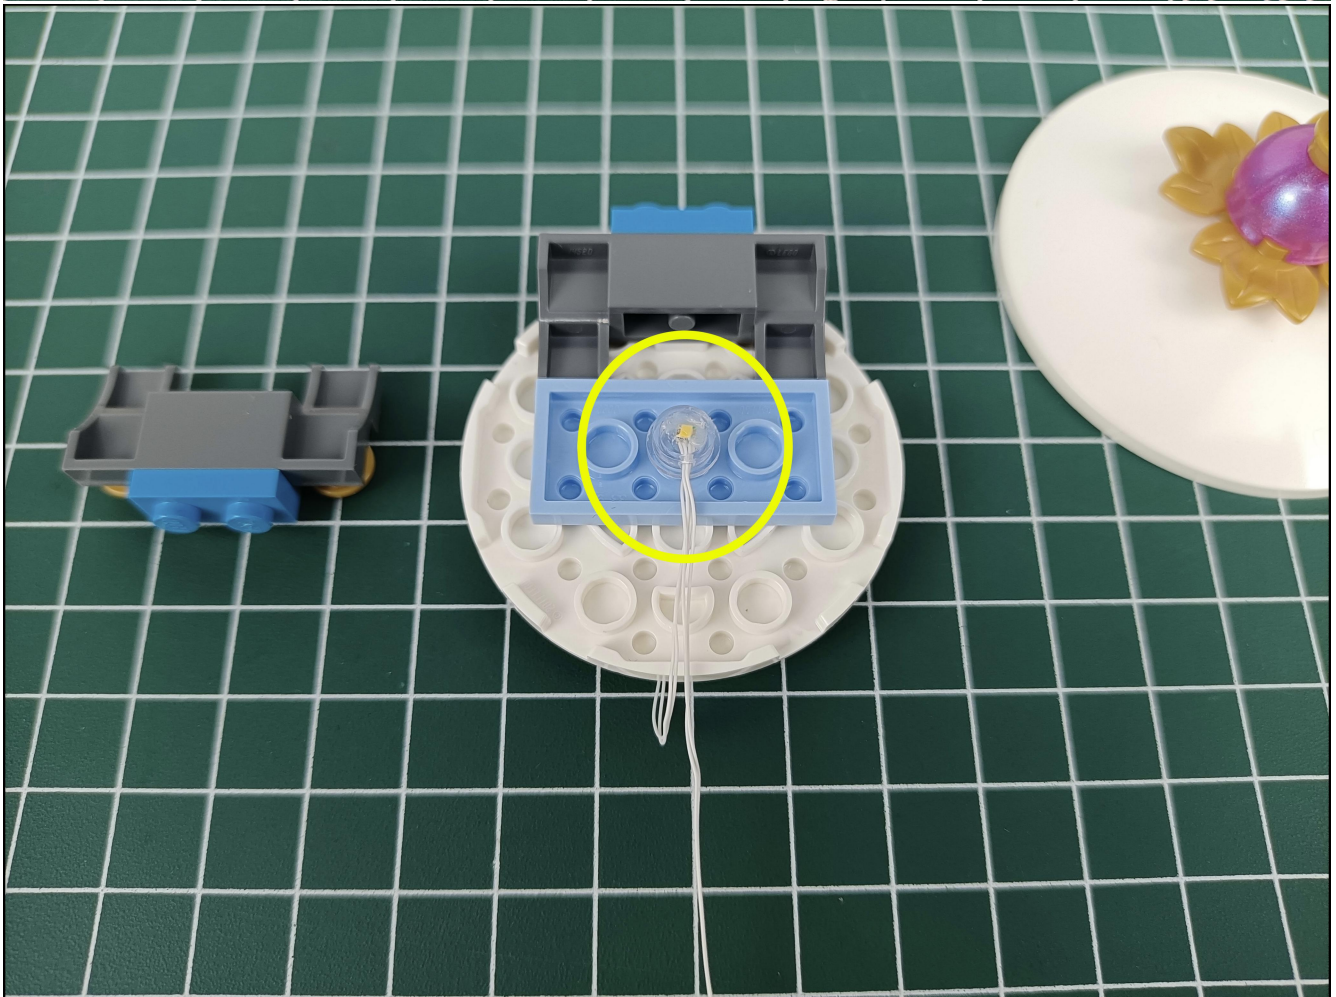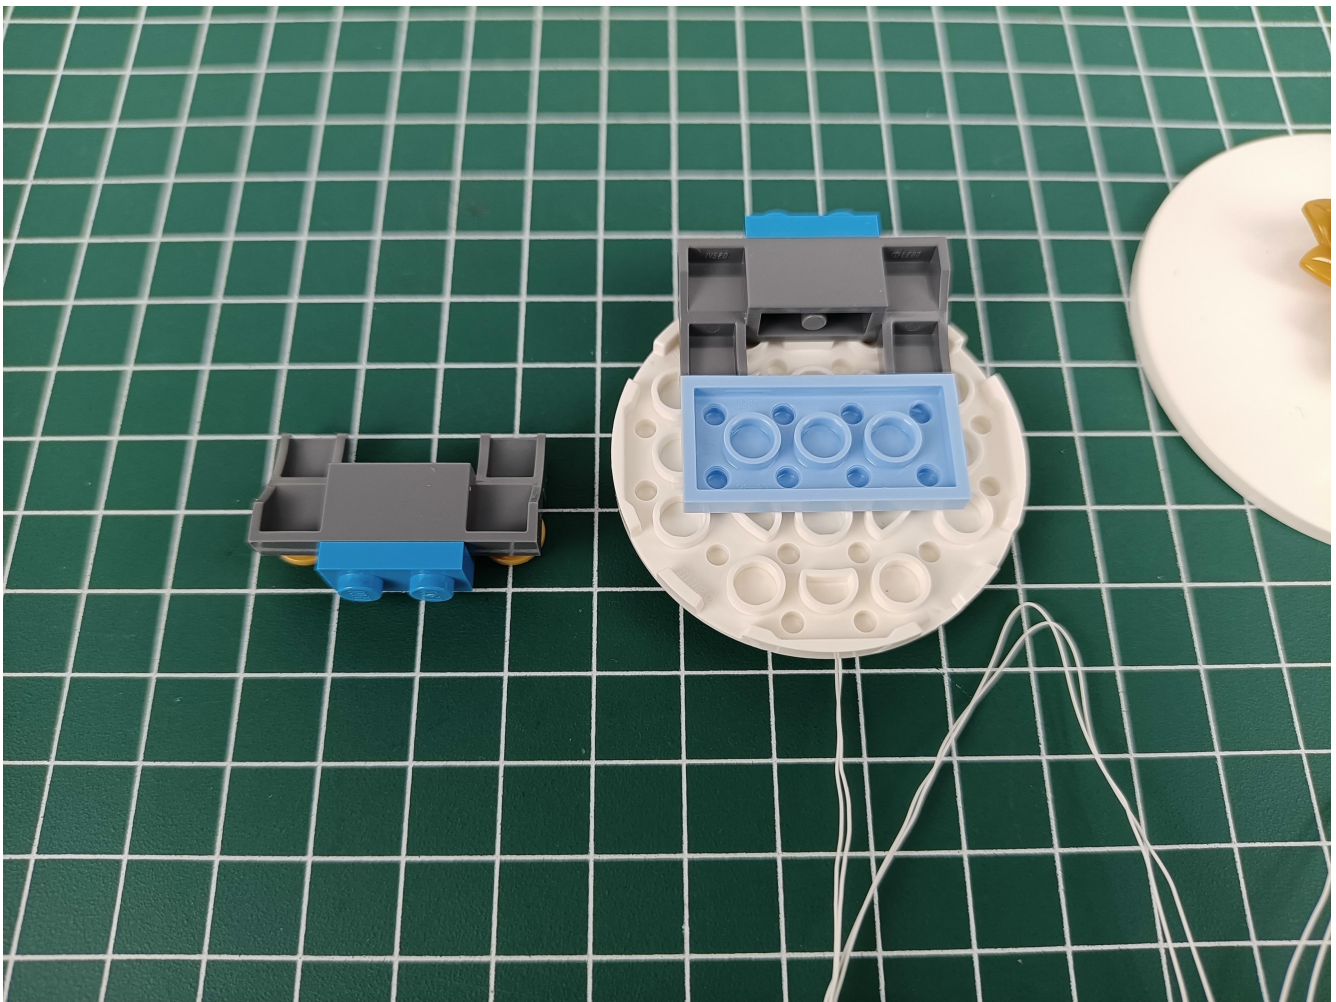





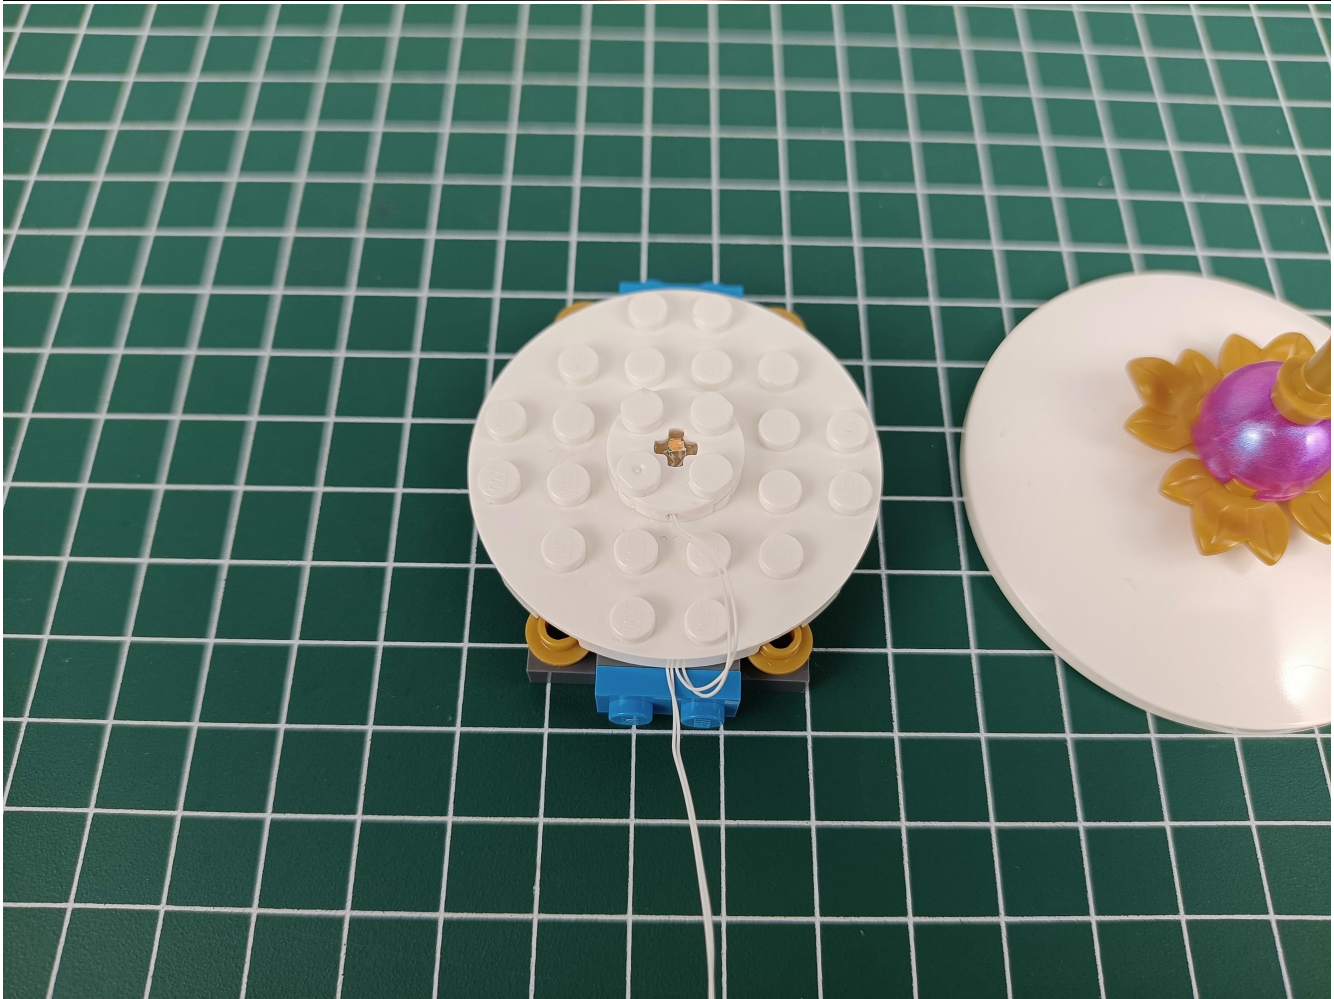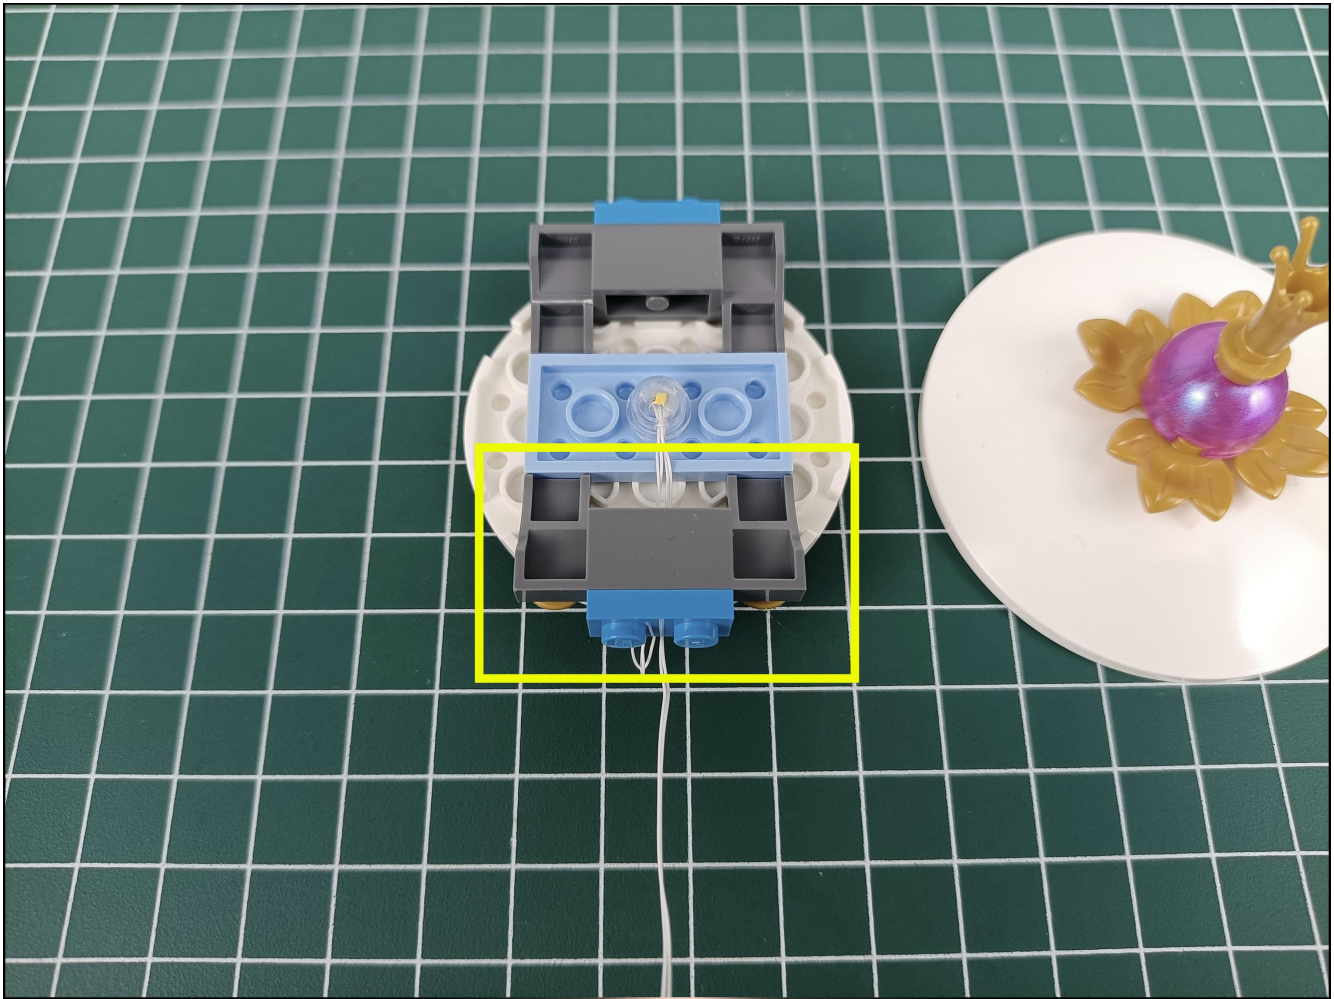





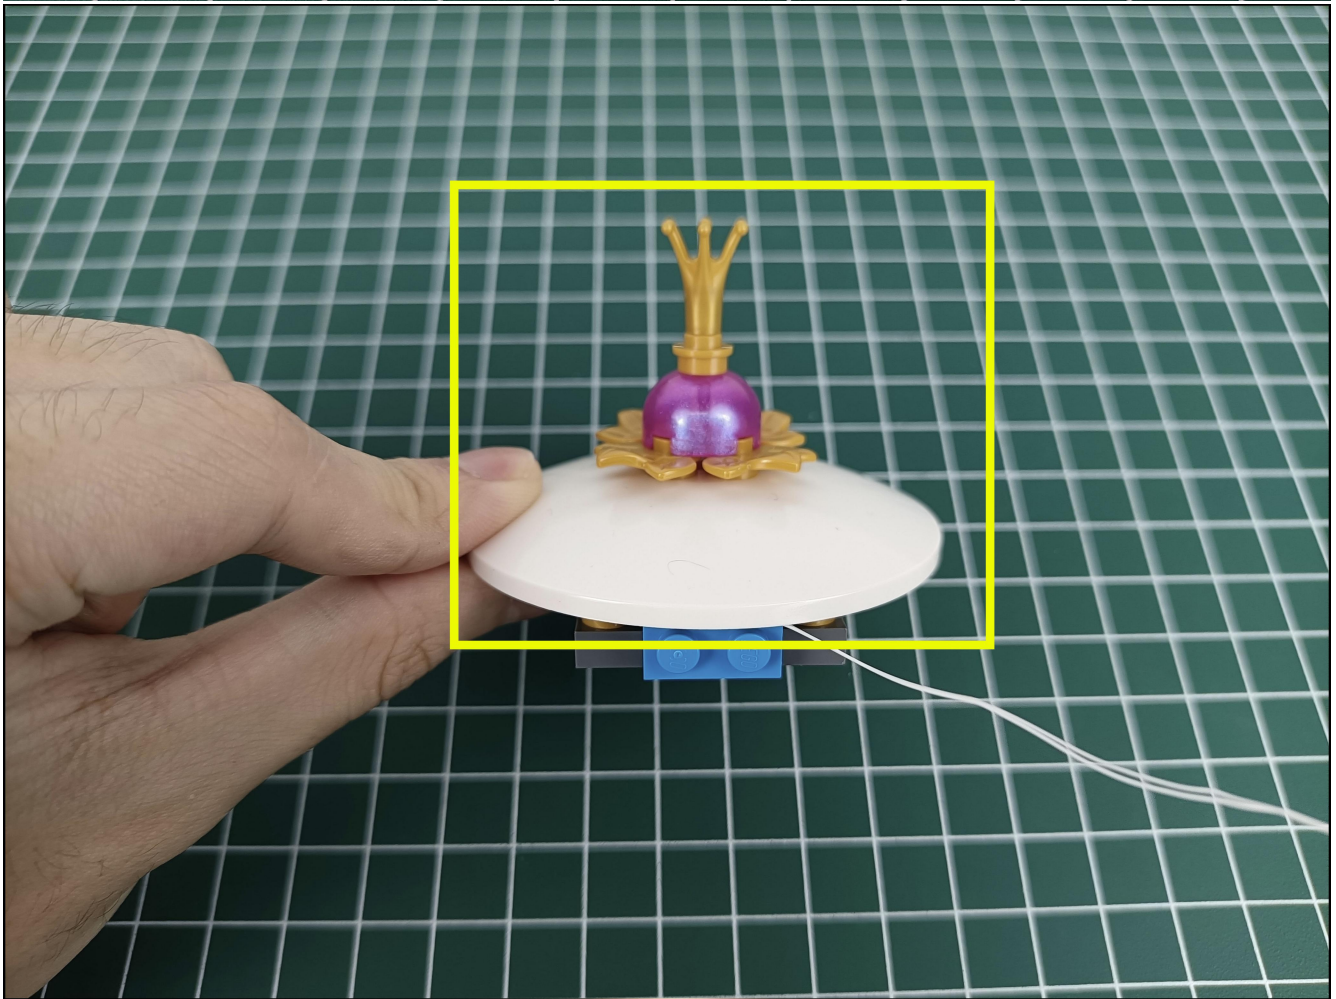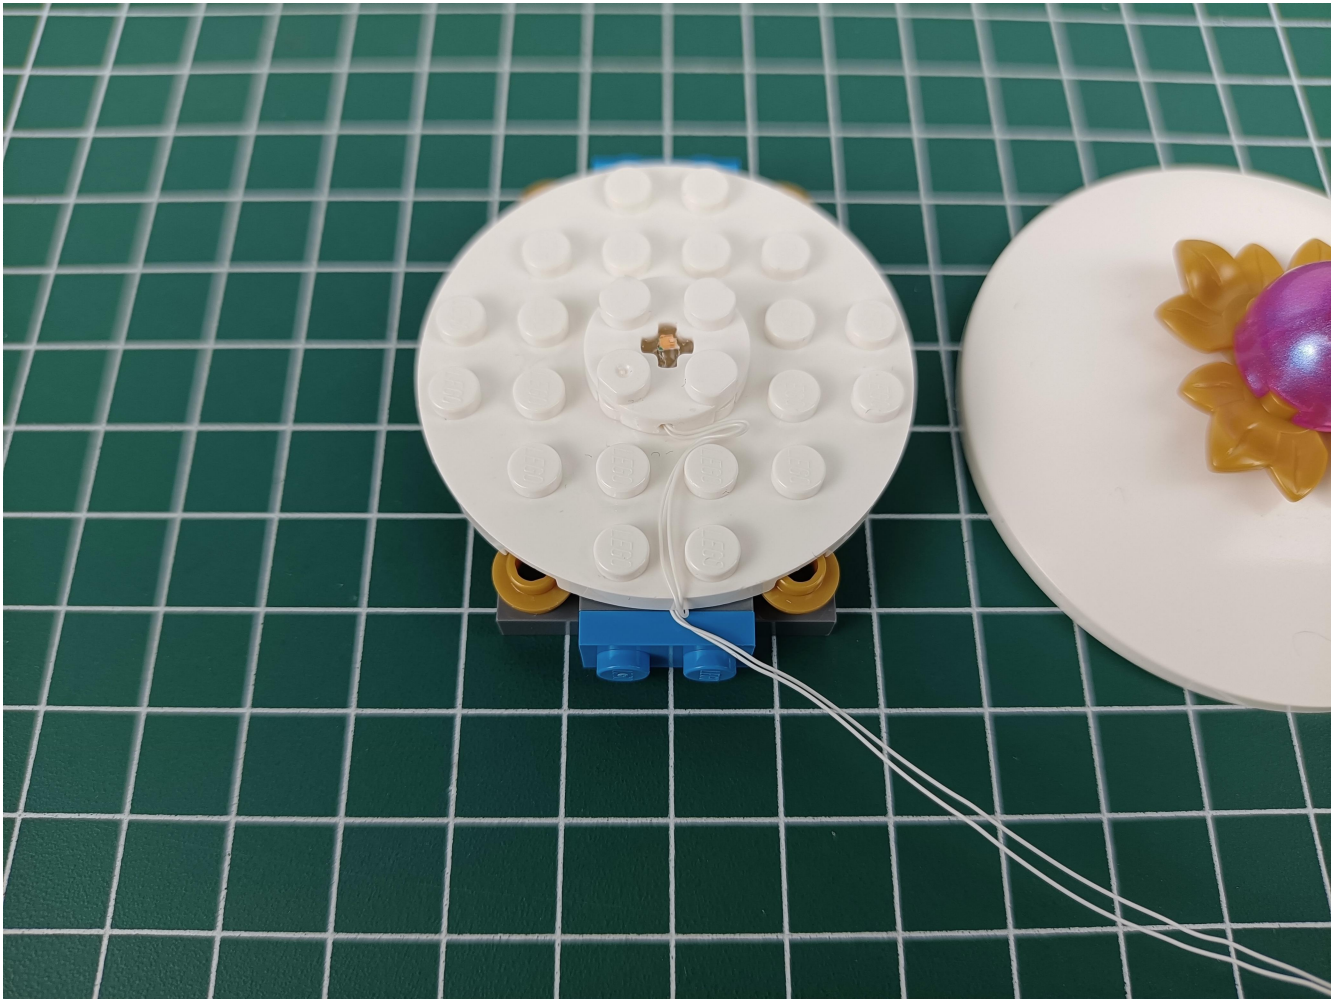





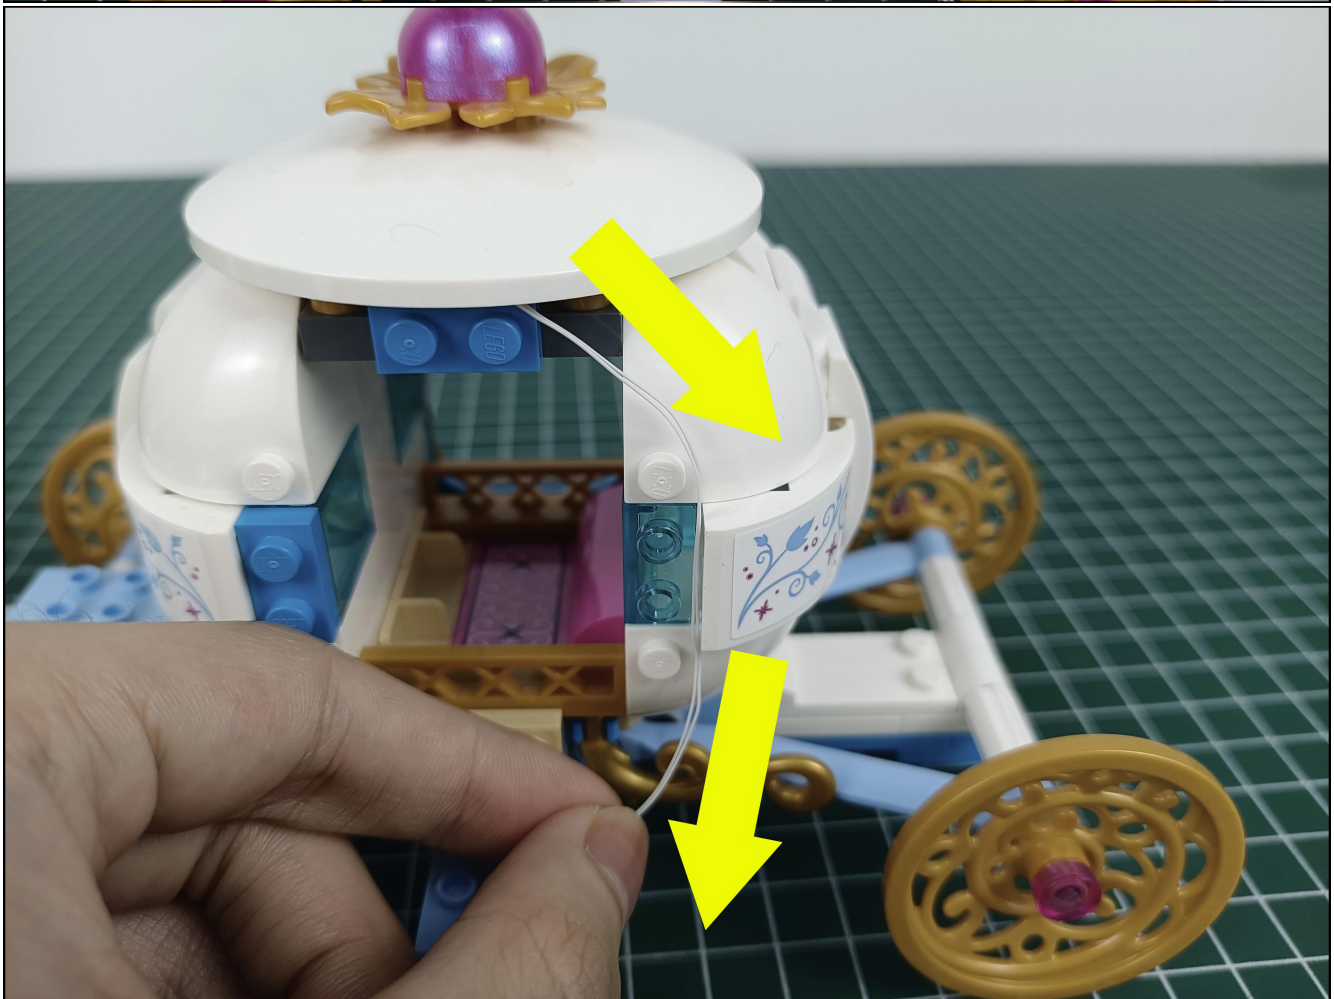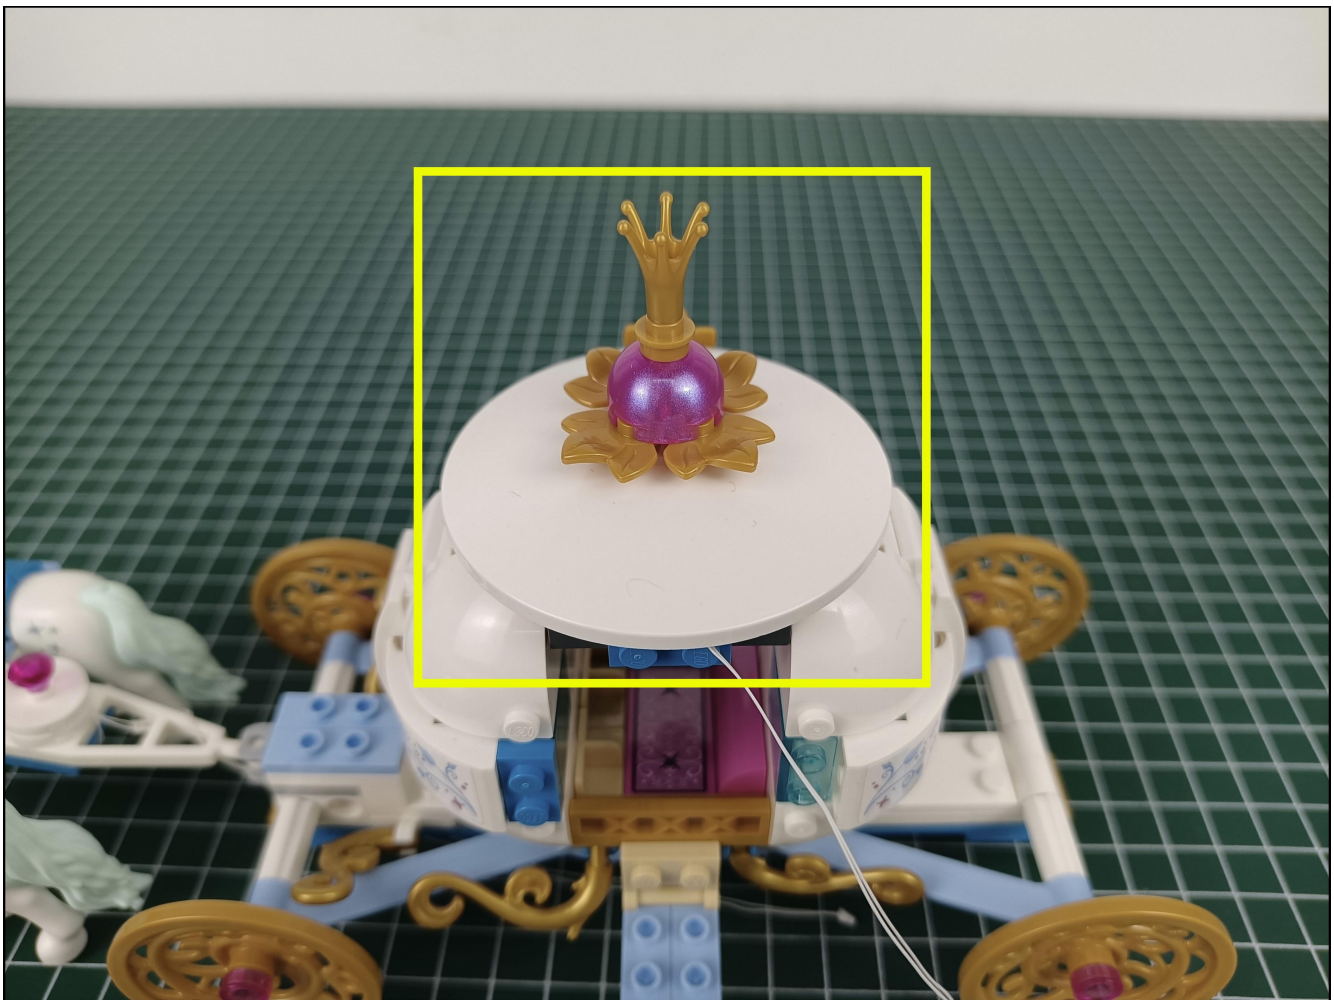





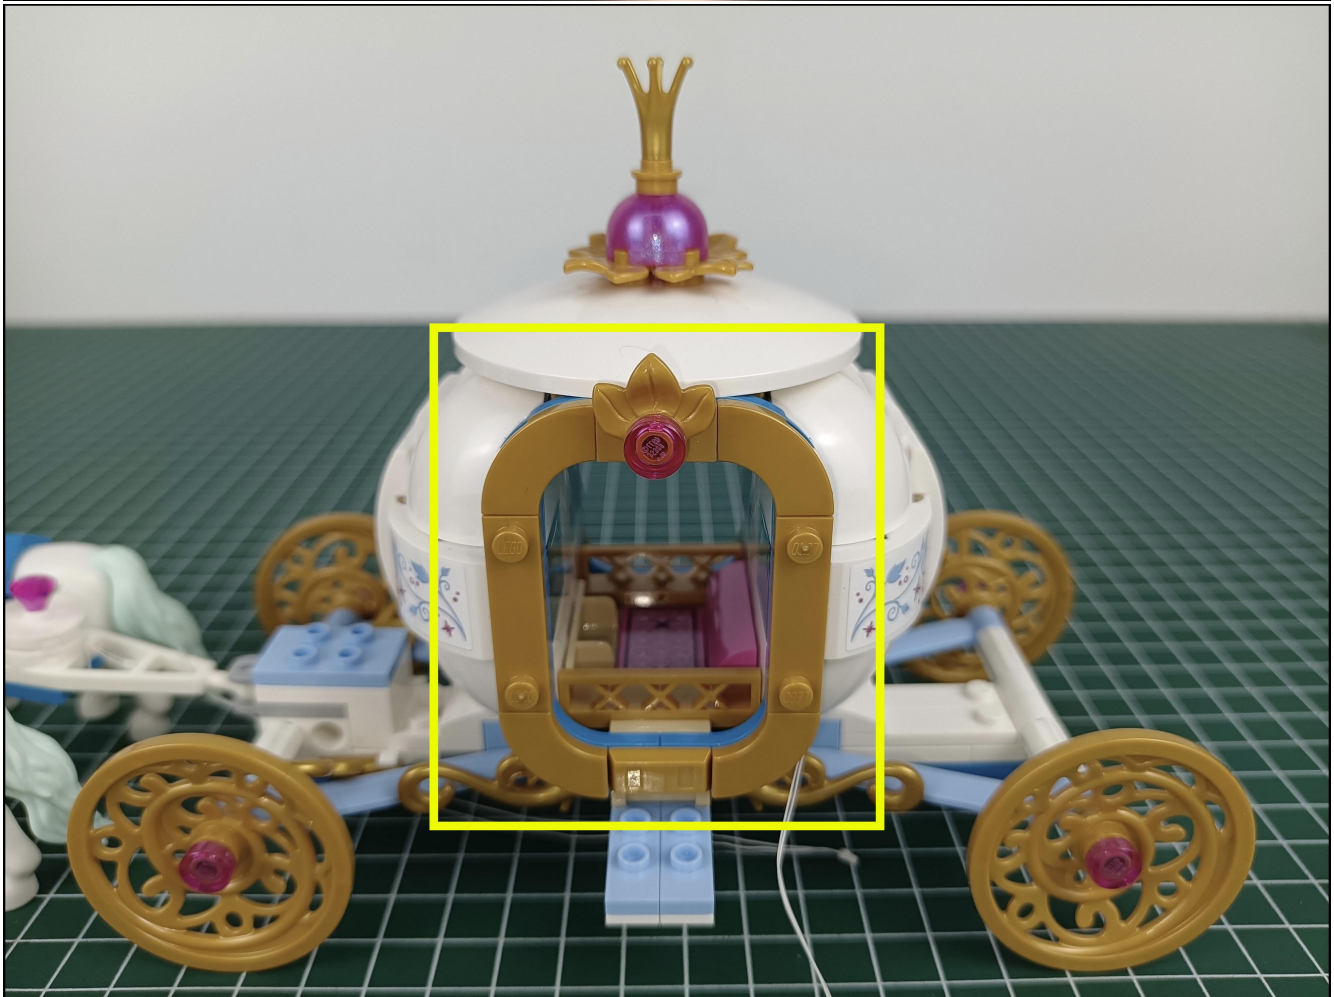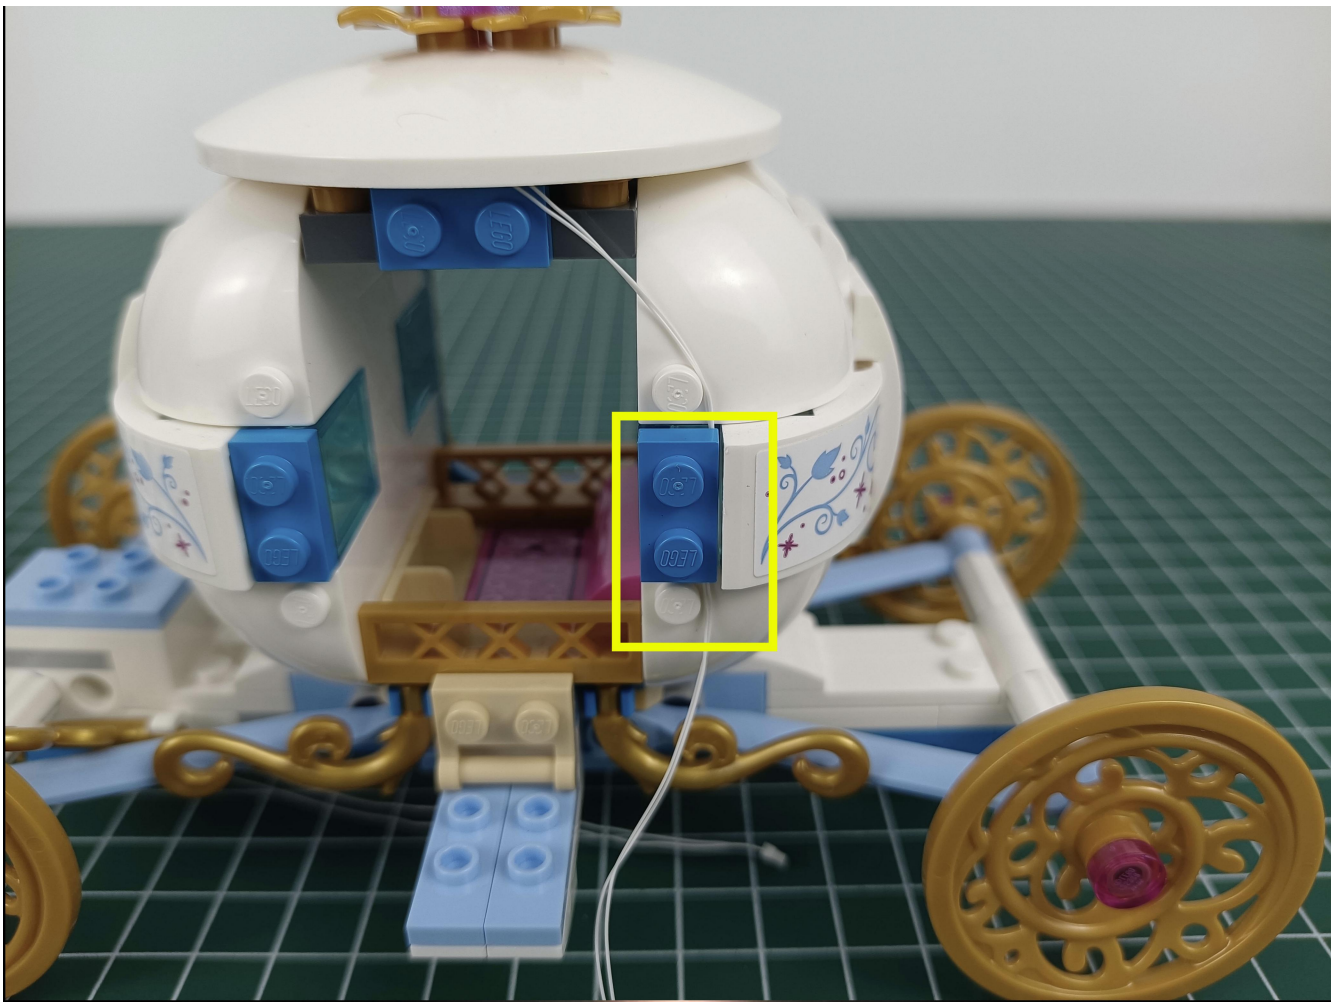





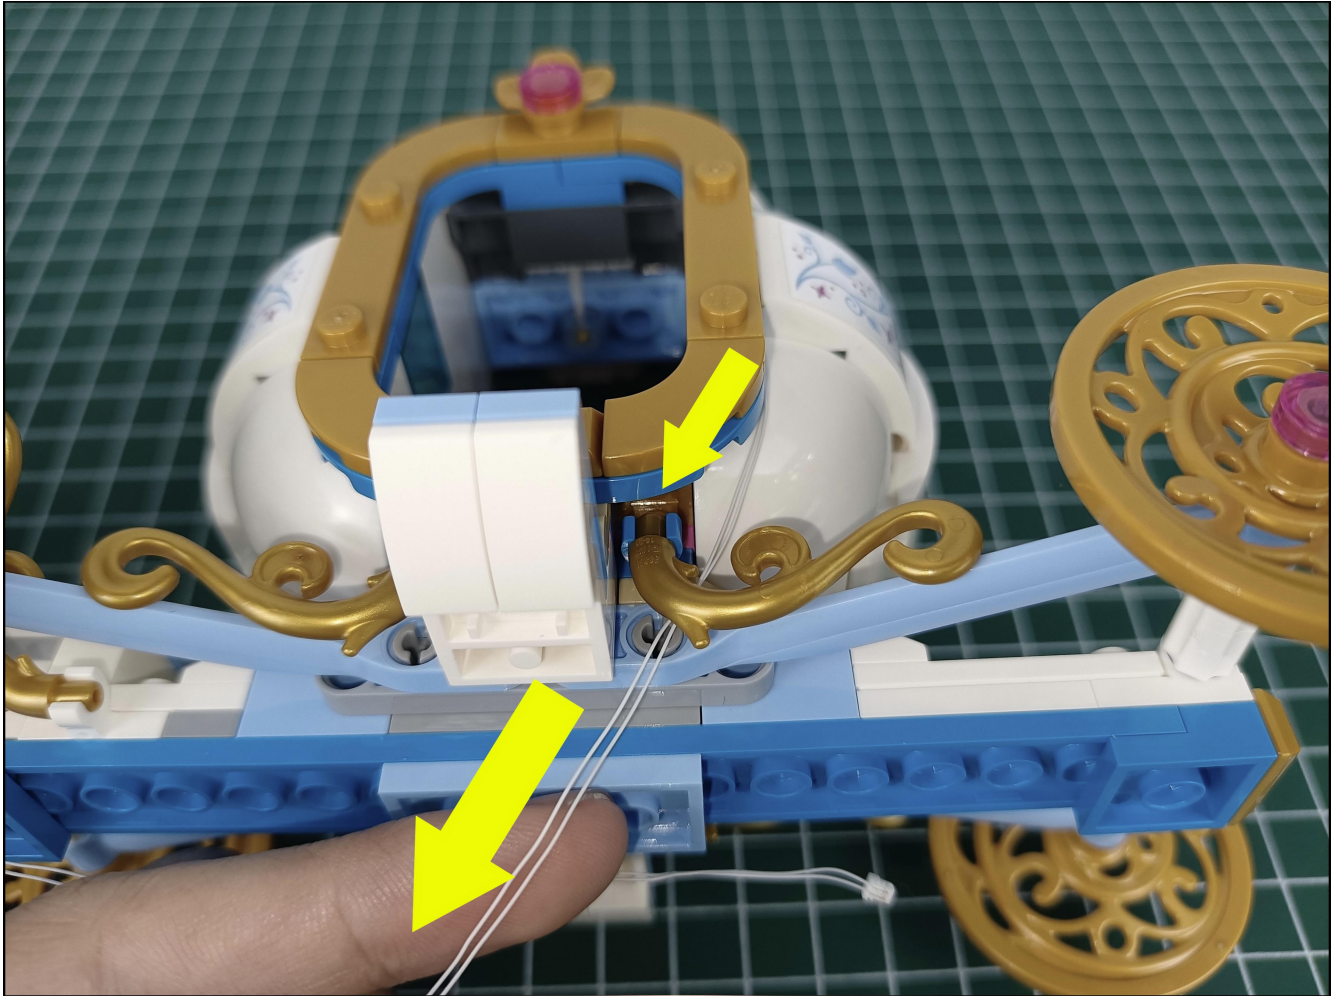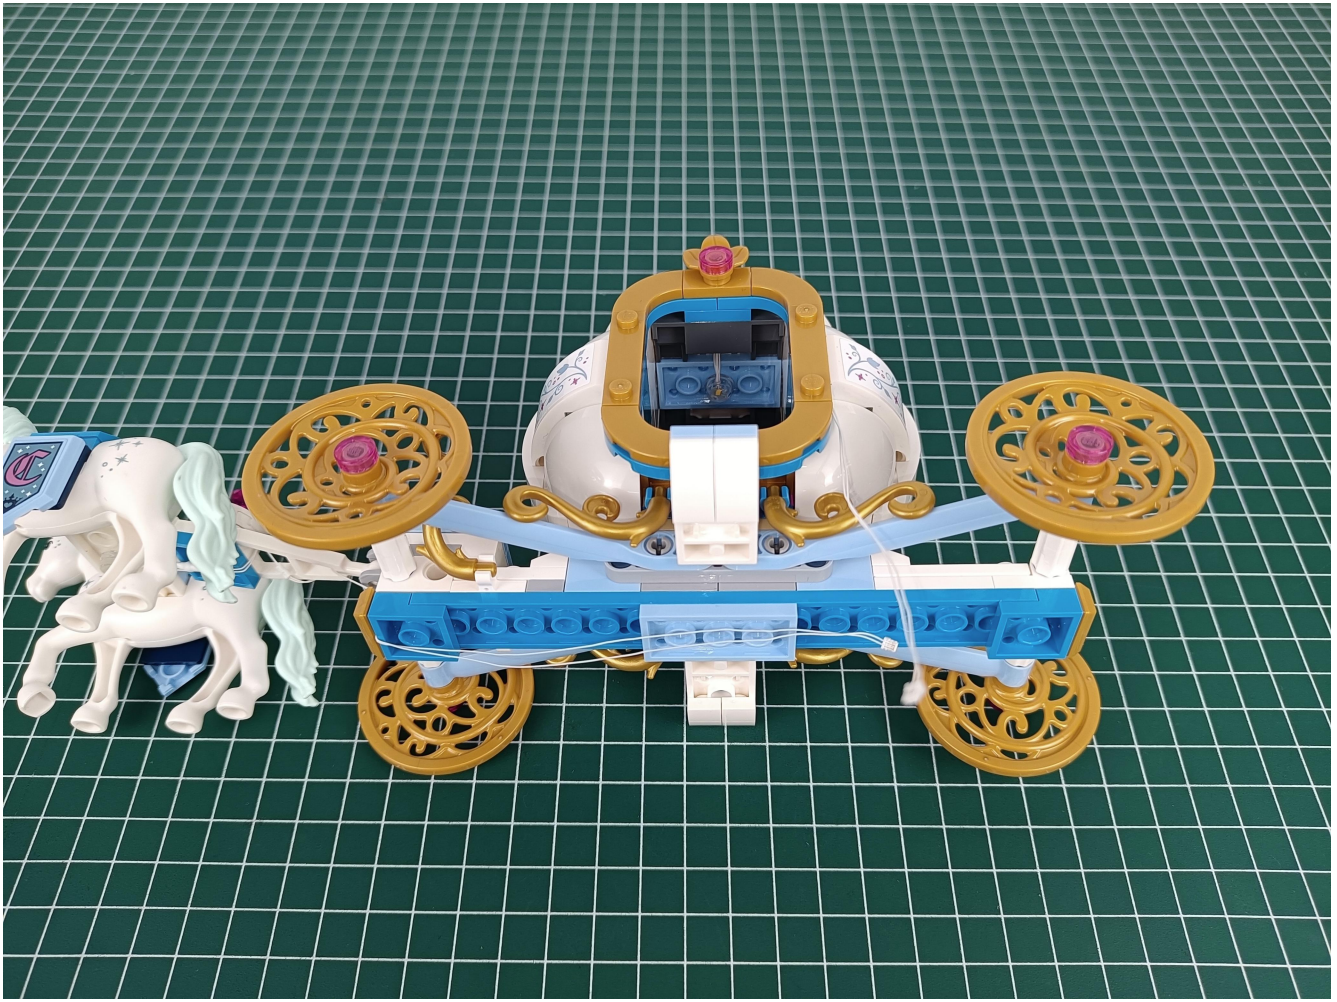




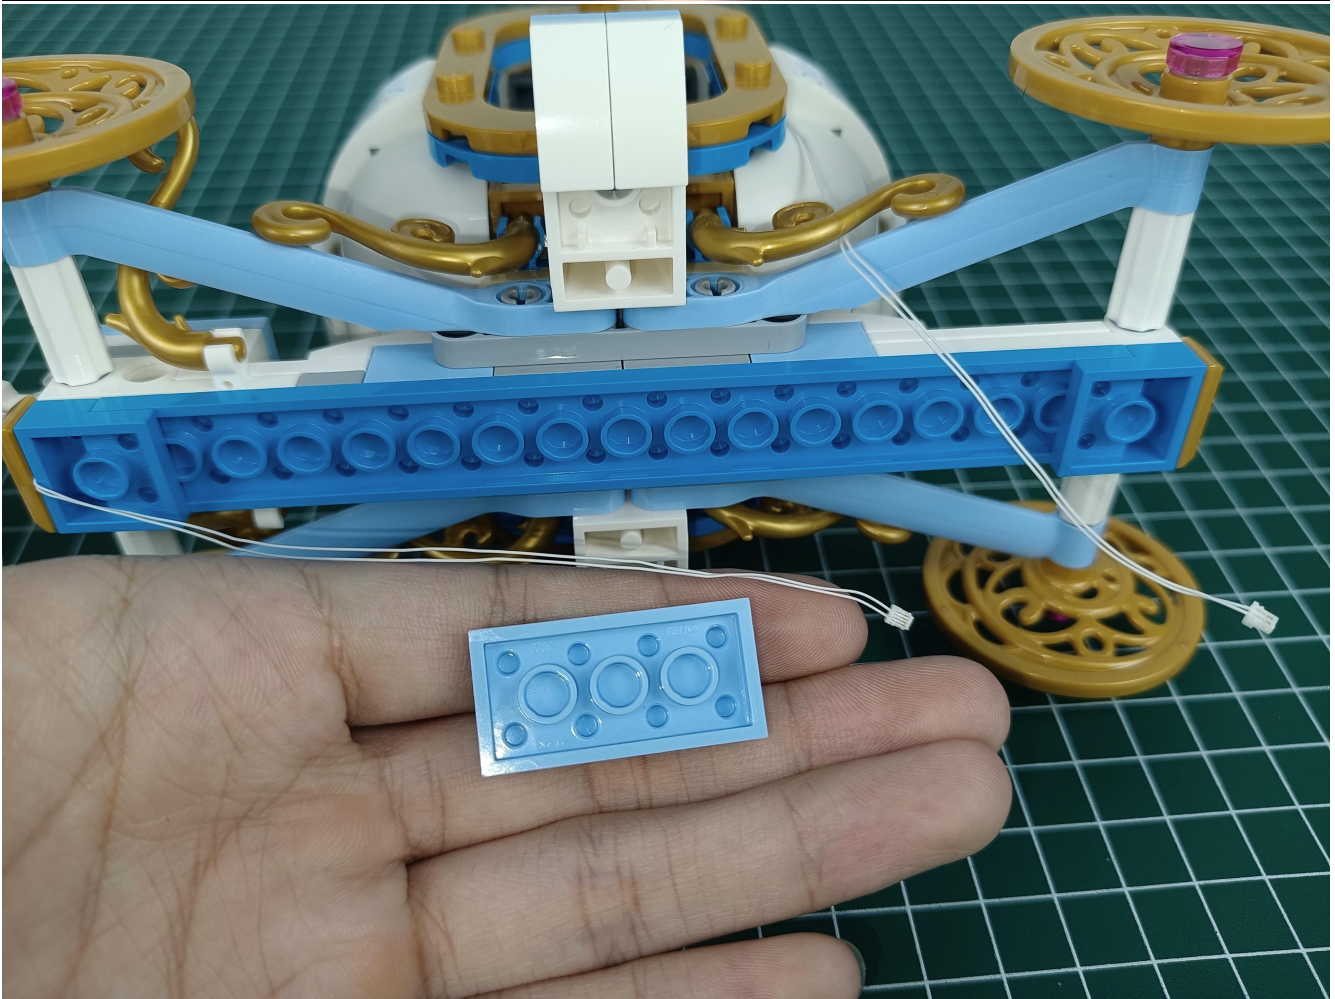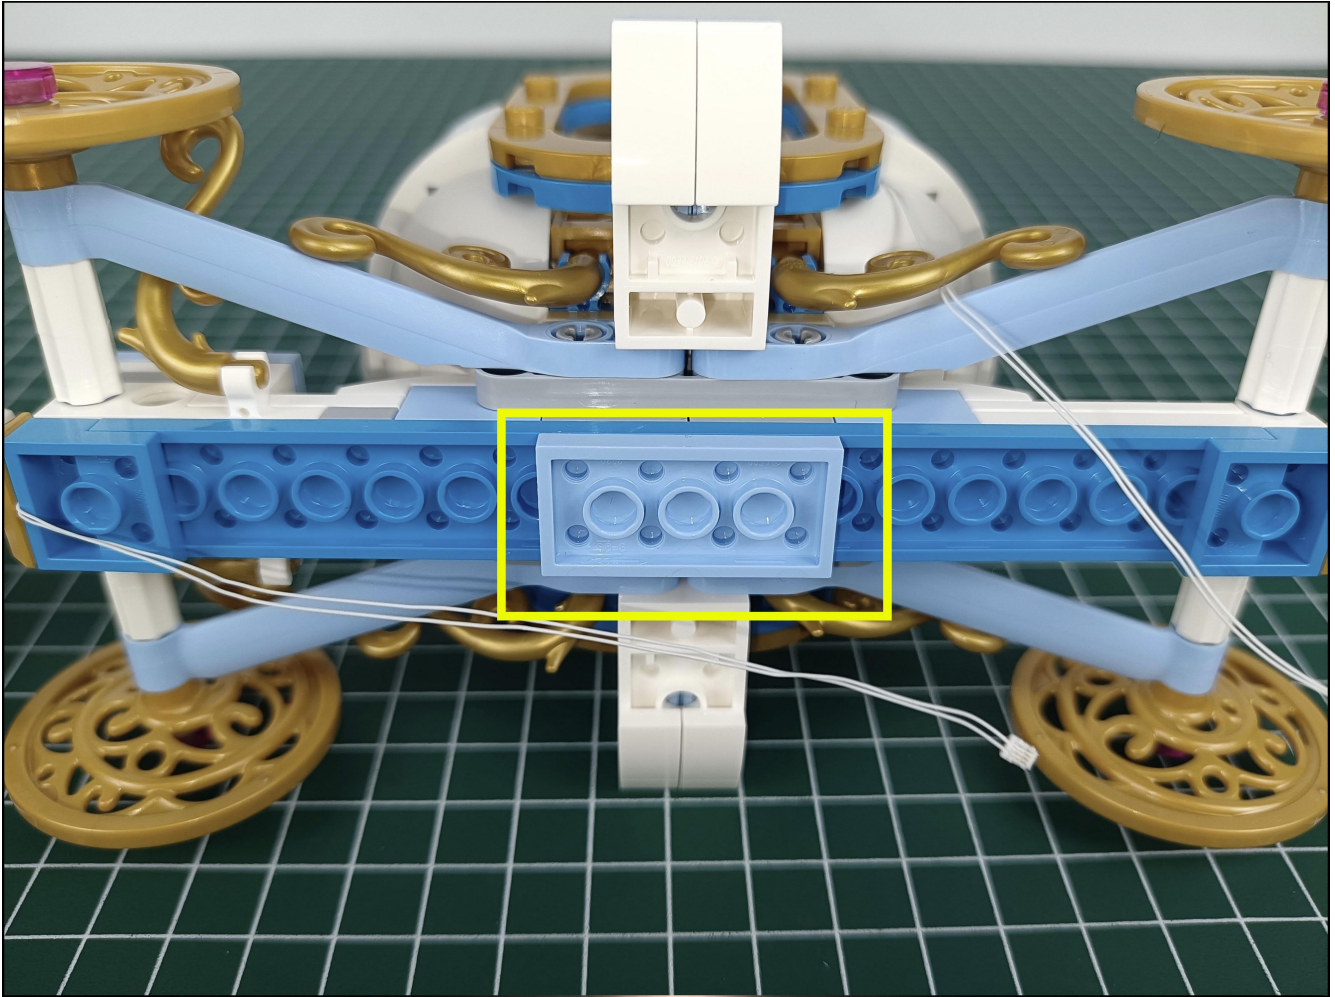





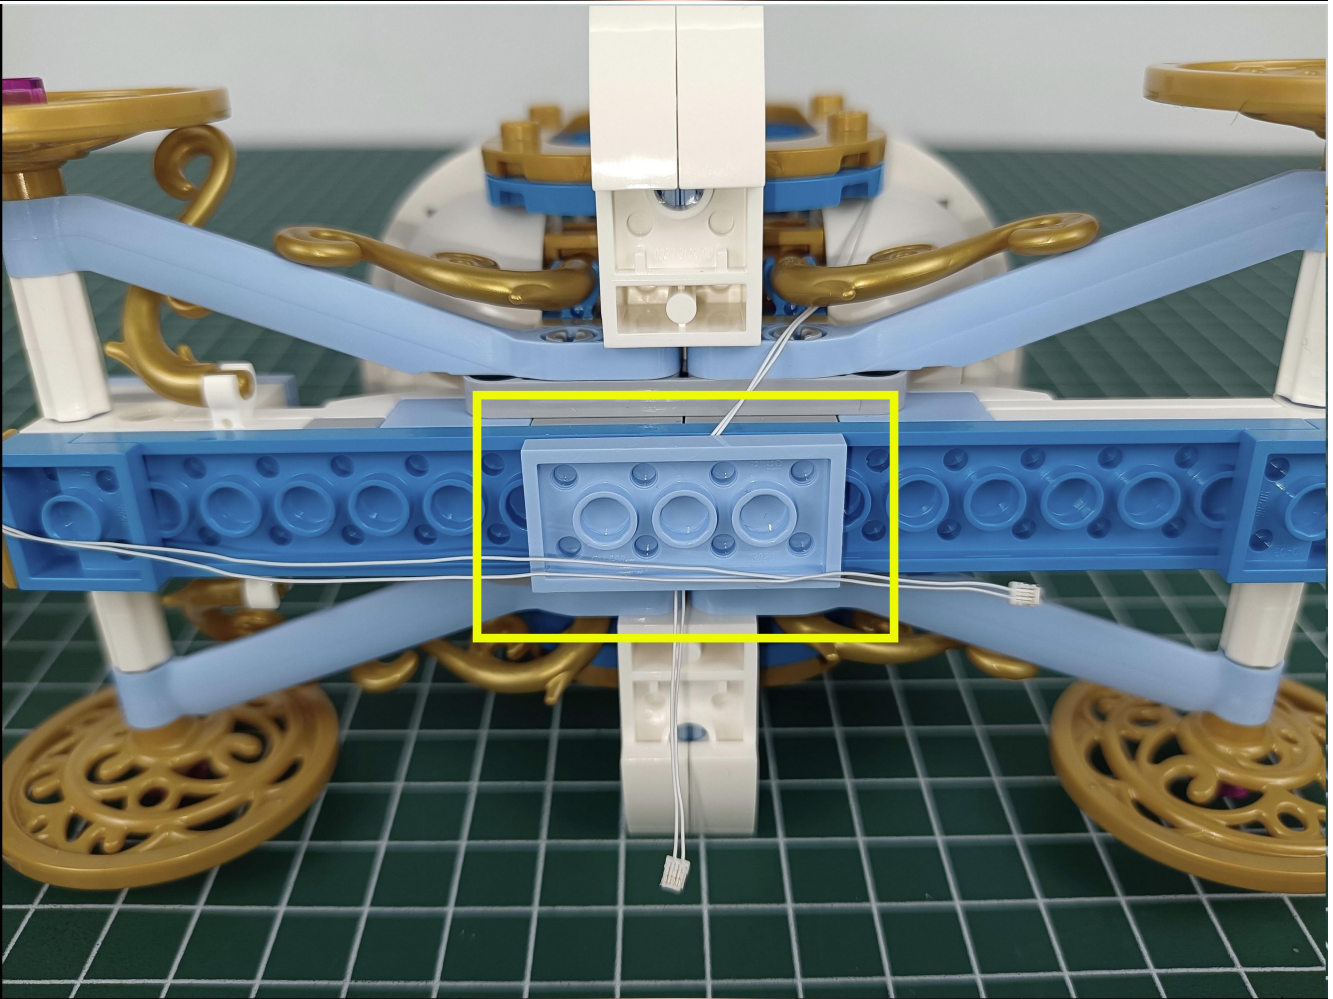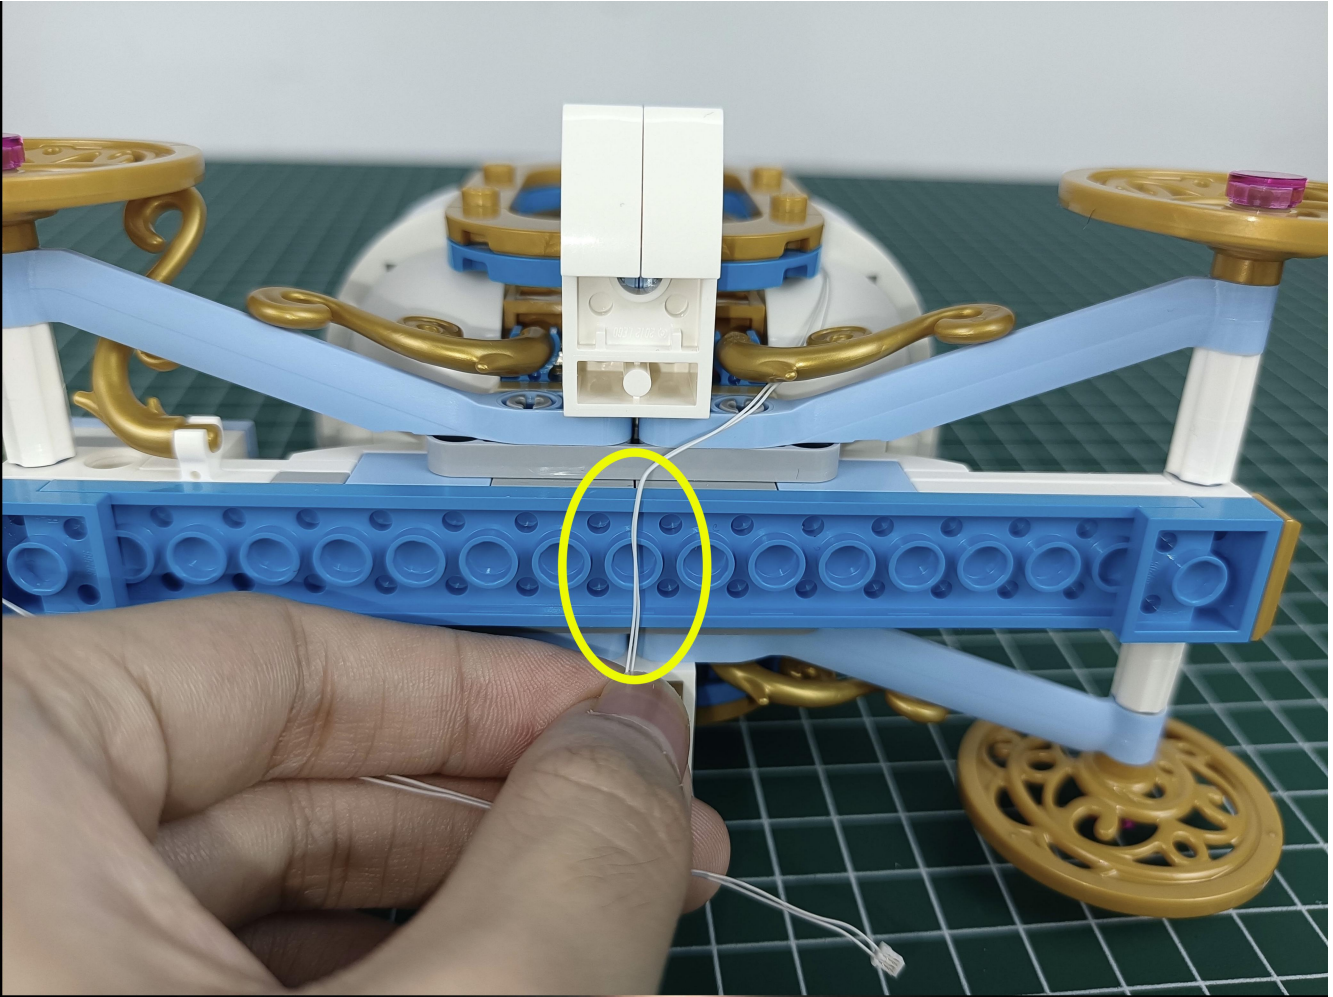




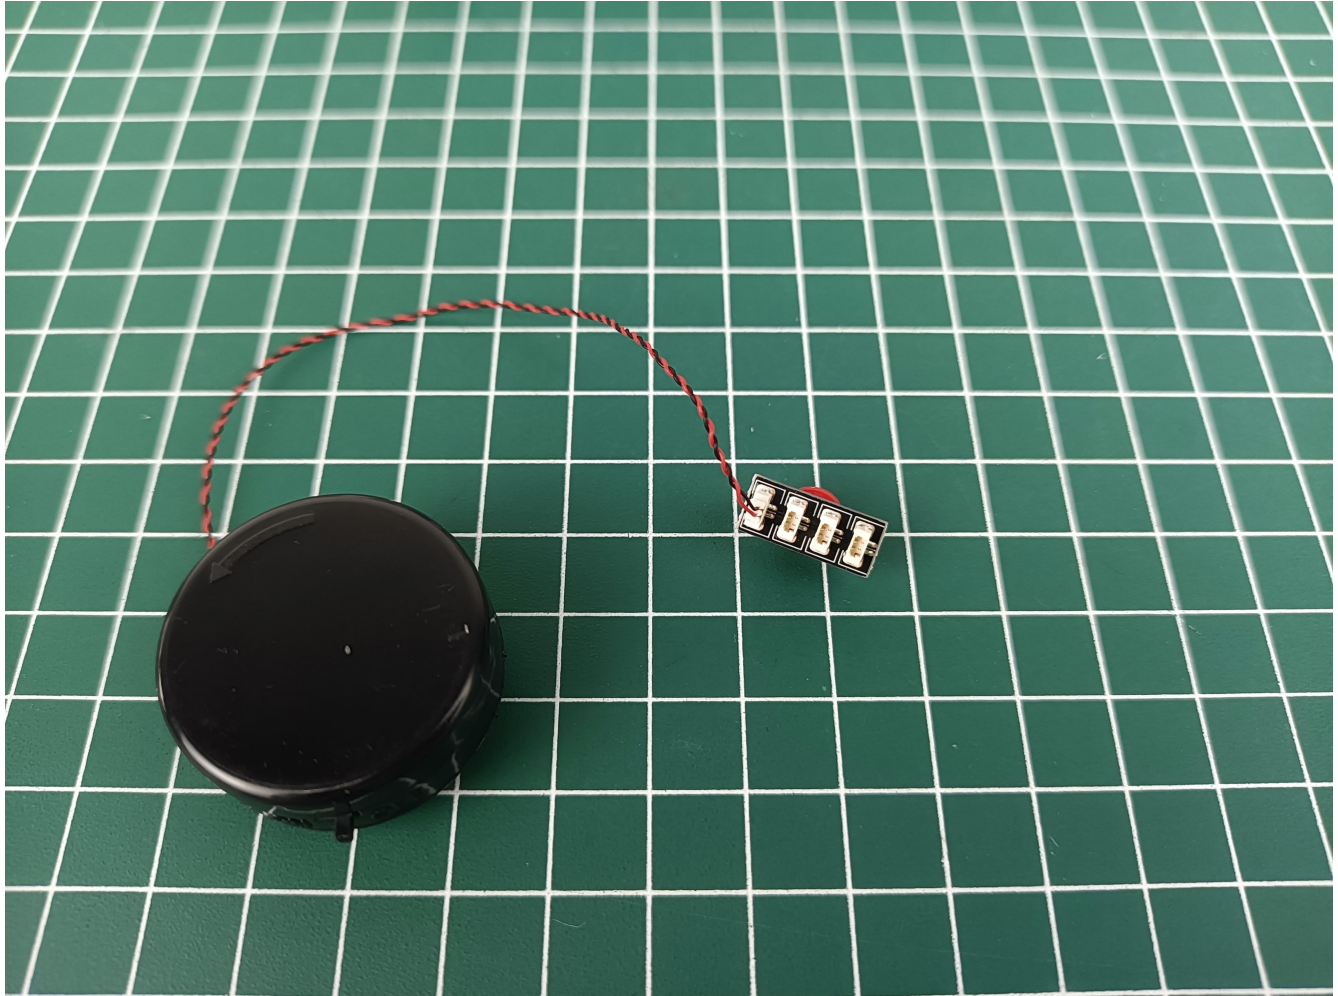





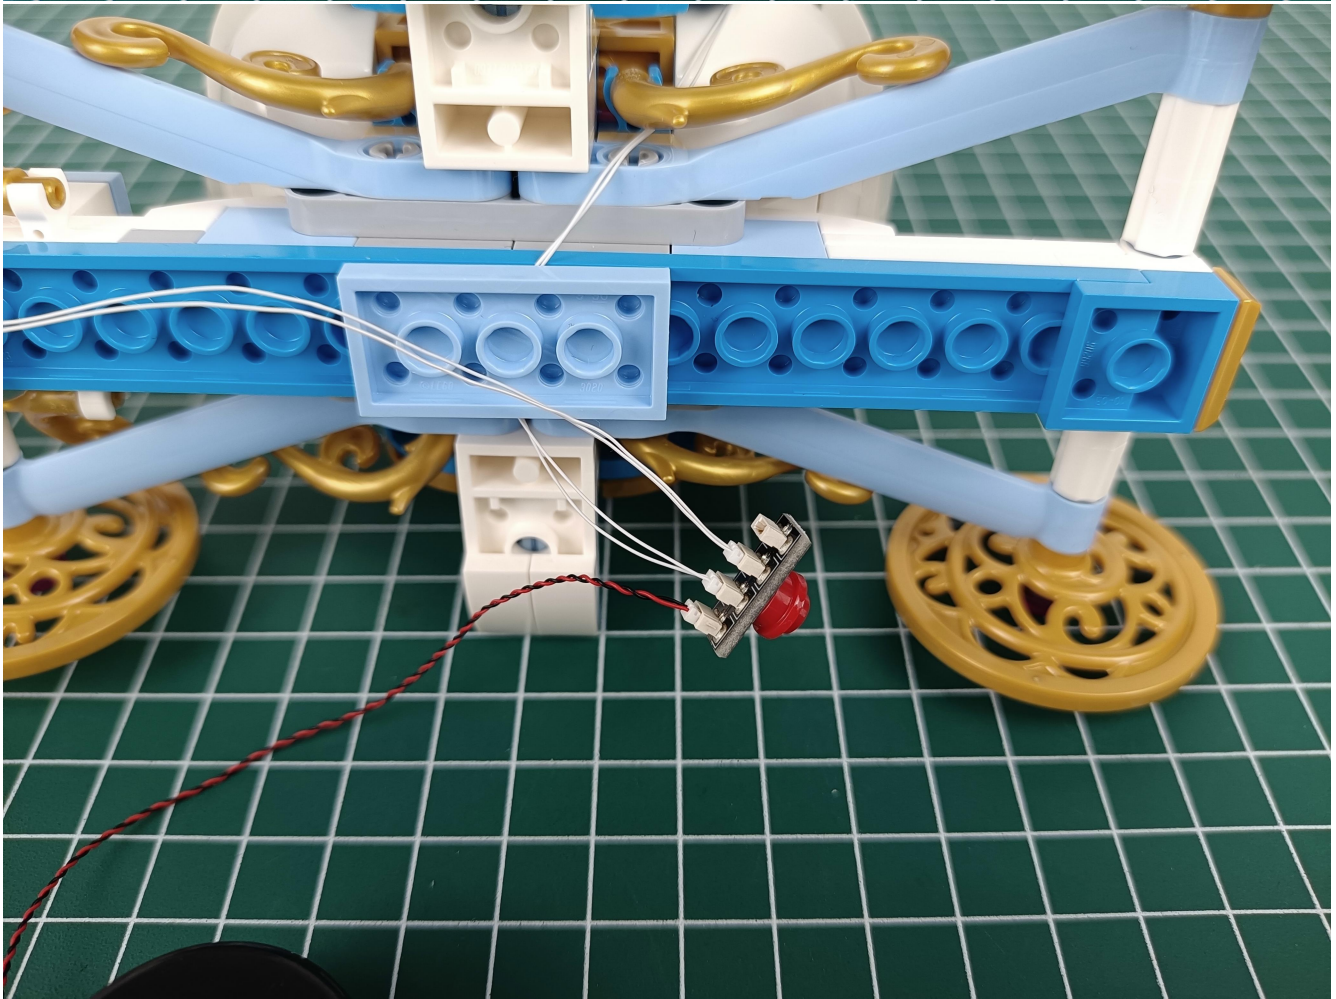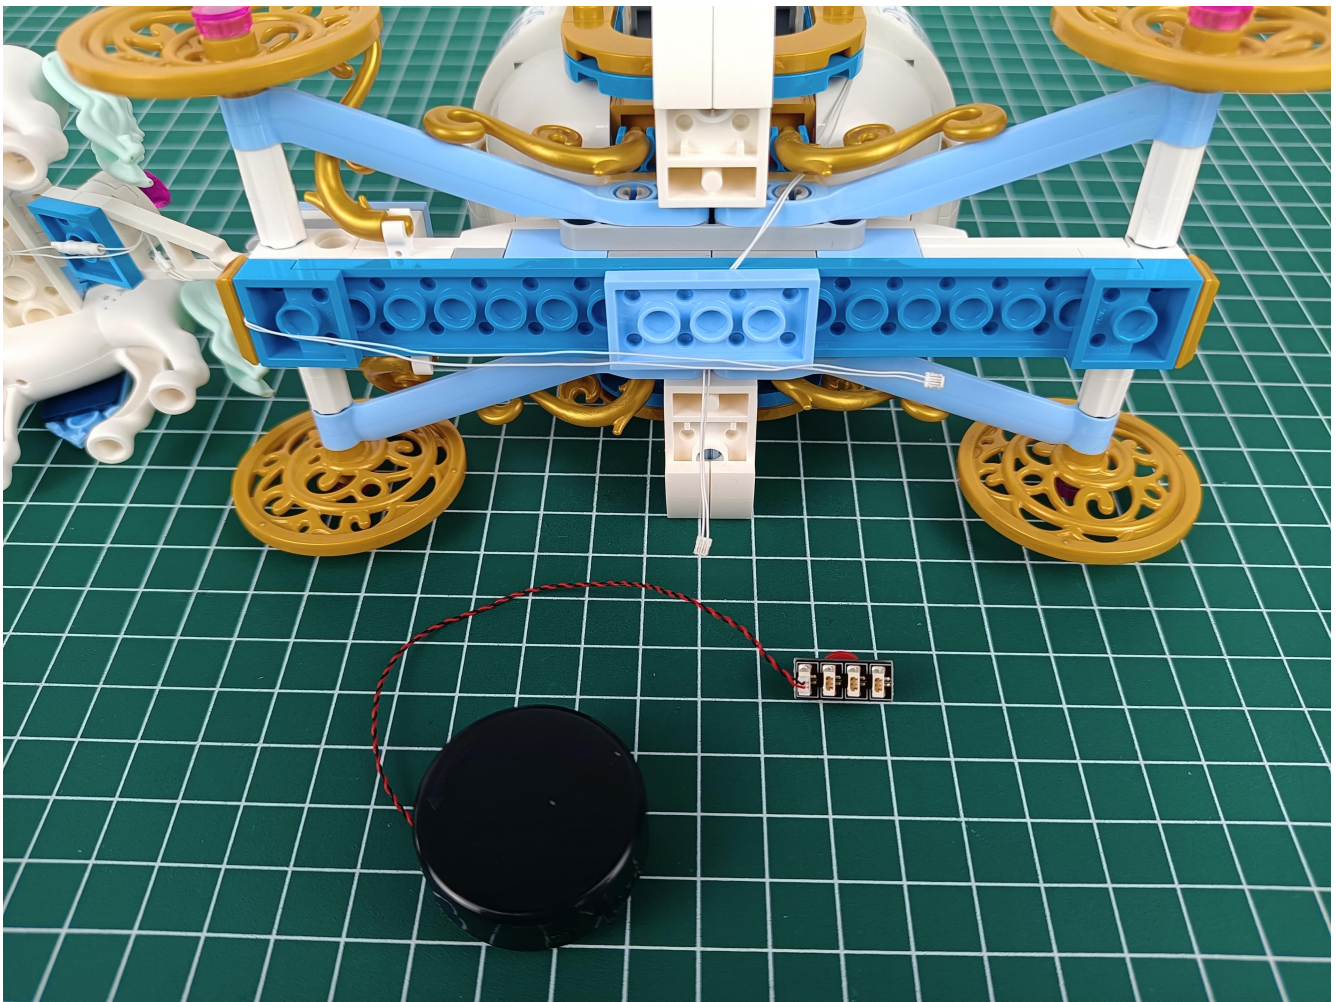





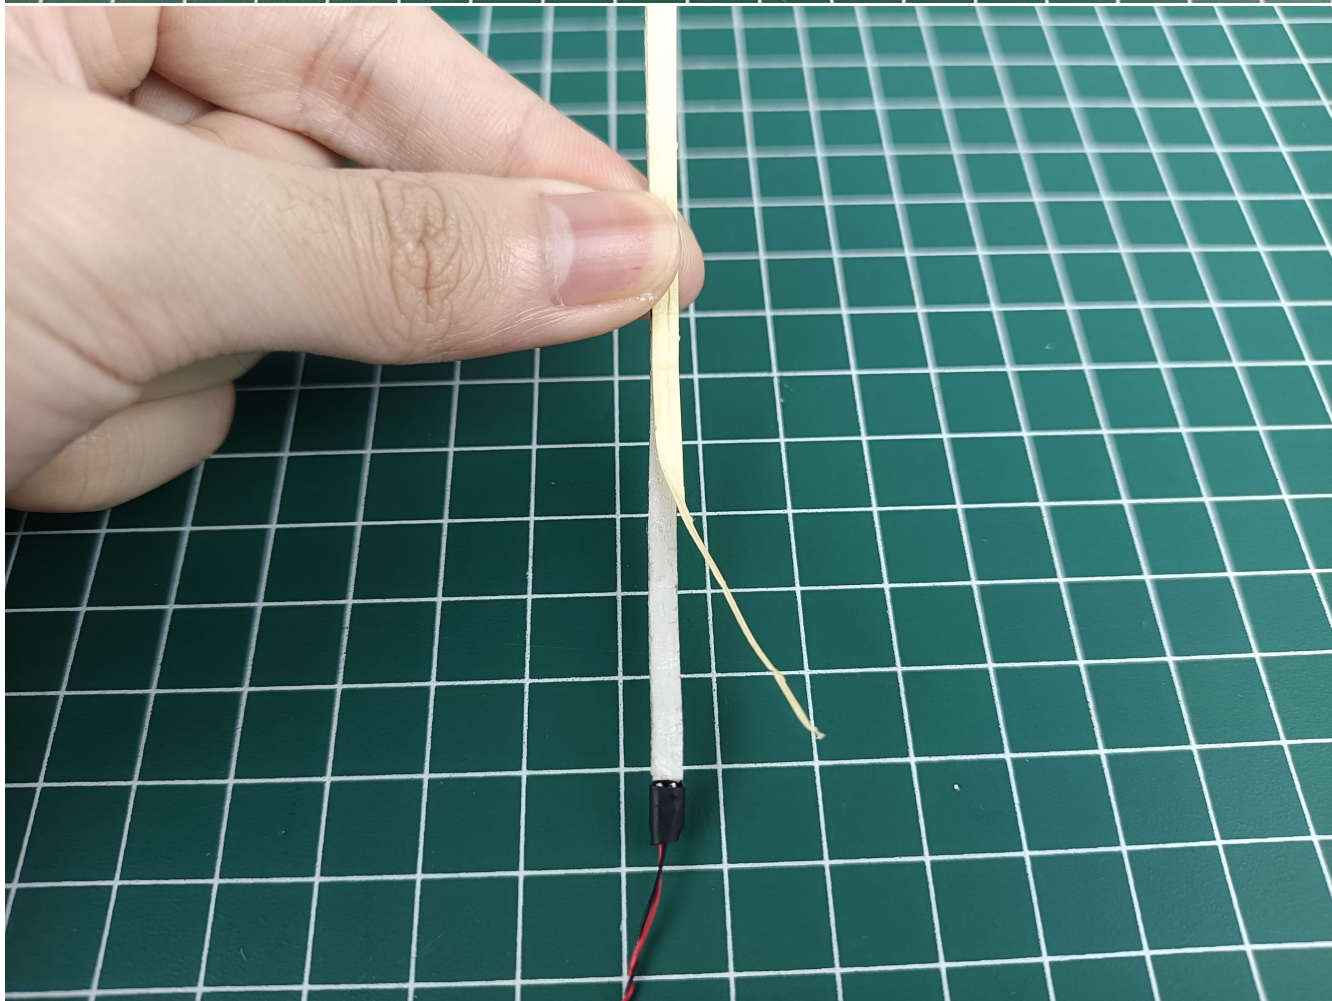



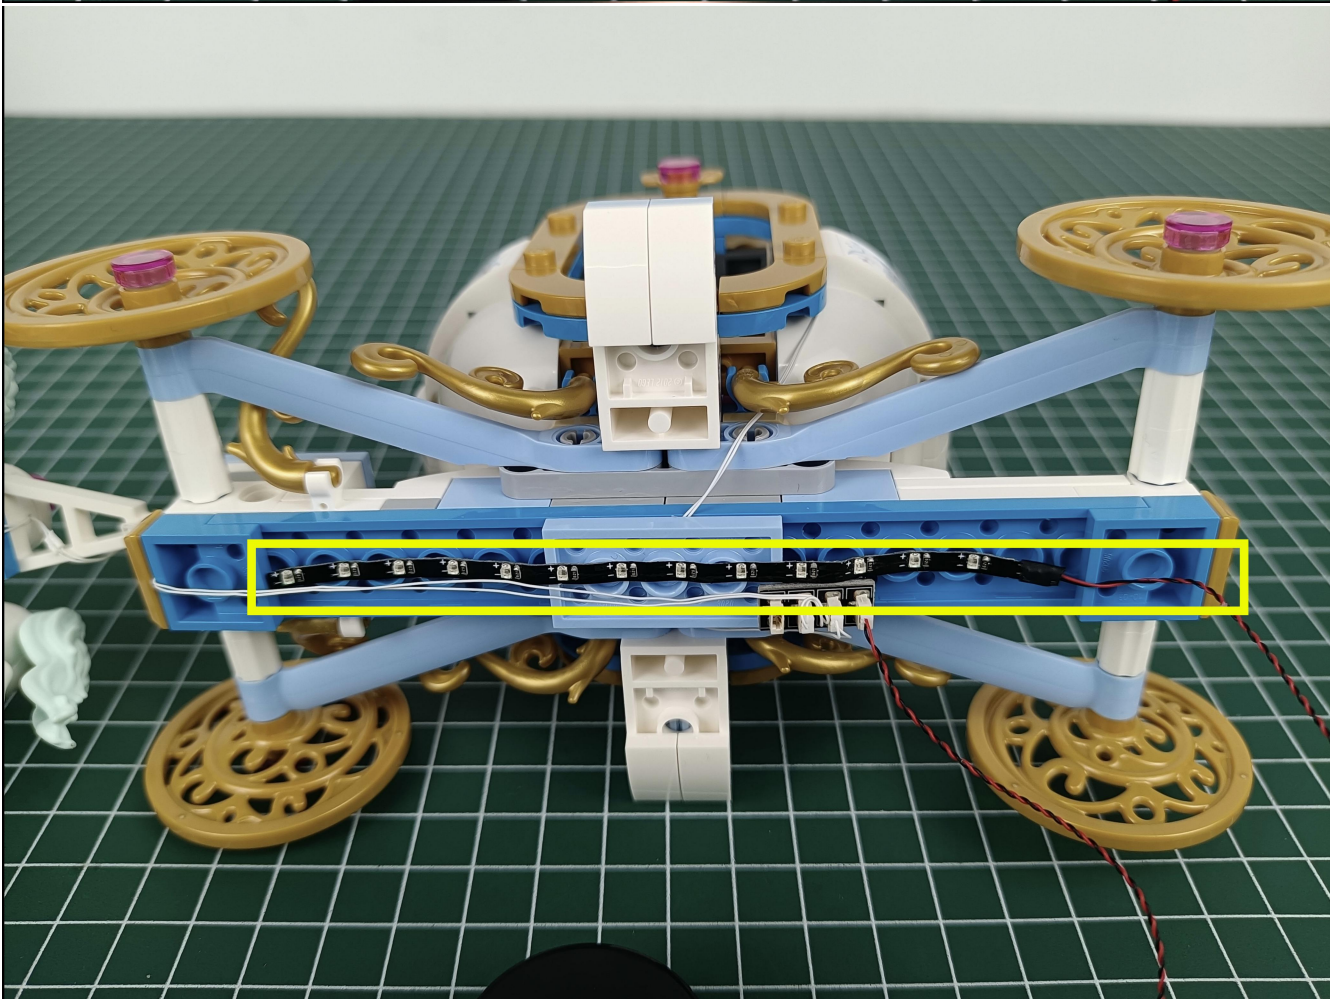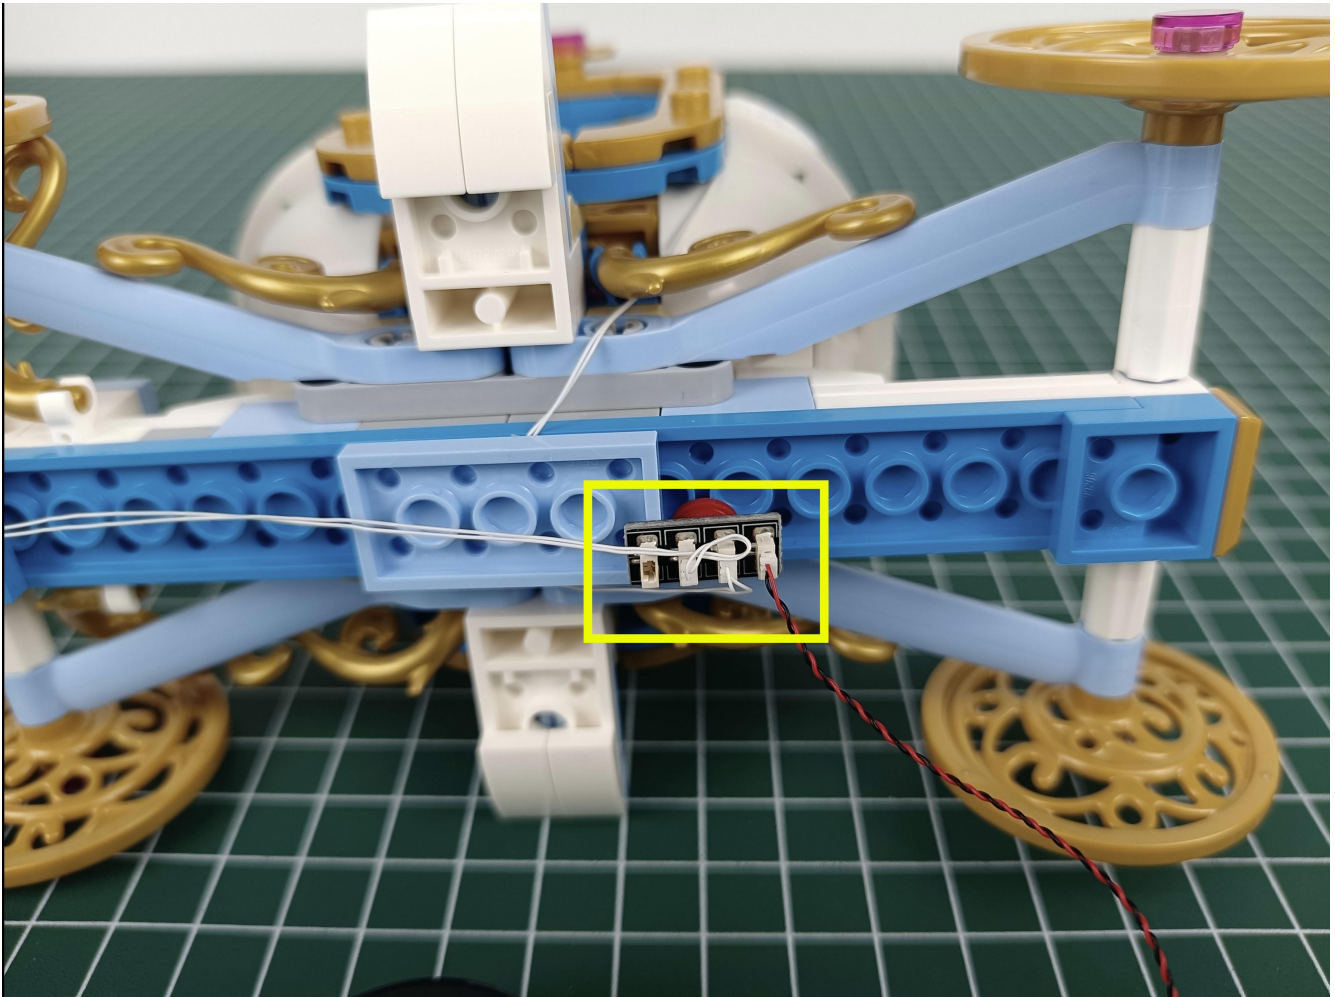





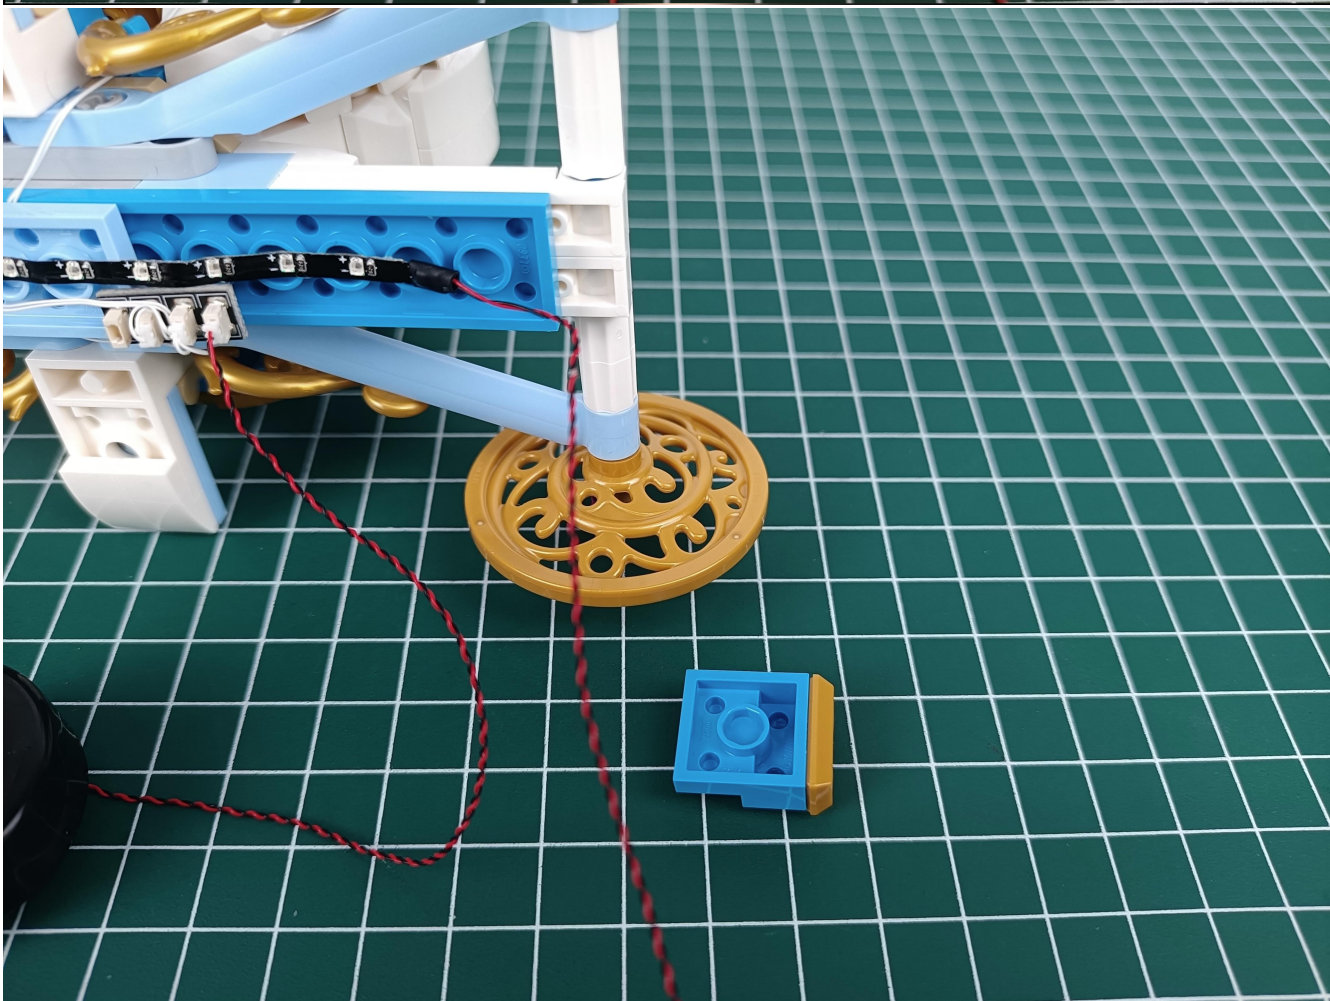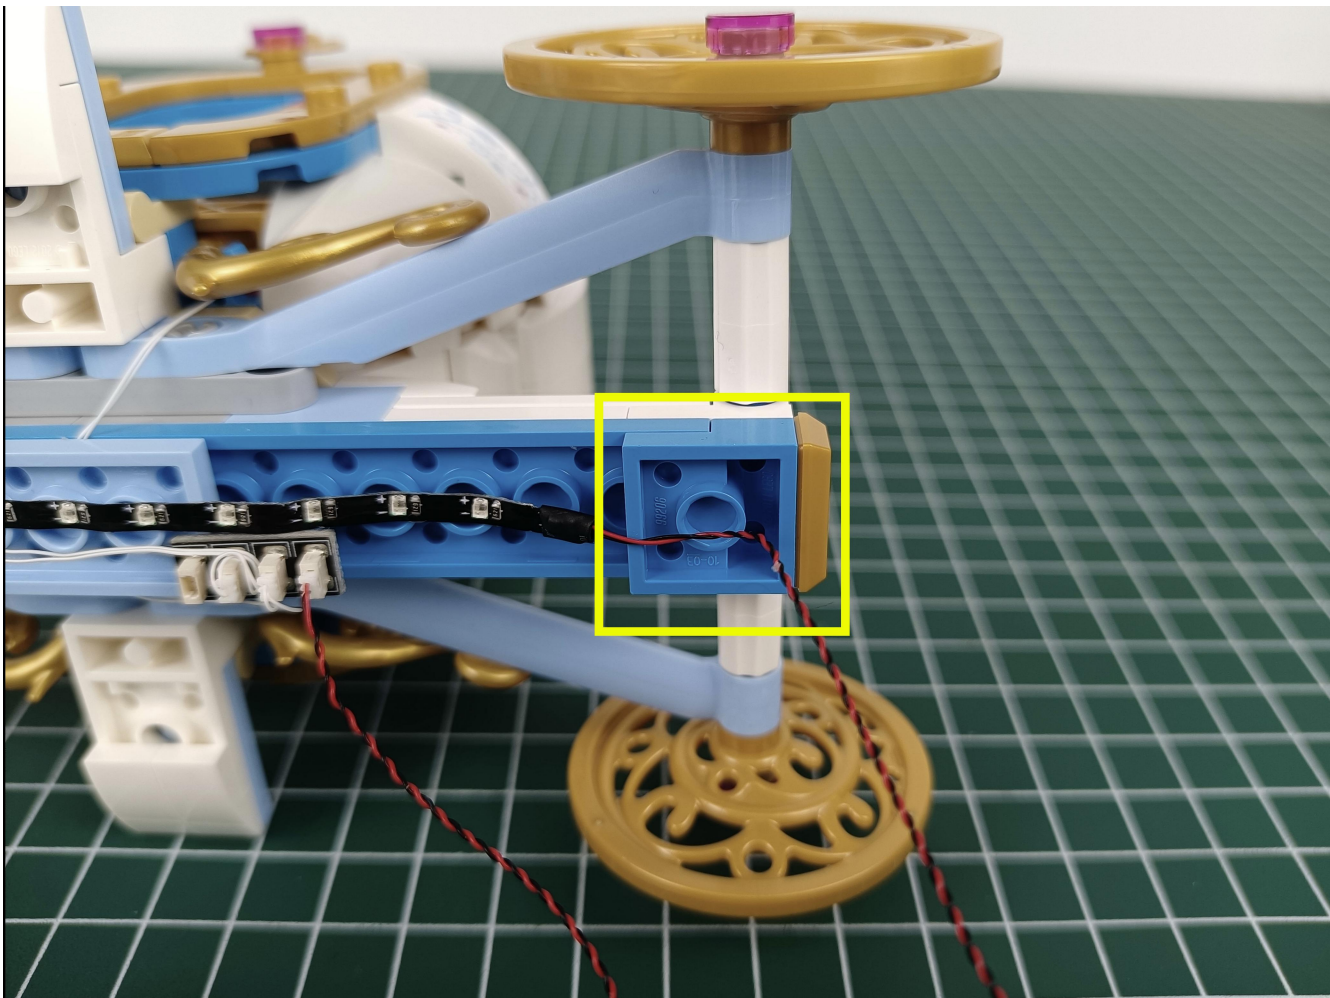





**Note:**



Please be careful when installing. The lamp wire is relatively slender and cannot be pressed on the raised position of the building block. It should pass along the gap, otherwise the lamp wire will be pinched.

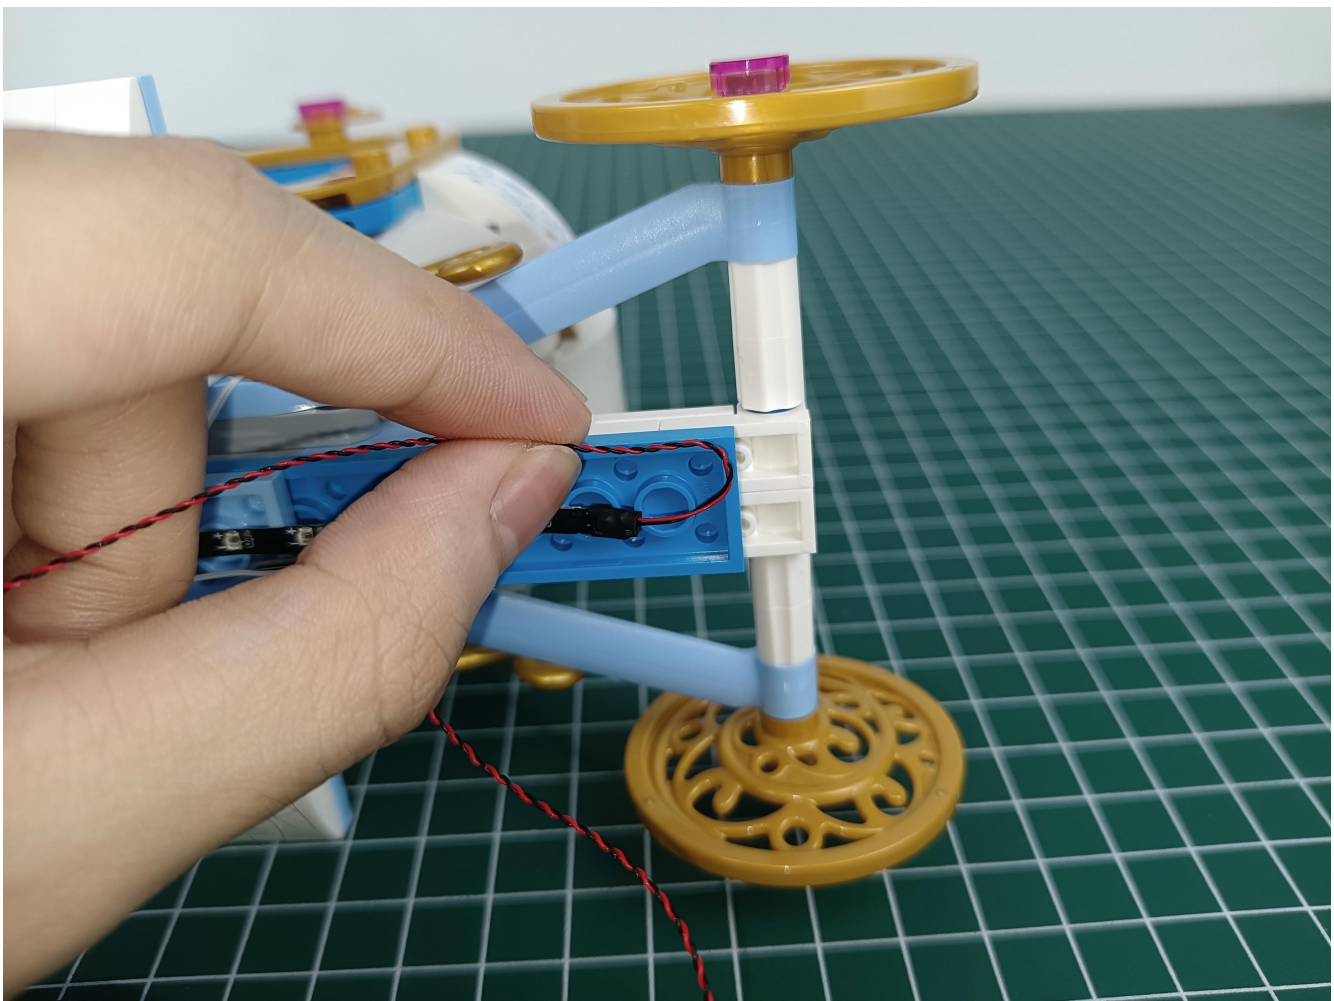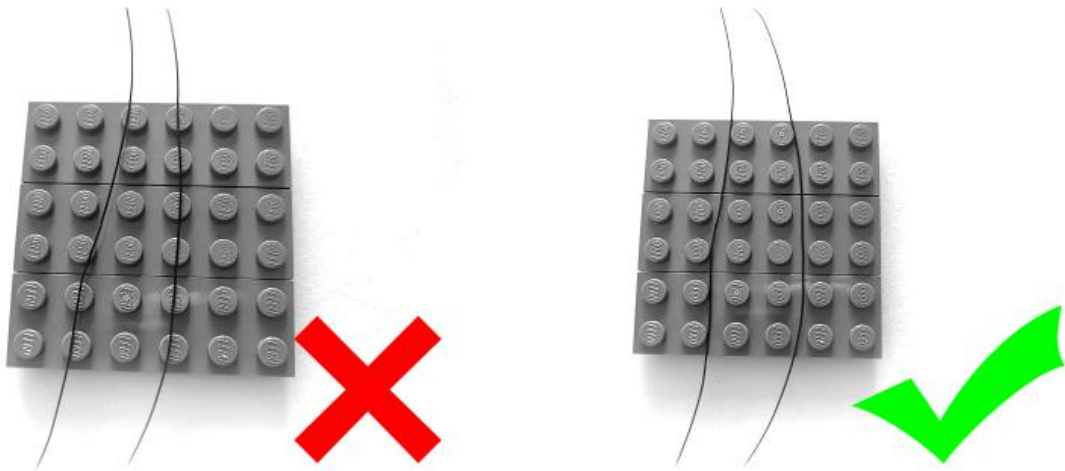





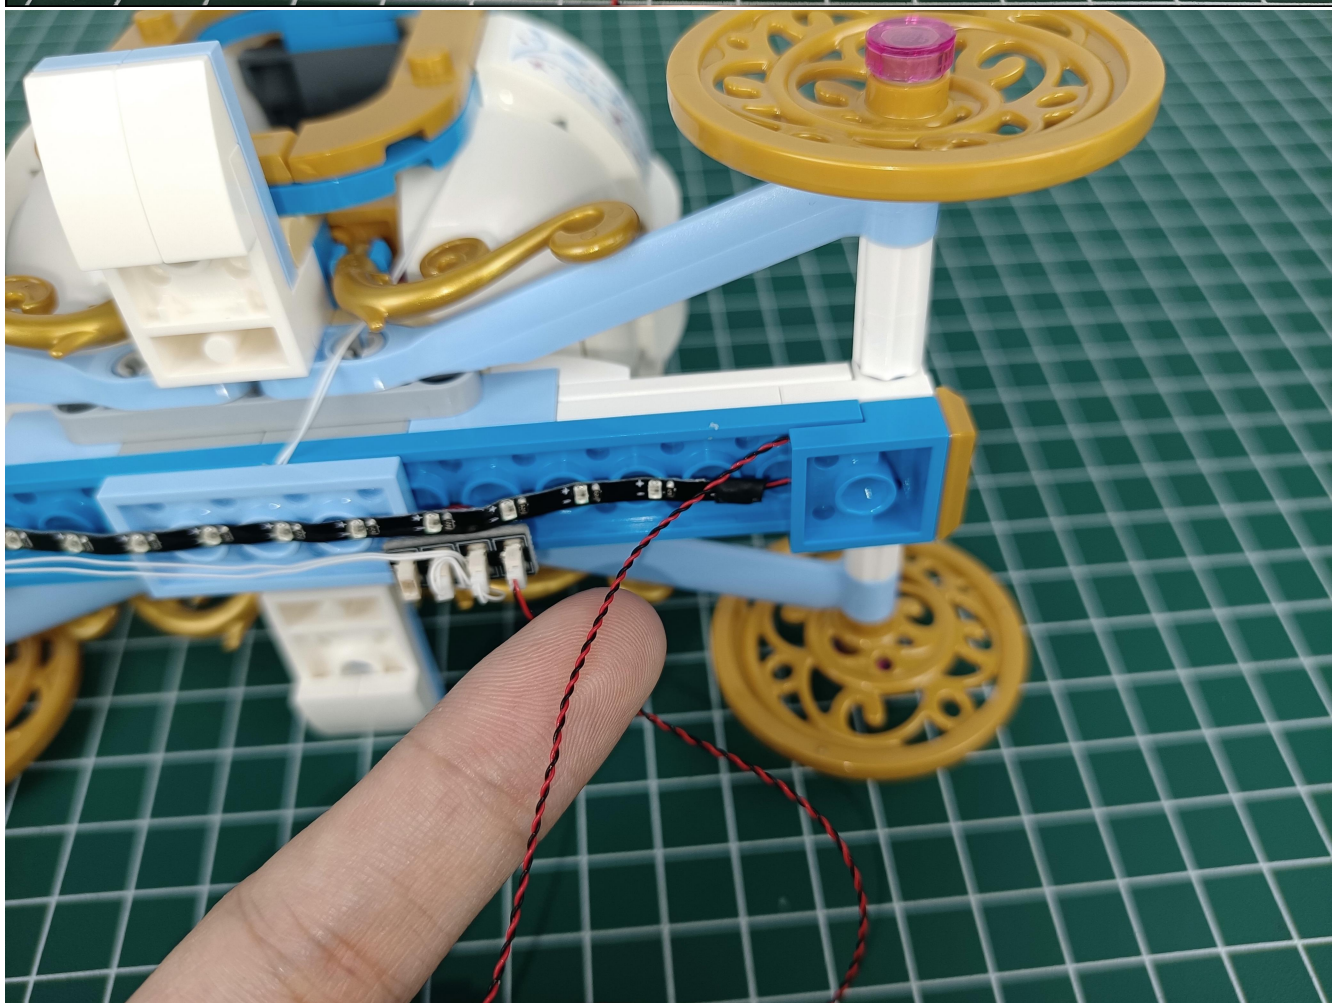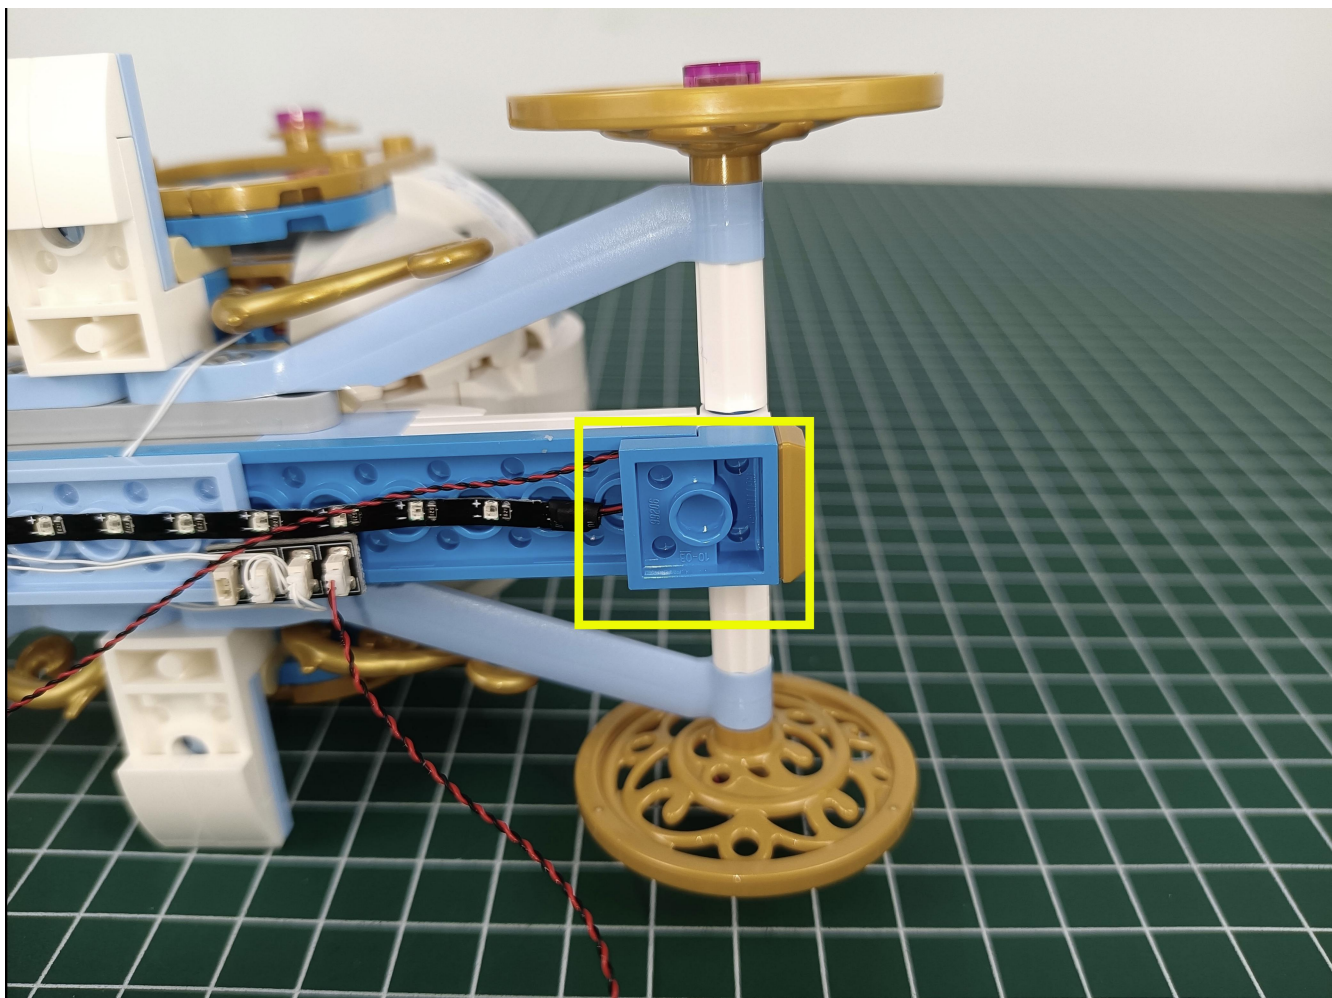




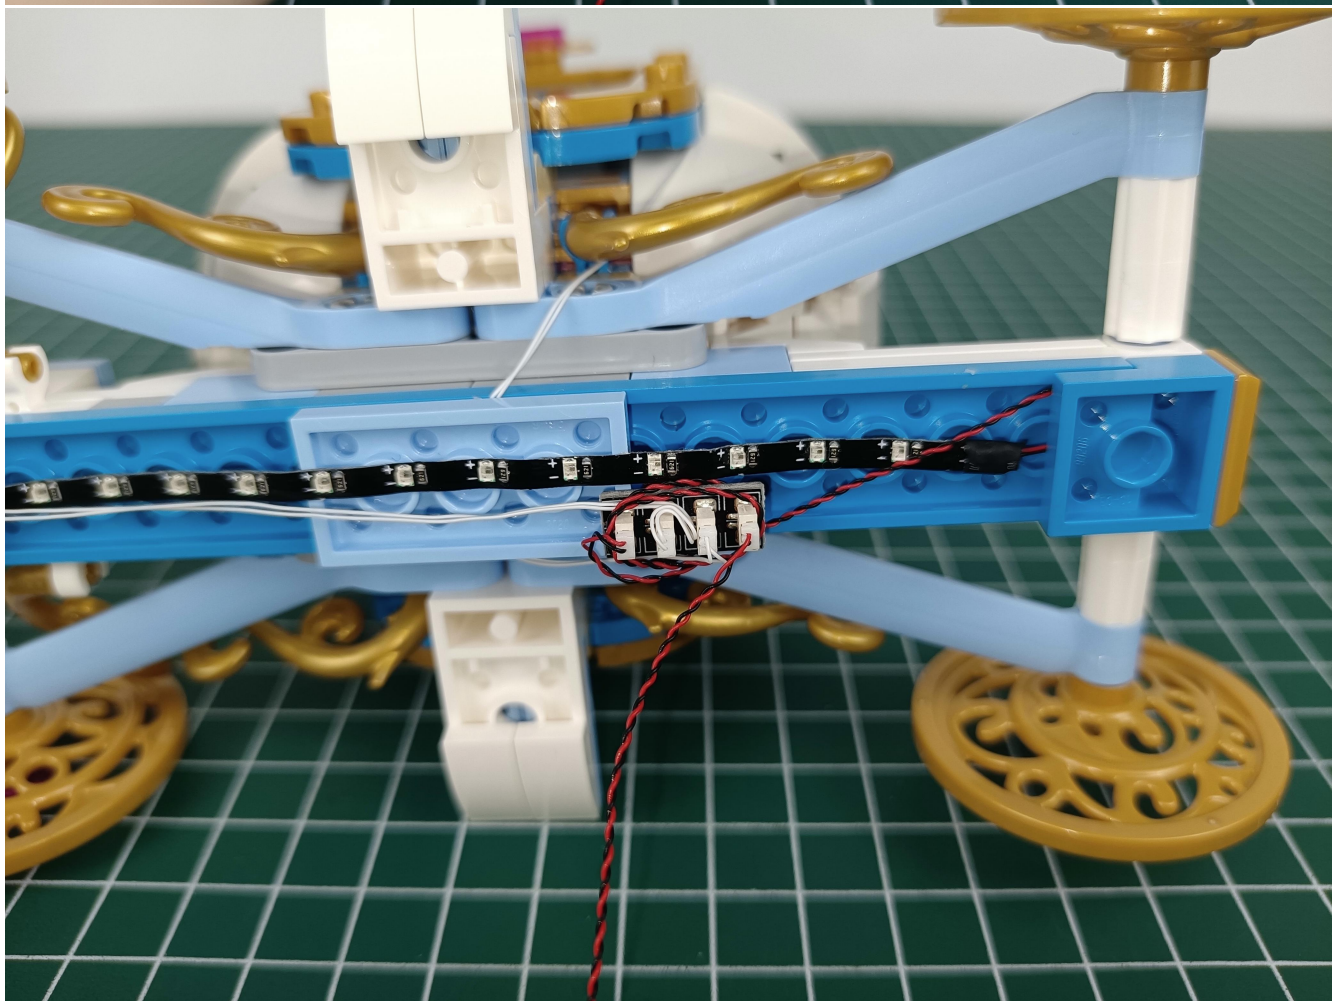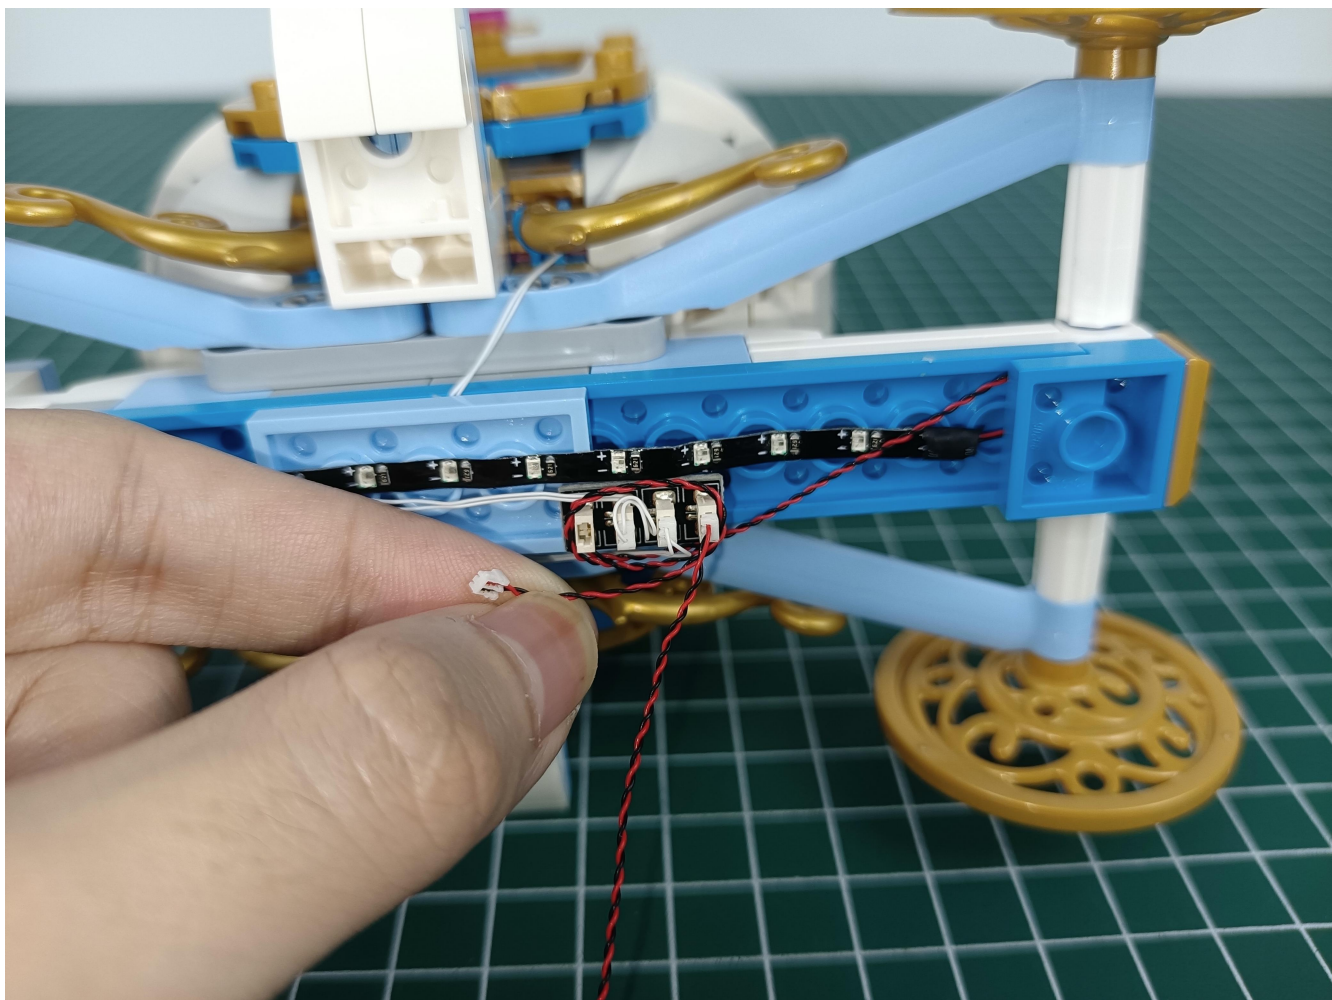



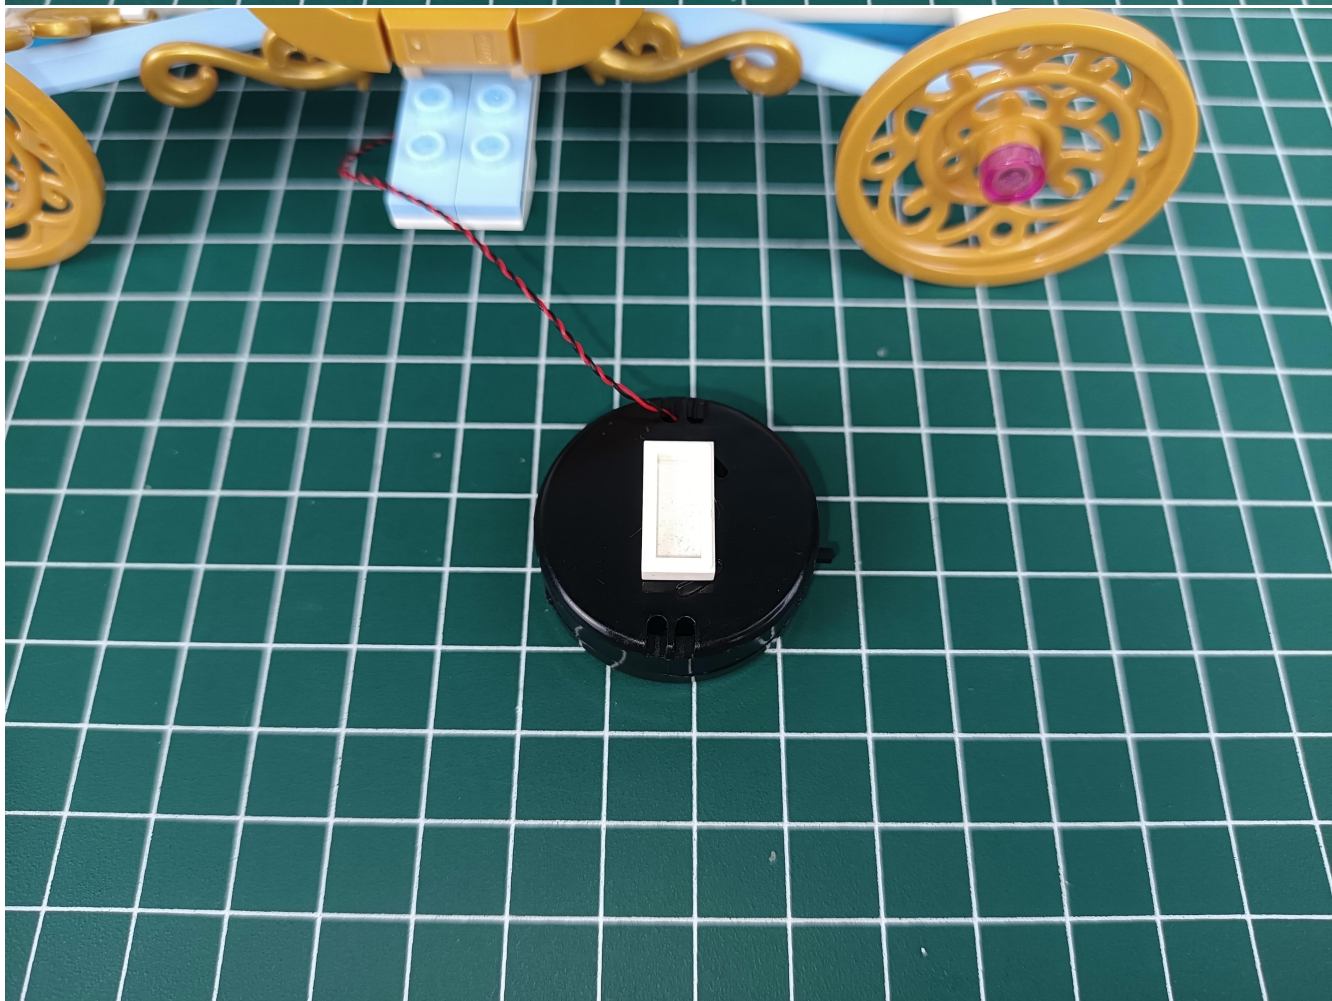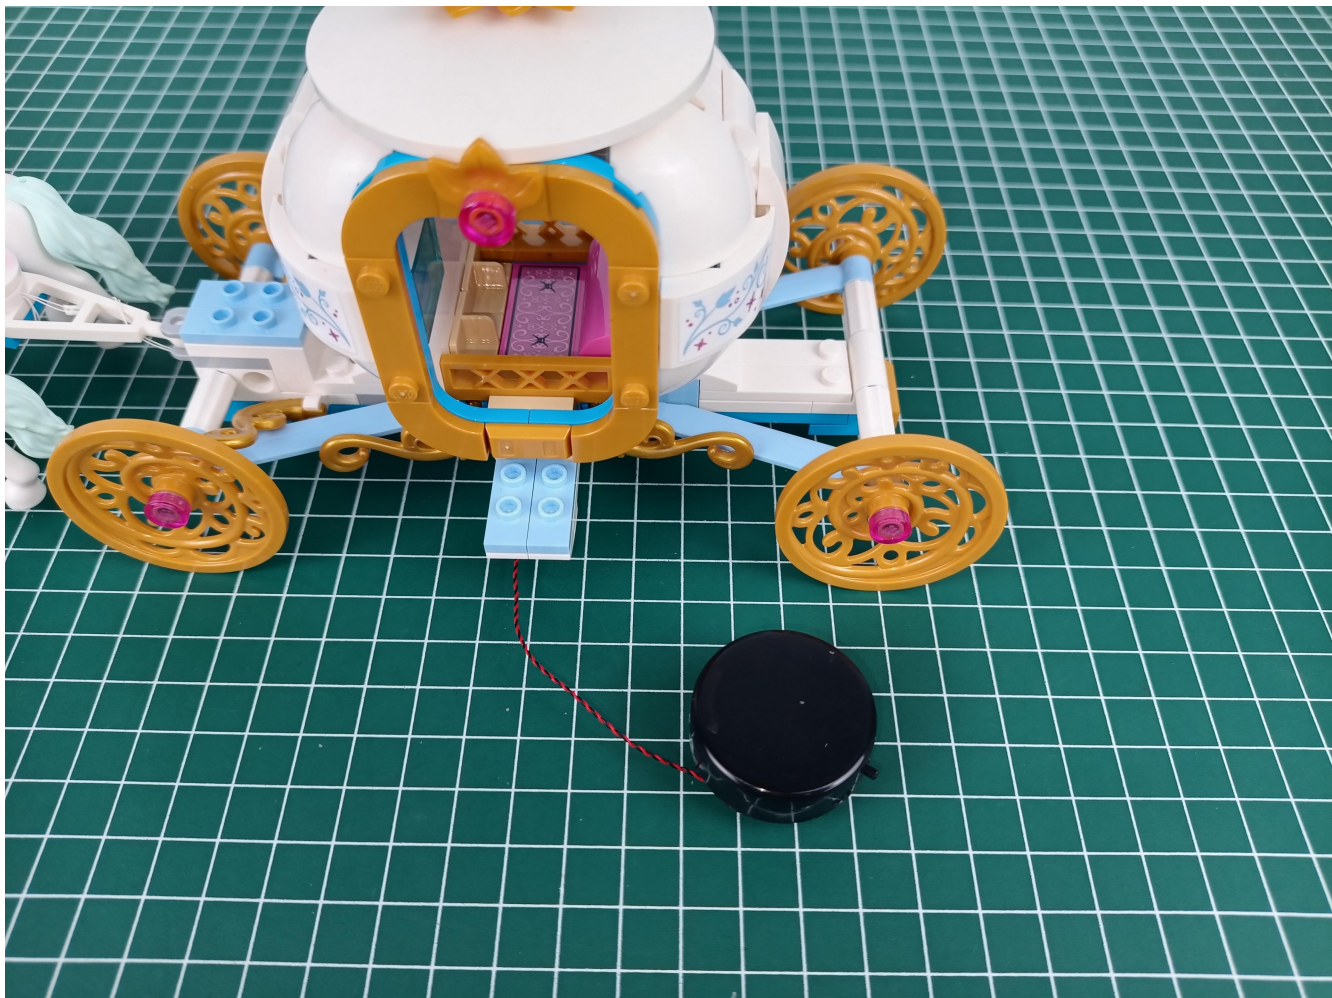



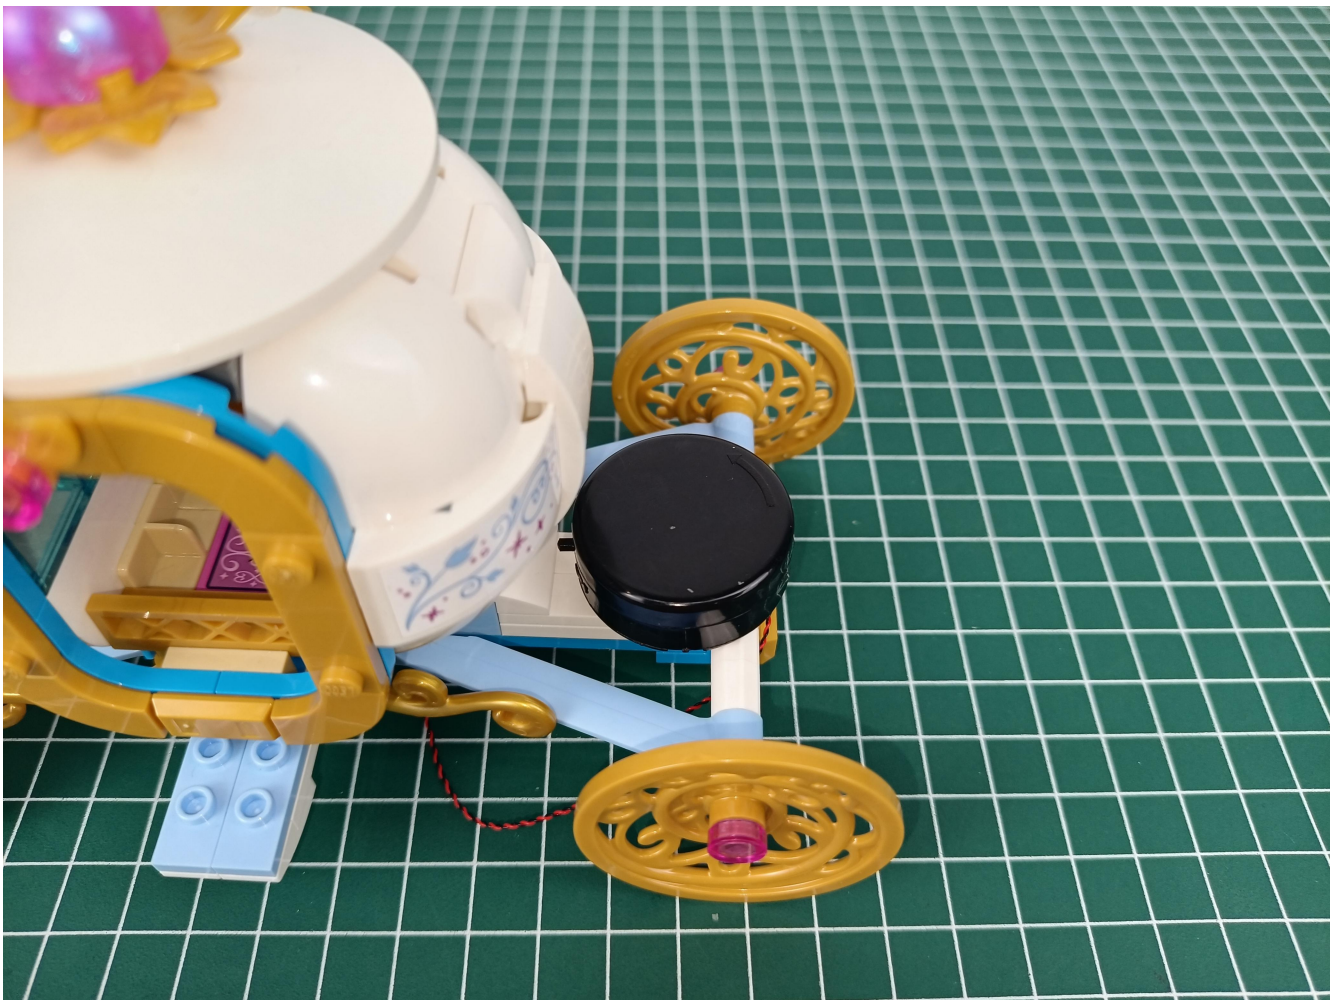





The installation is complete.





The above are ideas and instructions provided by our designers. Please move on:

1: Do you have any suggestions about the material and quality of our products?

2: Do you have any suggestions on the installation instructions and the degree of difficulty of the installation?

3: If you have better installation method and ideas, please contact us in time.