

# 76271 Batman: The Animated Series Gotham City

- Installation requires a lot of patience and great observation that your LEGO bricks will come alive when you get this finished. The bricks with lighting as below, so make sure you're ready and let's get started.



# Strategies for the Installation

This instruction divides three sections to complete the installation of the lighting set.

## **Section A:** Check the type and quantity of components.

The quantity and type of components of each products are different and it needs to be carefully checked to make sure there do have enough material. The type of components is indicated by the label on the bag.

## **Section B:** Test that each components is working properly.


Each components is Manual customization so it is necessary to test that each components is working properly to avoid the situation that the lighting does not work .

## **Section C:** laying out components following the instruction.

Our material is very small but not fragile, just be reminded that don't to pull the wires too hard. For different people, there may be some installation steps that you can't understand. Please look at the previous and later installation steps.

## Section A: Check the type and quantity of components.

This set contains eight labelled "1" "2" "3" "4" "5" "6" "7" "8", please make sure that the components in each bag are the same as shown in the pictures.

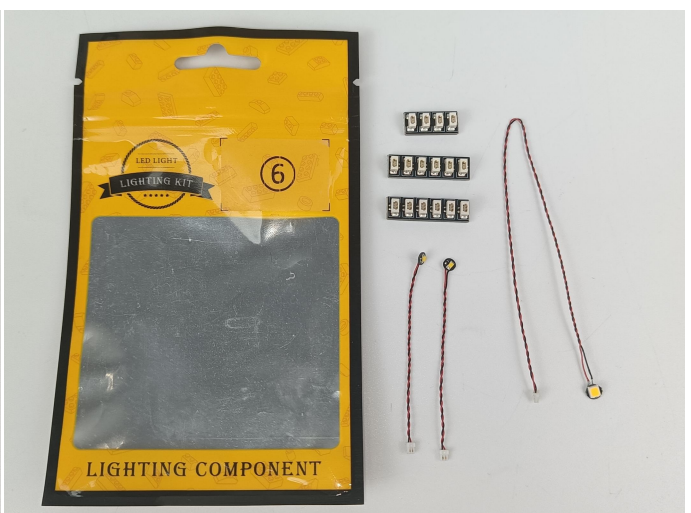



Please contact us immediately if there have any missing components.


**Section B:** Test that each components is working properly.

Take out the Expansion Boards and the USB Power Cable from N0.6 bag and No.8 bag.



It is worth reminding that our products are all customized. They have a unique way of connecting. The white plug on wire and the socket of the expansion board need to be connected together to transmit power.

Note that on one side of the white plug you can see two very small golden wires that should be connected to the two golden needles in socket of the expansion board. shown as blow.

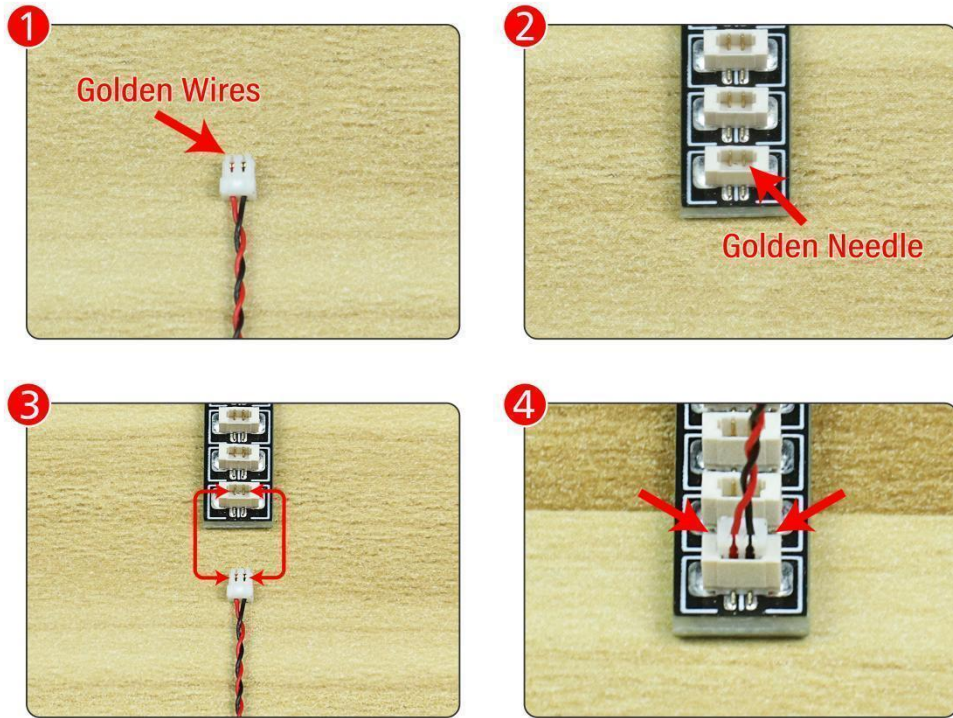


Connect the Expansion Board and USB Power Cable as shown.




**Connect the other end of the USB power cable to the power supply.**



**The USB Power Cord can be powered by phone chargers, power banks, etc. This instruction will use the power bank as power supply.**

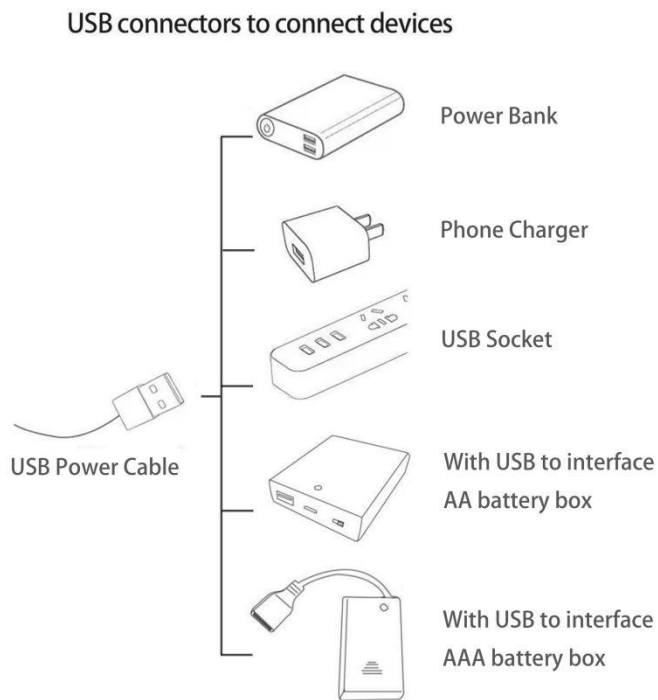

**Connect all the components in No.1bag to the Expansion Board in same way just as shown.Turn on the power bank, all the lights are on as shown.Remove the lamp after the test.**

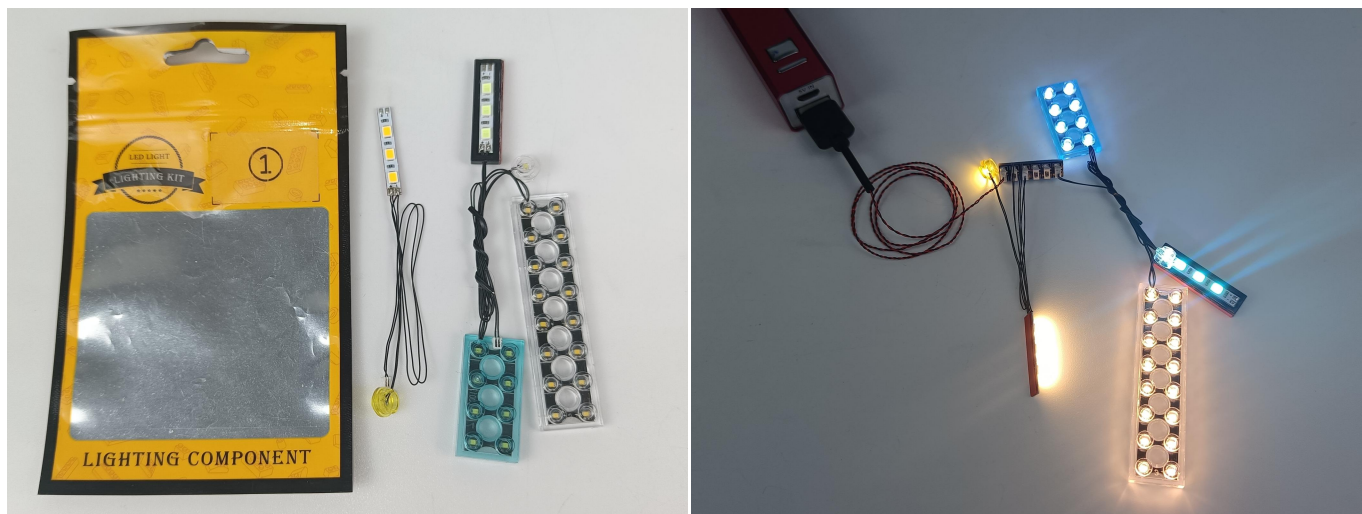

**Unplug these two components and put them back in the corresponding bags.**

**There are three in bag NO.2, three in bag NO.3, five in bag NO.4, one in bag NO.5, three in bag NO.6 need to be tested.**

**Attention that after the test is completed, each components should put back in the corresponding bag including the socket and the usb power cable.**

**Please contact us immediately if any components don't work.**

**Section C:** laying out components following the instruction.


1



2





3

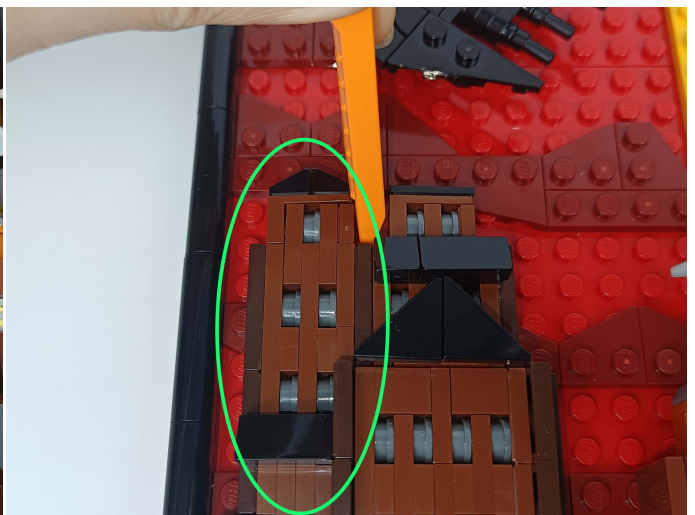





4

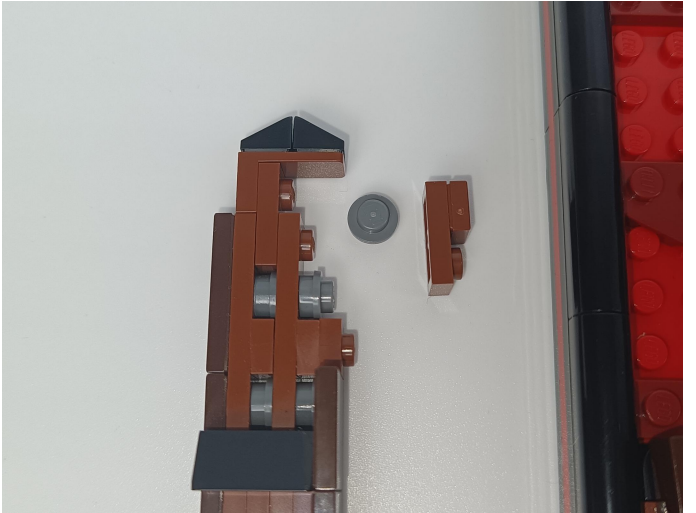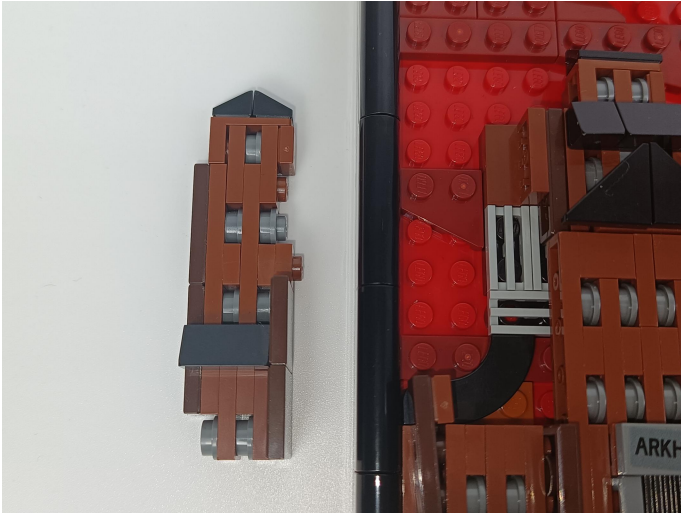

5

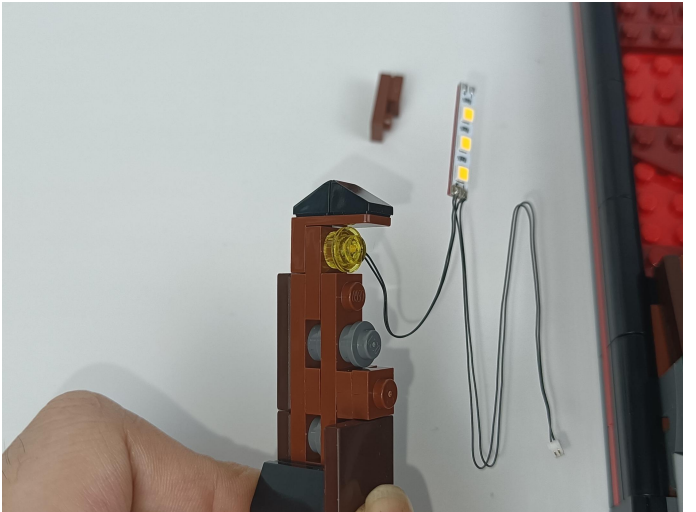


6

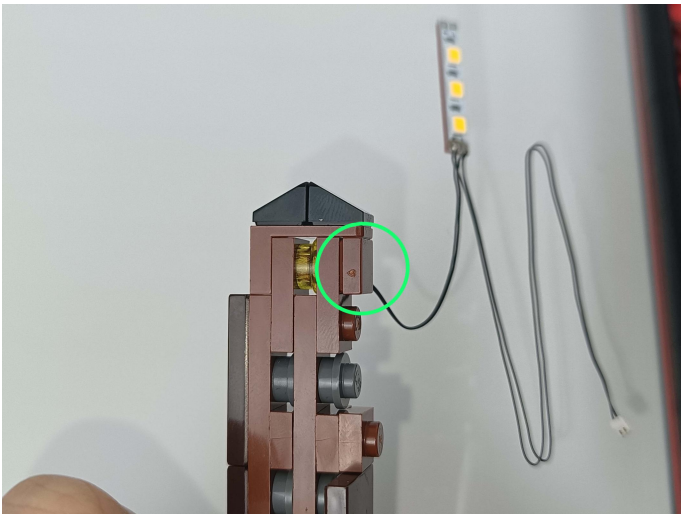



7





8

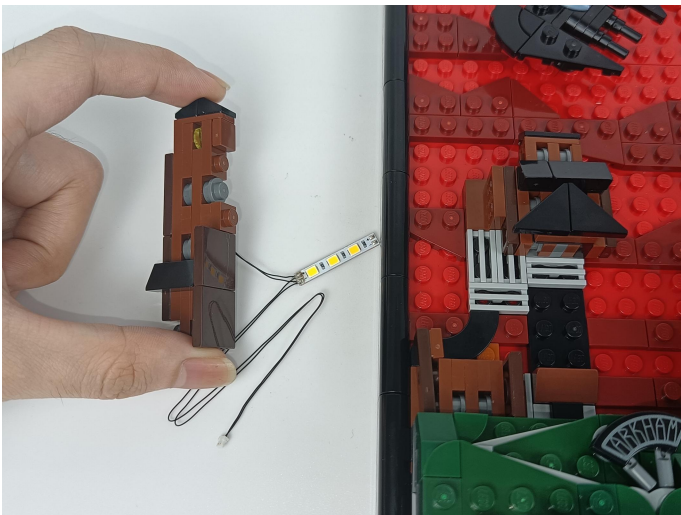


9

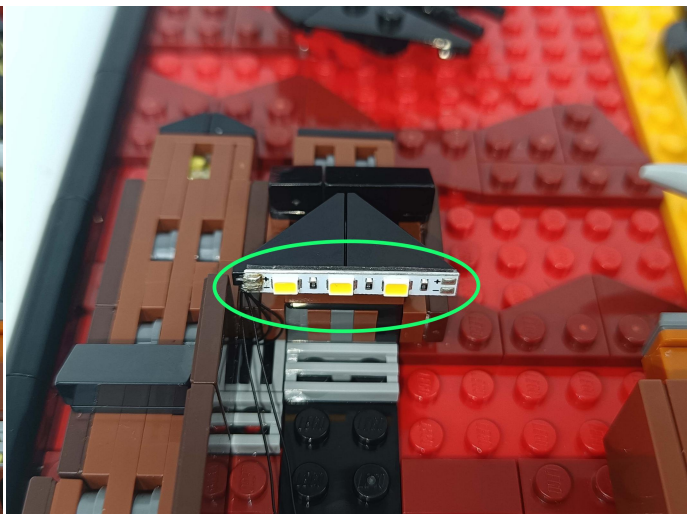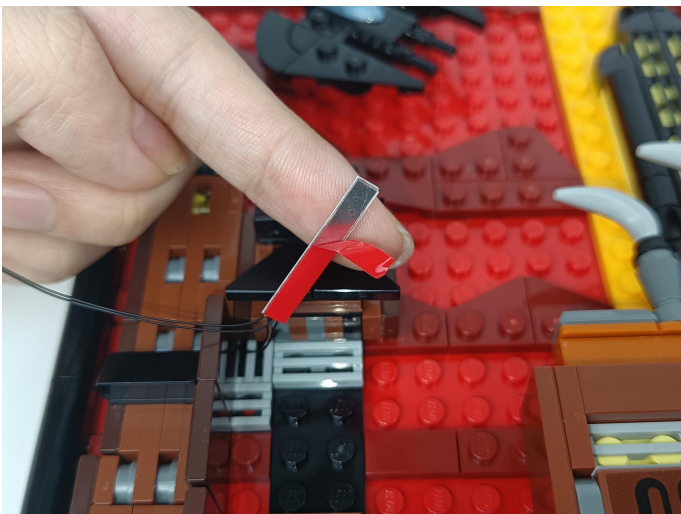

10

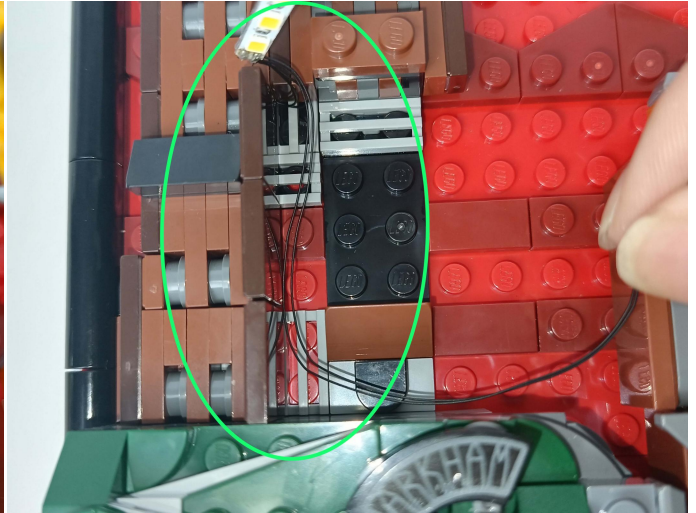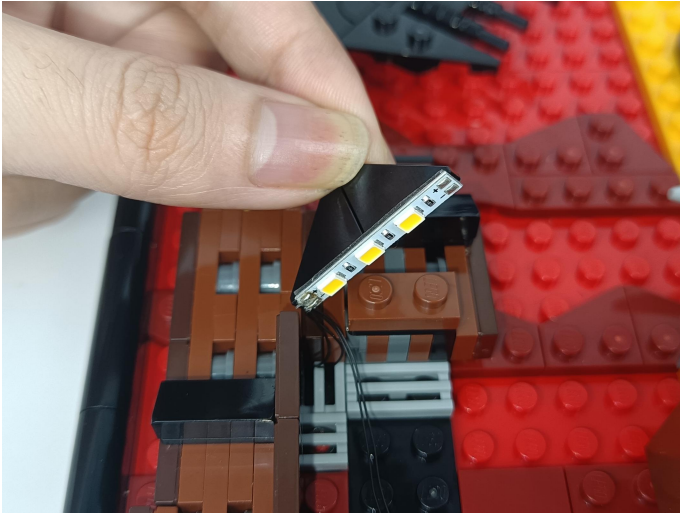

11

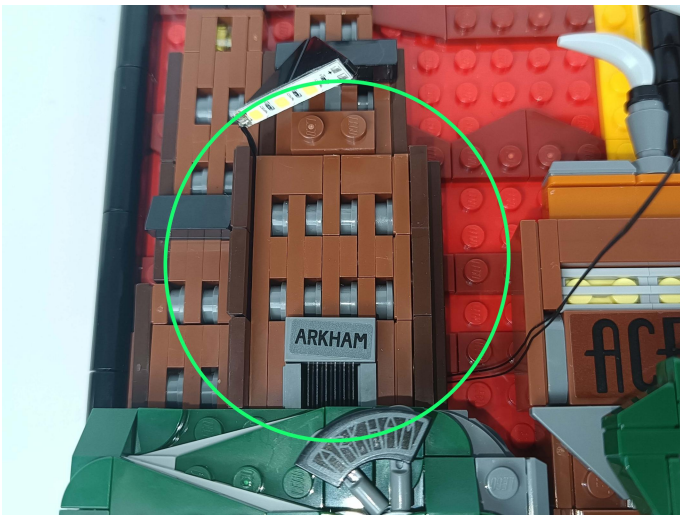

12



13





14




15





16

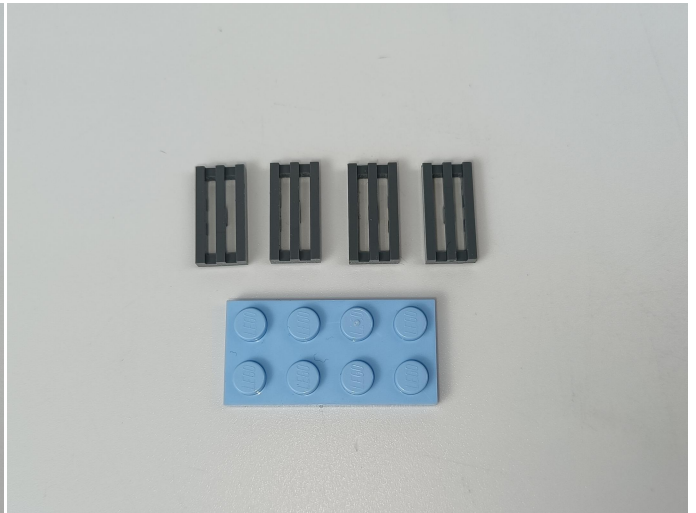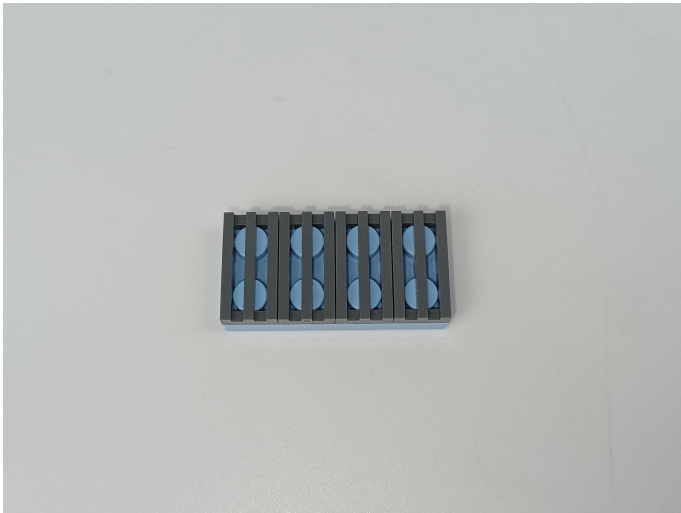


17

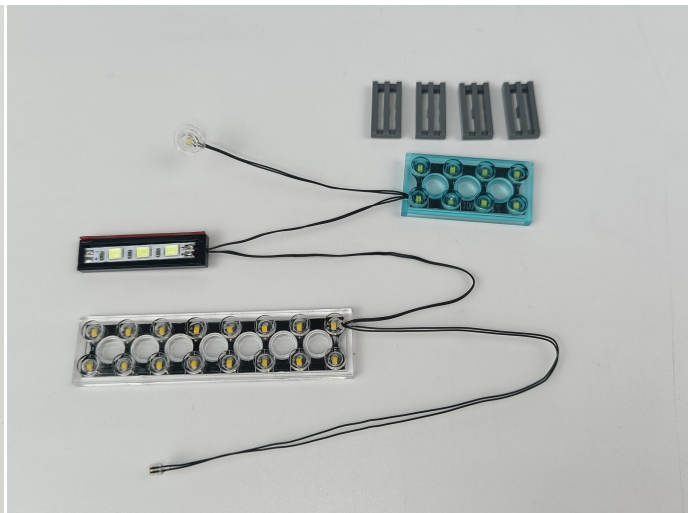


18

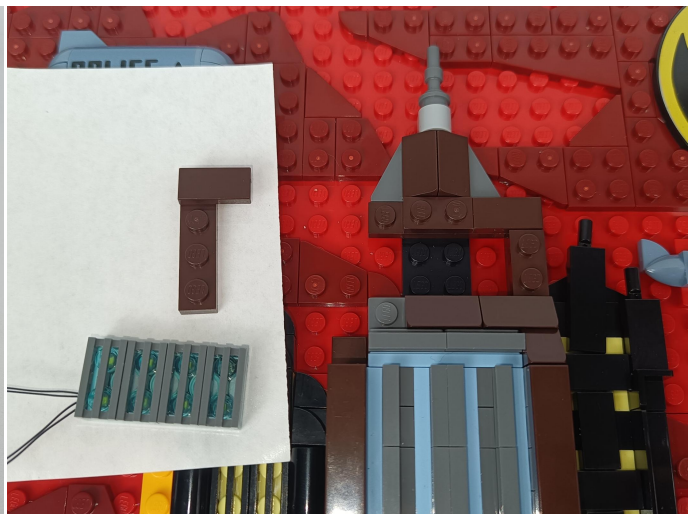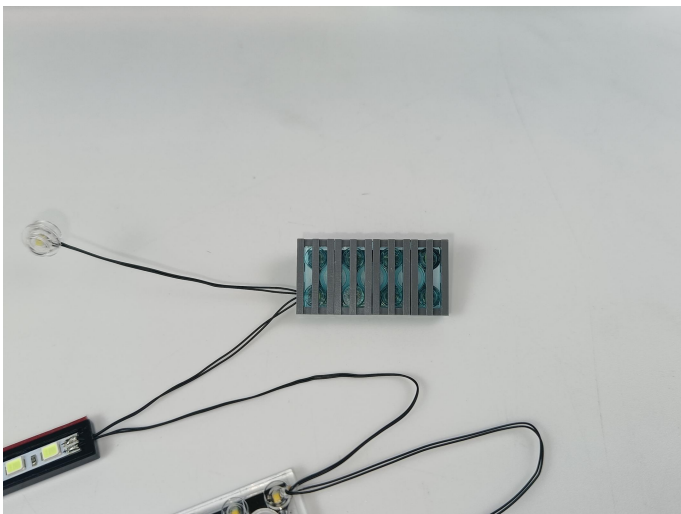



19

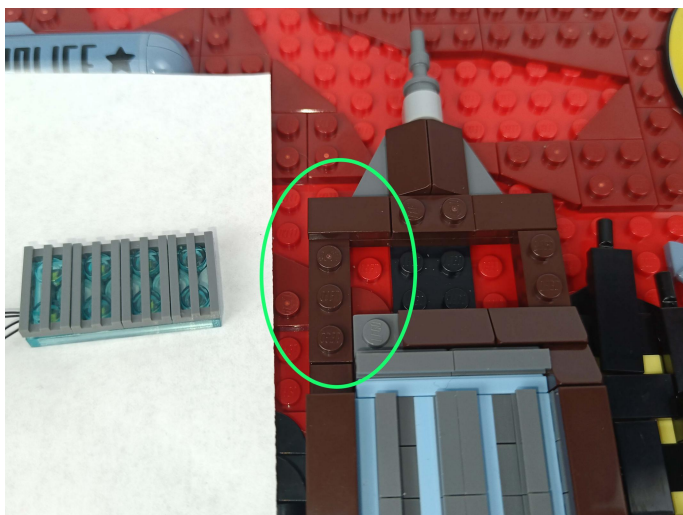



20

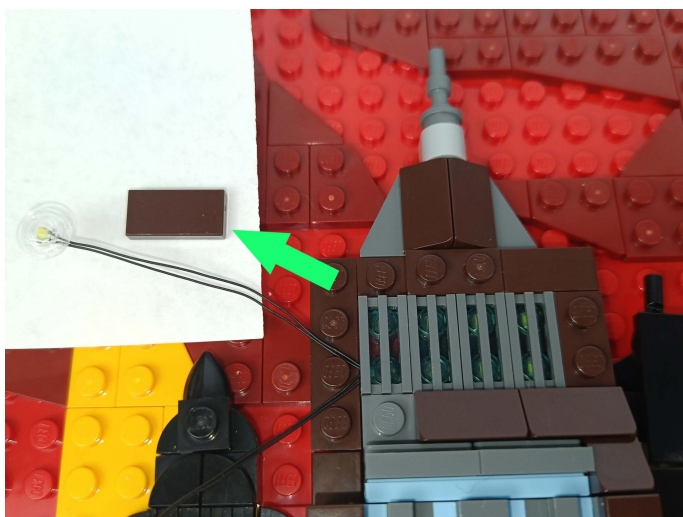



21

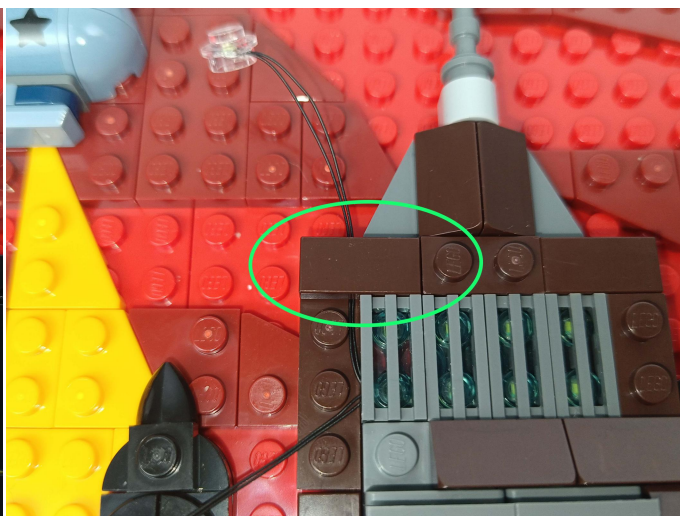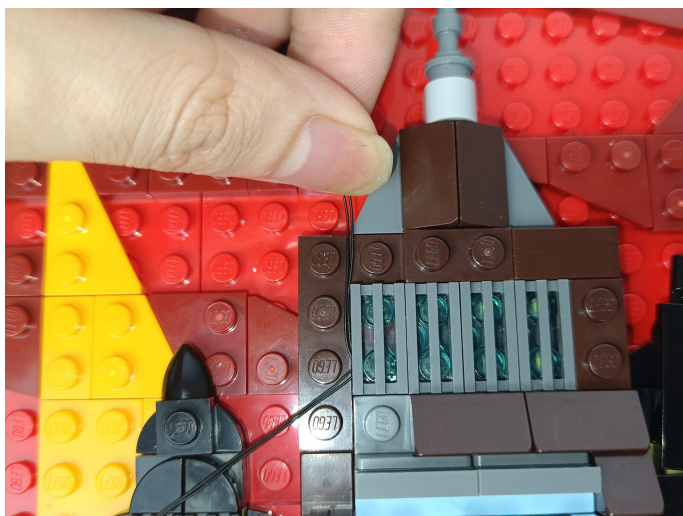

22

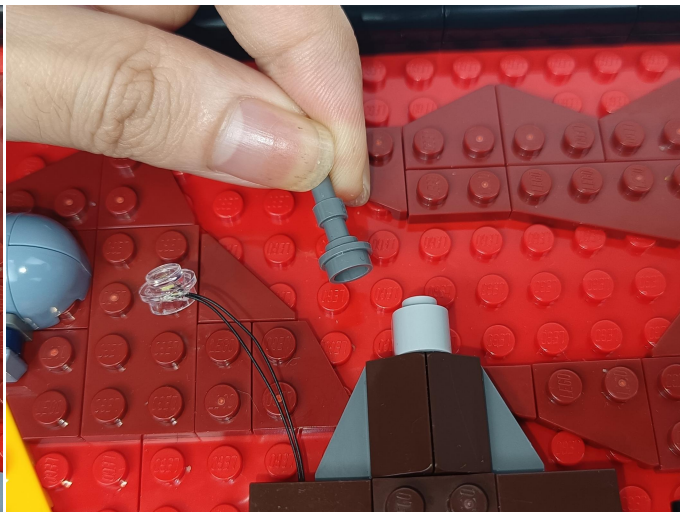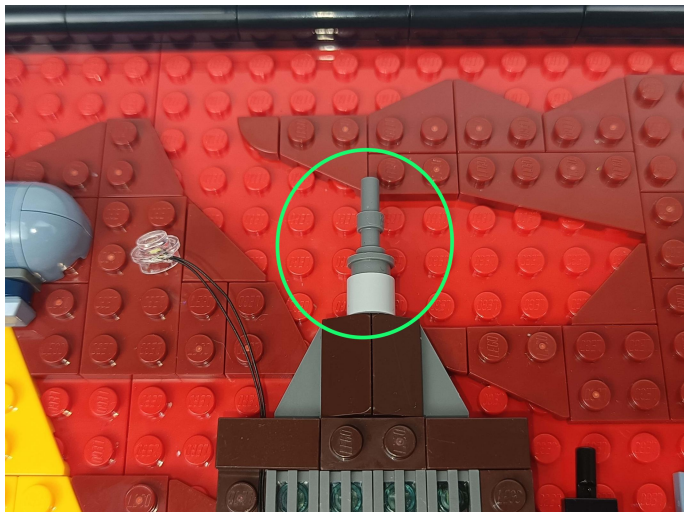

23

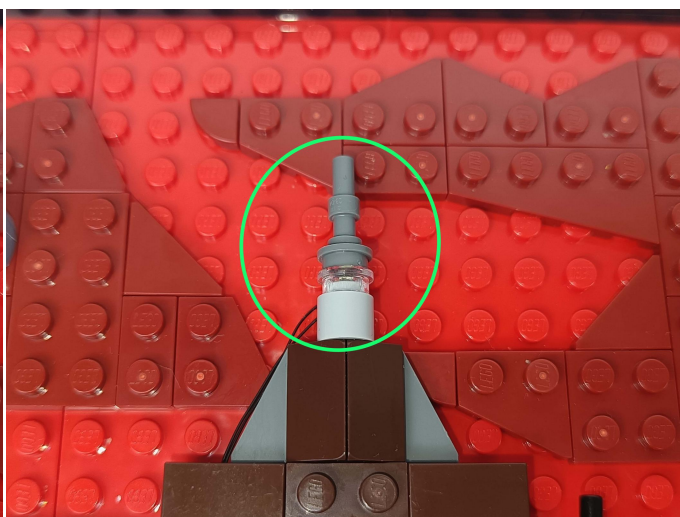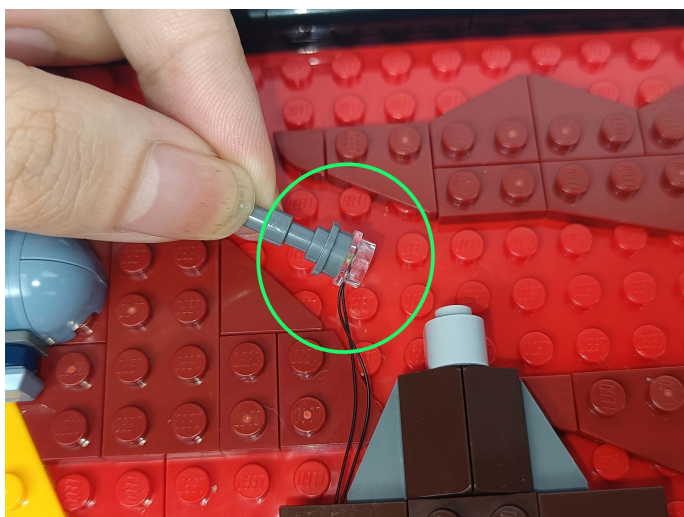


24




25



26

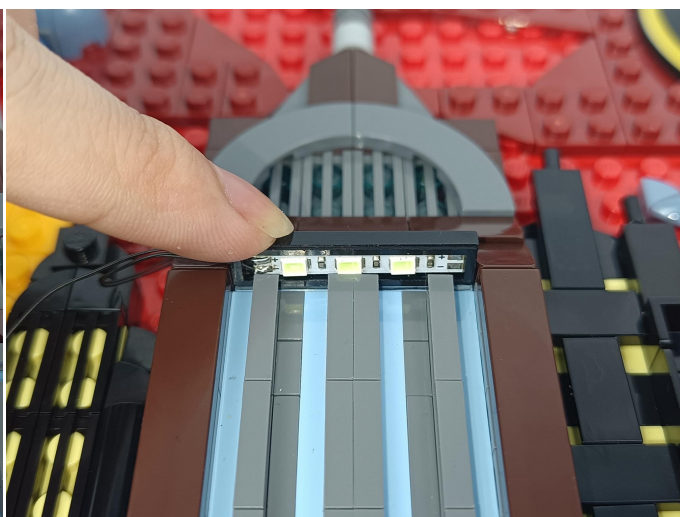

27

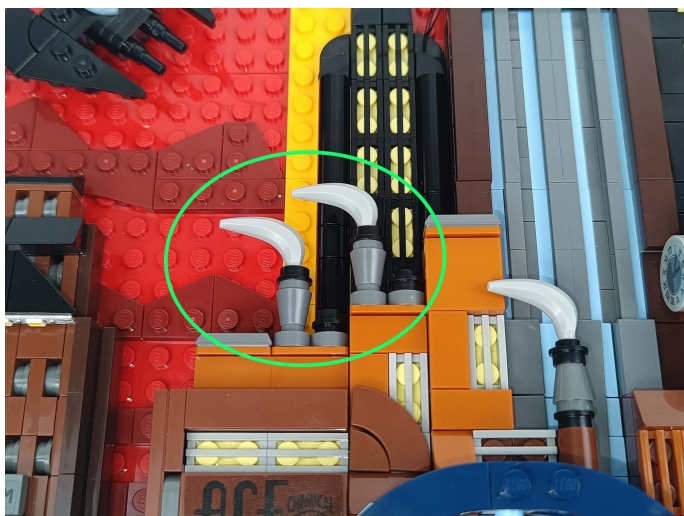






28




29

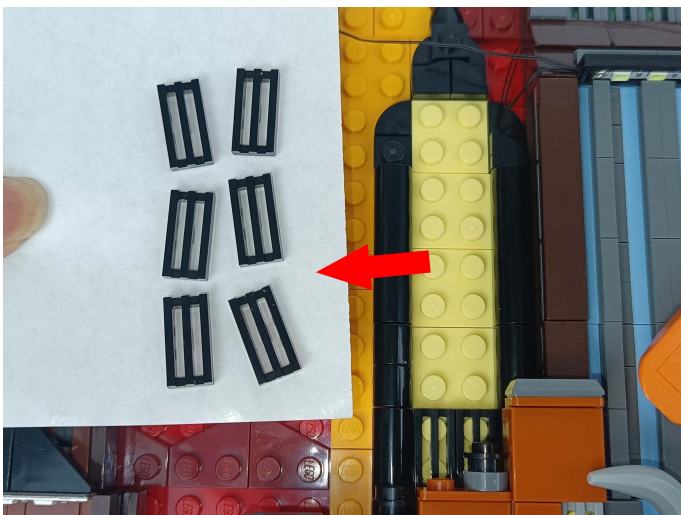


30

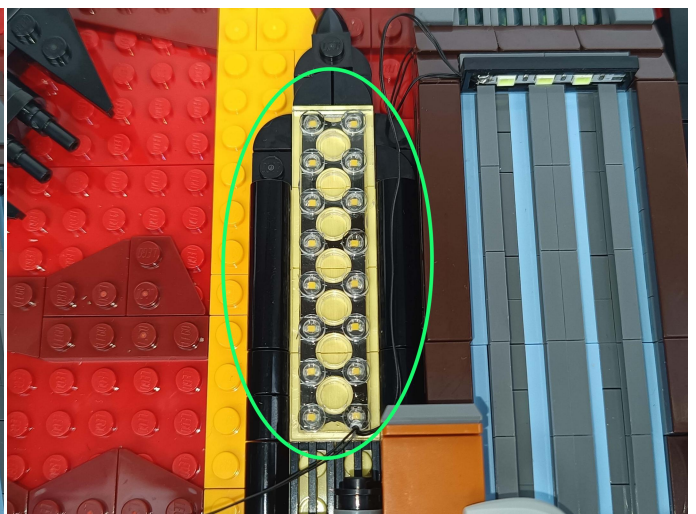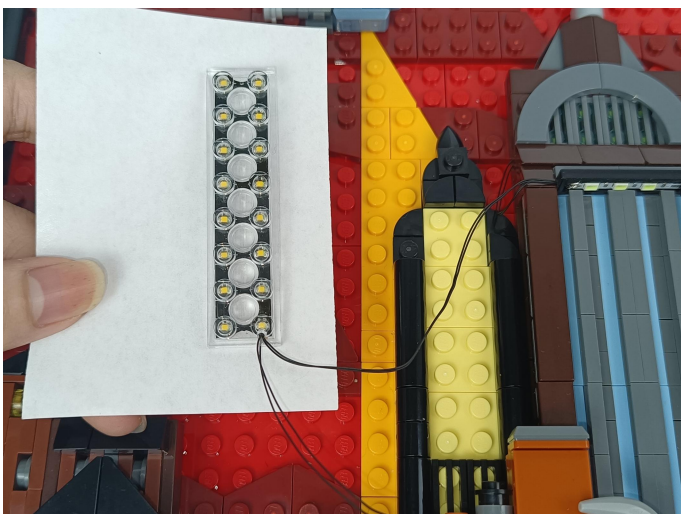

31

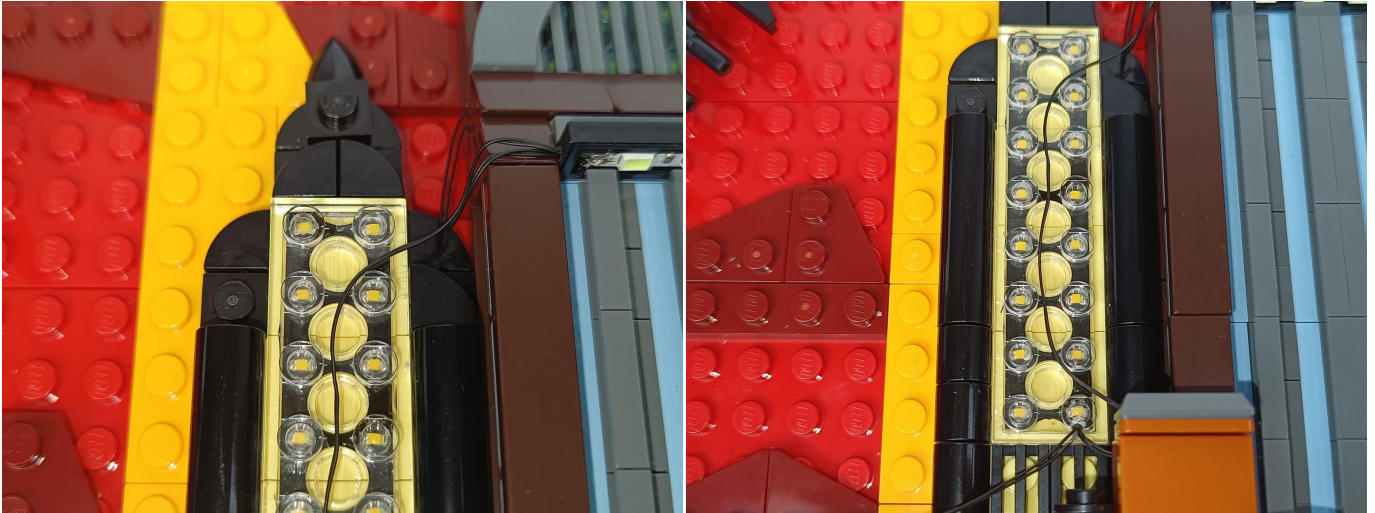

32

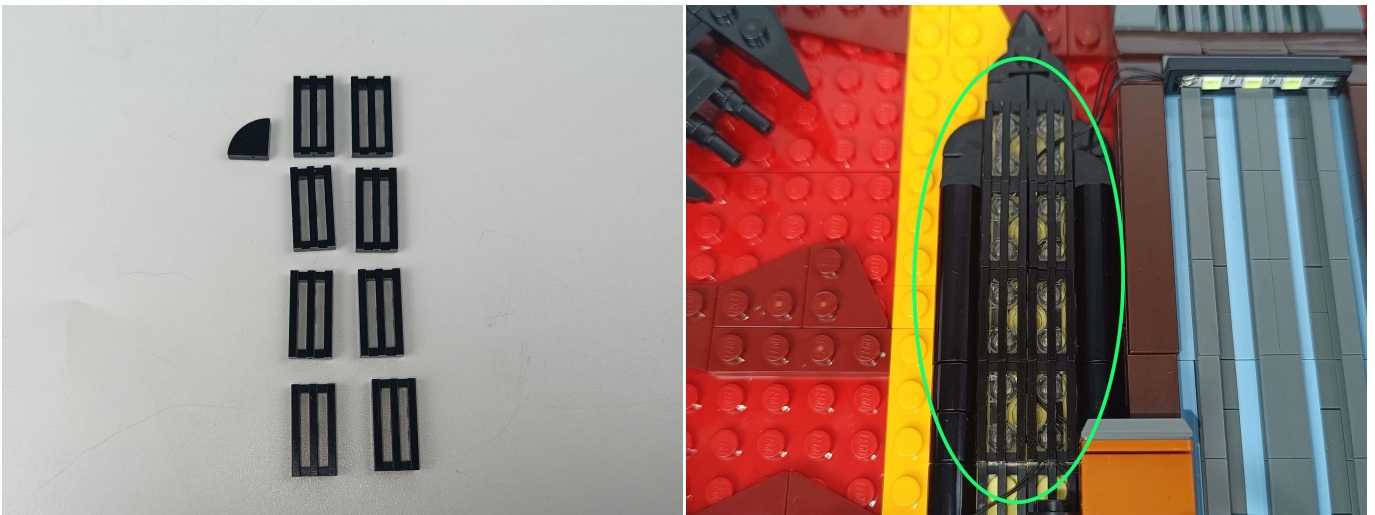



33



34




35

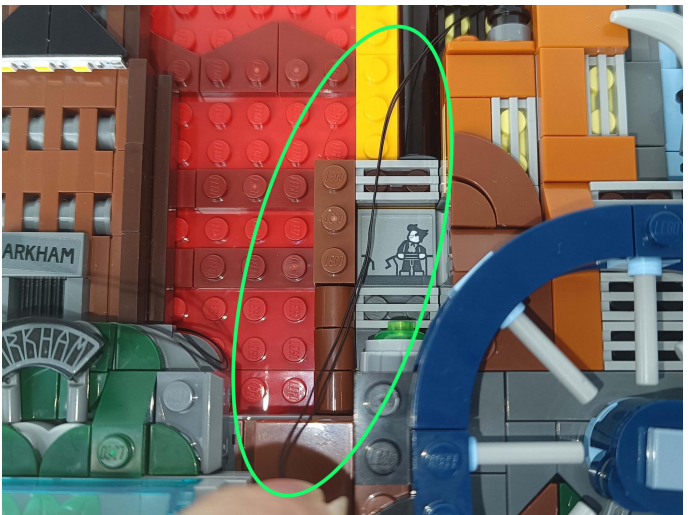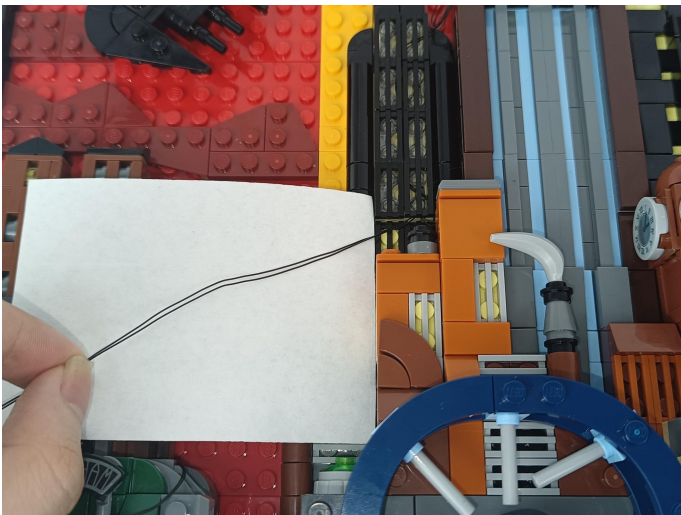

36




37

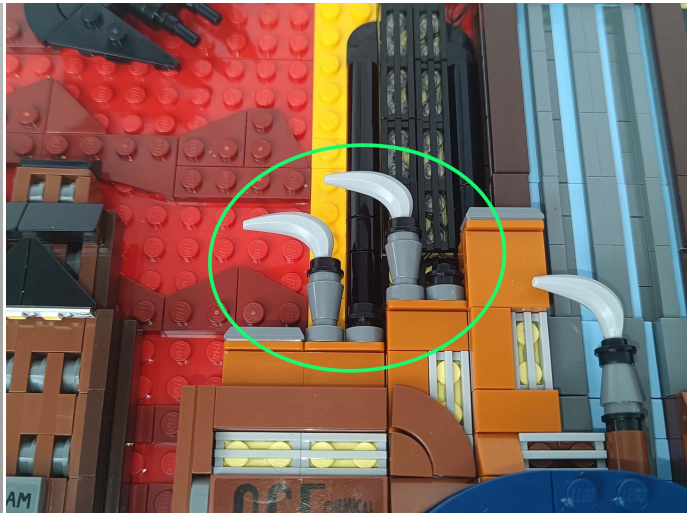

38




39

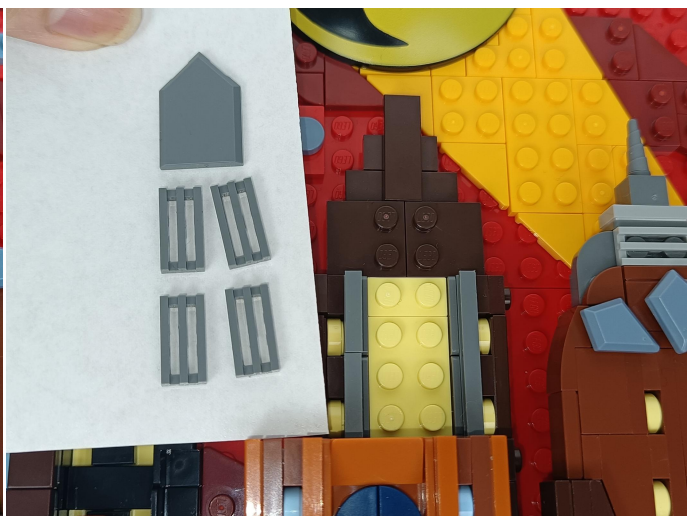

40



41

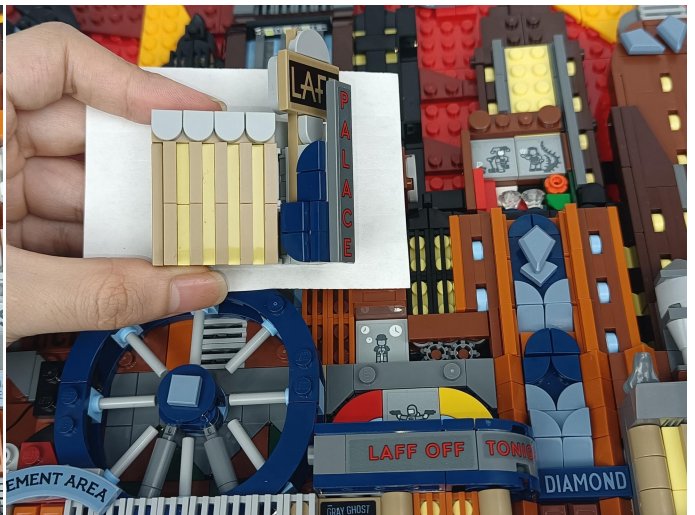


42




43





44

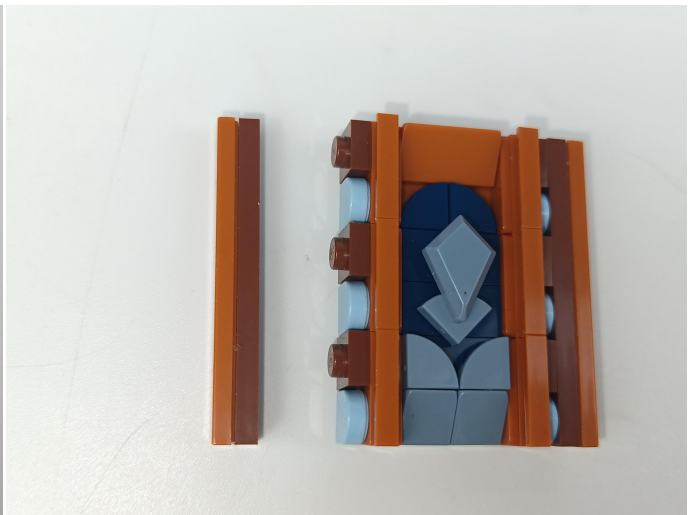


45

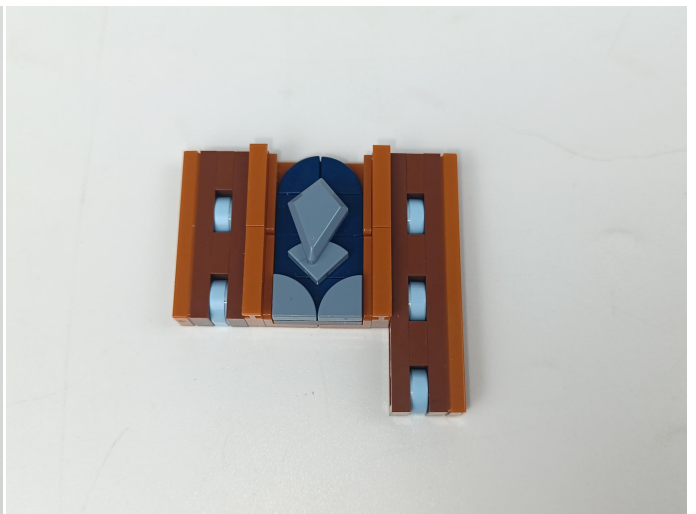



46

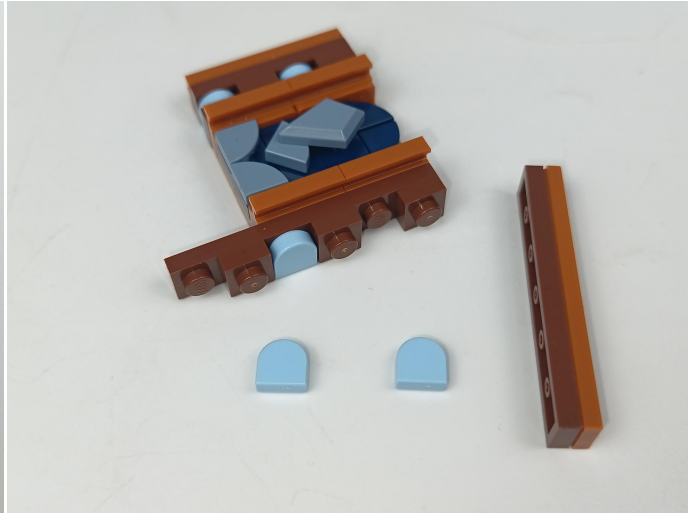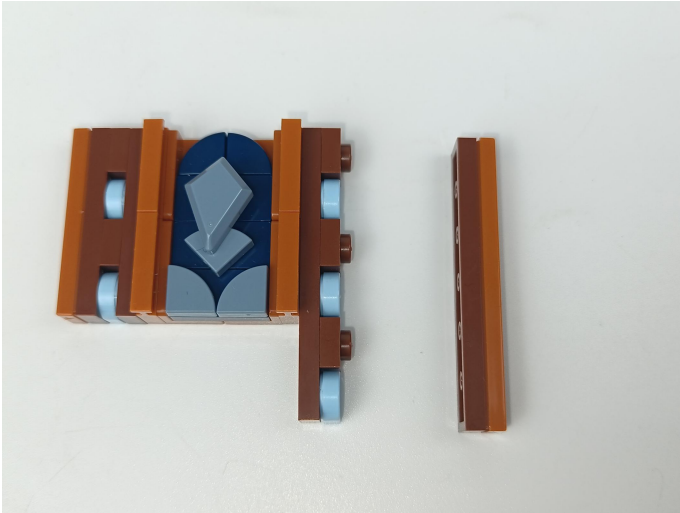



47

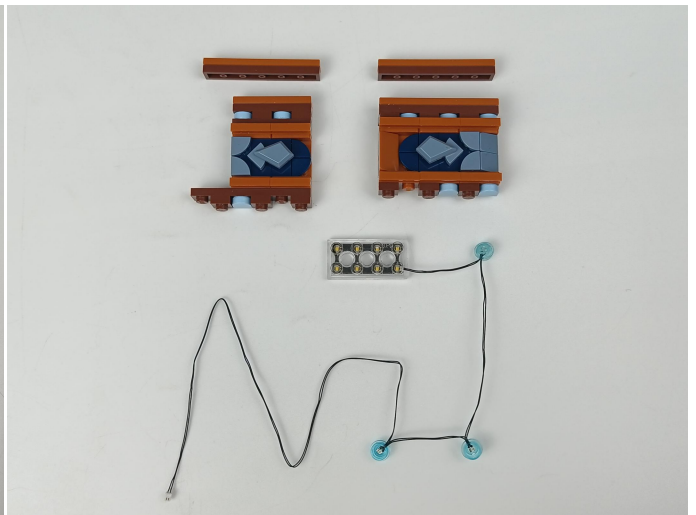



48

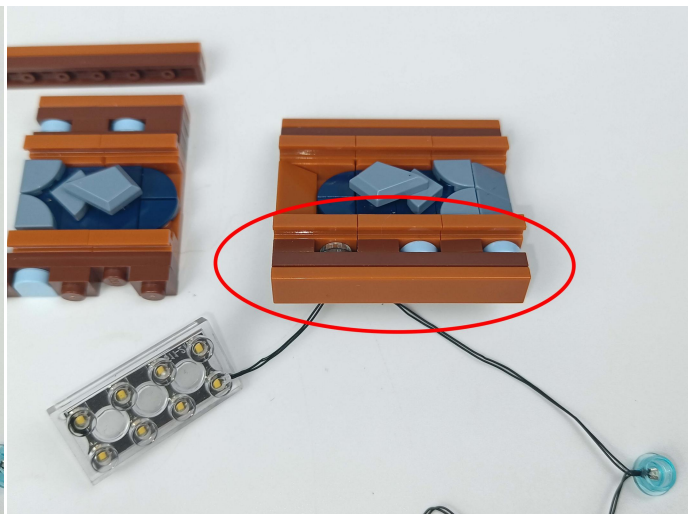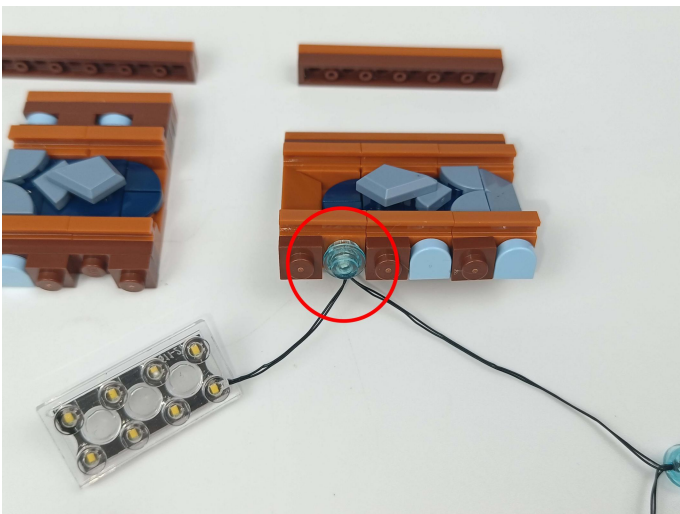



49

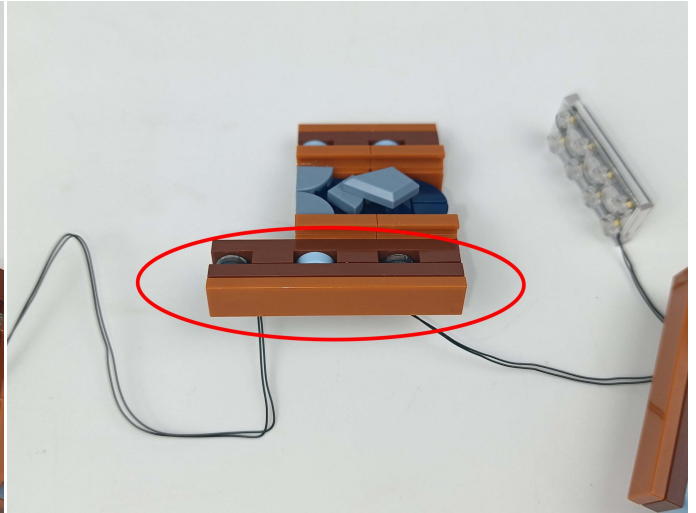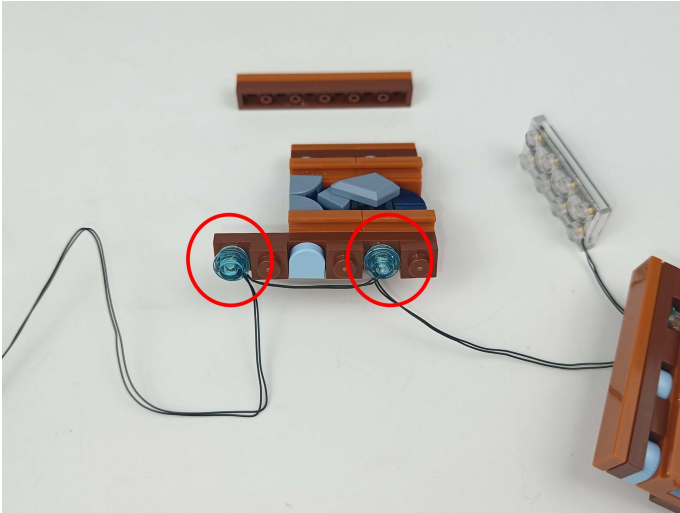

50

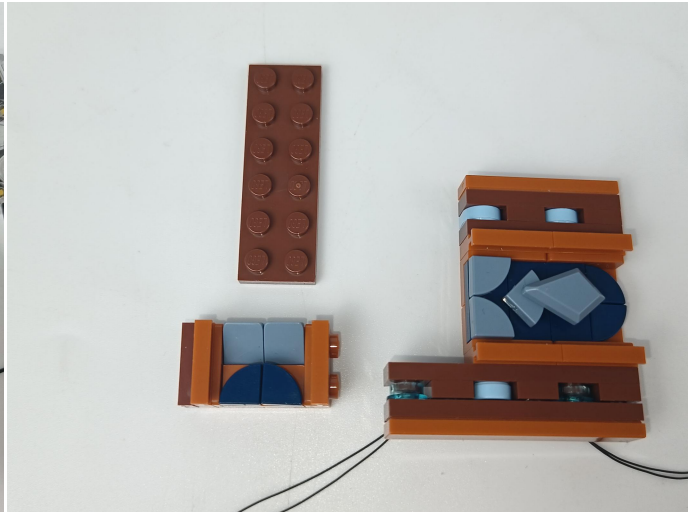
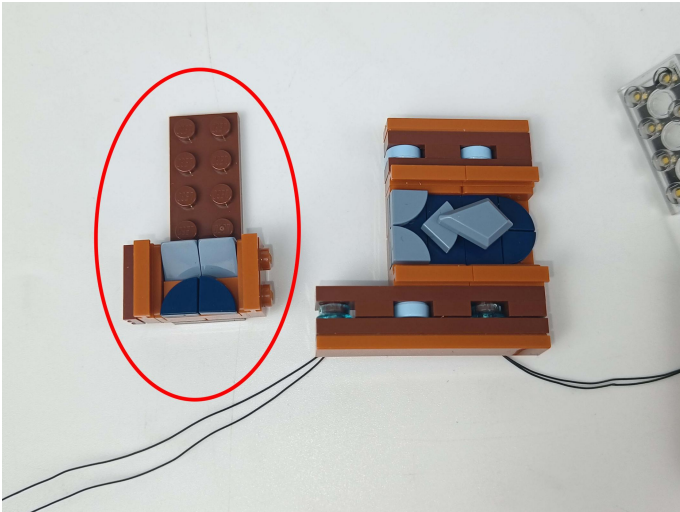


51

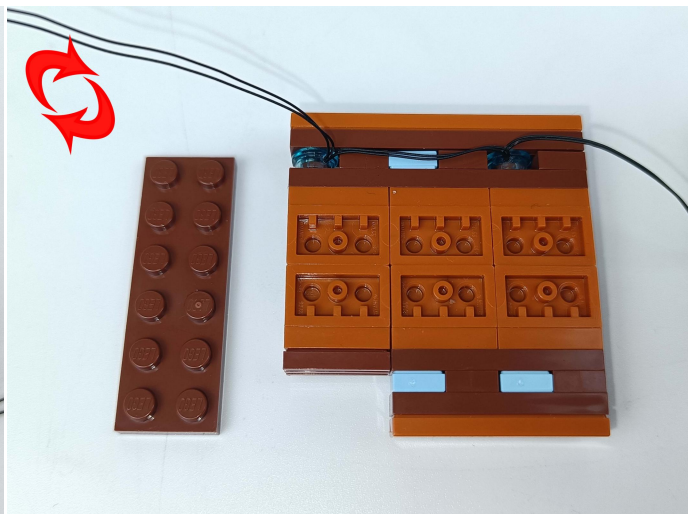
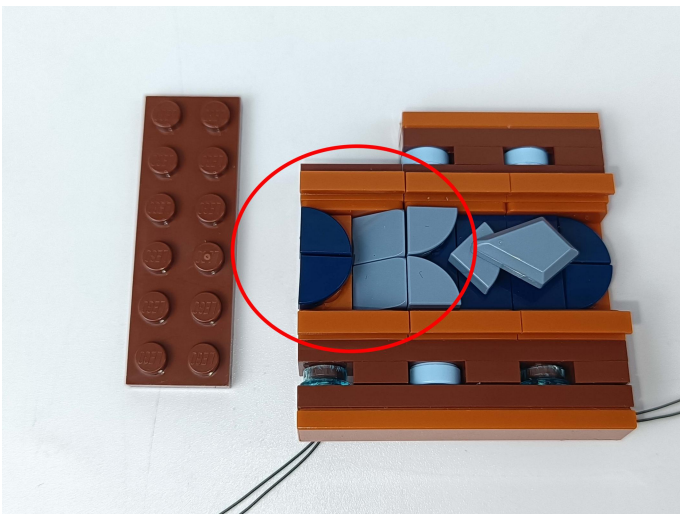




52

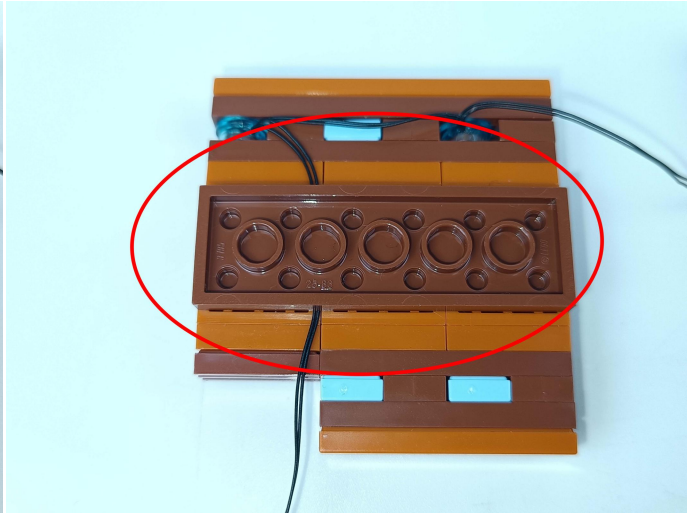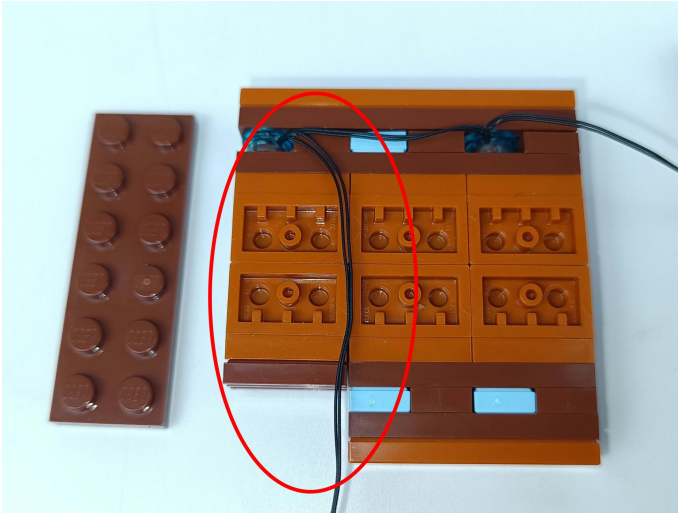



53

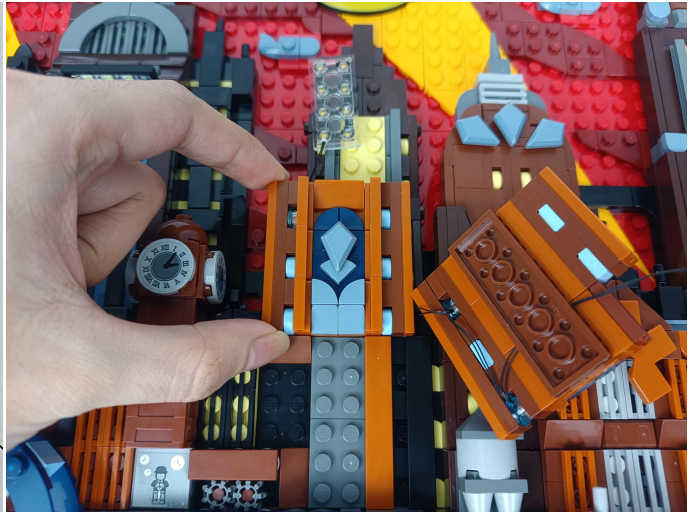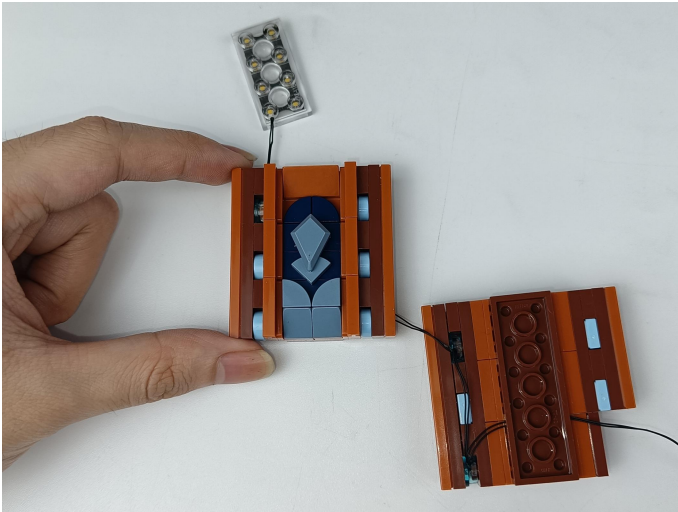

54




55

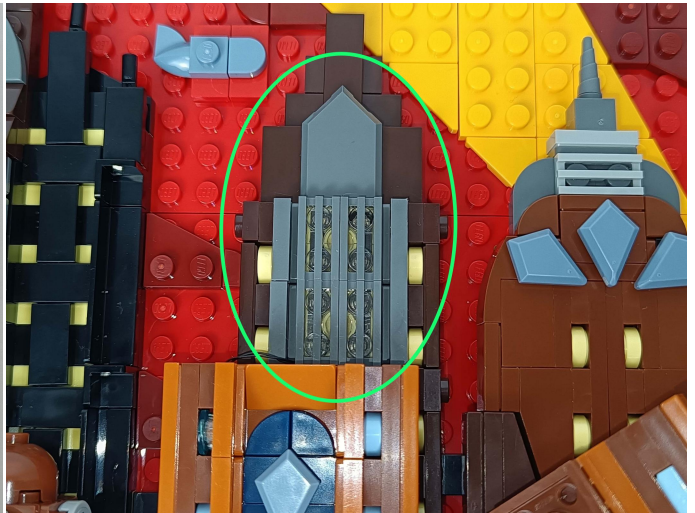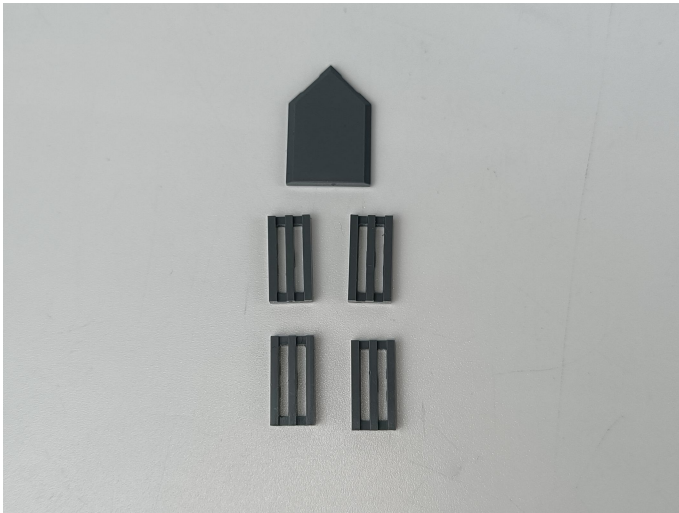



56




57

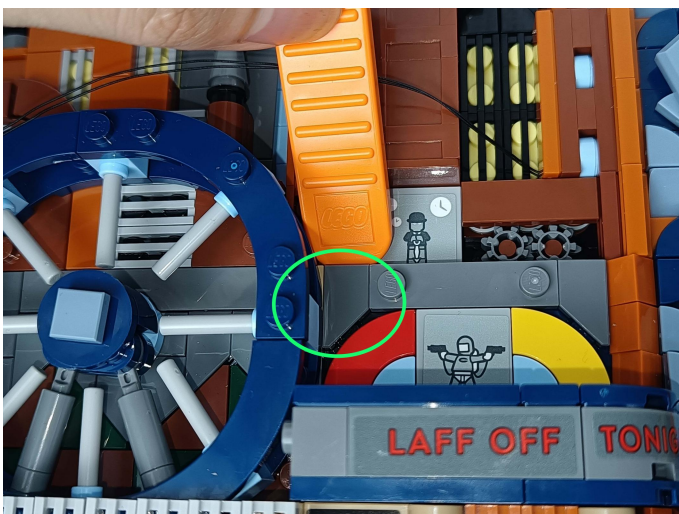

58

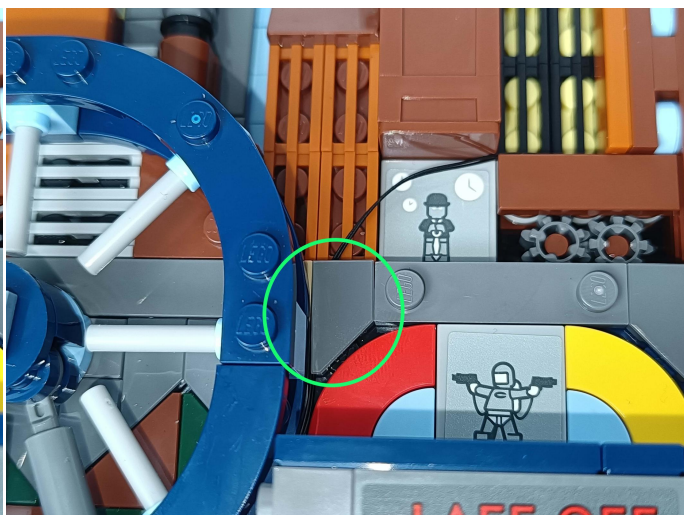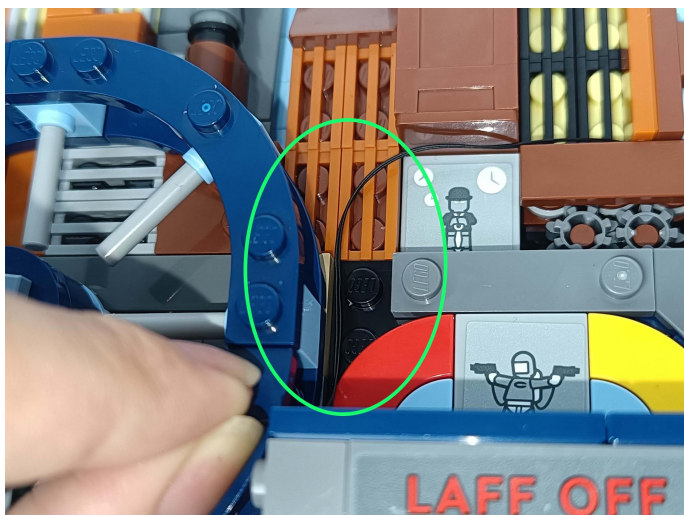



59

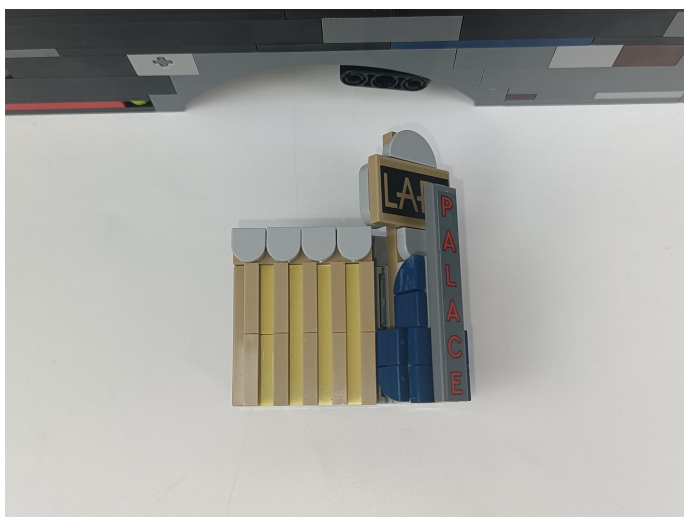



60





61

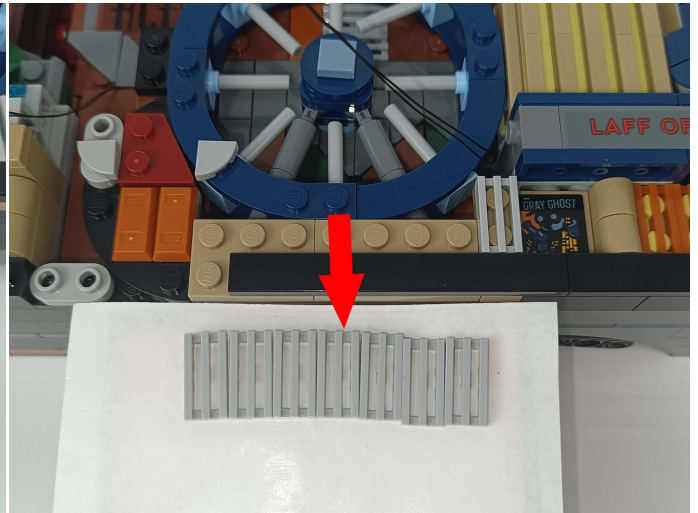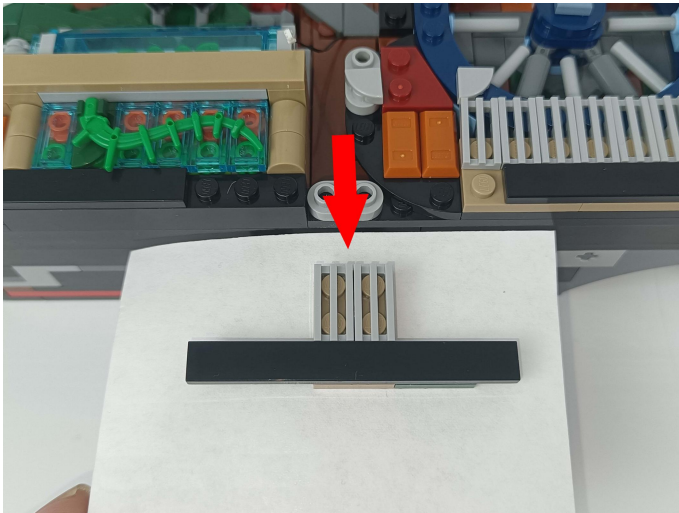


62

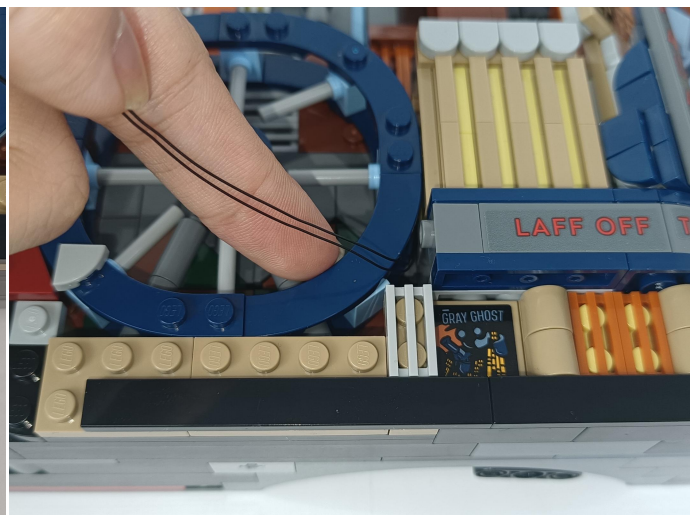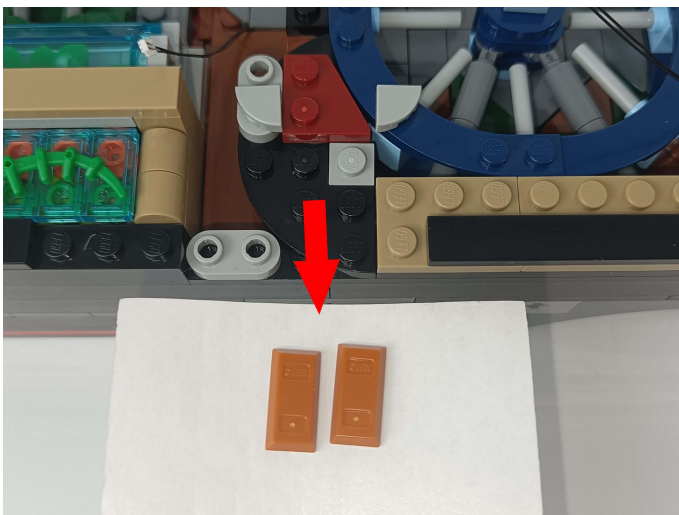

63

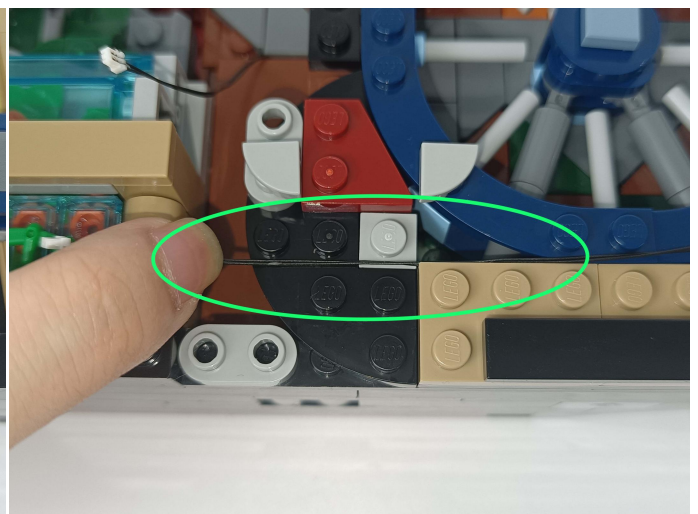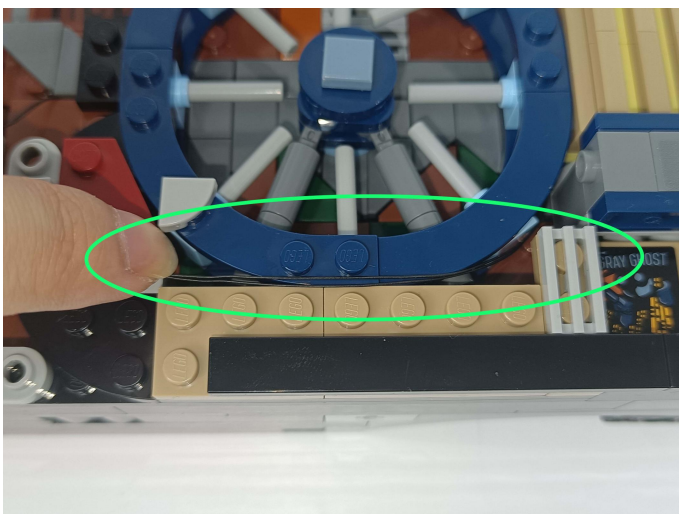



64

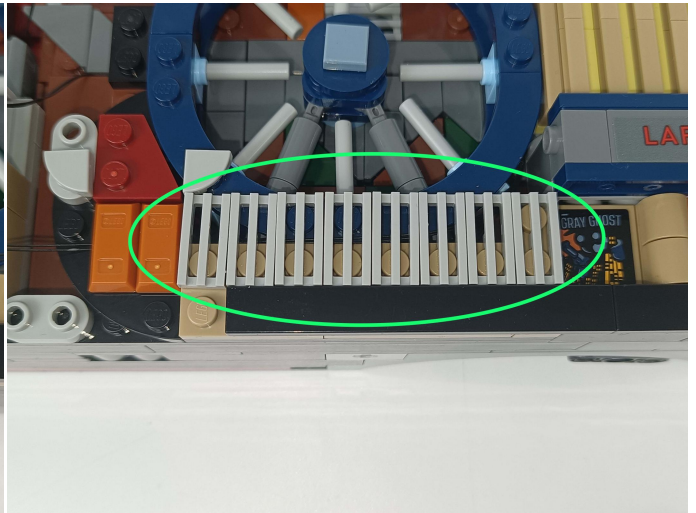


65





66

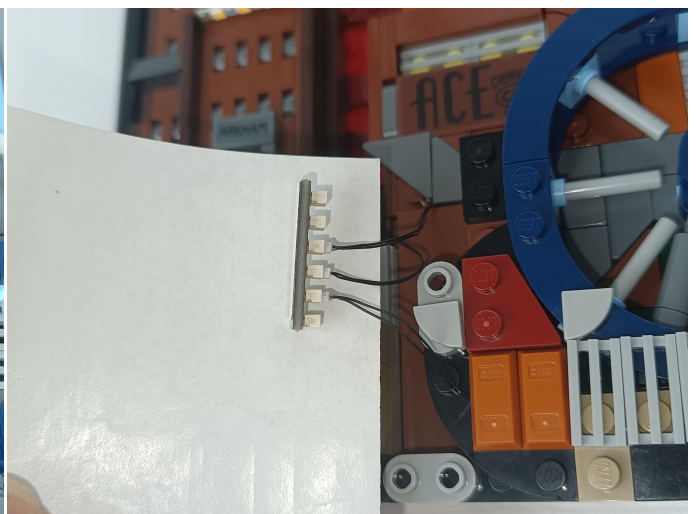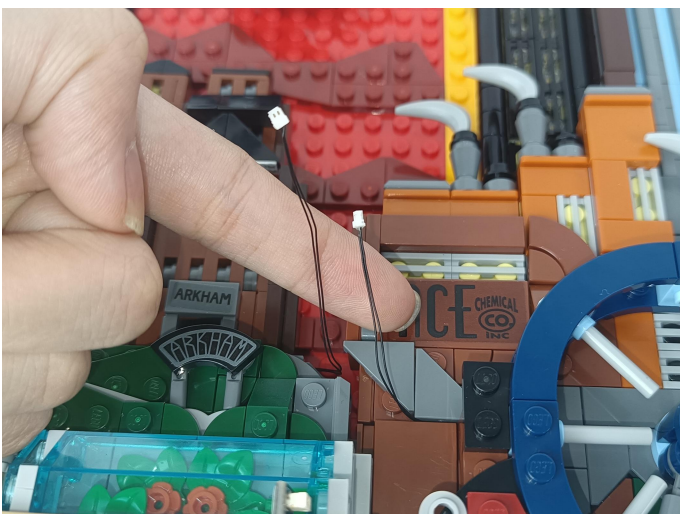

67

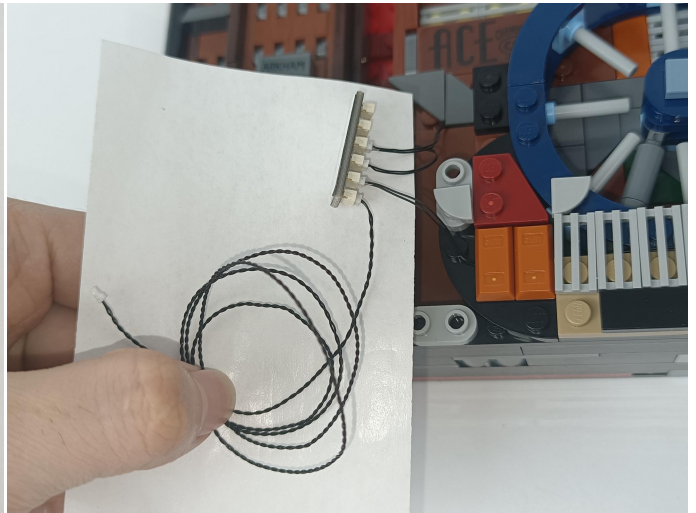



68

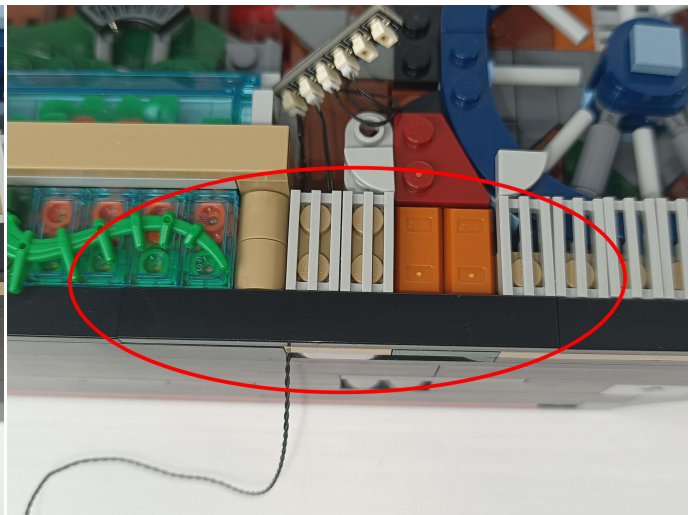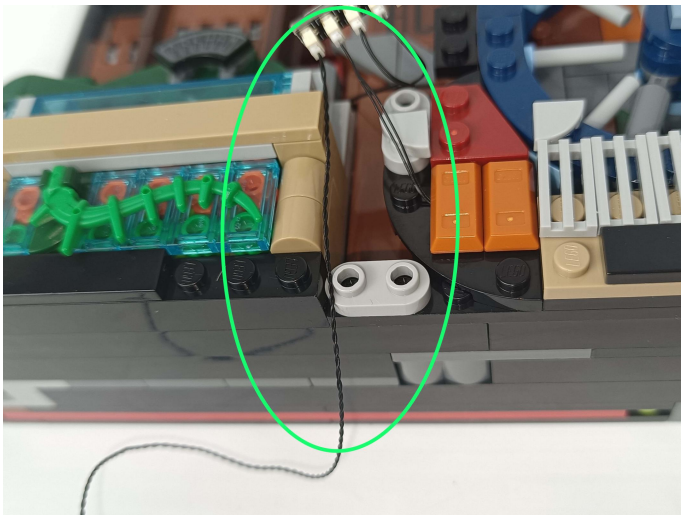

69



70

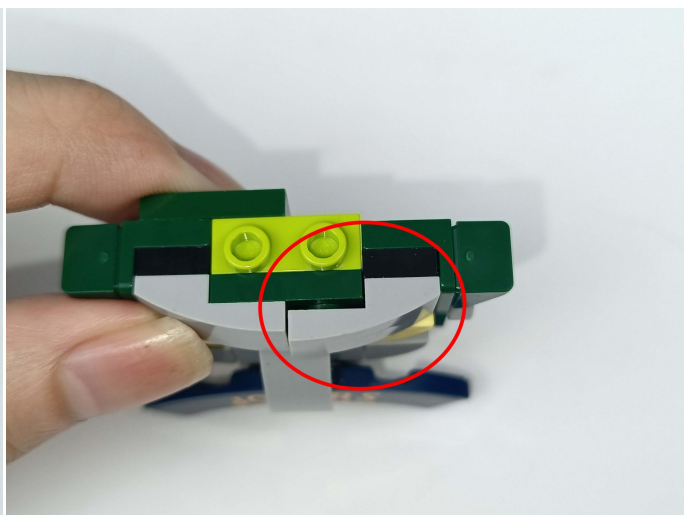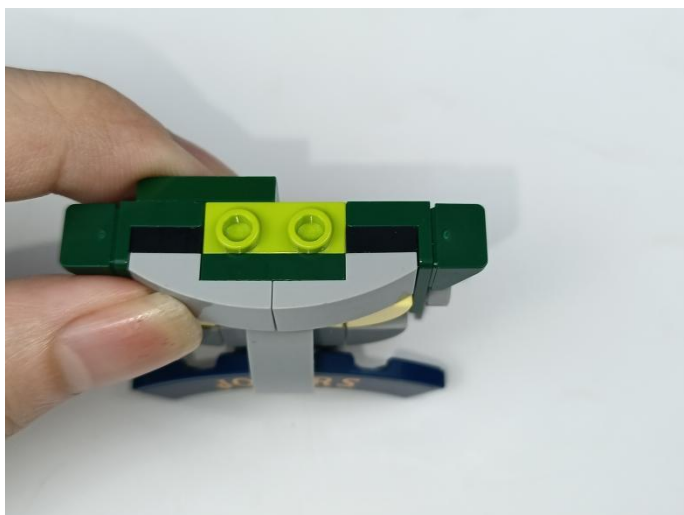


71





72




73

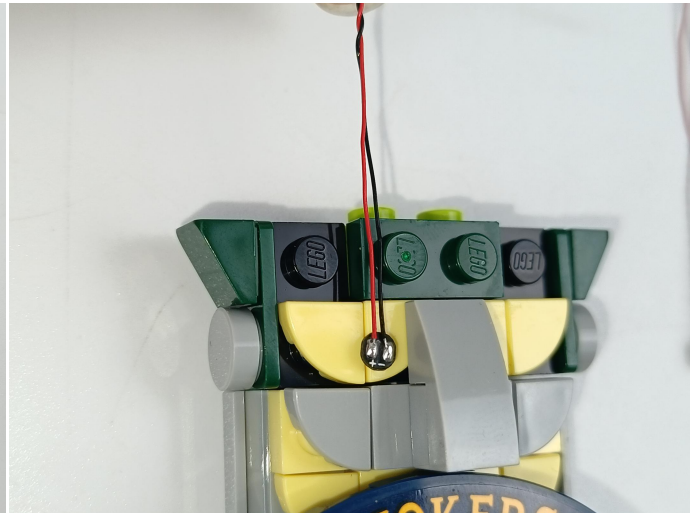

74

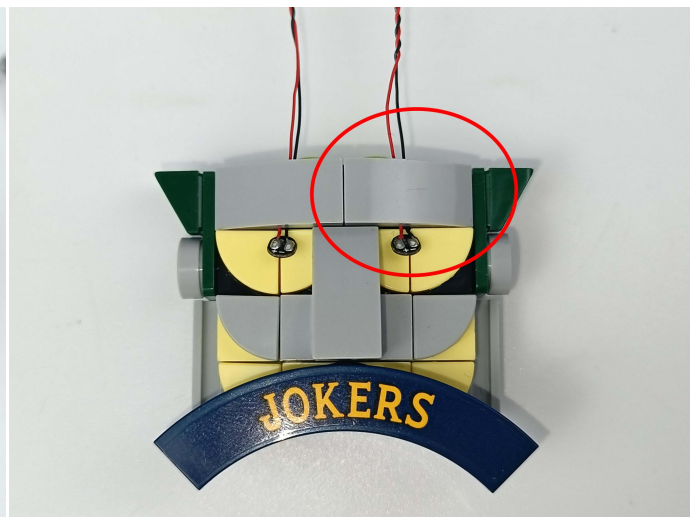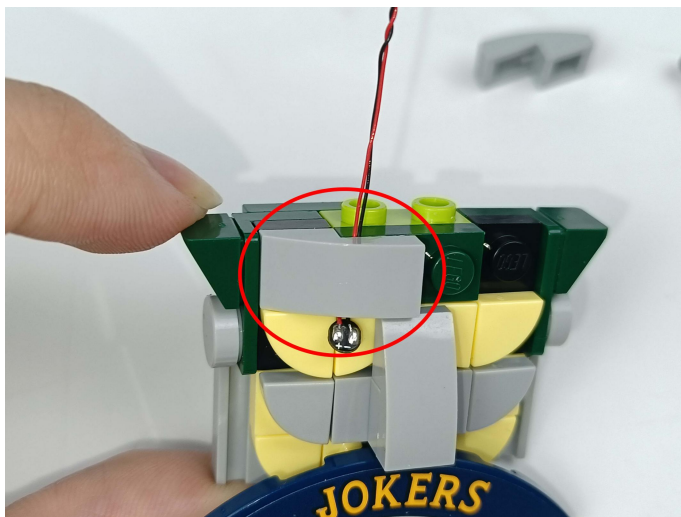


75

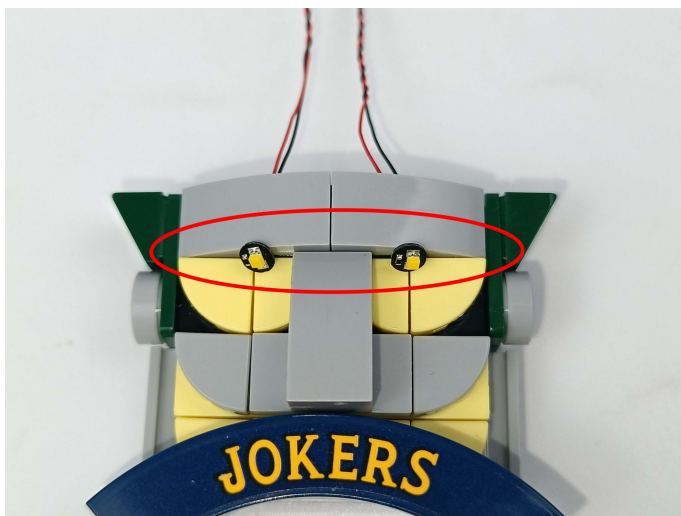



76

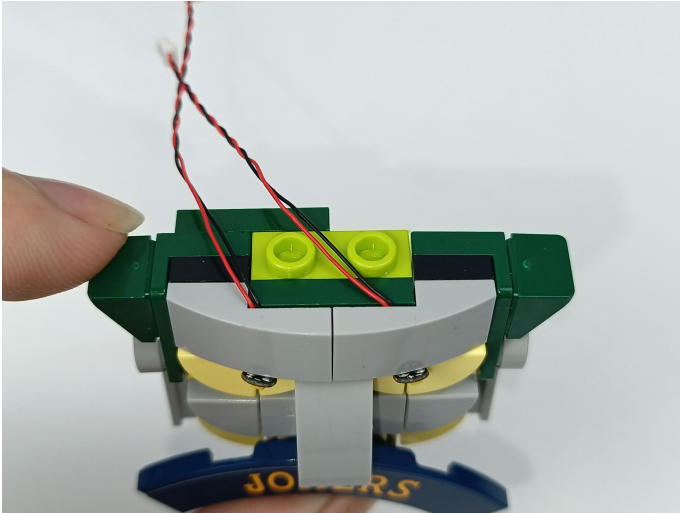

77



78





79




80





81

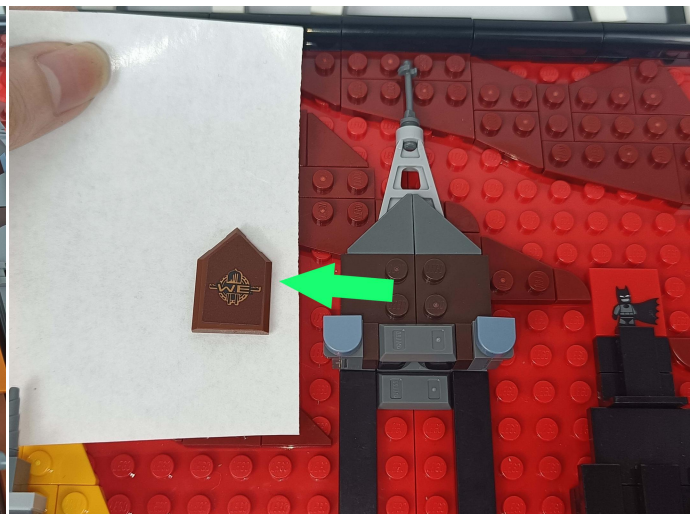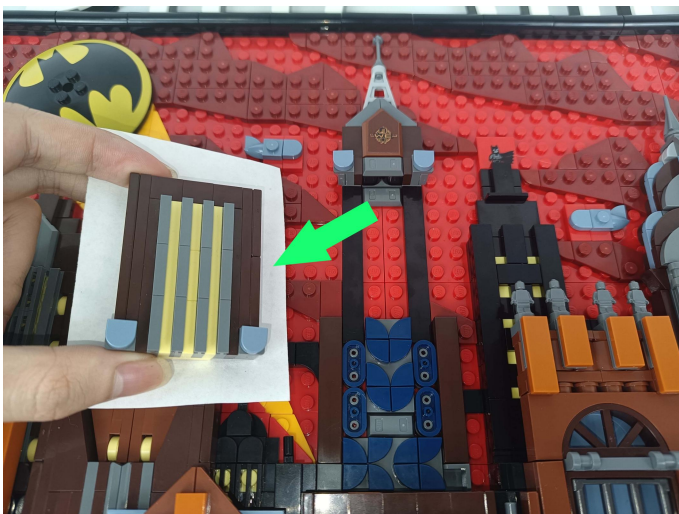


82

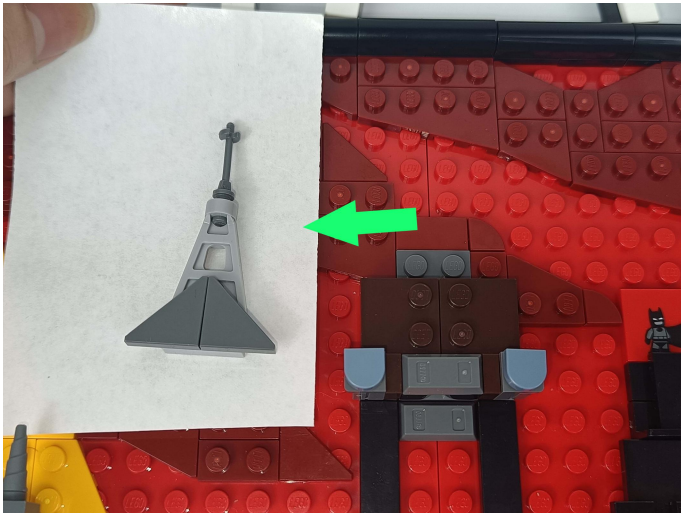



83

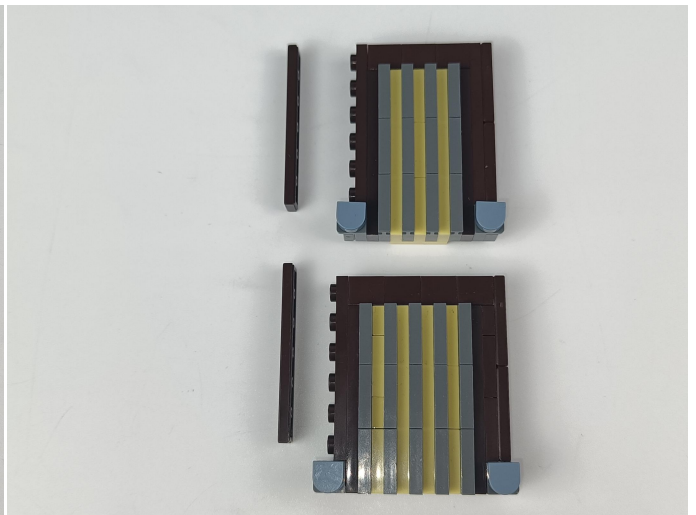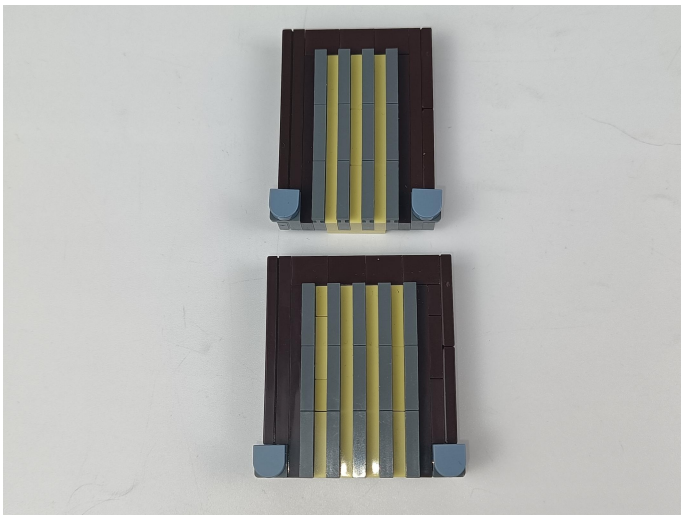



84

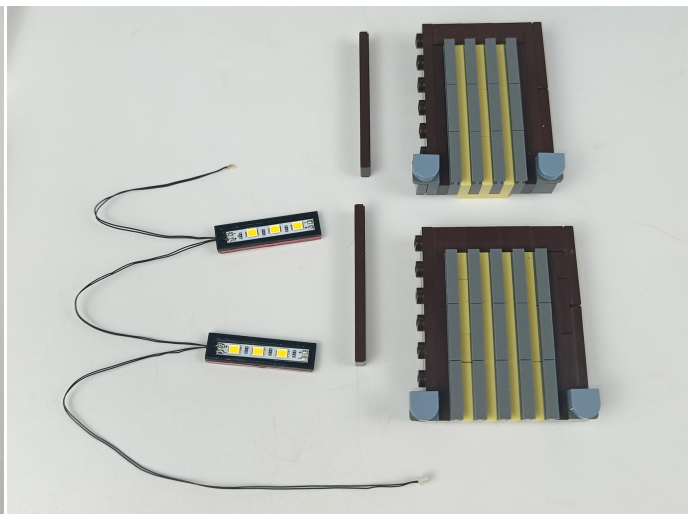



85

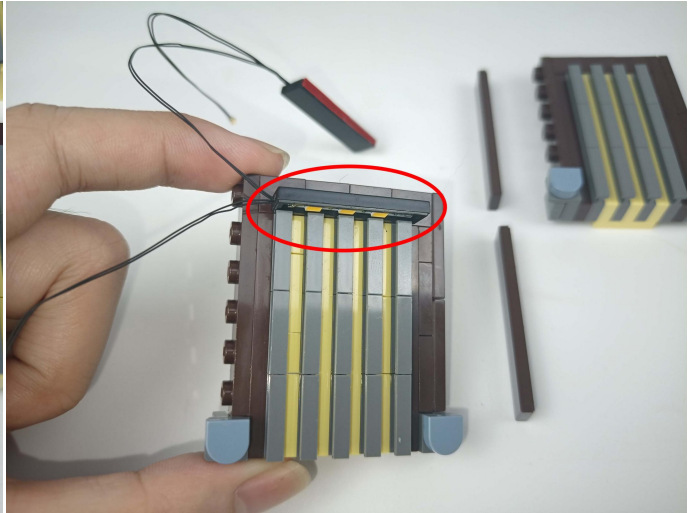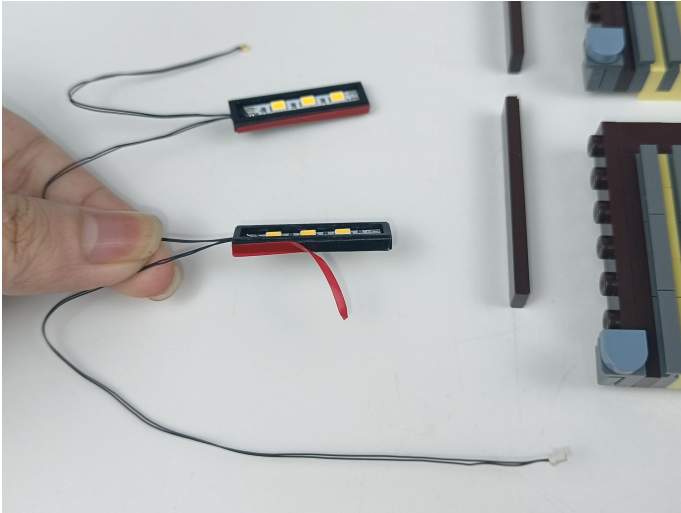



86

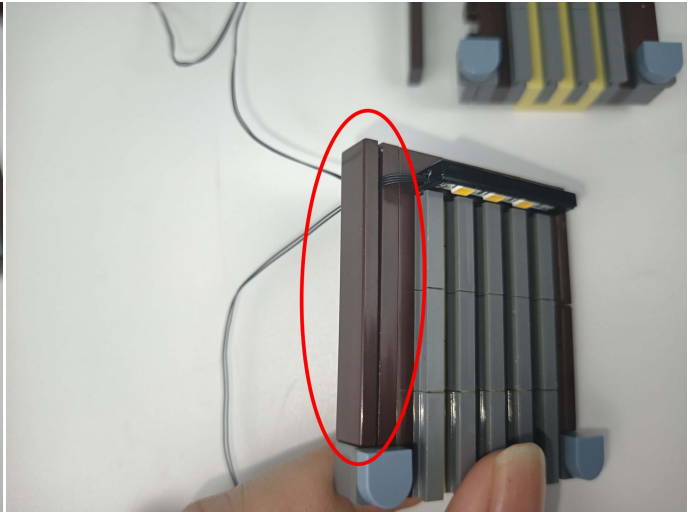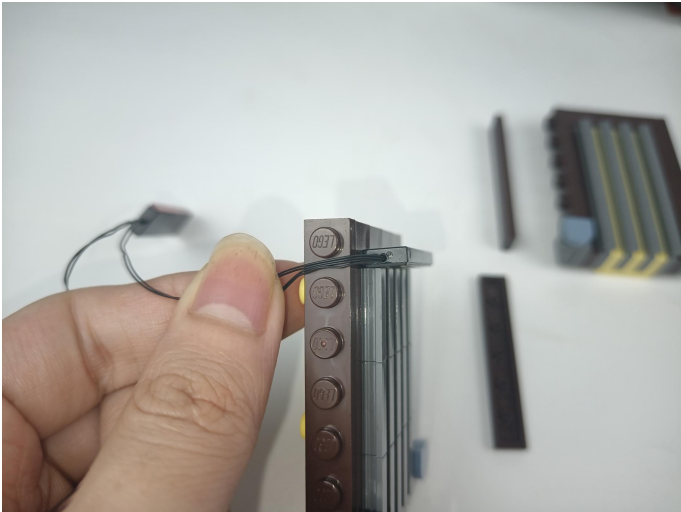

87

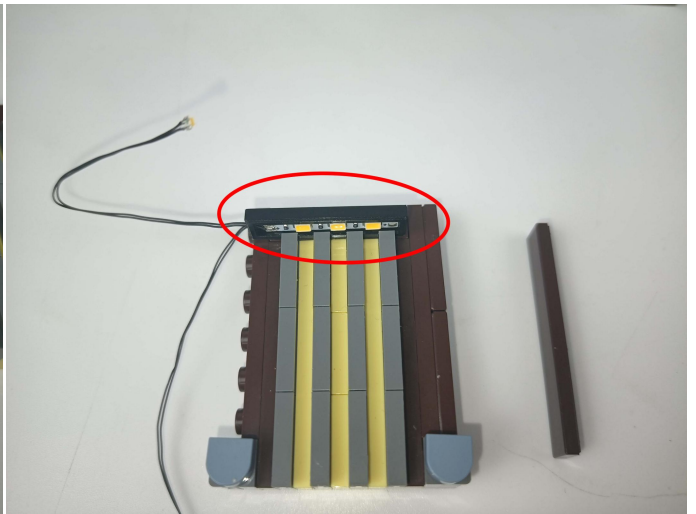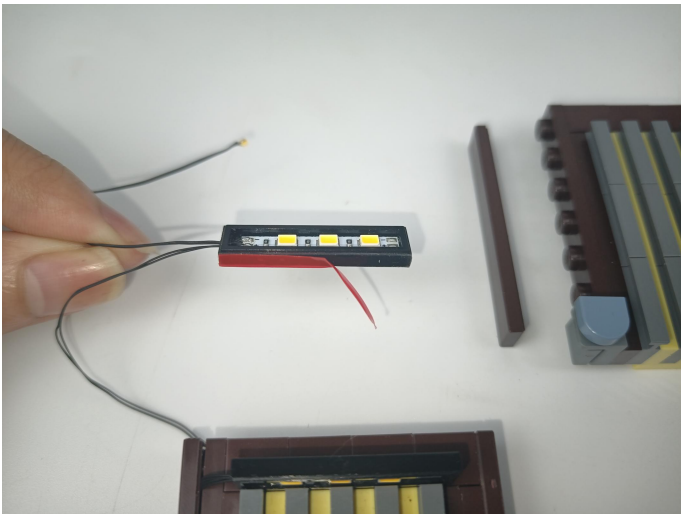

88

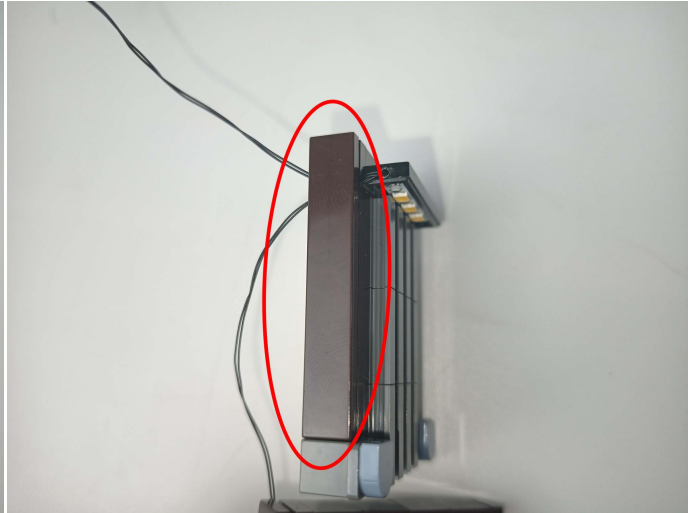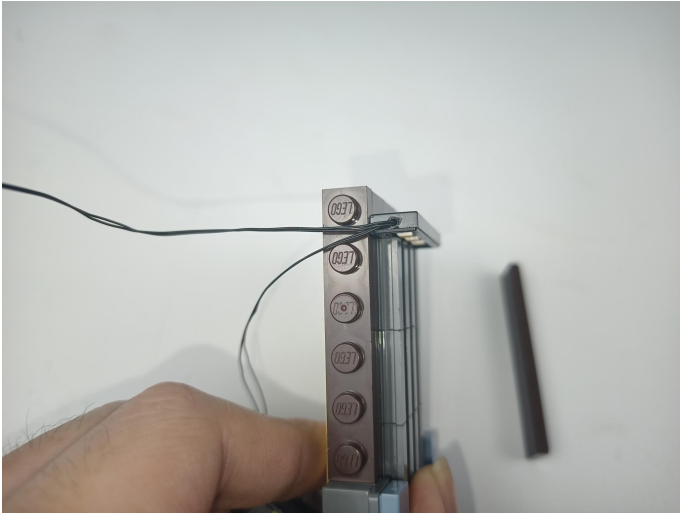


89





90




91

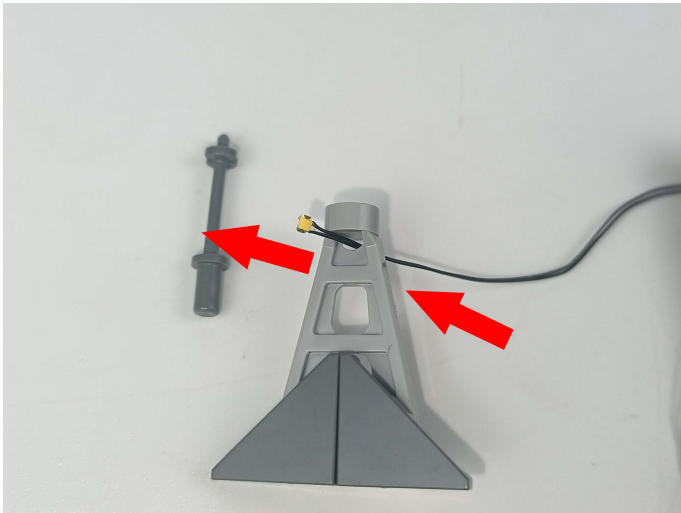


92

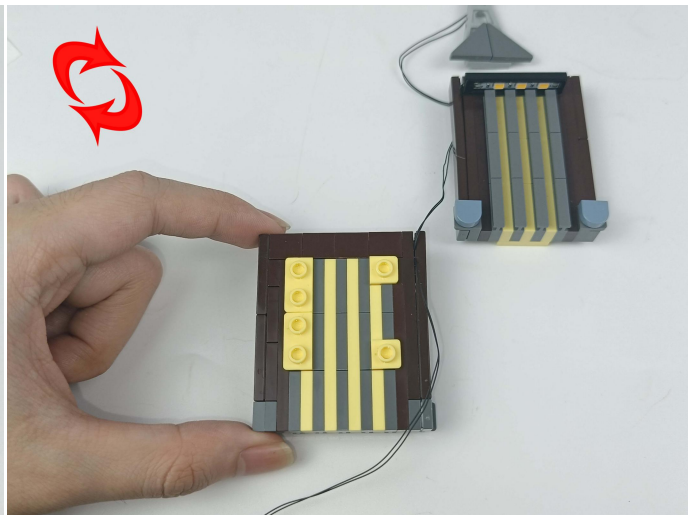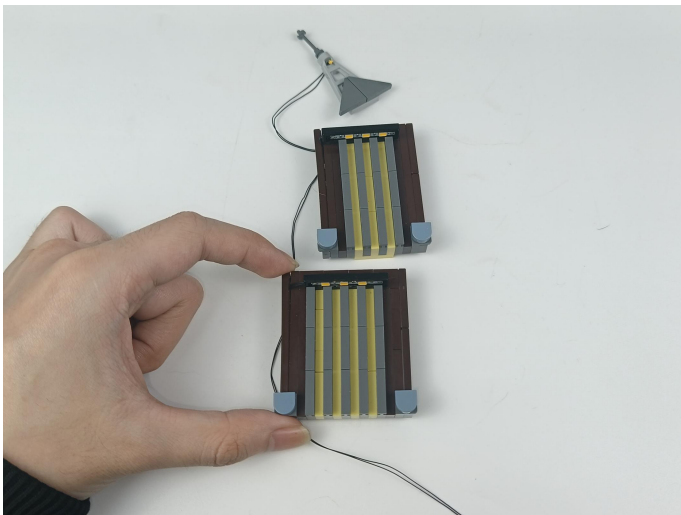



93

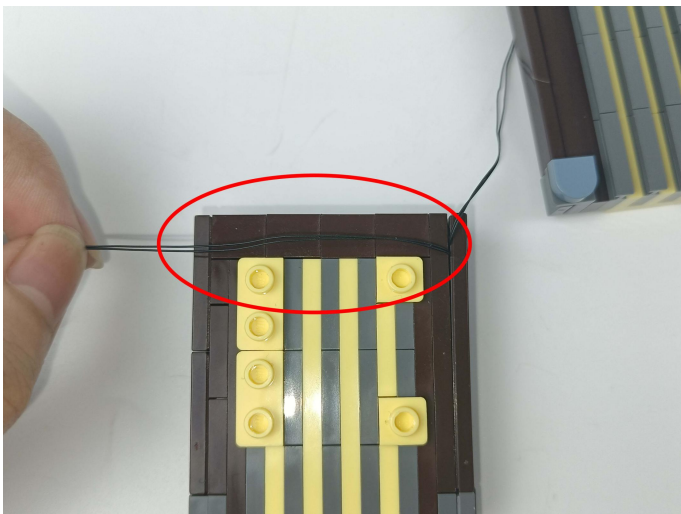


94

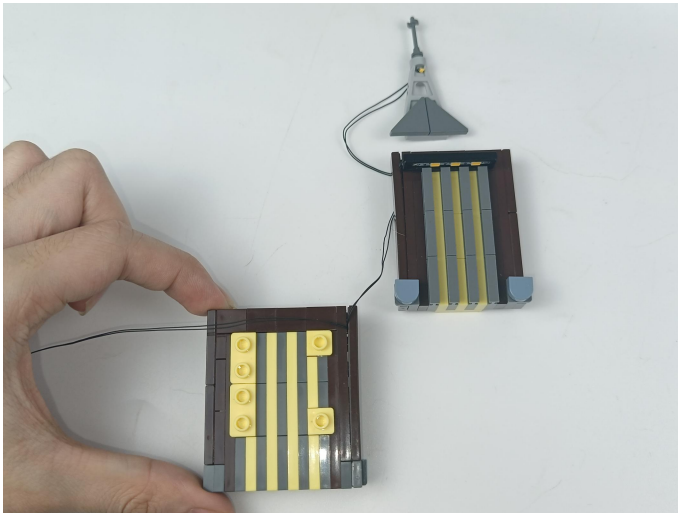



95

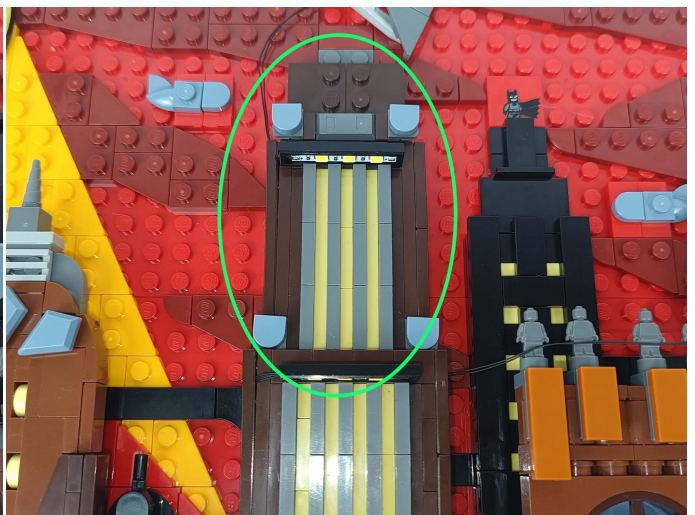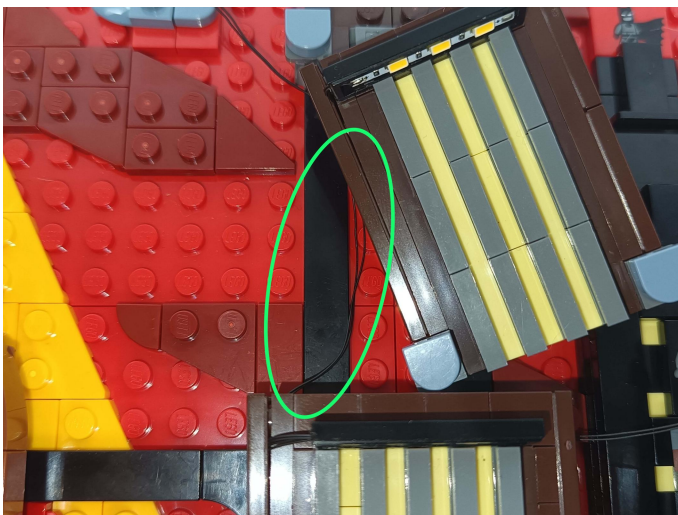


96

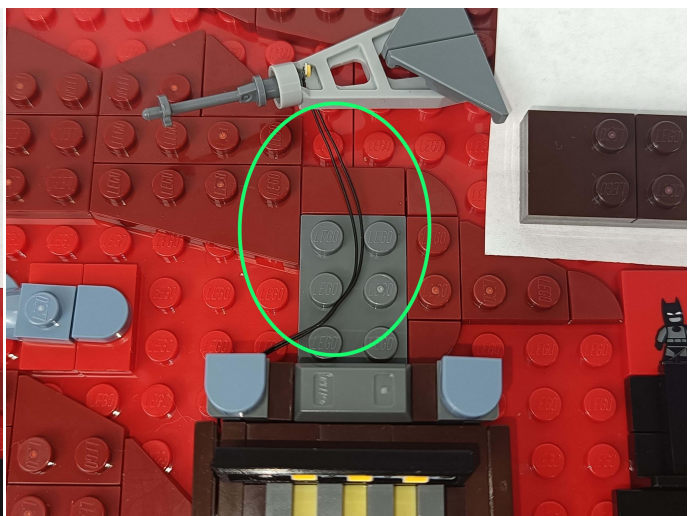

97

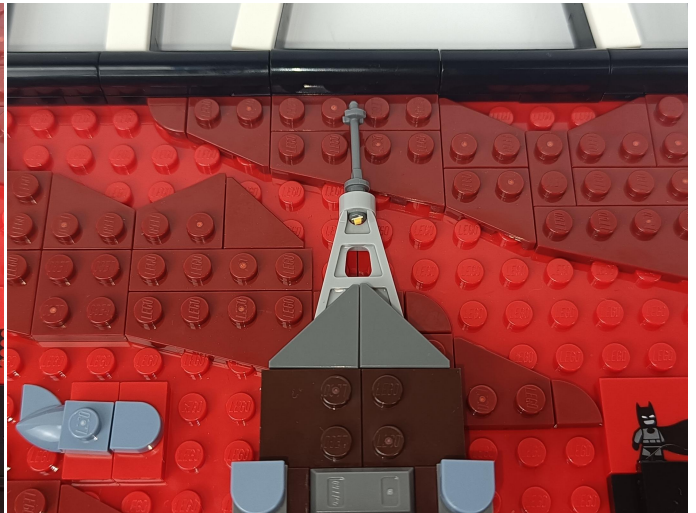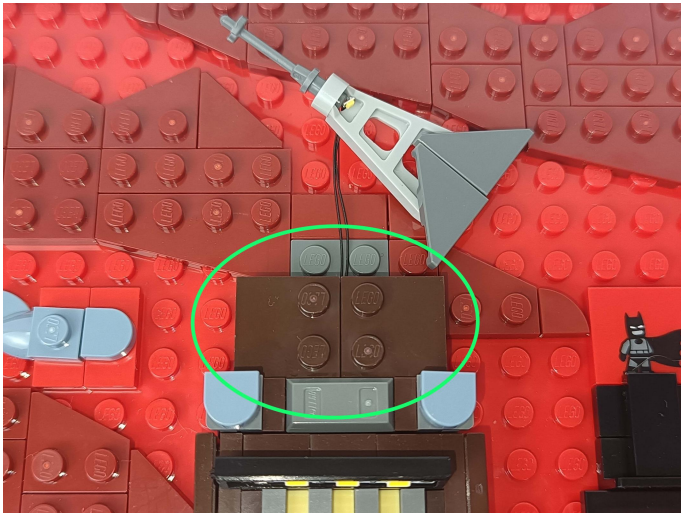

98

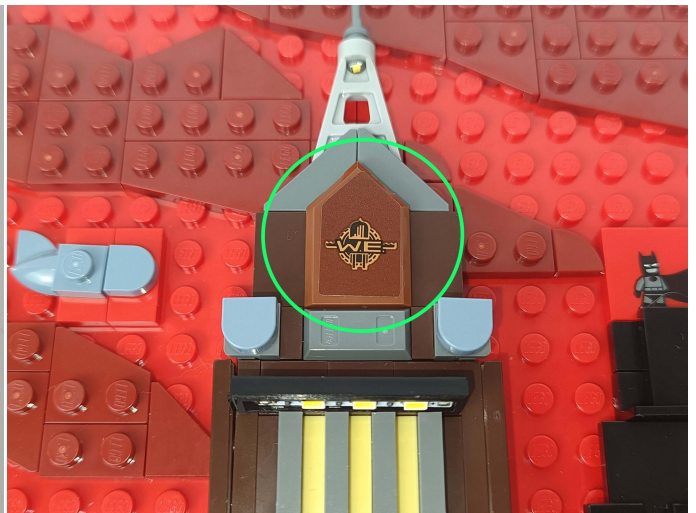


99








100

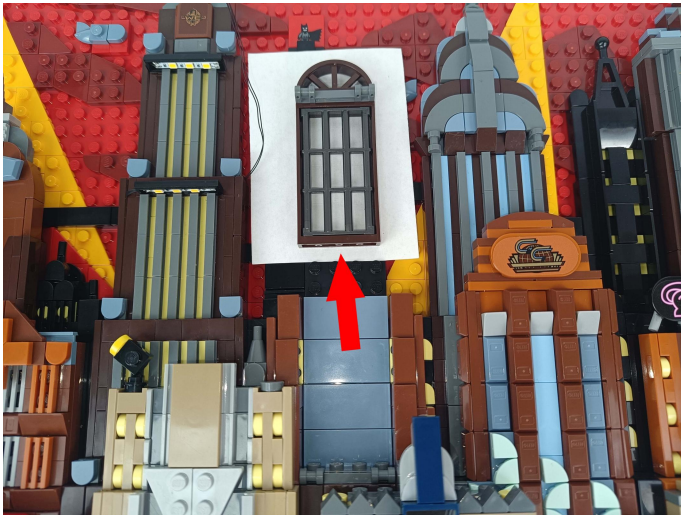



101

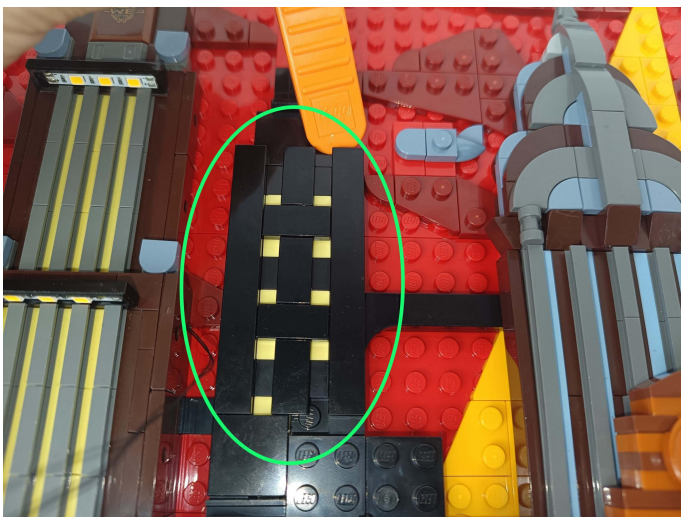


102

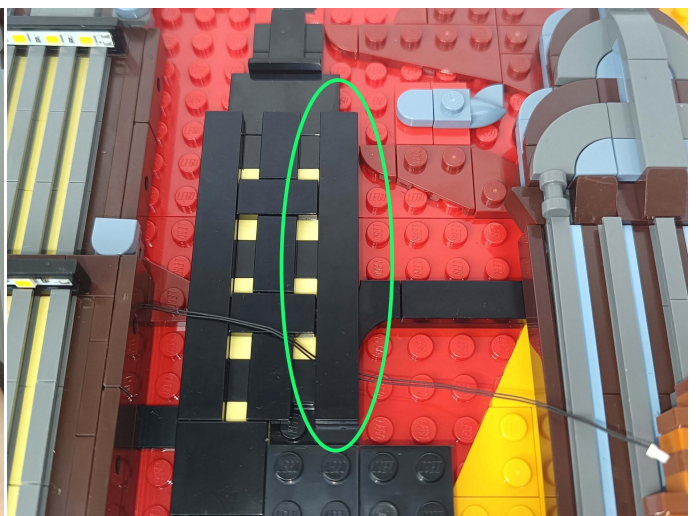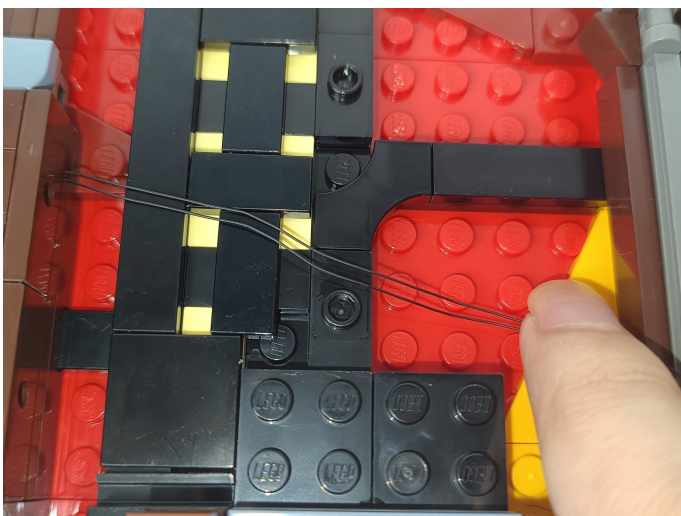



103

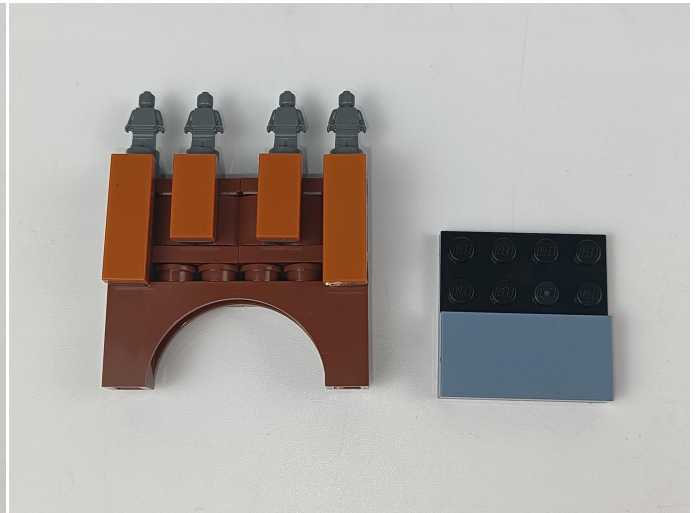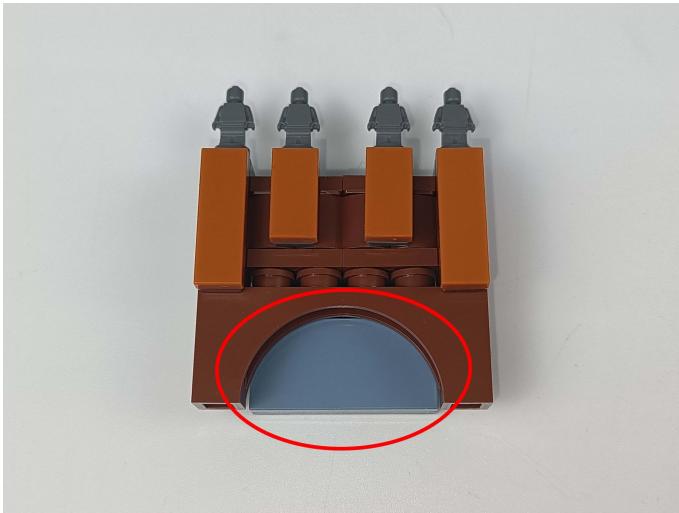


104

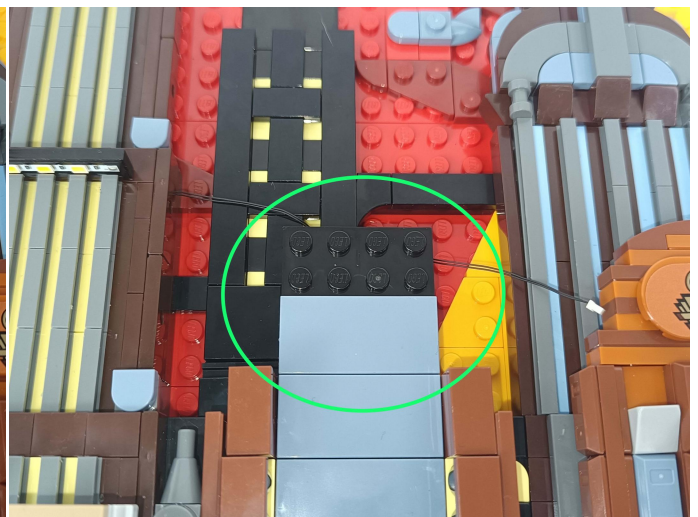


105

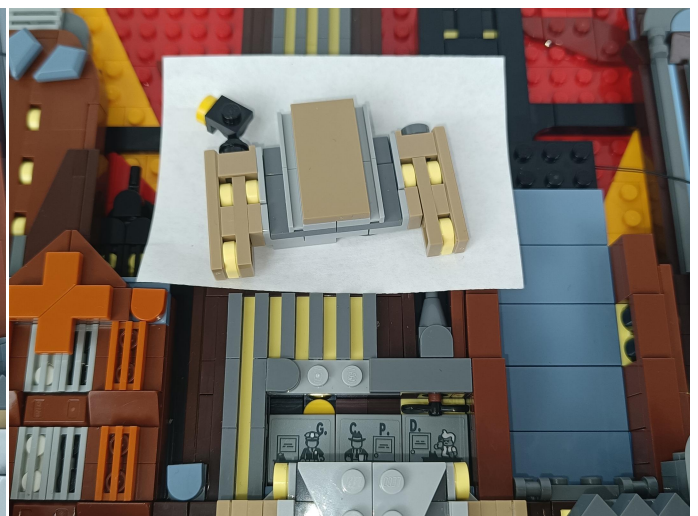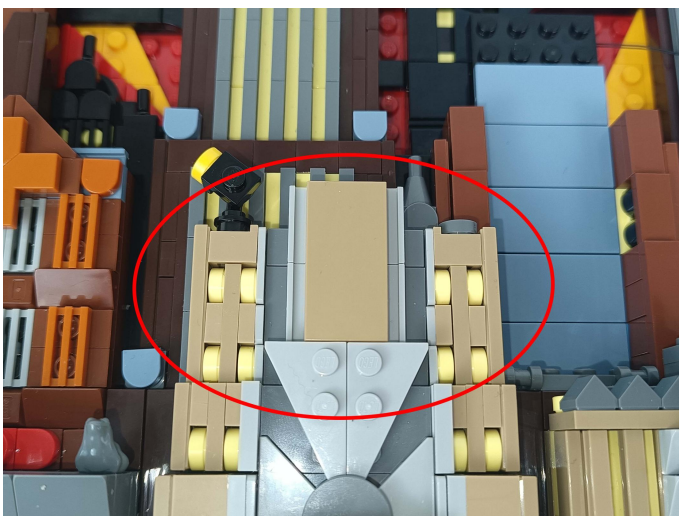



106

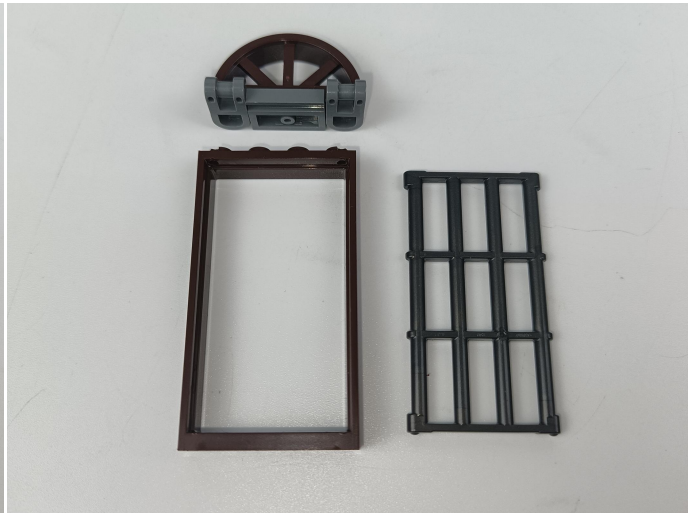



107

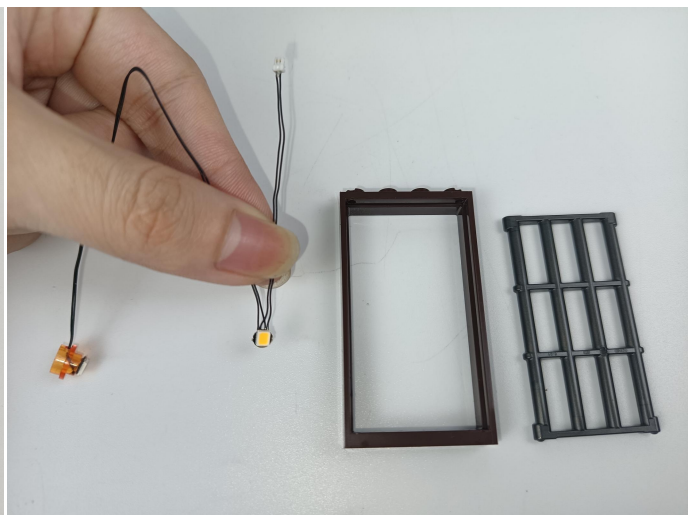



108

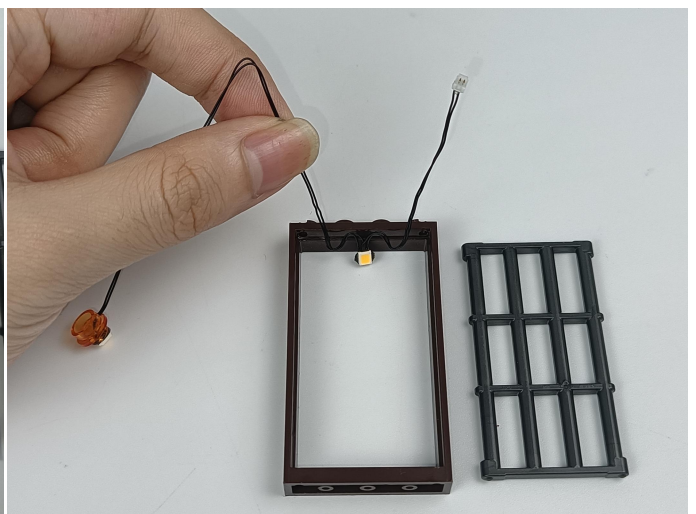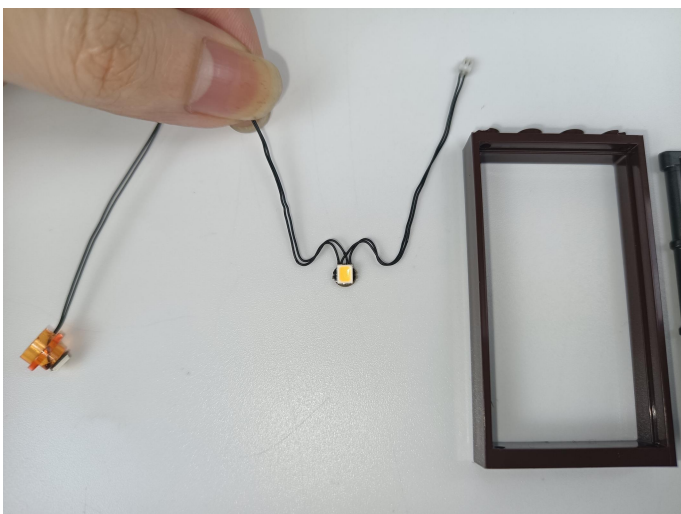


109

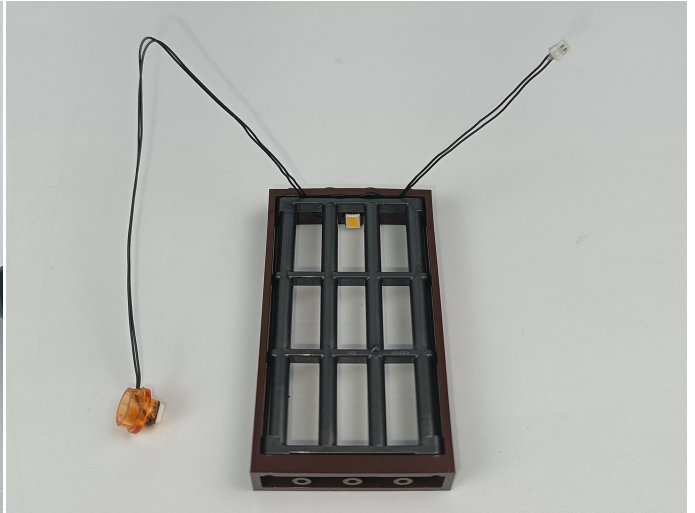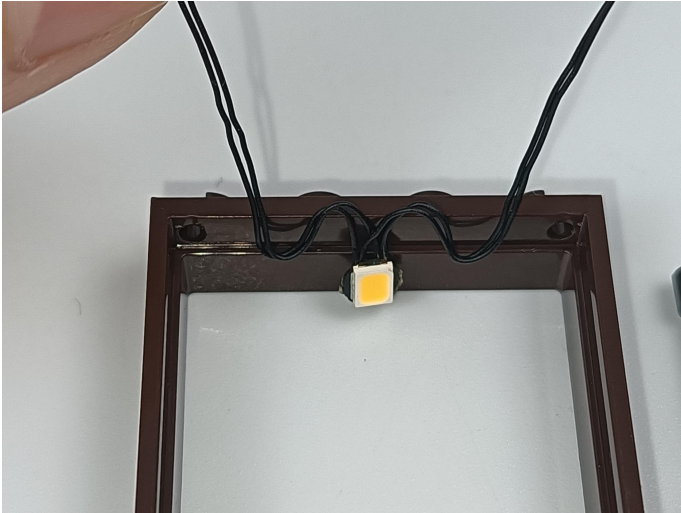



110

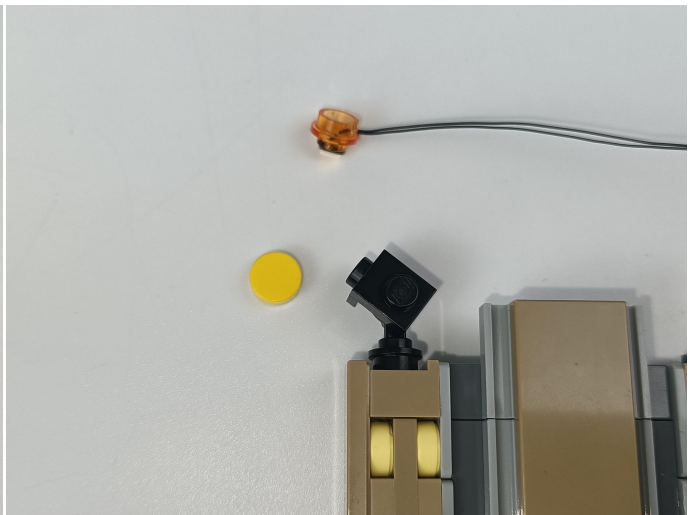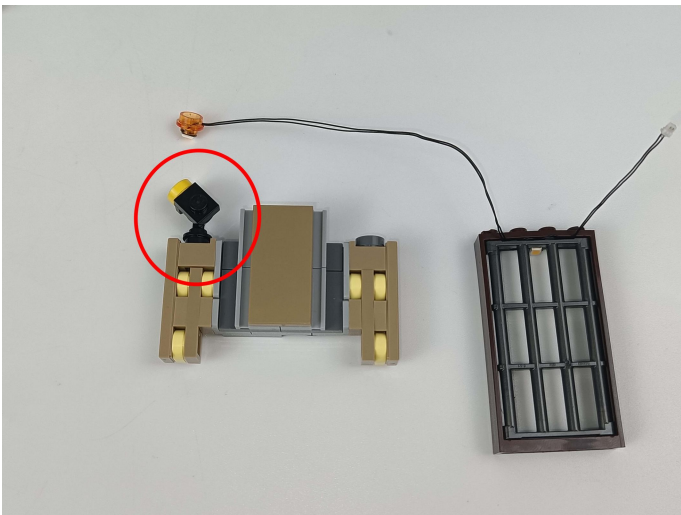

111

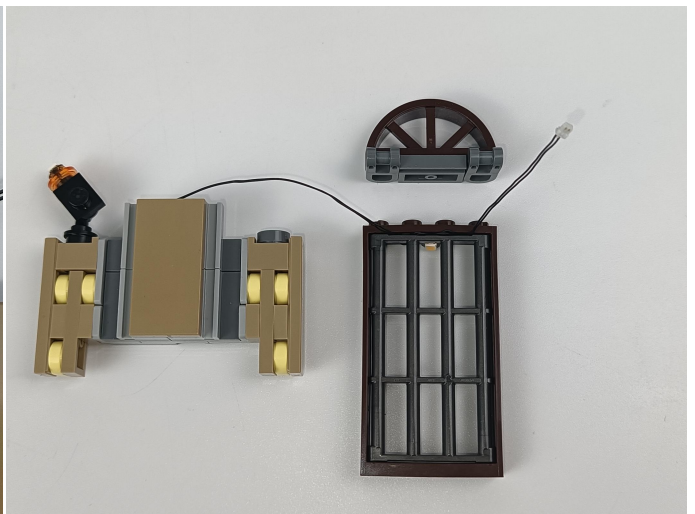


112

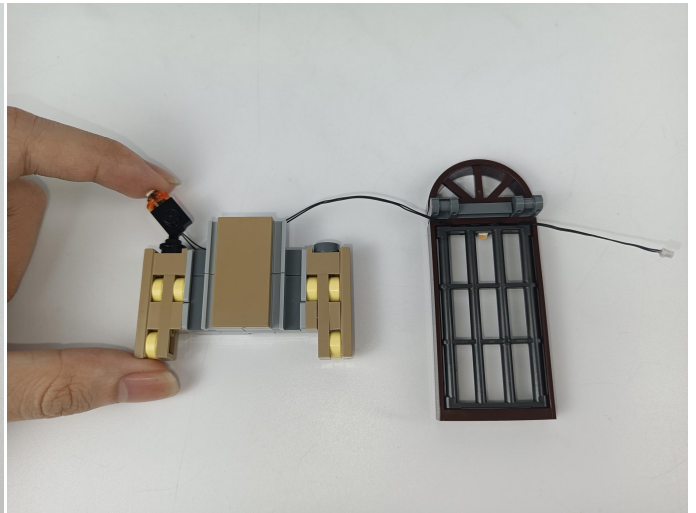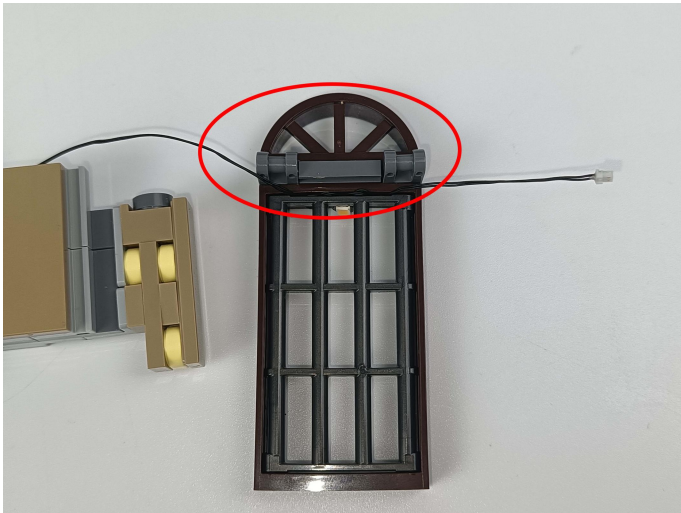



113





114

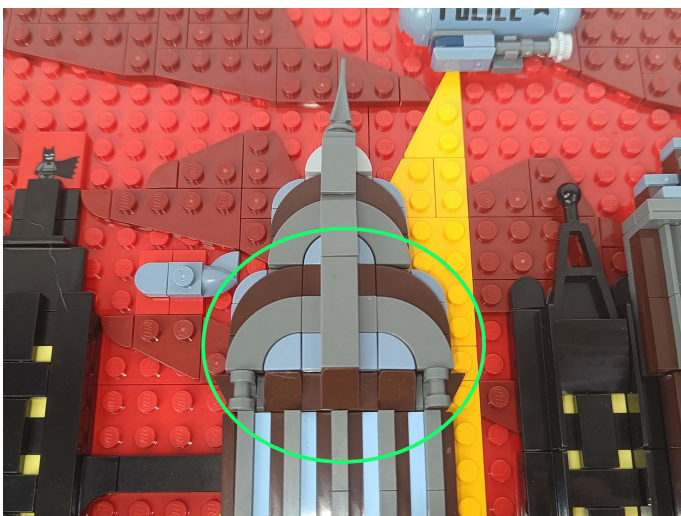


115

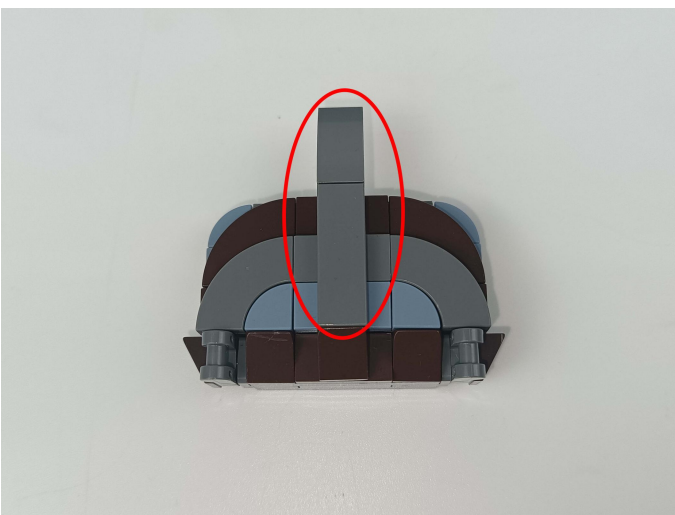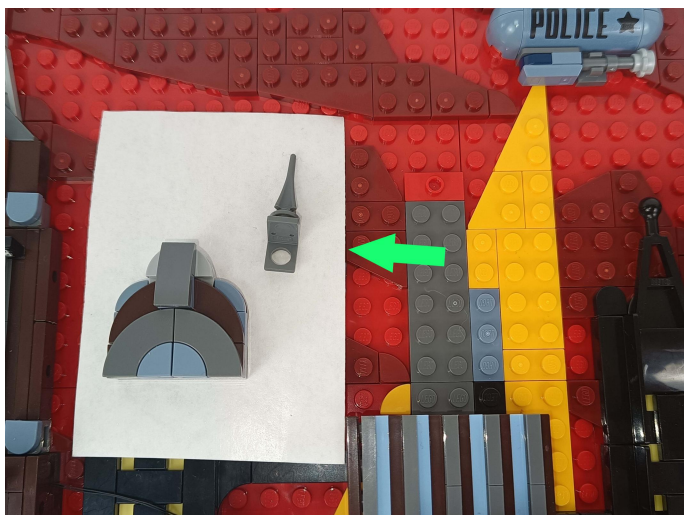


116

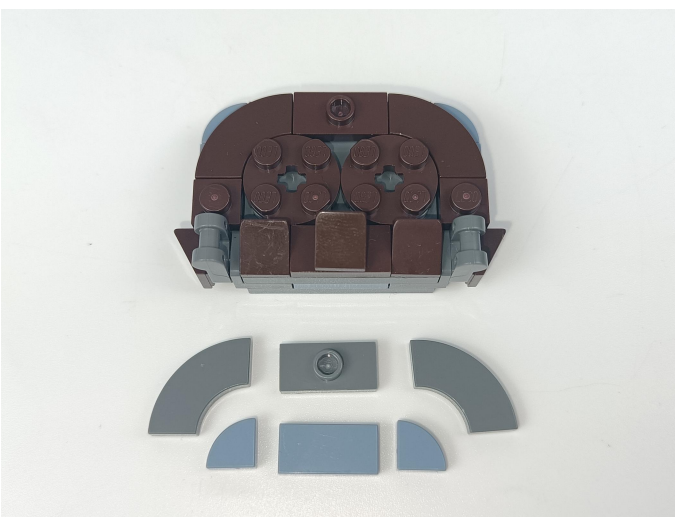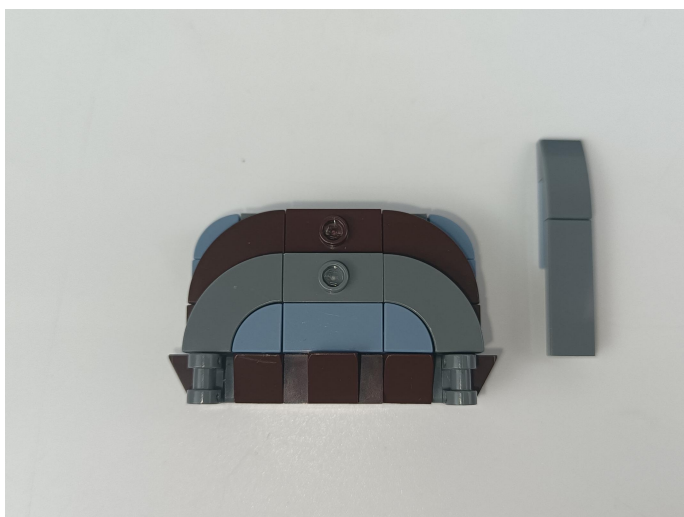



117

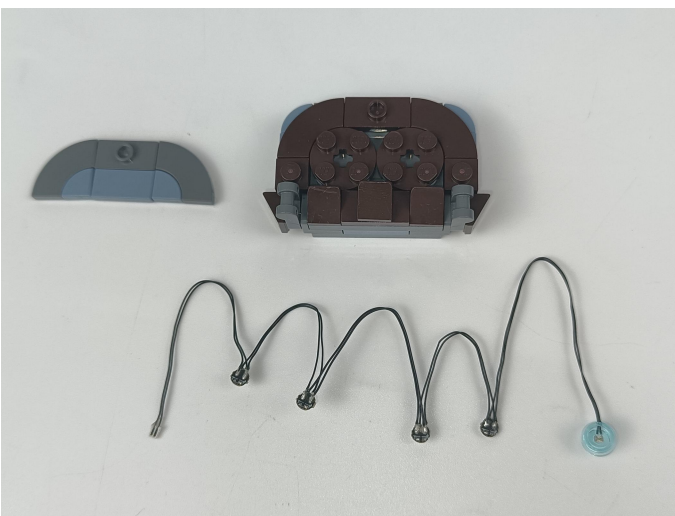



118

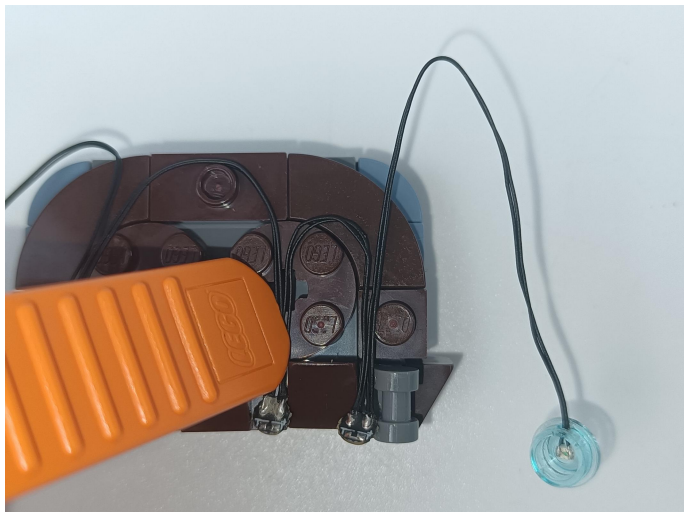


119

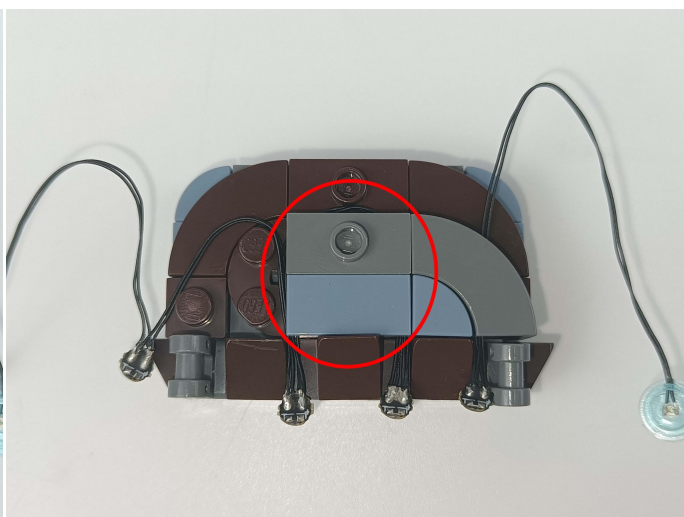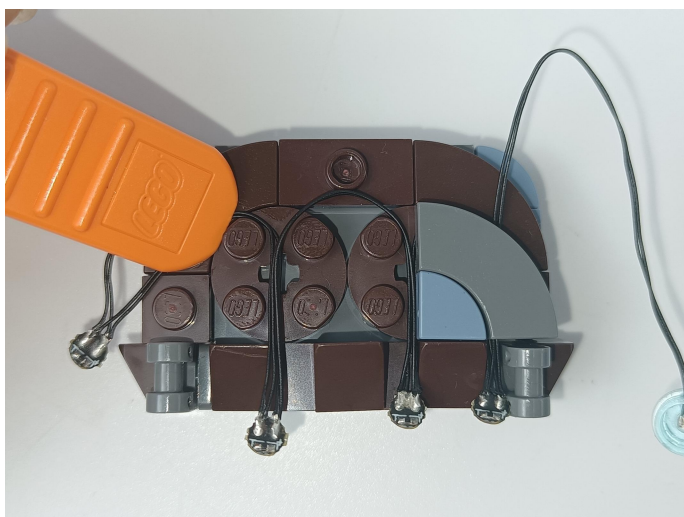



120

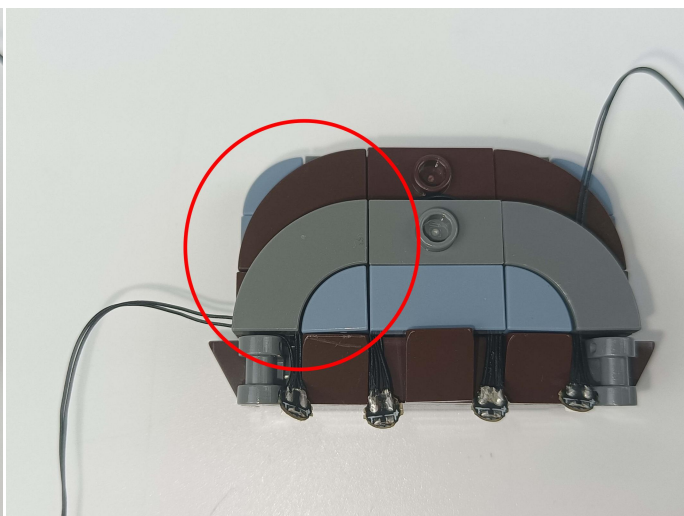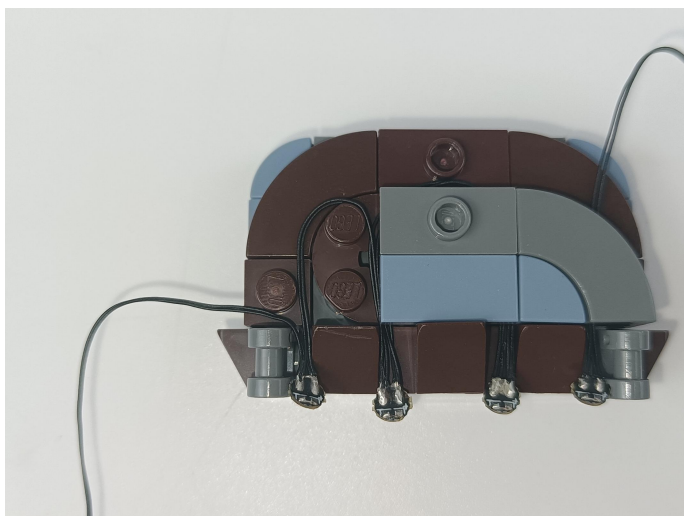



121

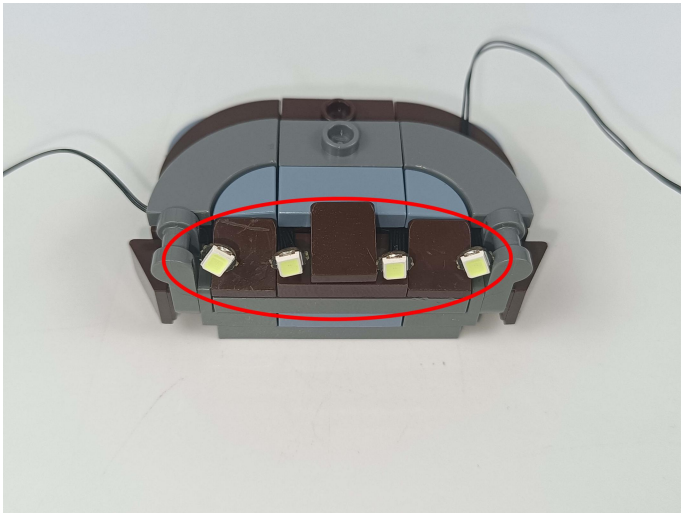

122

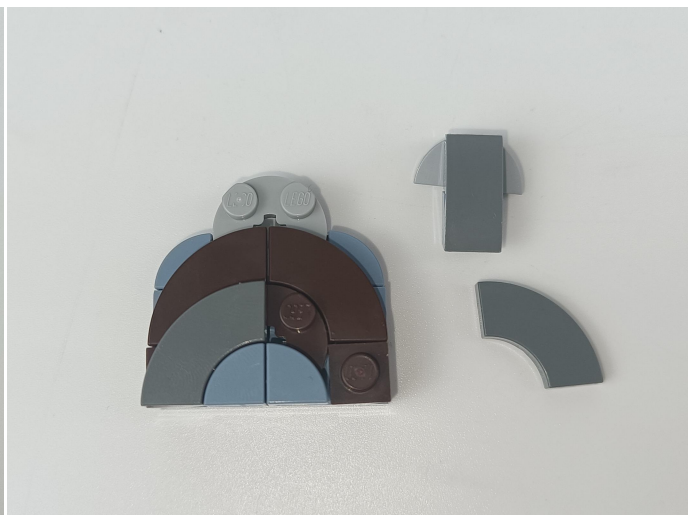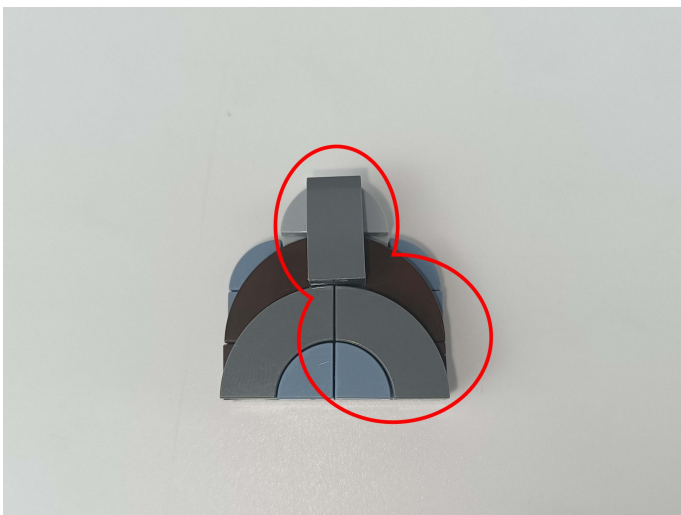


123

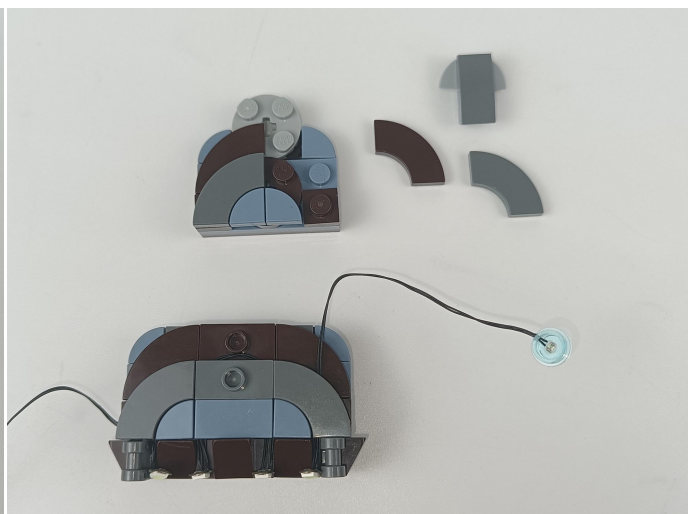
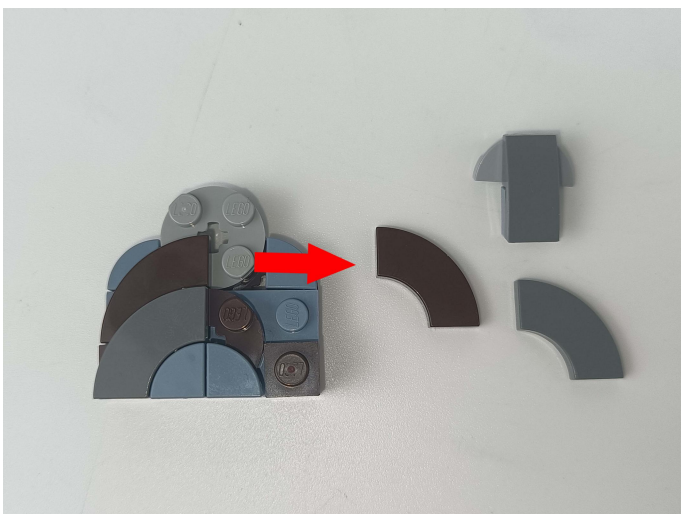





124

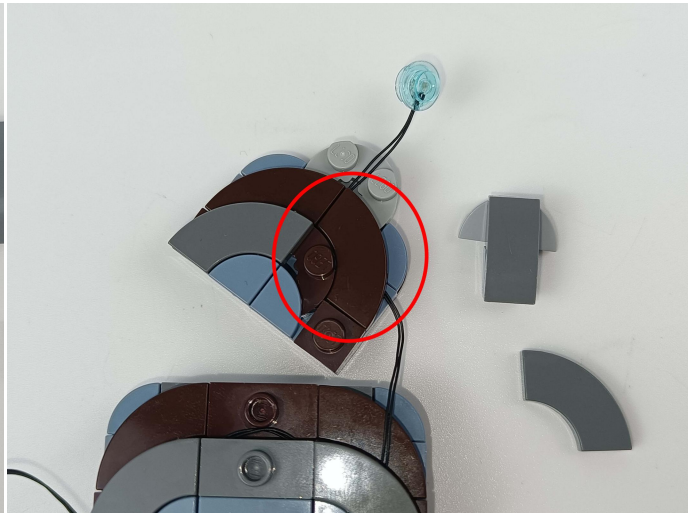


125

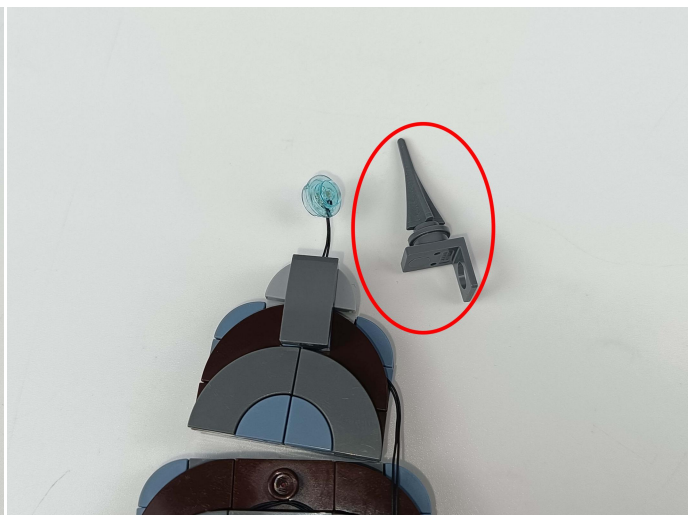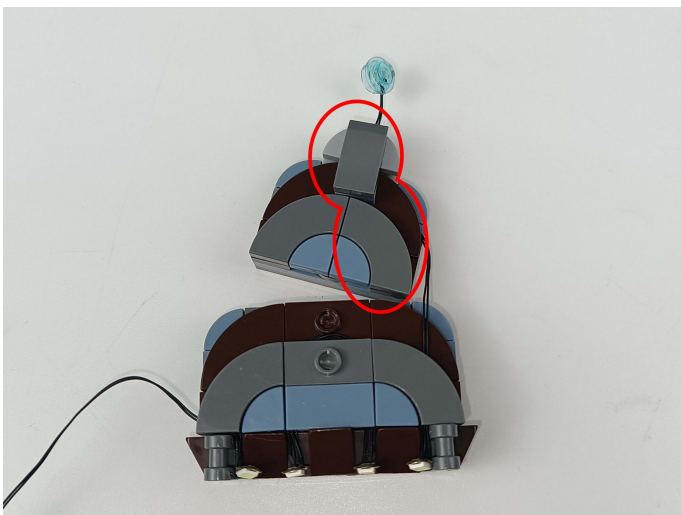


126

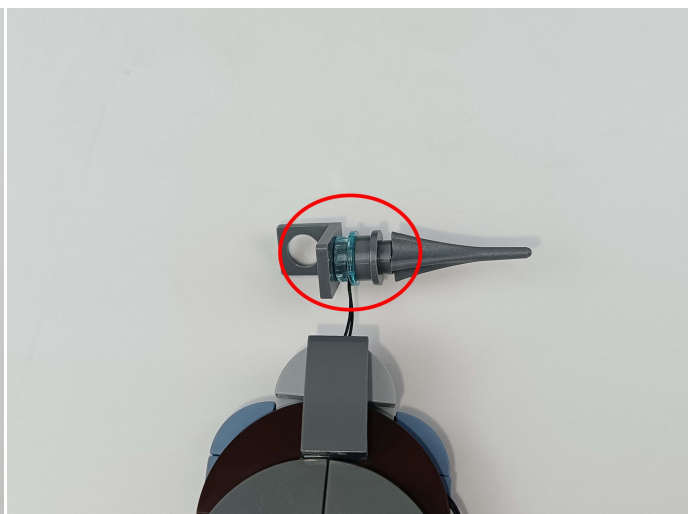


127

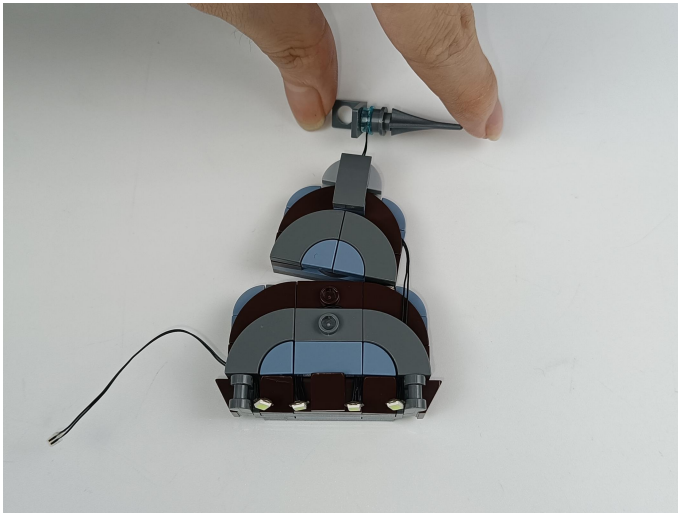

128

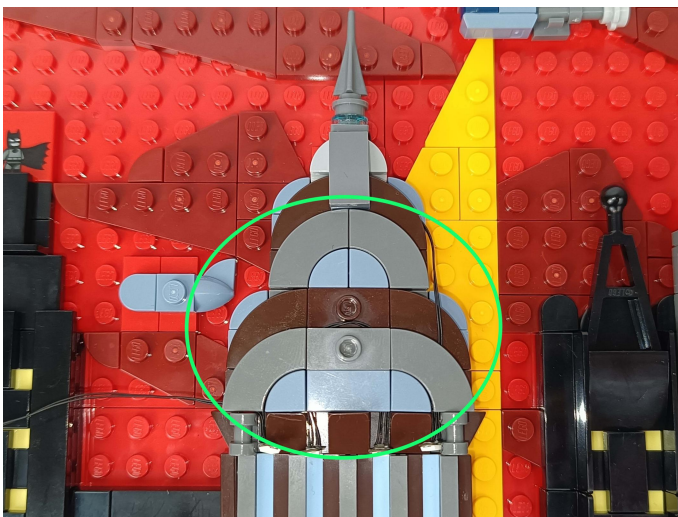

129

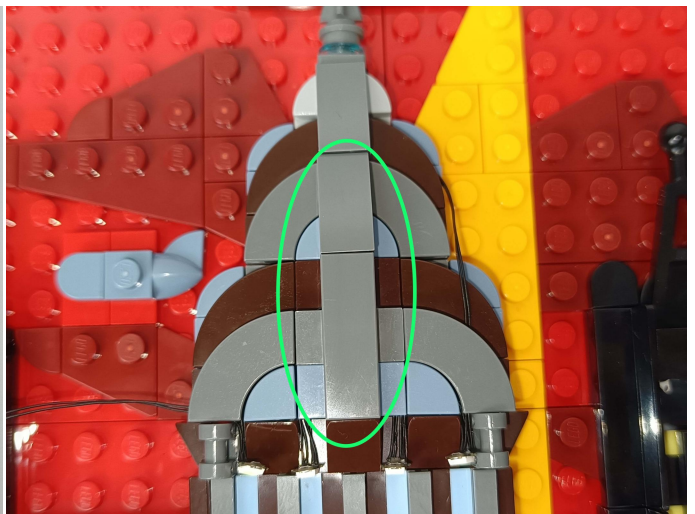


130




131




132

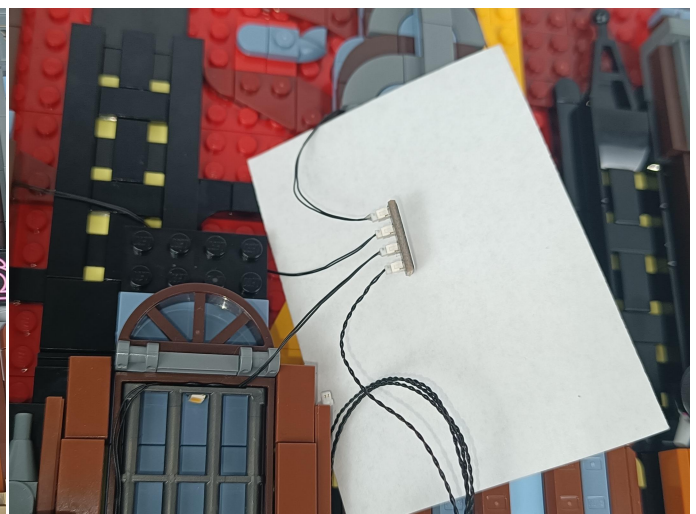

133

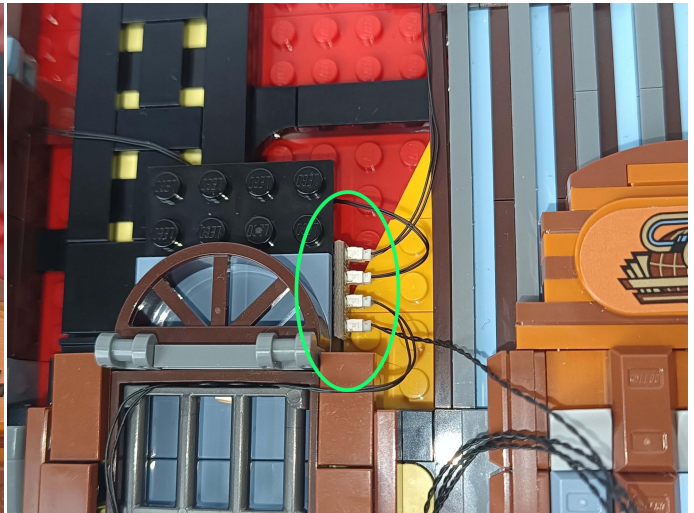

134

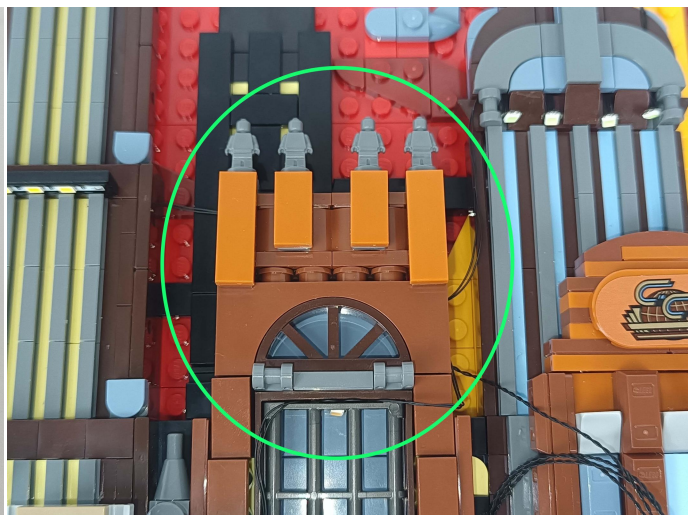


135




136




137

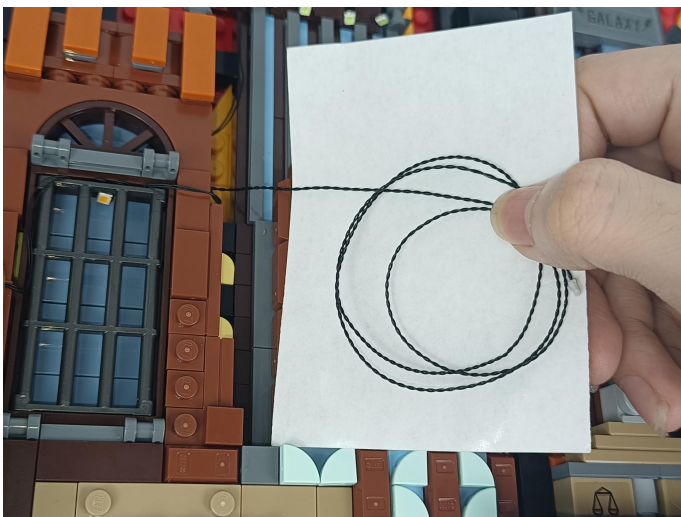

138

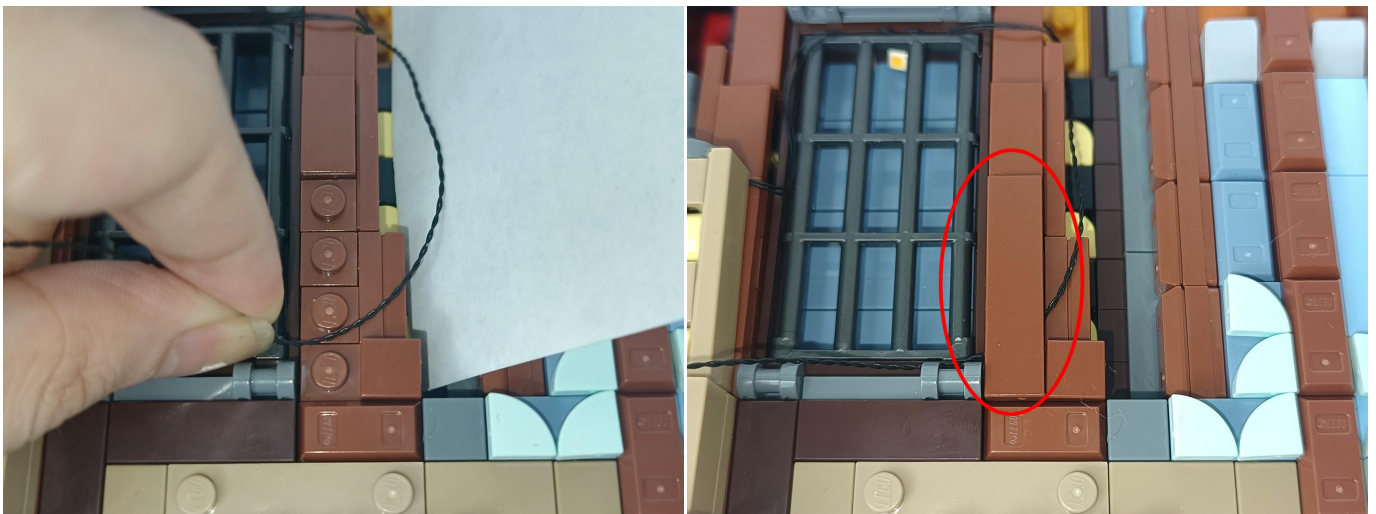


139

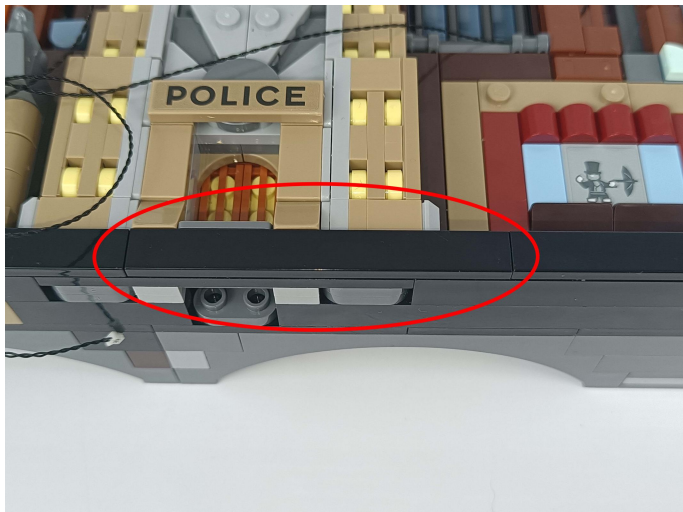

140




141

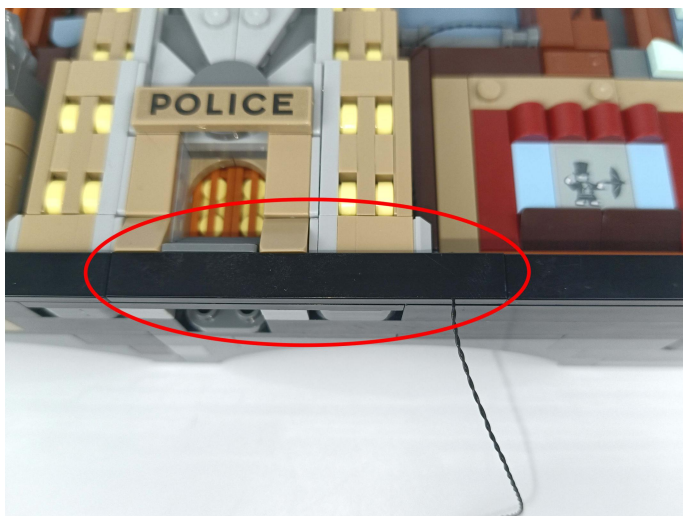


142




143

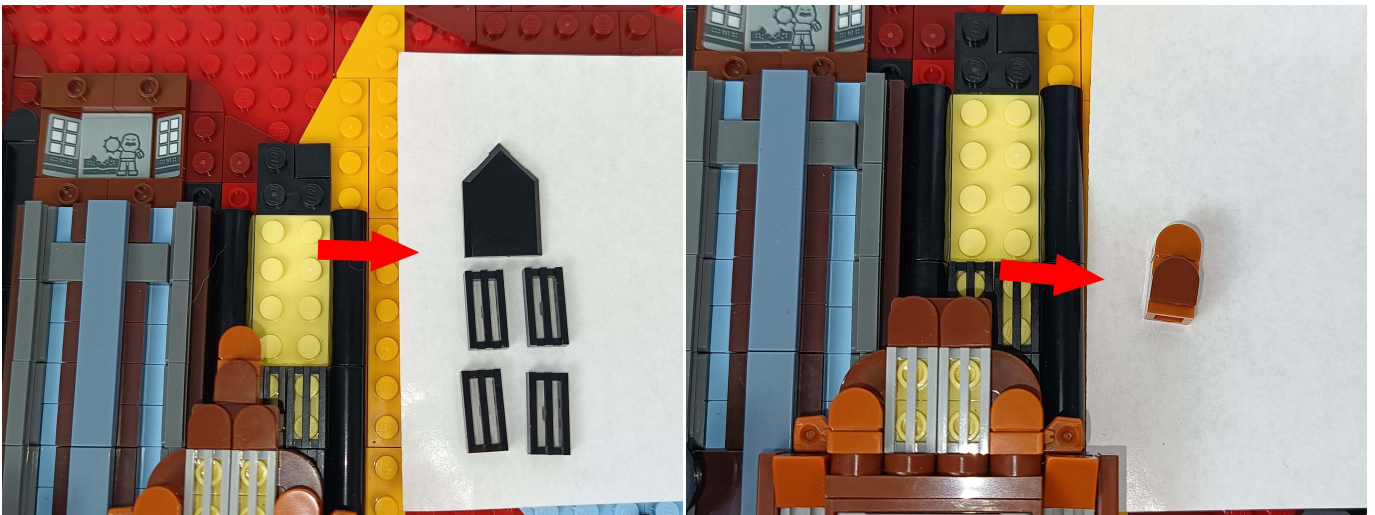


144

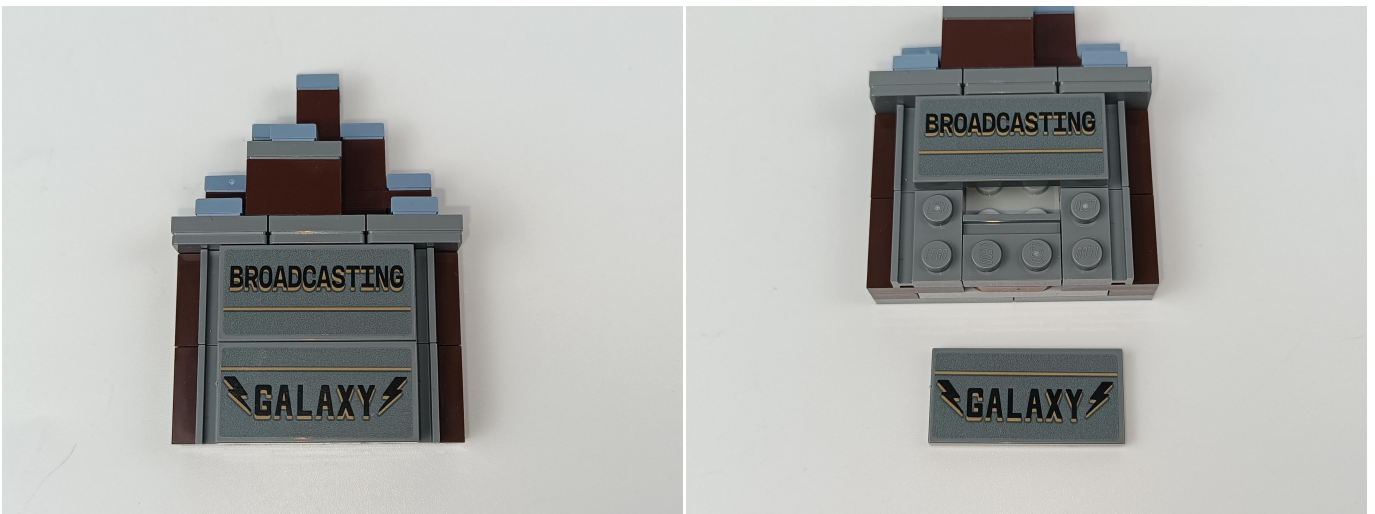


145

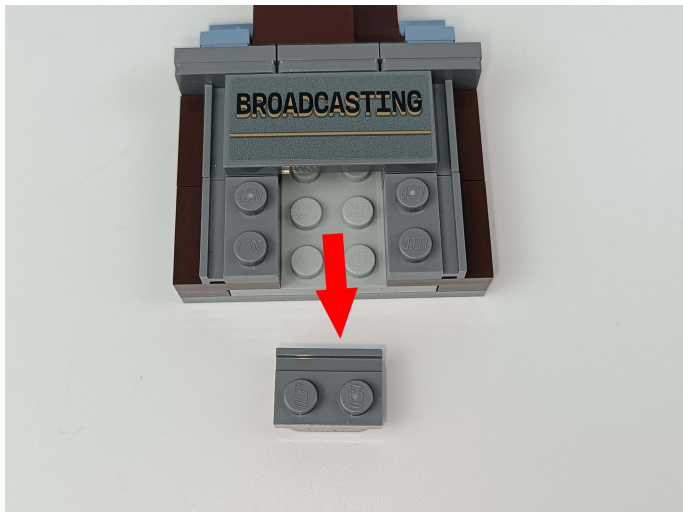

146

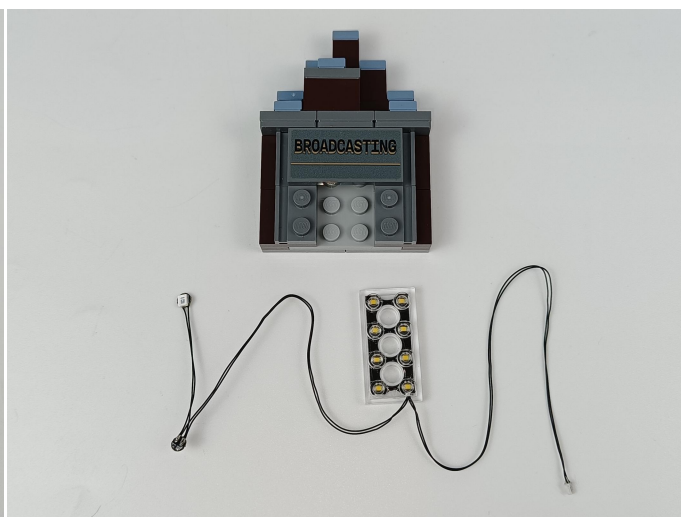


147

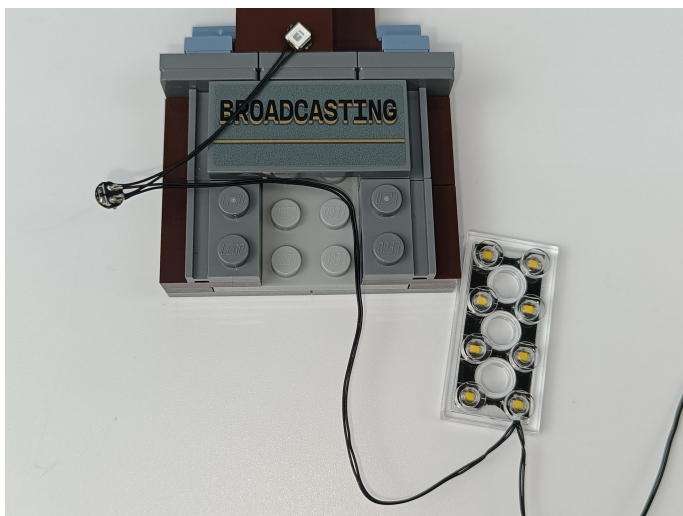




148

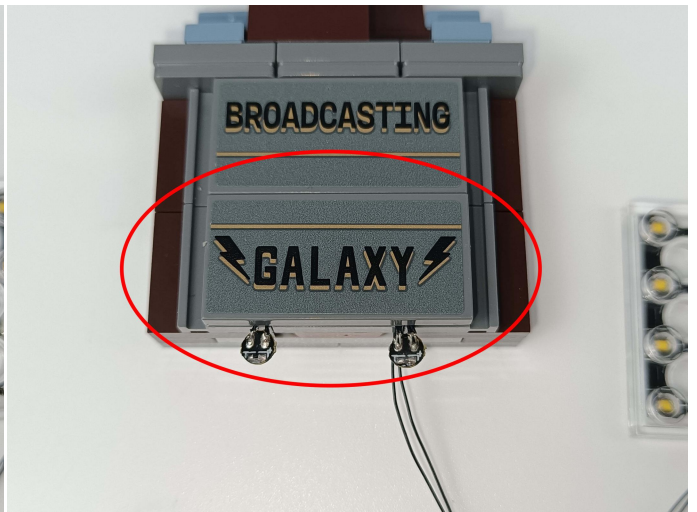

149




150

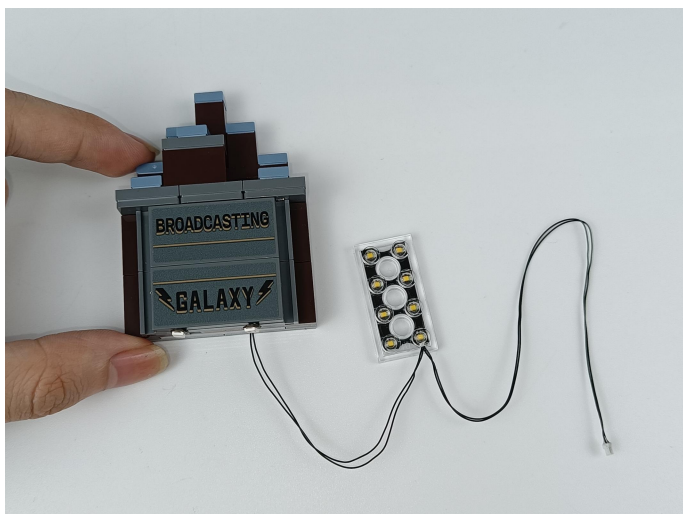


151



152

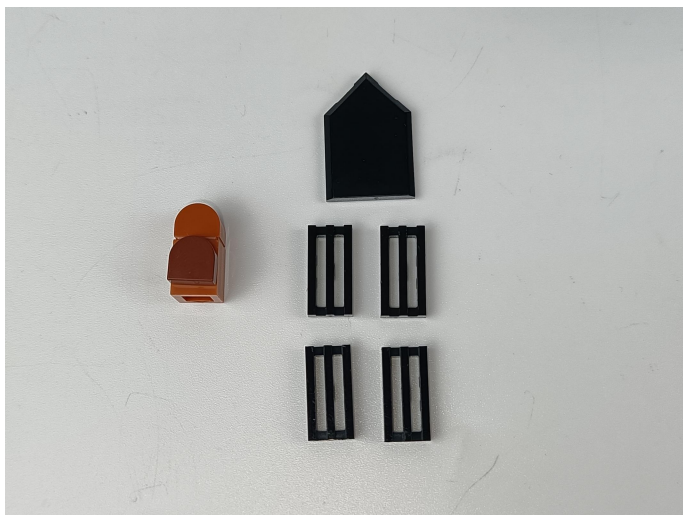


153

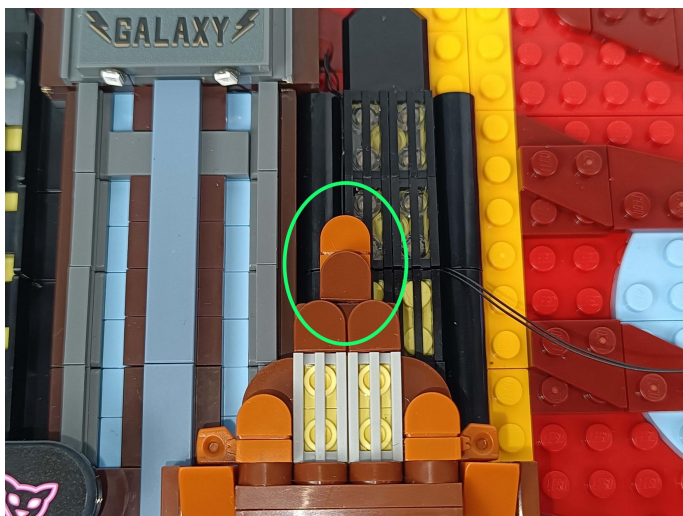


154





155

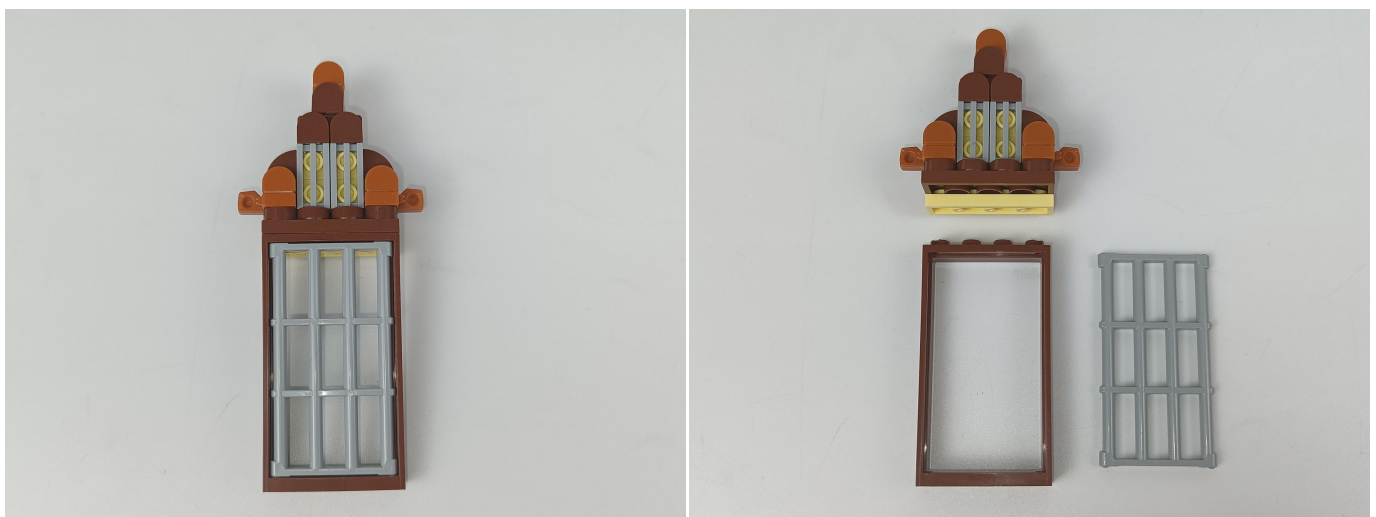


156

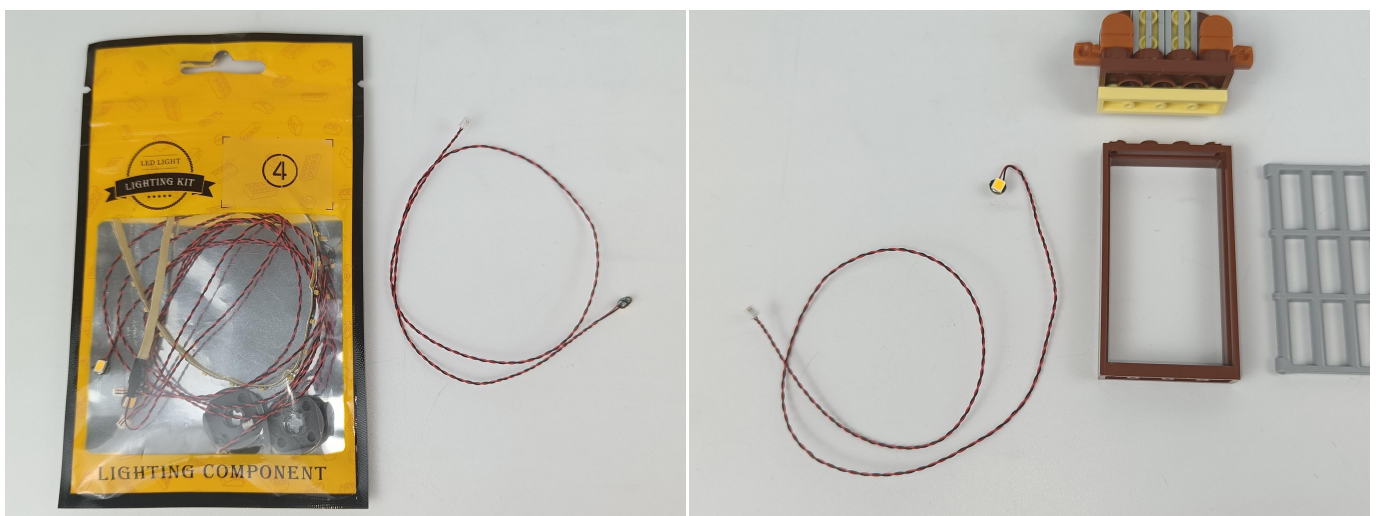

157

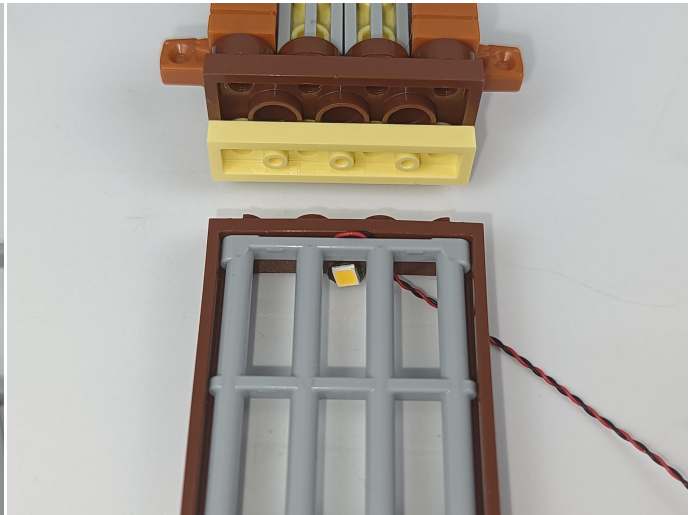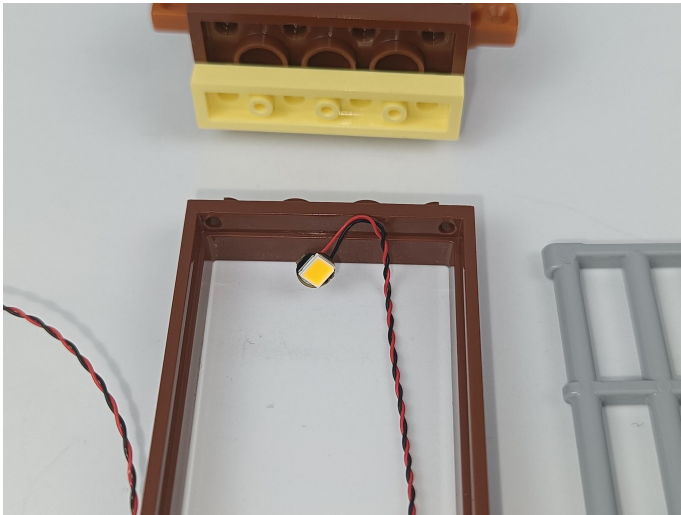

158

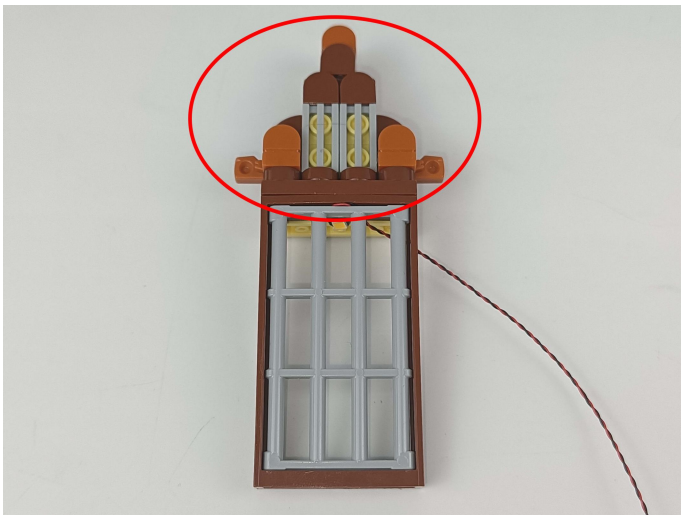

159





160



161



162

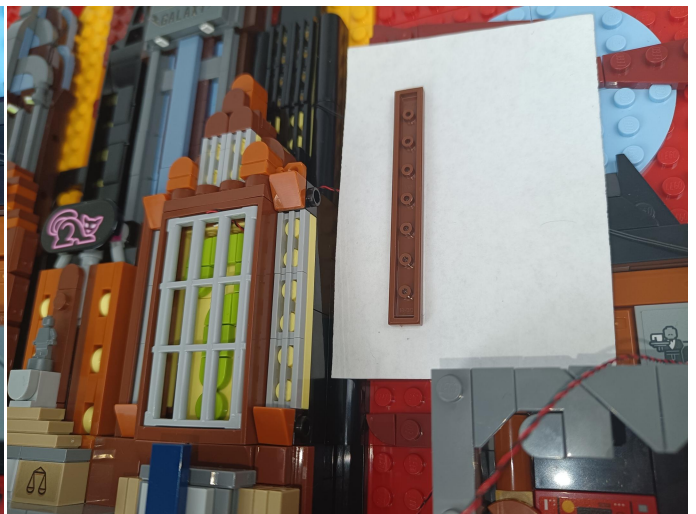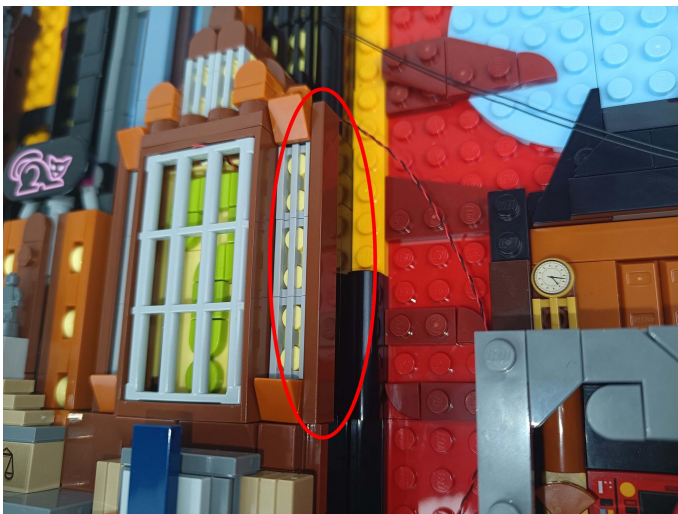

163





164



165




166

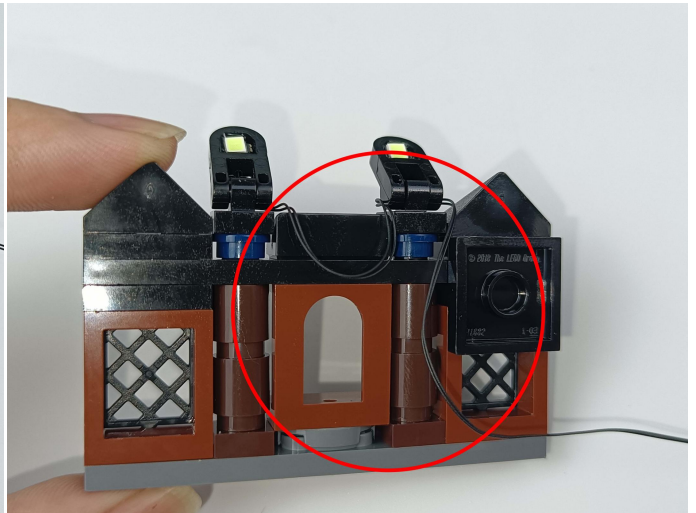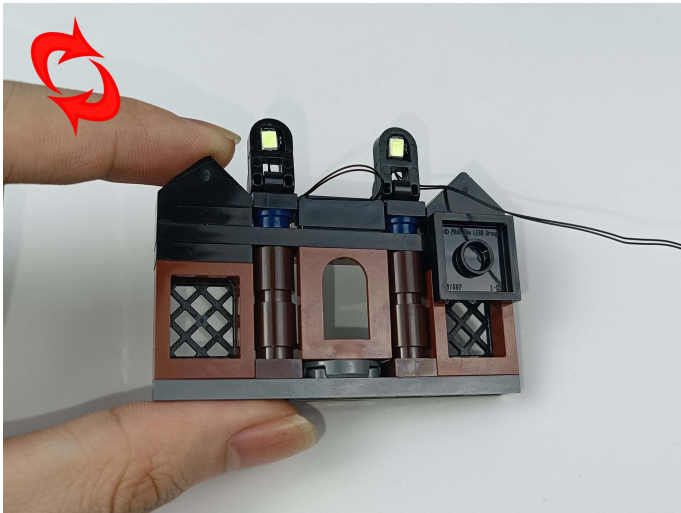

167




168

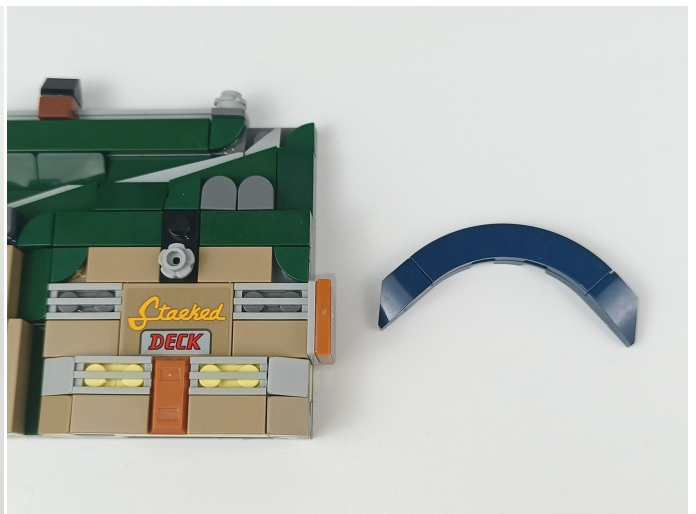


169



170

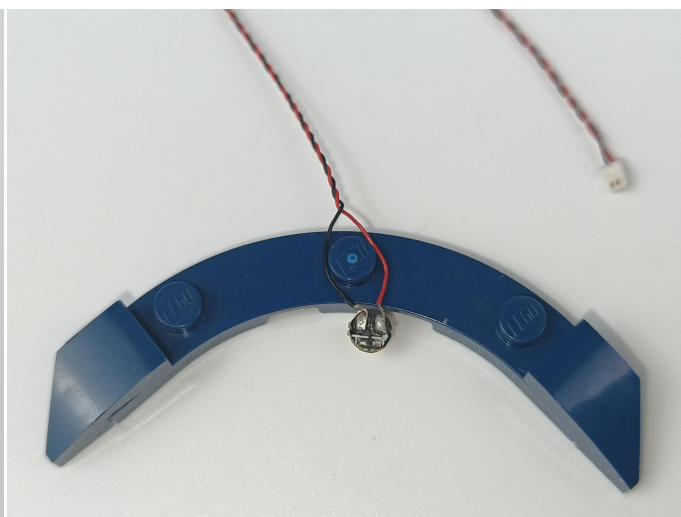

171


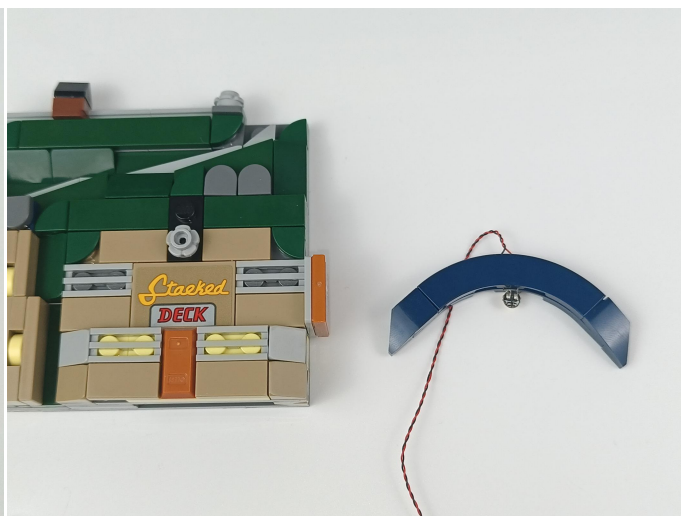





172



173

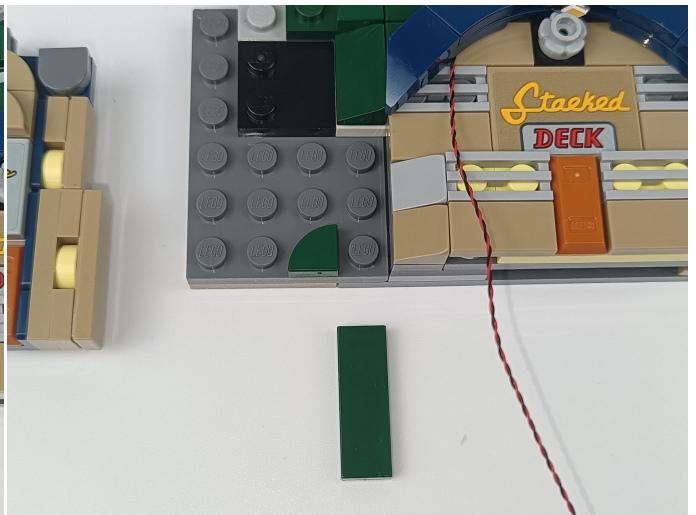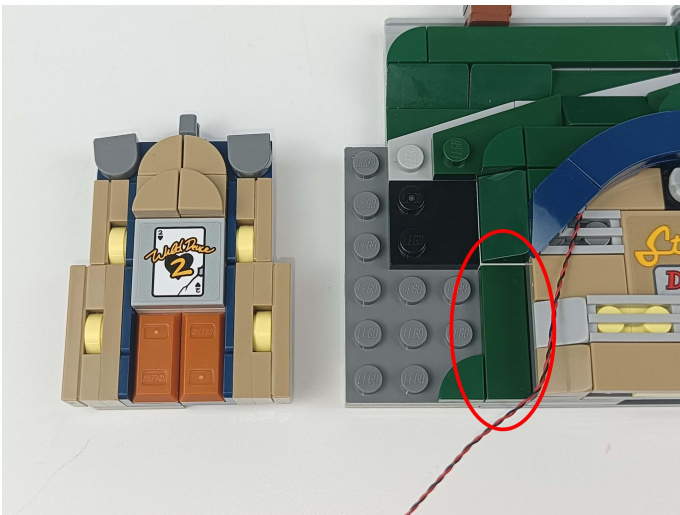



174

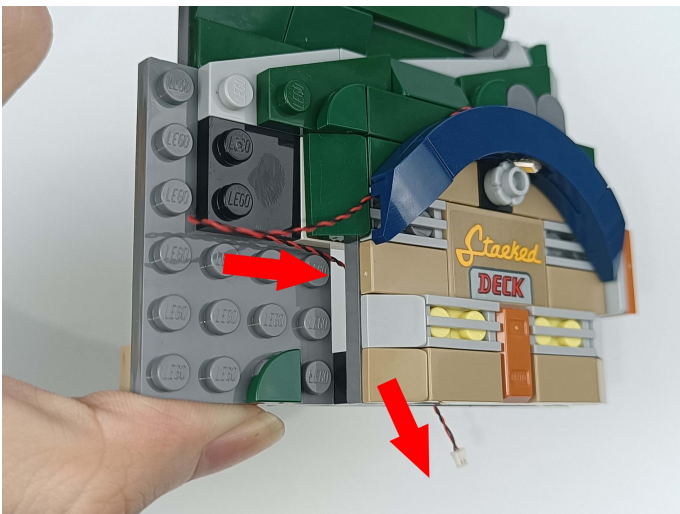


175



176

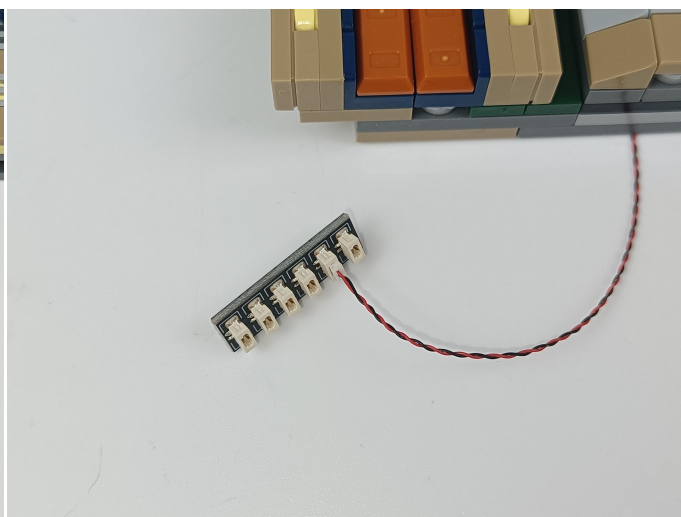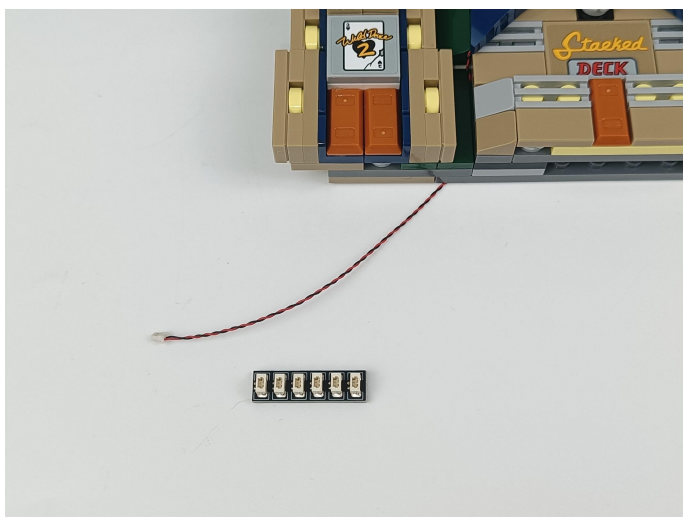


177

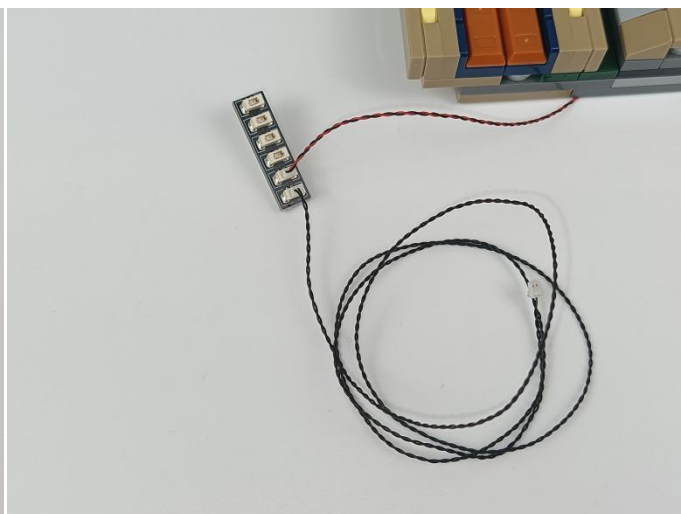



178



179

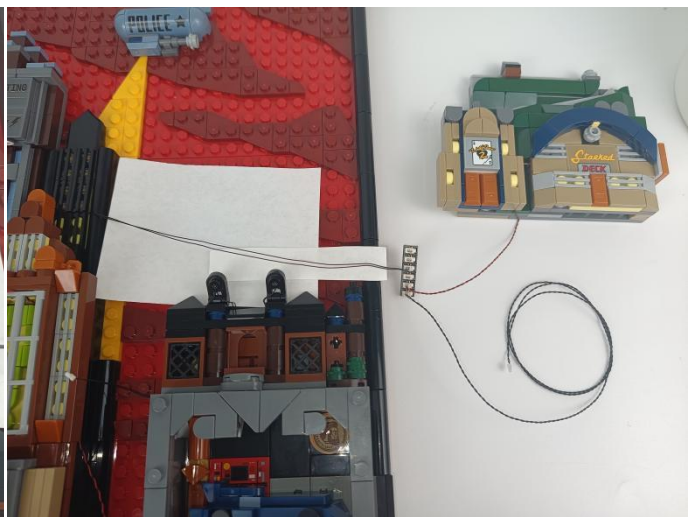


180

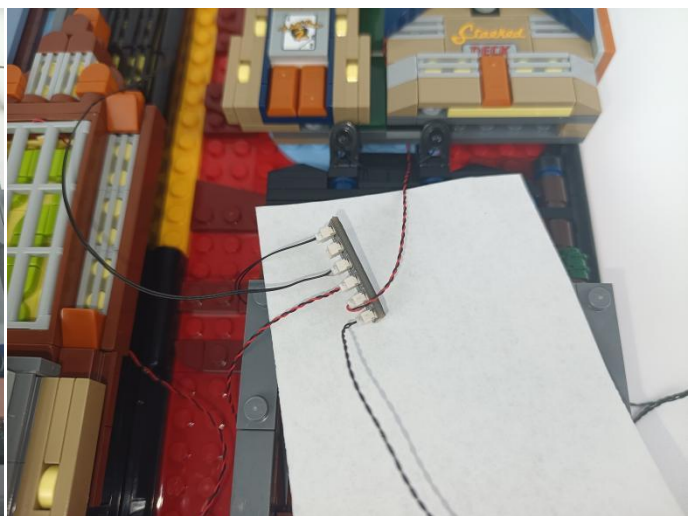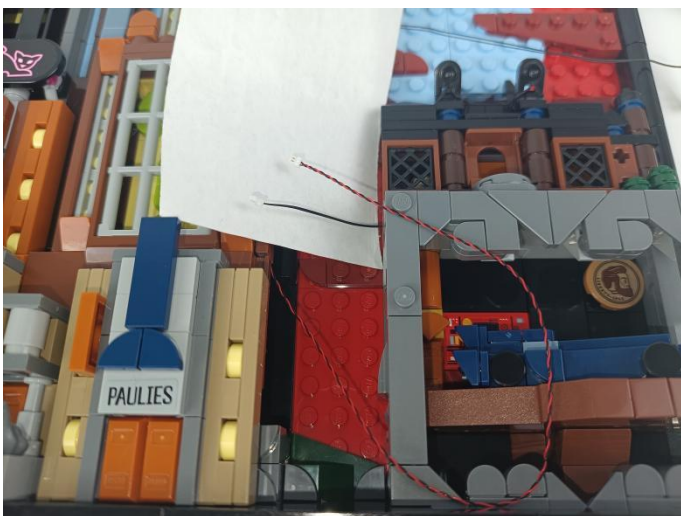



181



182

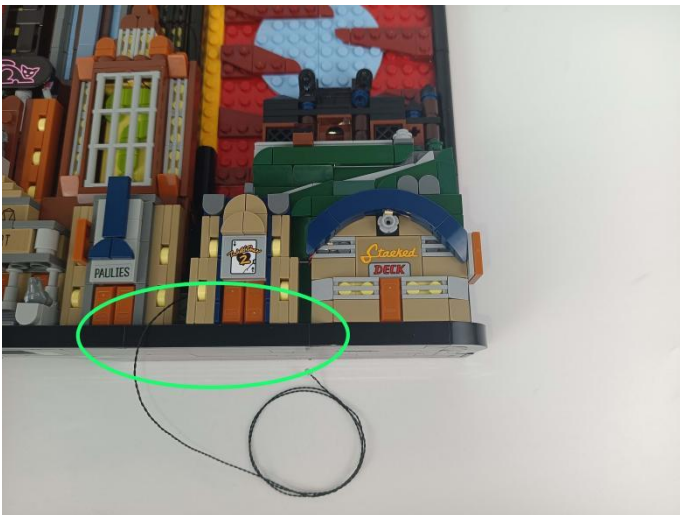



183

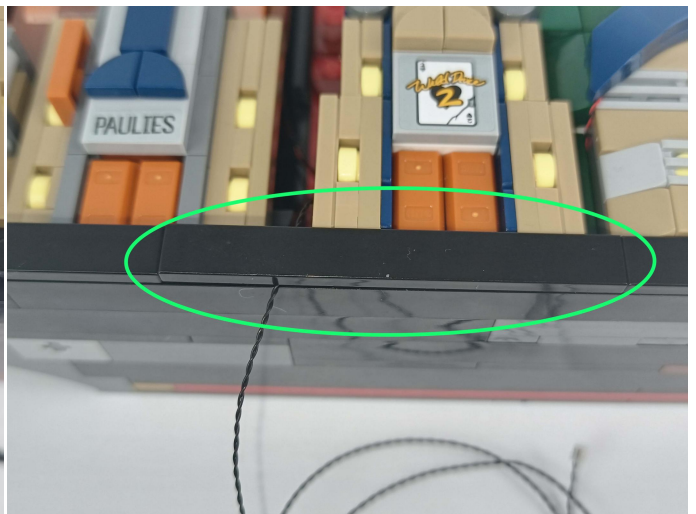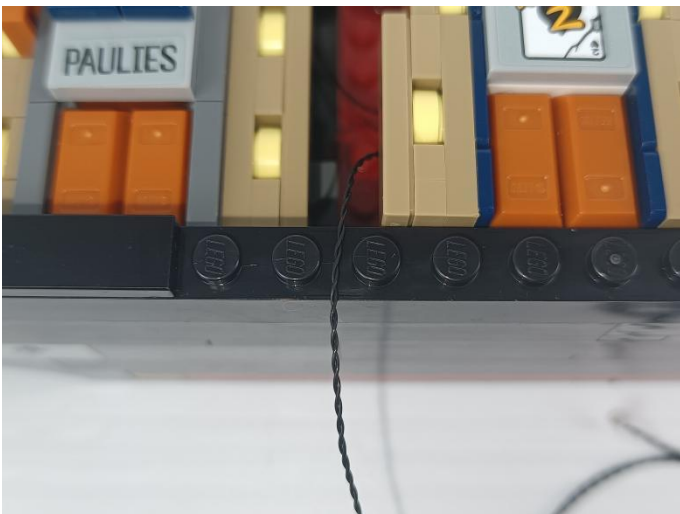


184





185

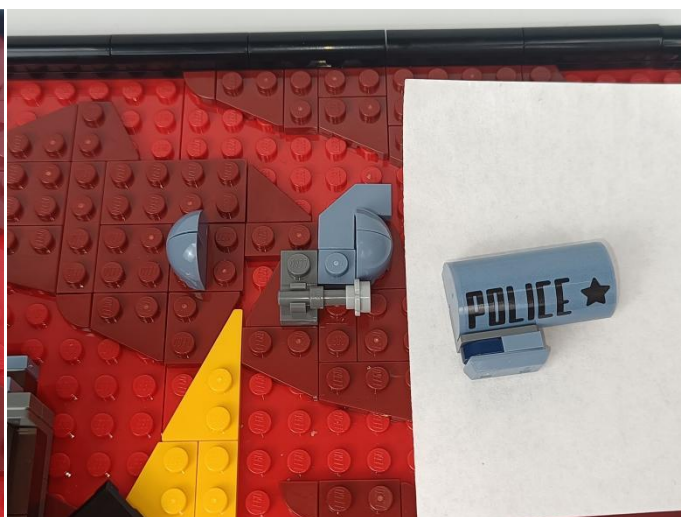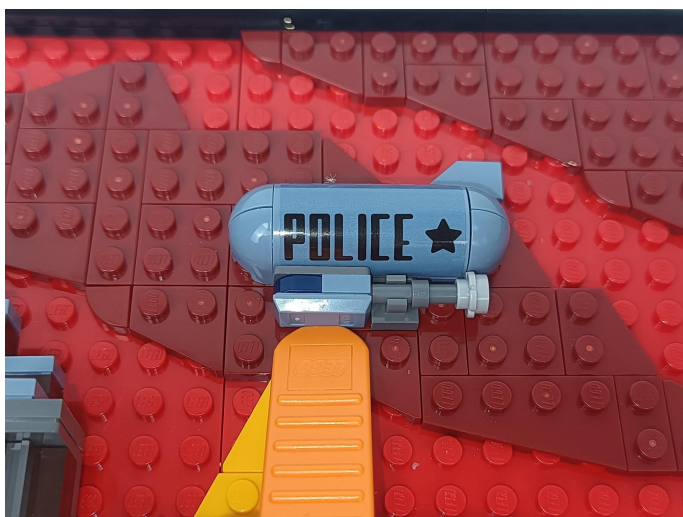



186

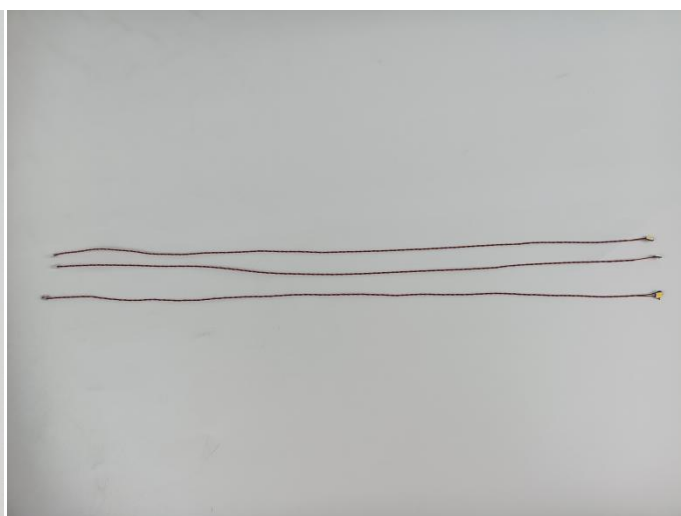


187

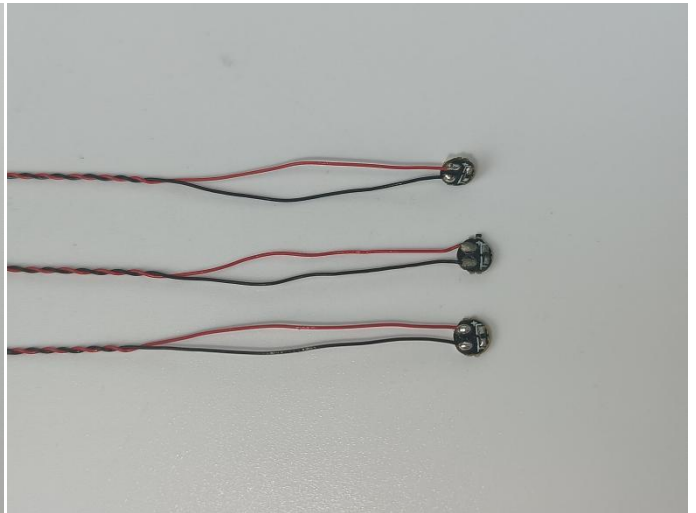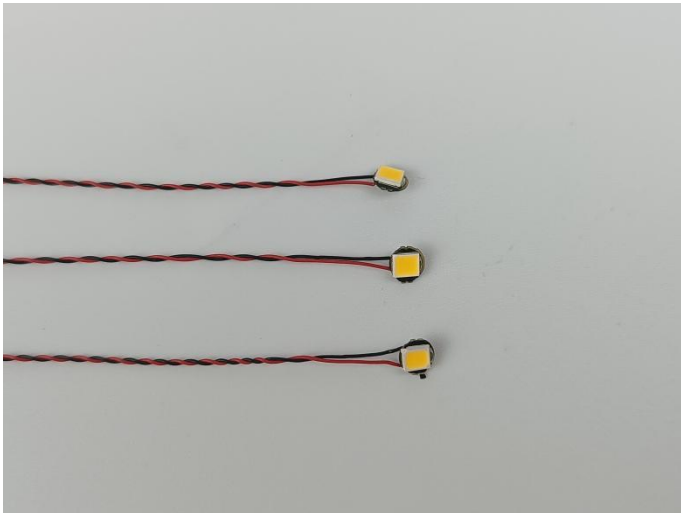



188

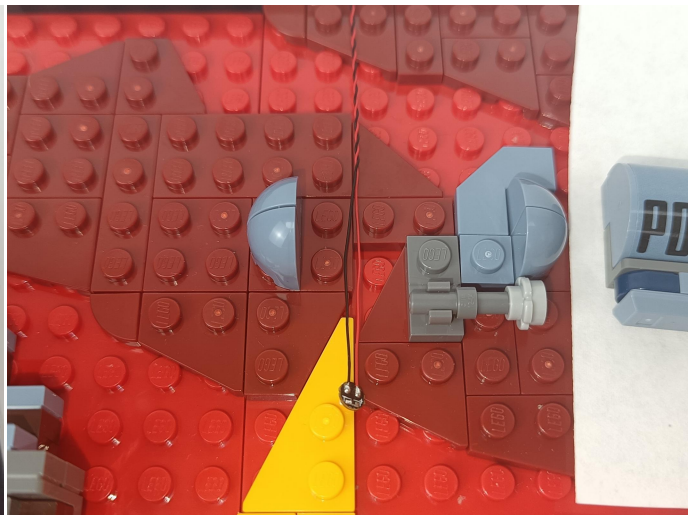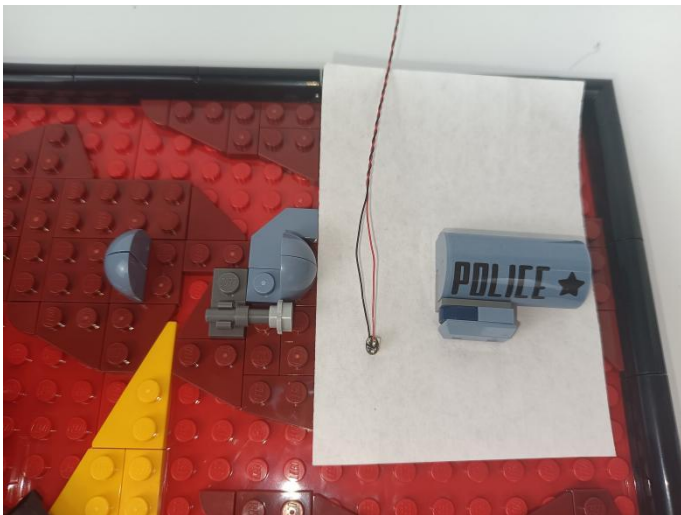


189

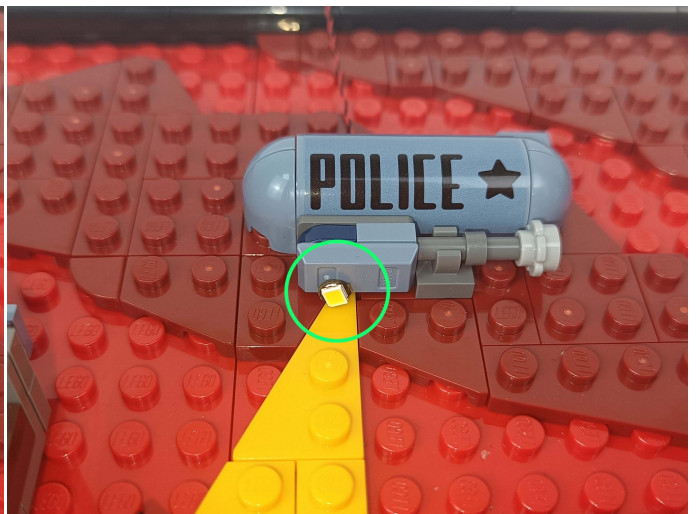


190

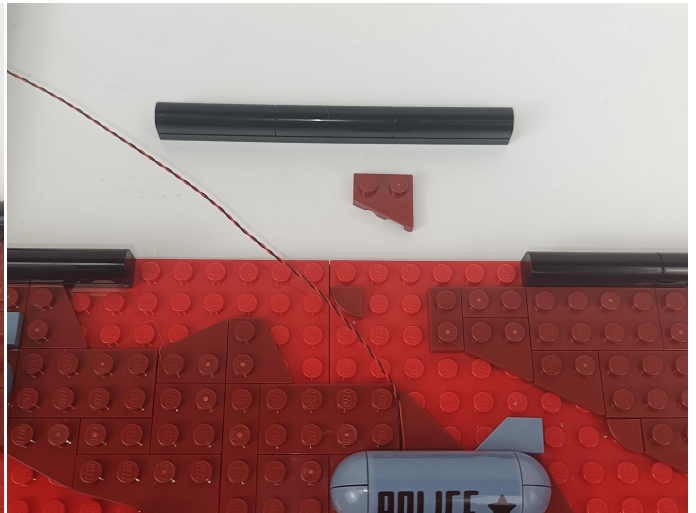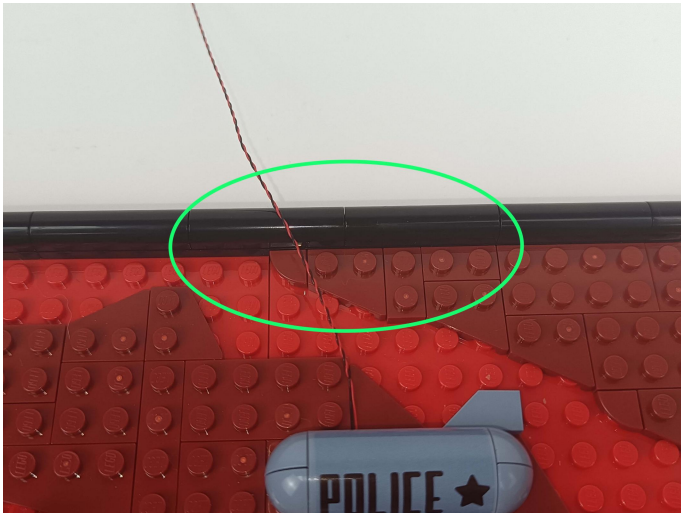



191

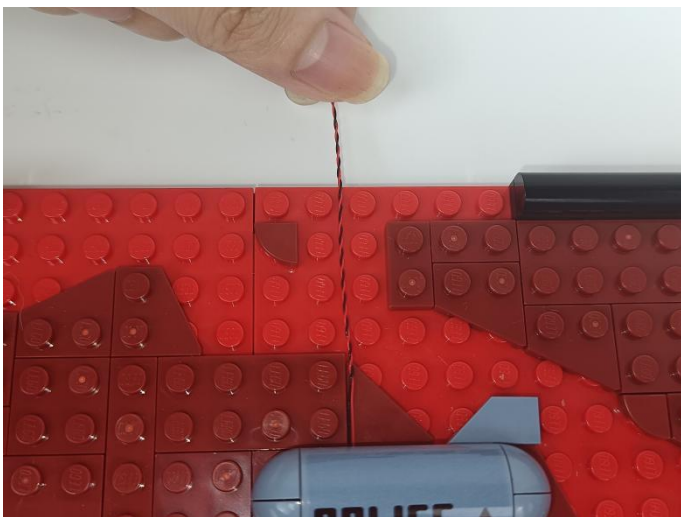


192

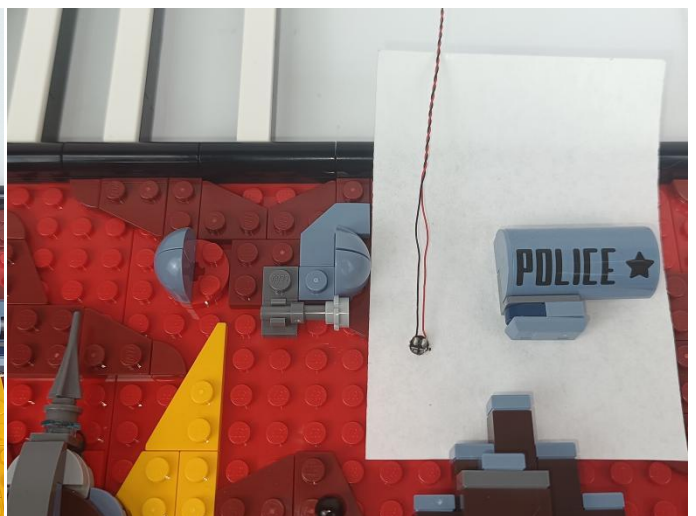



193

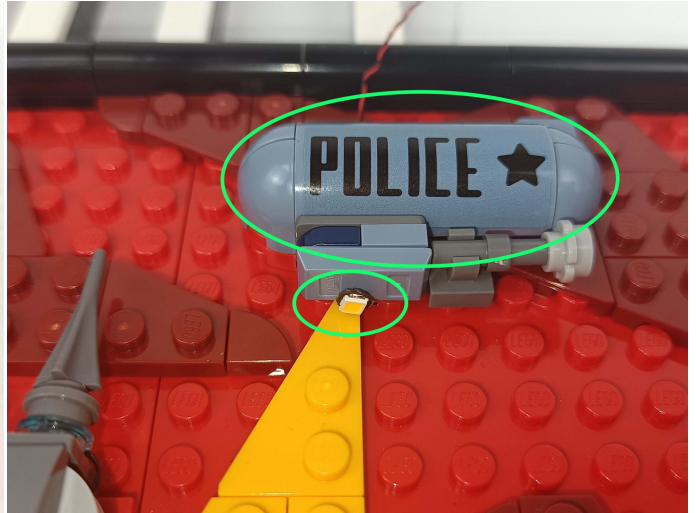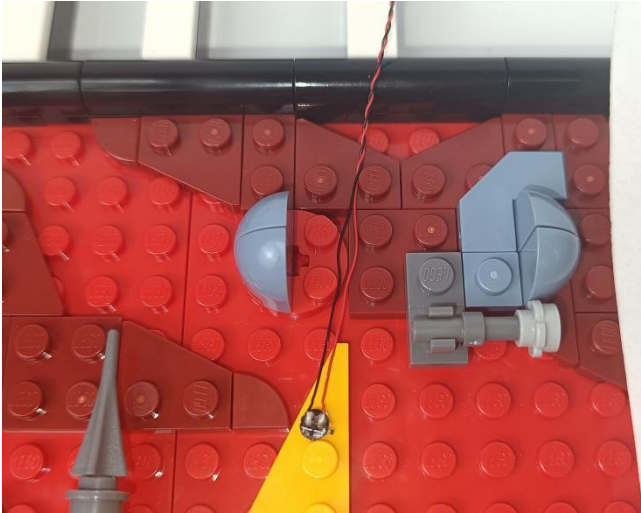

194


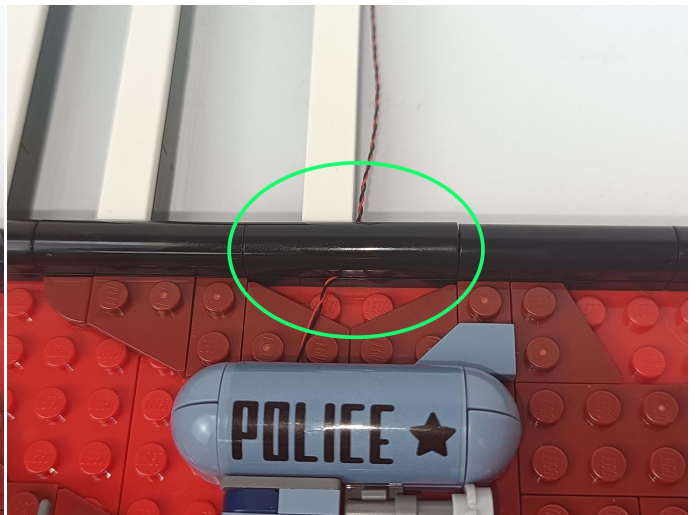


195

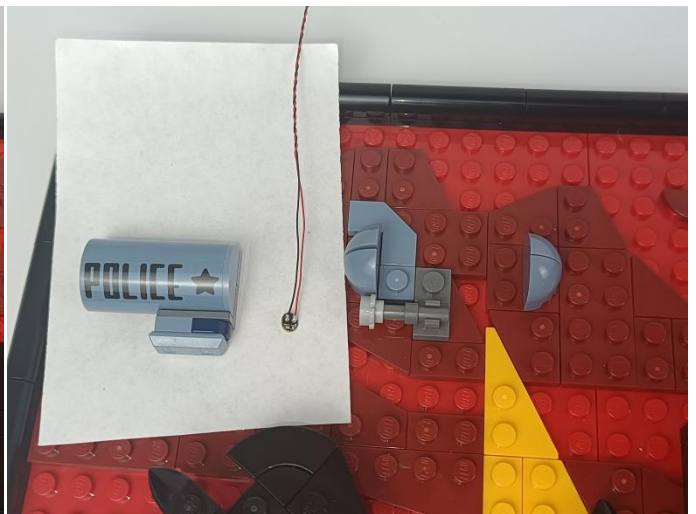
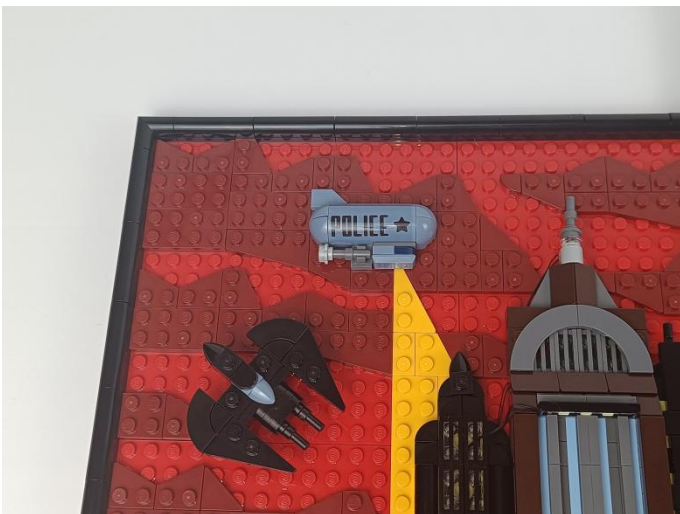




196

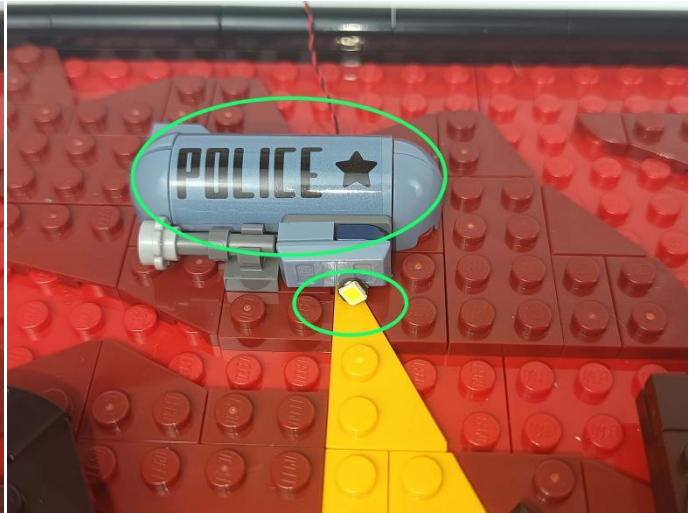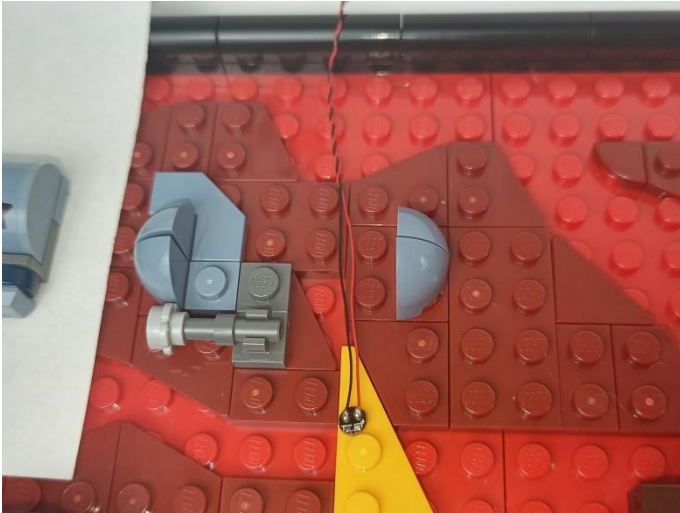

197

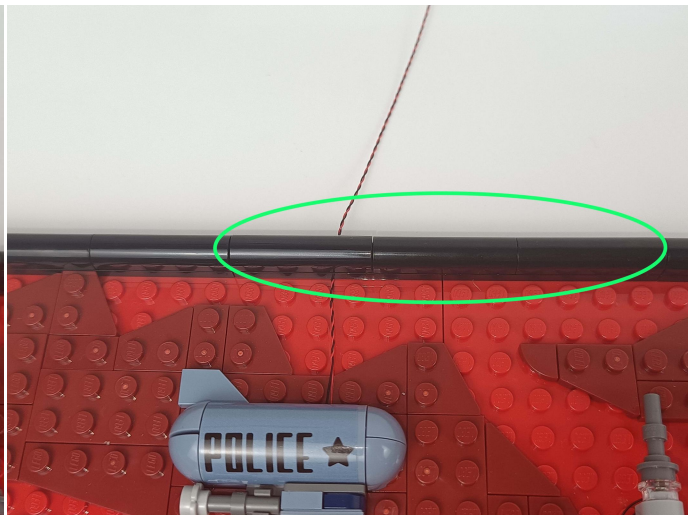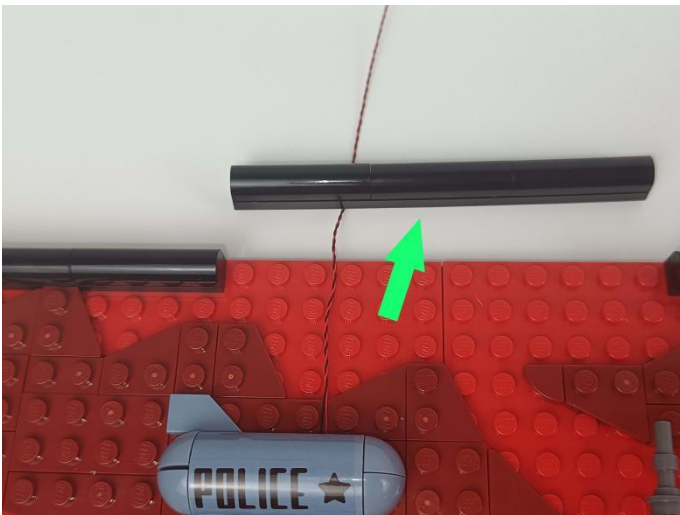


198



199



200

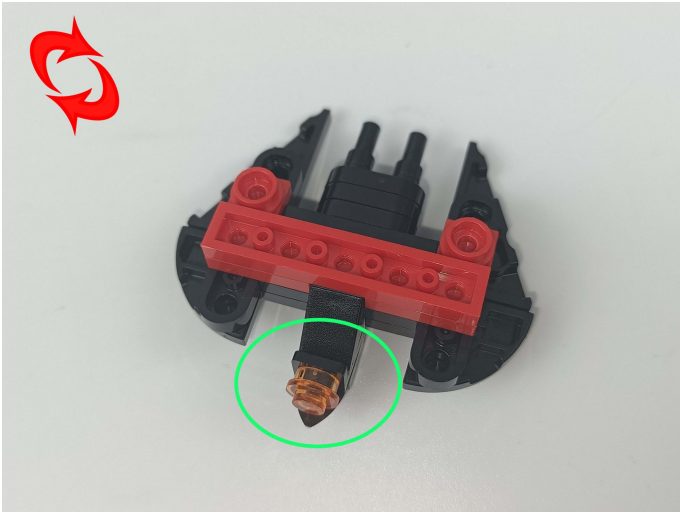

201



# Tips

The plate without slit:

## The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work.



The plate with slit:


## The plate with slit:

The wire has enough space to avoid being squeezed endowed with longer service life and more stable effect.



The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormalheat during installation.



## 202

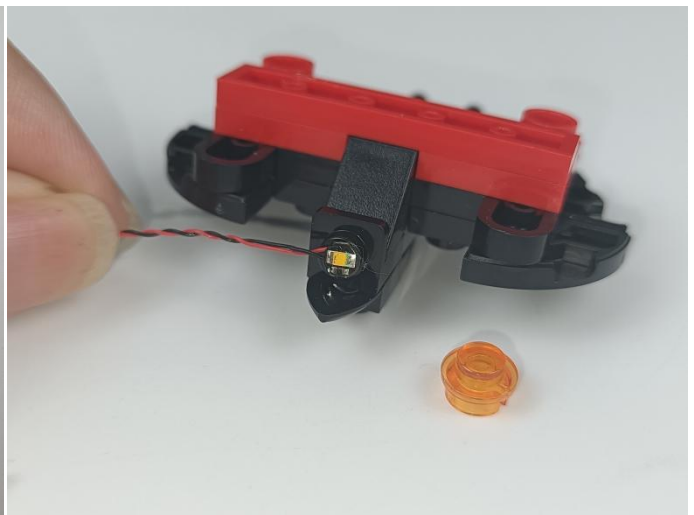

## 203



204

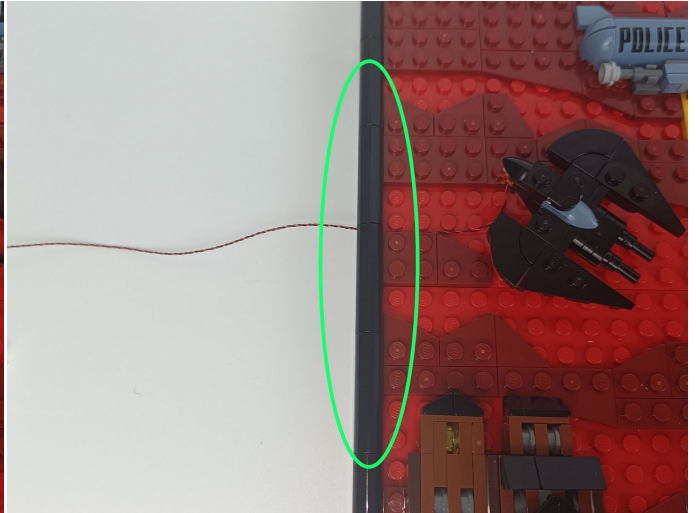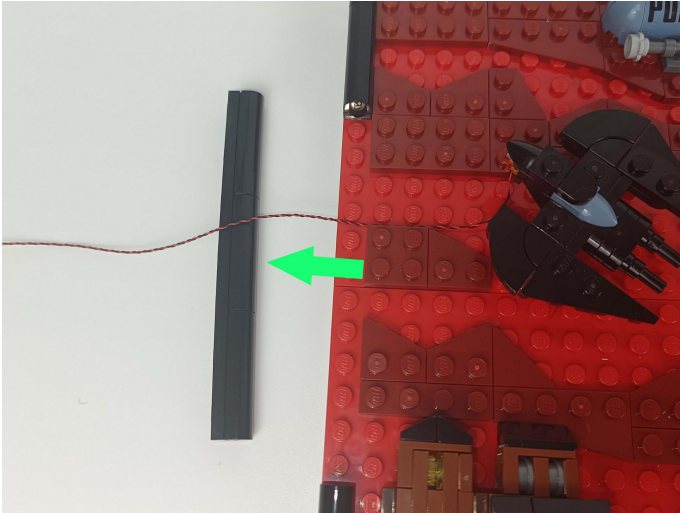



205





206





207

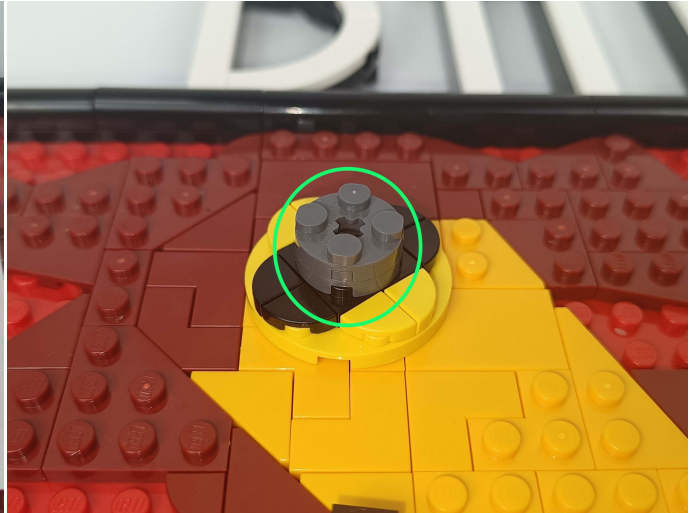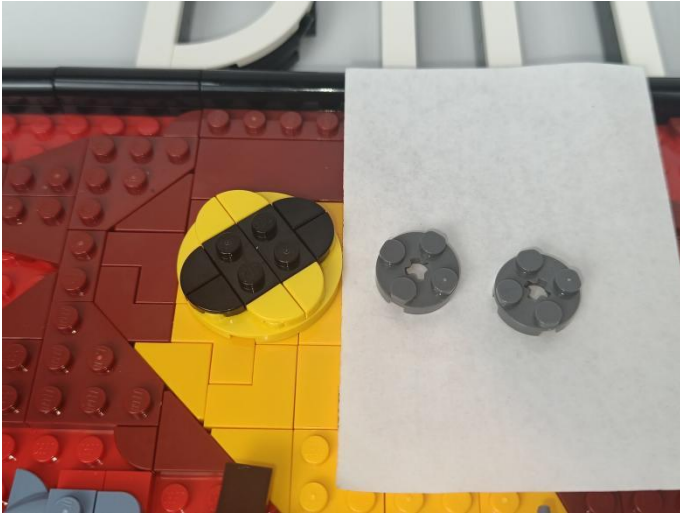


208

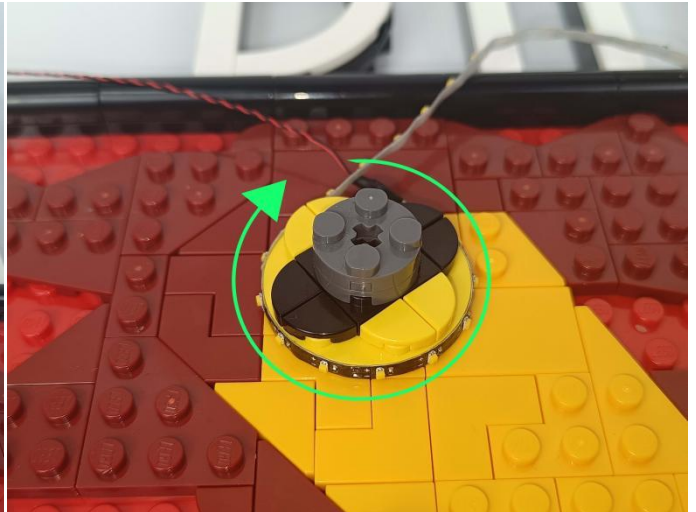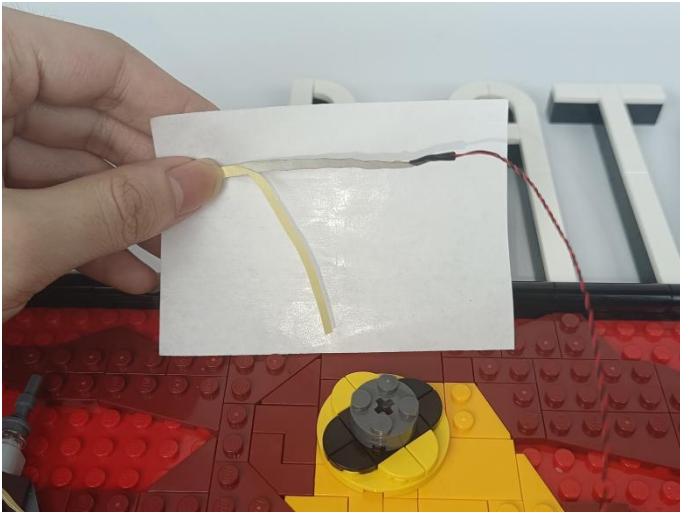



209

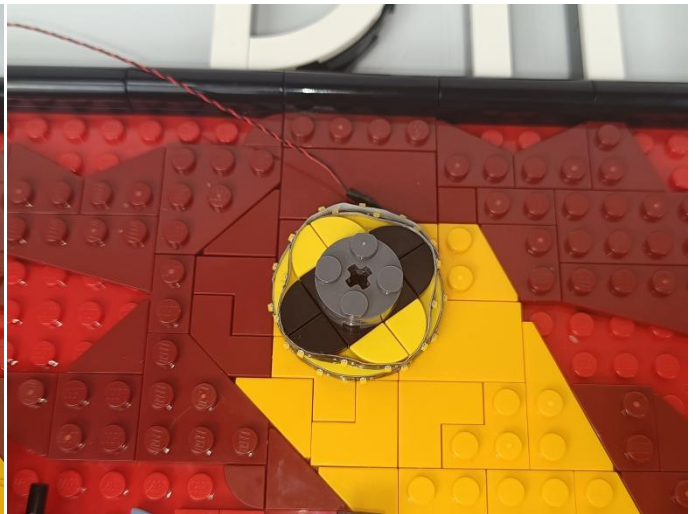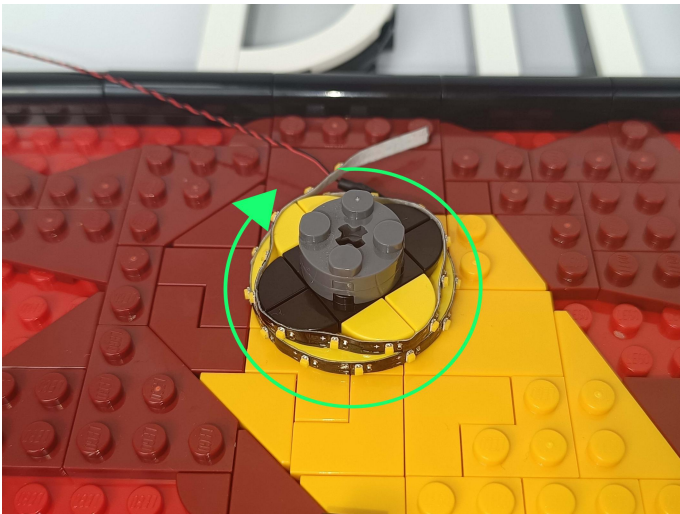

210

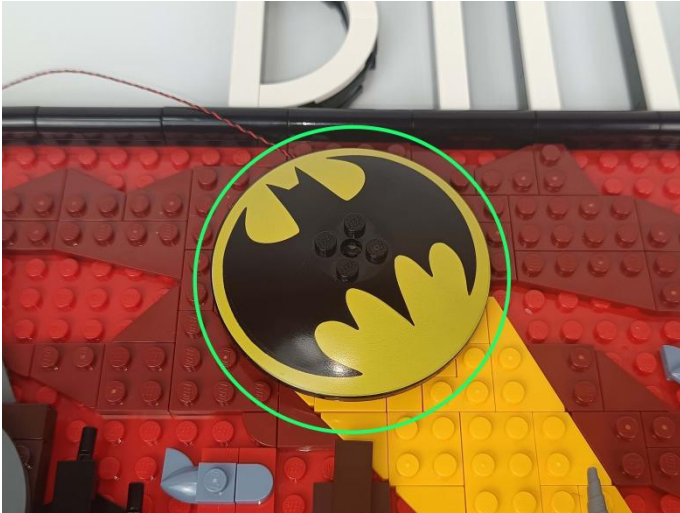



211

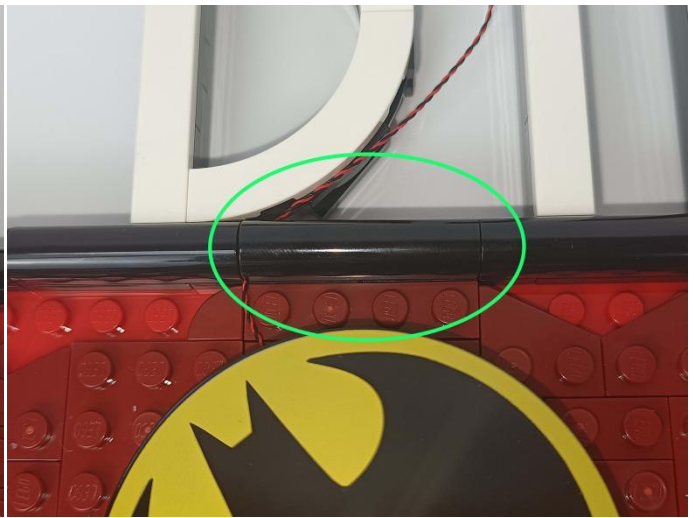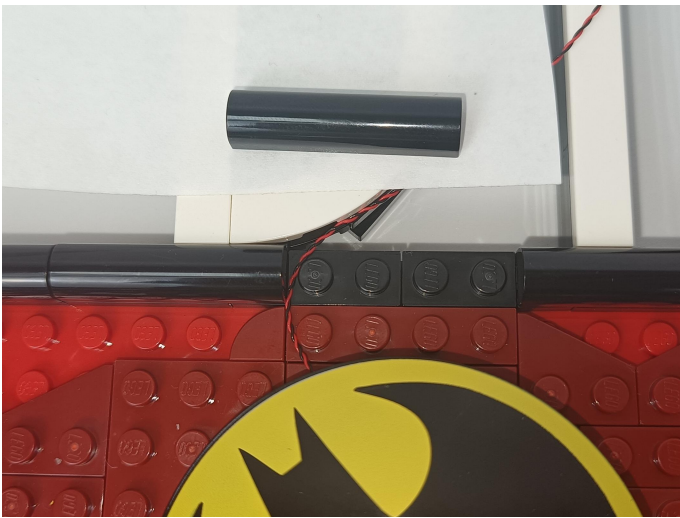

212



213

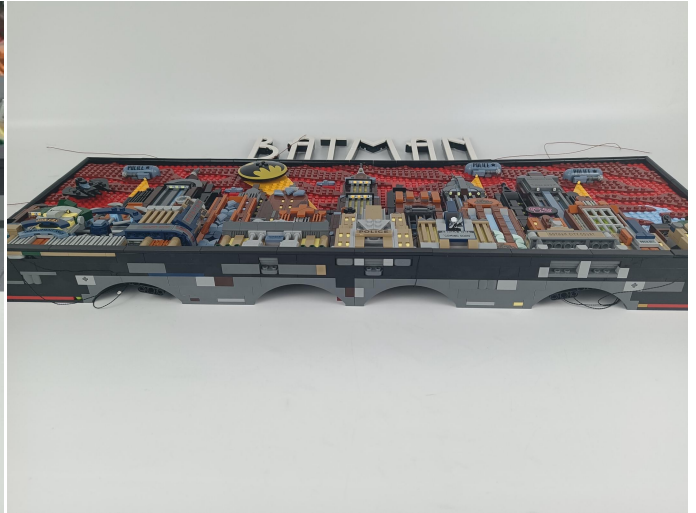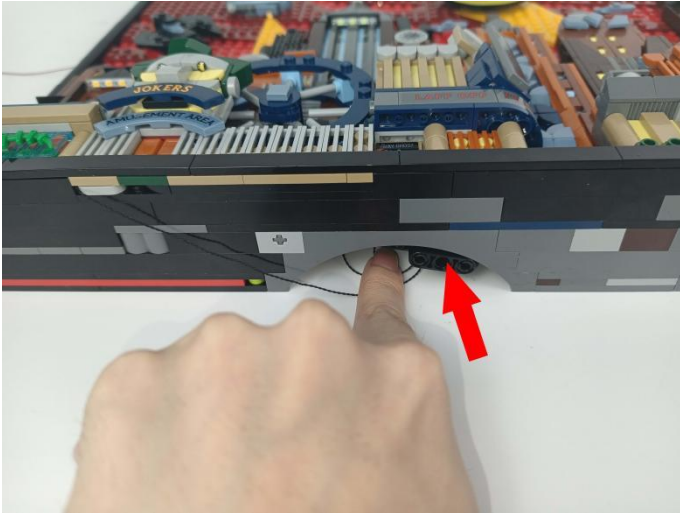



214





215




216

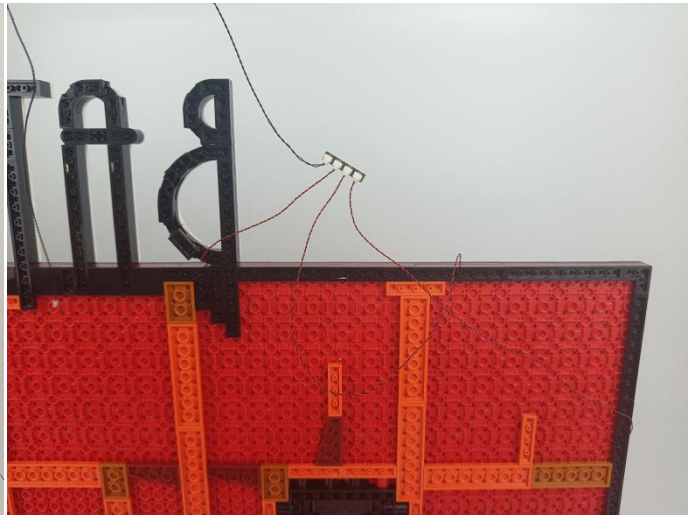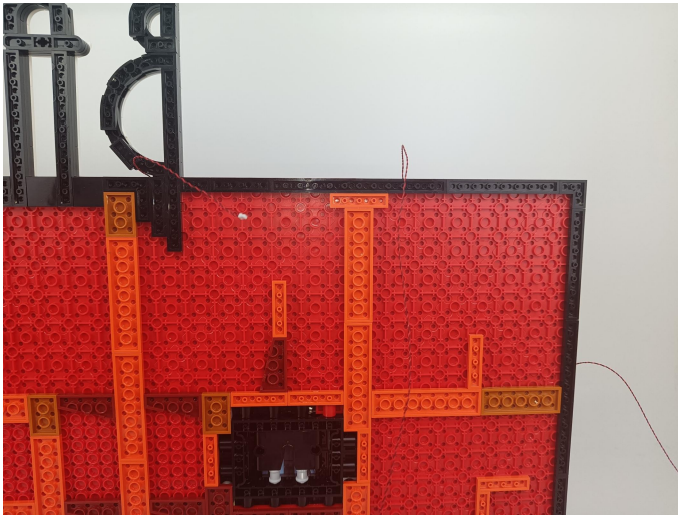

217

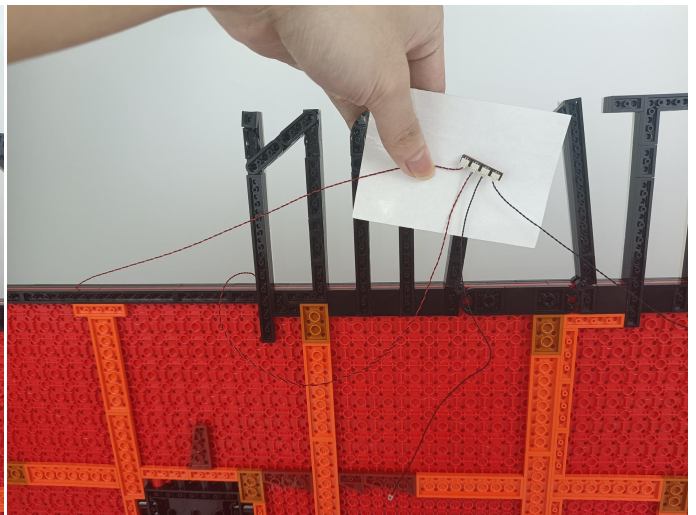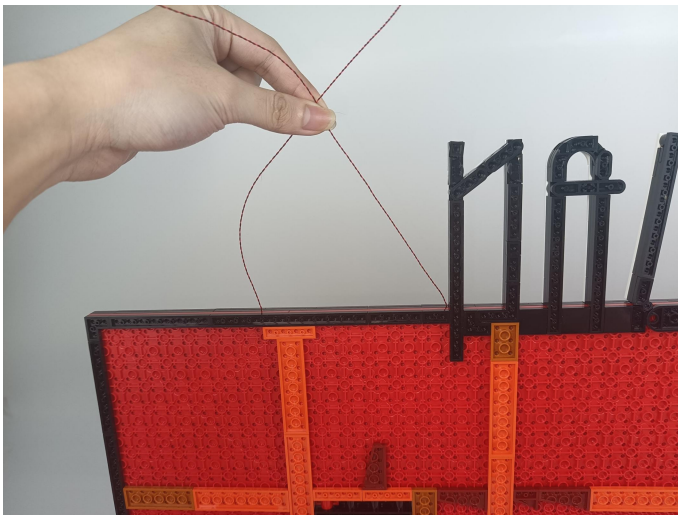


218

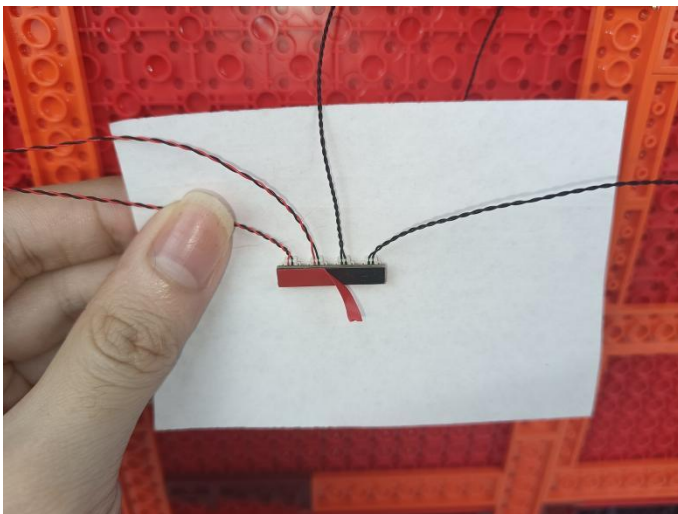




219

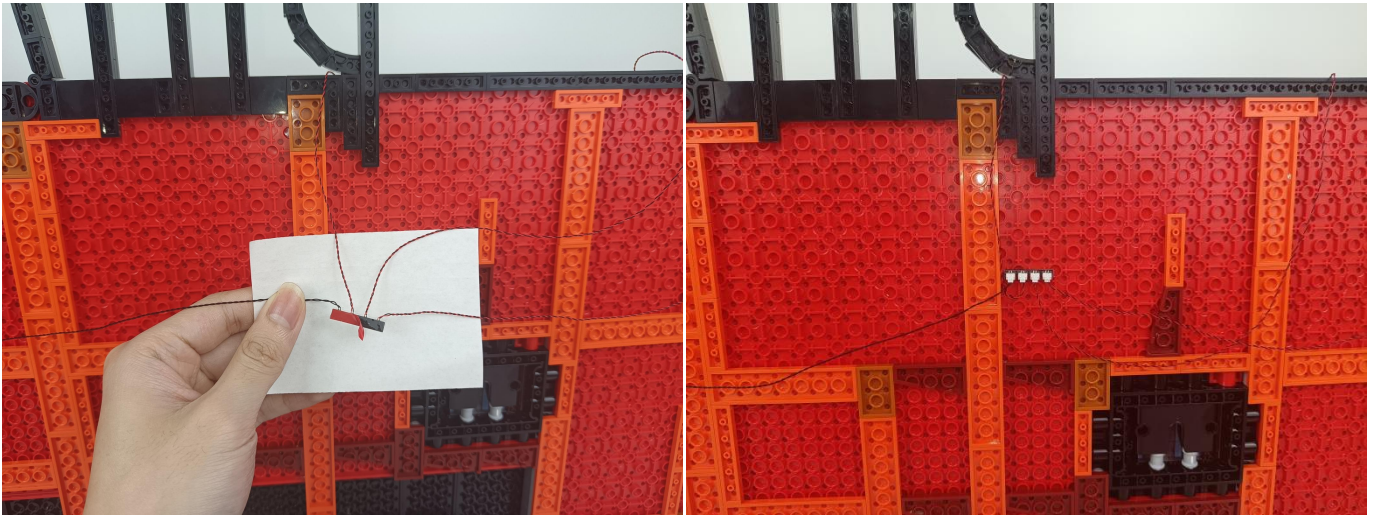



220





221

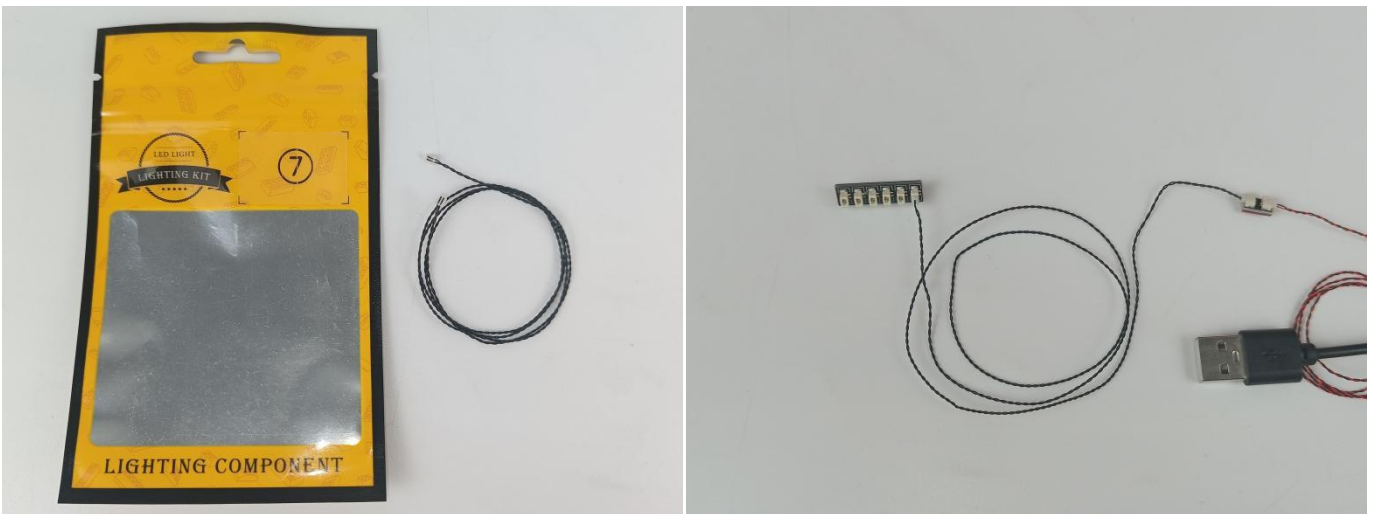


222

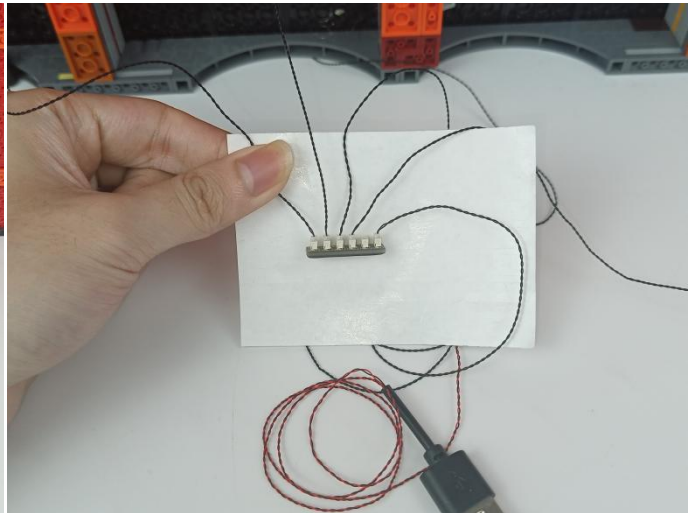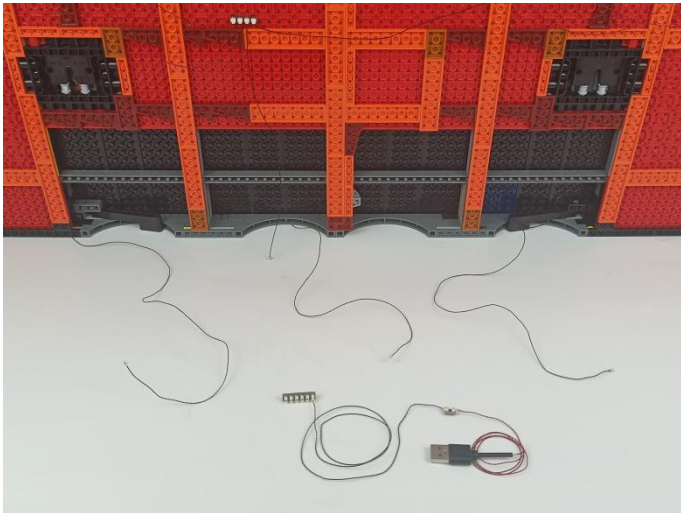



223

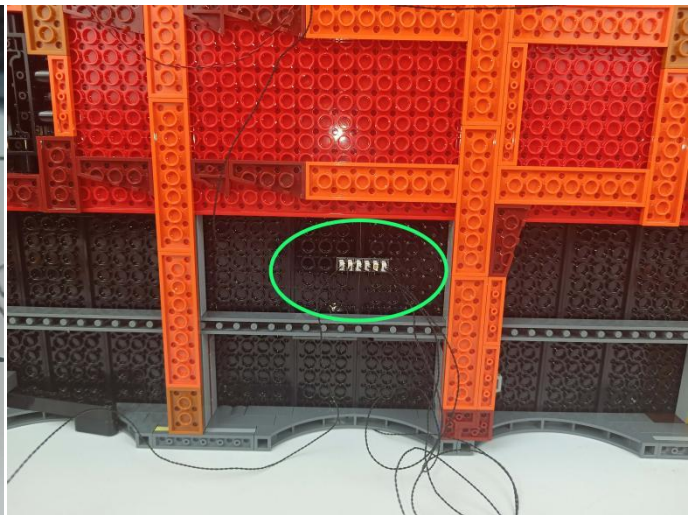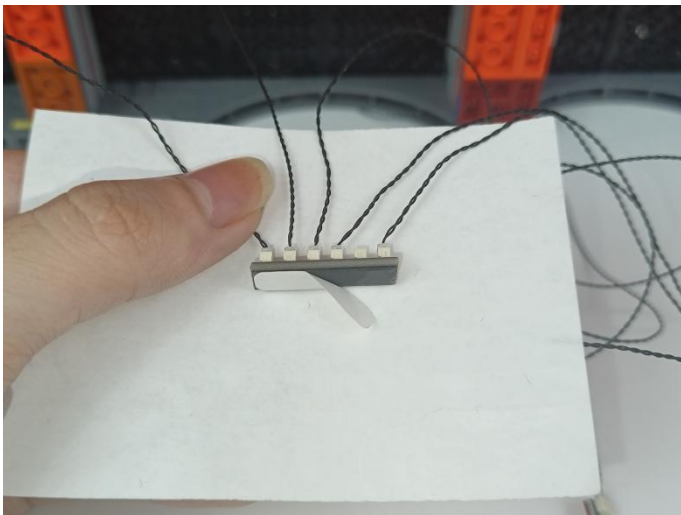


224

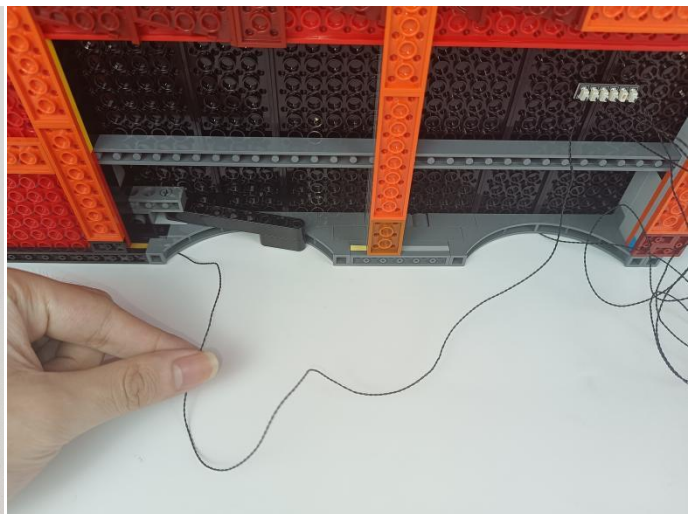


225

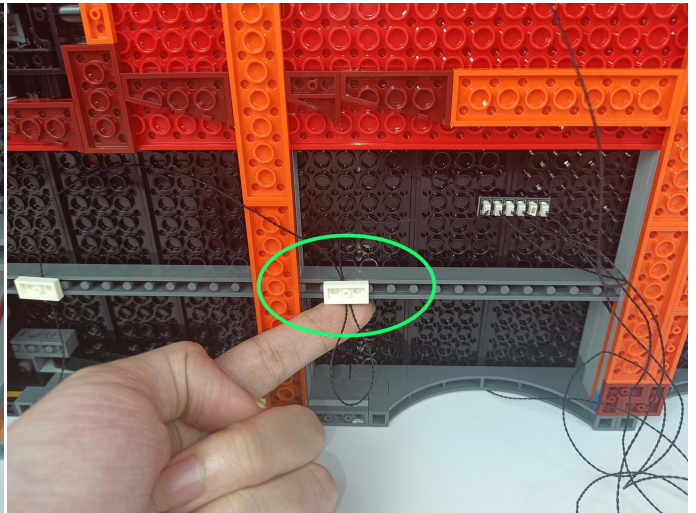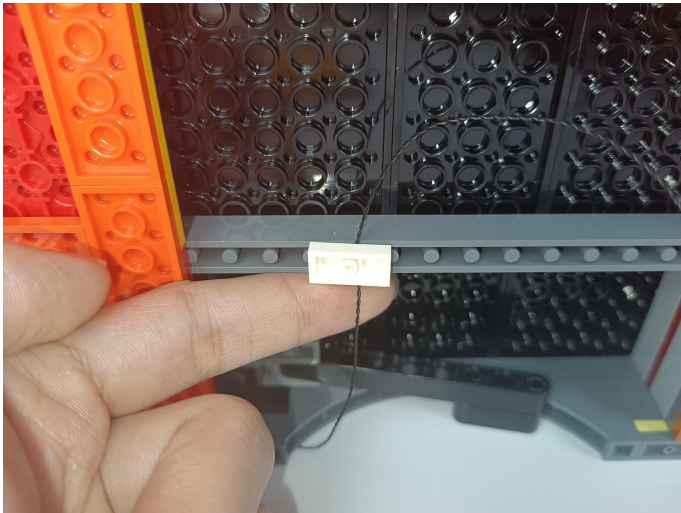



226

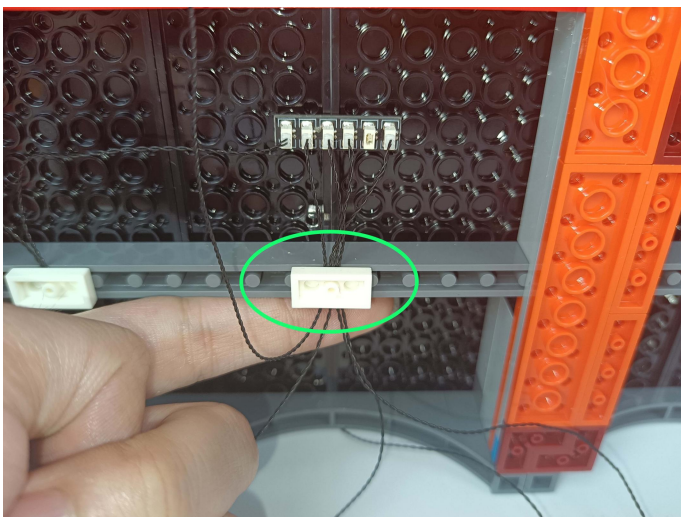


227

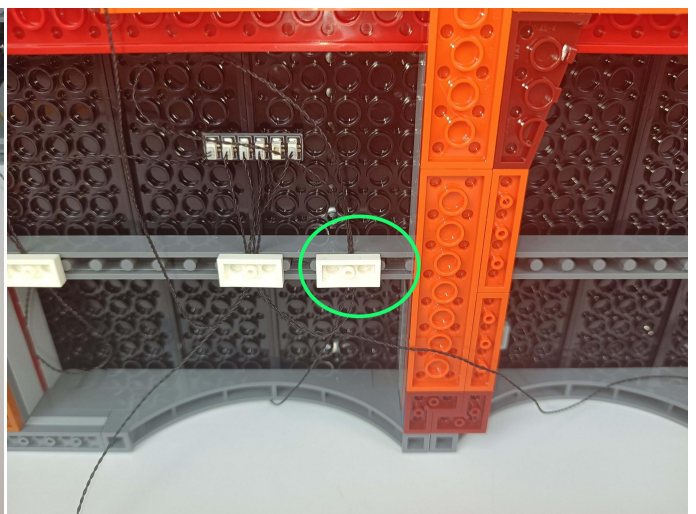

228

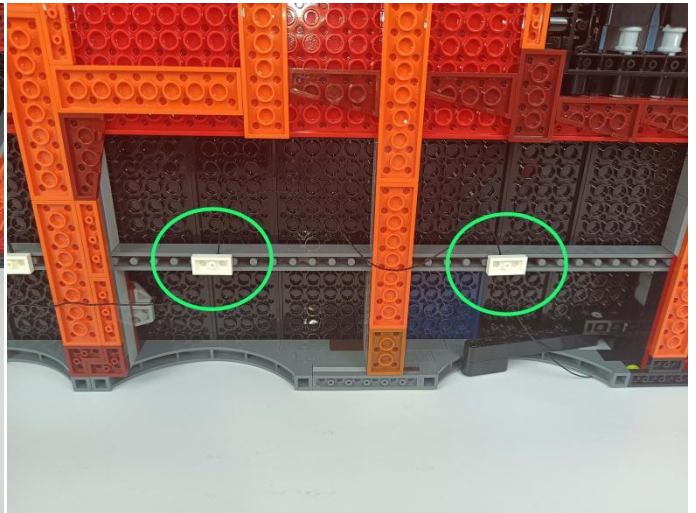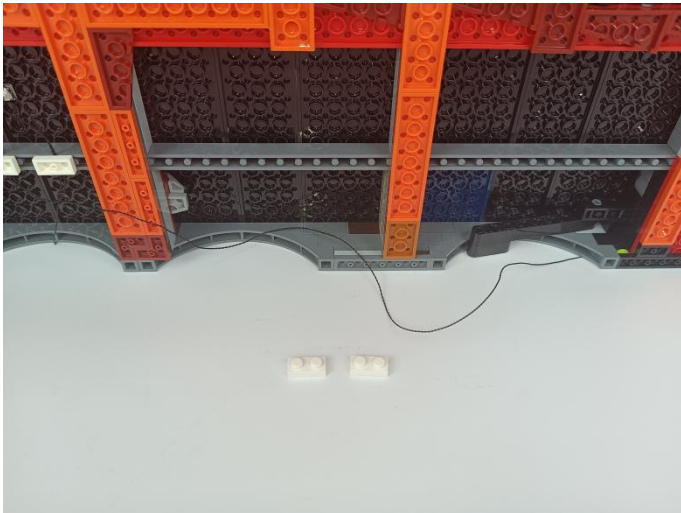

229

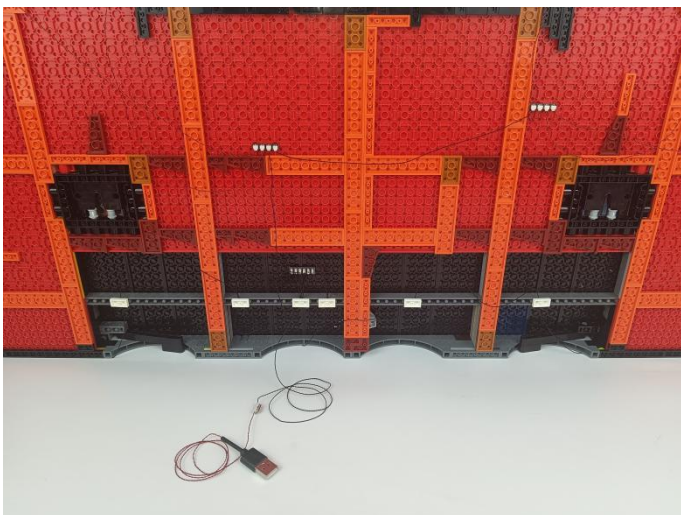

230



Good job, you've done all the installation steps, power it up and enjoy your work.



THANKS