

76271 Batman: The Animated Series Gotham City

- Installation requires a lot of patience and great observation that your LEGO bricks will come alive when you get this finished. The bricks with lighting as below, so make sure you're ready and let's get started.



Strategies for the Installation

This instruction divides three sections to complete the installation of the lighting set.

Section A: Check the type and quantity of components.

The quantity and type of components of each products are different and it needs to be carefully checked to make sure there do have enough material. The type of components is indicated by the label on the bag.

Section B: Test that each components is working properly.

Each components is Manual customization so it is necessary to test that each components is working properly to avoid the situation that the lighting does not work .

Section C: laying out components following the instruction.

Our material is very small but not fragile, just be reminded that don't to pull the wires too hard. For different people, there may be some installation steps that you can't understand. Please look at the previous and later installation steps.

Section A: Check the type and quantity of components.

This set contains eleven bags labelled "1" "2" "3" "4" "5" "6" "7" "8" "9" "10" "11", please make sure that the components in each bag are the same as shown in the pictures.





Please contact us immediately if there have any missing components.




Section B: Test that each components is working properly.

Take out the Expansion Boards and the USB Power Cable from N0.9 bag and No.11 bag.



It is worth reminding that our products are all customized. They have a unique way of connecting. The white plug on wire and the socket of the expansion board need to be connected together to transmit power.

Note that on one side of the white plug you can see two very small golden wires that should be connected to the two golden needles in socket of the expansion board. shown as blow.

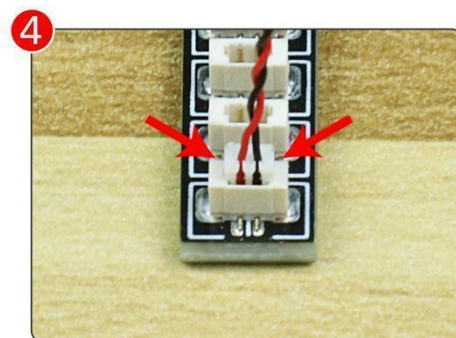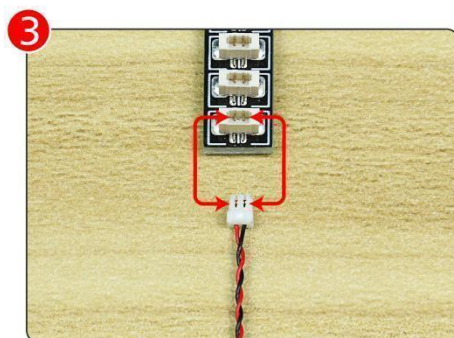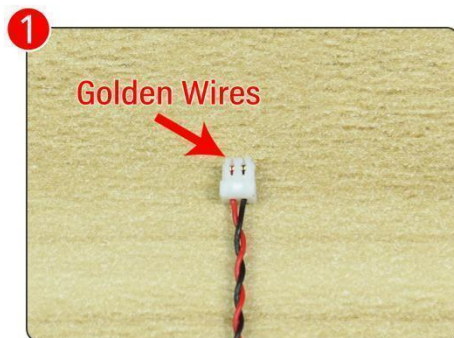


Connect the Expansion Board and USB Power Cable as shown.



Connect the other end of the USB power cable to the power supply.



The USB Power Cord can be powered by phone chargers, power banks, etc. This instruction will use the power bank as power supply.

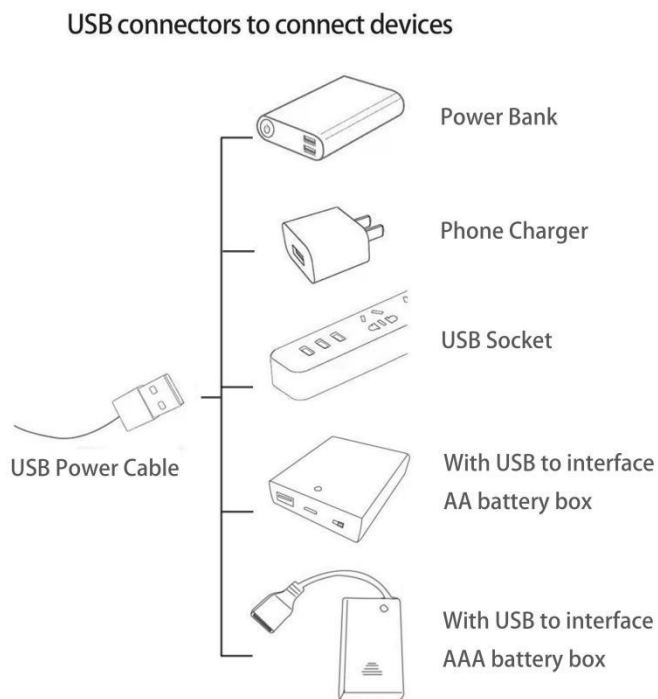

Connect all the components in No.19bag to the Expansion Board in same way just as shown. Turn on the power bank, all the lights are on as shown. Remove the lamp after the test.



Unplug this component and return it to the appropriate bag. There are three in bag NO.1, three in bag NO.2, three in bag NO.4, three in bag NO.5, four in bag NO.6, one in bag NO.7, three in bag NO.8, one in bag NO.9 need to be tested.

Attention that after the test is completed, each components should put back in the corresponding bag including the socket and the usb power cable.

Please contact us immediately if any components don't work.

Section C: laying out components following the instruction.

1



2



3





4




5





6

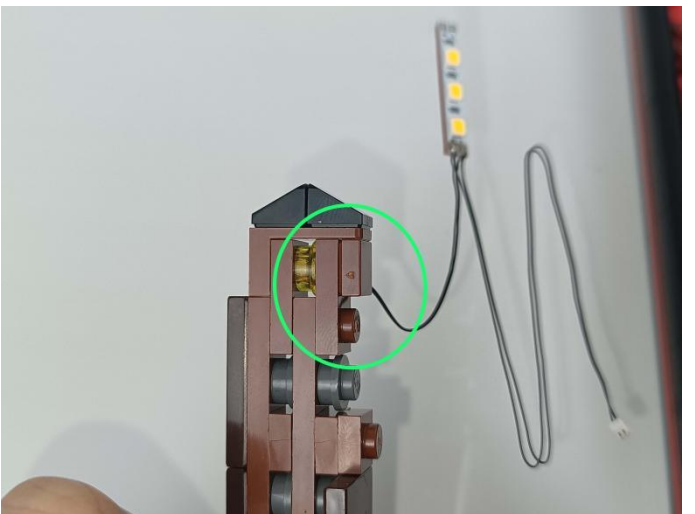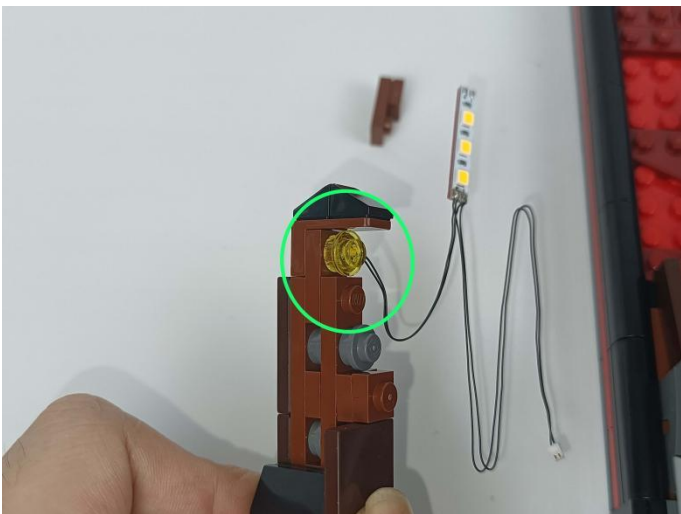


7

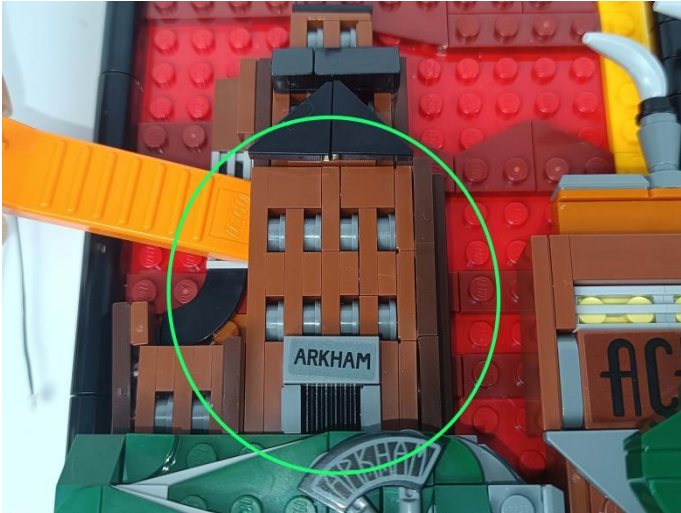


8

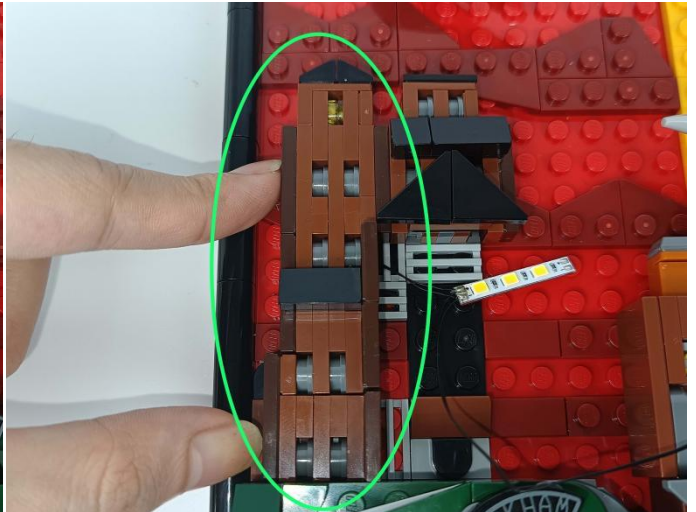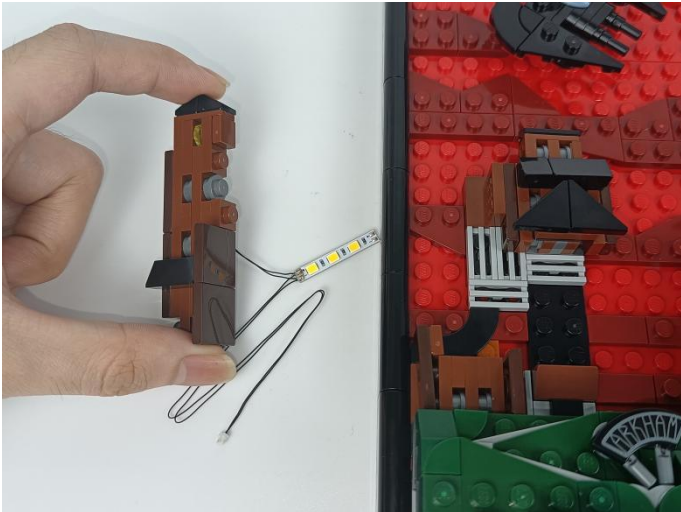


9

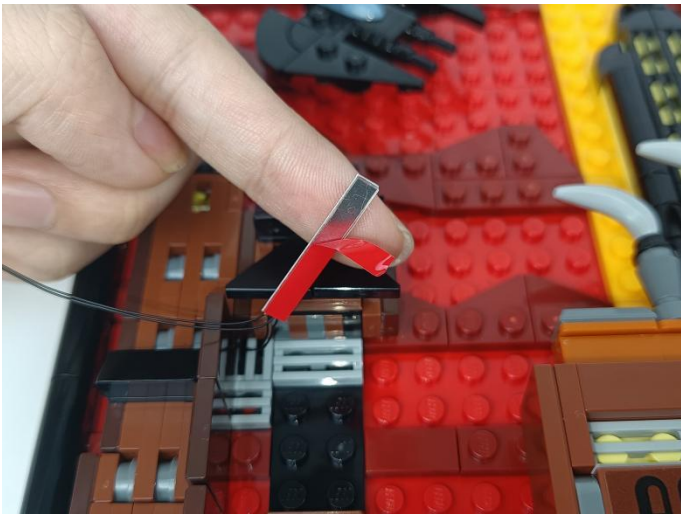

10

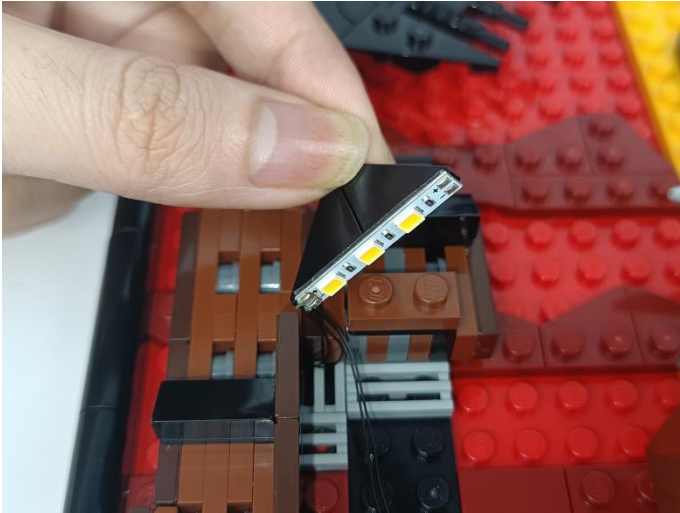



11

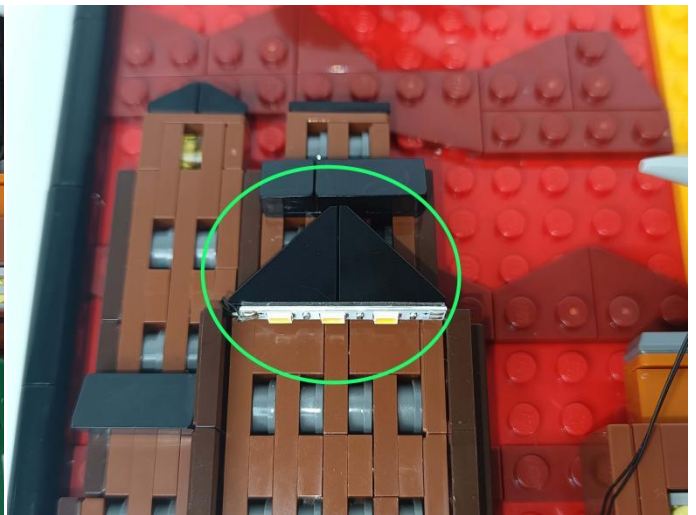

12





13

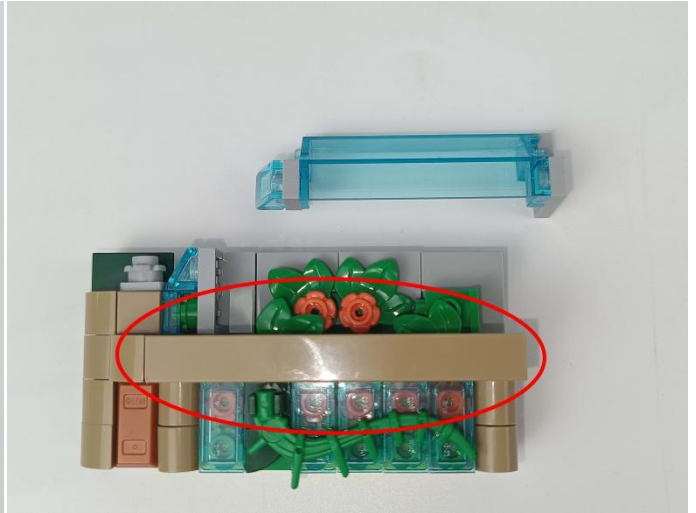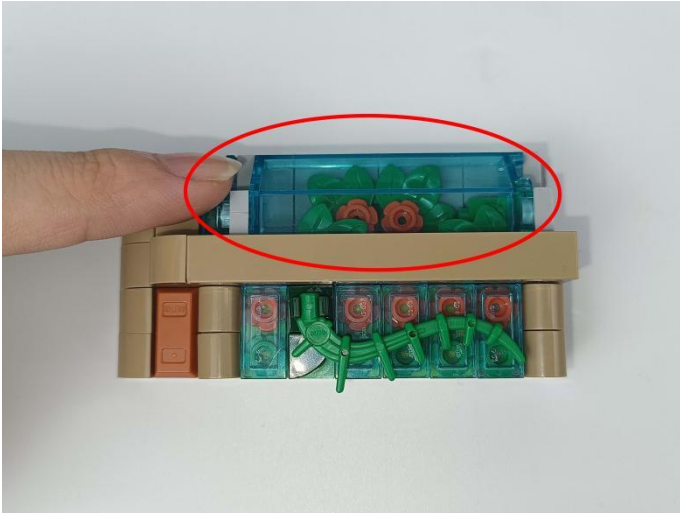



14





15

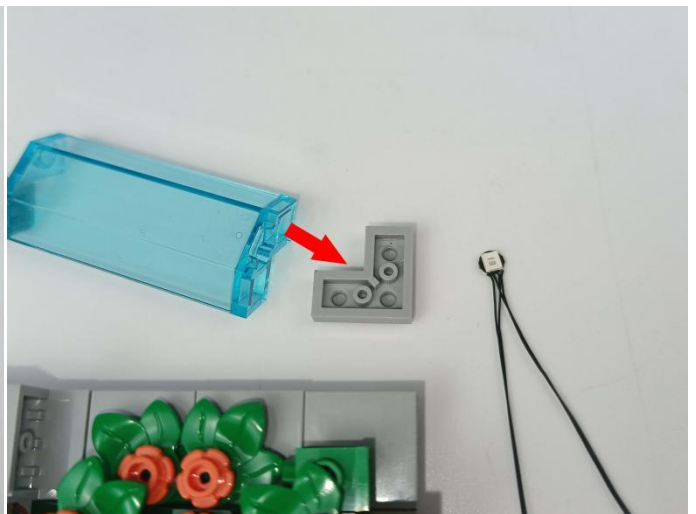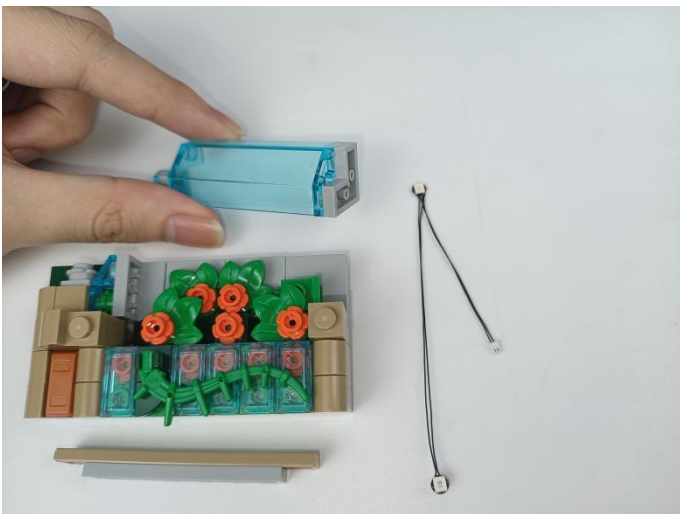

16

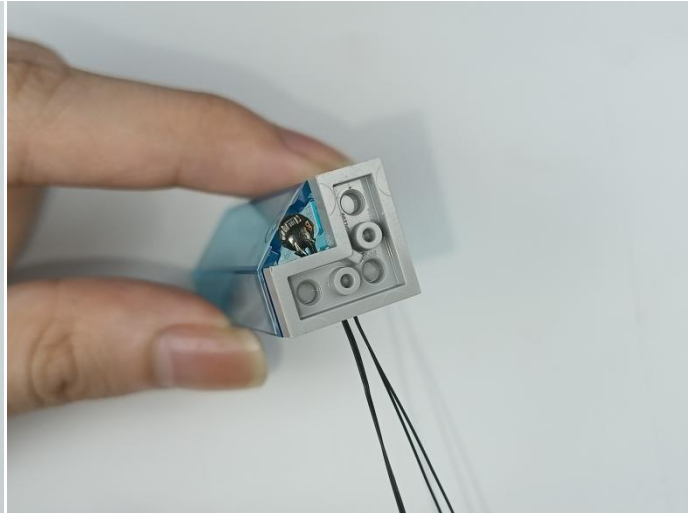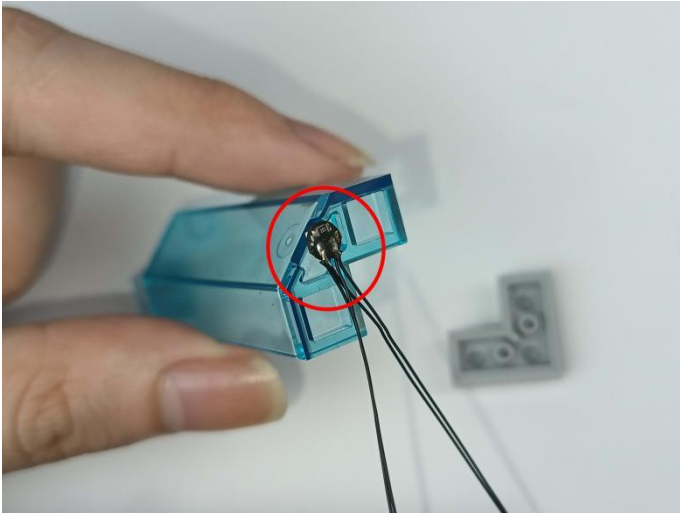


17

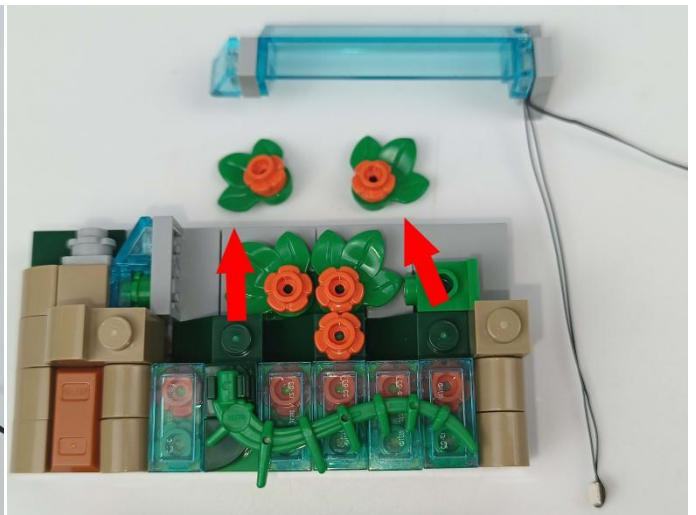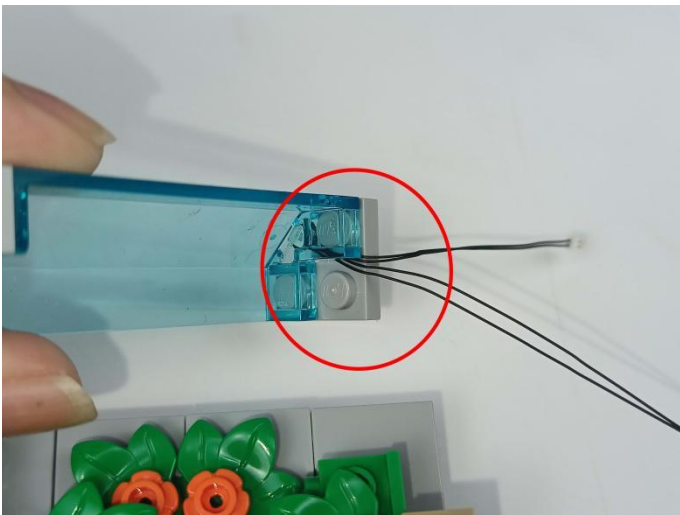


18





19

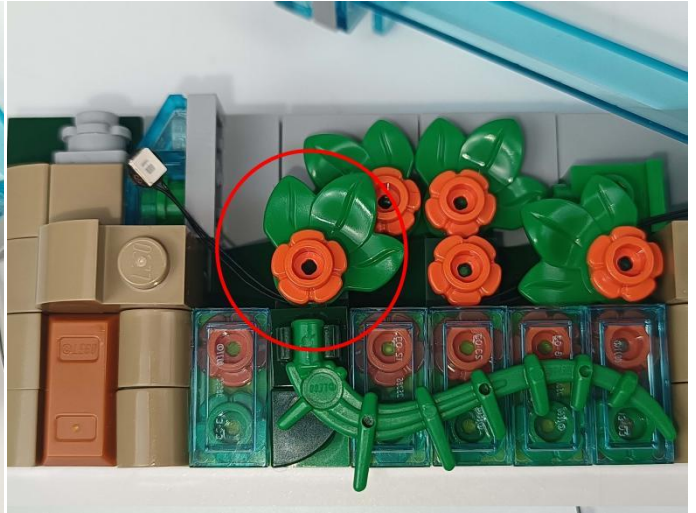



20

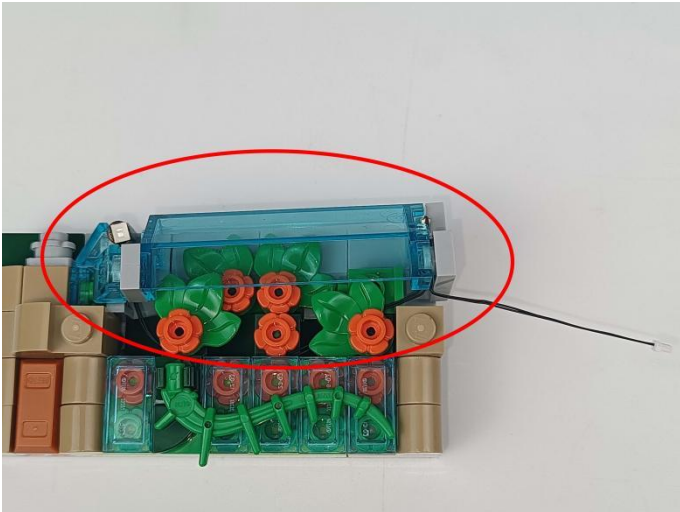


21

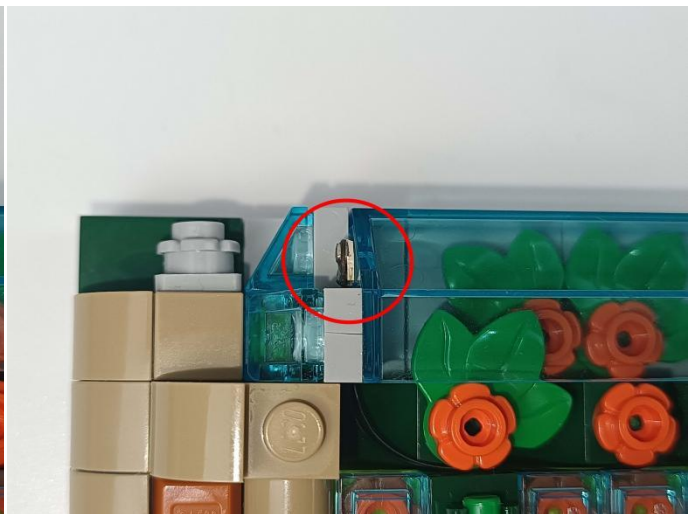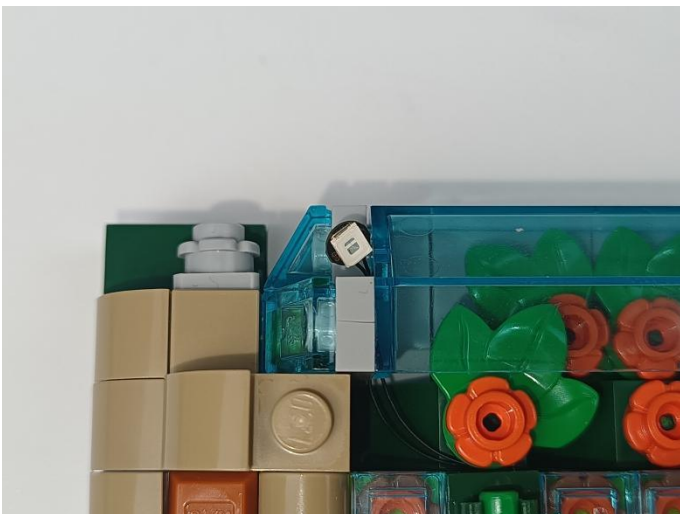

22

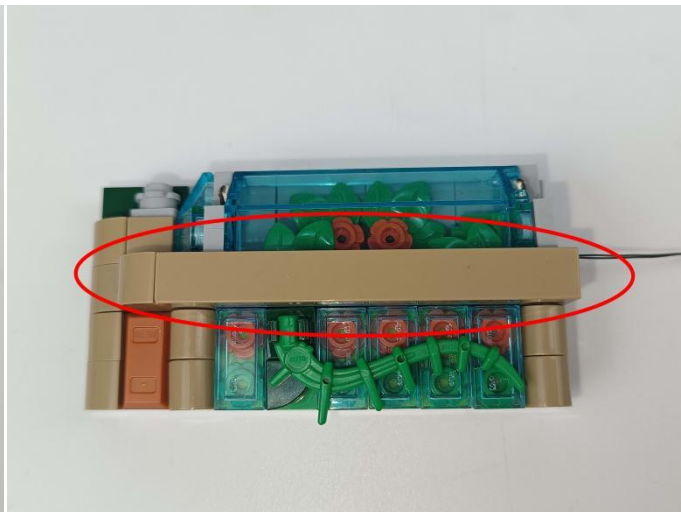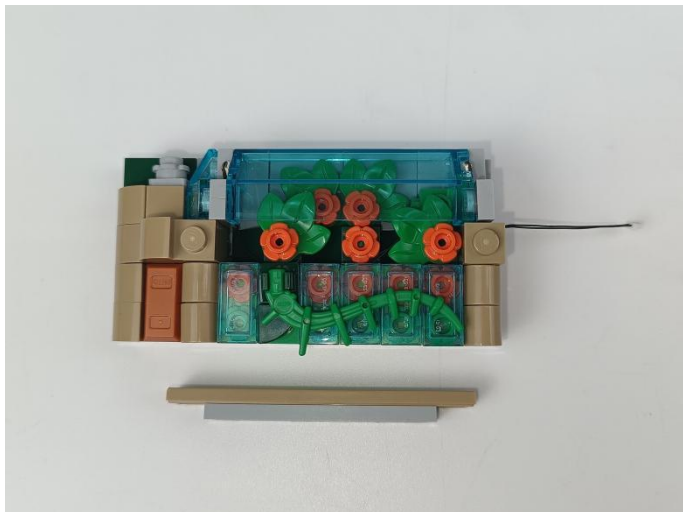

23

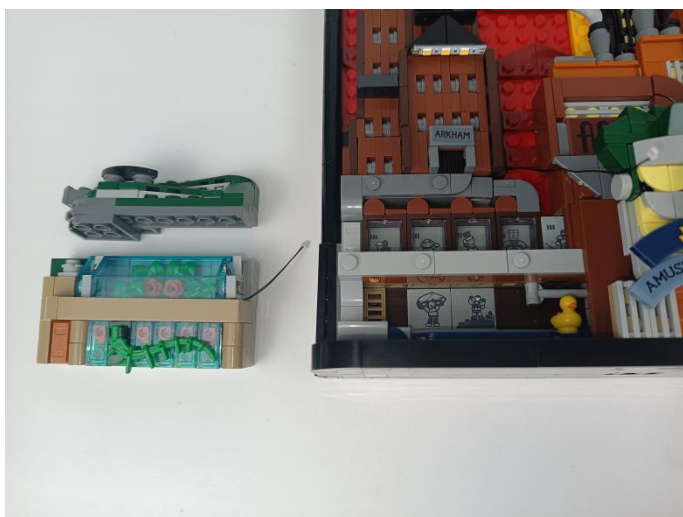

24




25





26




27

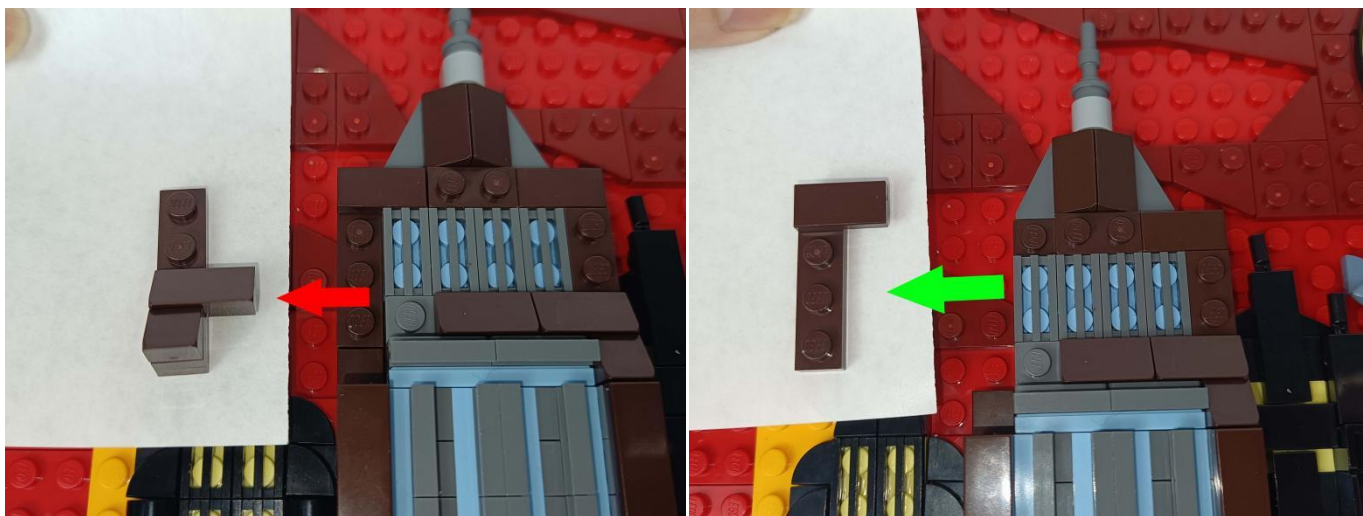



28

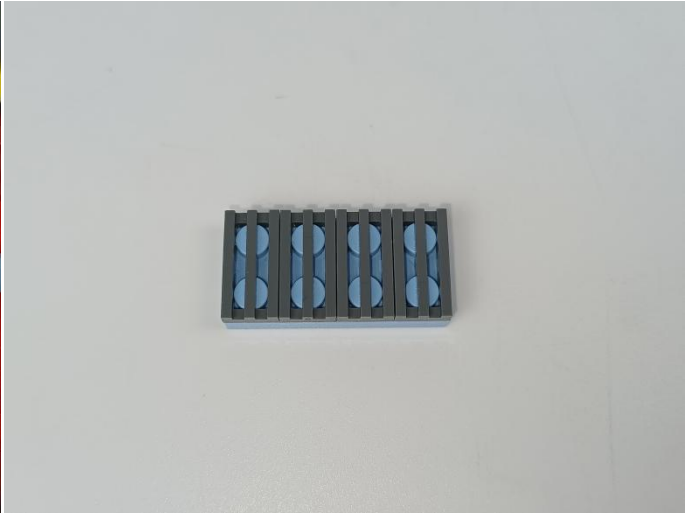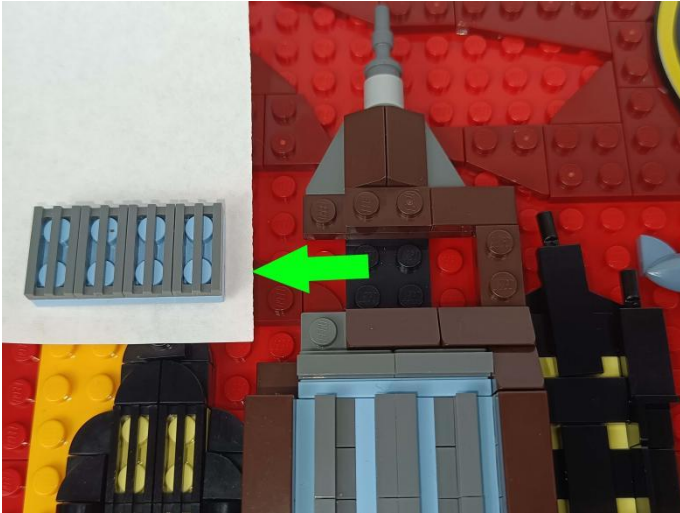


29

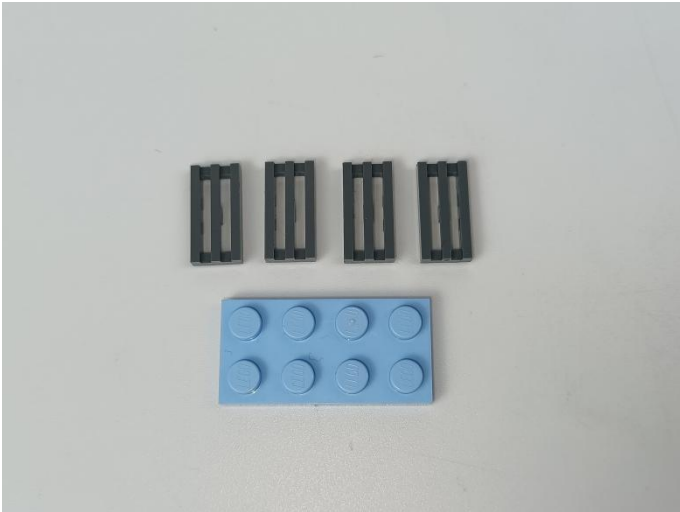

30

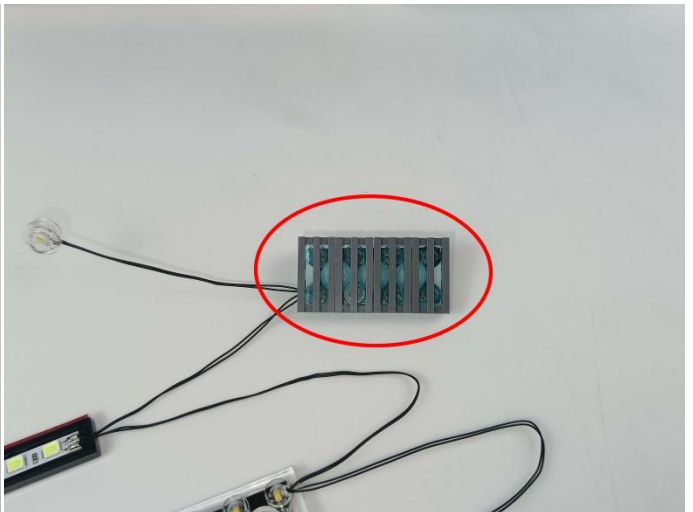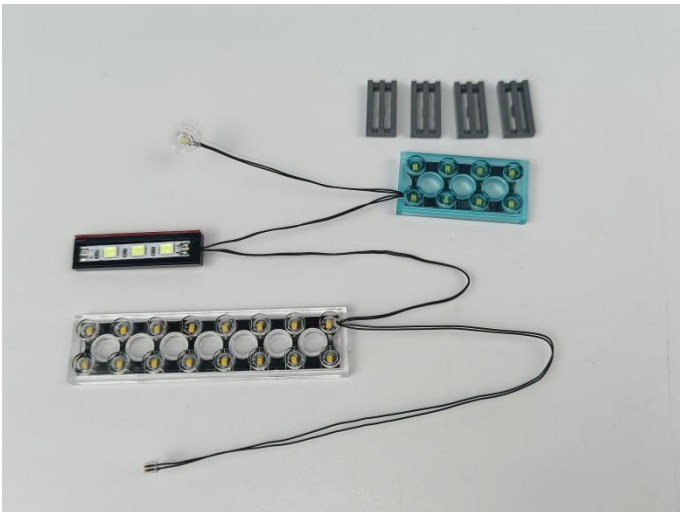



31

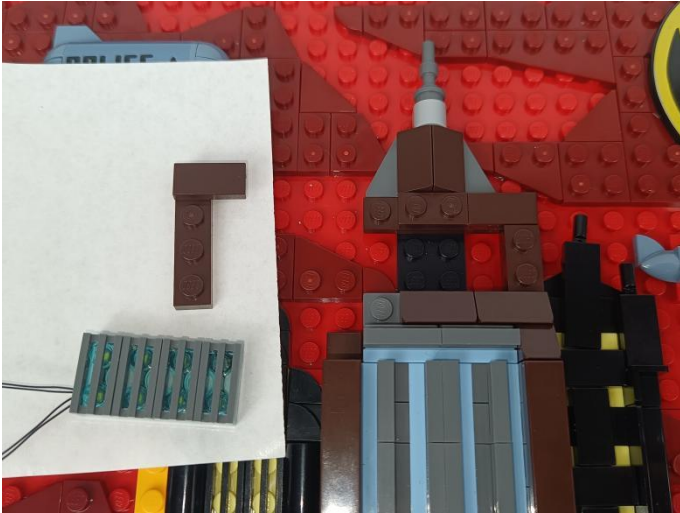


32





33

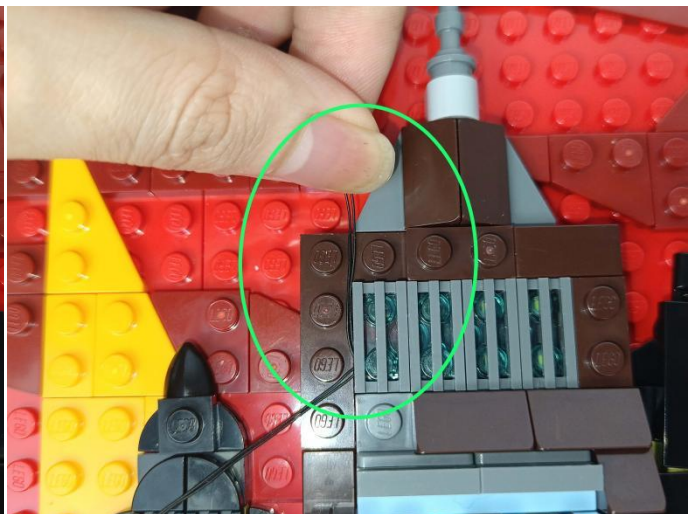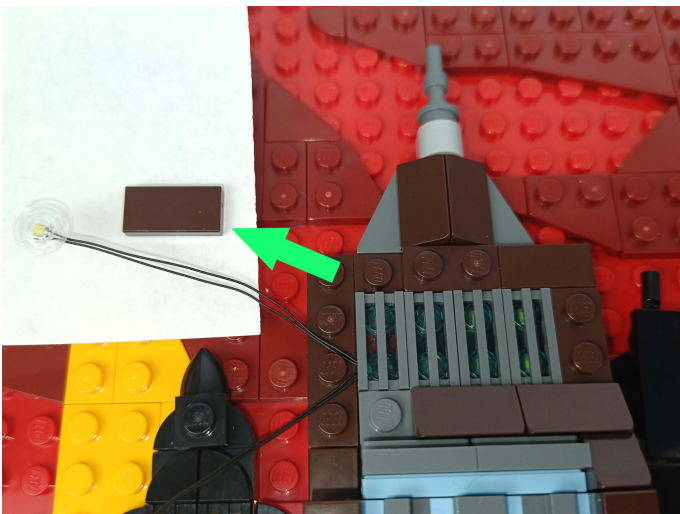


34

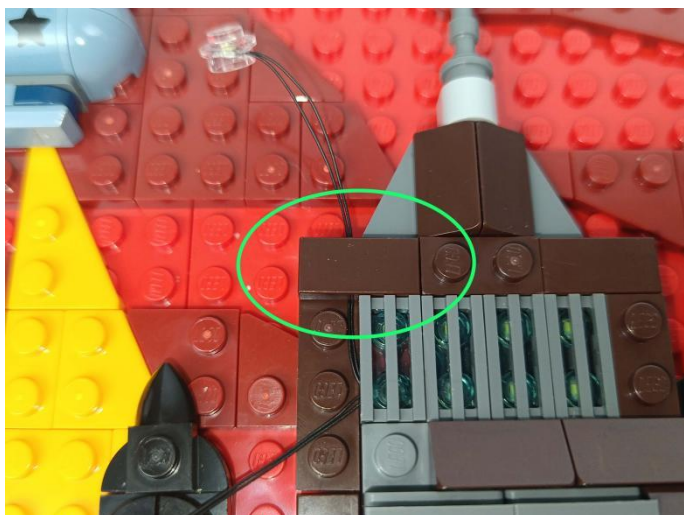

35

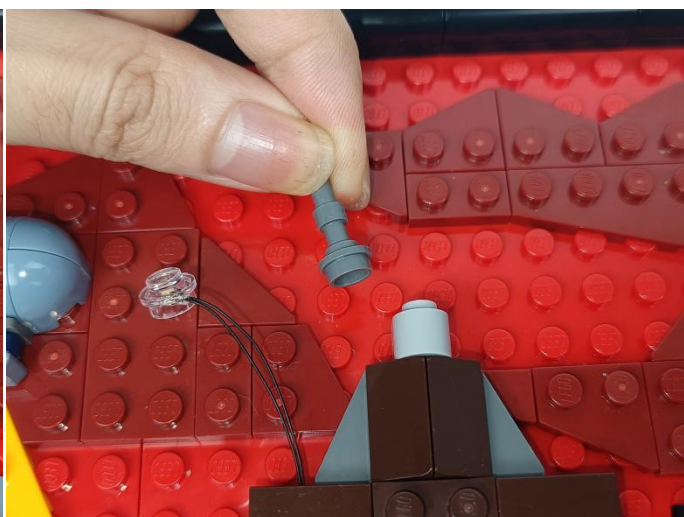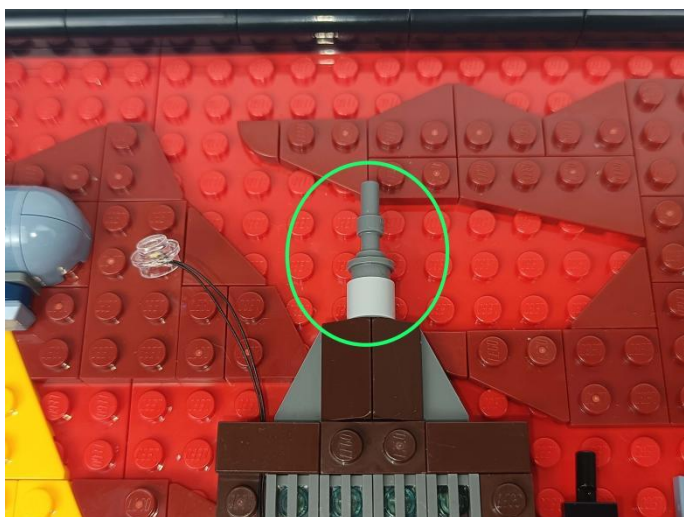

36

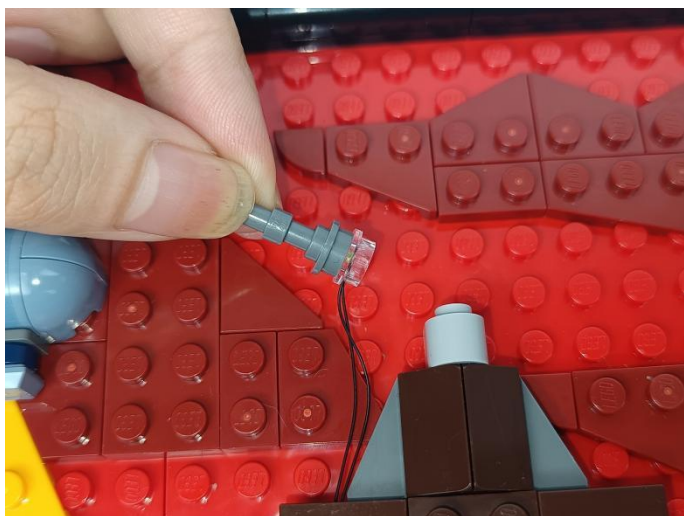

37




38



39



40

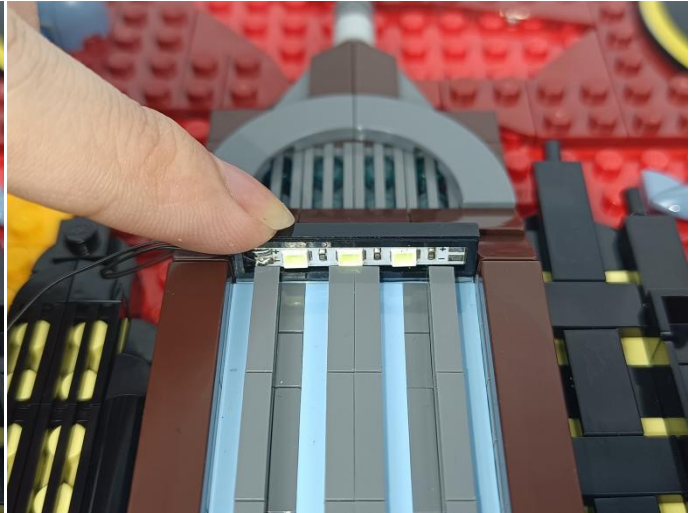

41



42




43




44



45

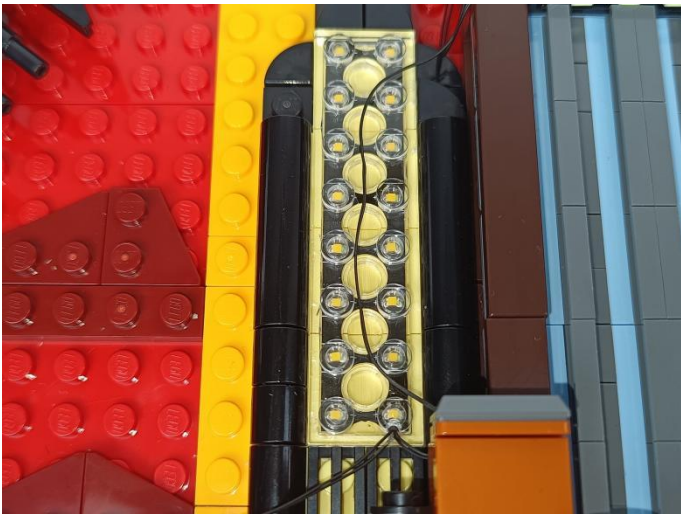

46

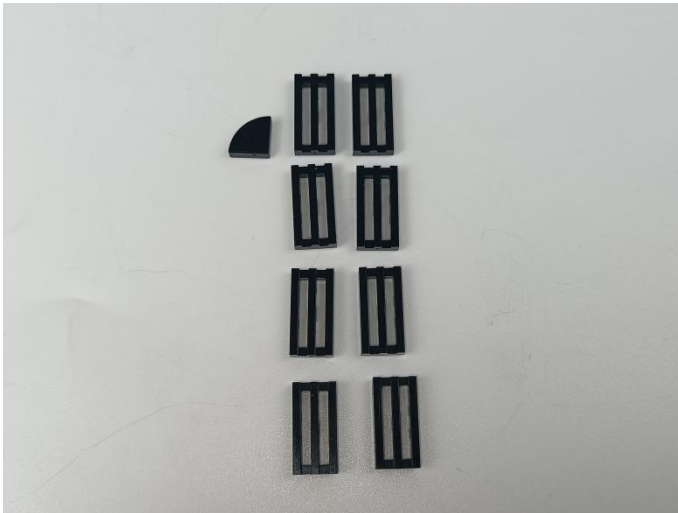


47



48




49

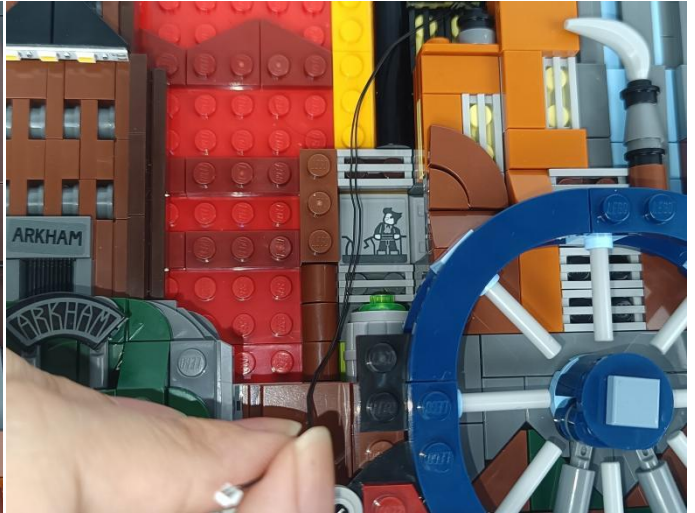

50



51

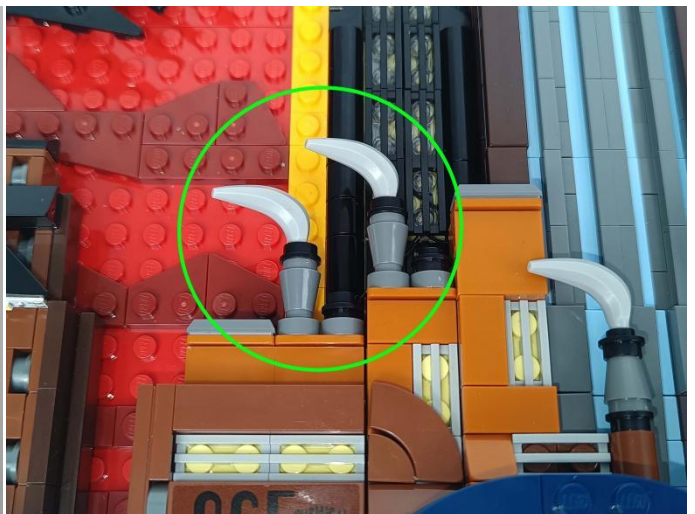

52



53




54



54




55

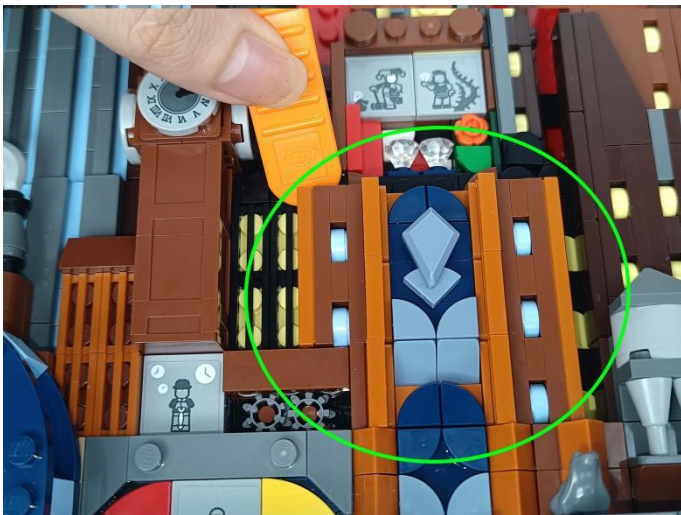


56




57

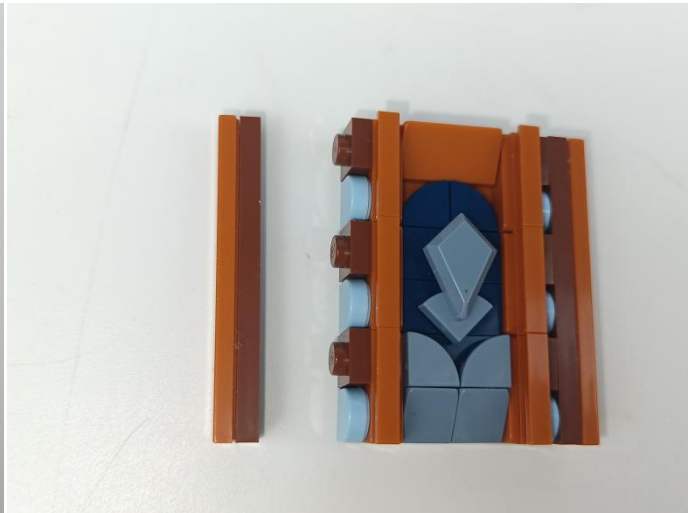


58

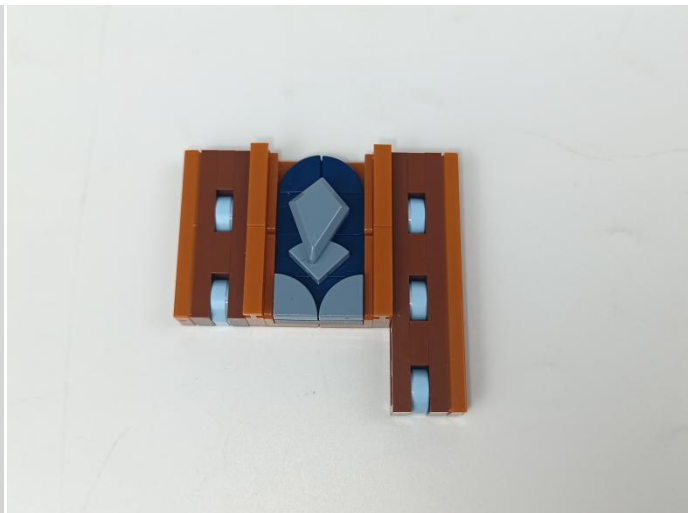



59

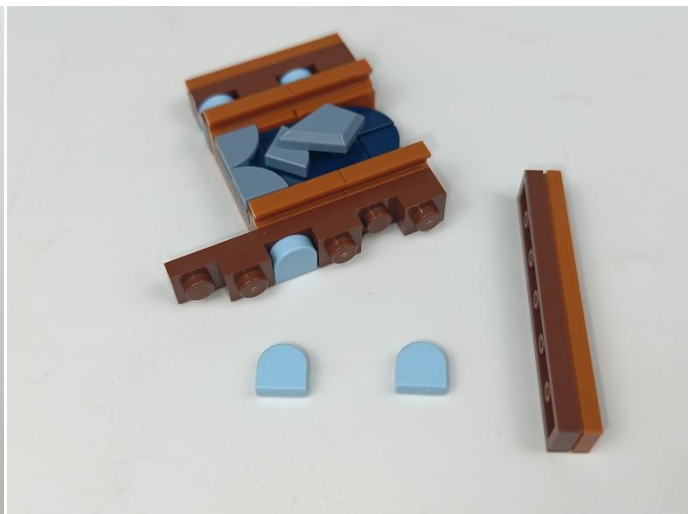


60

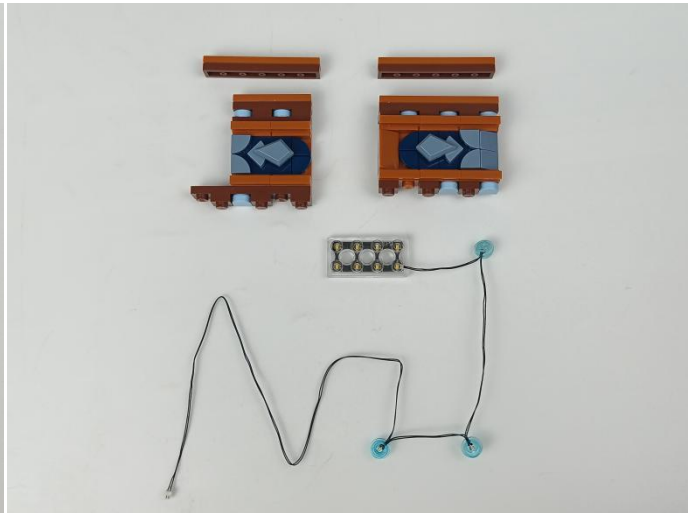



61

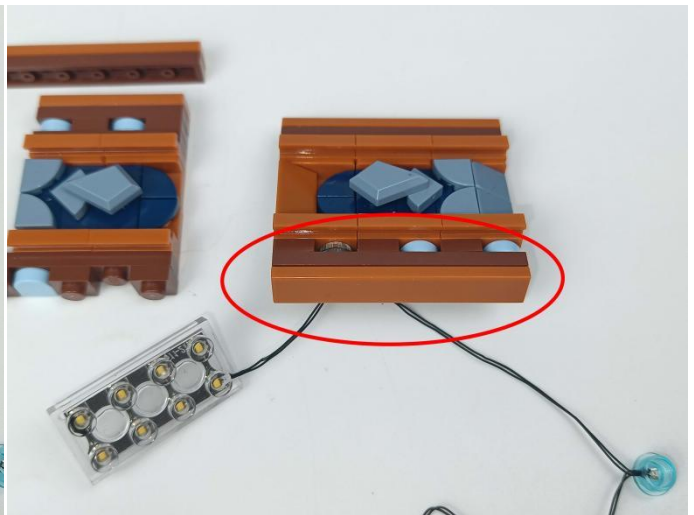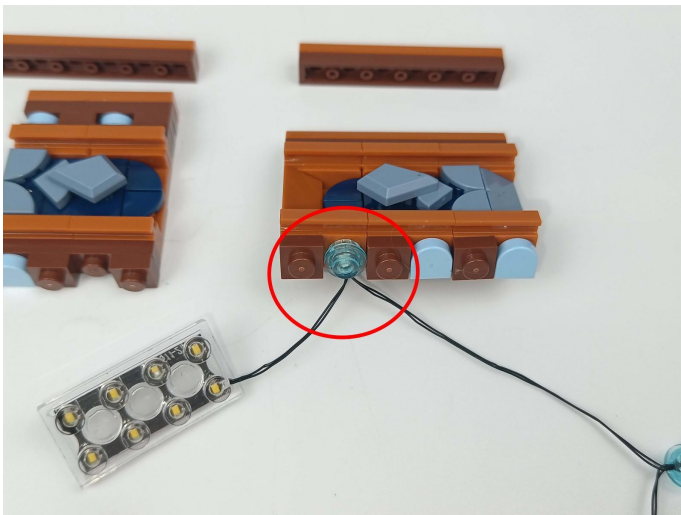



62

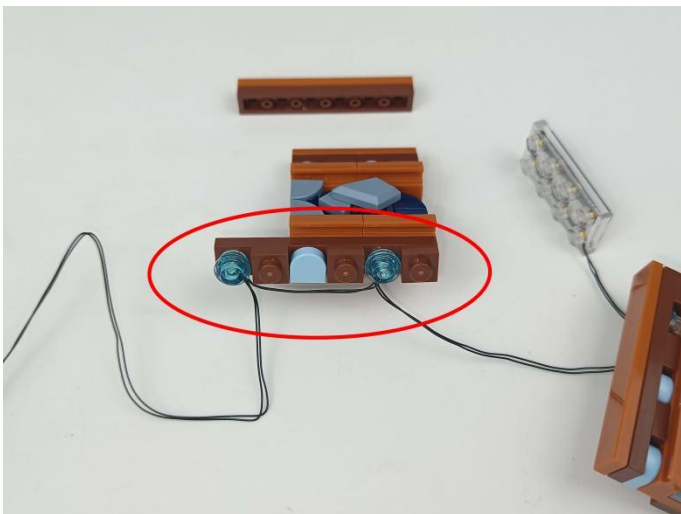



63

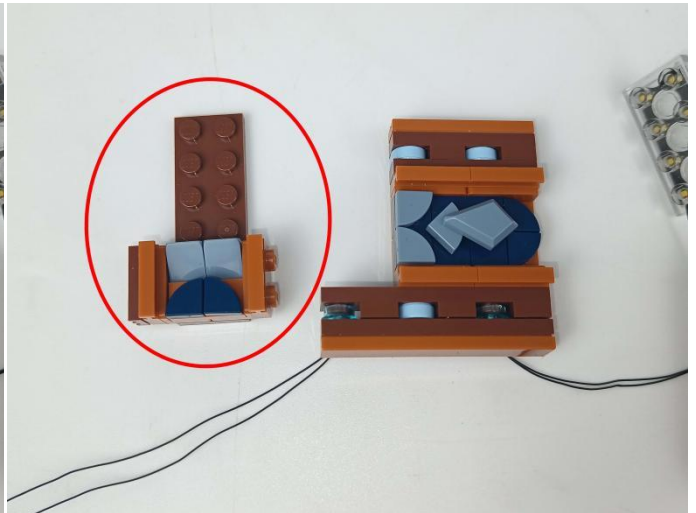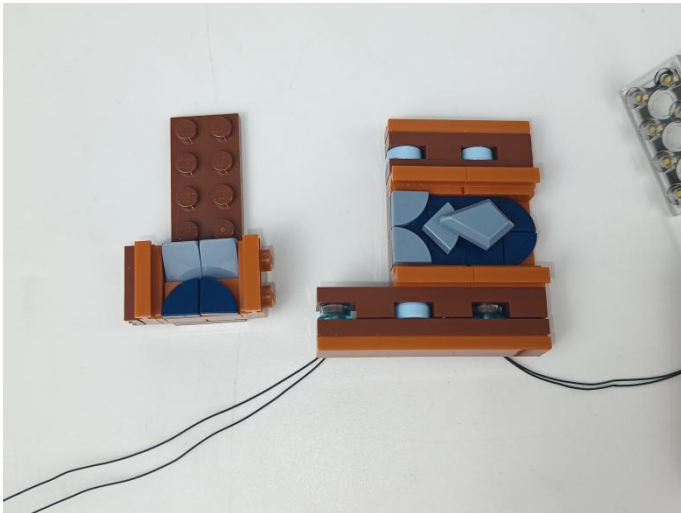


64

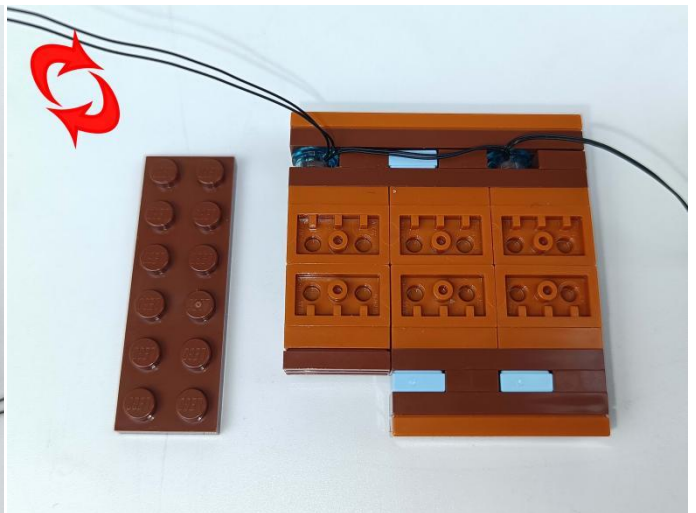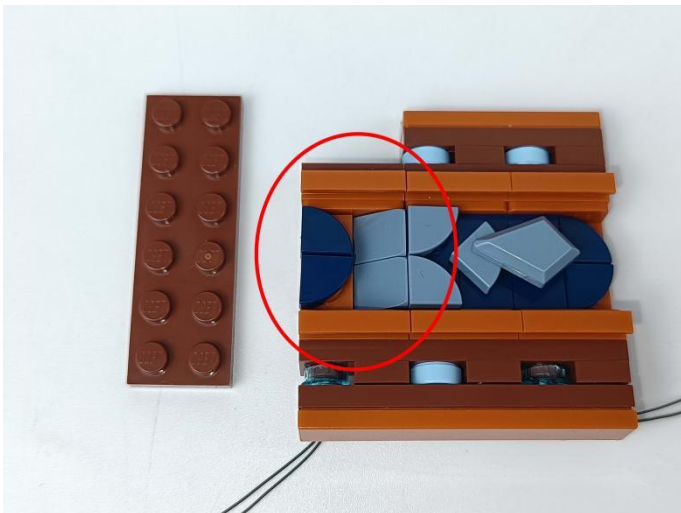

65

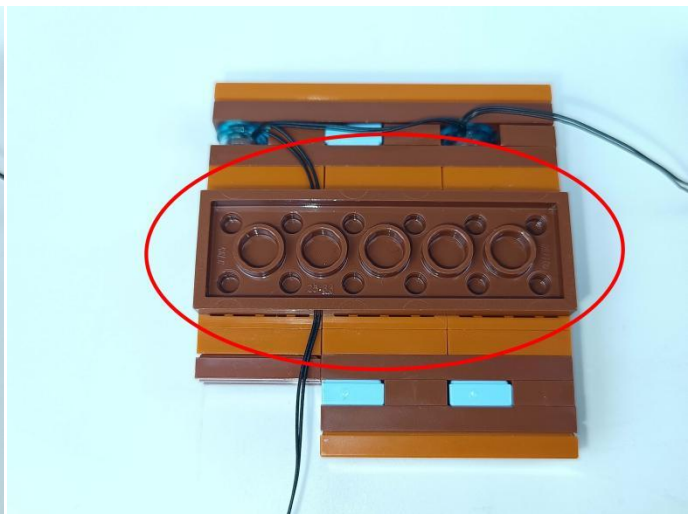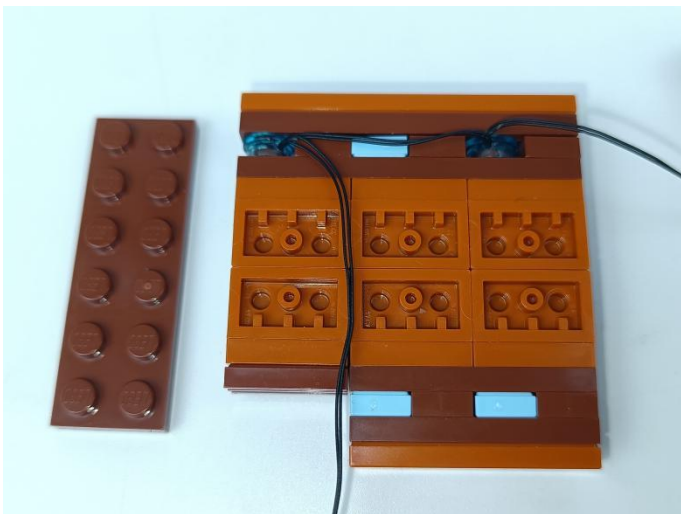


66

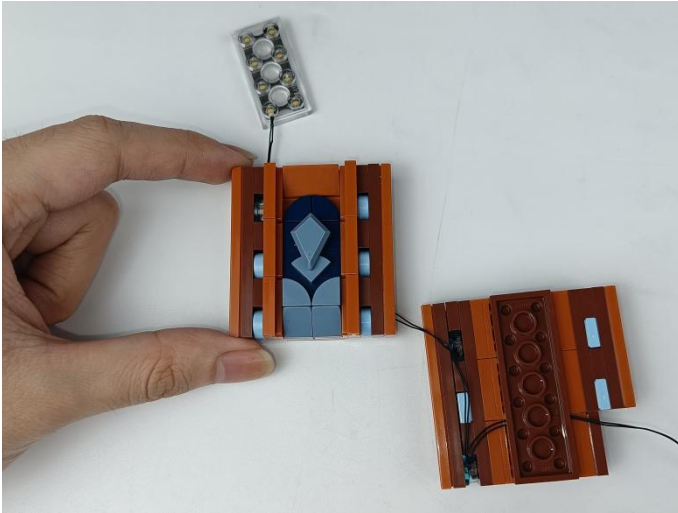

67



68

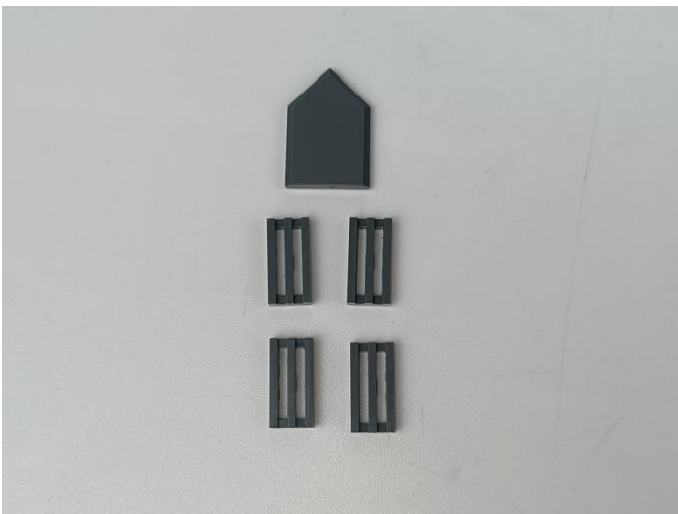



68




70




71

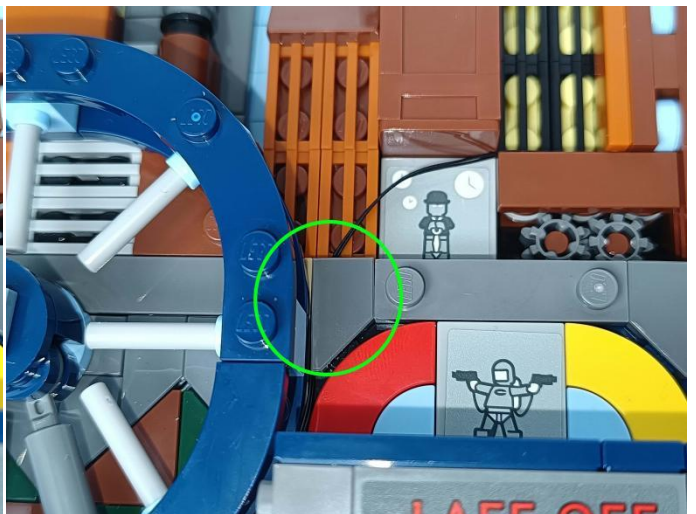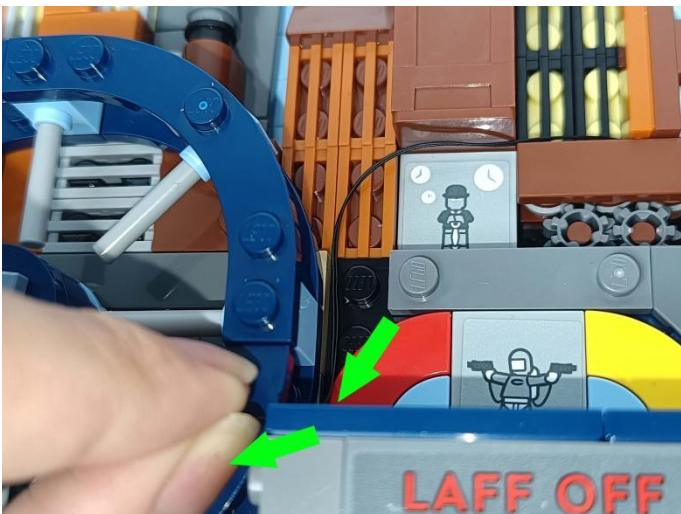


72

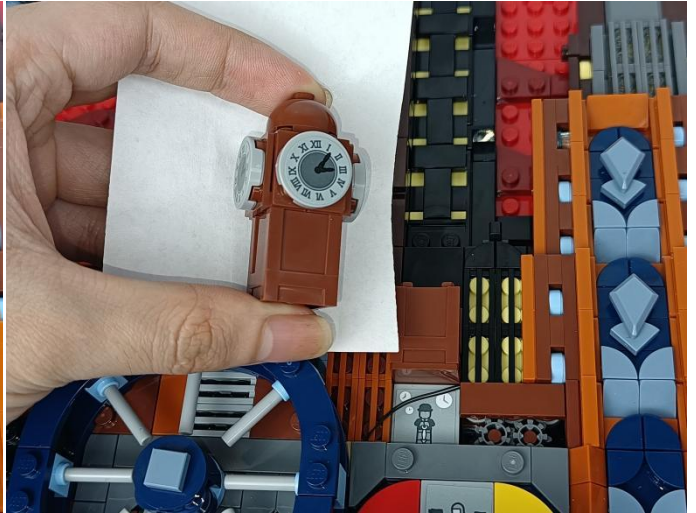


73

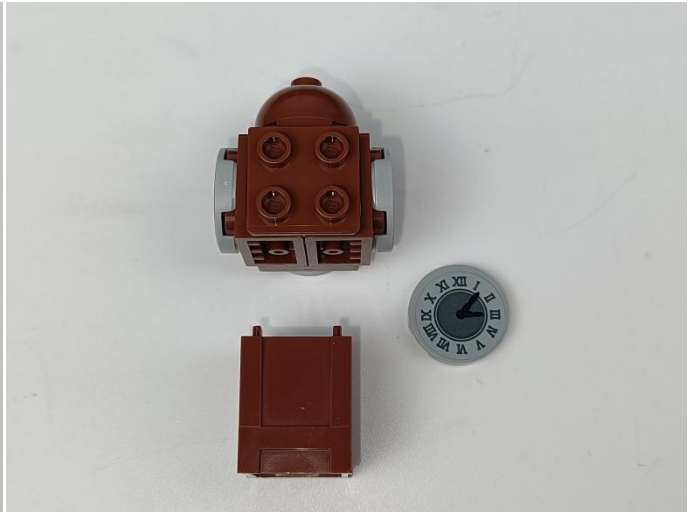


74

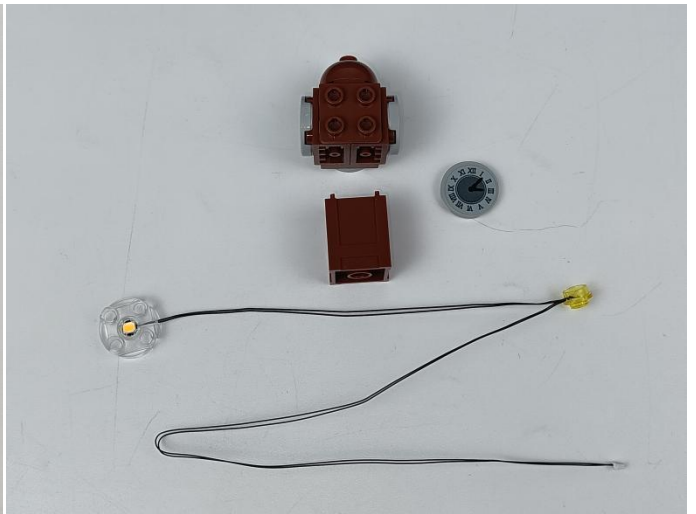


75

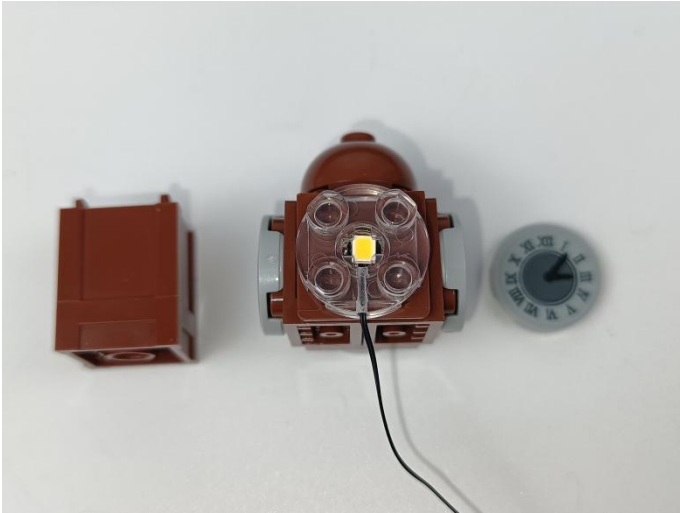


76

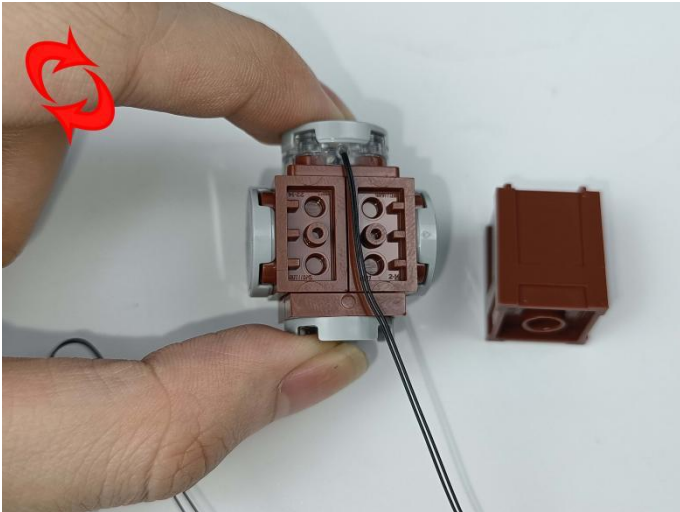



77

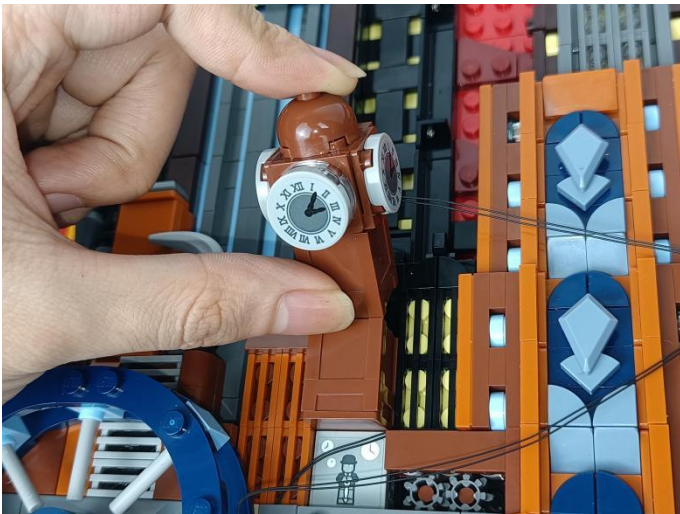


78

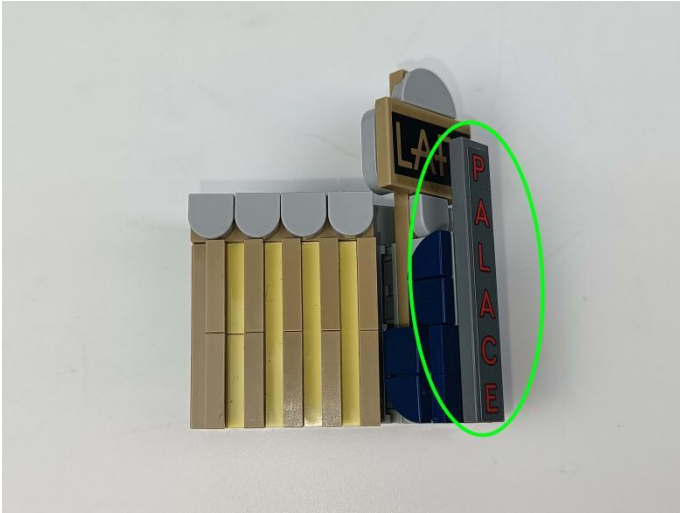



79

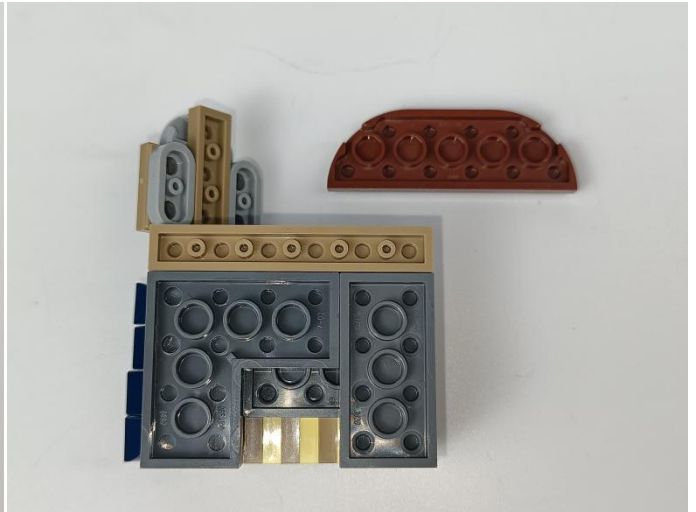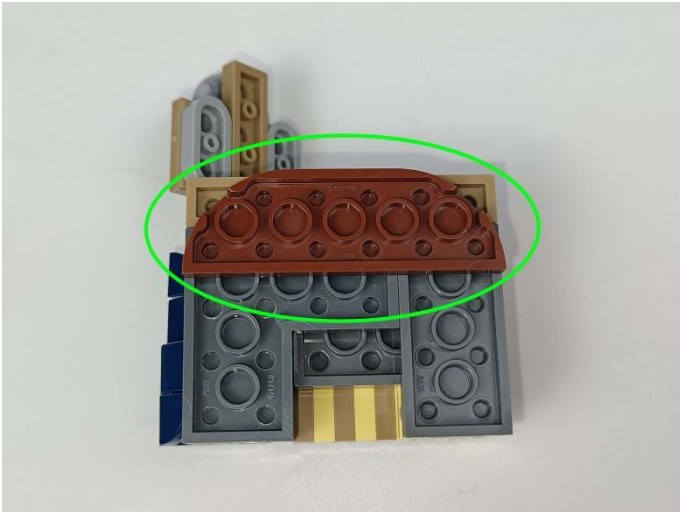



80

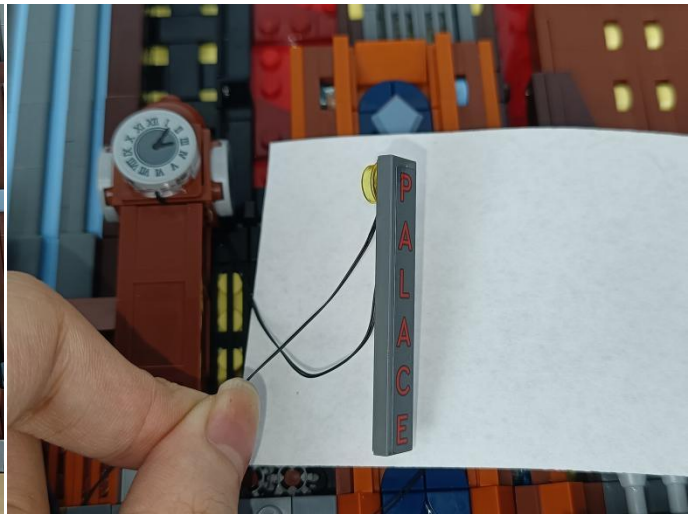

81

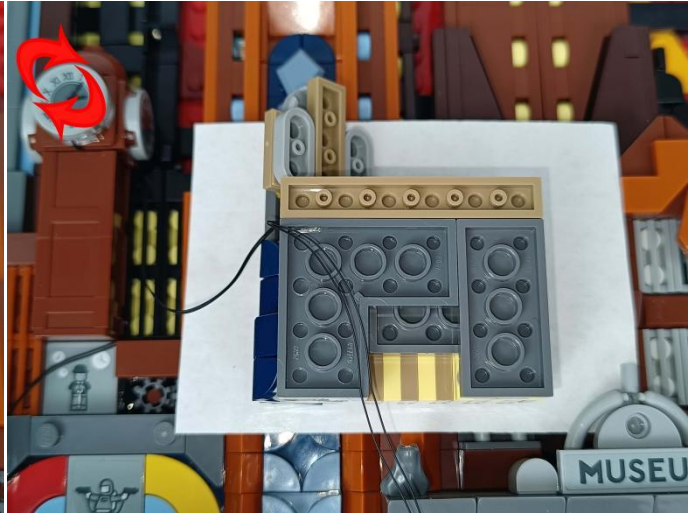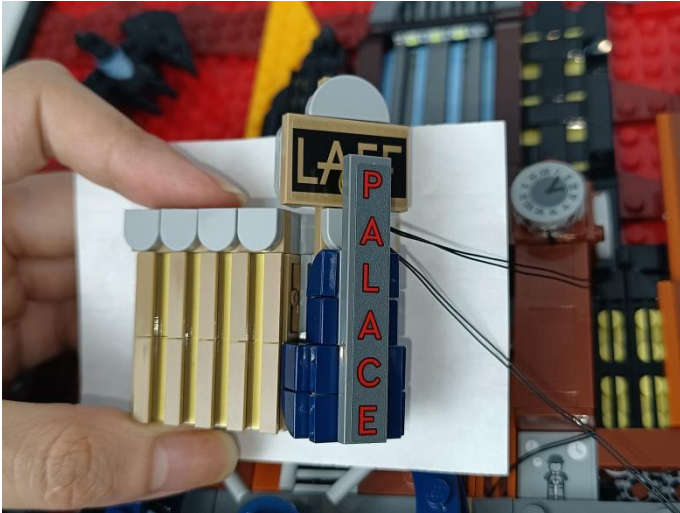

82

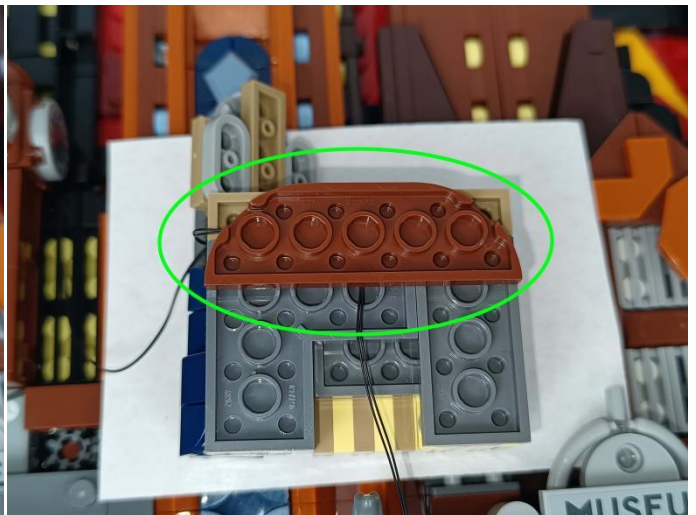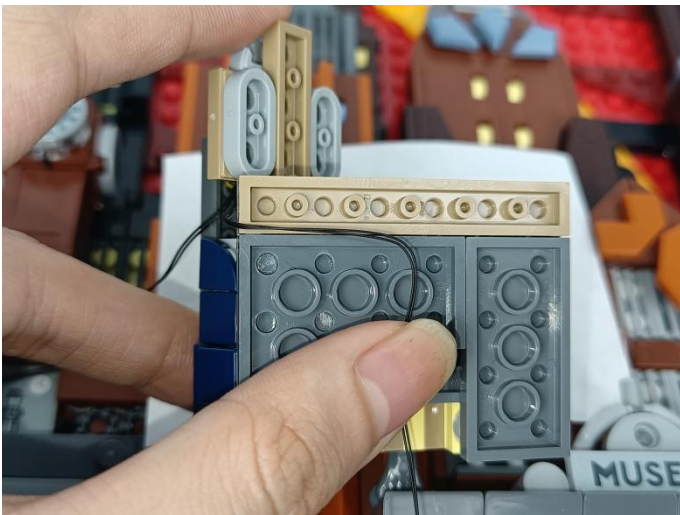



83





84





85

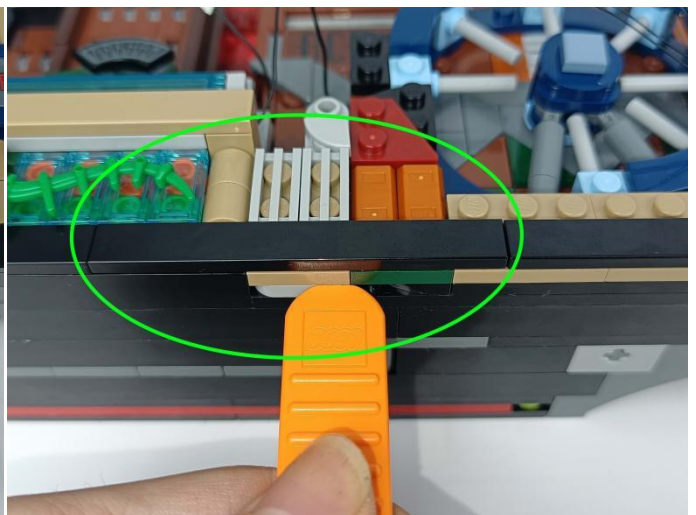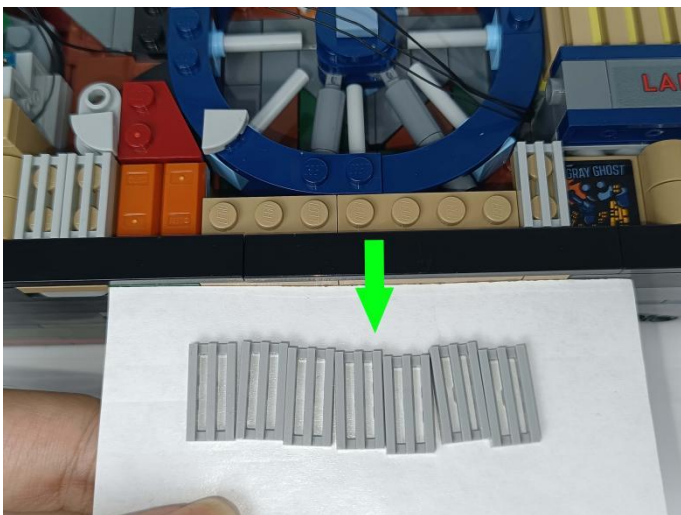


86

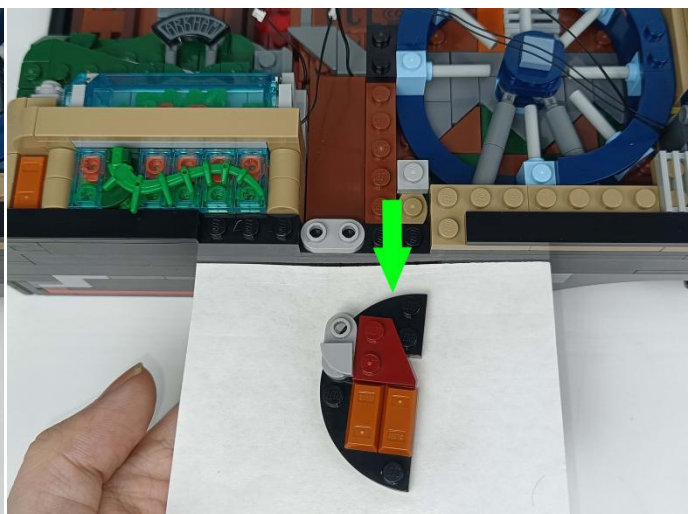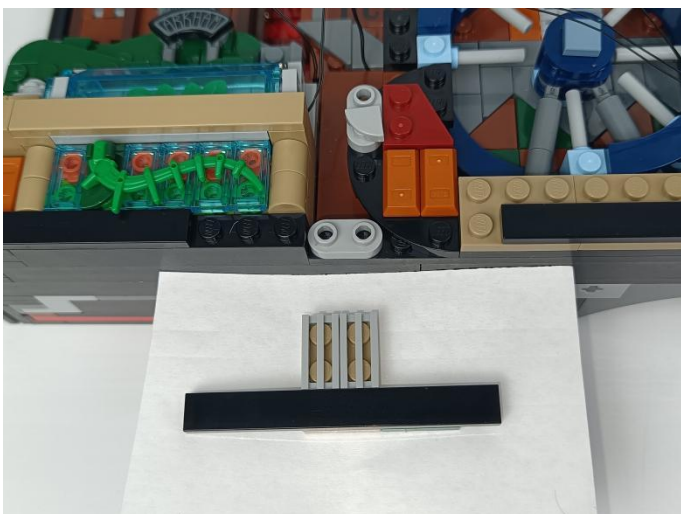


87

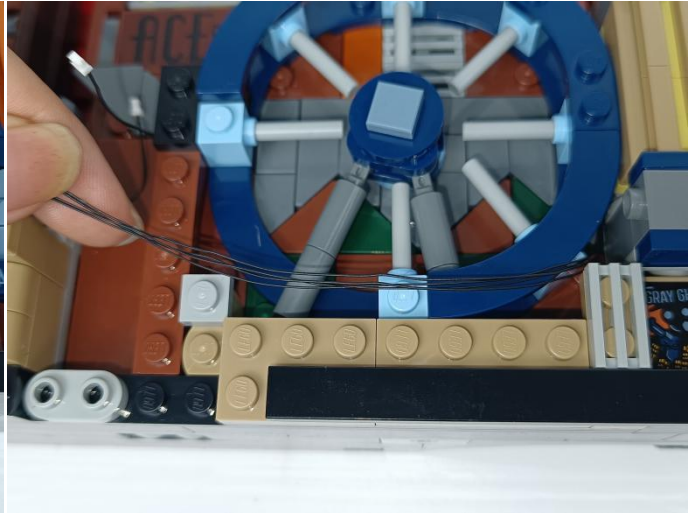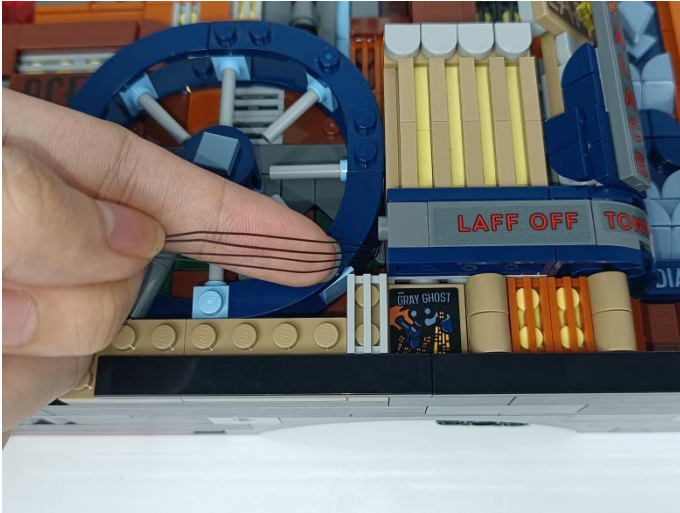



88

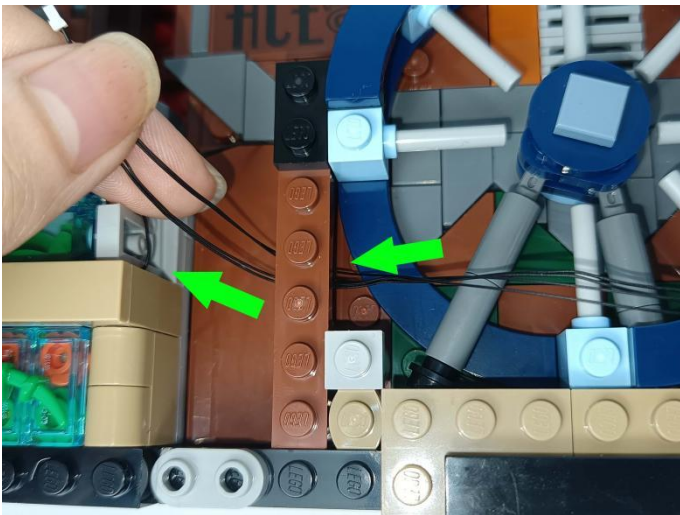


89

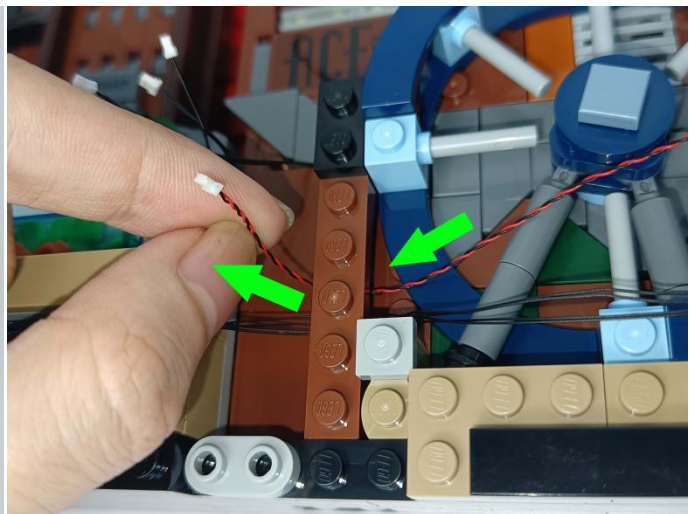



90

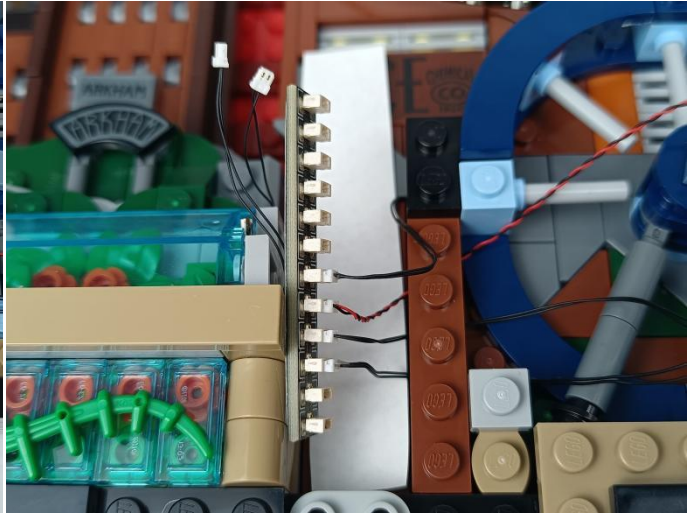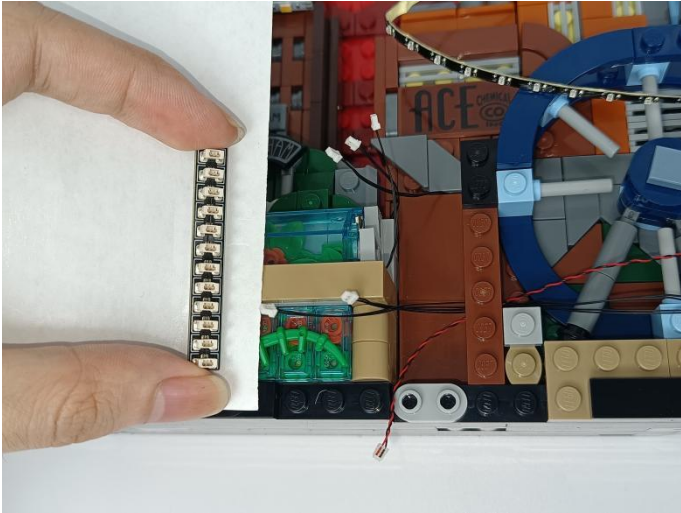


91

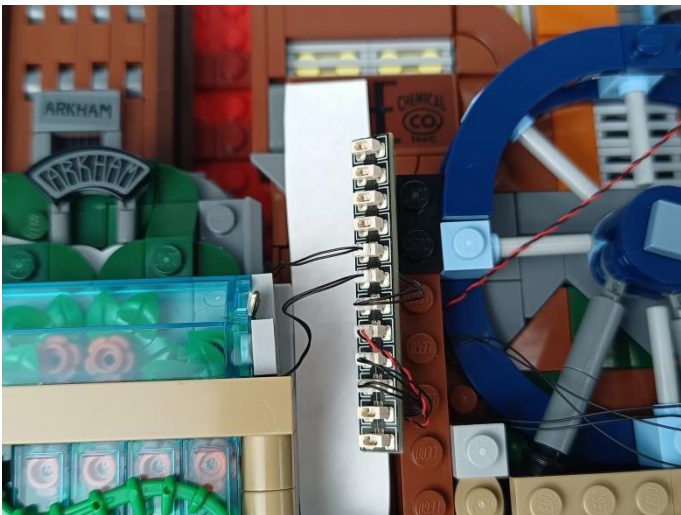



92

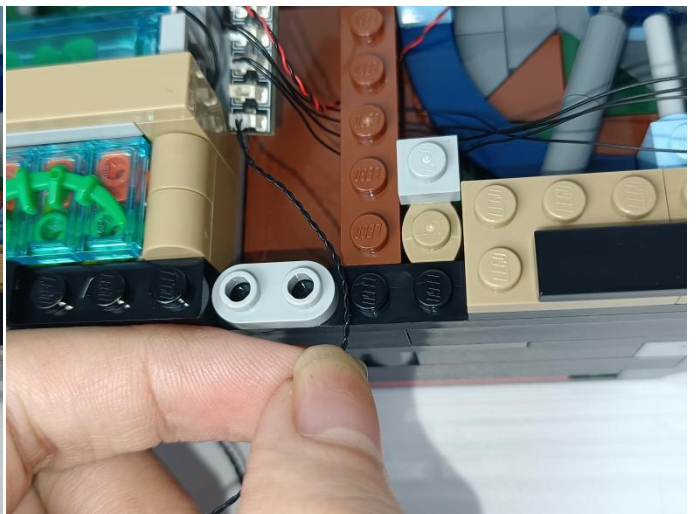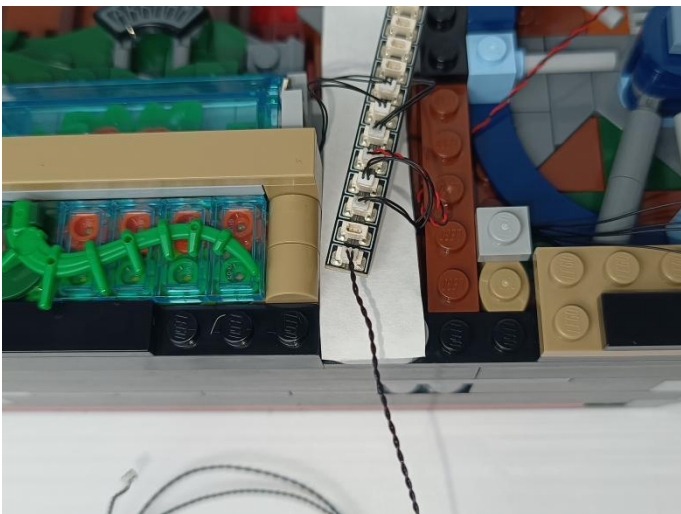


93

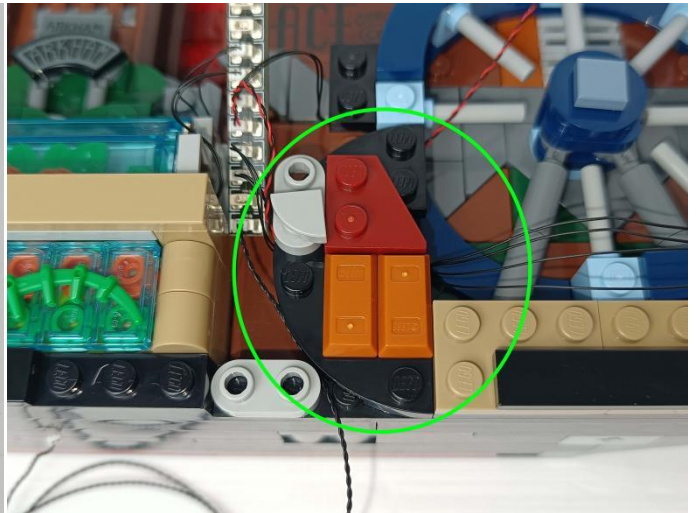


94

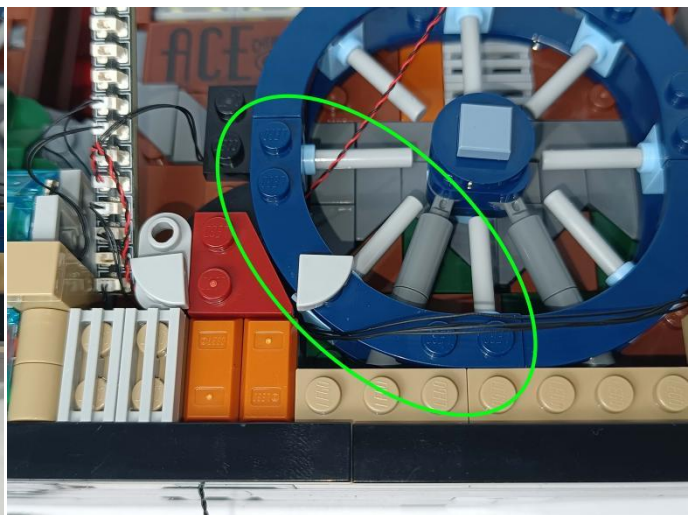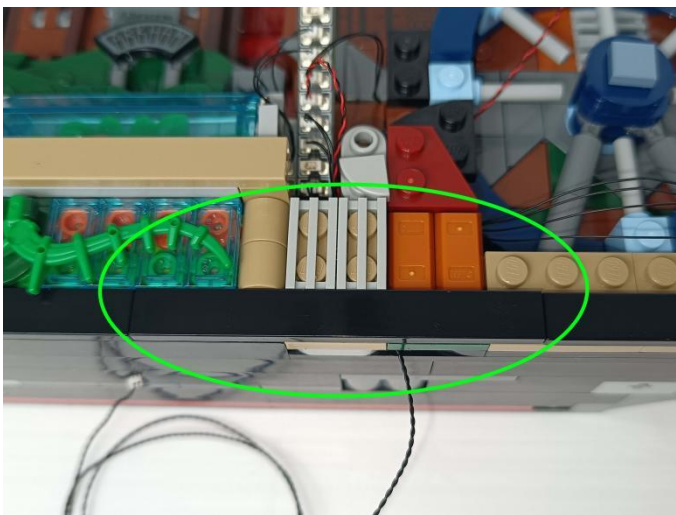



95

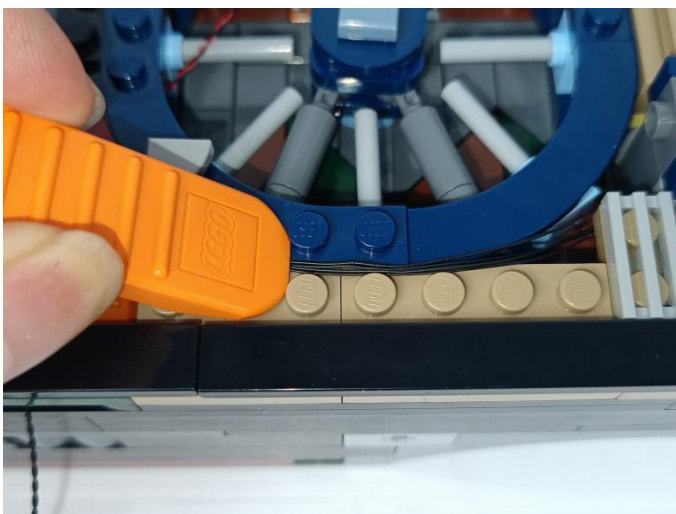



96

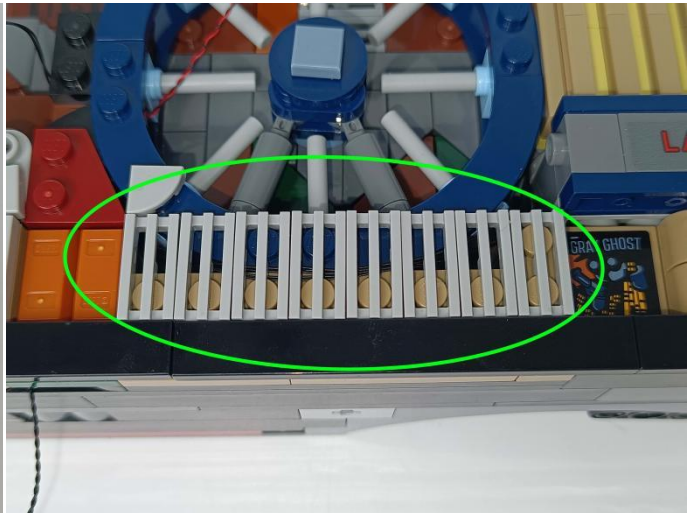


97

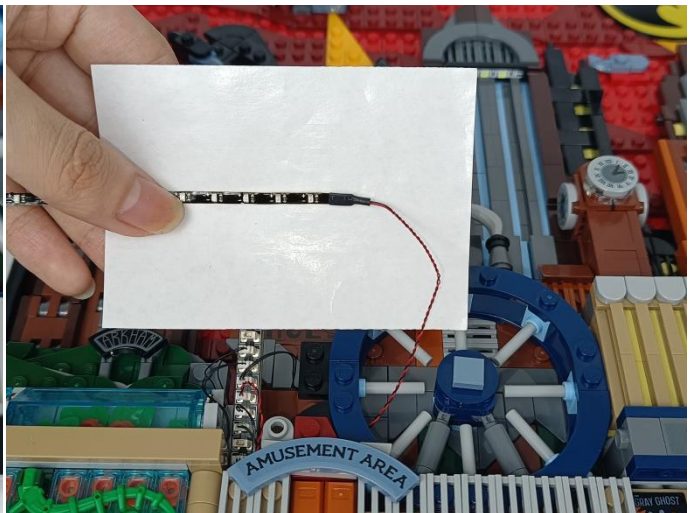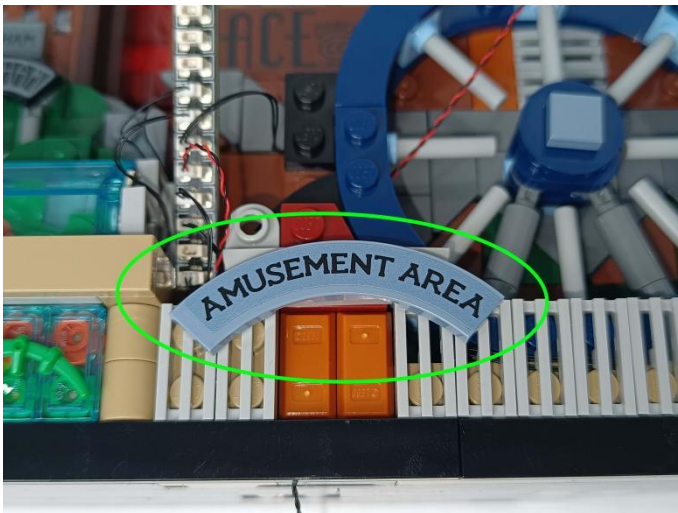


98

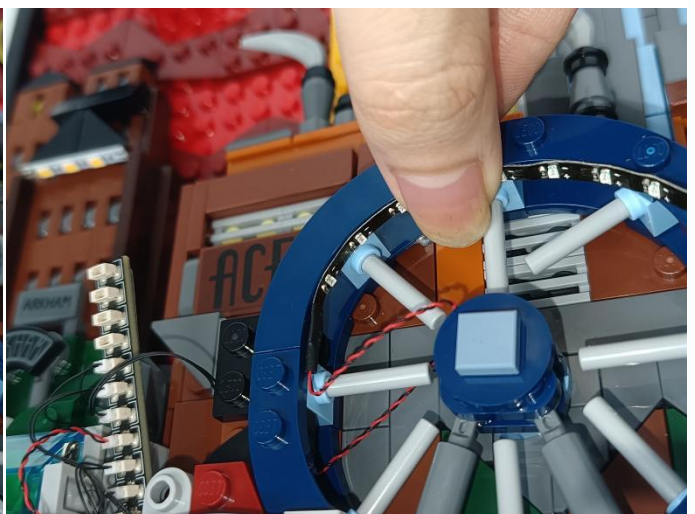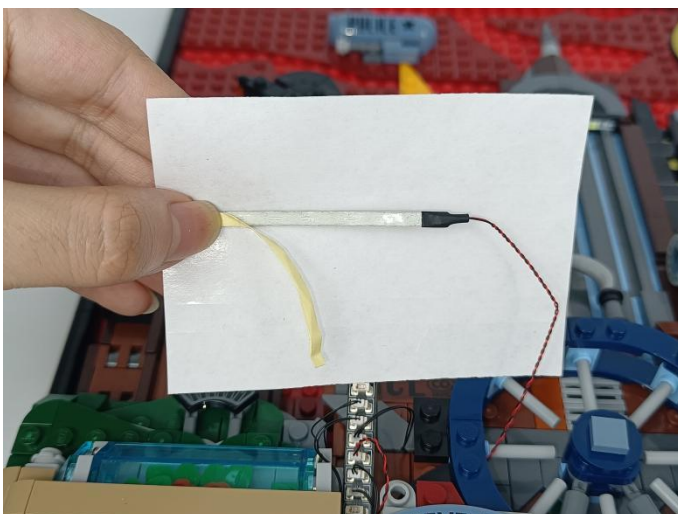

99

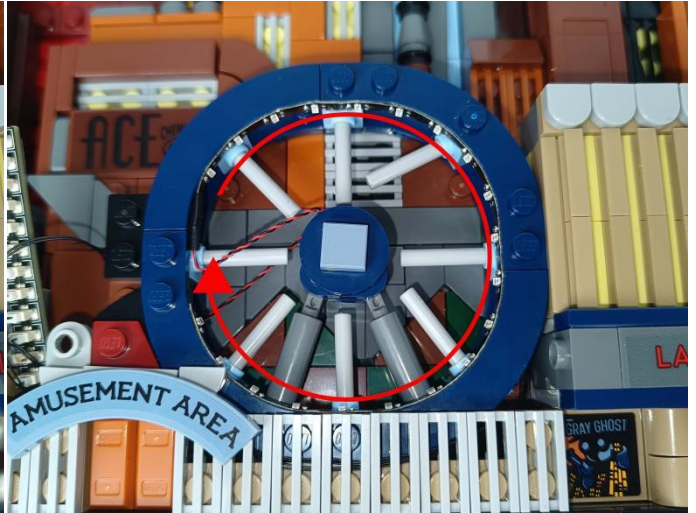


100

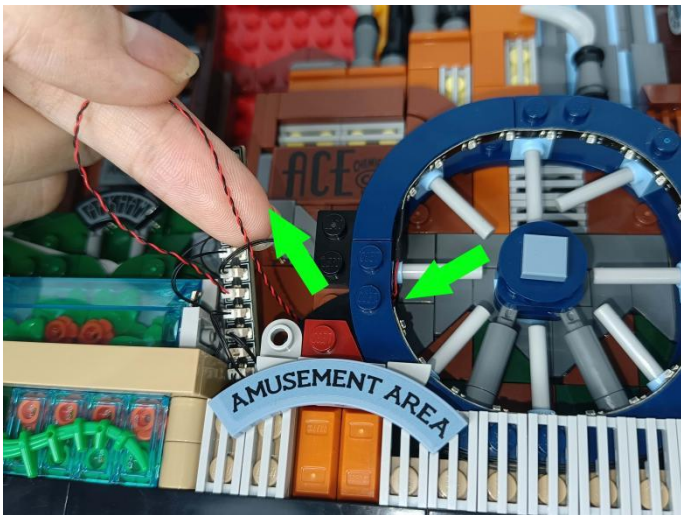

101




102

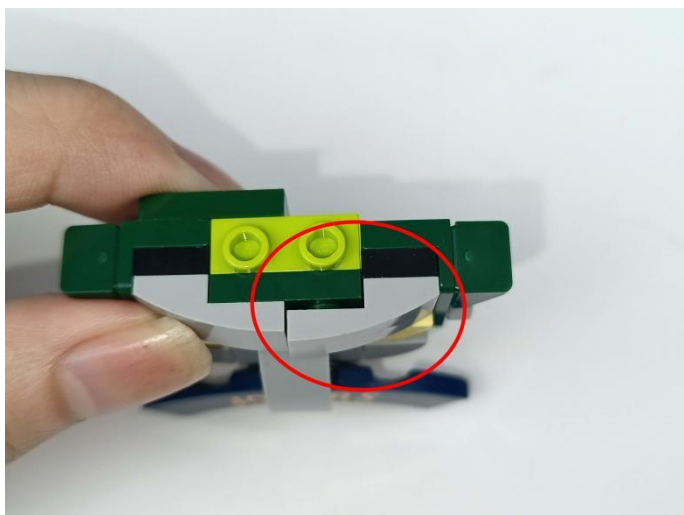


103





104

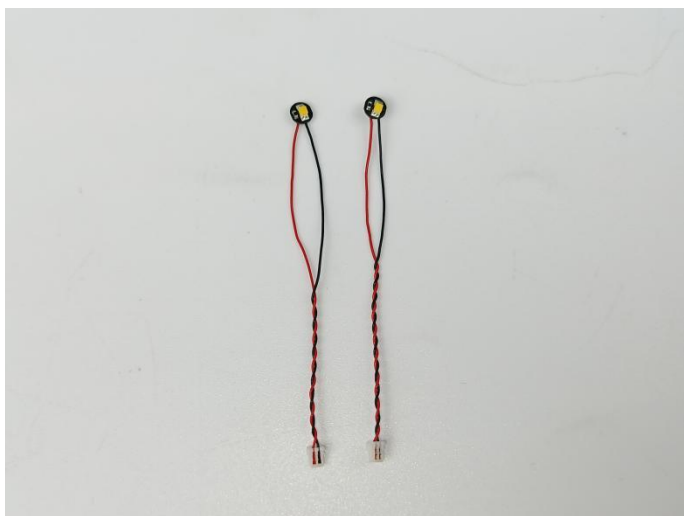


105

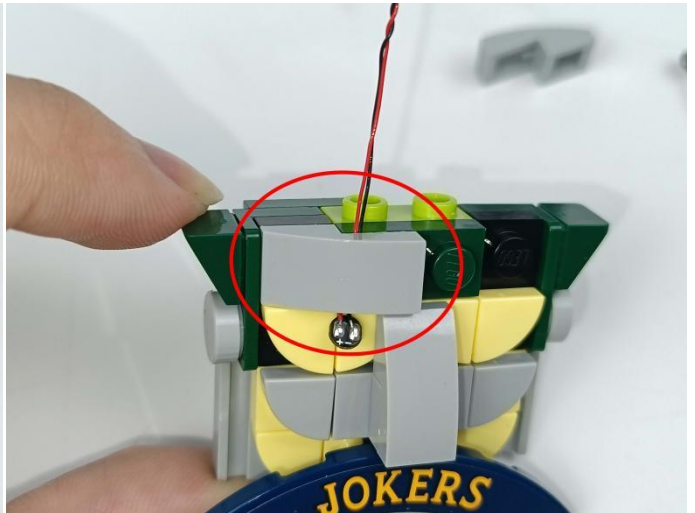


106

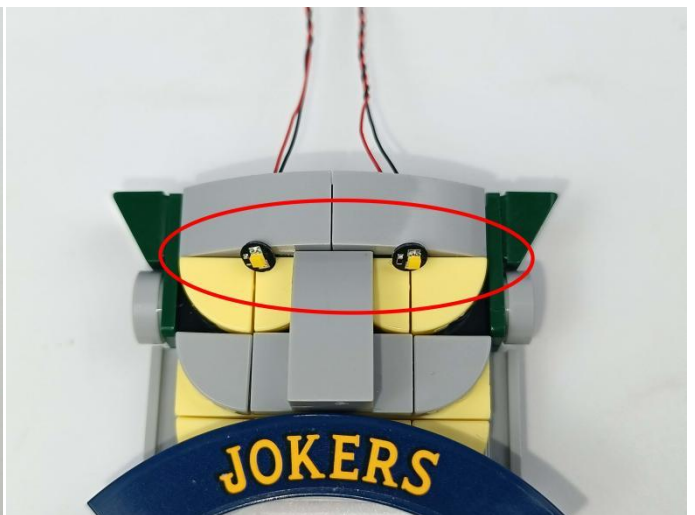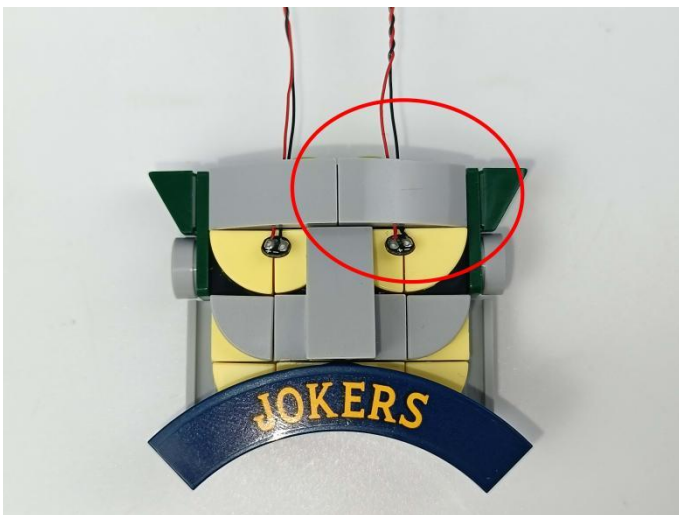



107

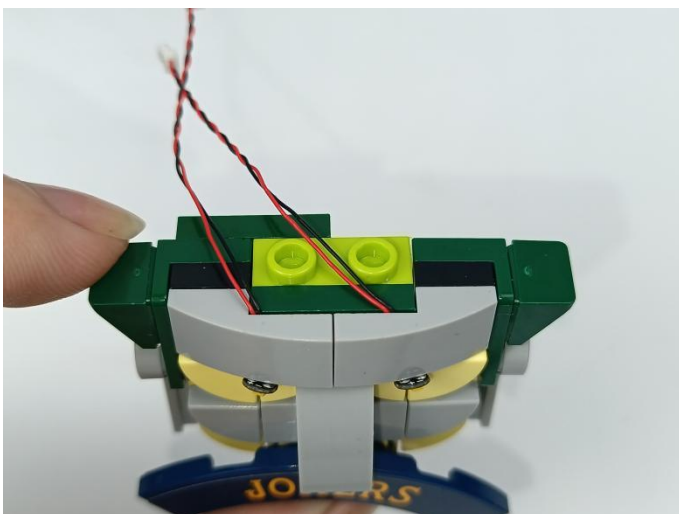

108

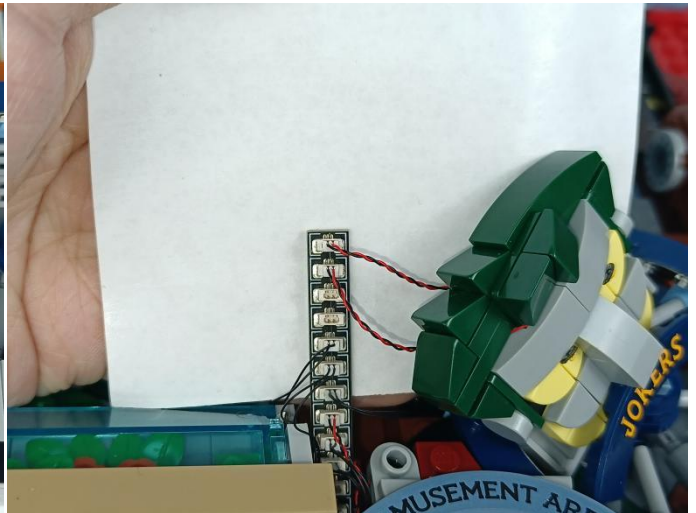

109

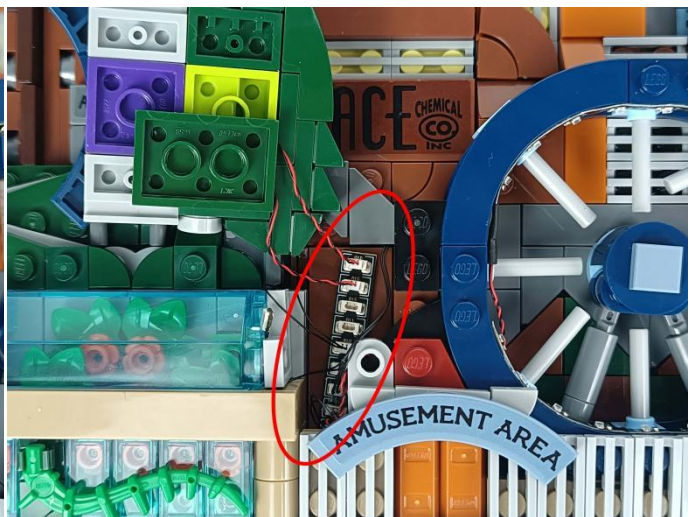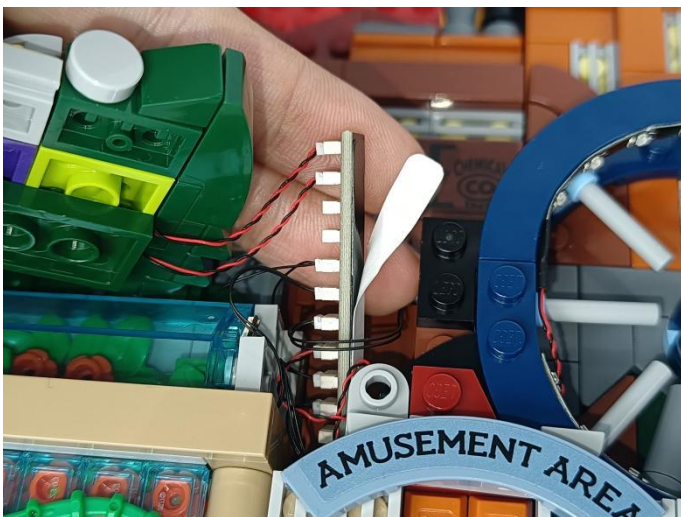

110



111



112




113



114



115

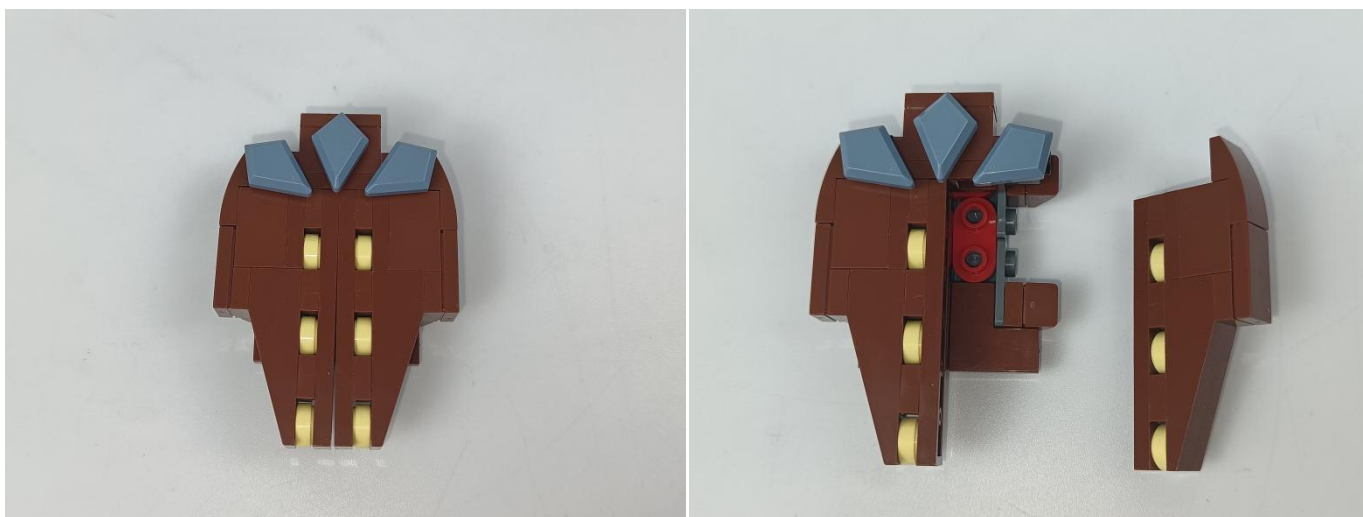


116





117




118

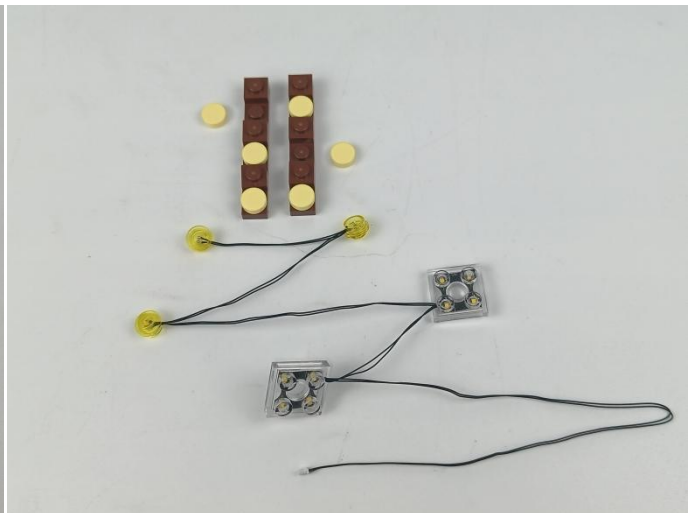


119

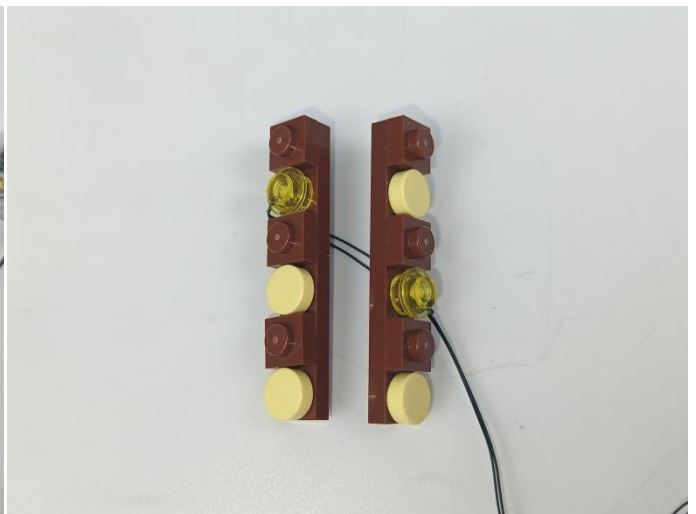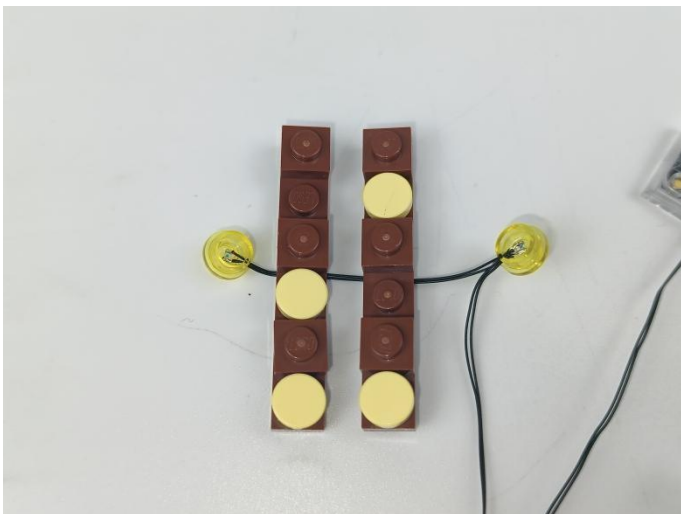



120

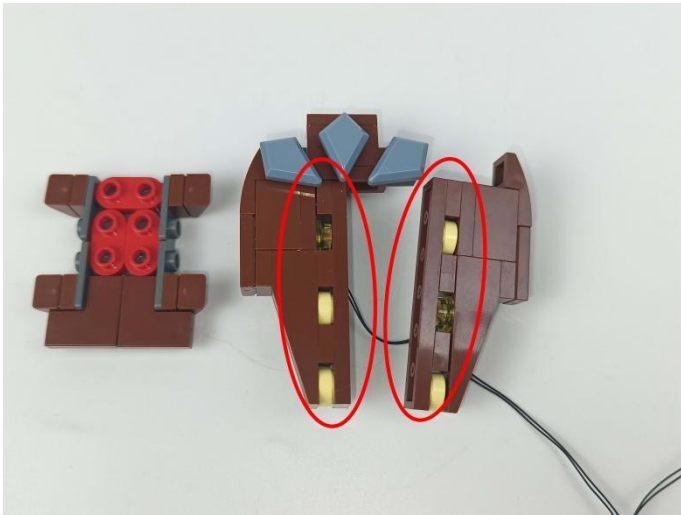


121

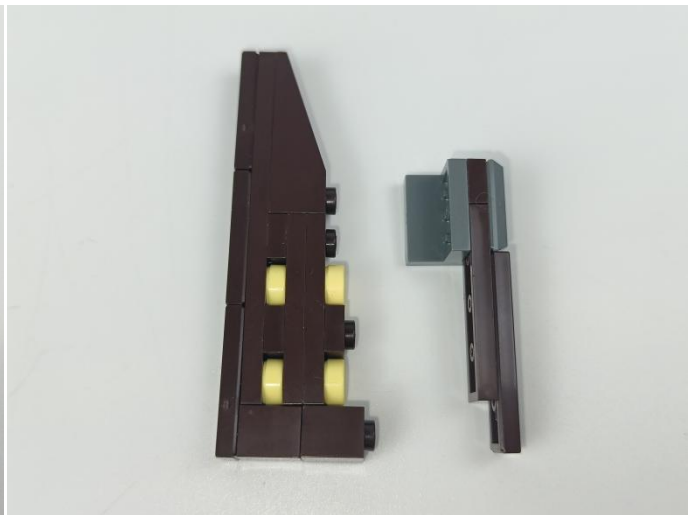

122

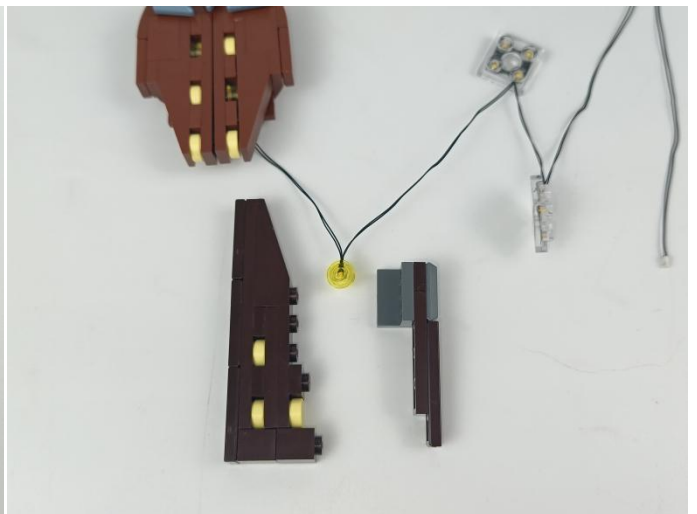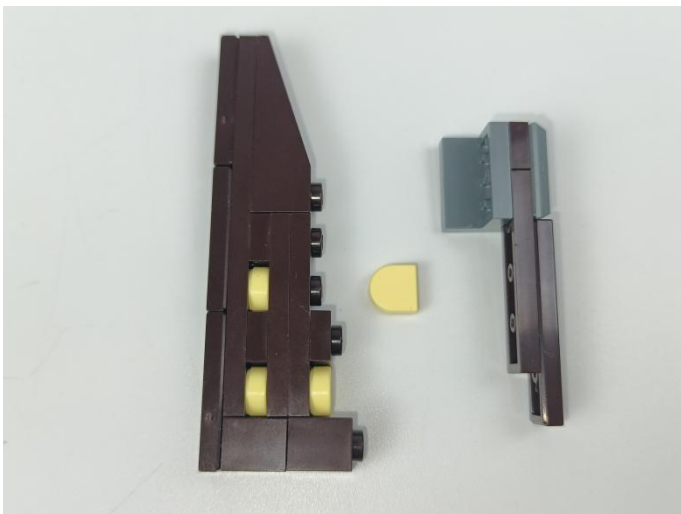

123

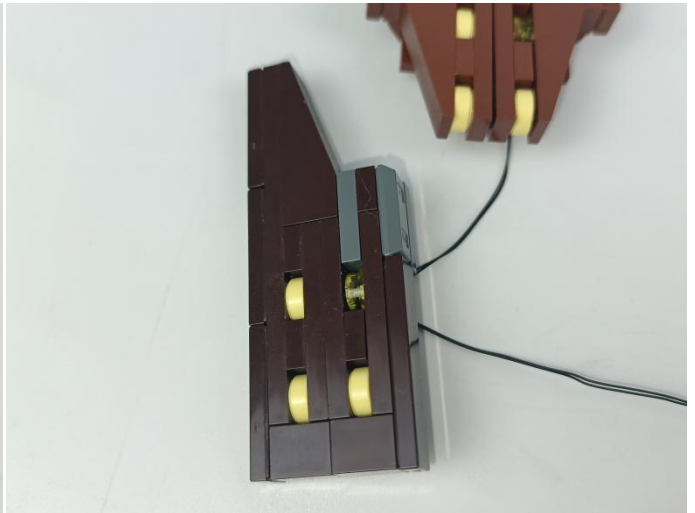



124




125





126

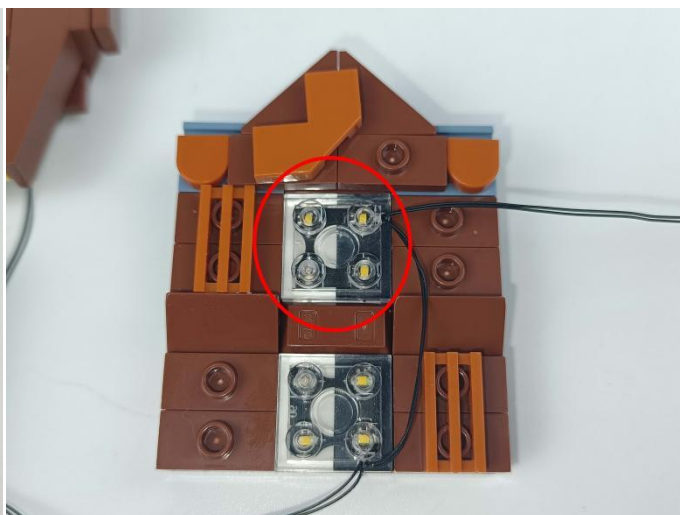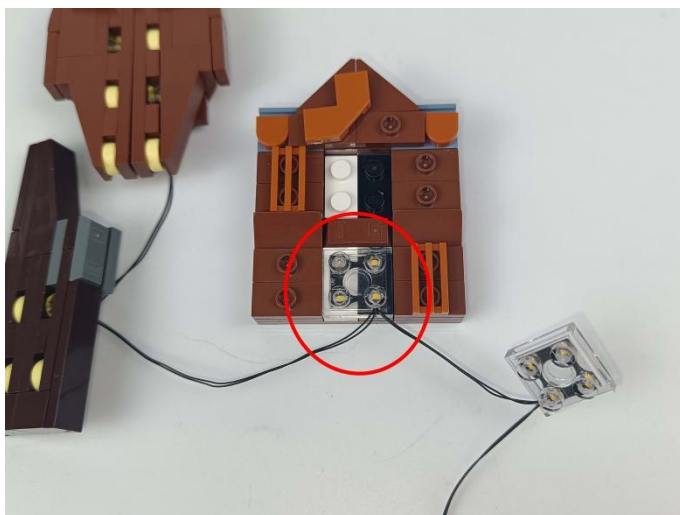


127

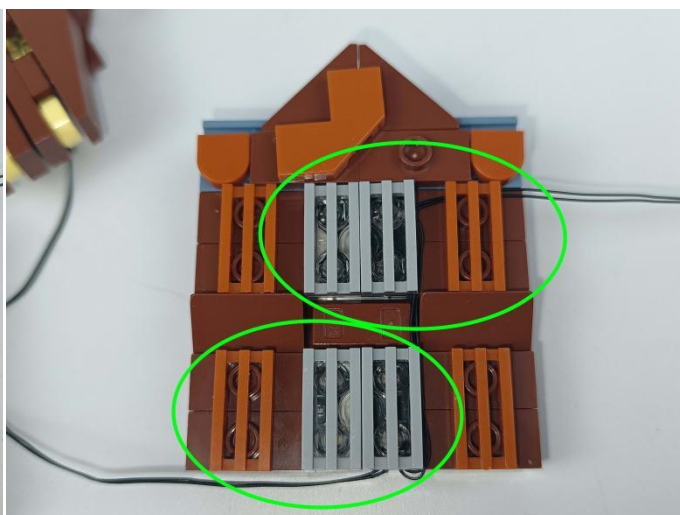

128

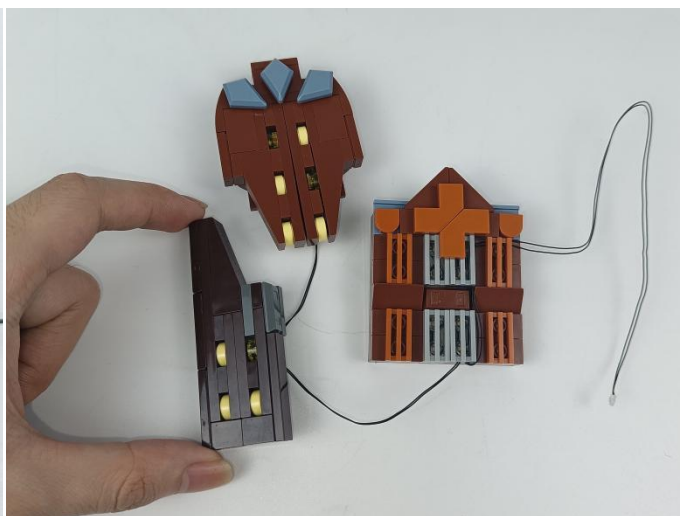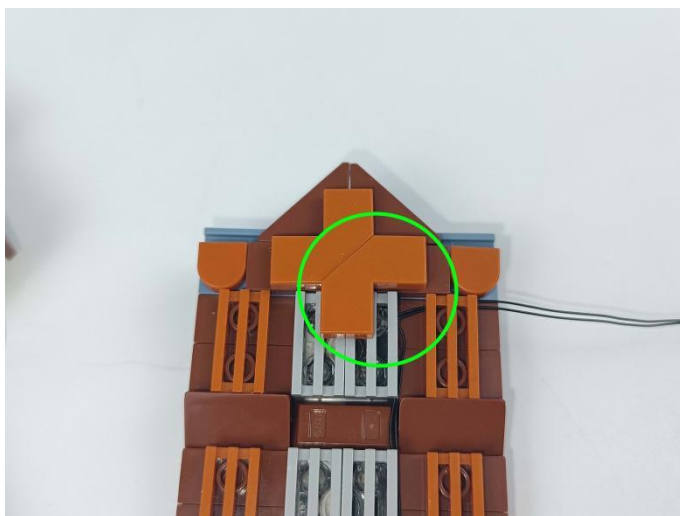

129

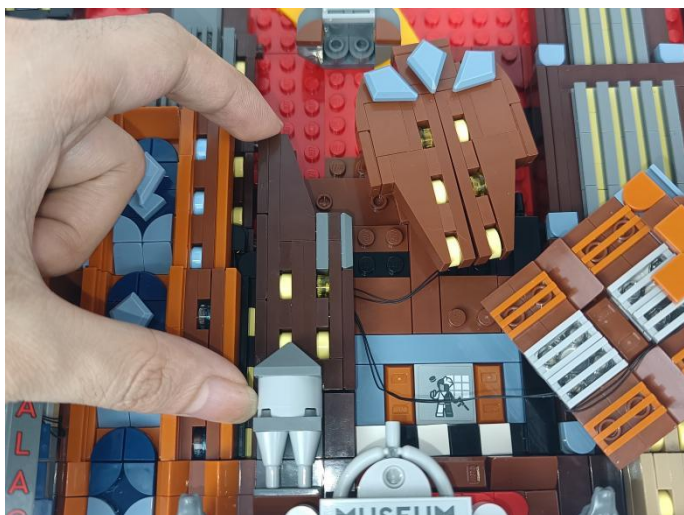

130



131




132





133





134

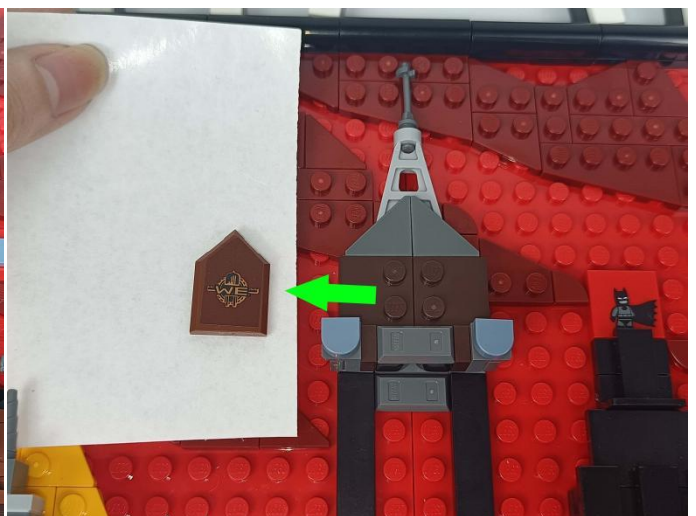



135

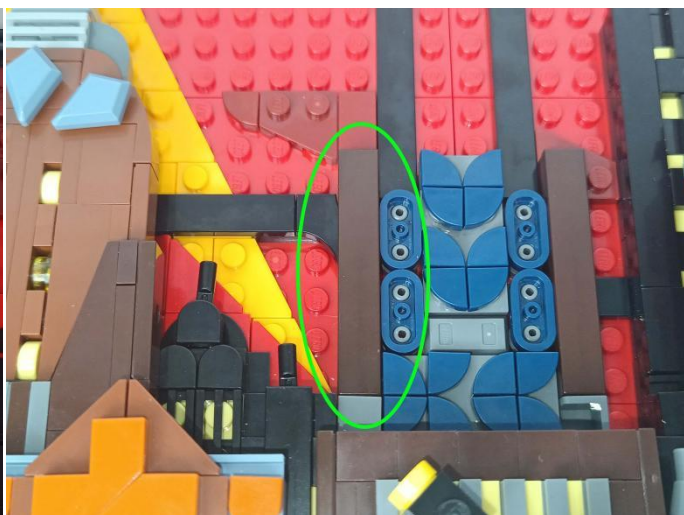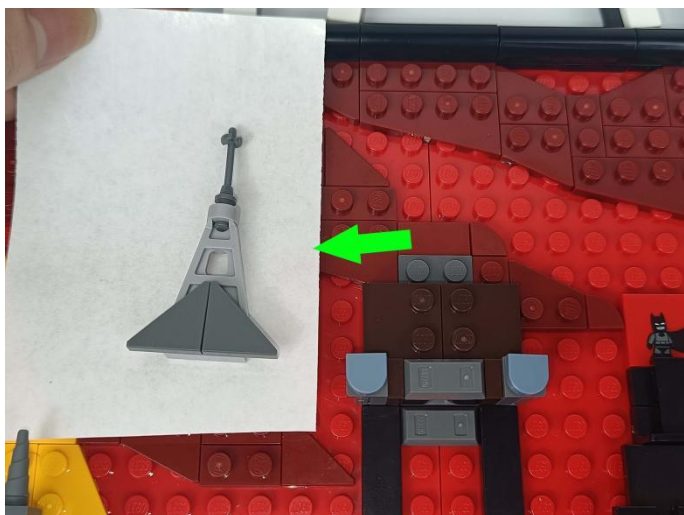

136

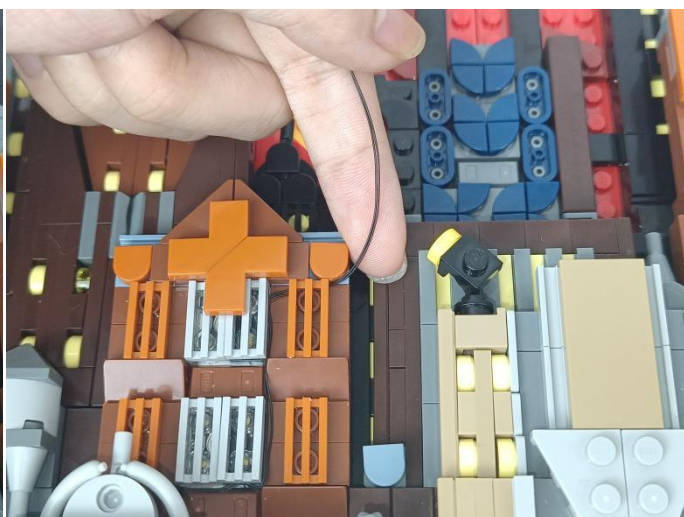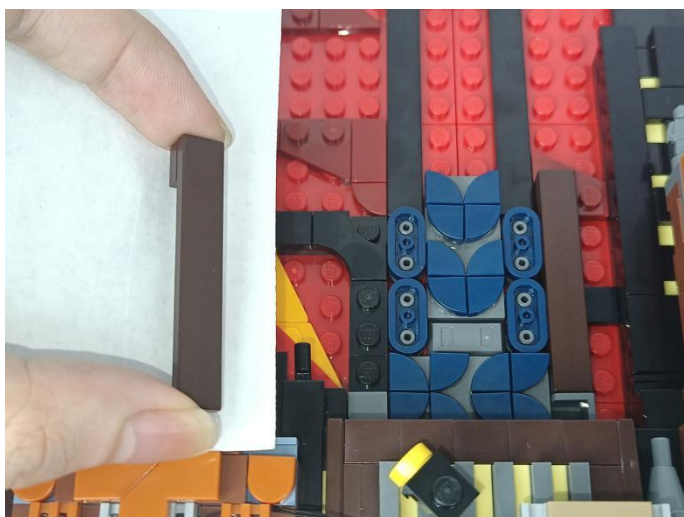



137

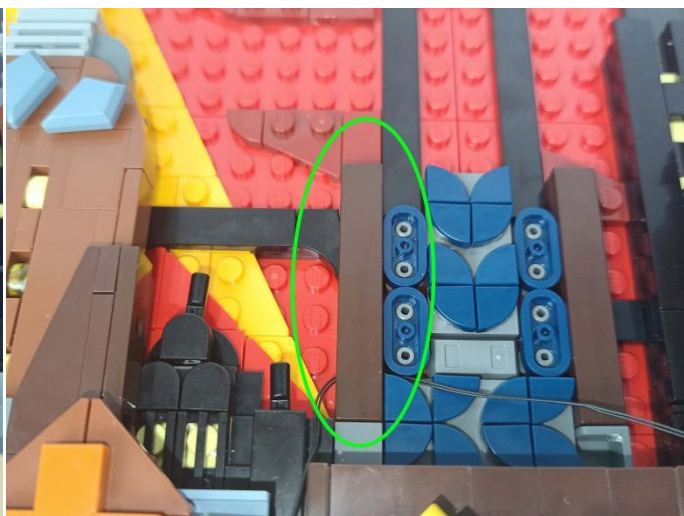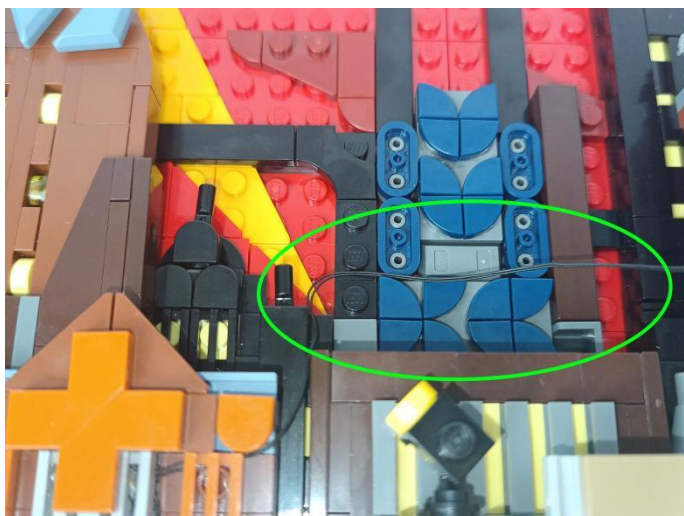


138





139

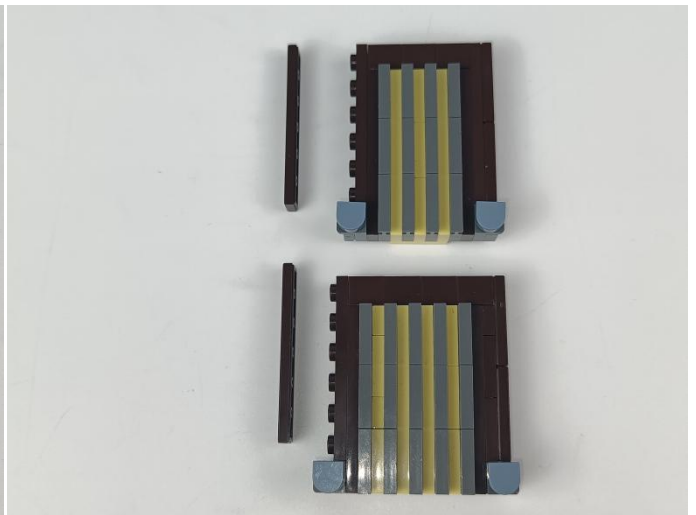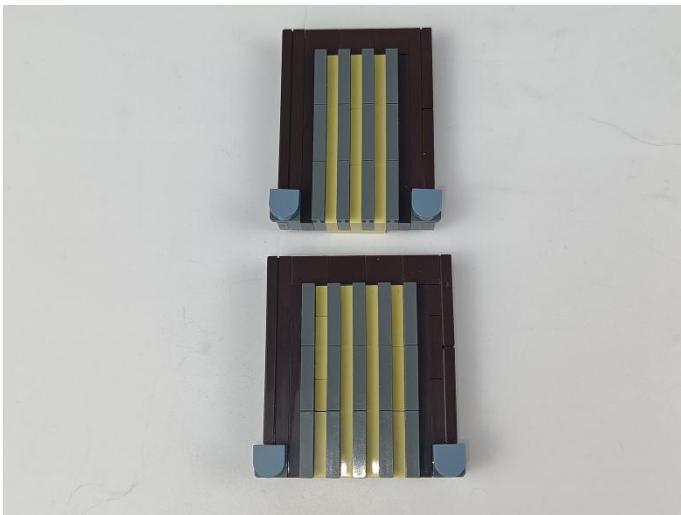



140

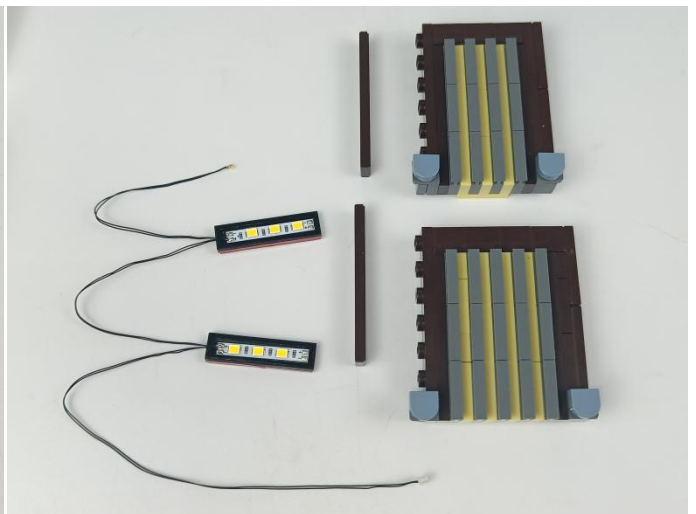



141

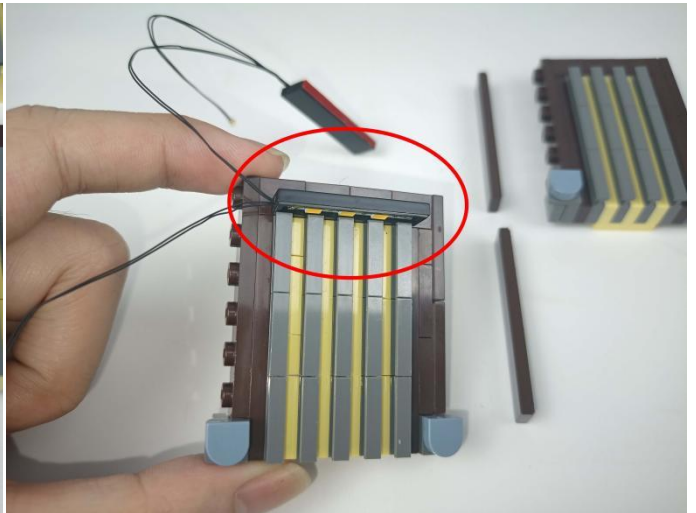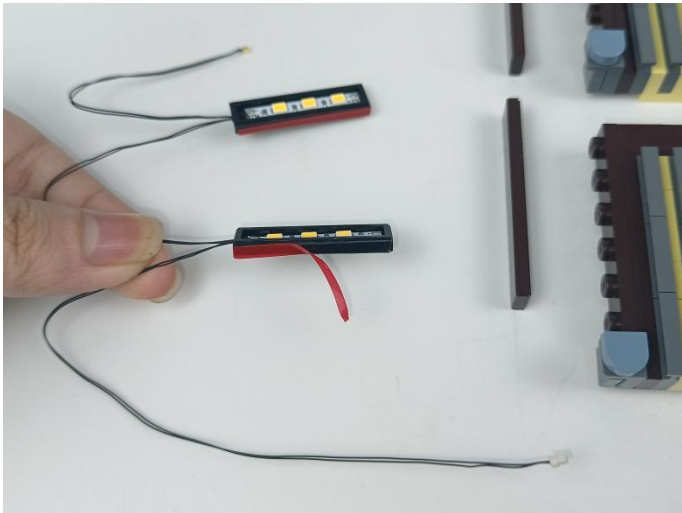



142

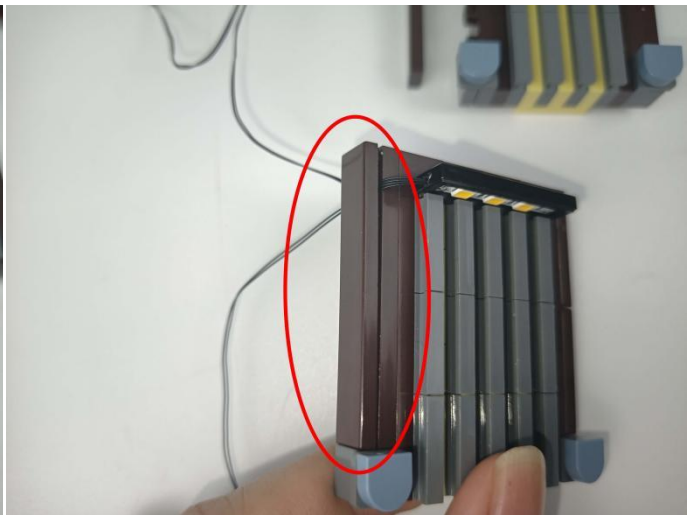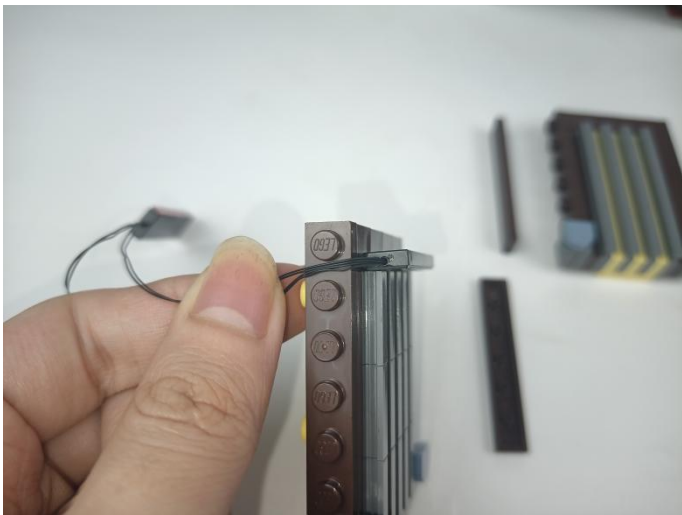

143

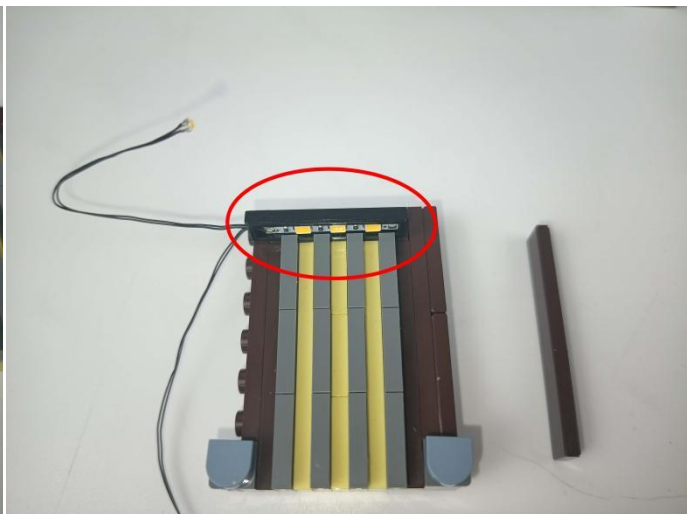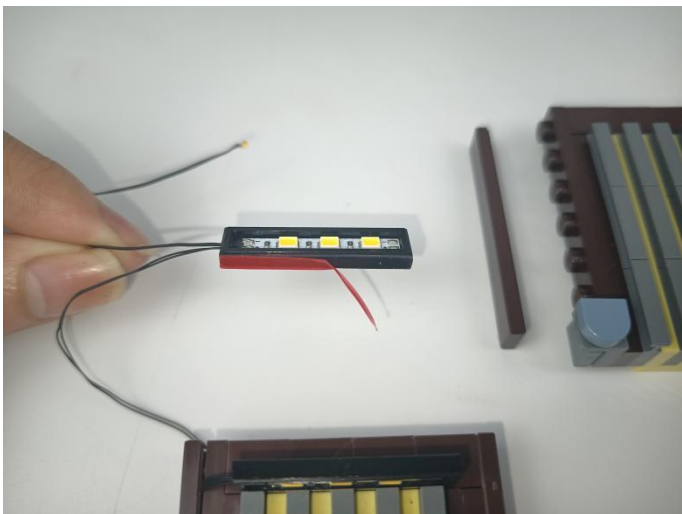


144

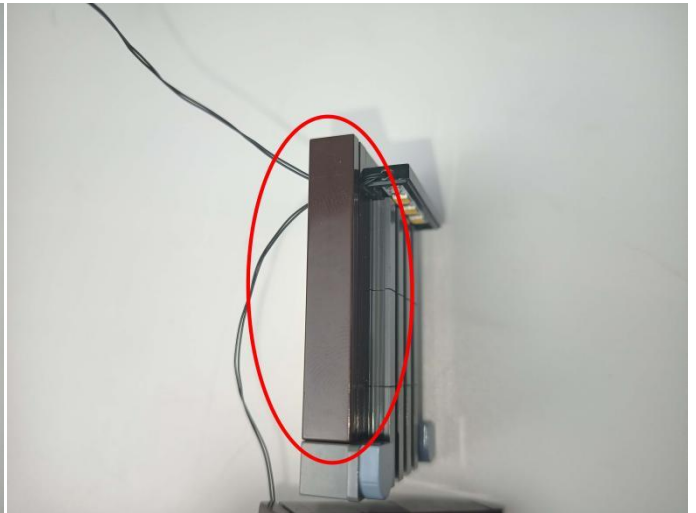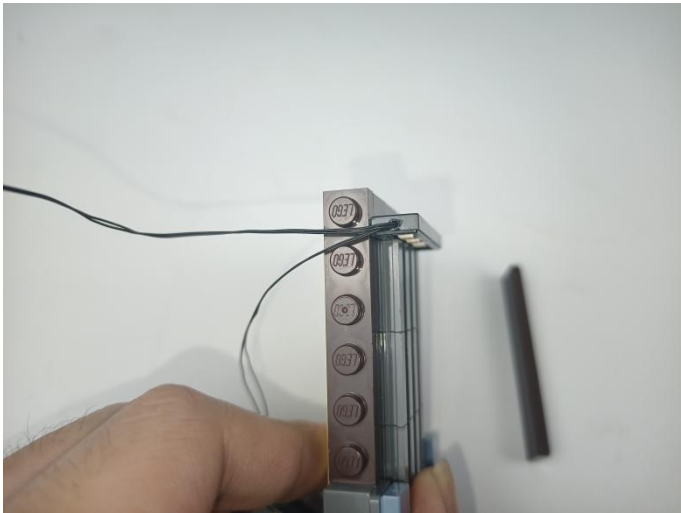


145





146

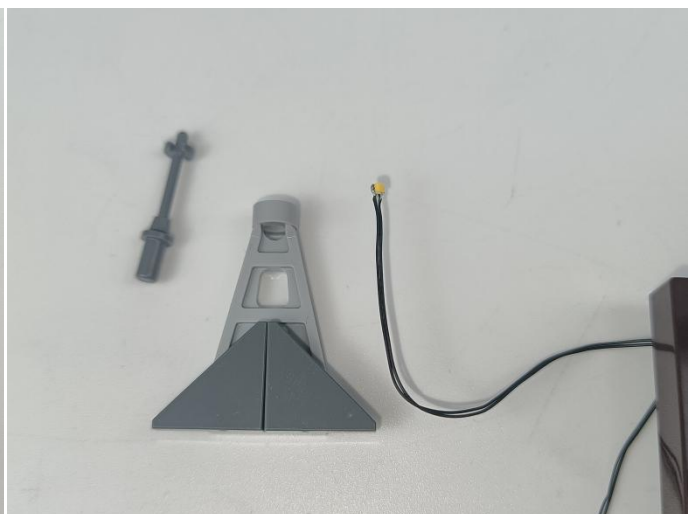


147

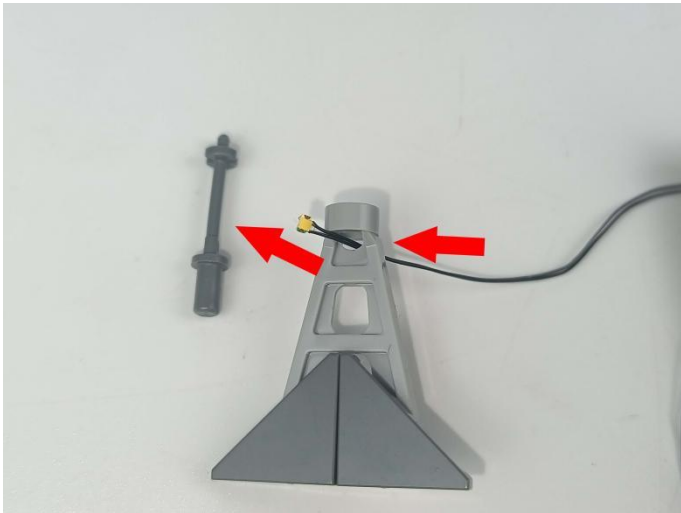


148

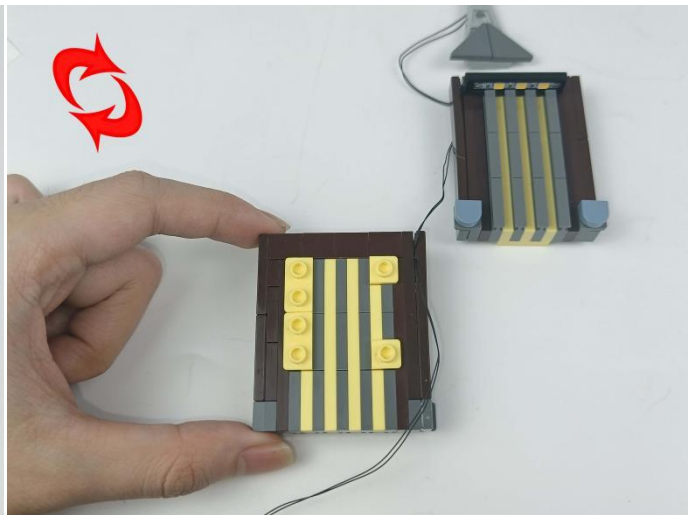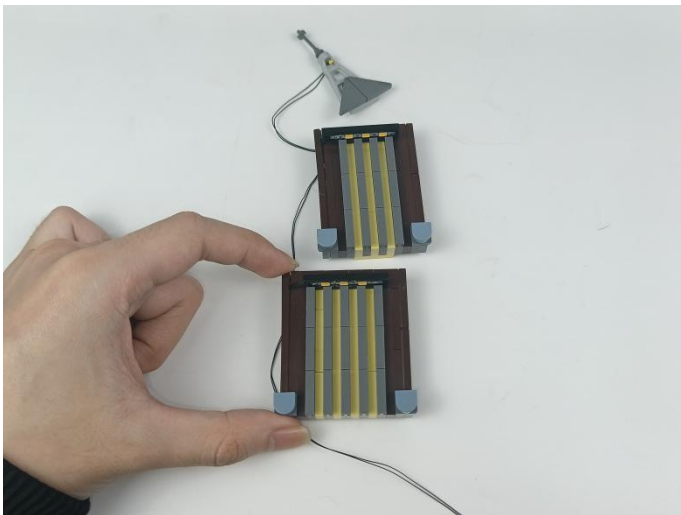


149

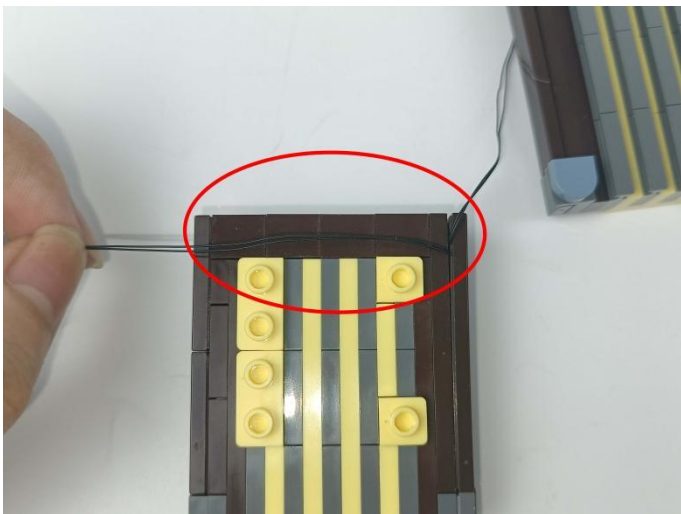


150

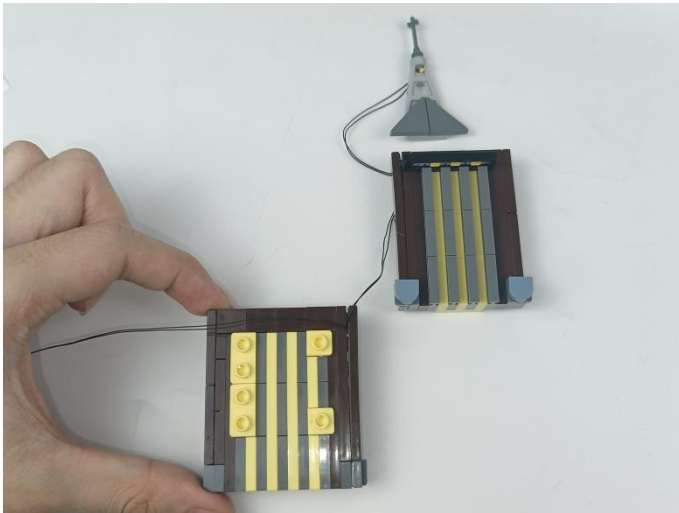



151

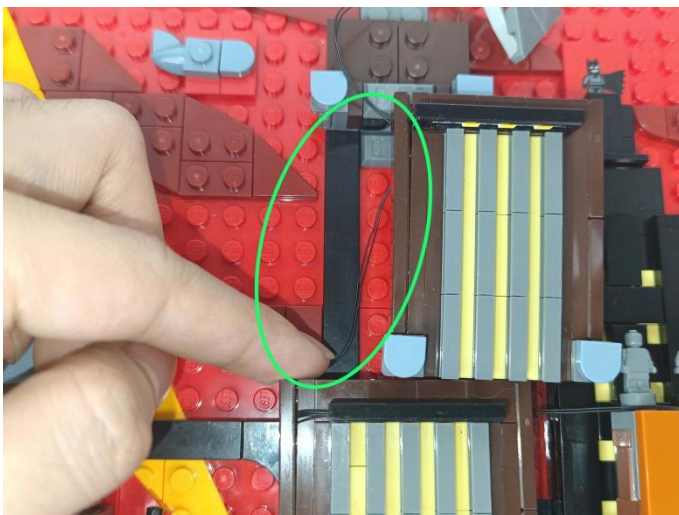

152

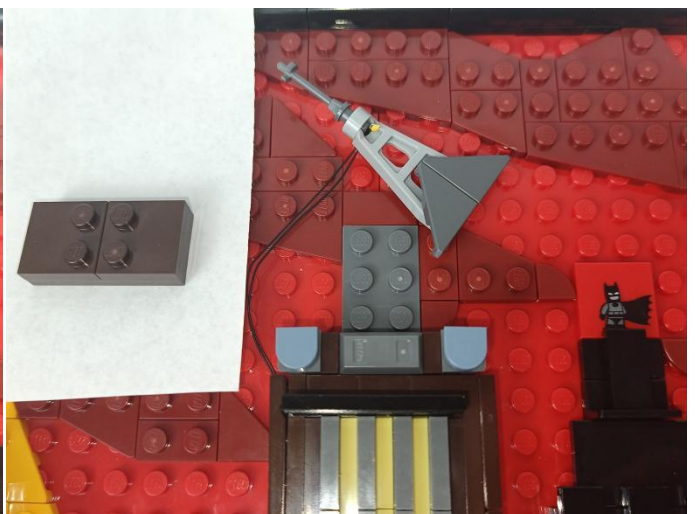

153

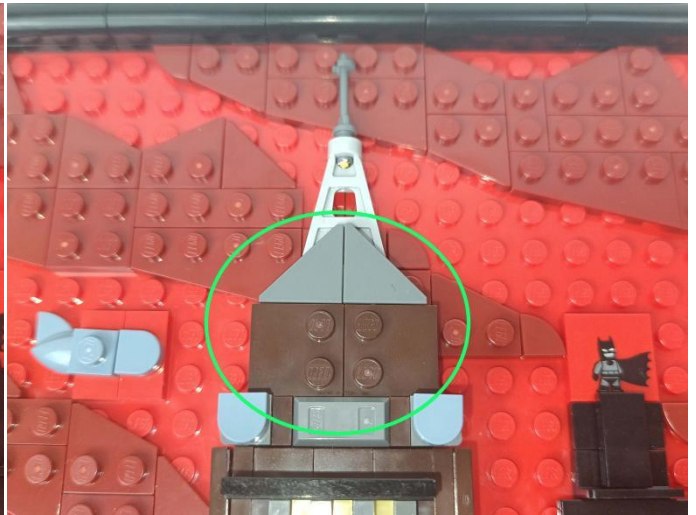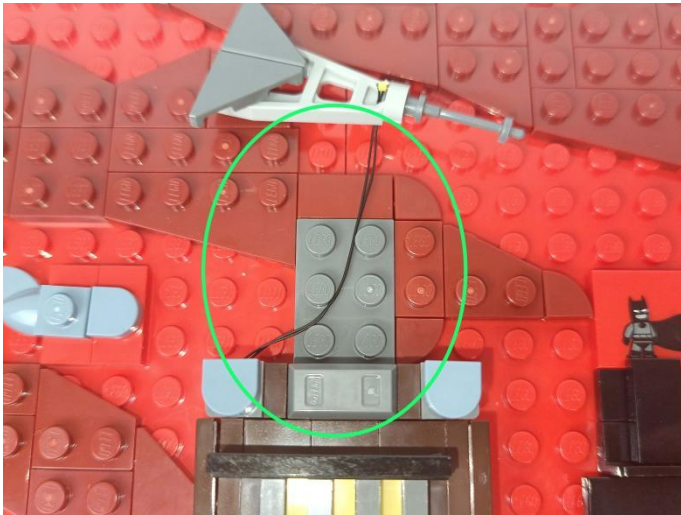


154





155





156

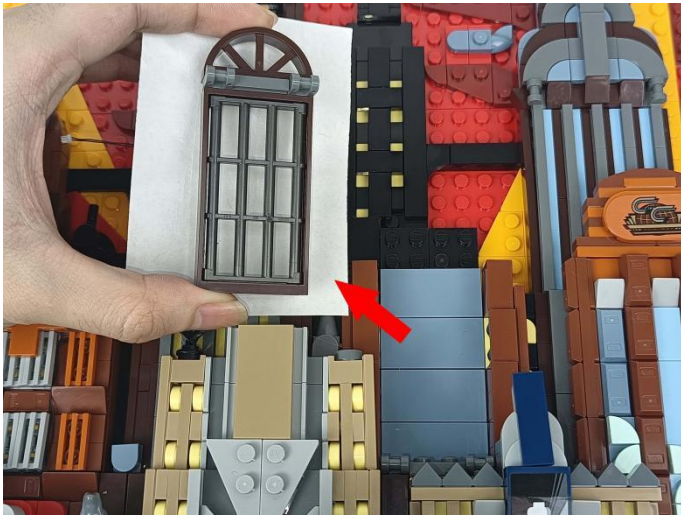

157

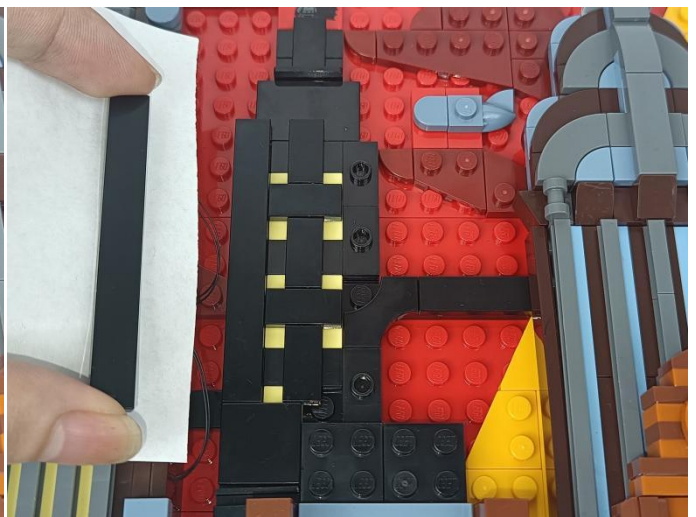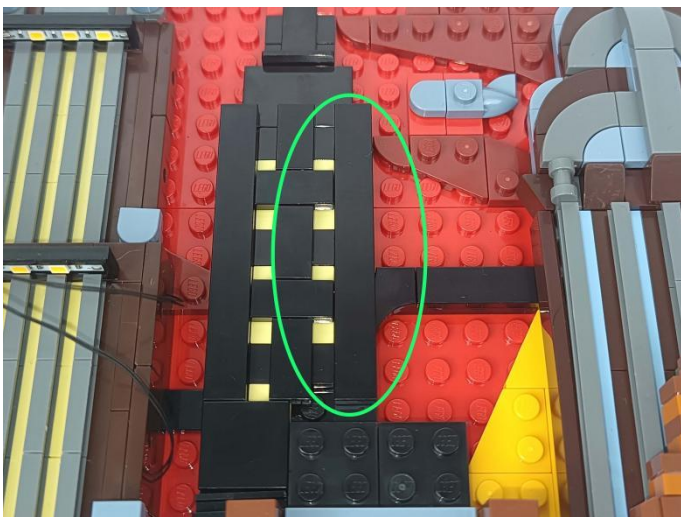



158

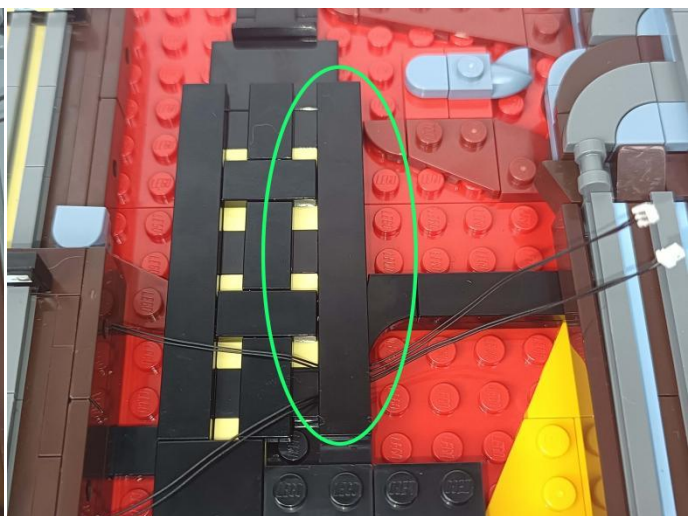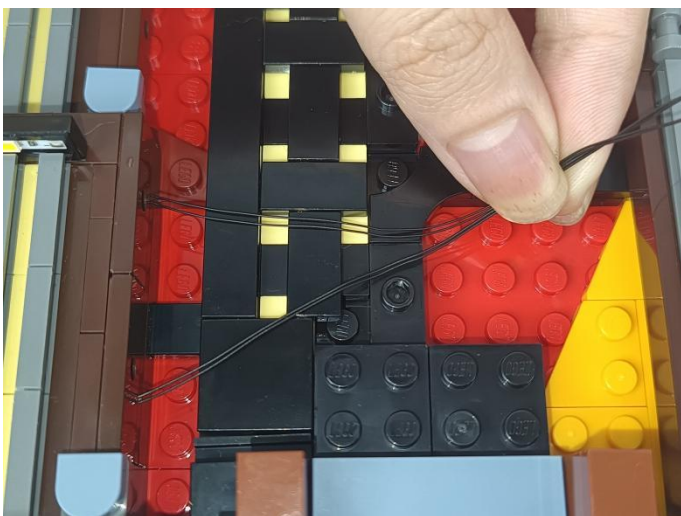

159



160

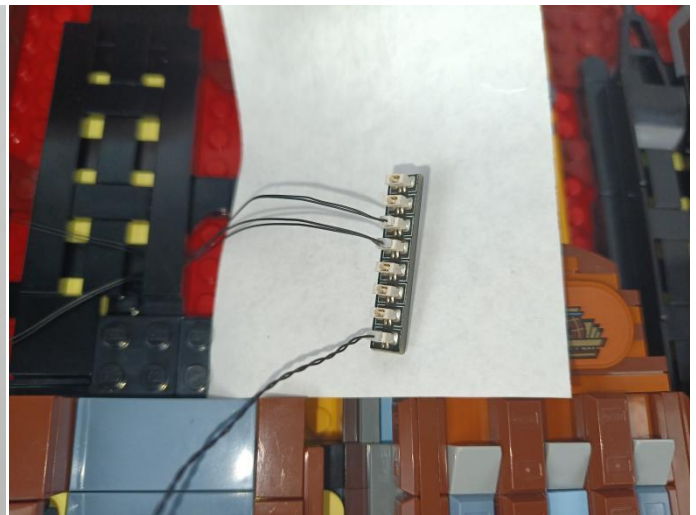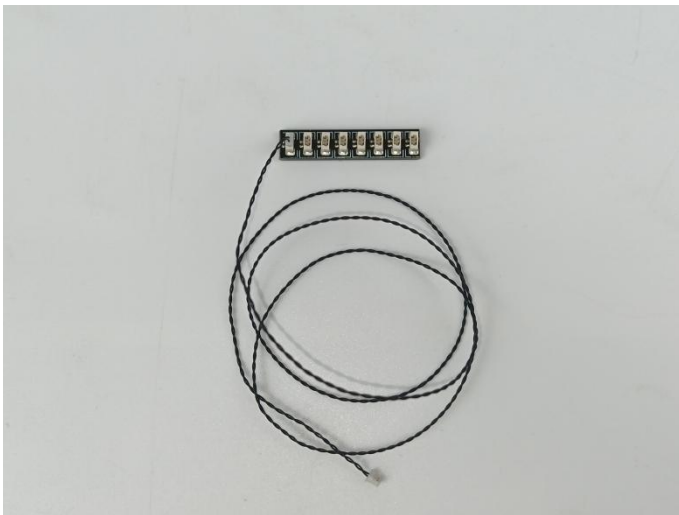

161




162




163




164

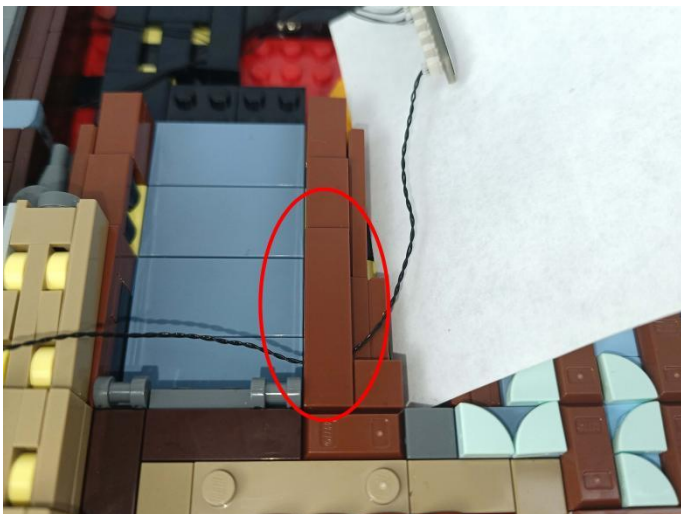


165

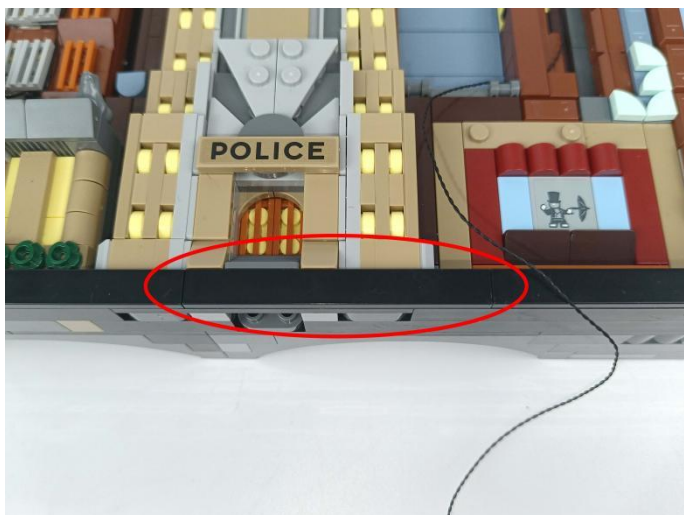

166

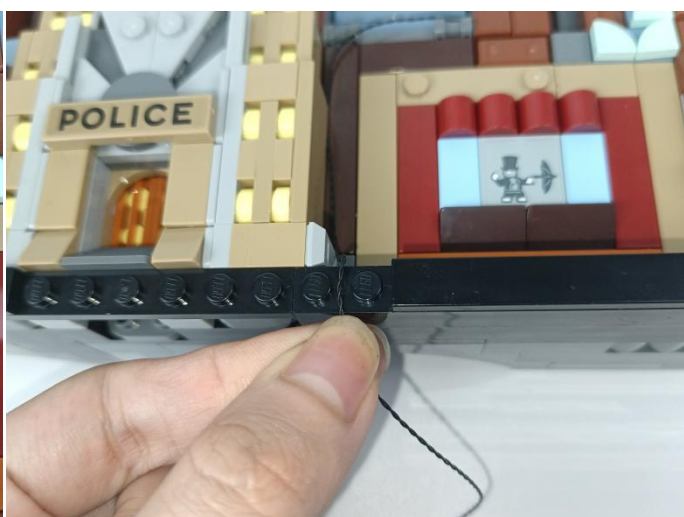

167

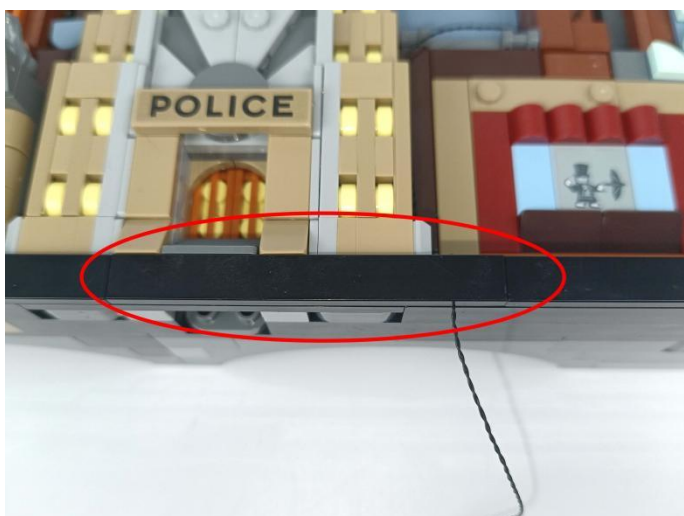


168




169



170

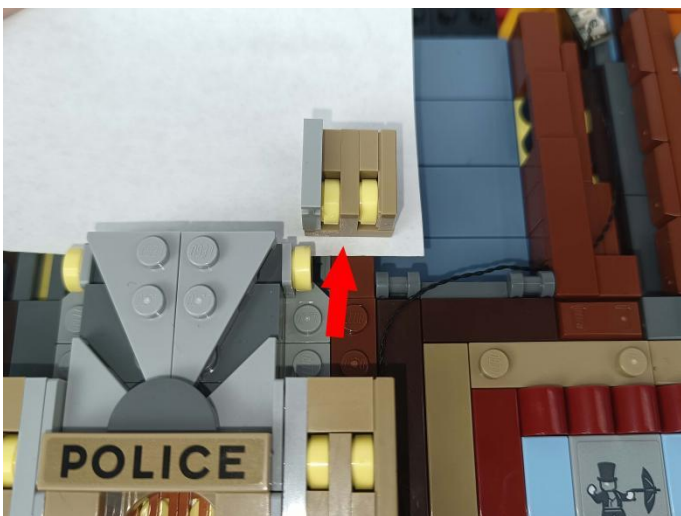


171

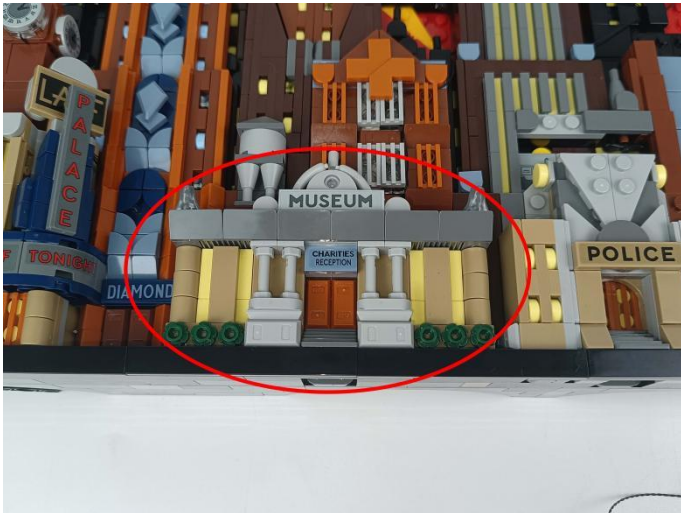


172




173

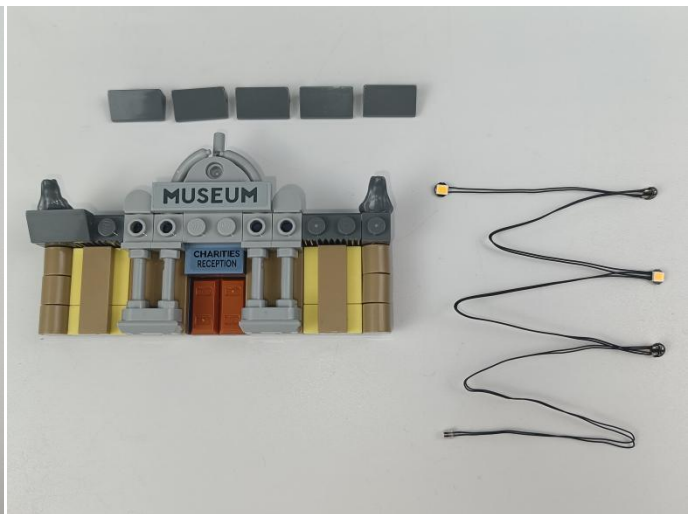



174

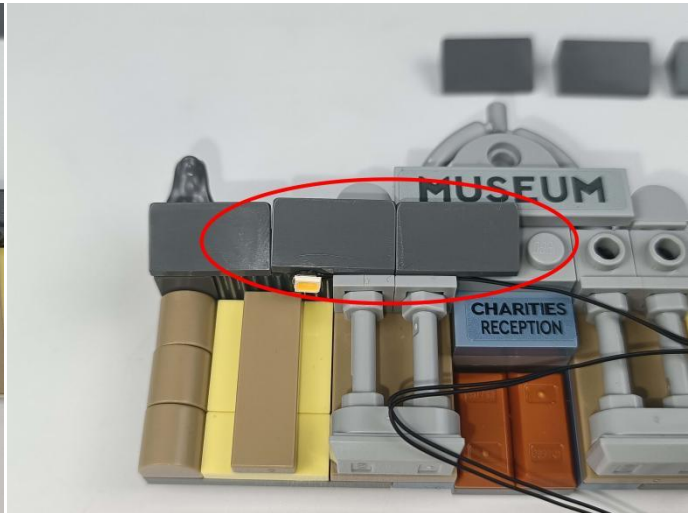


175

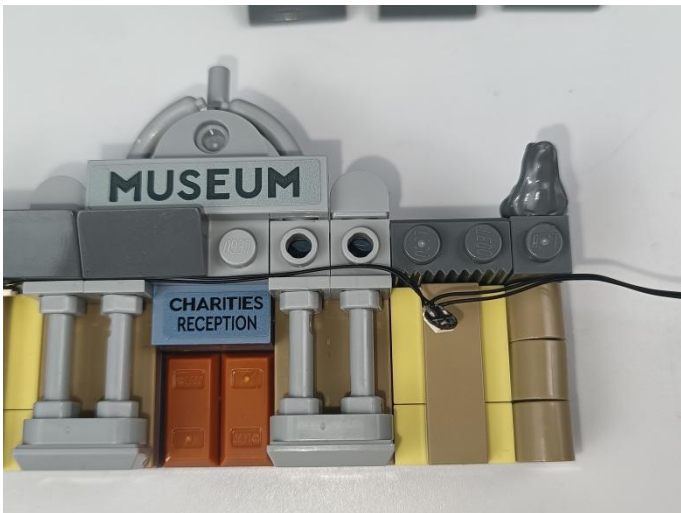

176

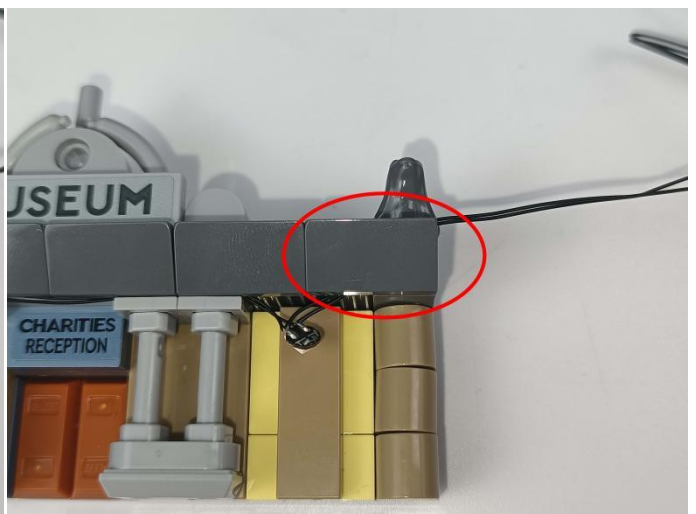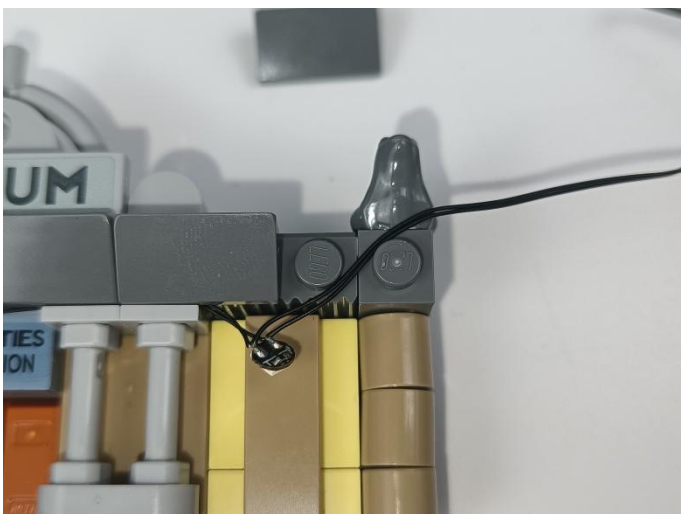



177

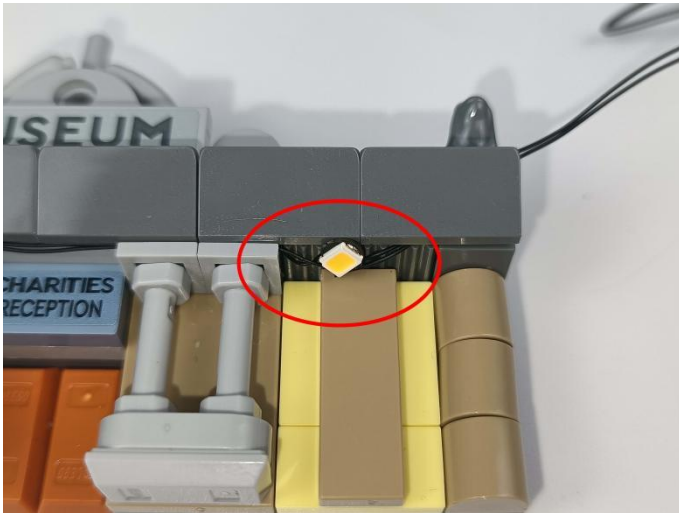


178



179

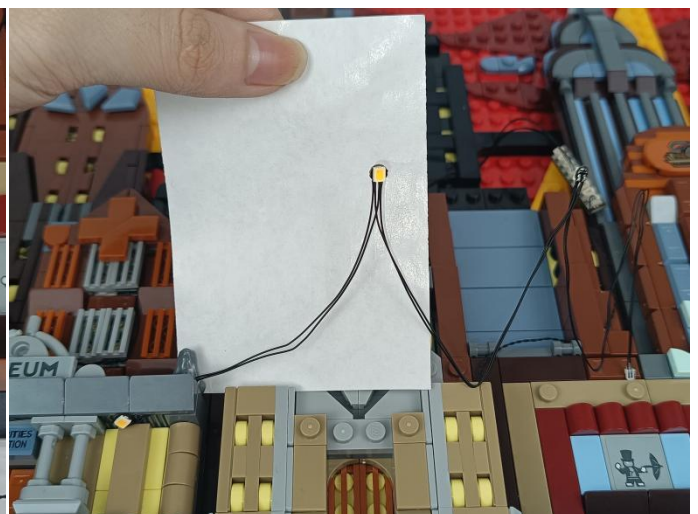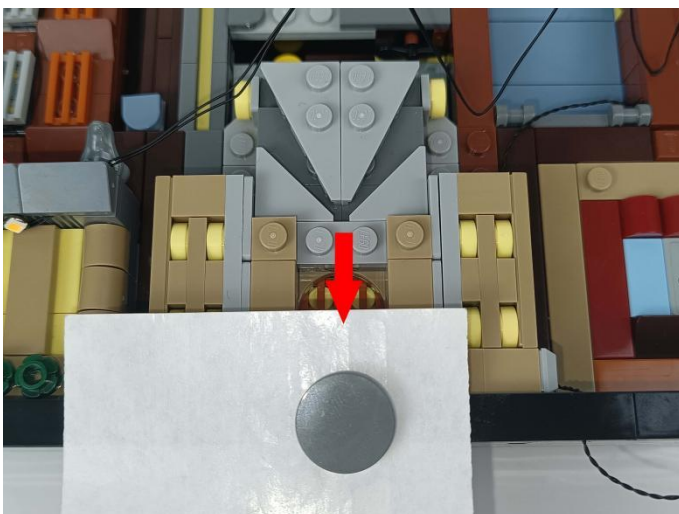

180

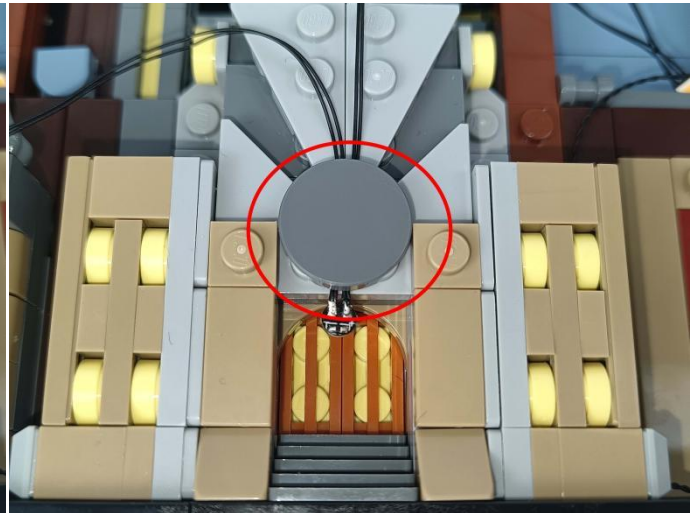

181



182



183



184




185




186



187

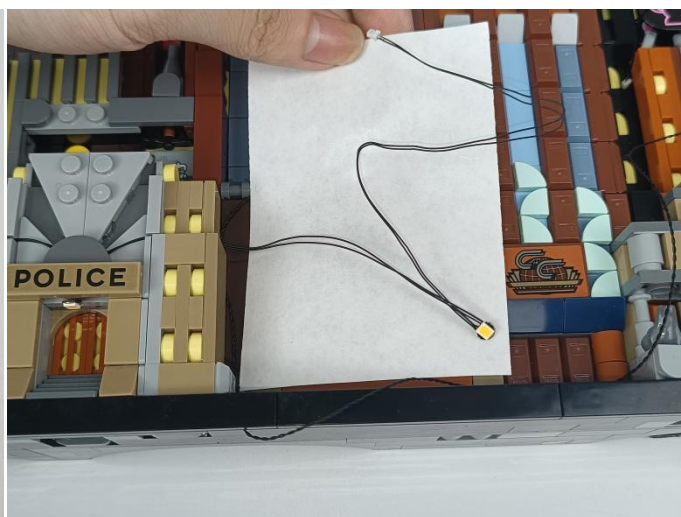


188

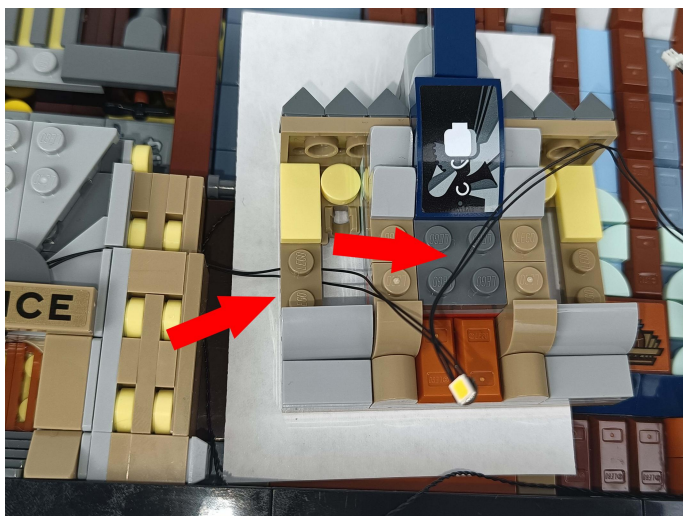

189



190

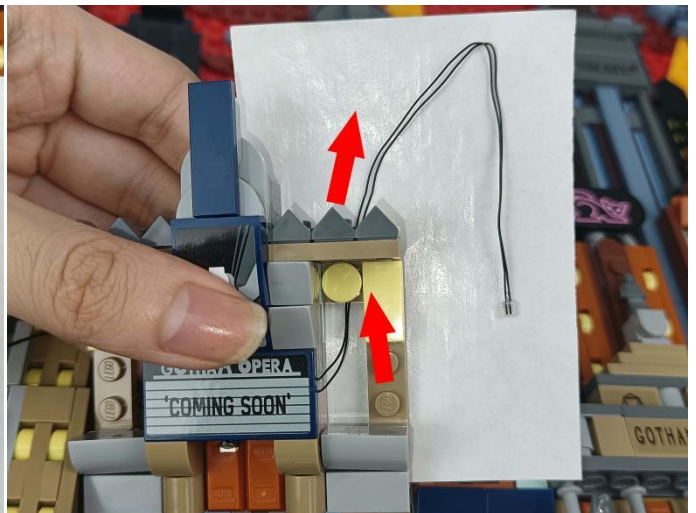

191



192




193





194




195

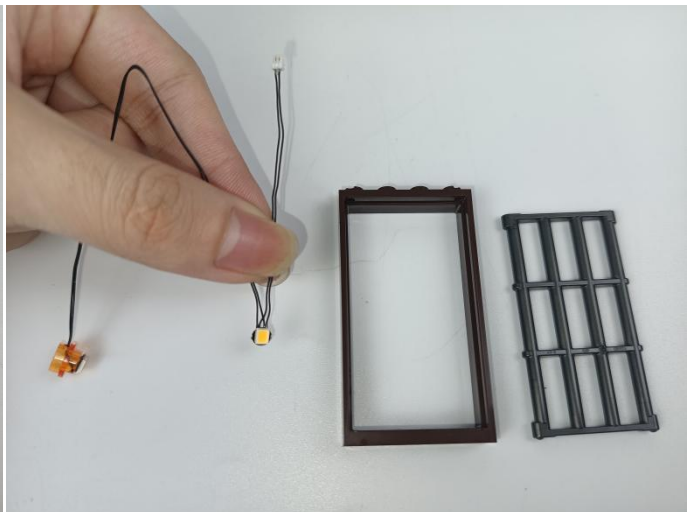



196

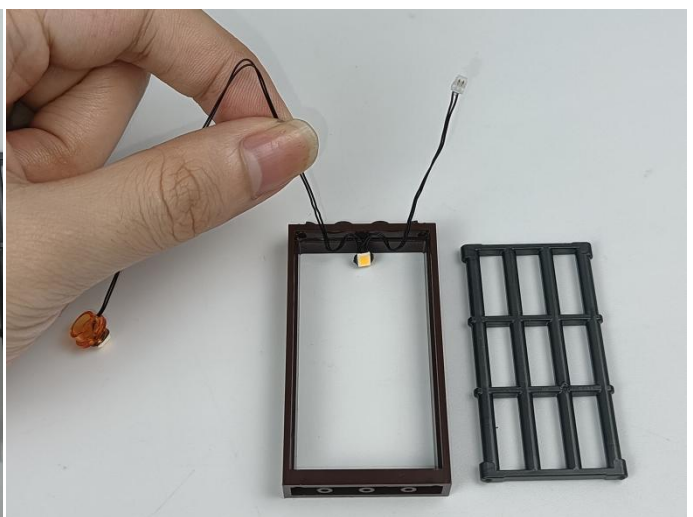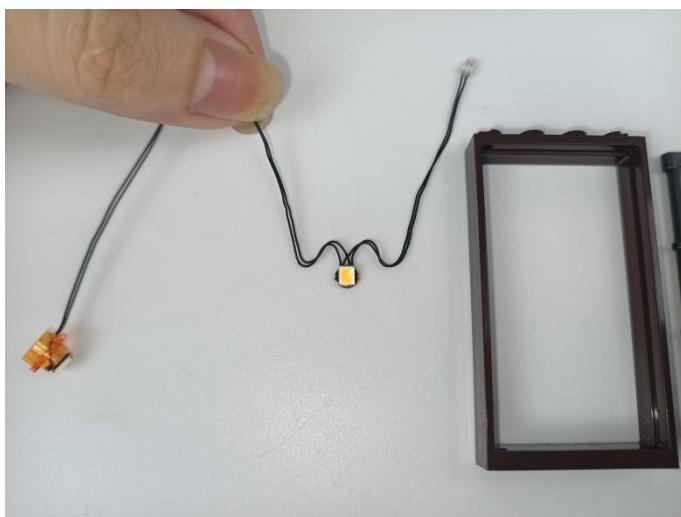


197

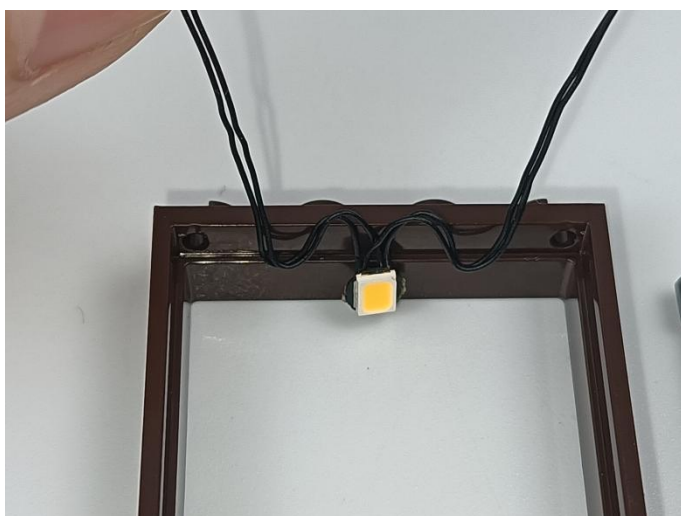



198

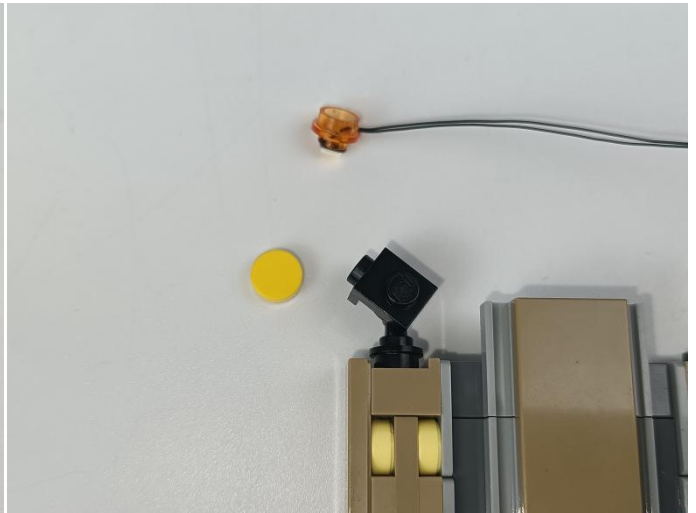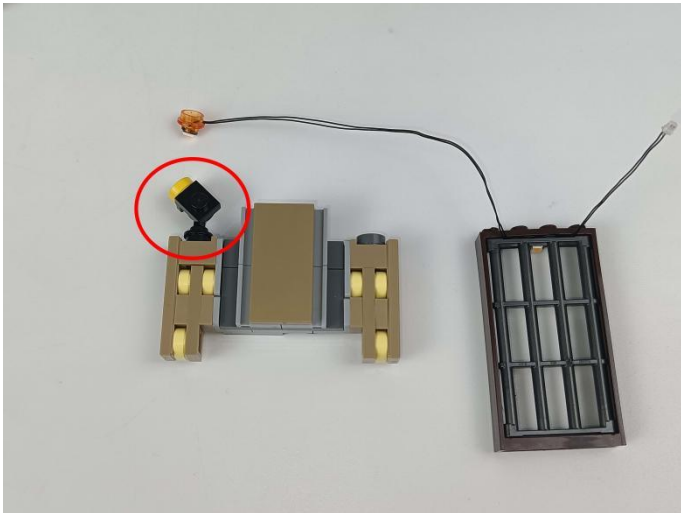



199

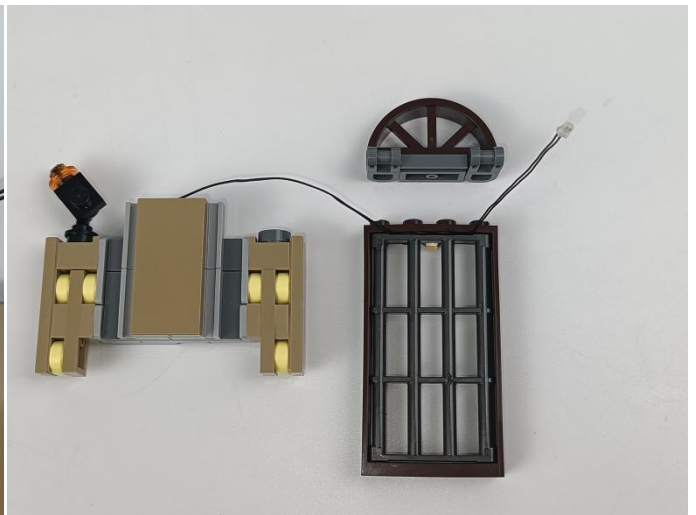


200

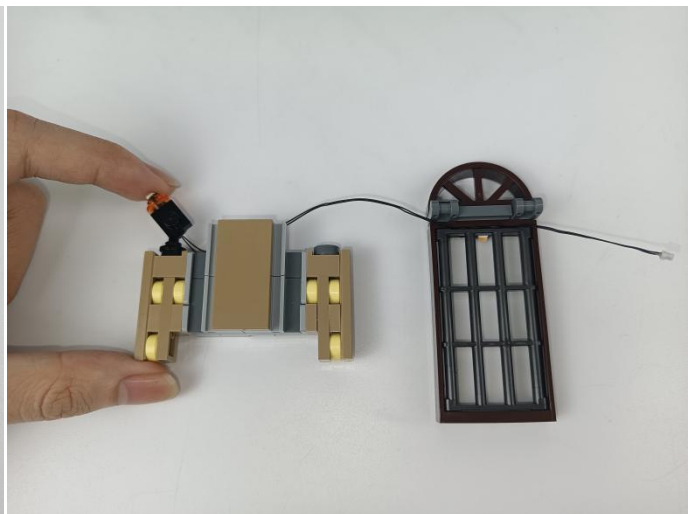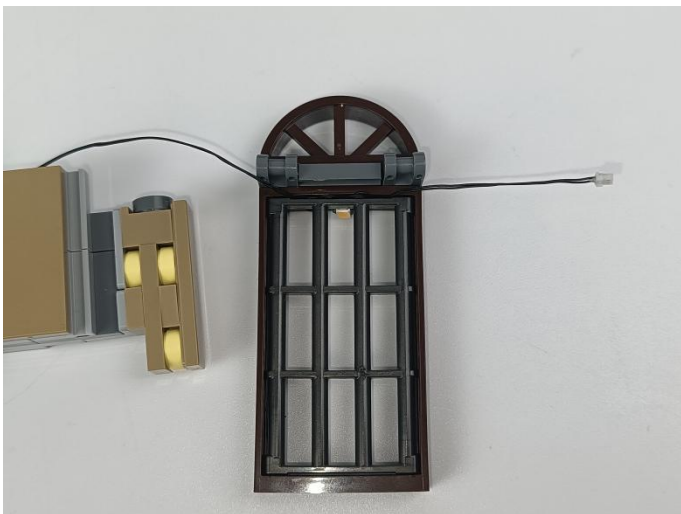


201

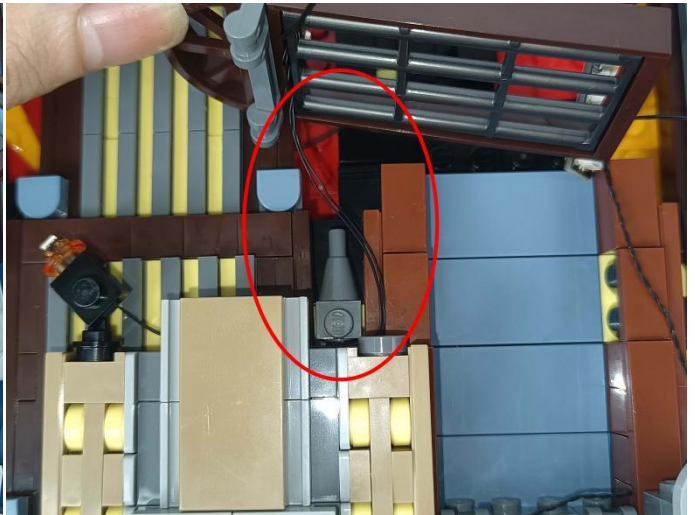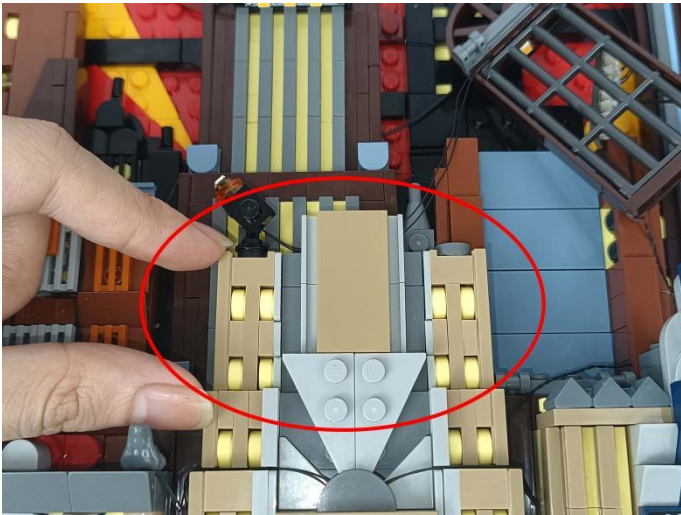


202

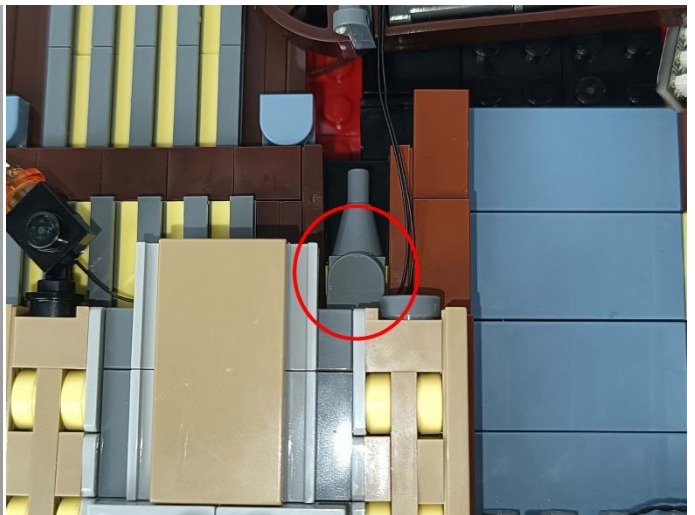


203

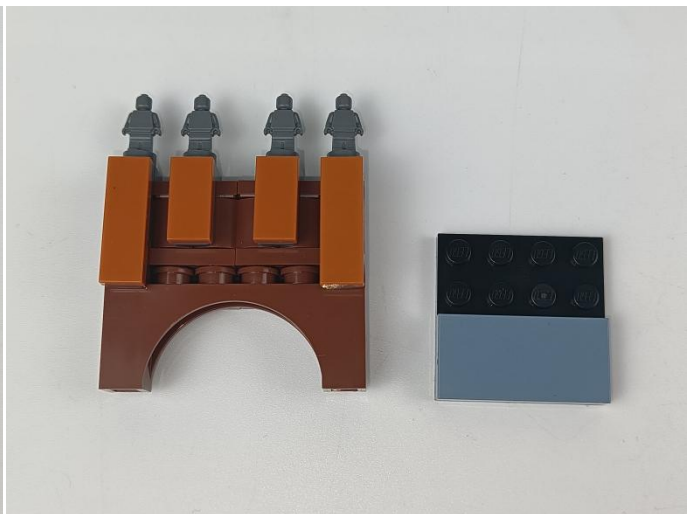

204

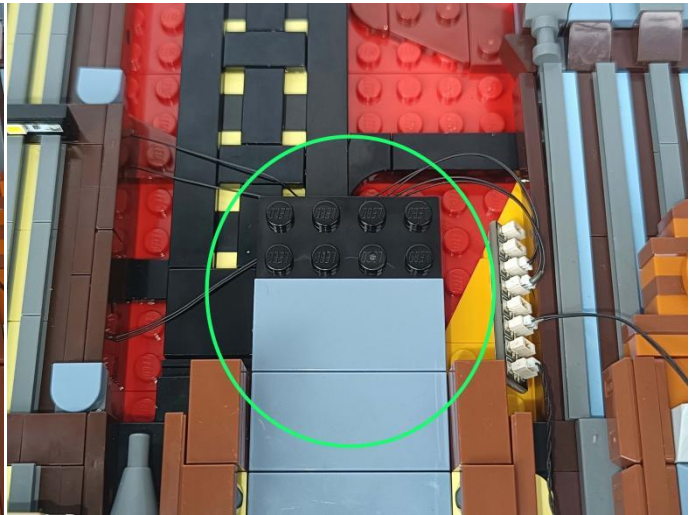


205

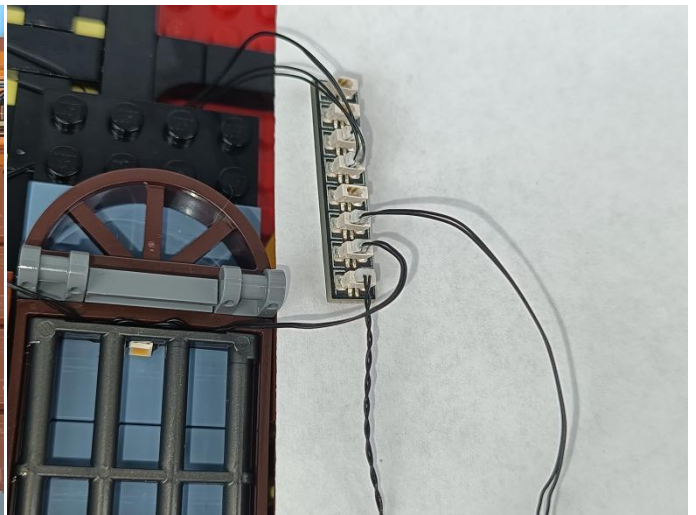



206




207

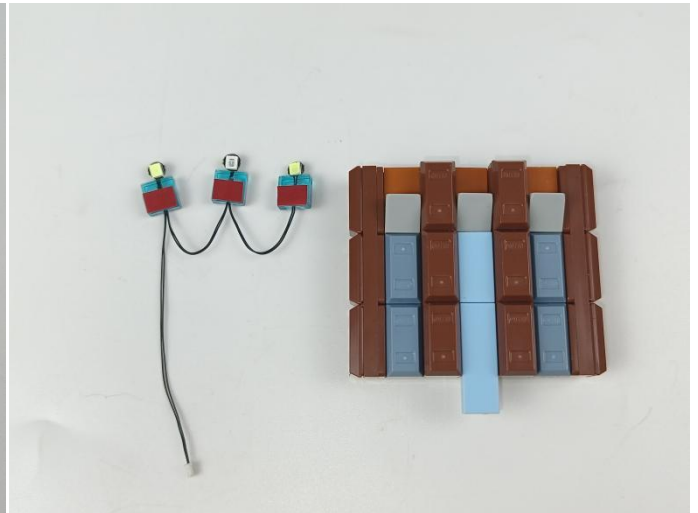

208

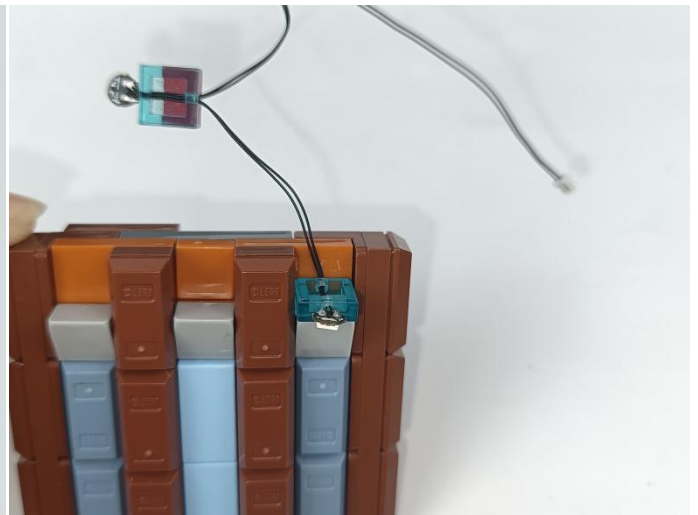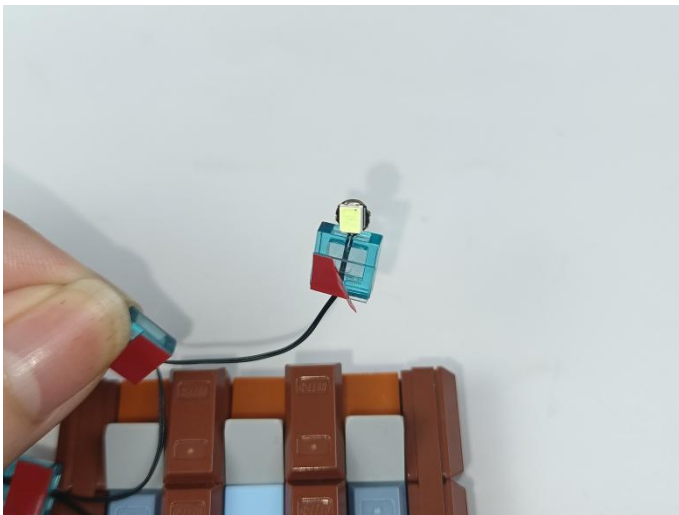


209

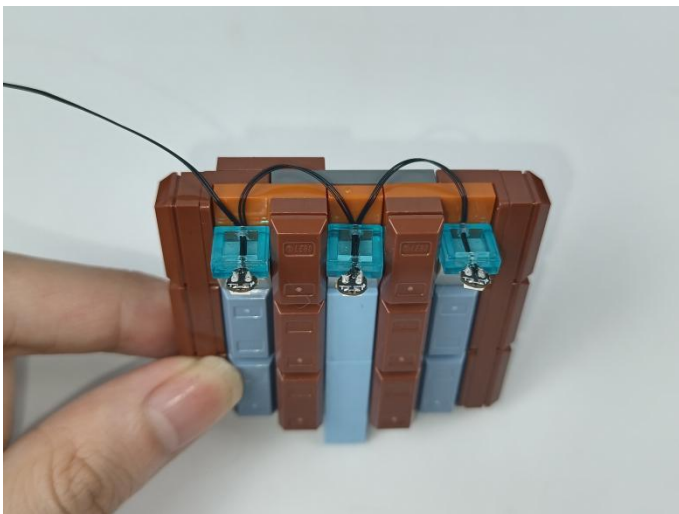


210





211

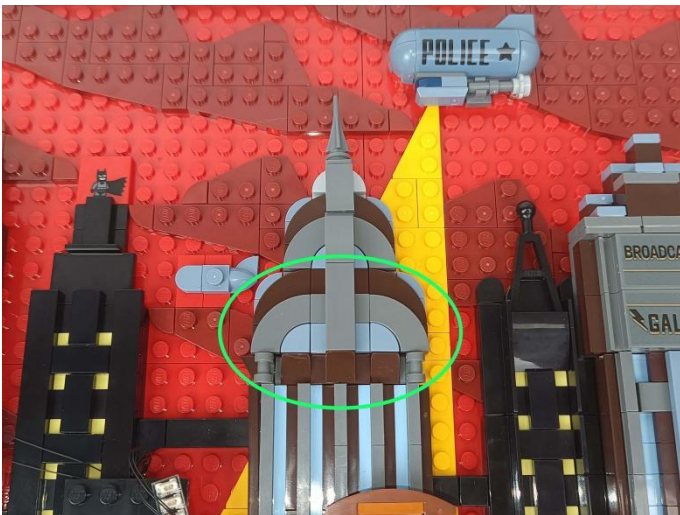

212

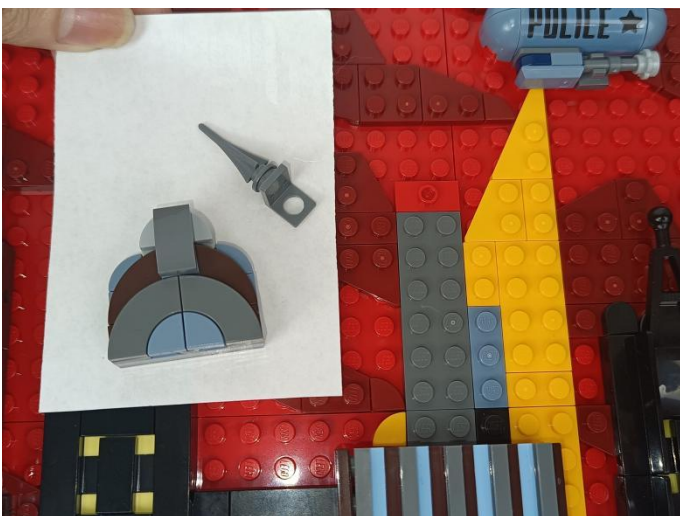


213

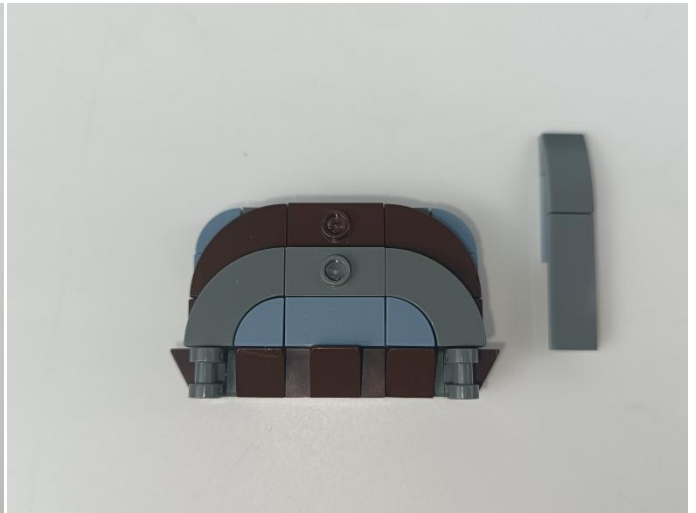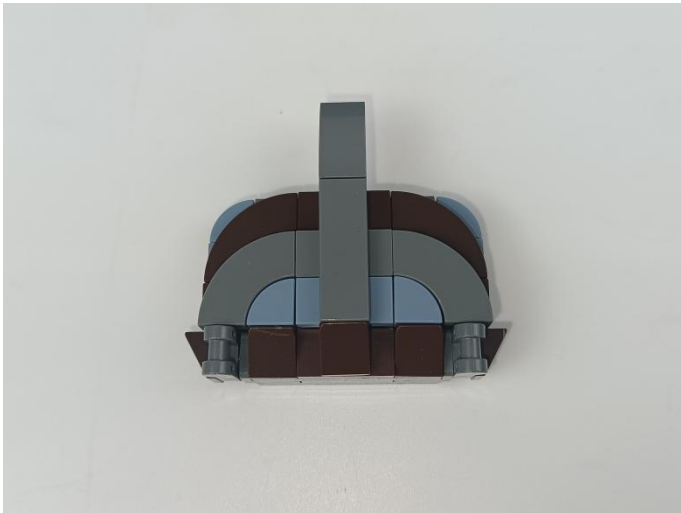


214





215

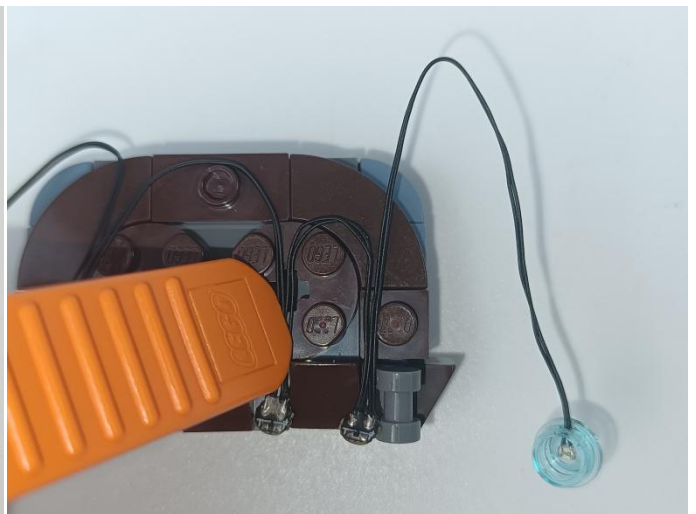



216

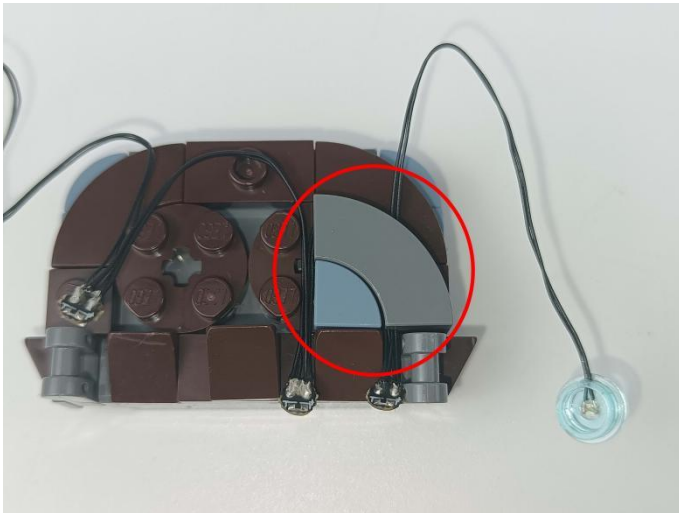



217

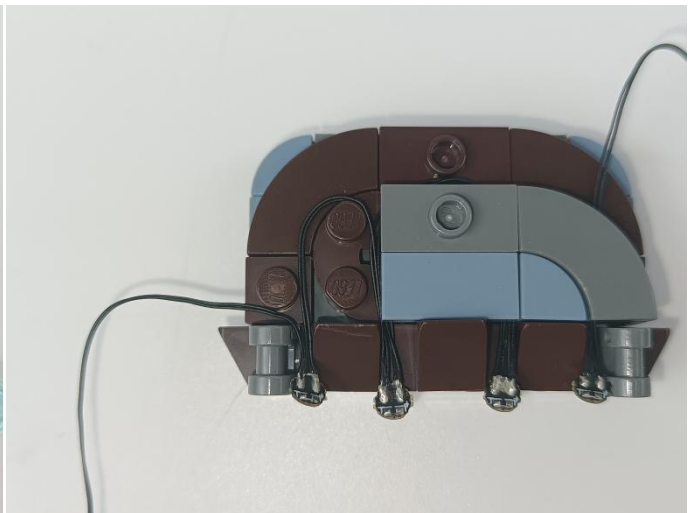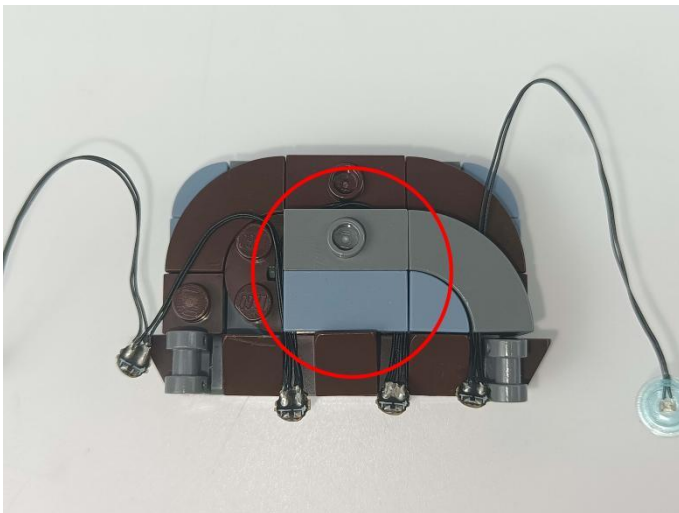



218

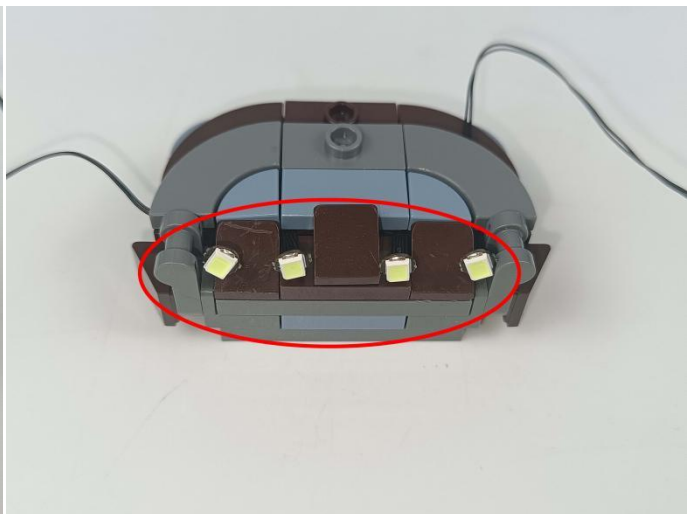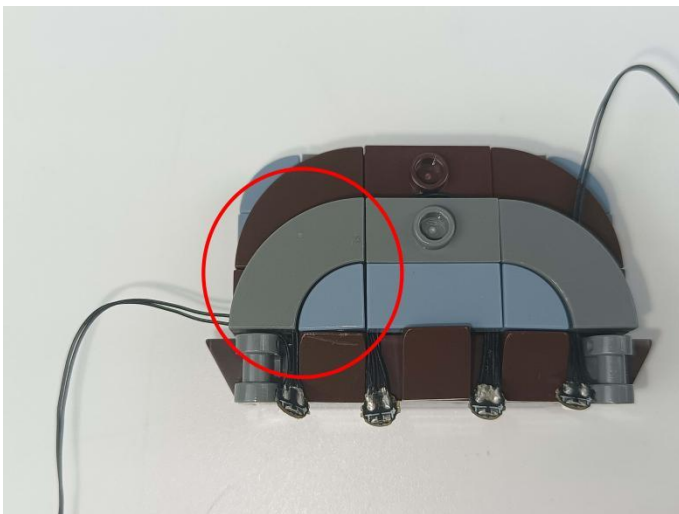



219

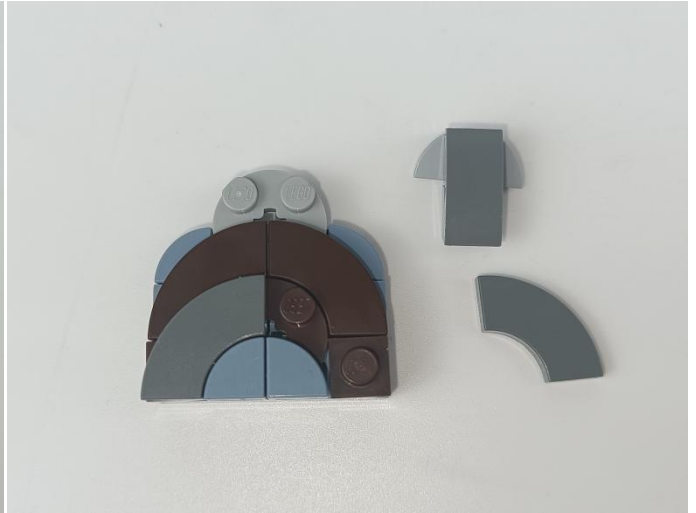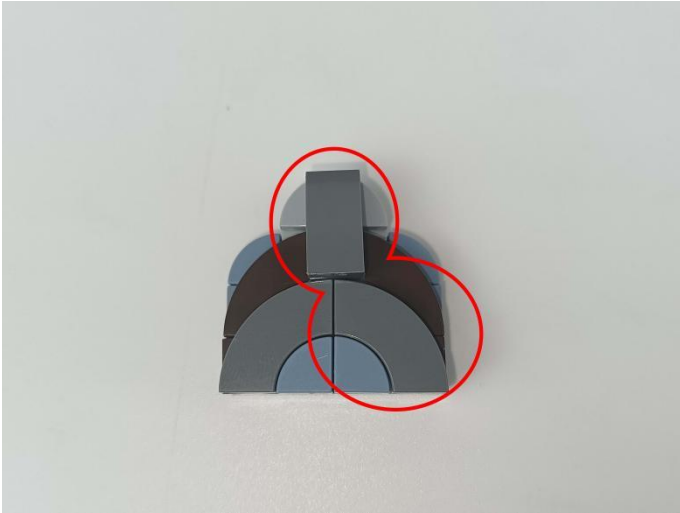



220

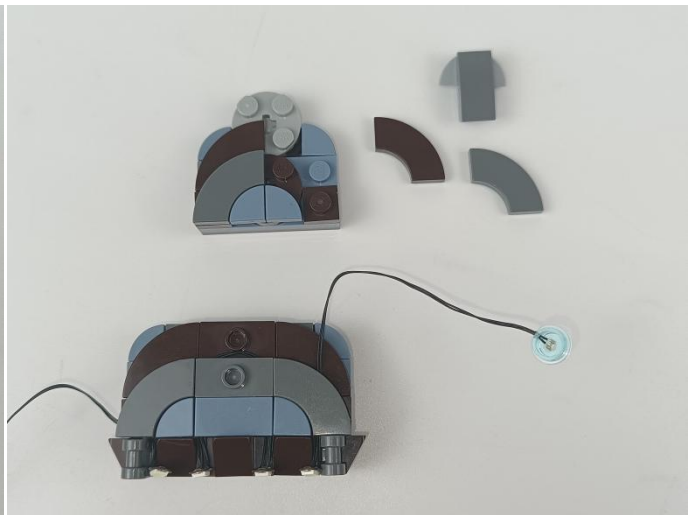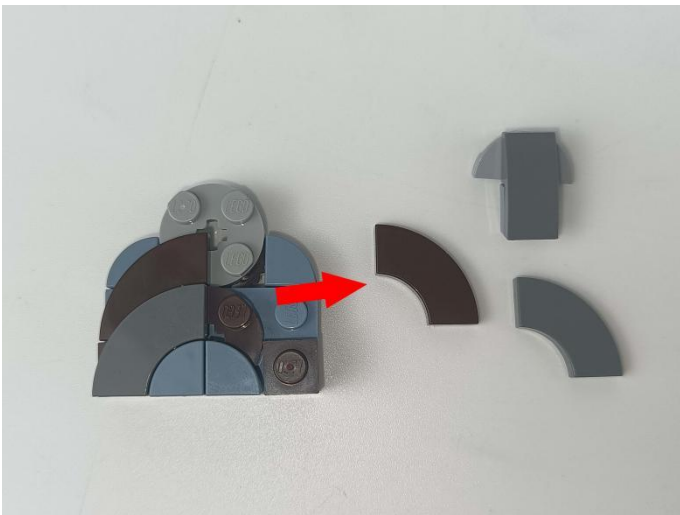

221

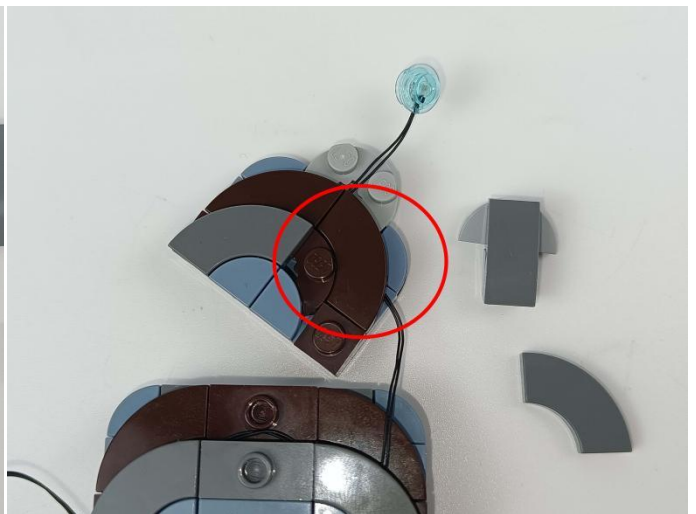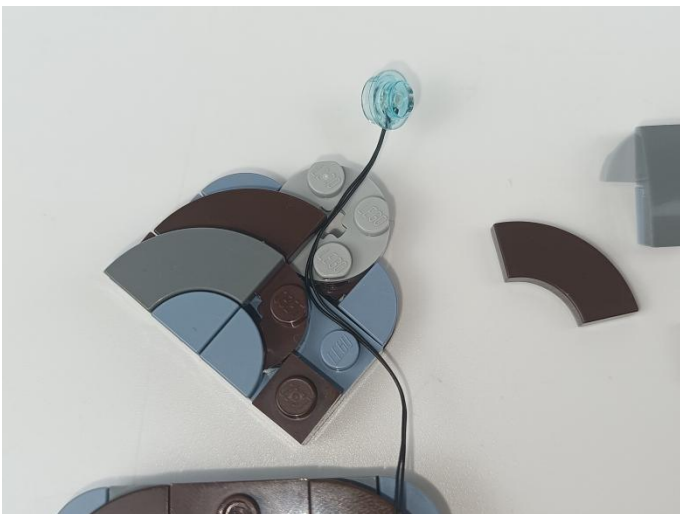


222

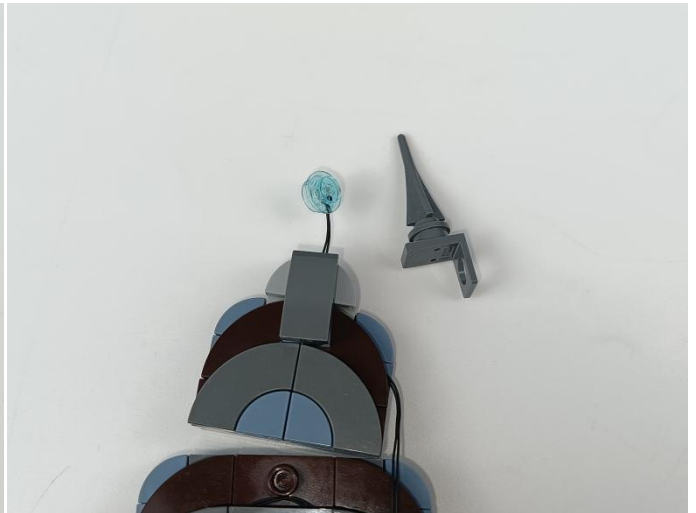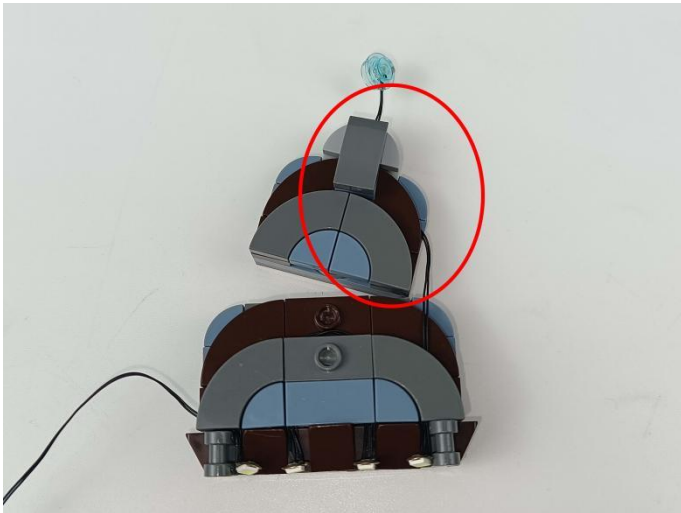

223




224

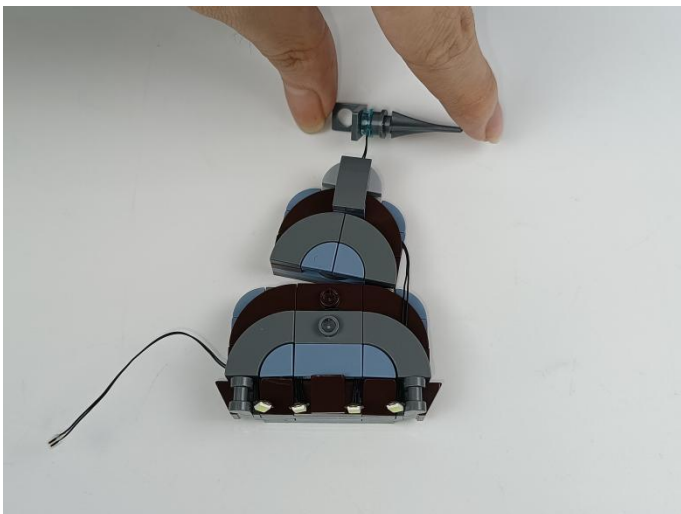



225





226

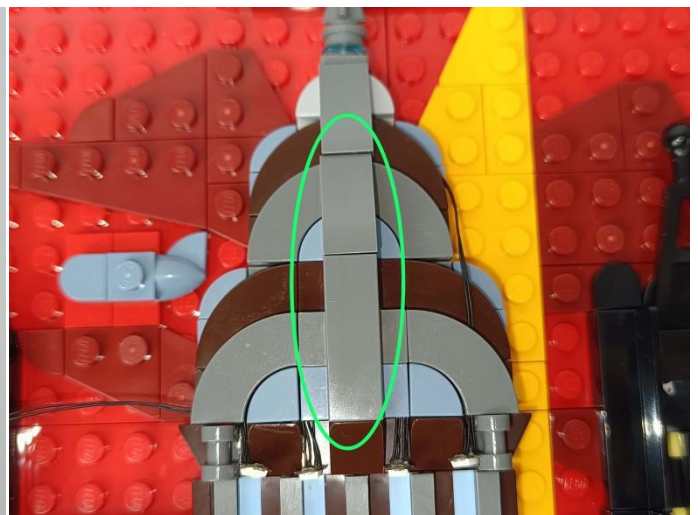


227

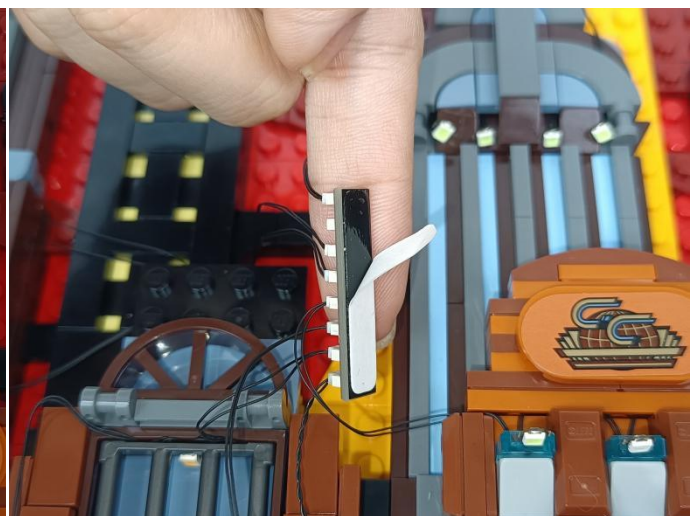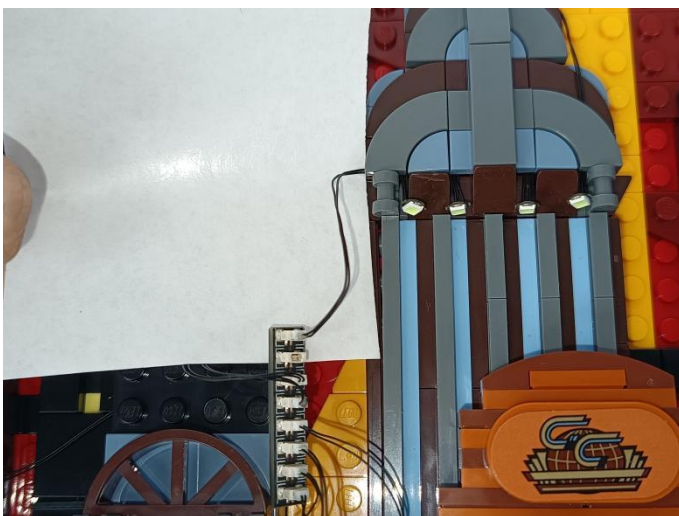

228

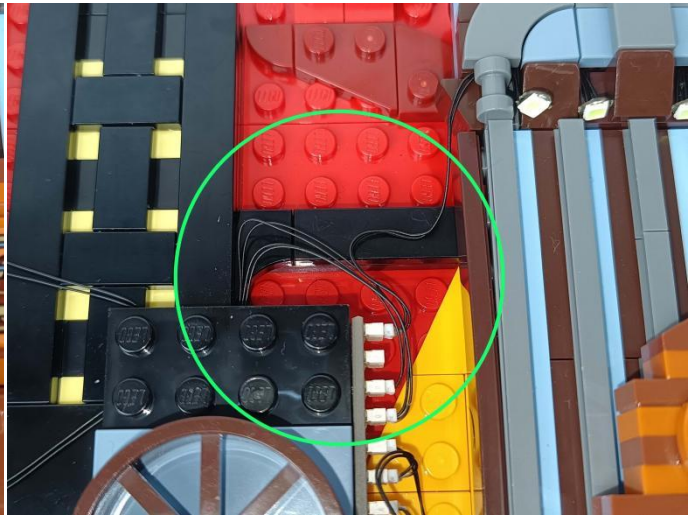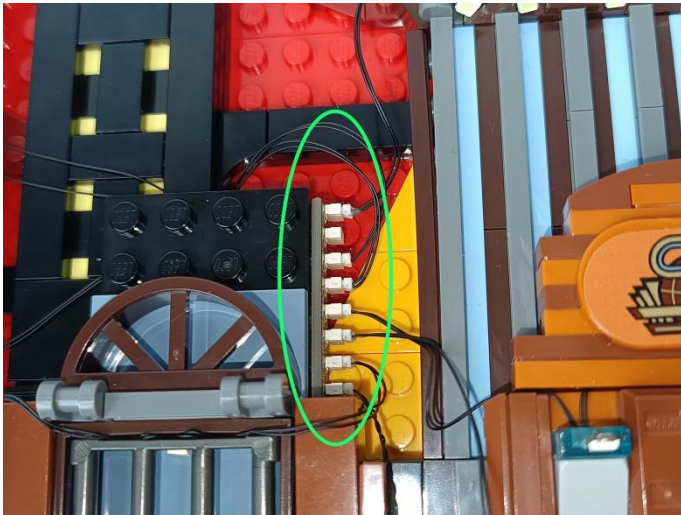

229

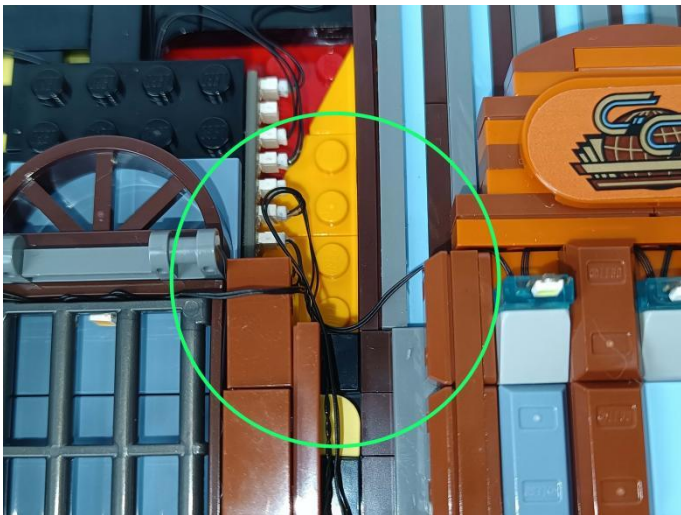

230




231



232





233

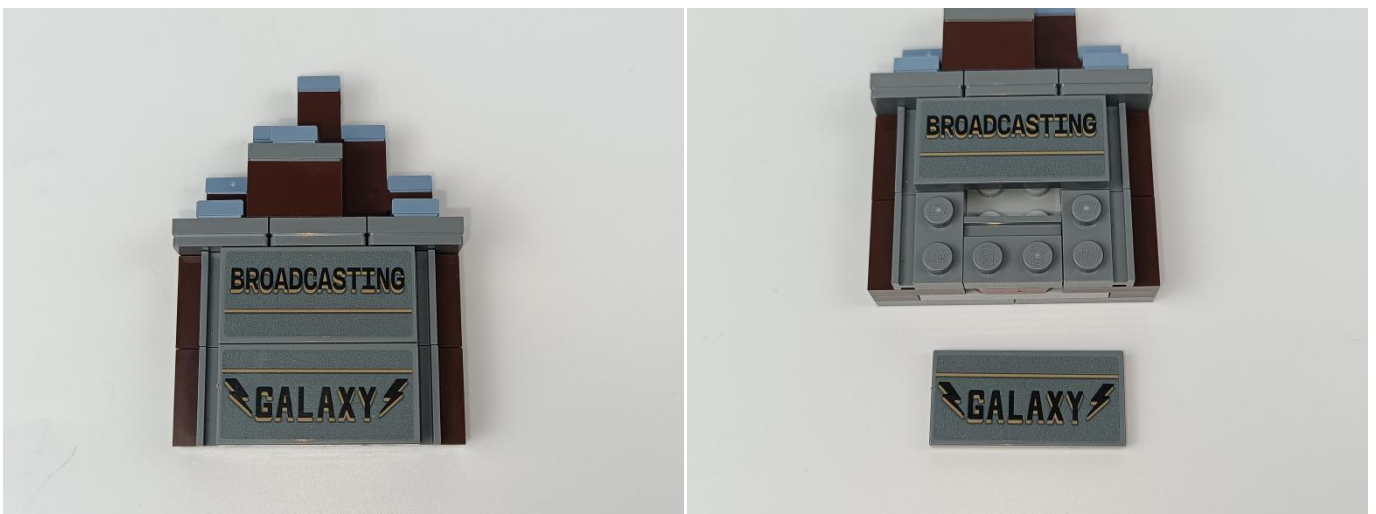

234



235

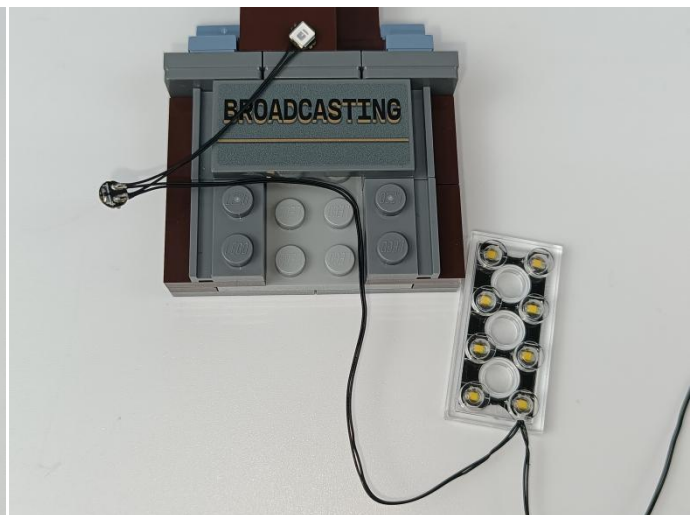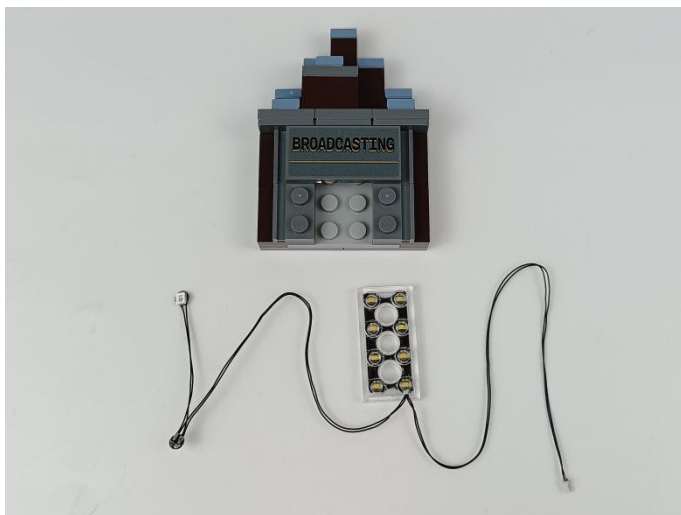


236



237




238

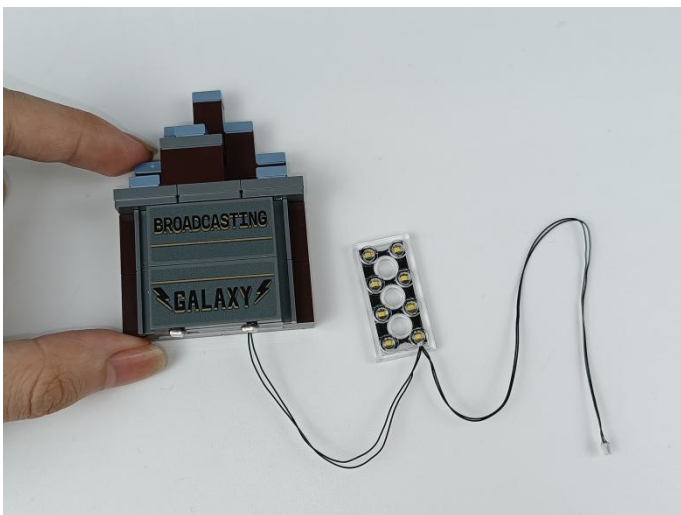


239



240

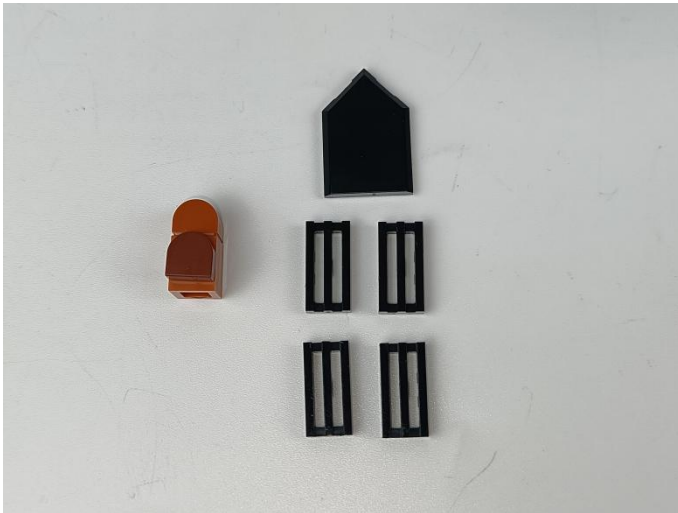



241

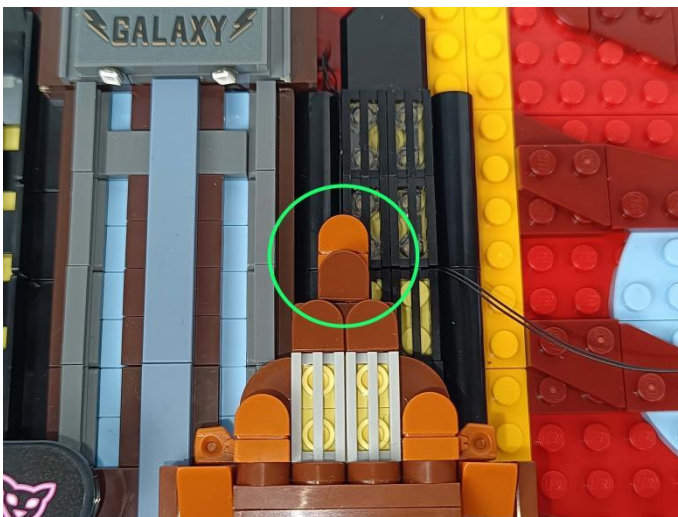

242





246

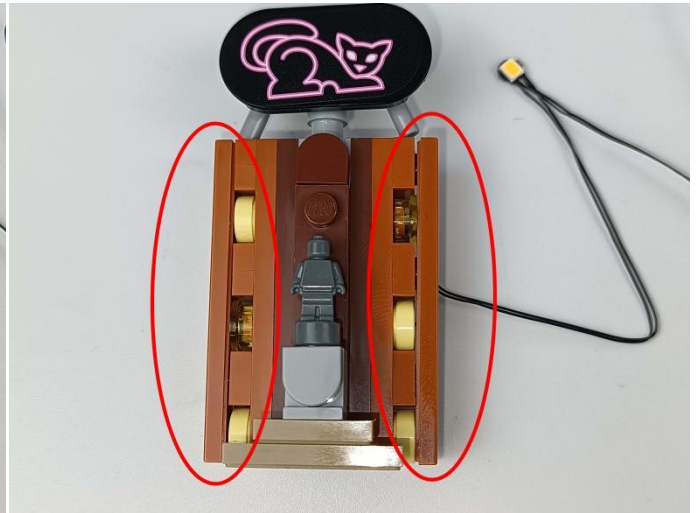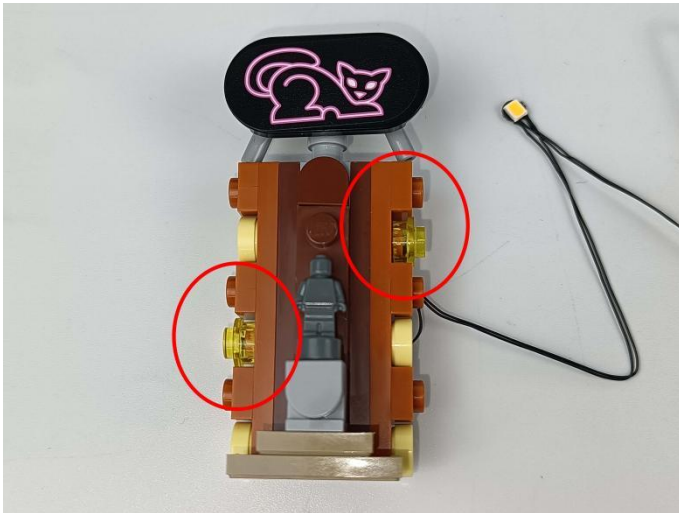


247




248

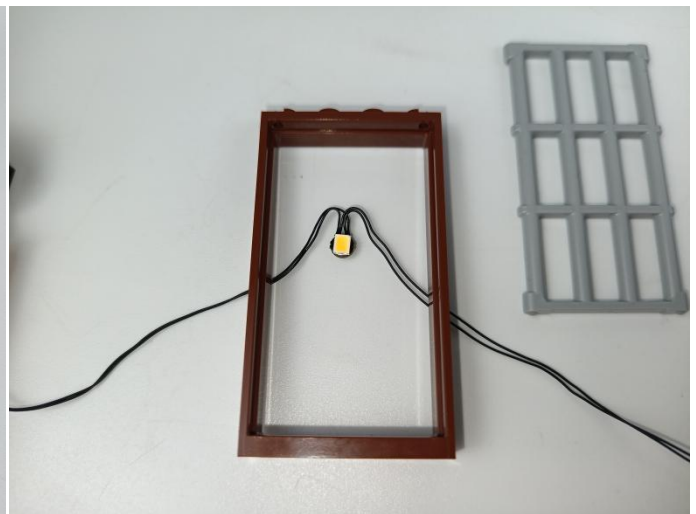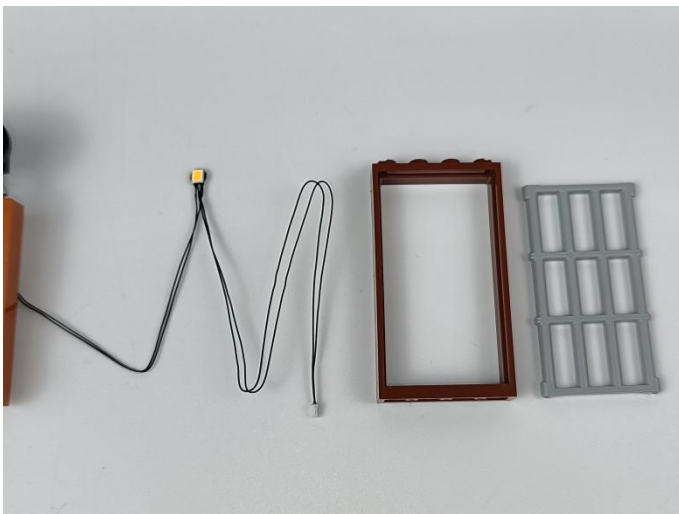


249

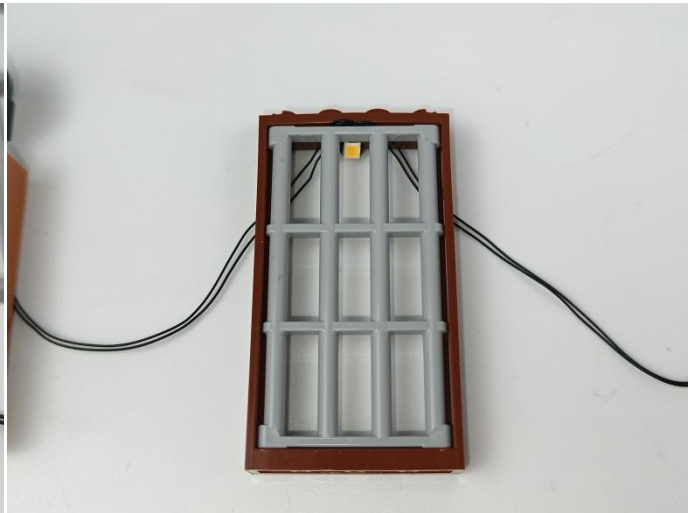


250

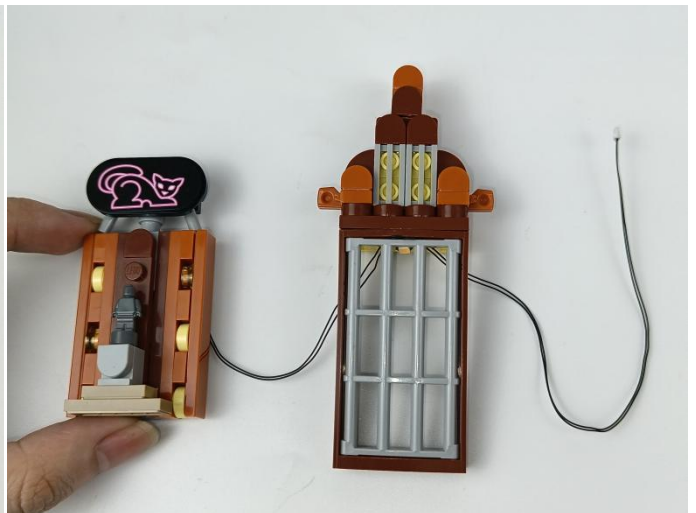

251

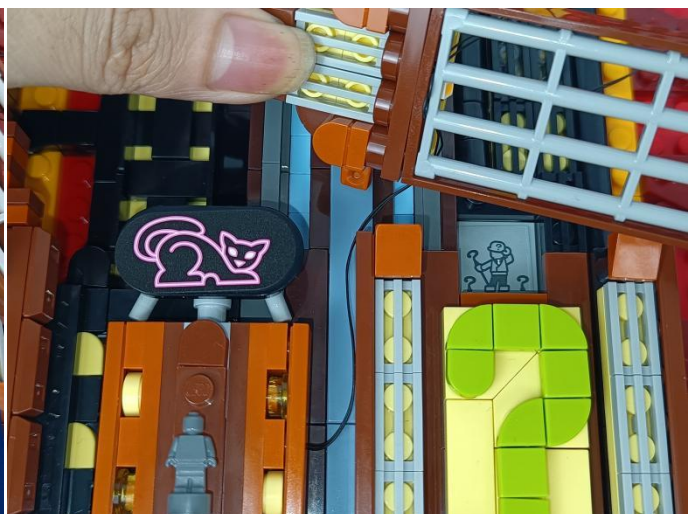


252

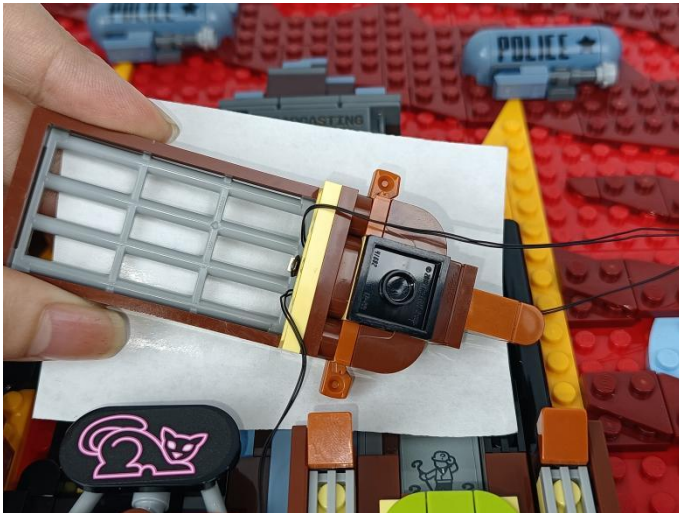


253




254

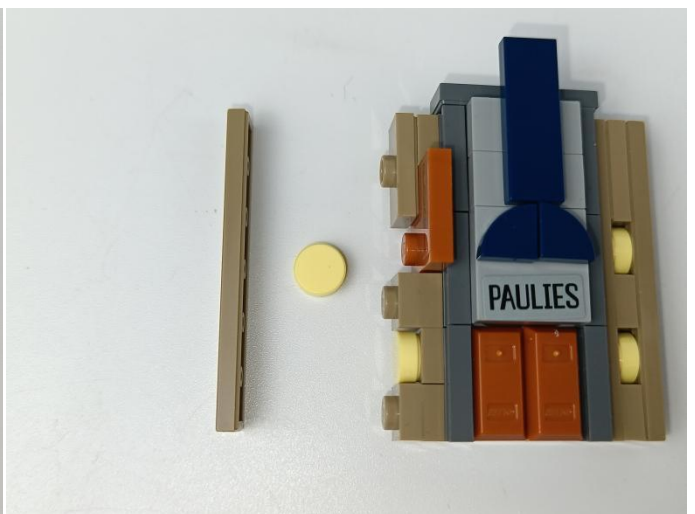



255

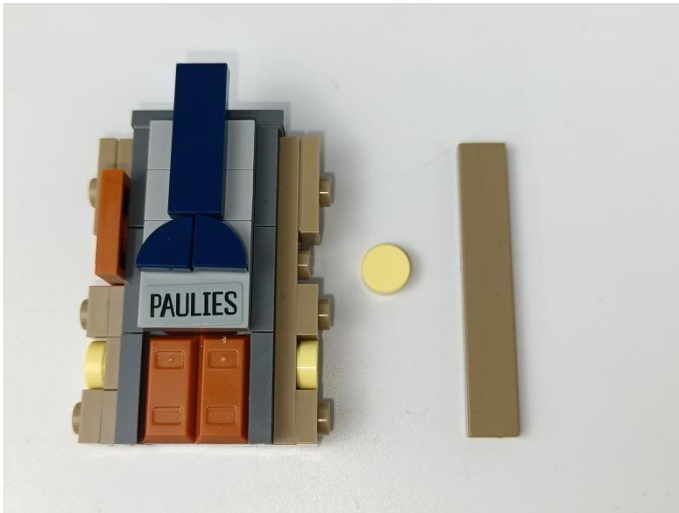


256

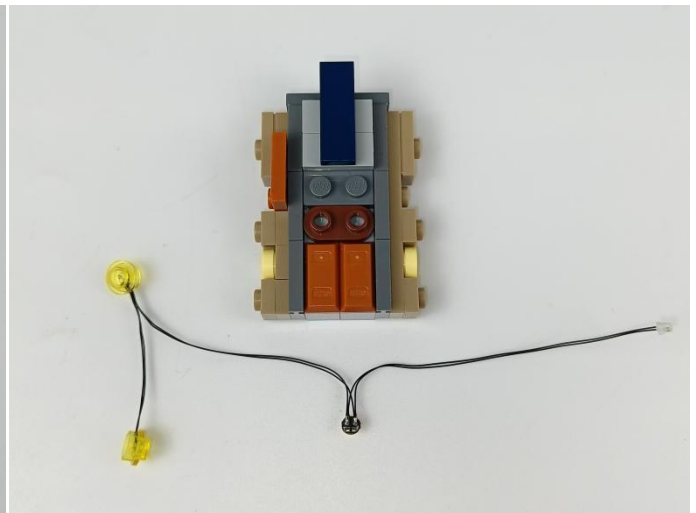



257

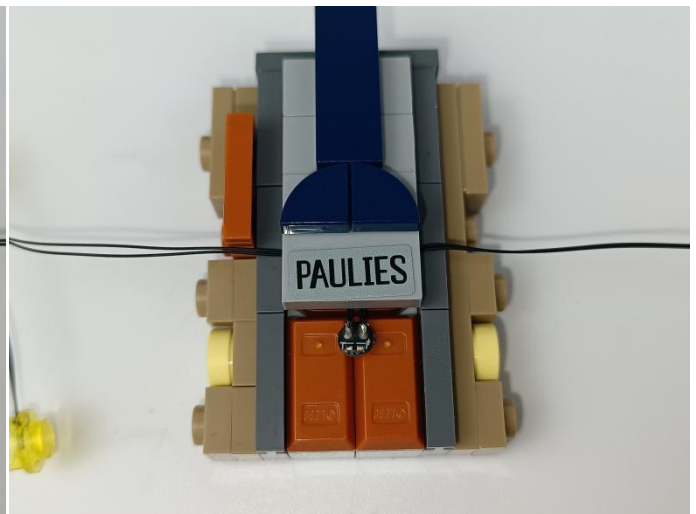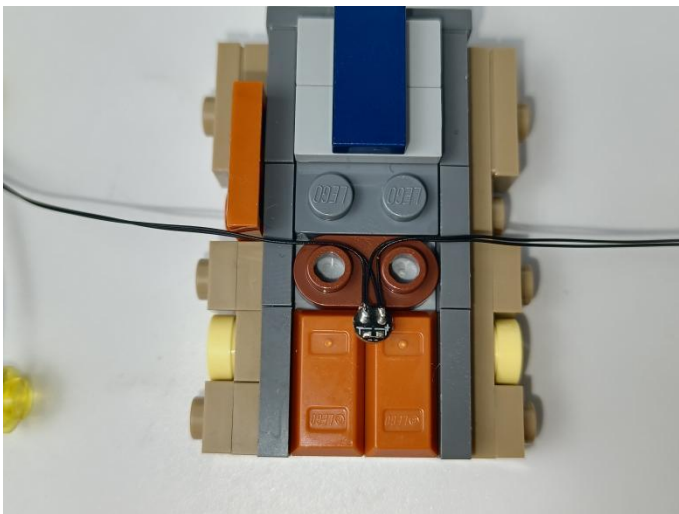



258

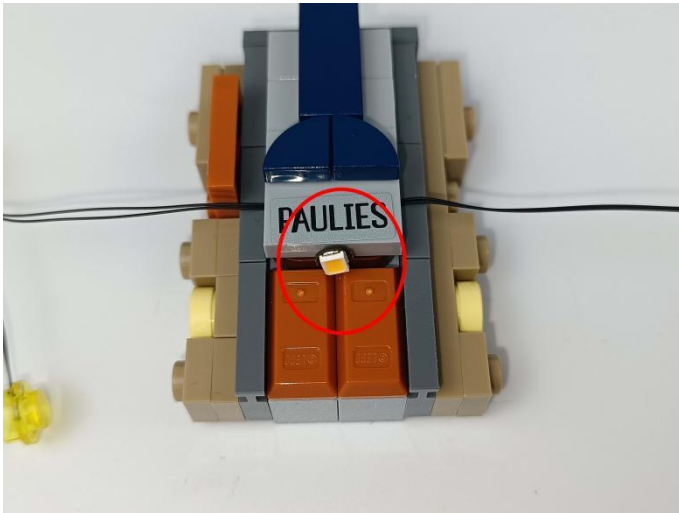

259

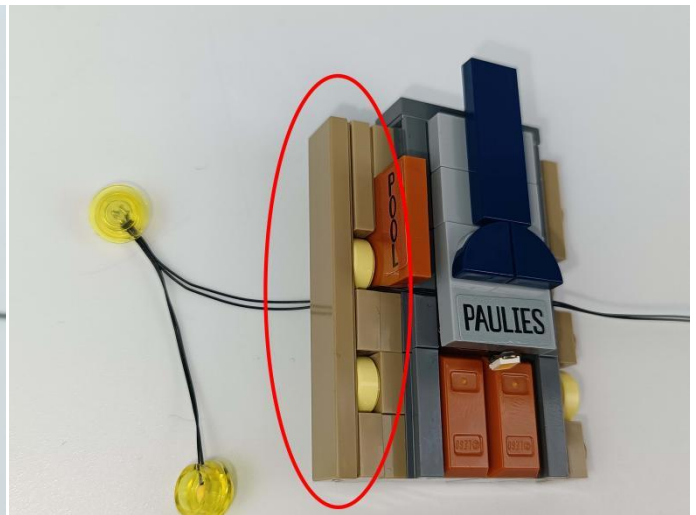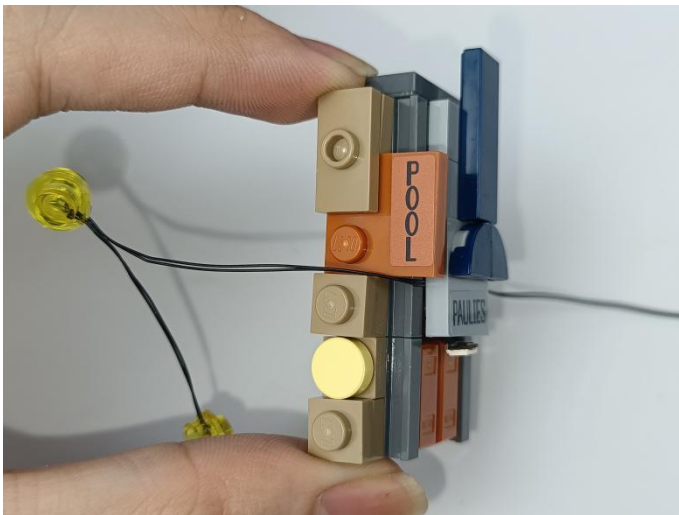


260

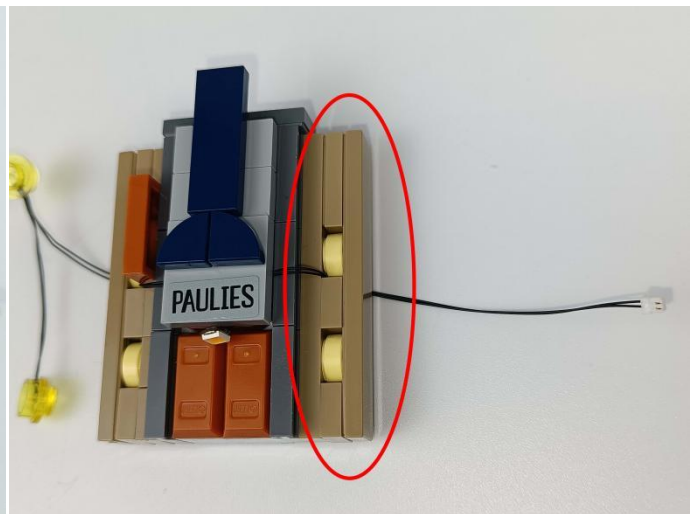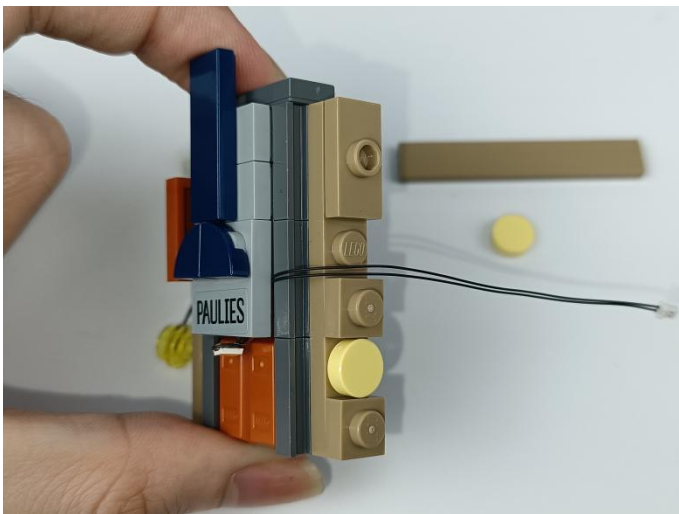

261




262

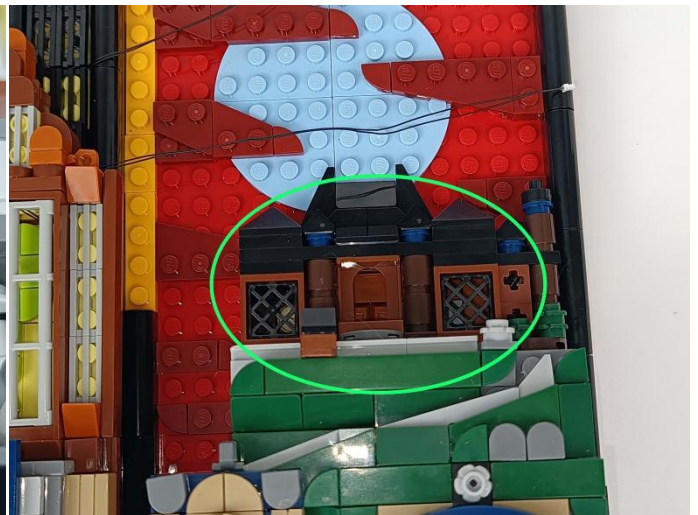


263





264

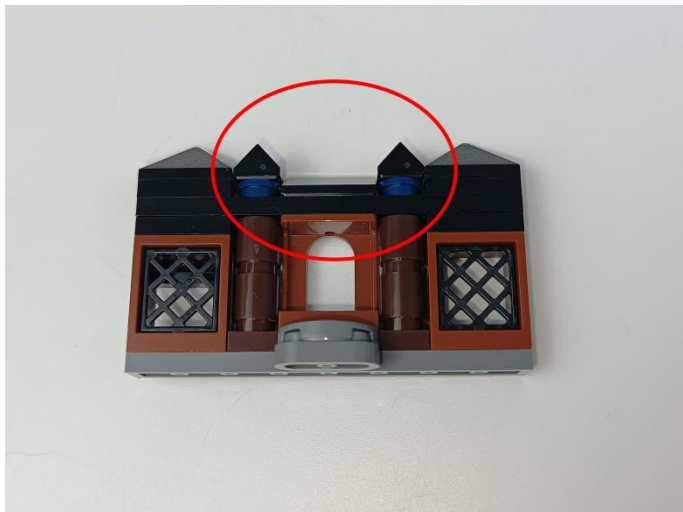

265

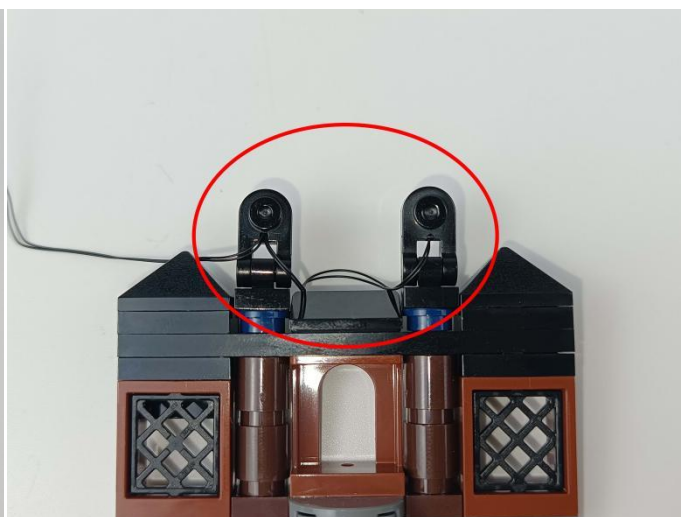


266

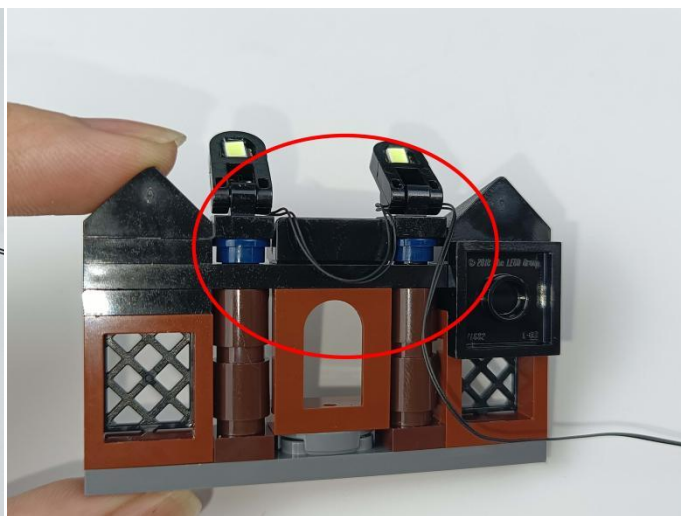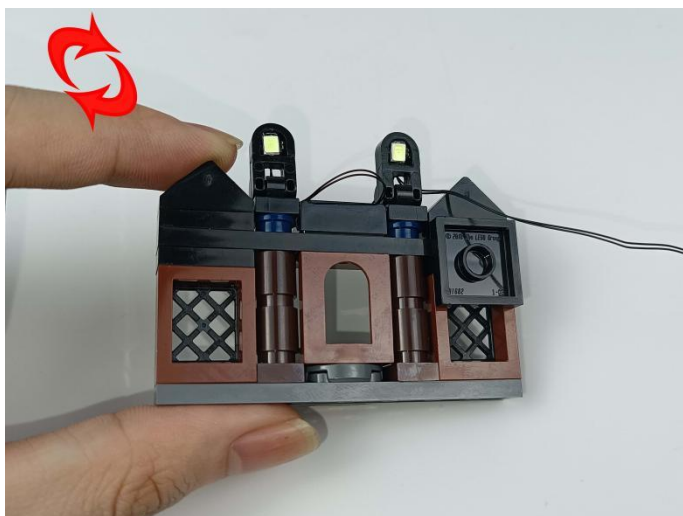

267



268

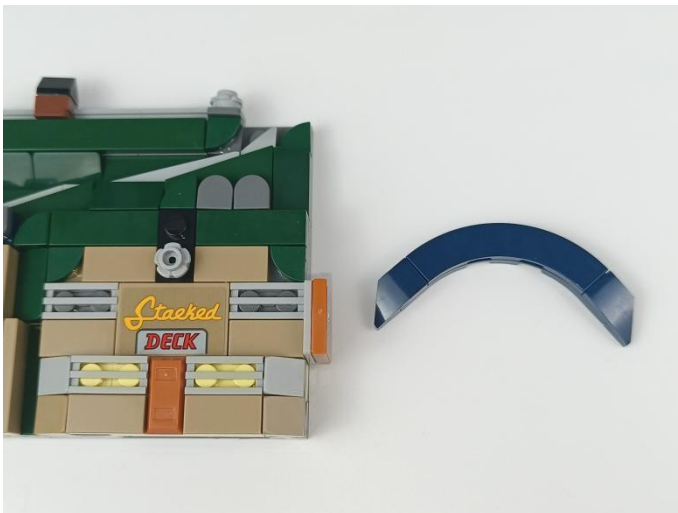


269




270




271

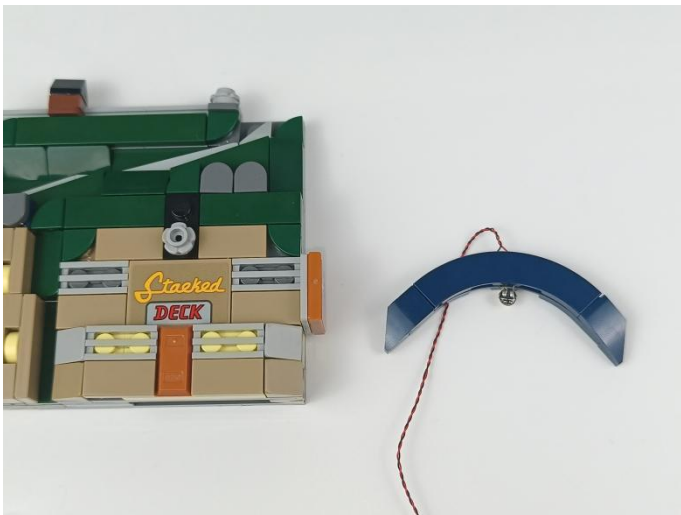

272

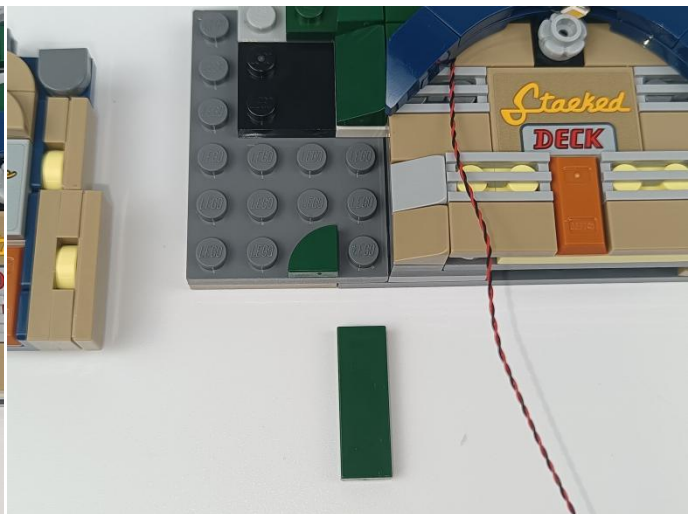



273

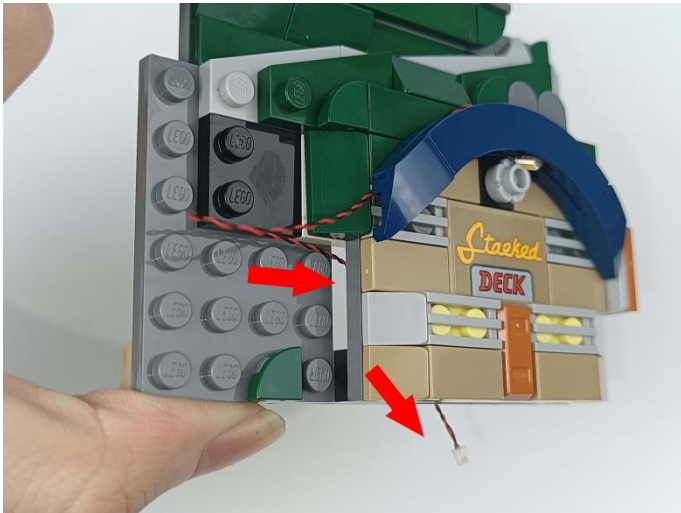


274




275

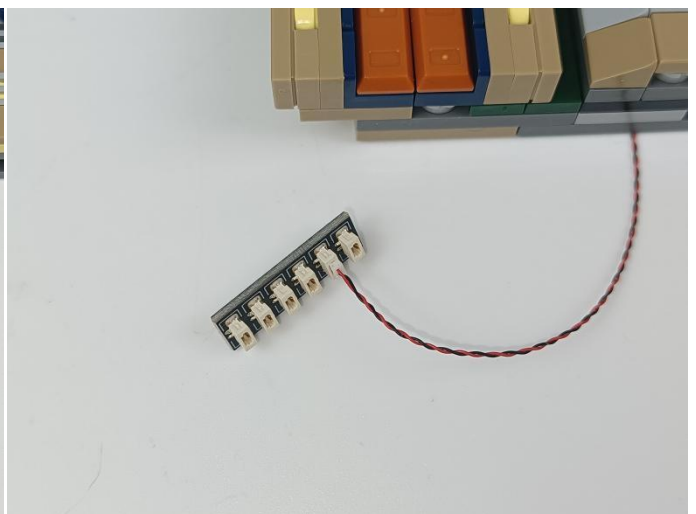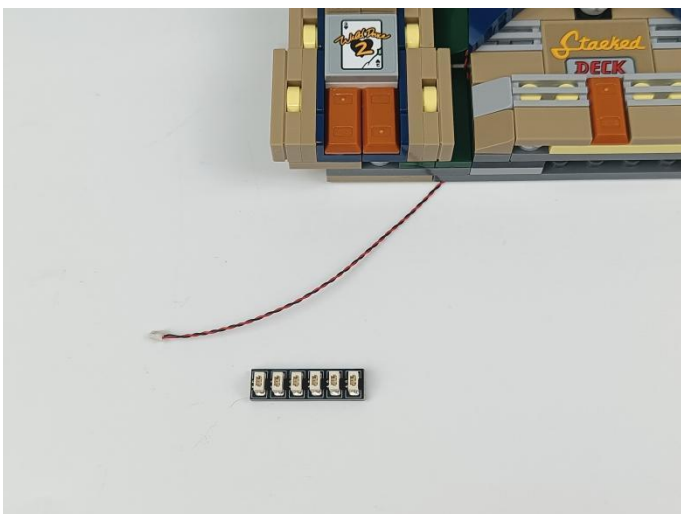



276

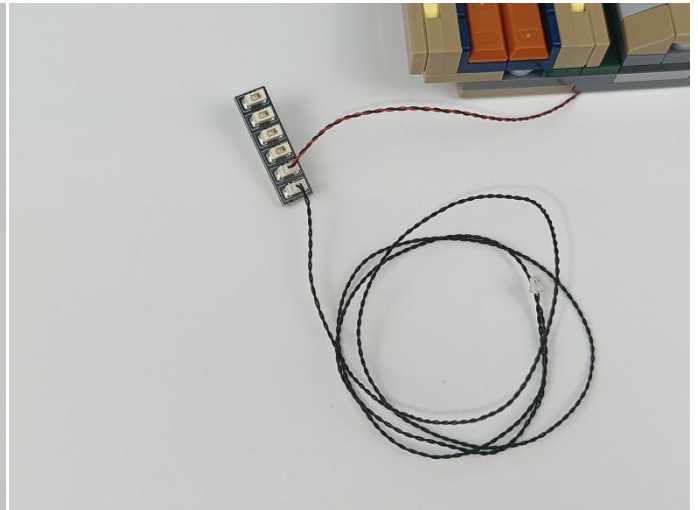


277

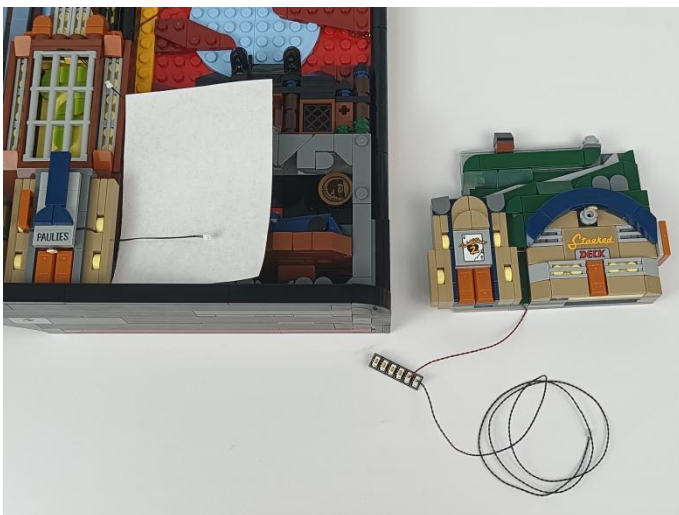



278

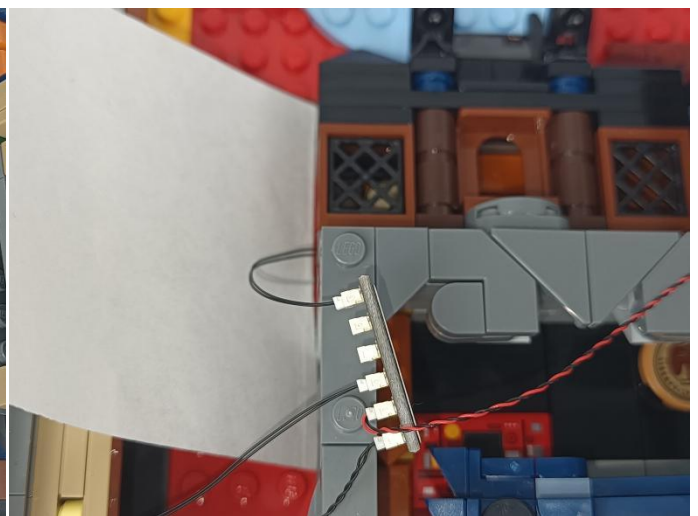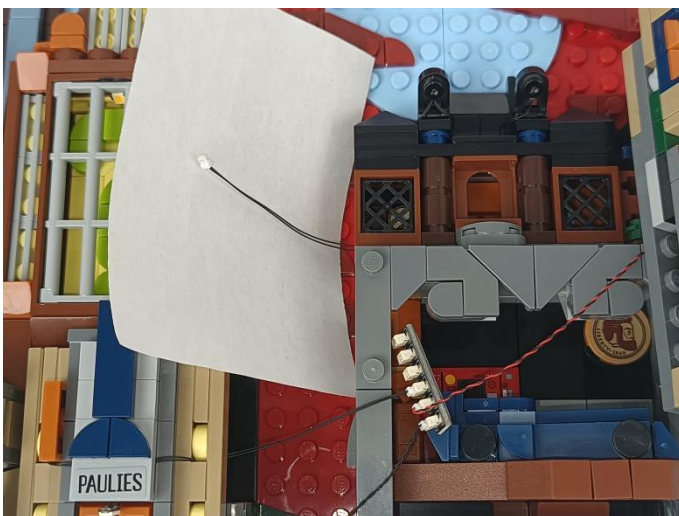


279

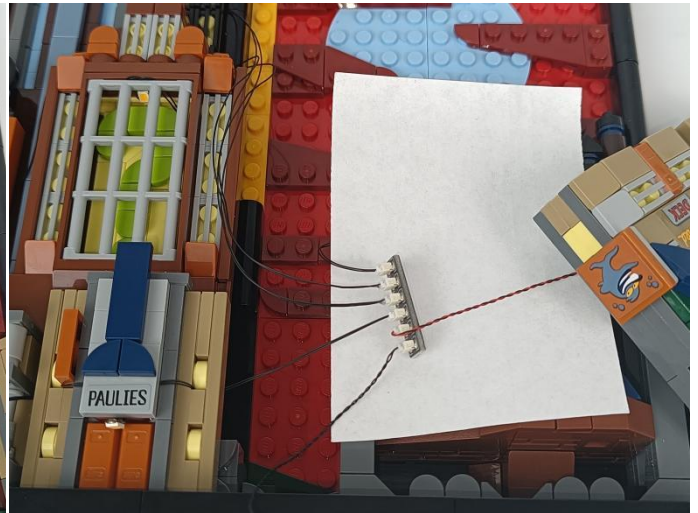


280

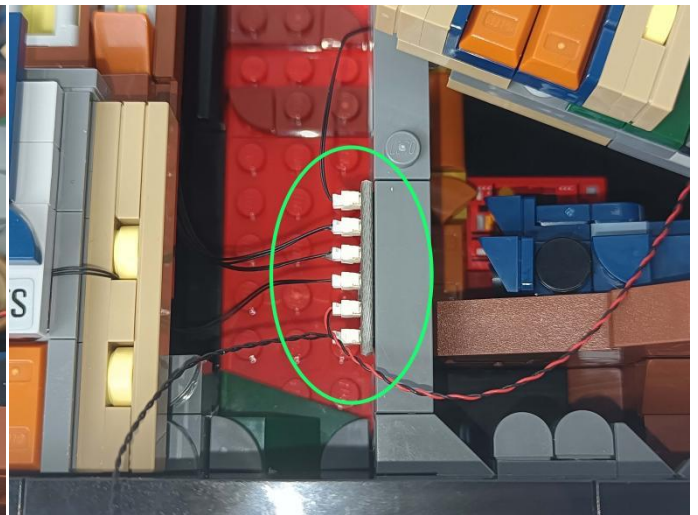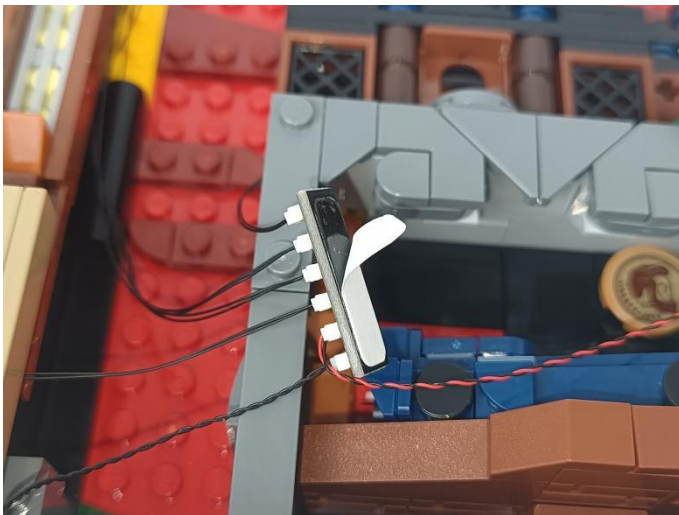


281

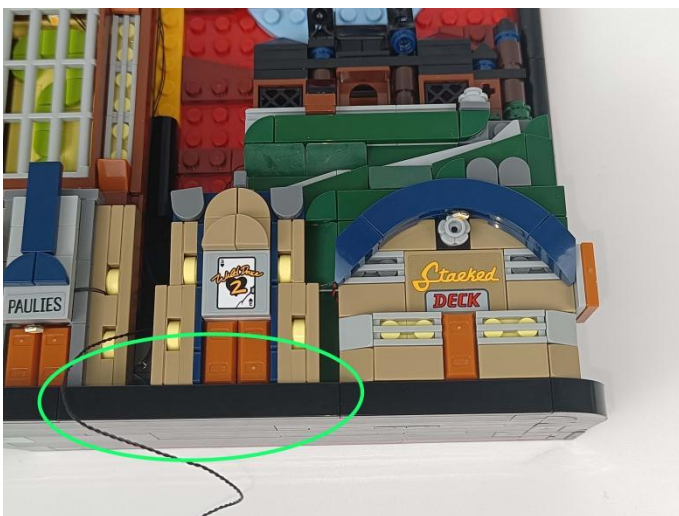


282

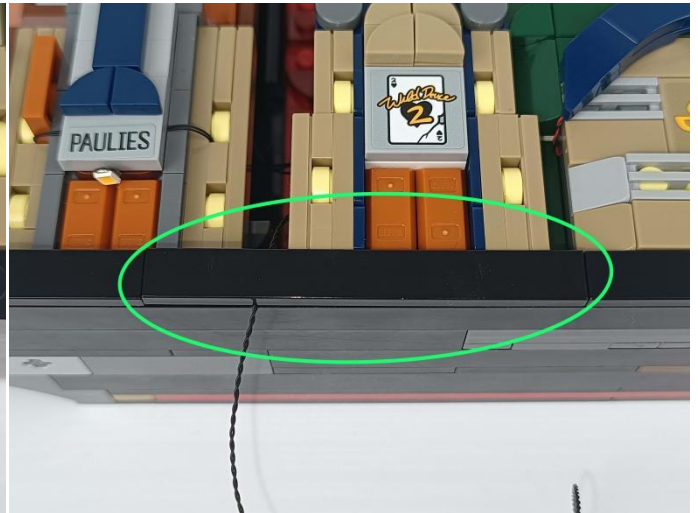



283

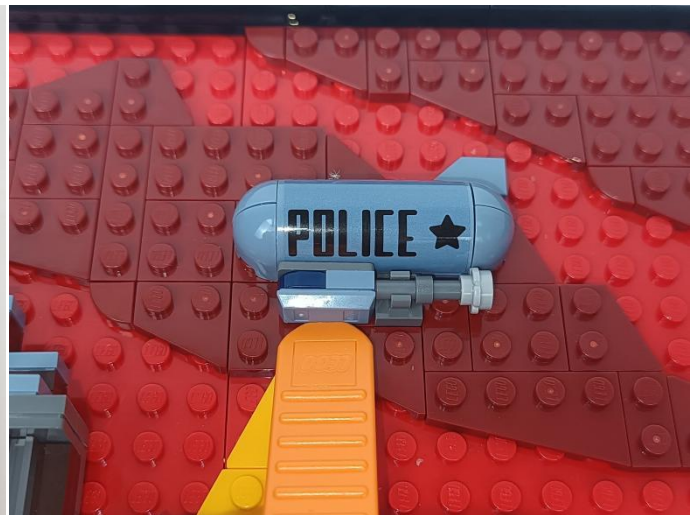



284

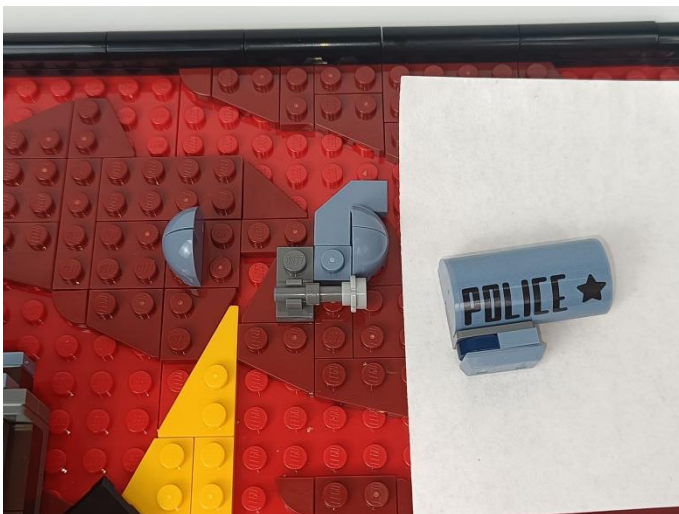


285

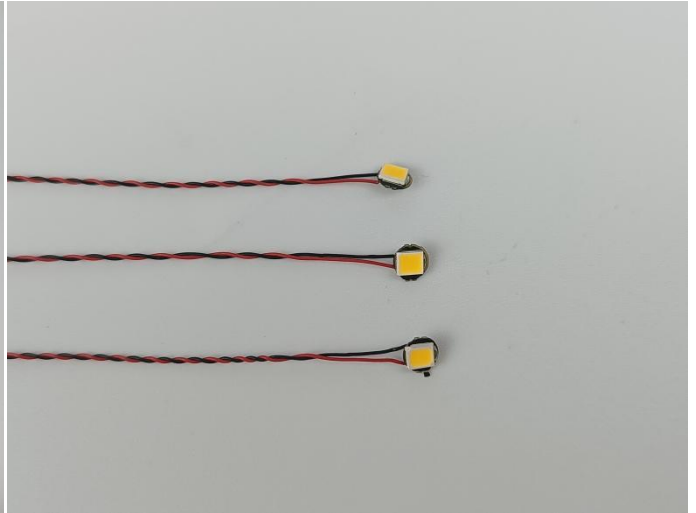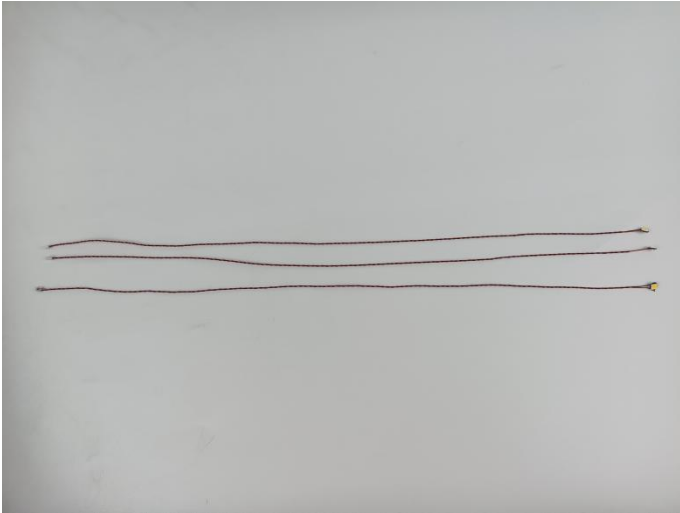



286

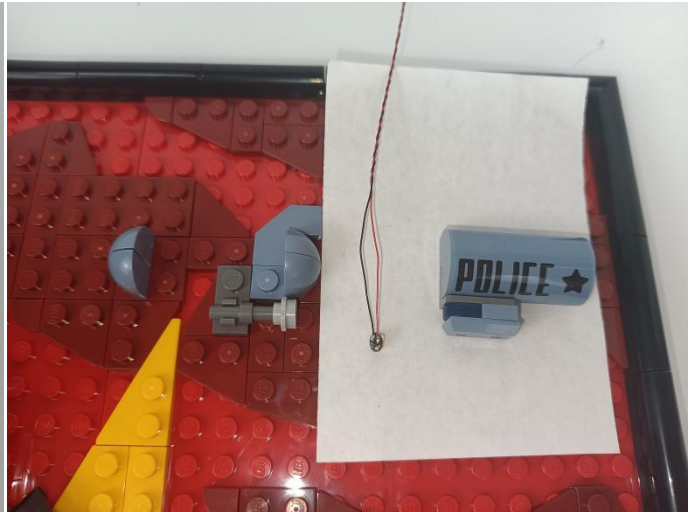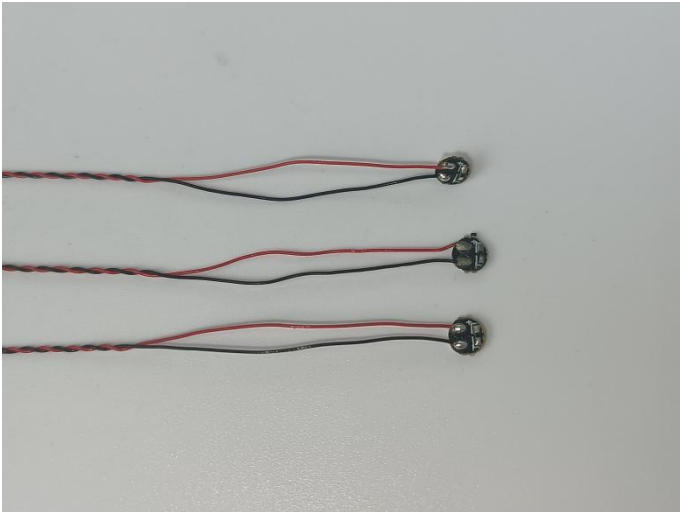



287

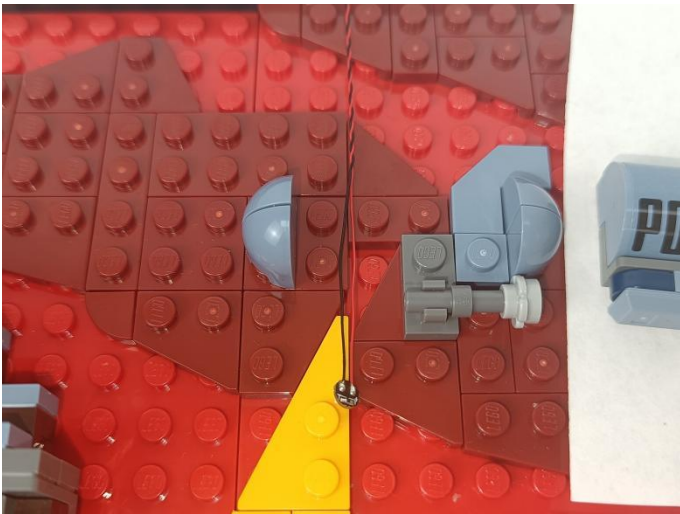

288

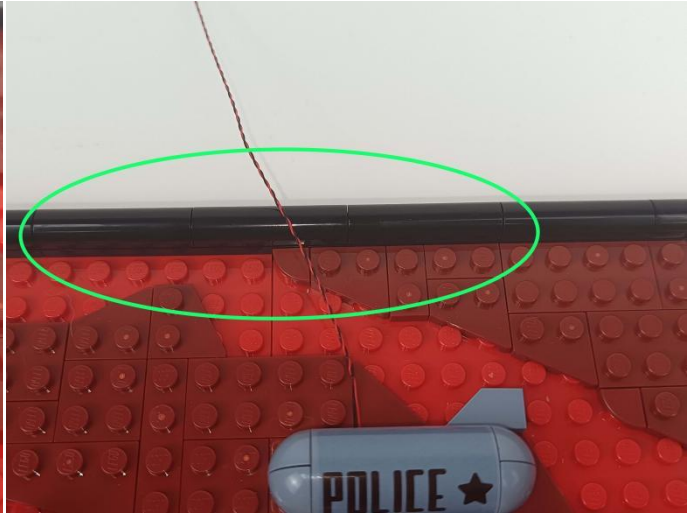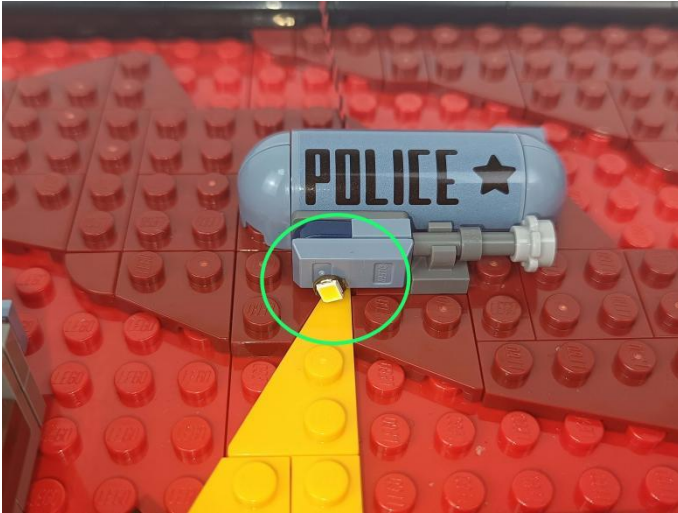



289

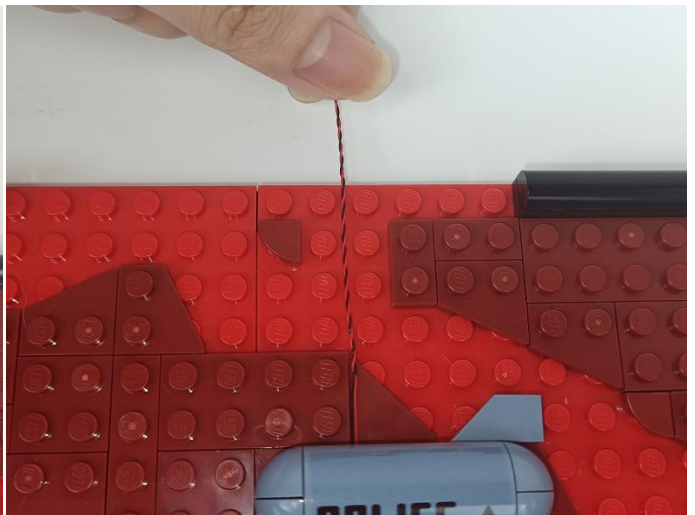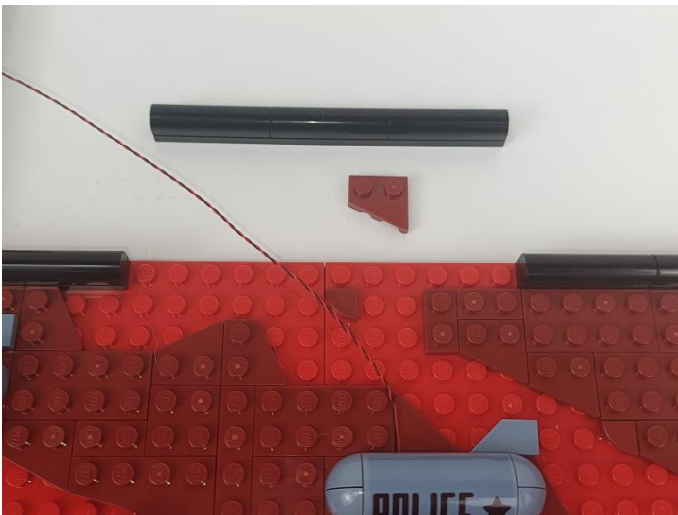


290





291

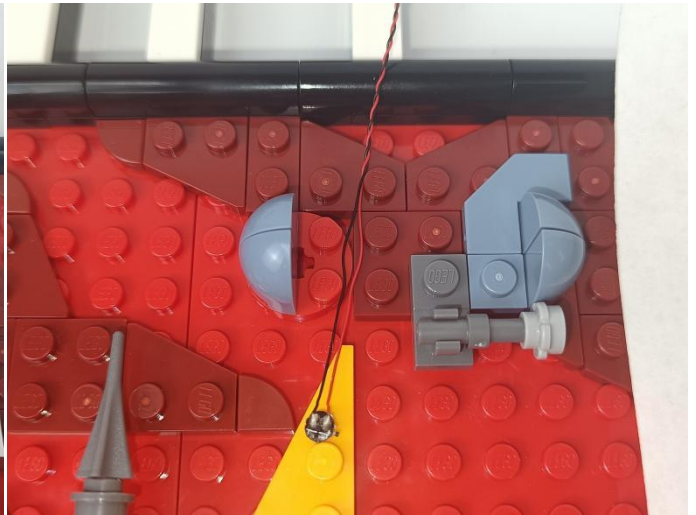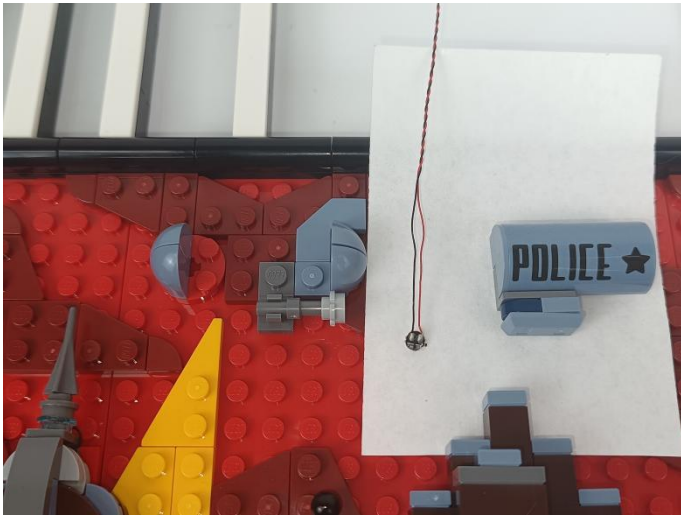


292

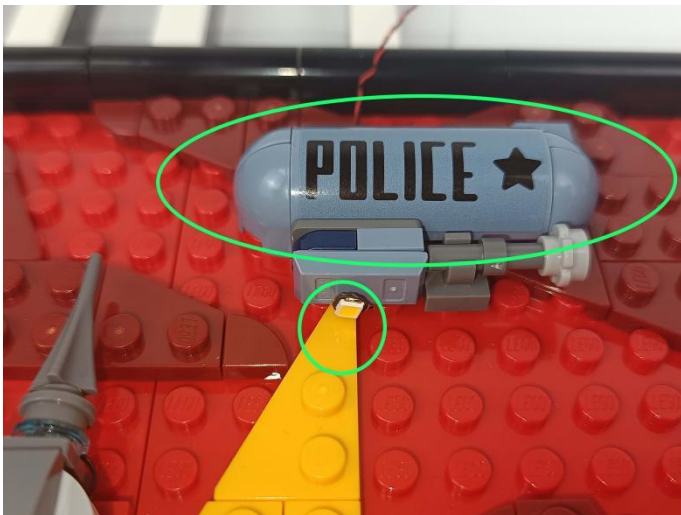



293

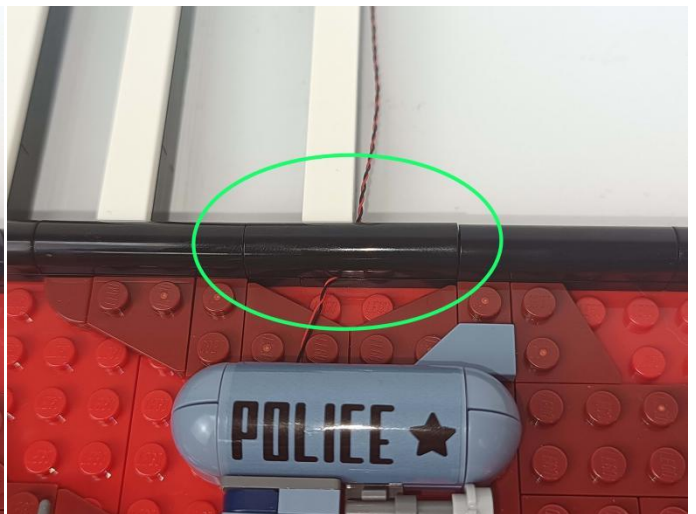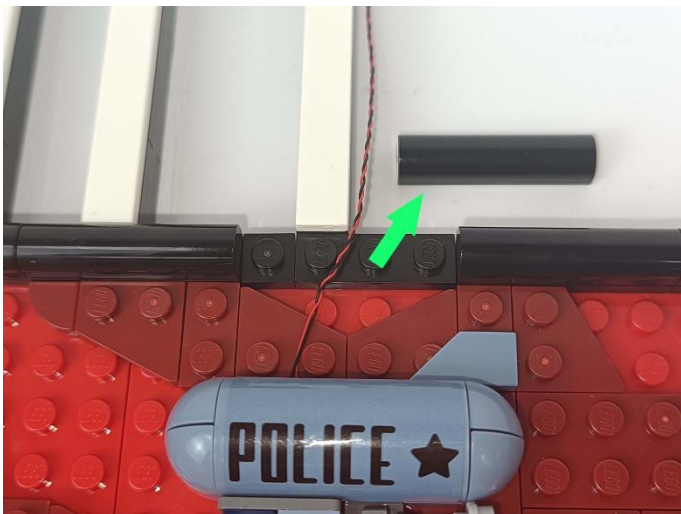



294

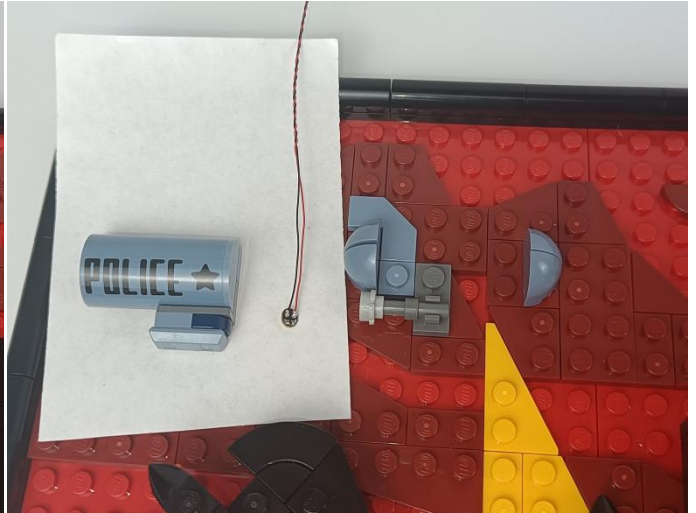

295

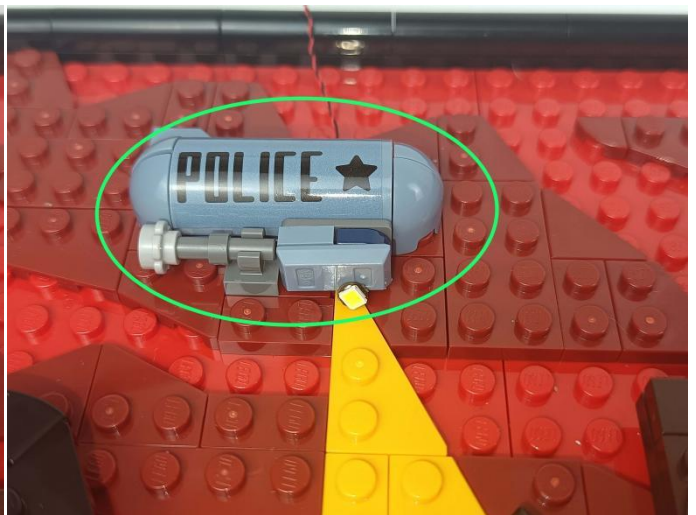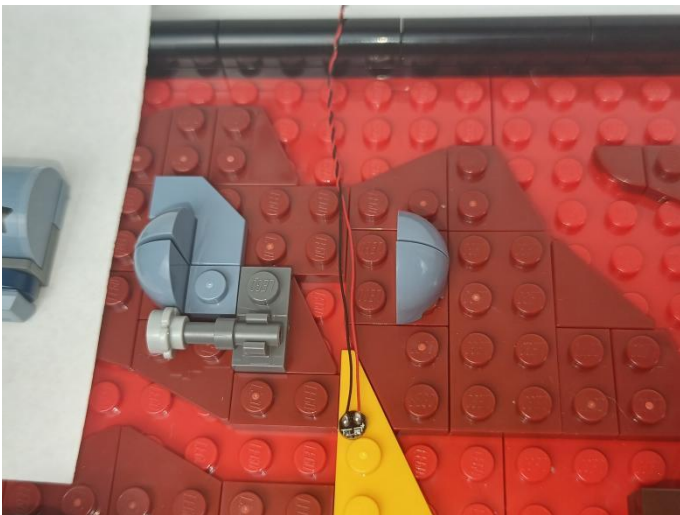


296

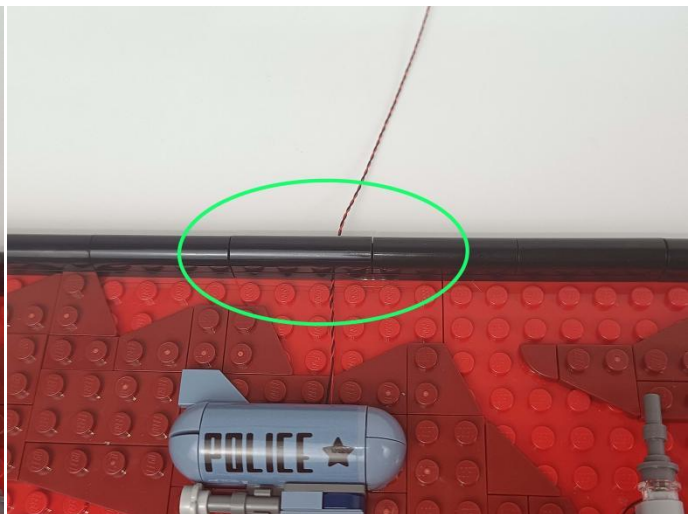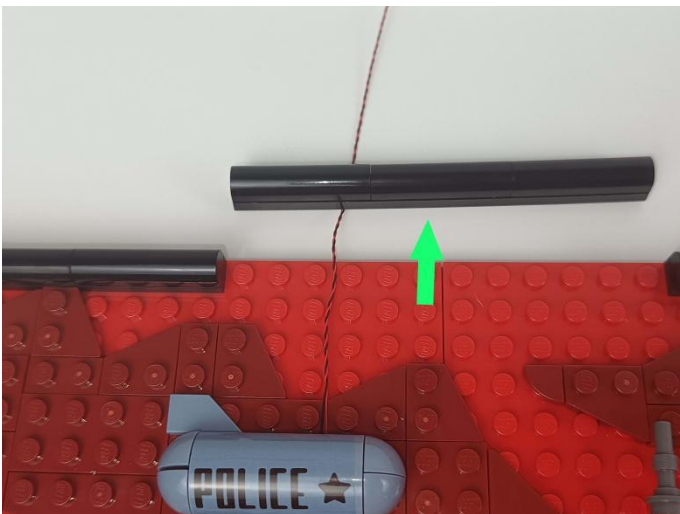

297



298

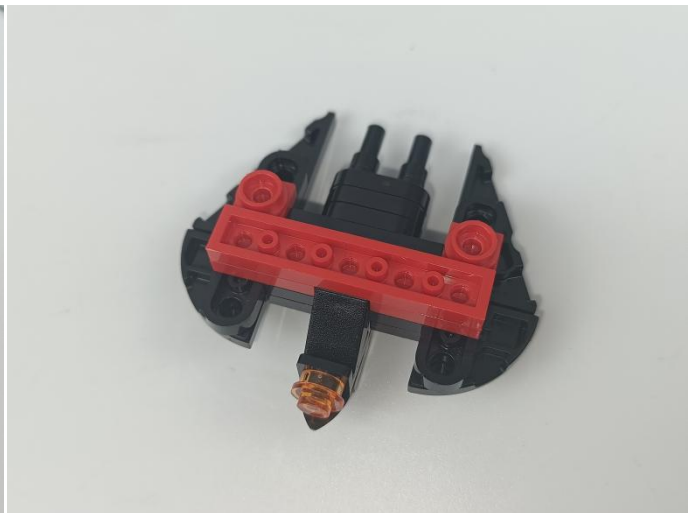

299



Tips

The plate without slit:

The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work.



The plate with slit:


The plate with slit:

The wire has enough space to avoid being squeezed endowed with longer service life and more stable effect.



The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormalheat during installation.



300

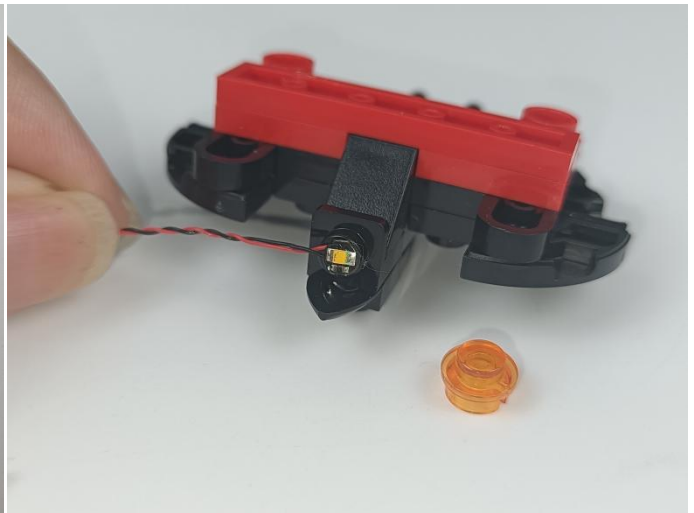

301




302

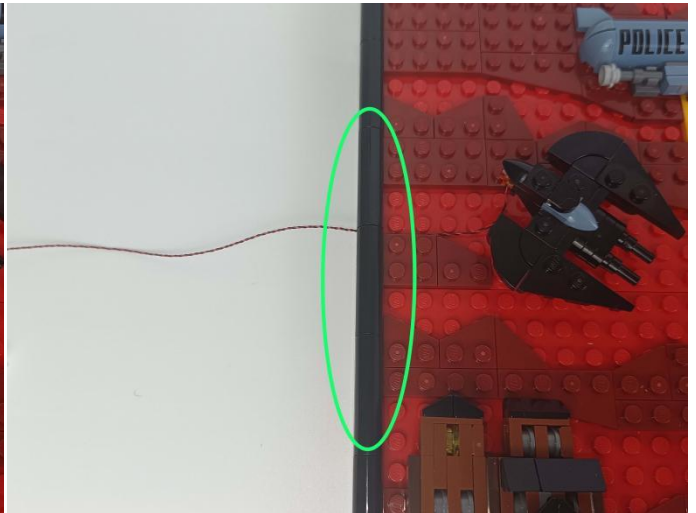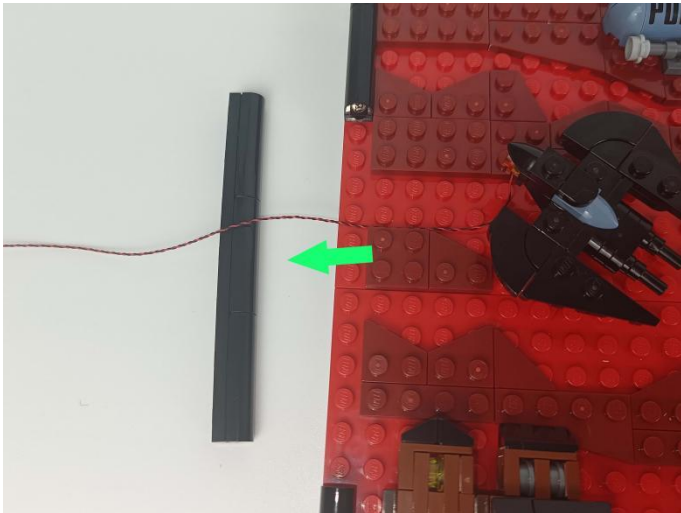



303





304

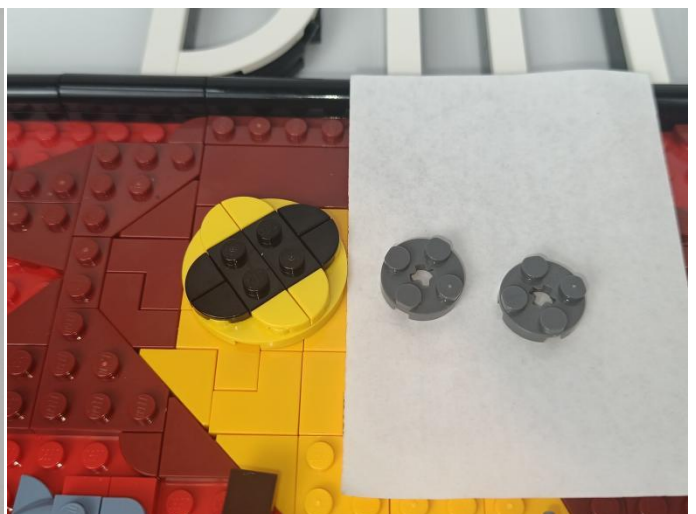



305

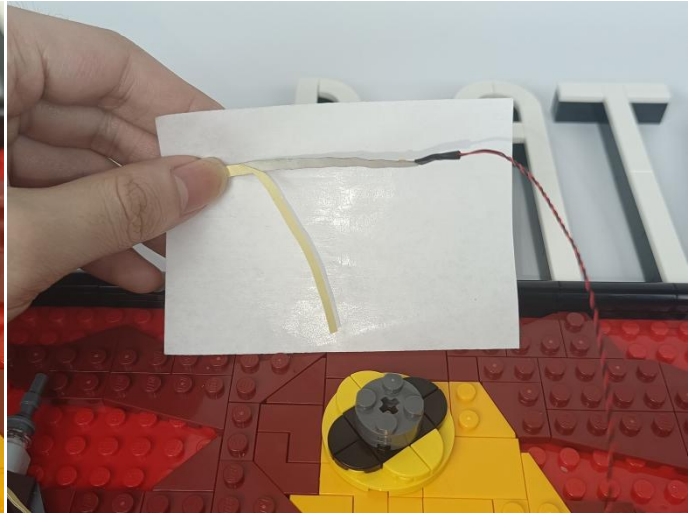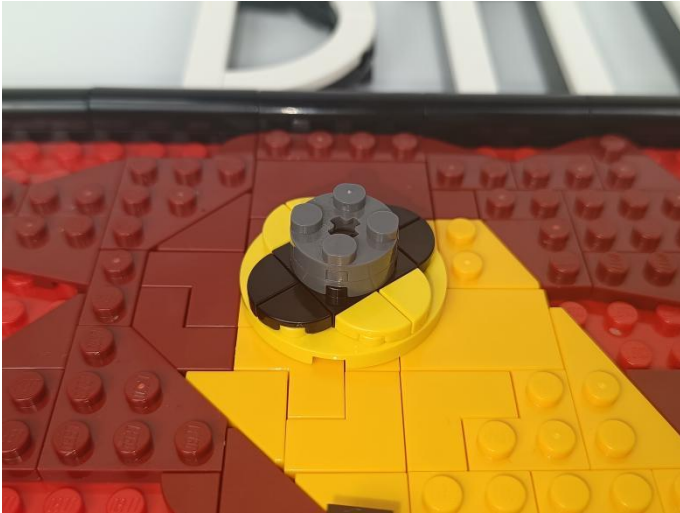


306

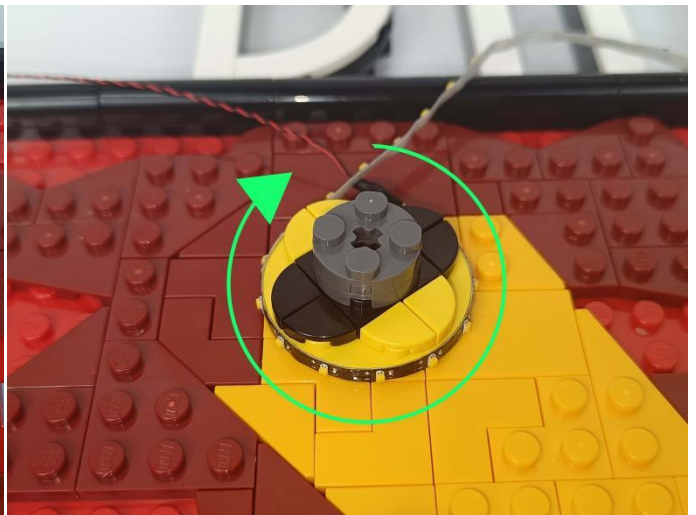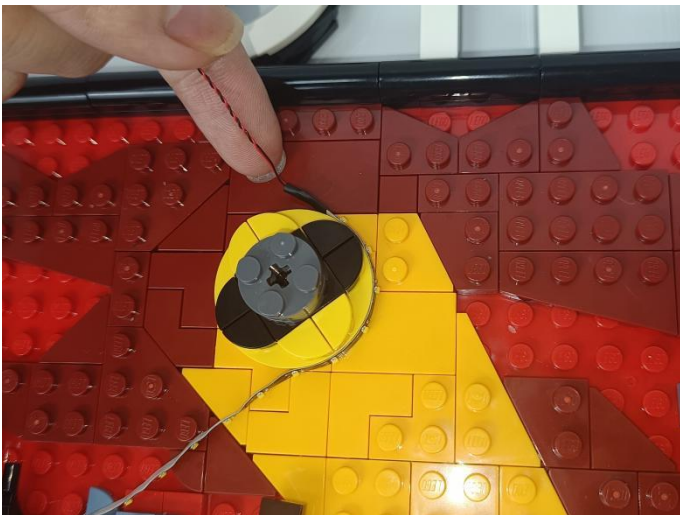



307

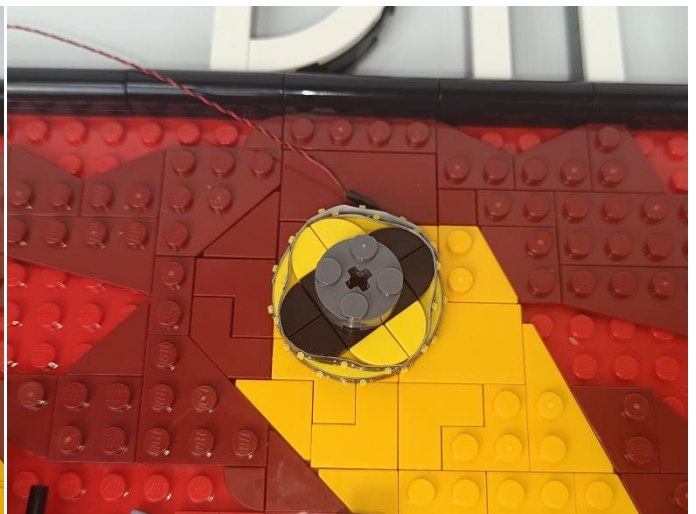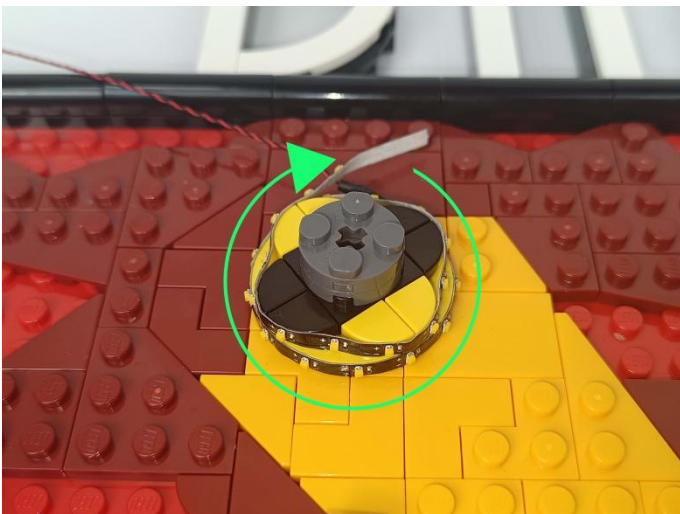

308

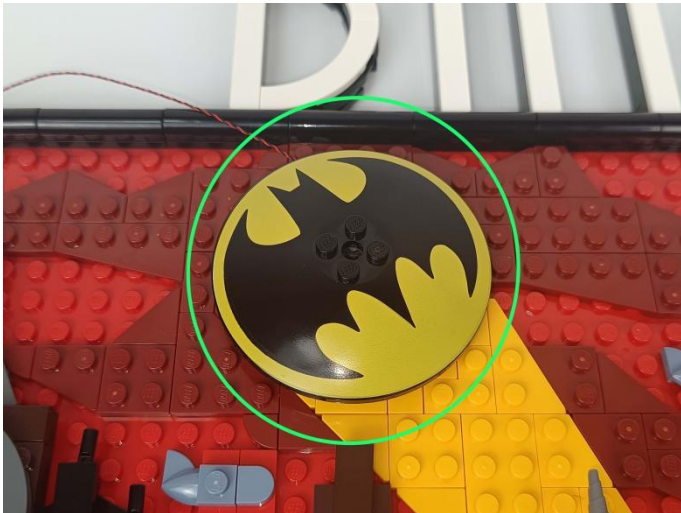

309

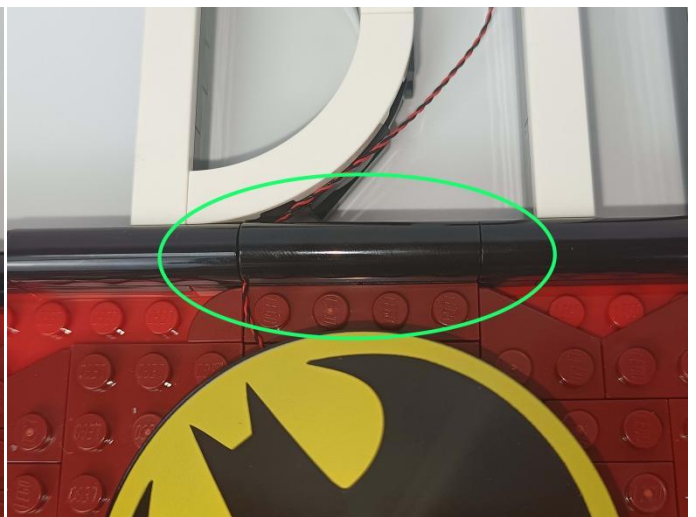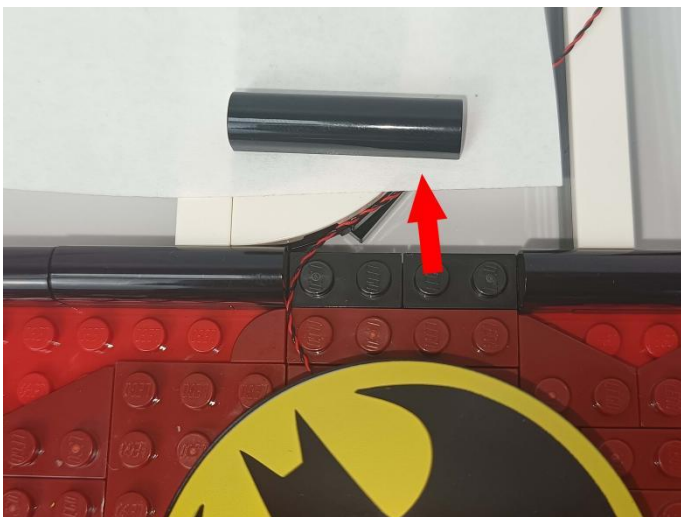

310



311




312





313




314

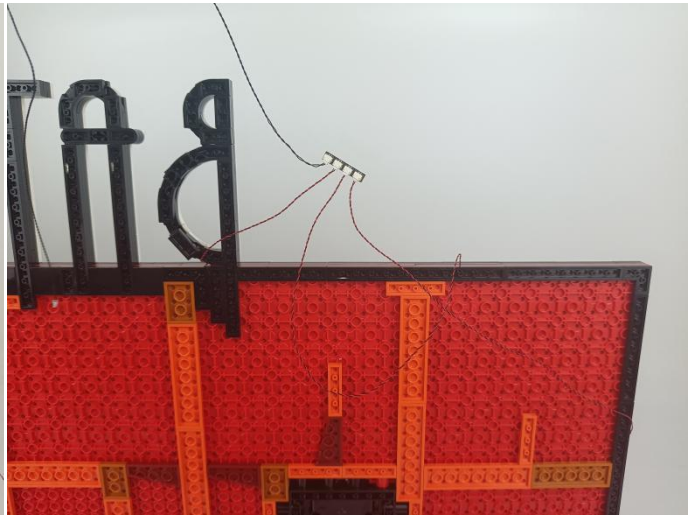


315

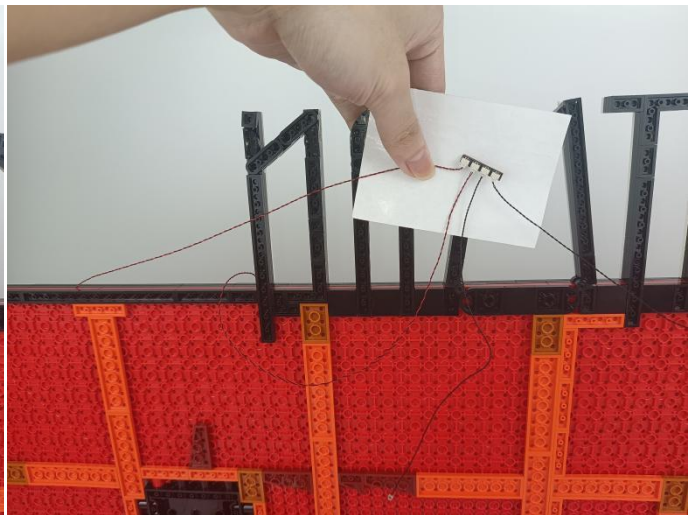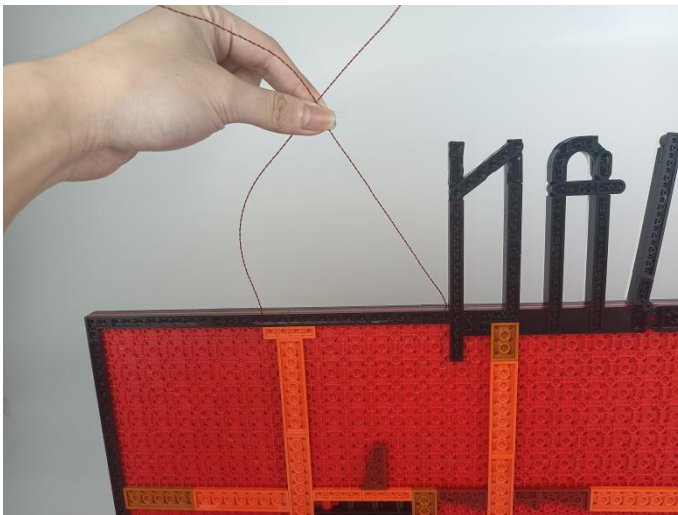

316

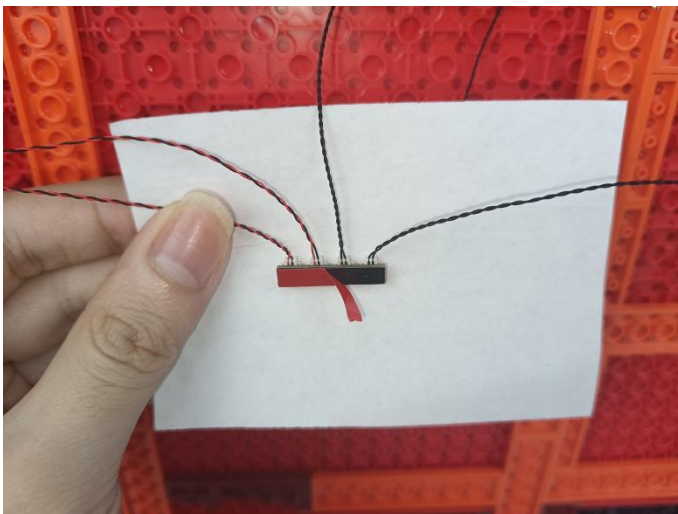


317

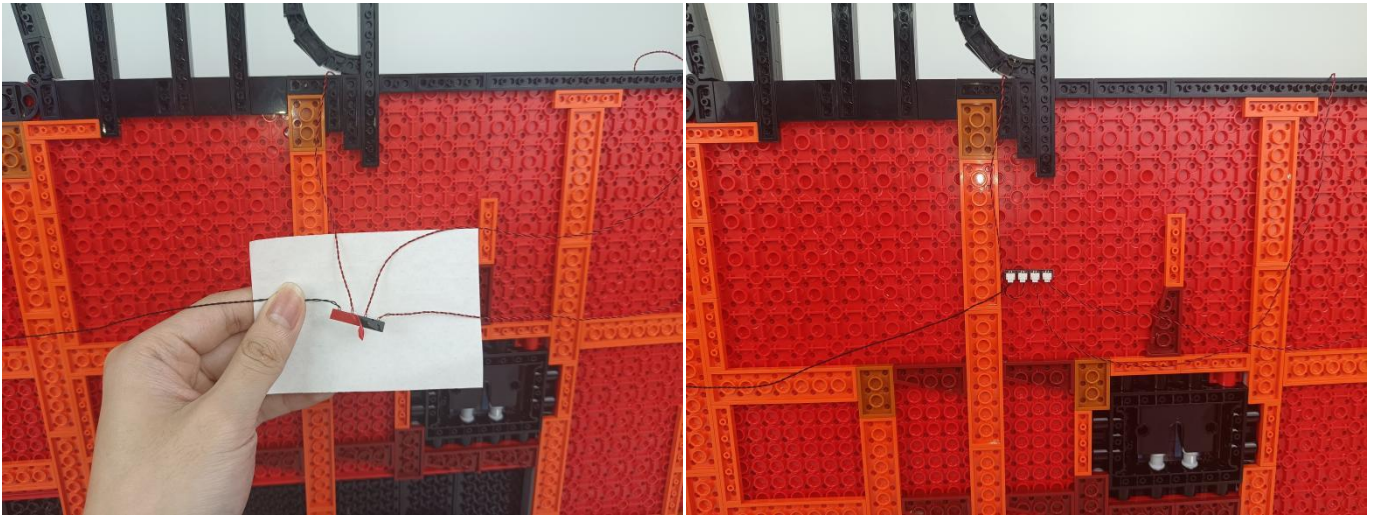



318





319

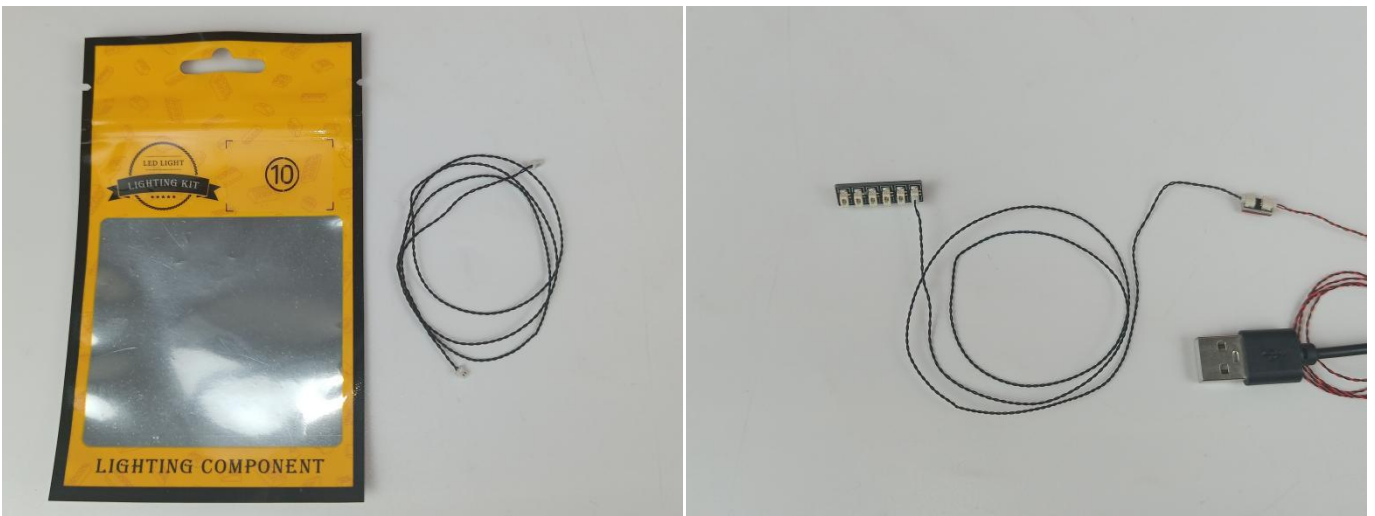


320

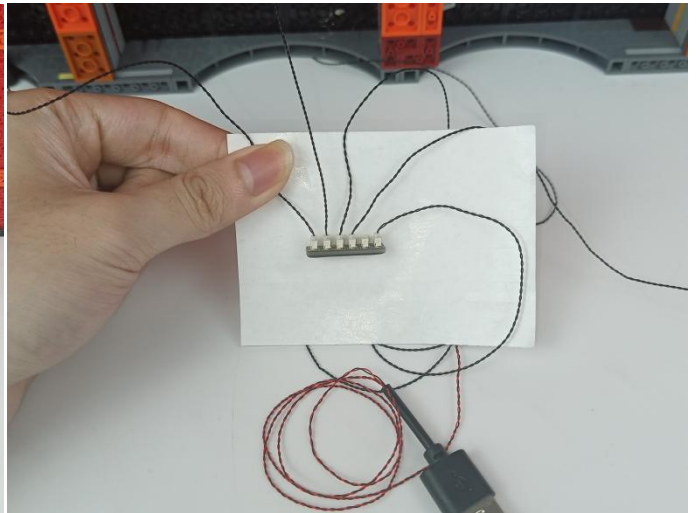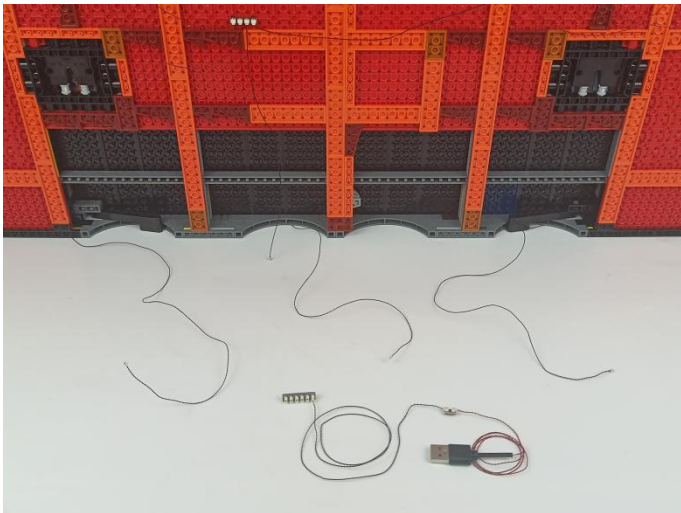



321

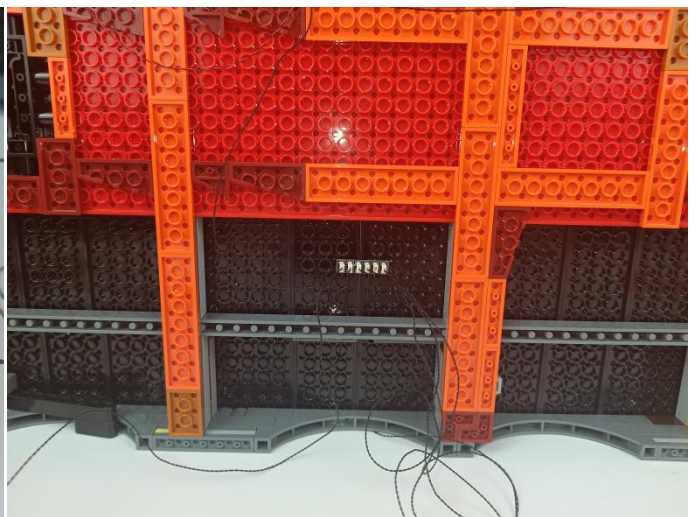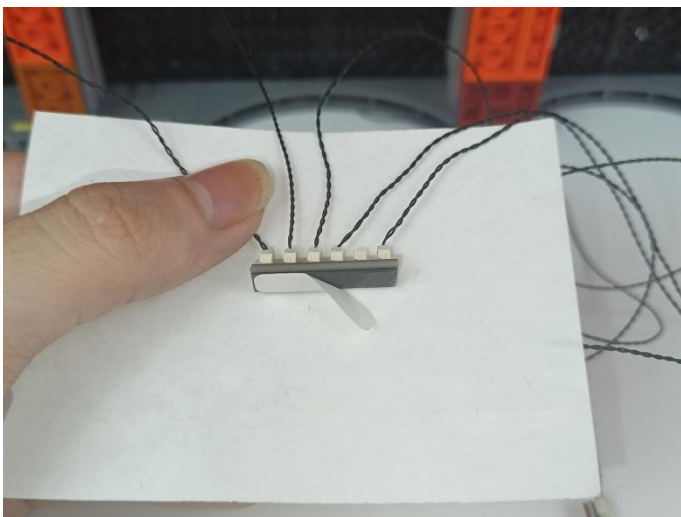



322

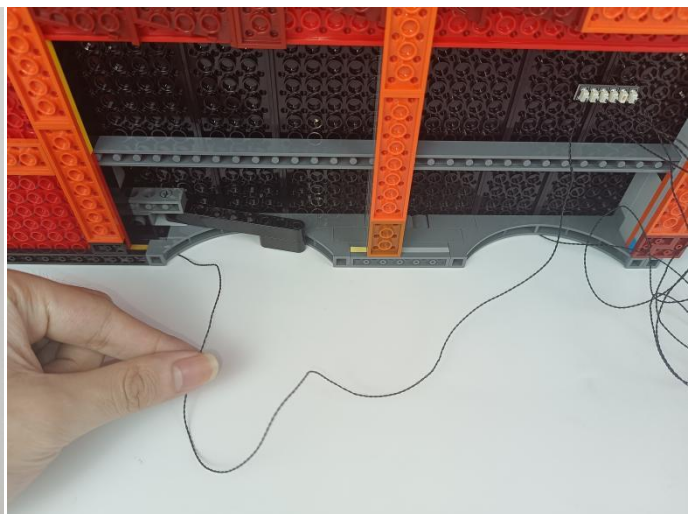


323

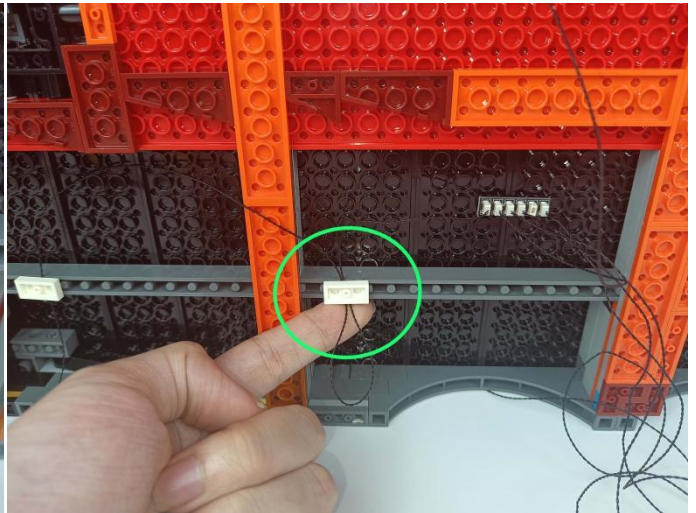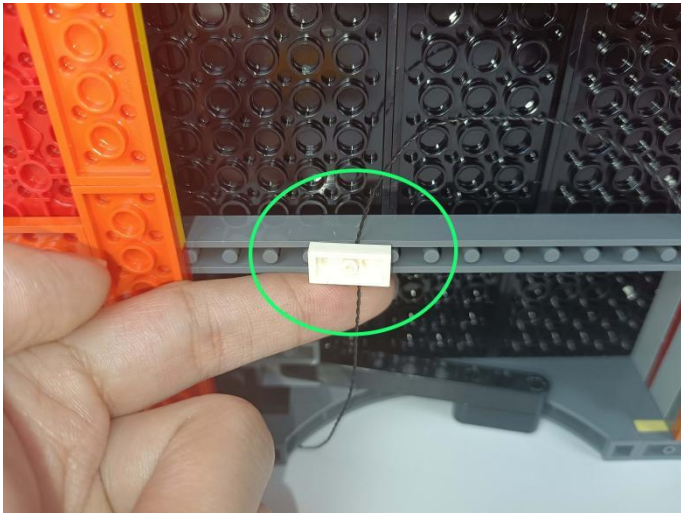


324

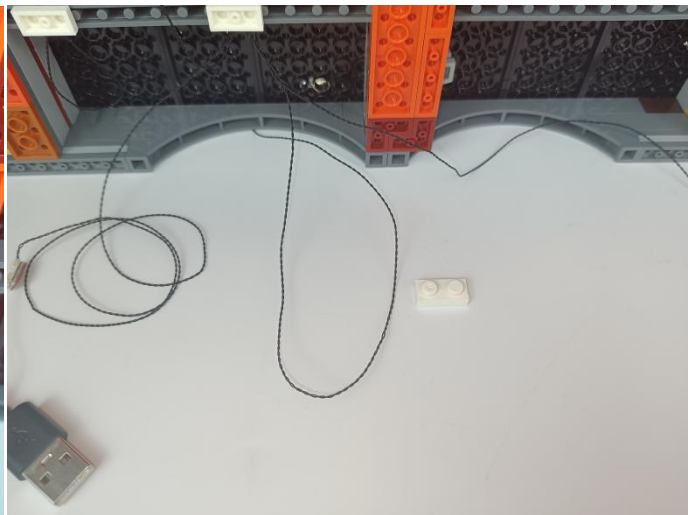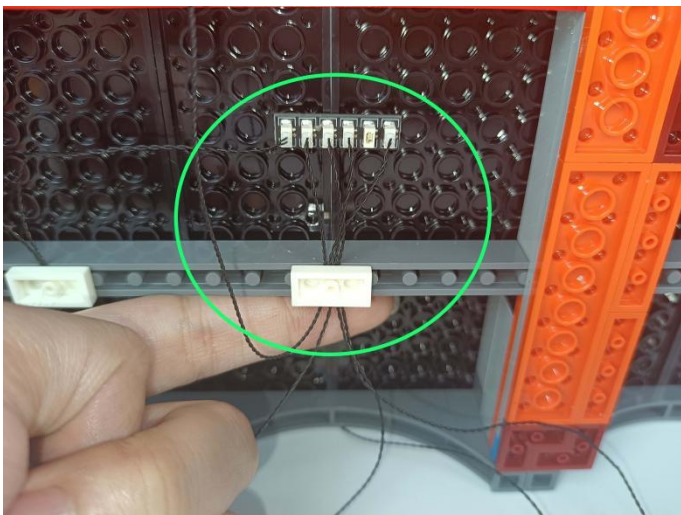

325

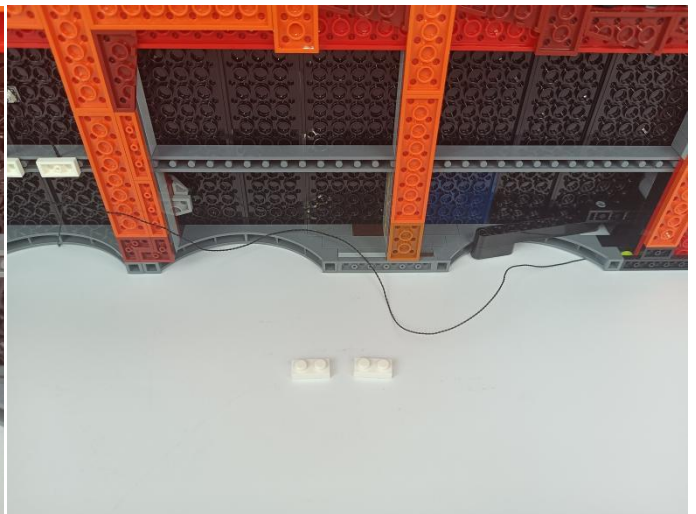

326

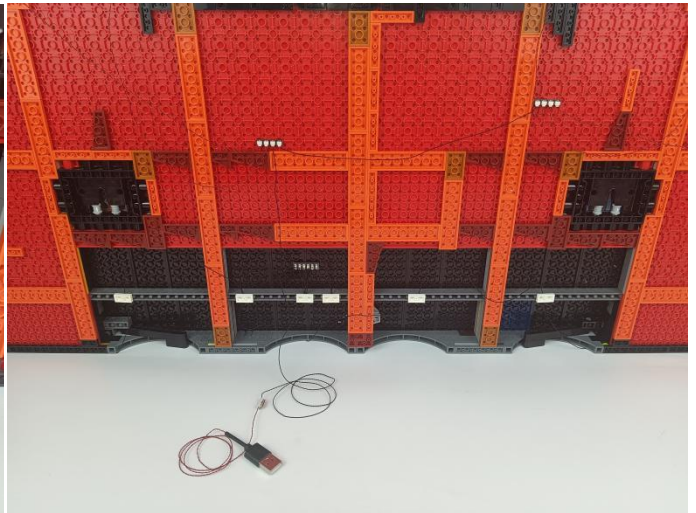

327



328



Good job, you've done all the installation steps, power it up and enjoy your work.



THANKS