

10293 Winter Village Santa's Visit LED lighting Kit (Deluxe Remote Control Version) LG123 / GC123

Instructions for installing this kit:



All the accessories in the manual are samples, and there may be differences between the pictures and the actual products! The installation is not affected under normal circumstances. If you cannot install it, please contact us in time!!!

Step 1

Test:

This product has 7 bags, and the AA Battery Pack is a gift. (Without battery)





Take out all the accessories in the No. 5 bag.



Take out the AA Battery Pack and turn it over to the back.





Install AA dry batteries.

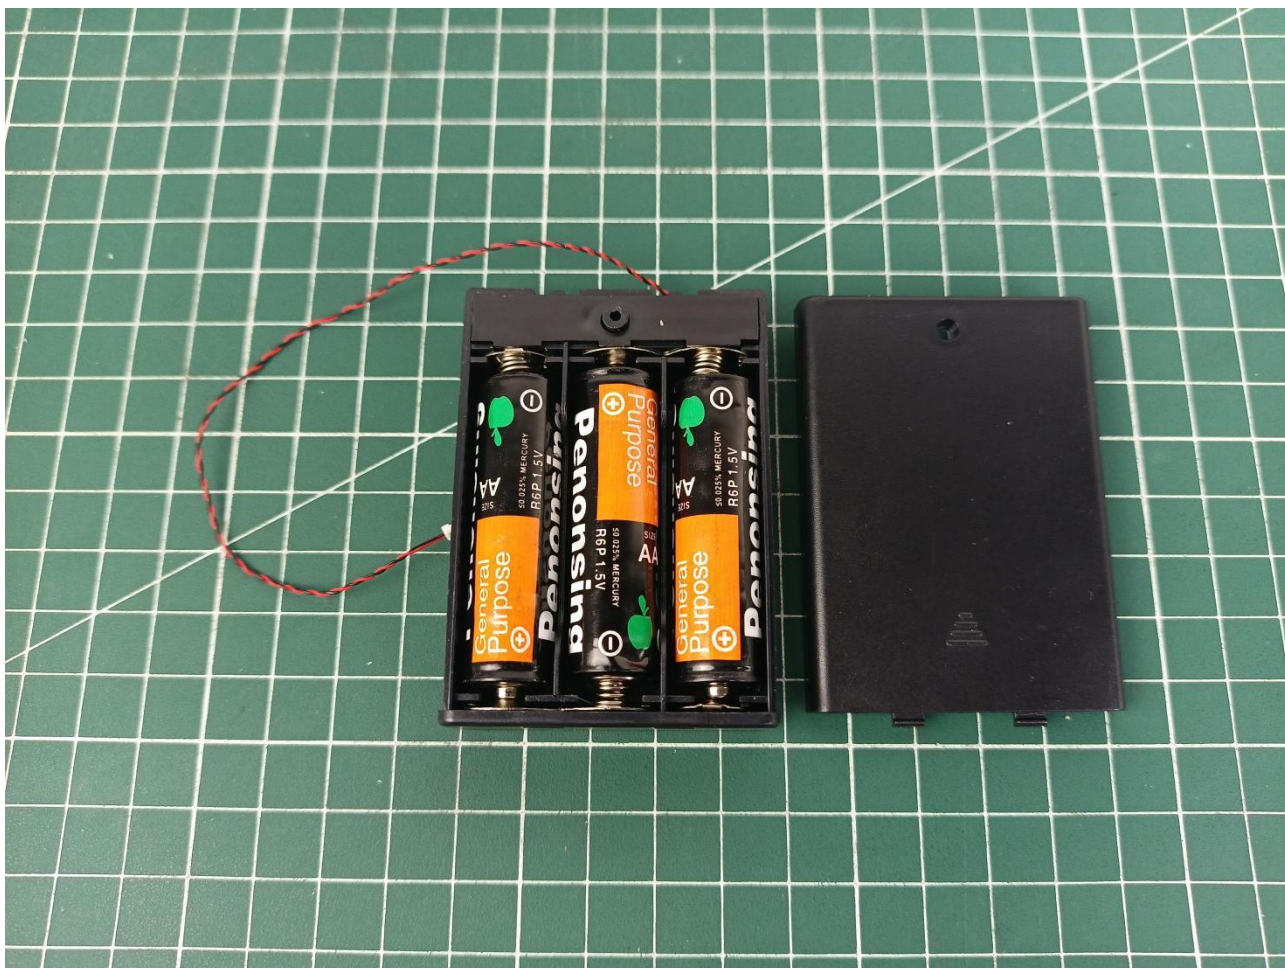
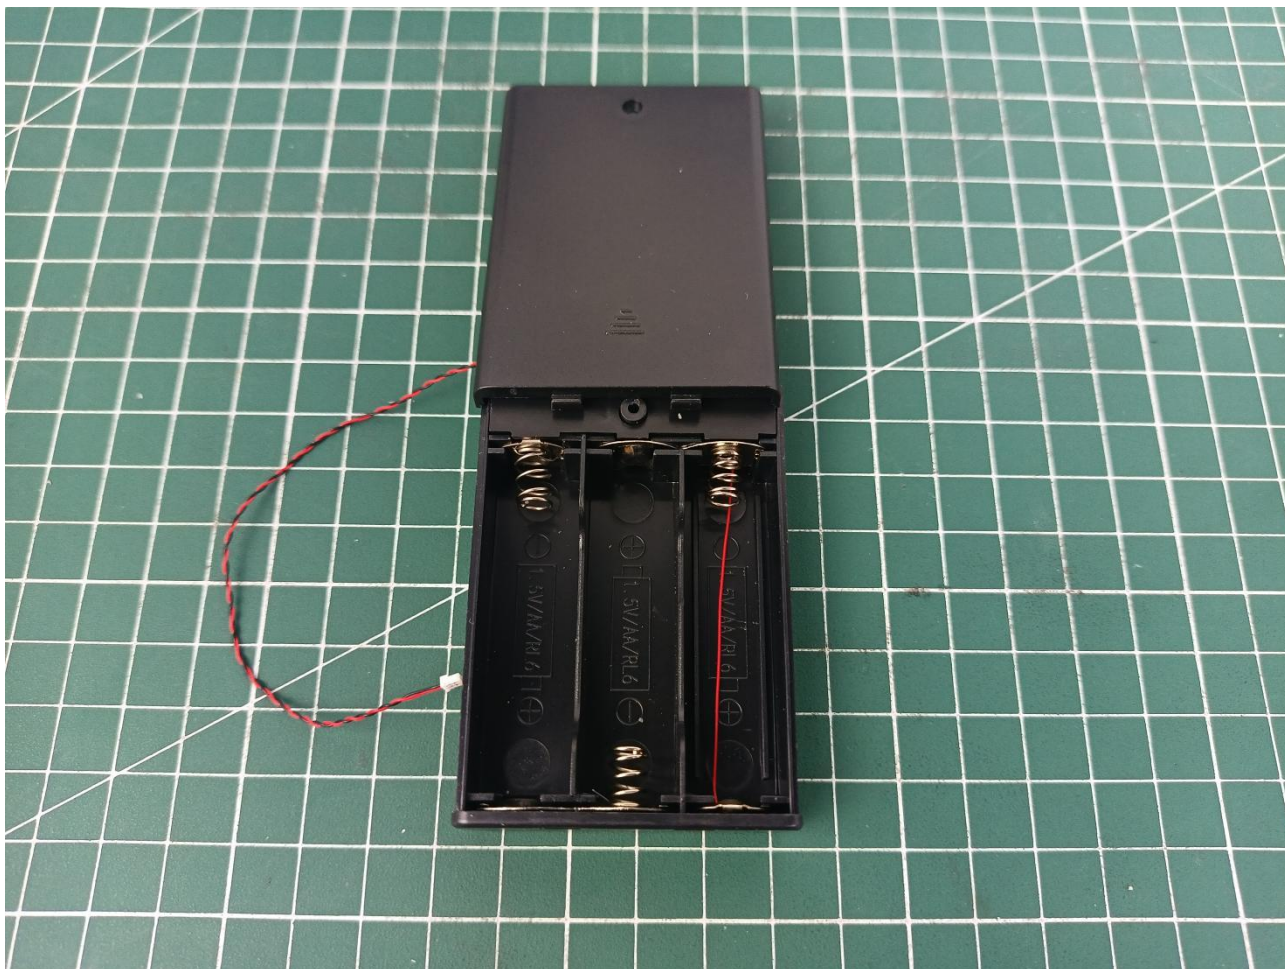





Take out 6-Port Expansion Boards and remove the protective film.

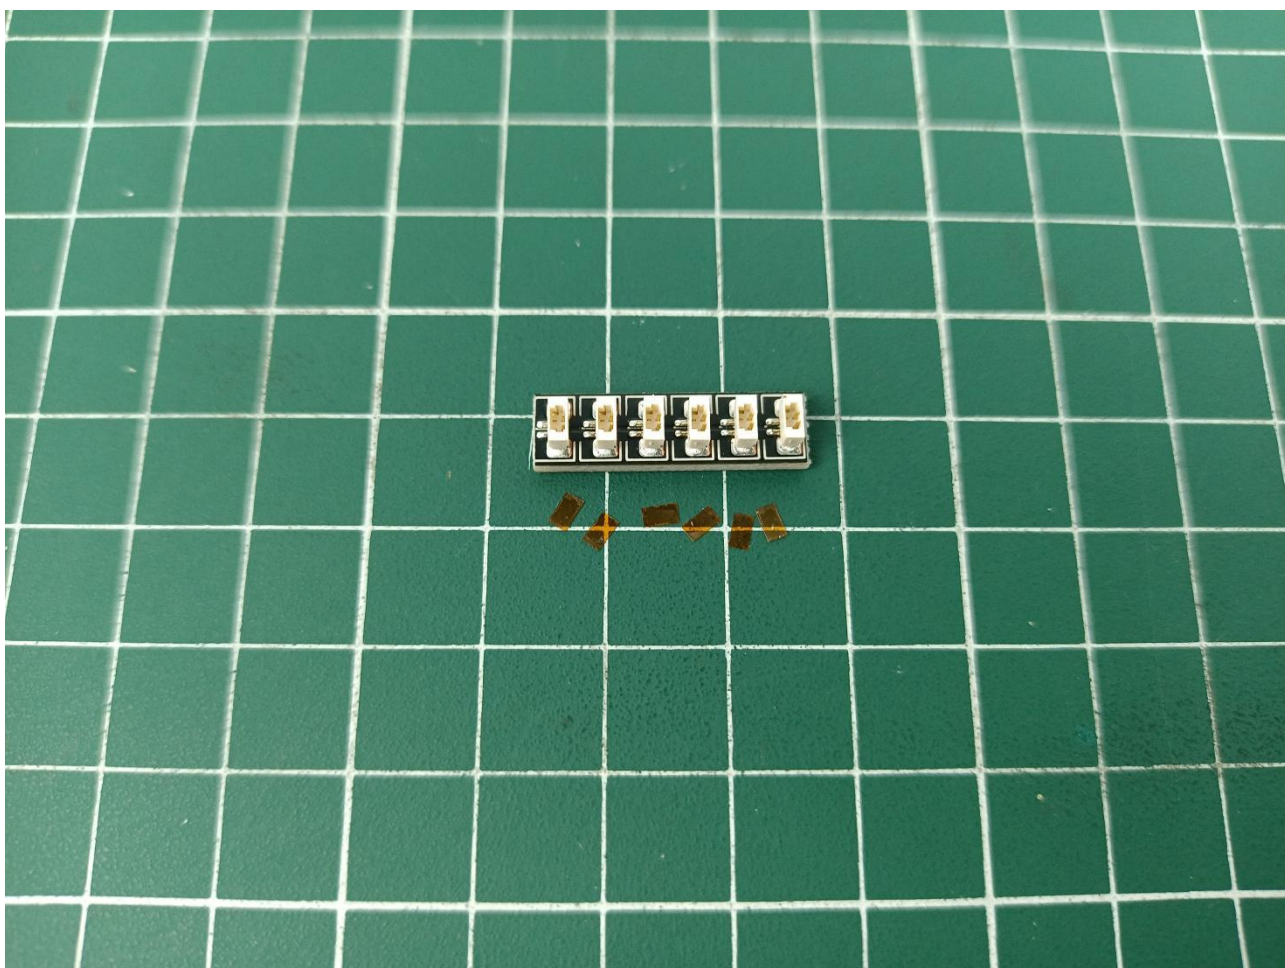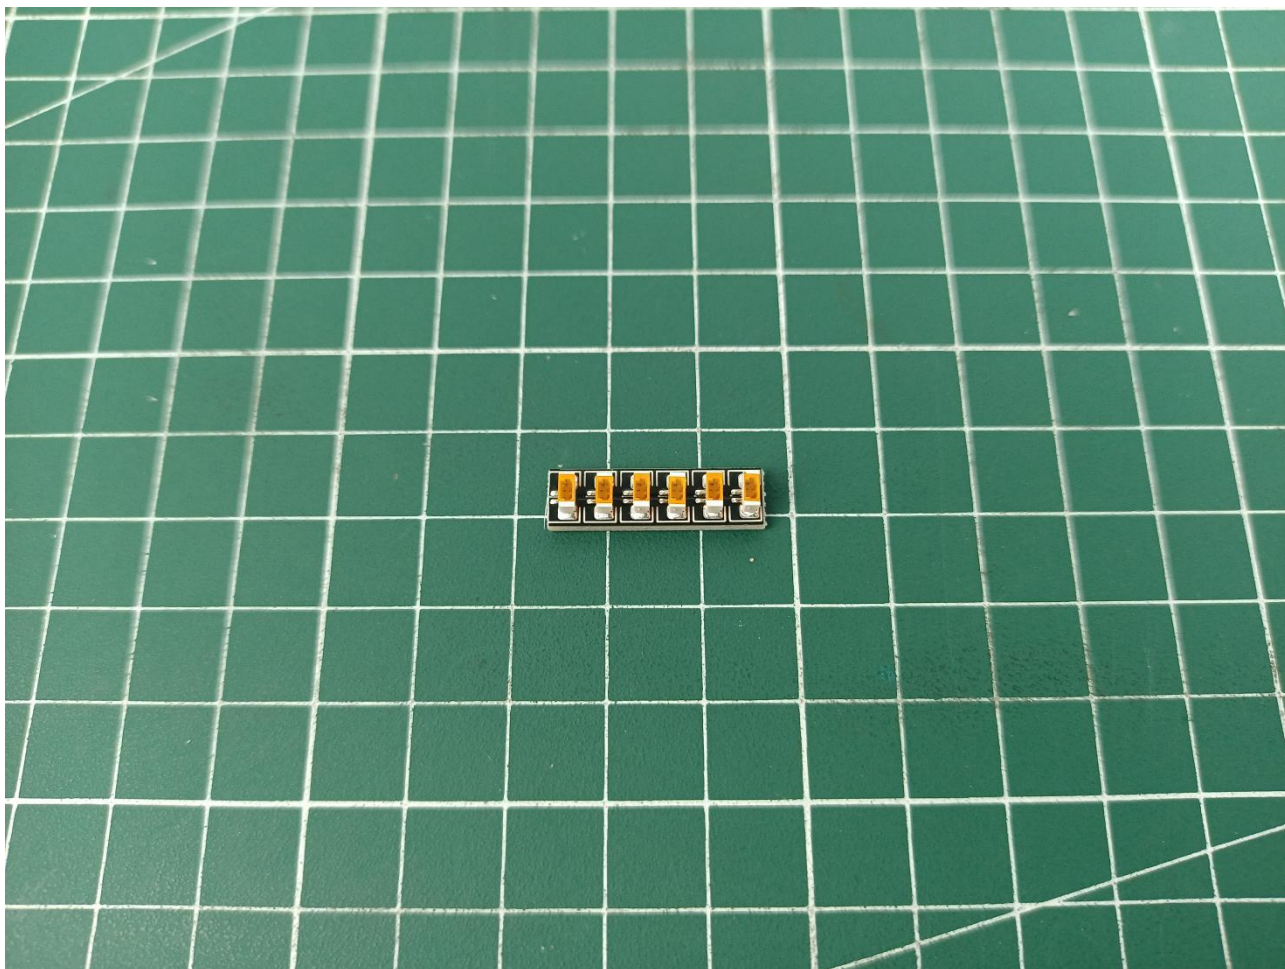


Please pay attention to the use of the interface. The interface is small. Please use it carefully: the = number of the 2P interface is aligned with the = number of the expansion board. The equal sign on the expansion board refers to the two solder joints on the outside, not the two inside the jack Metal pin.

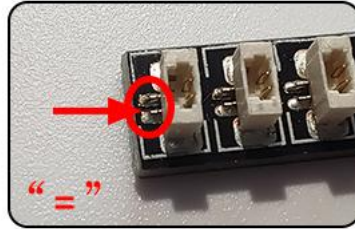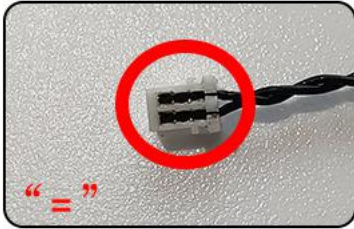

Connect the AA Battery Pack to the 6-Port Expansion Boards.


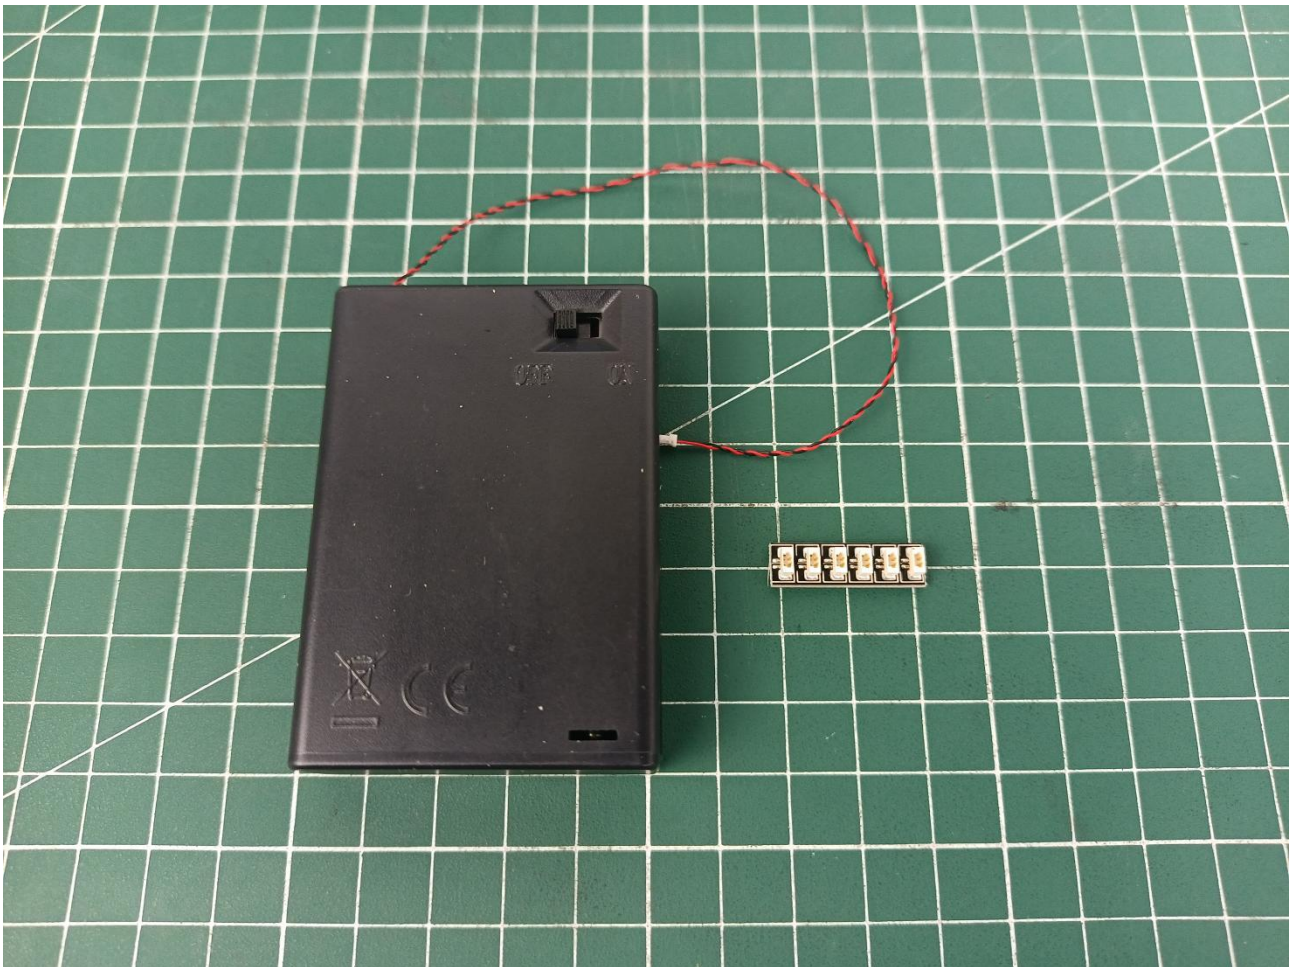


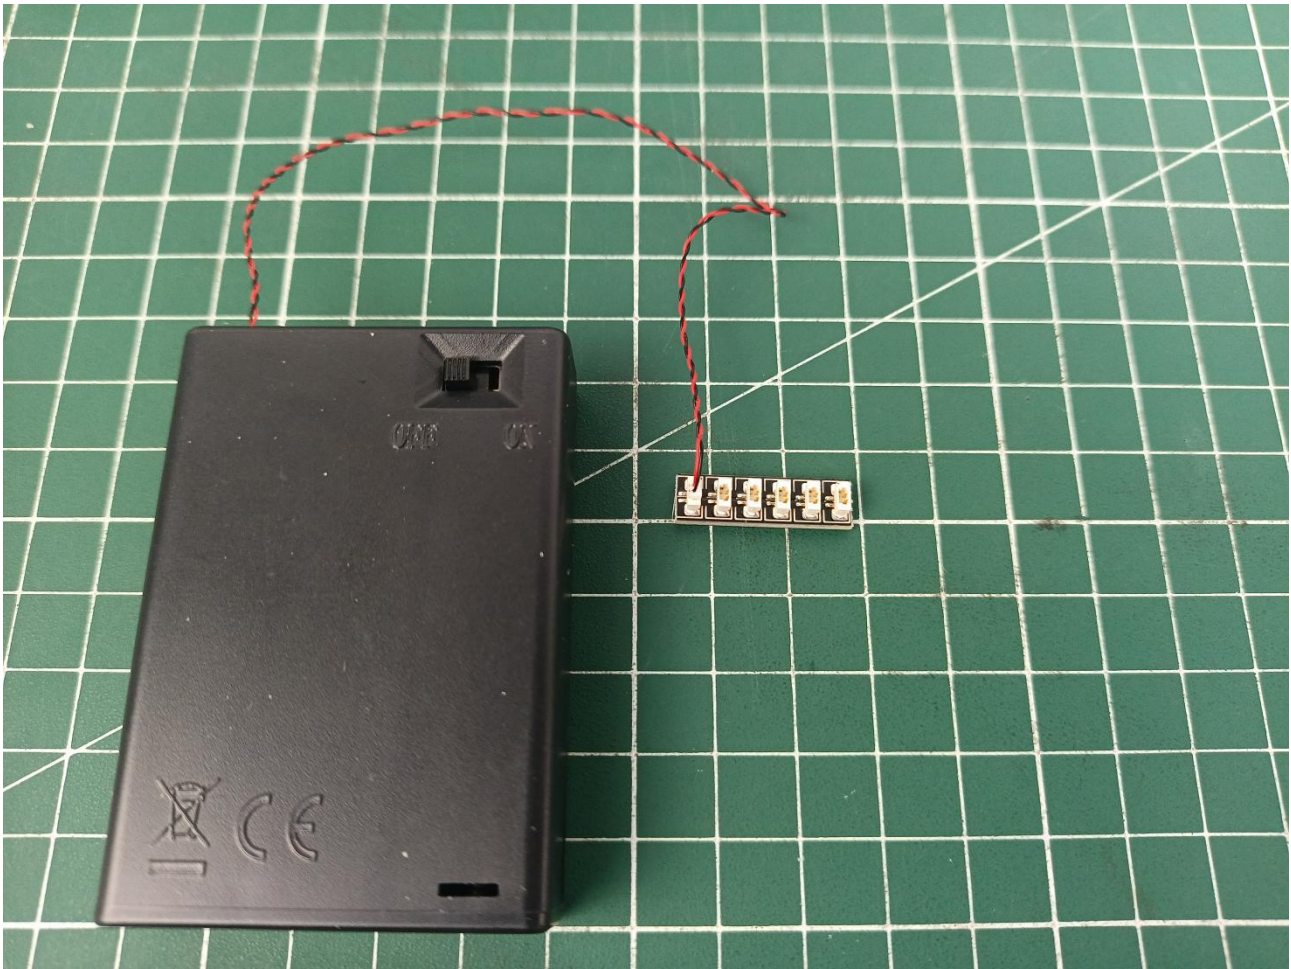


Take out the accessories in bag 1.




Connect accessories to 6-Port Expansion Boards.

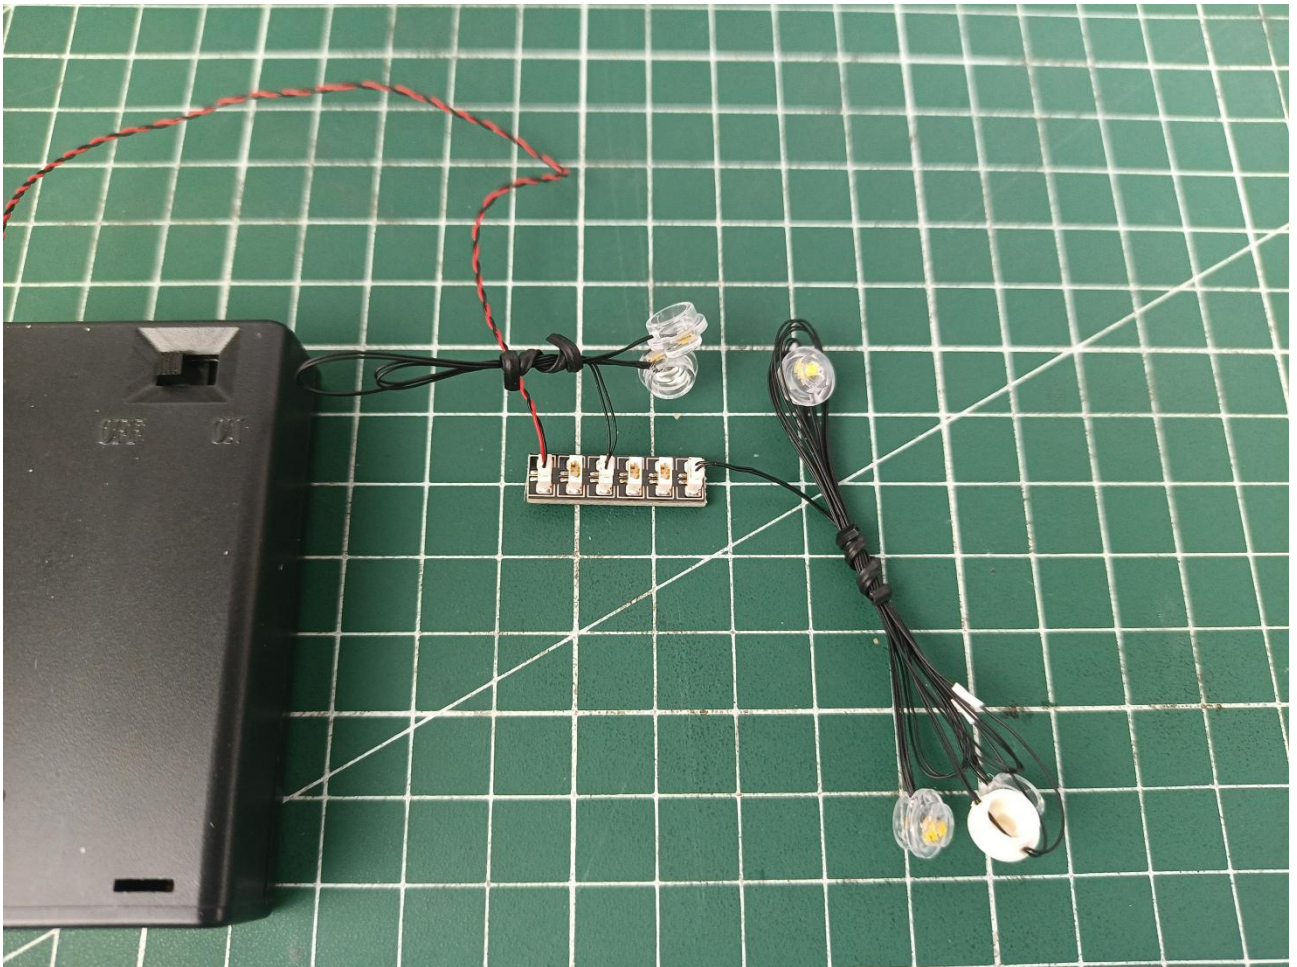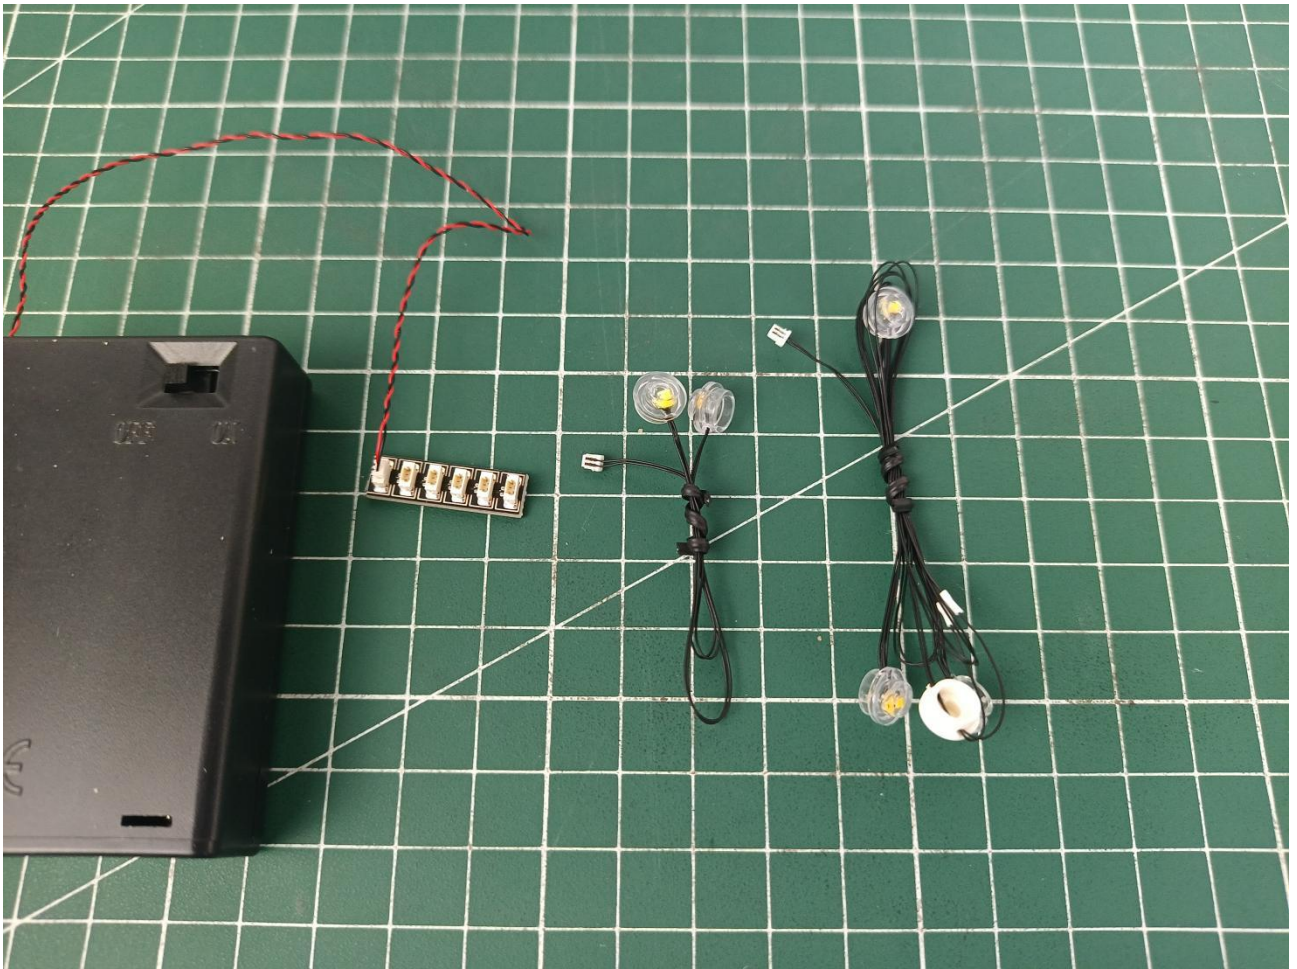

Turn on the power switch.

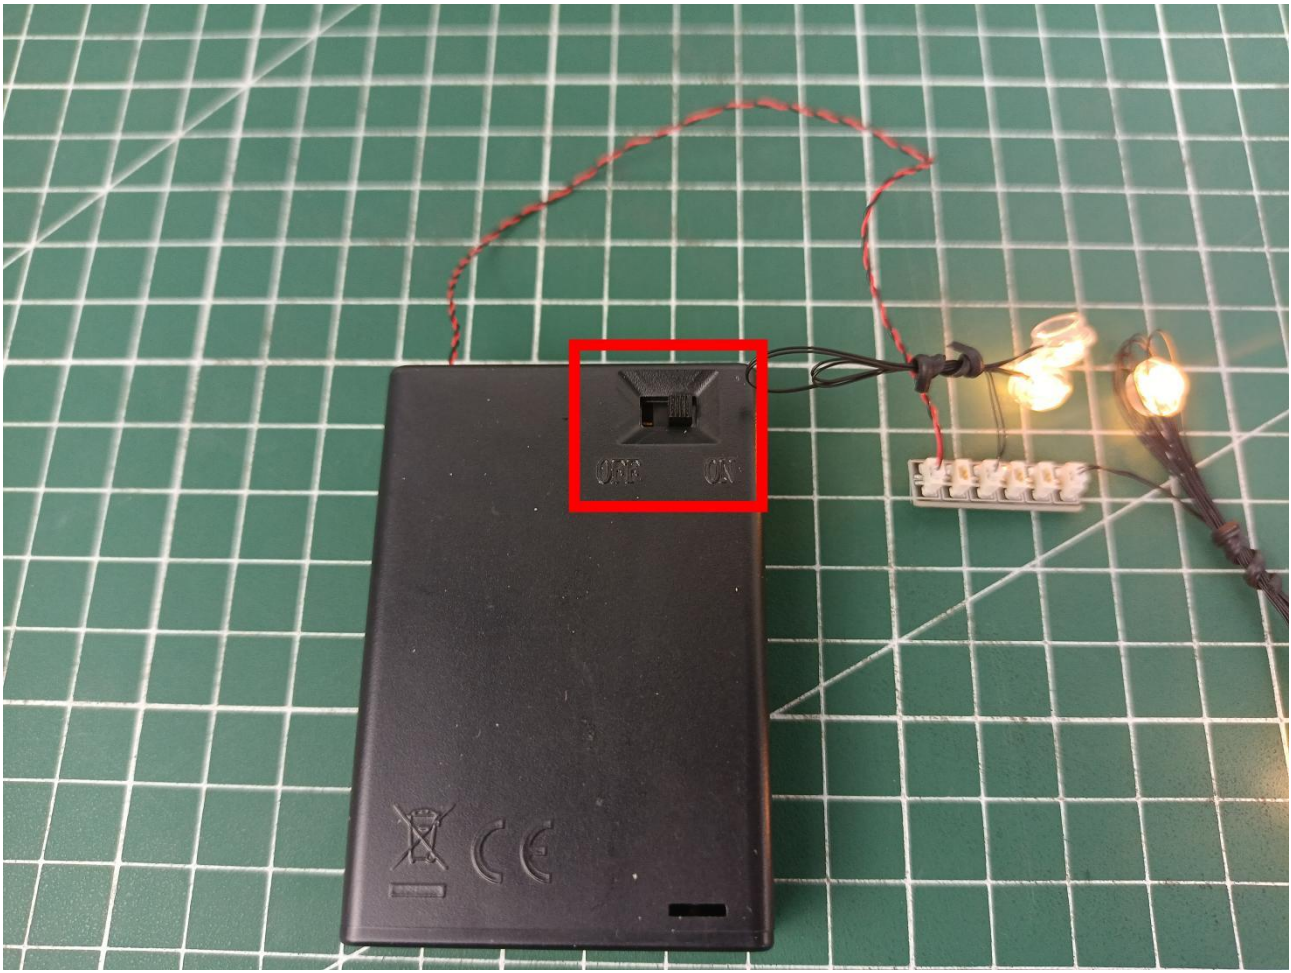

Check if the accessories are operating normally.
If there is an abnormality, please contact us in time!!!

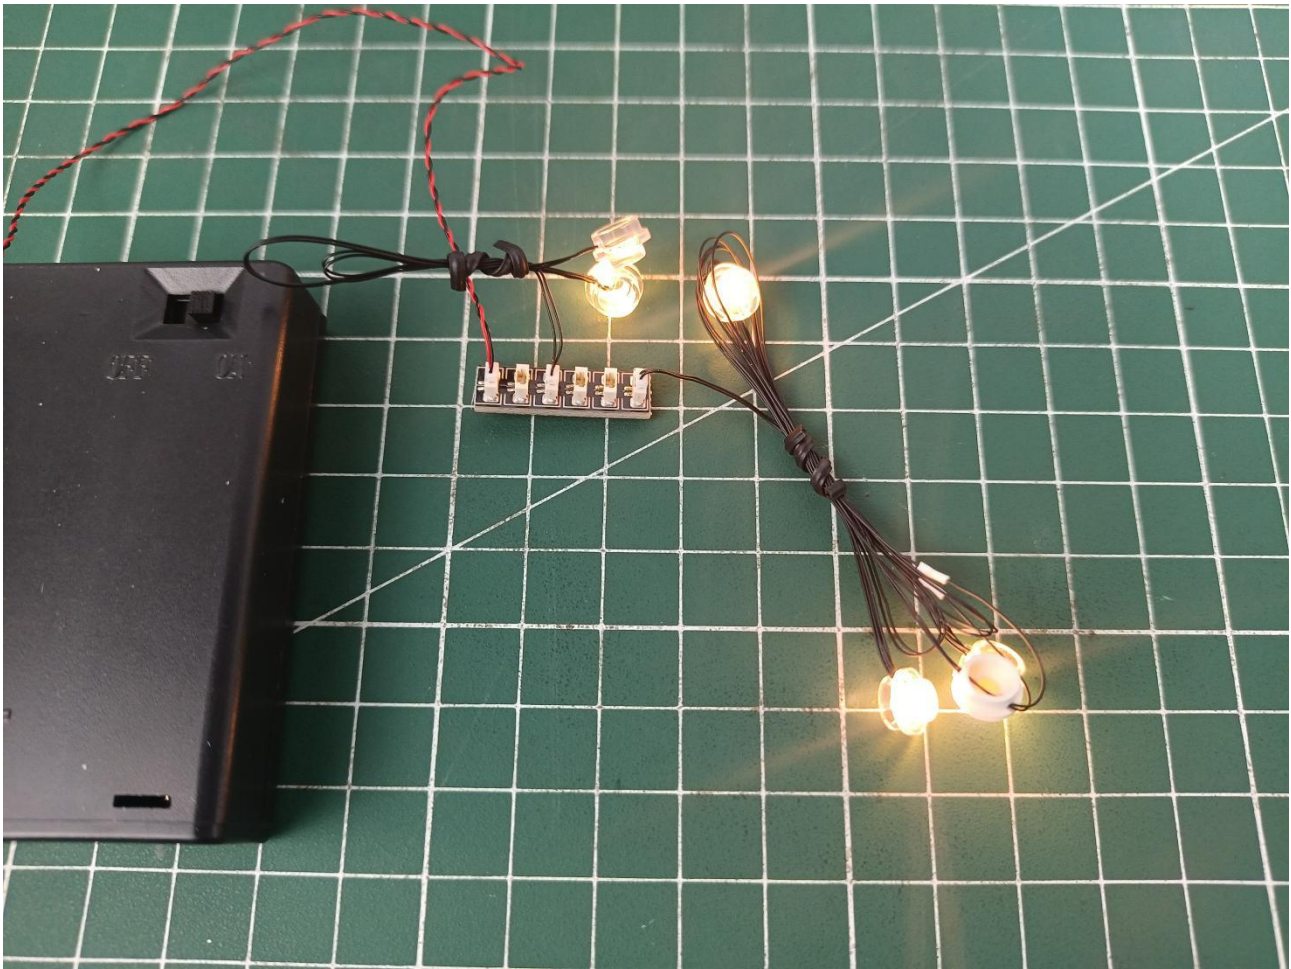



Turn off the power switch and separate the AA Battery Pack from the 6-Port Expansion Boards.



Put the AA Battery Pack back into the No. 5 bag.




Take out the USB power cord and connect it to the 6-Port Expansion Boards.

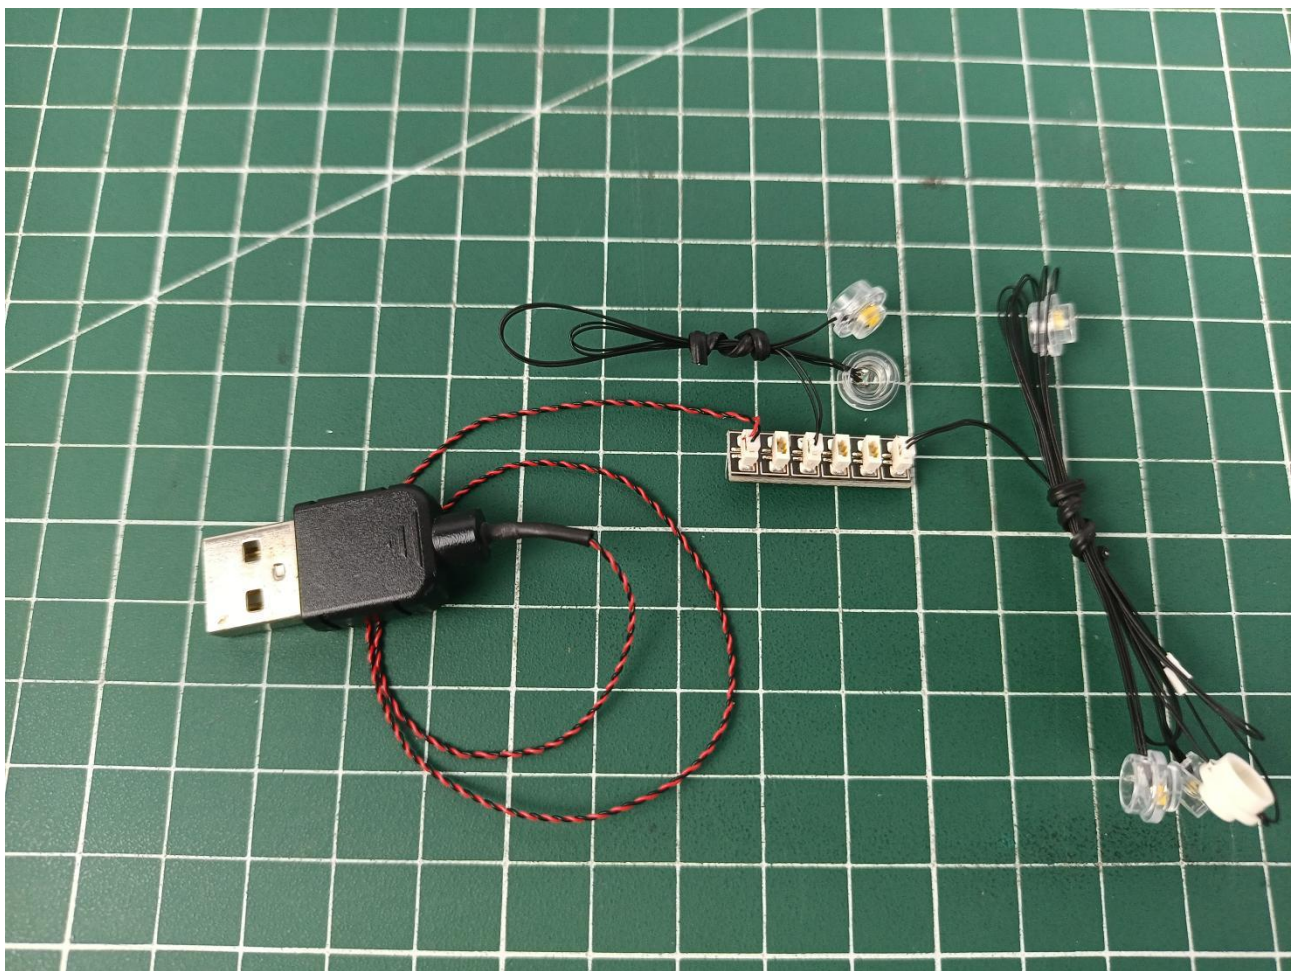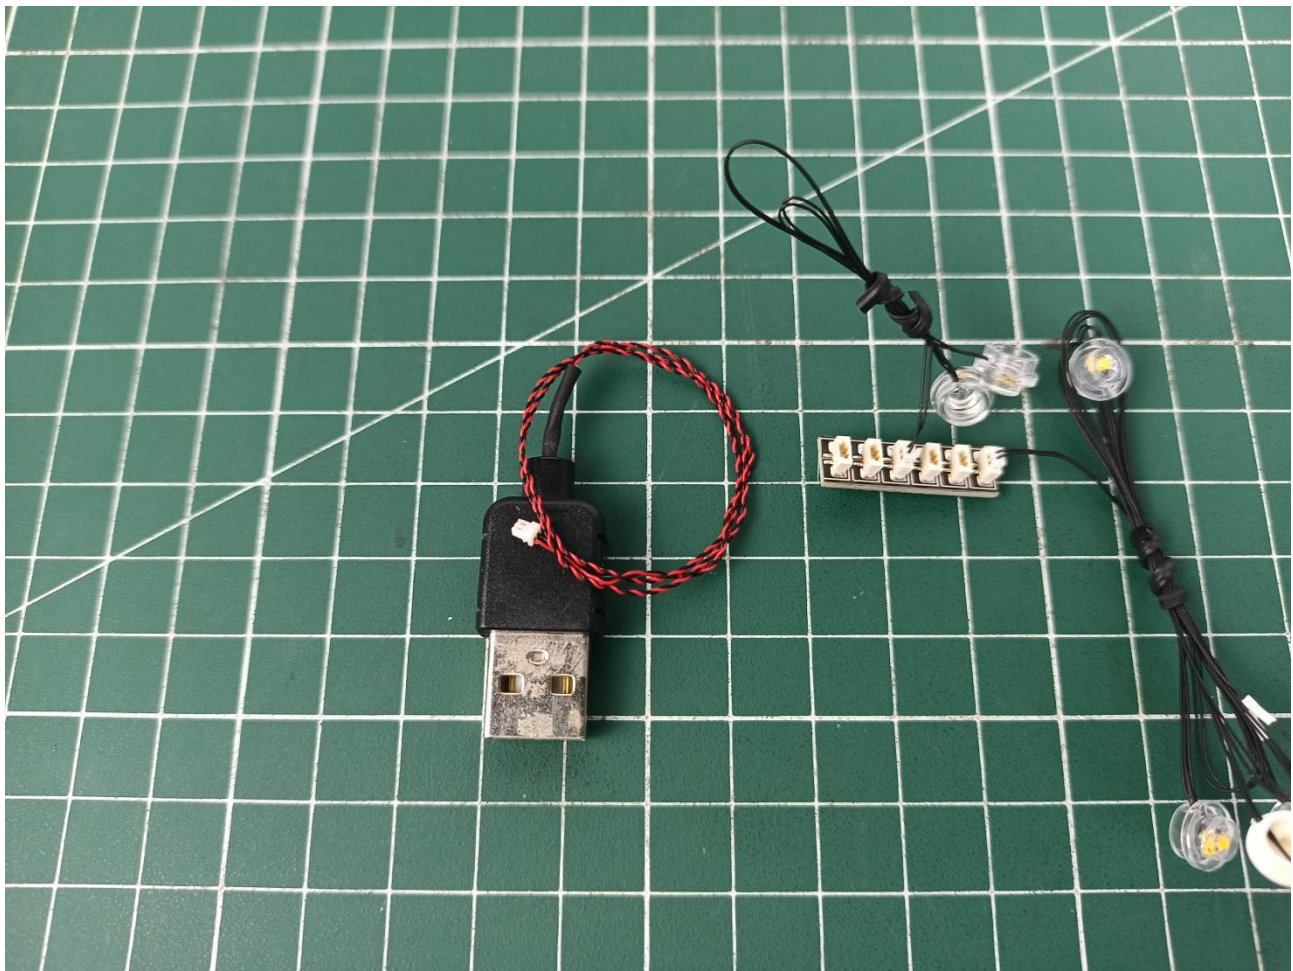


The power supplies that can be used with the USB power cord are as follows.


USB connectors to connect devices

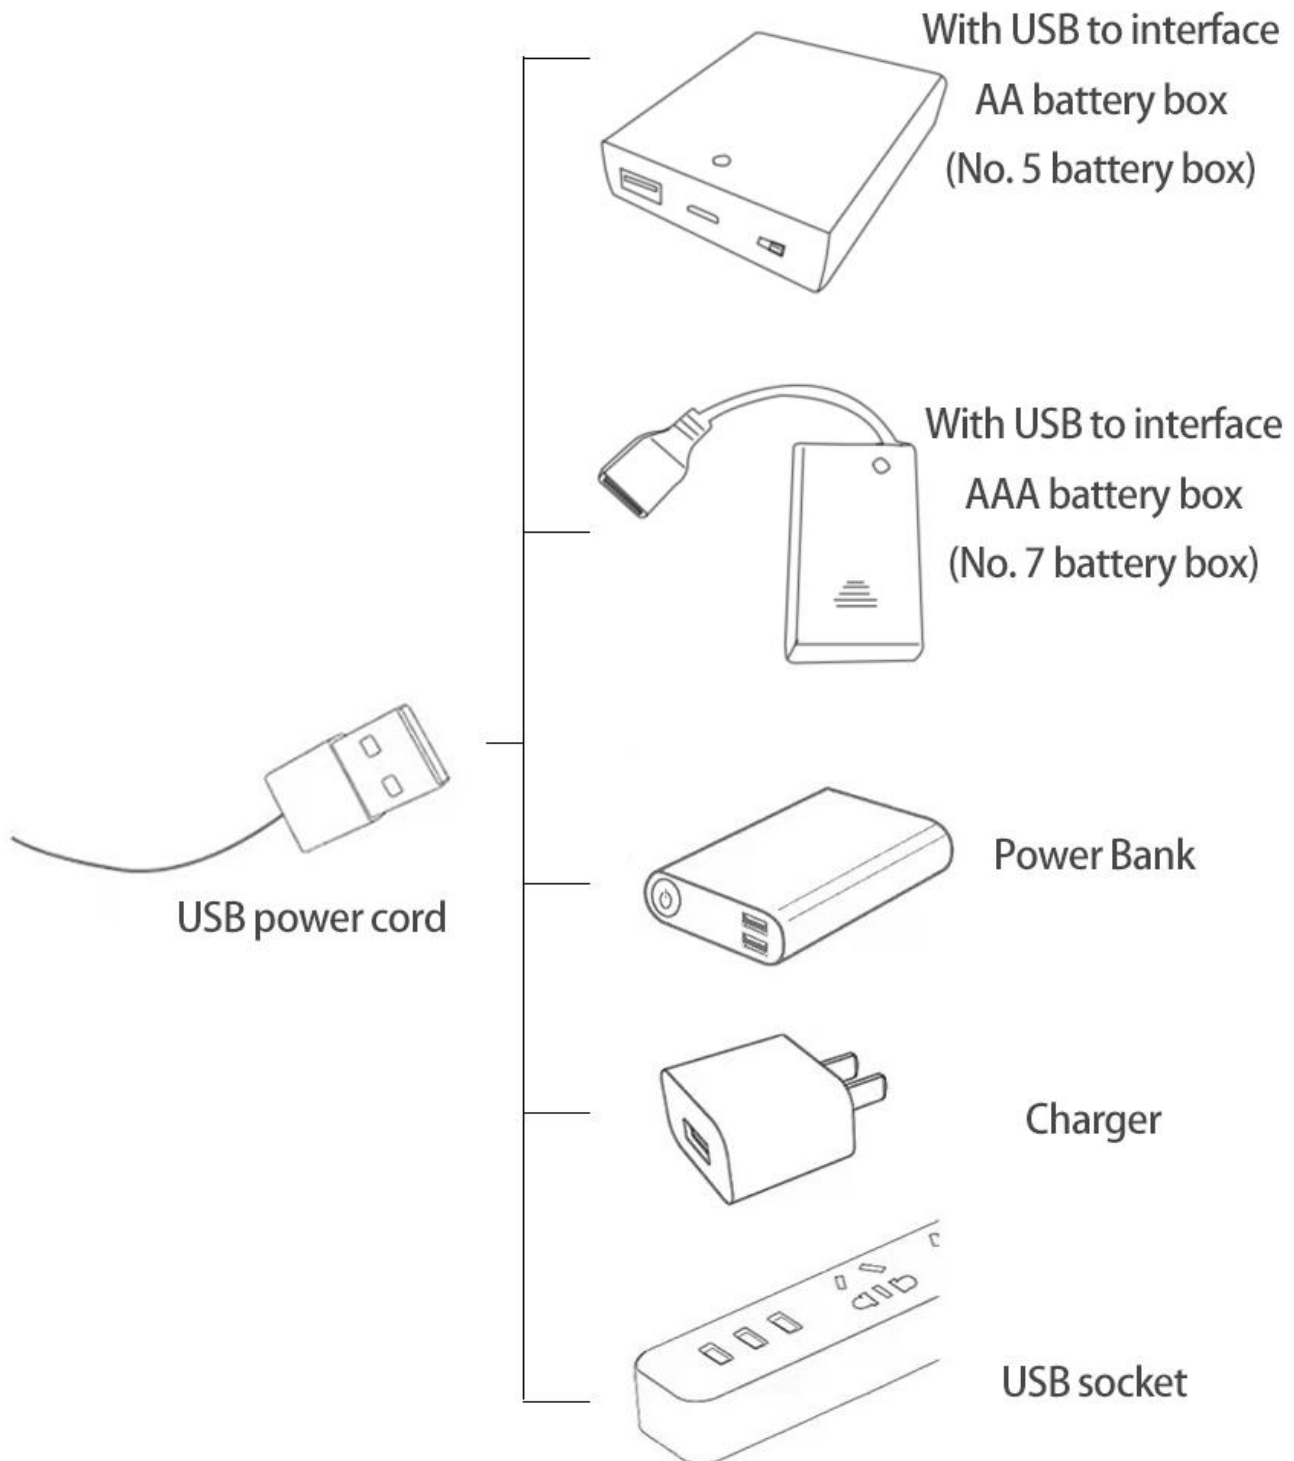


Here is a demonstration using a power bank.

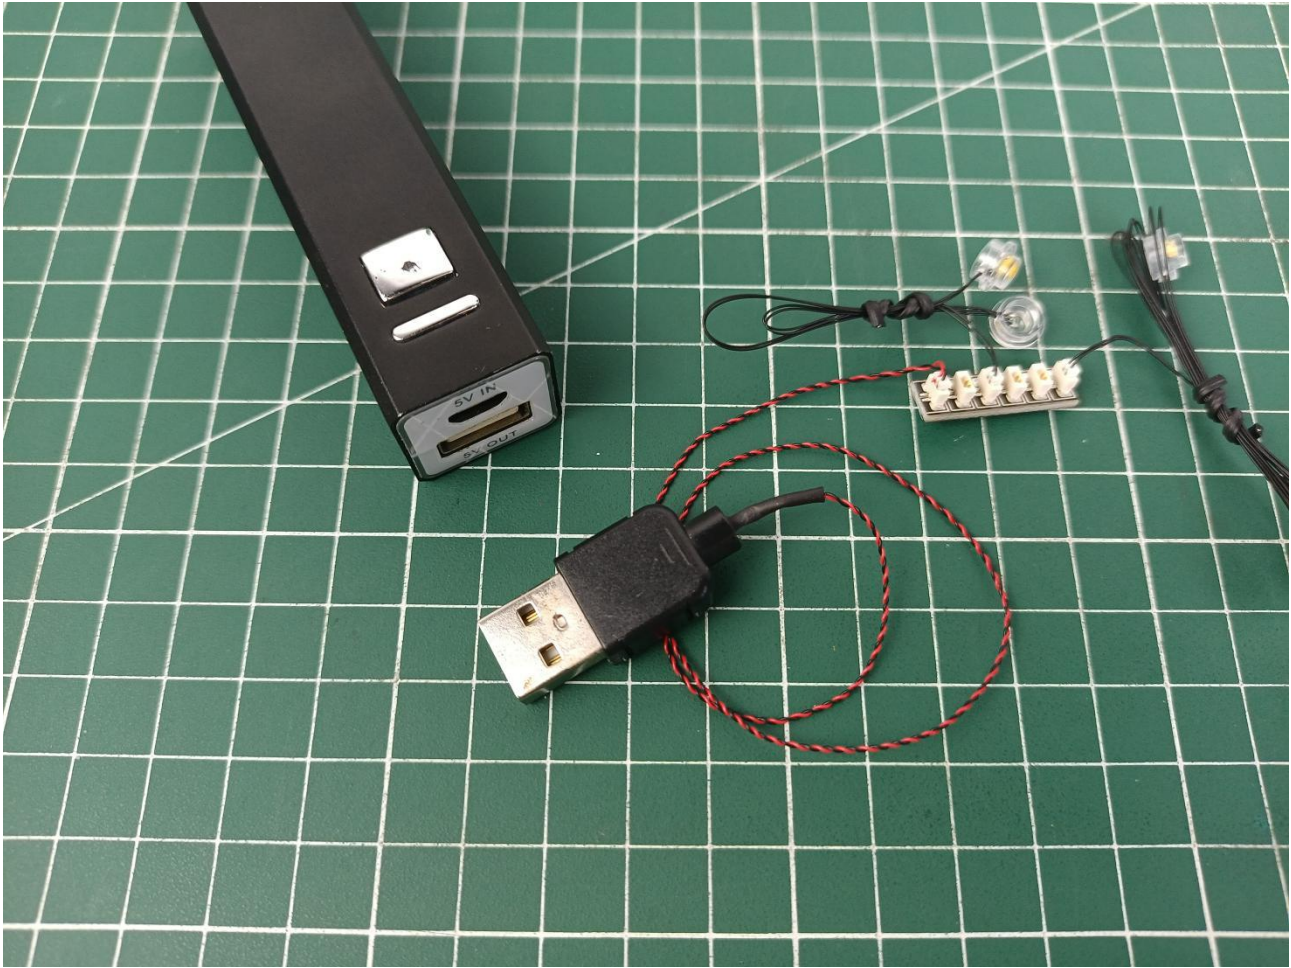

Check if the accessories are operating normally.
If there is an abnormality, please contact us in time!!!

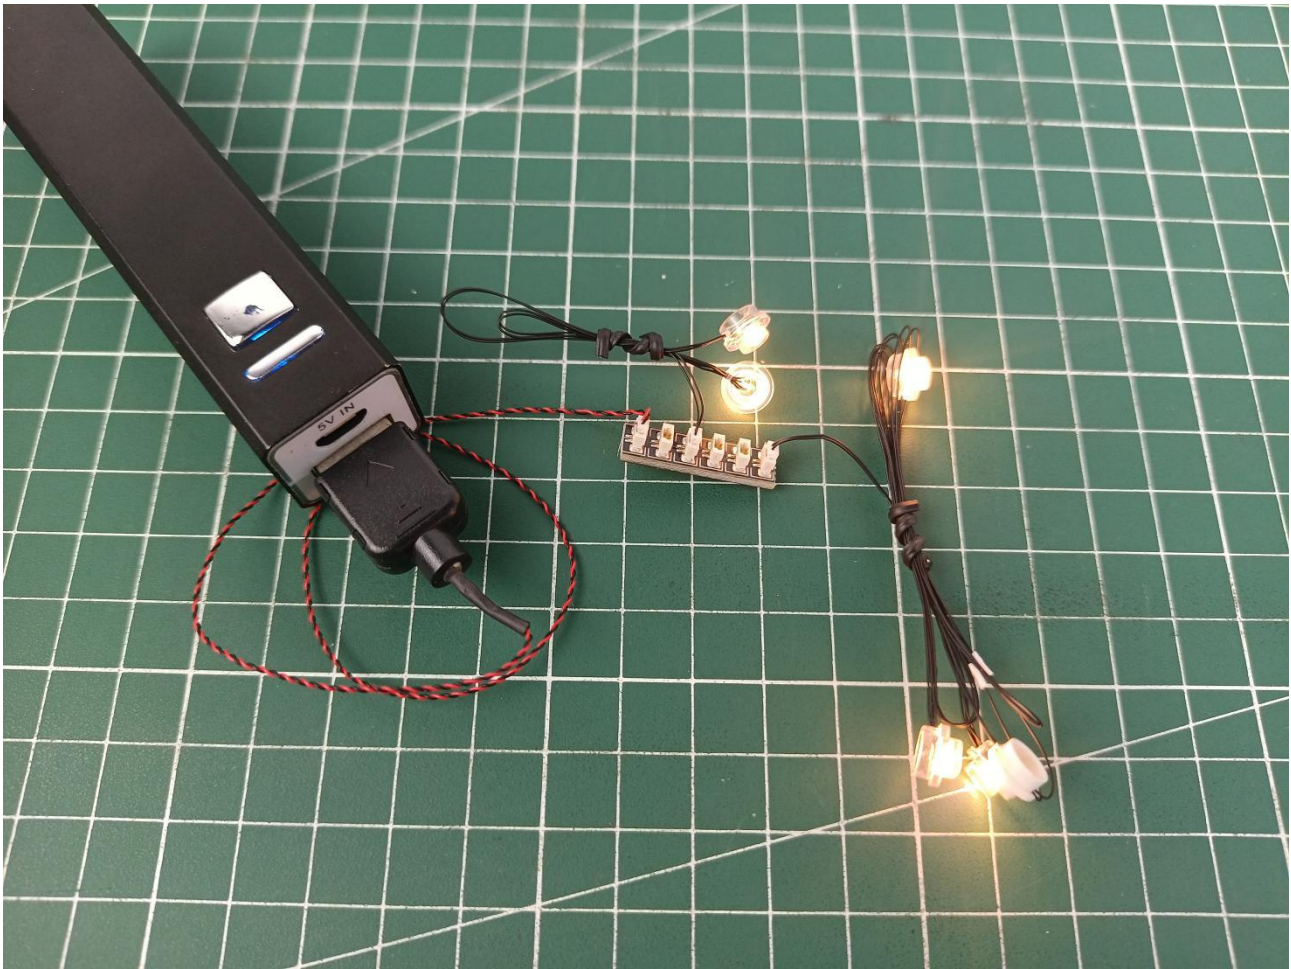

Separate accessories from 6-Port Expansion Boards.

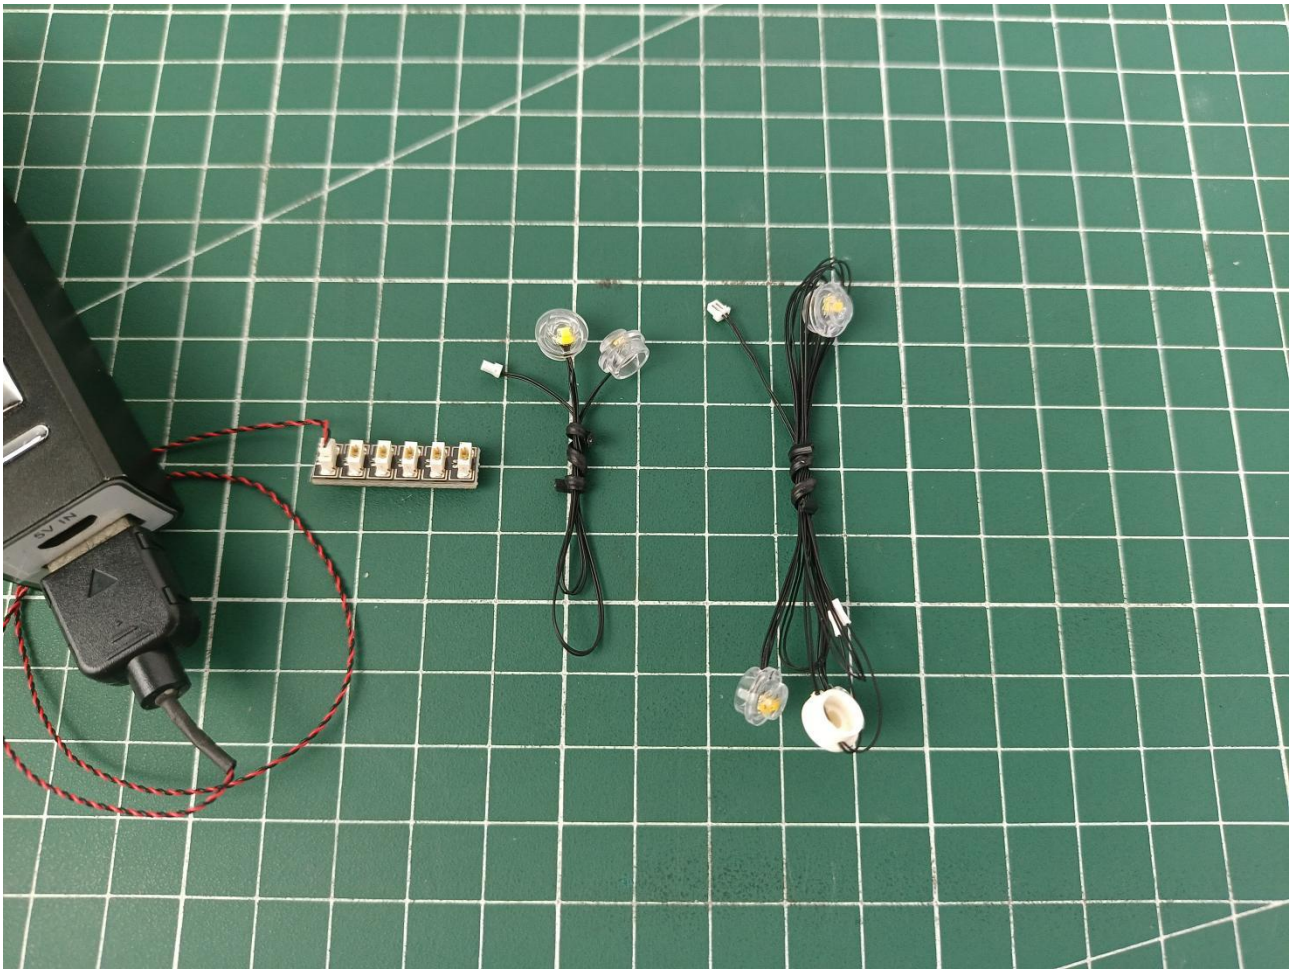


Put the accessories back in bag 1.



Refer to the demo above to test the accessories in the illustrated bag. (Test one by one, beware of confusion or loss)



After all the tests are completed, separate all the accessories.

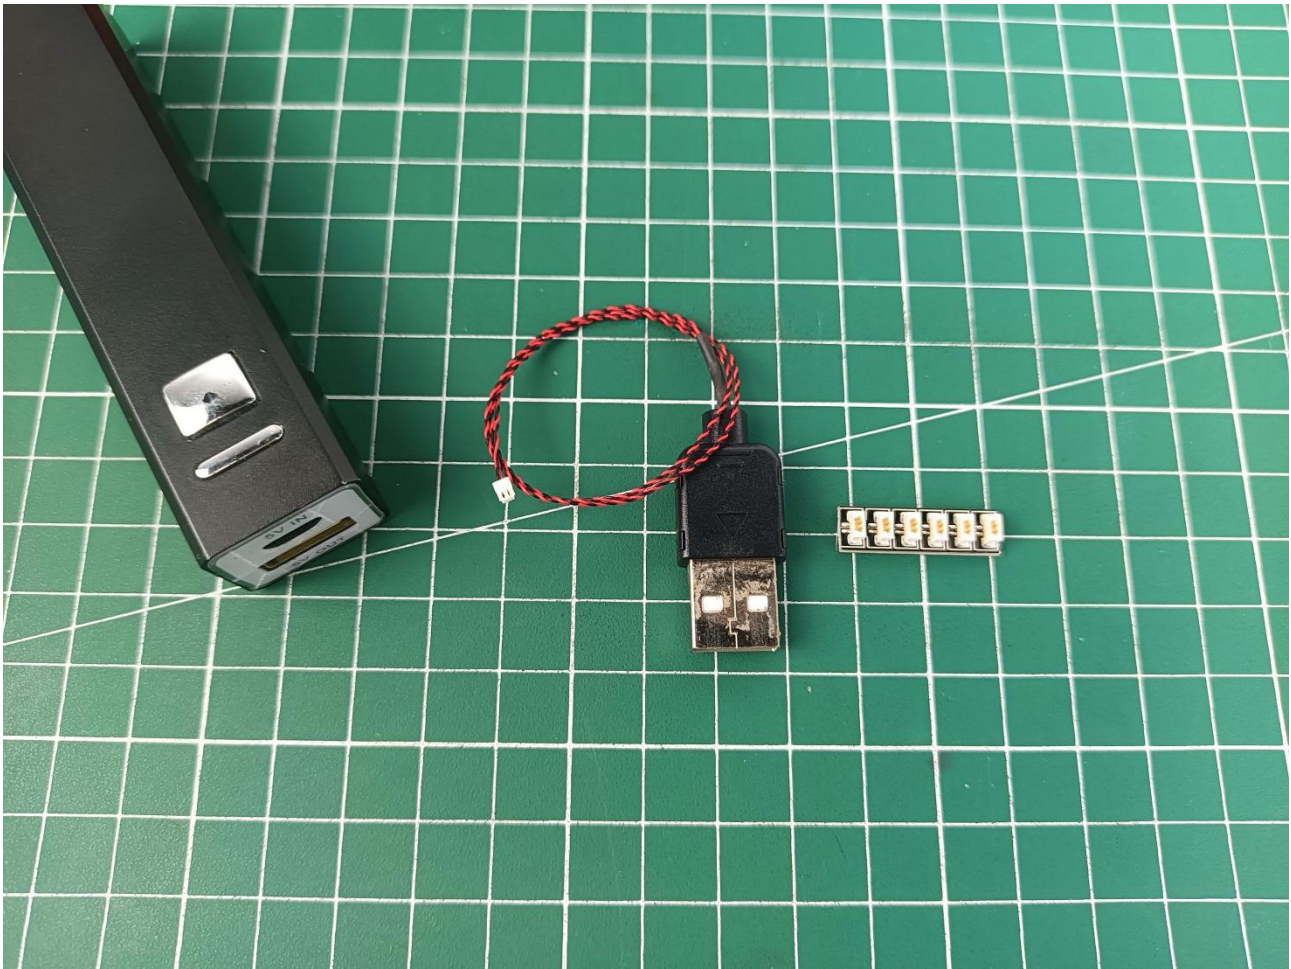


Put the accessories back in the No. 5 bag.



Note:



Please be careful when installing. The lamp wire is relatively slender and cannot be pressed on the raised position of the building block. It should pass along the gap, otherwise the lamp wire will be pinched.


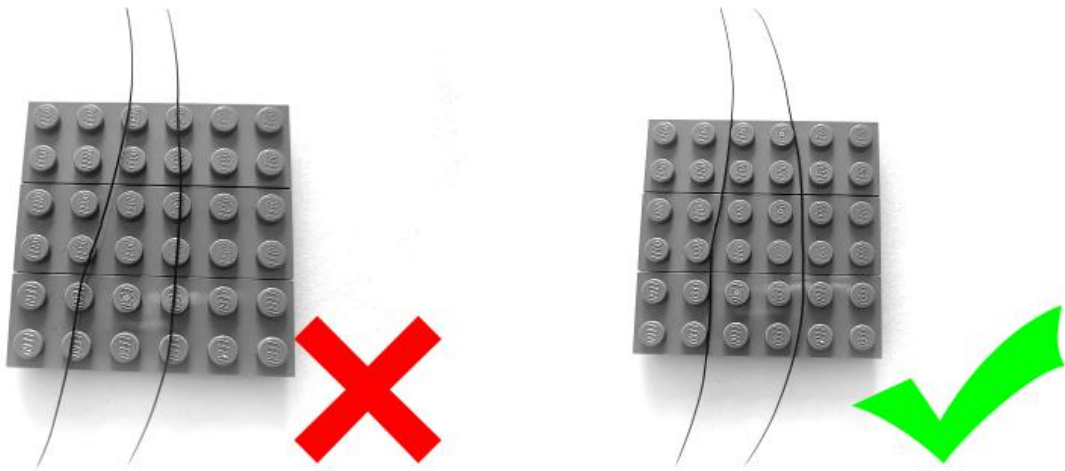




Step 2


Install:



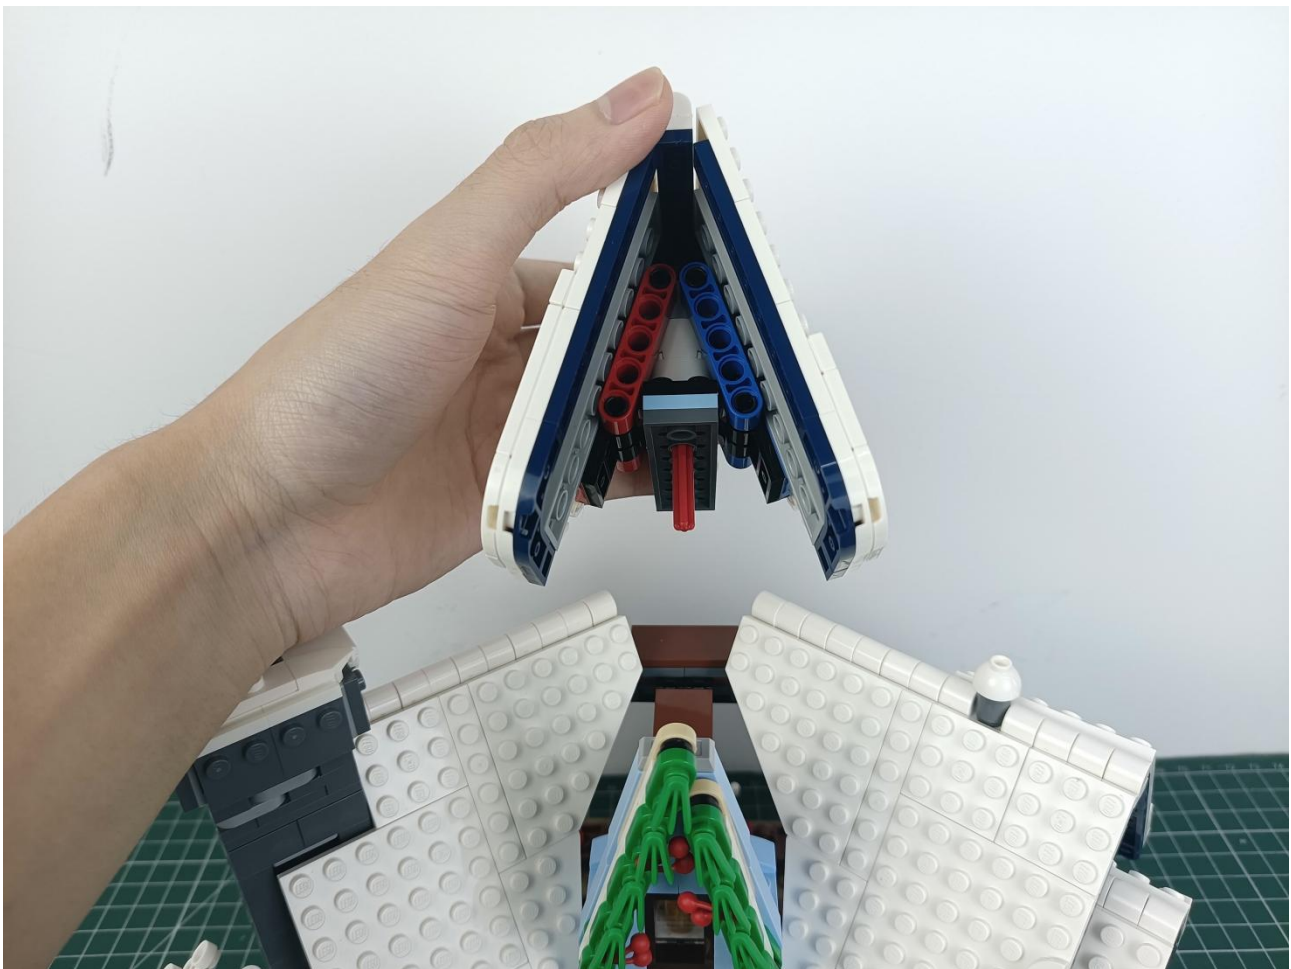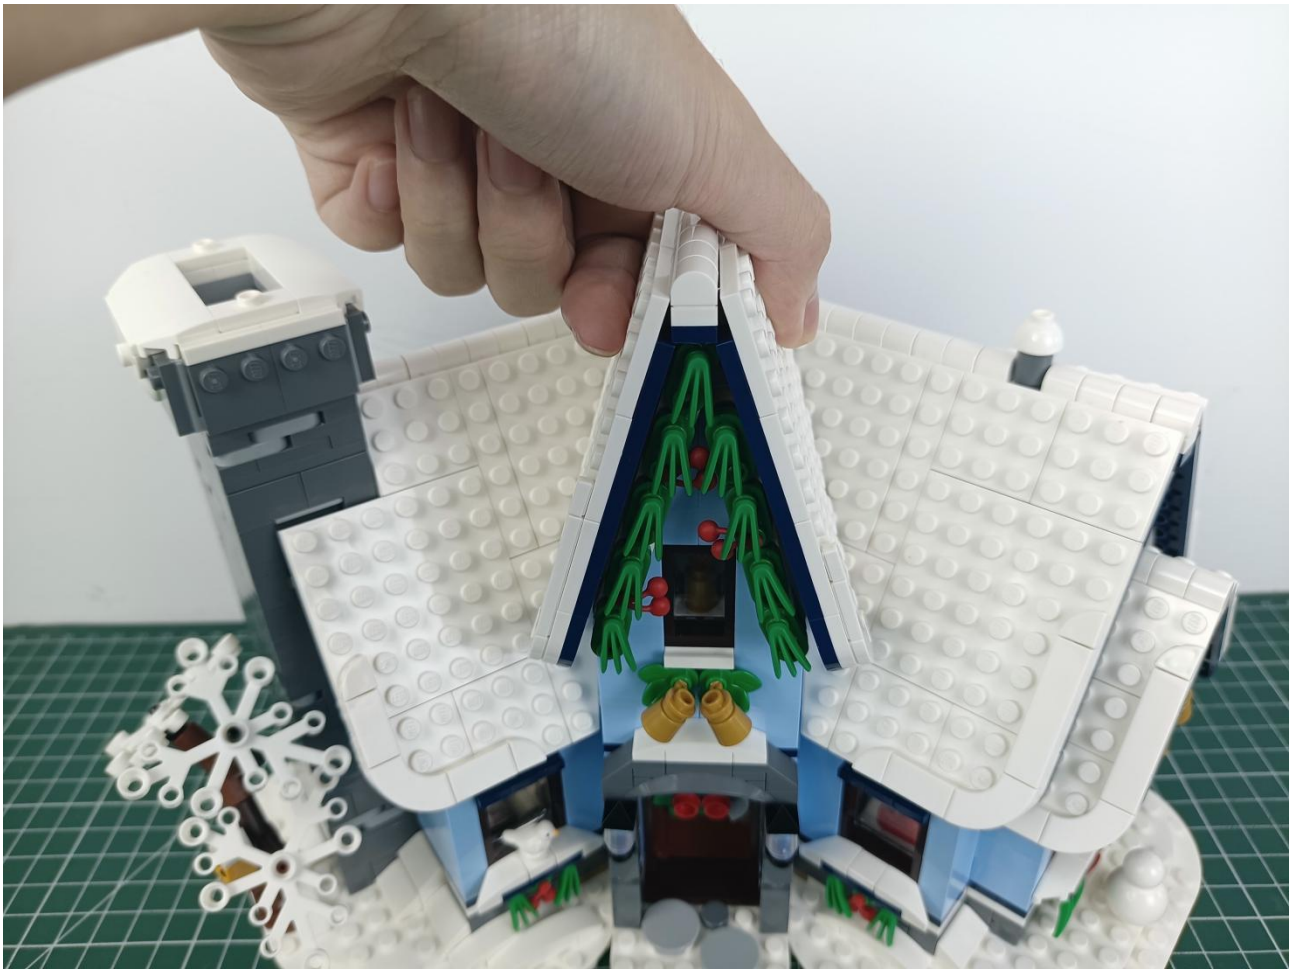


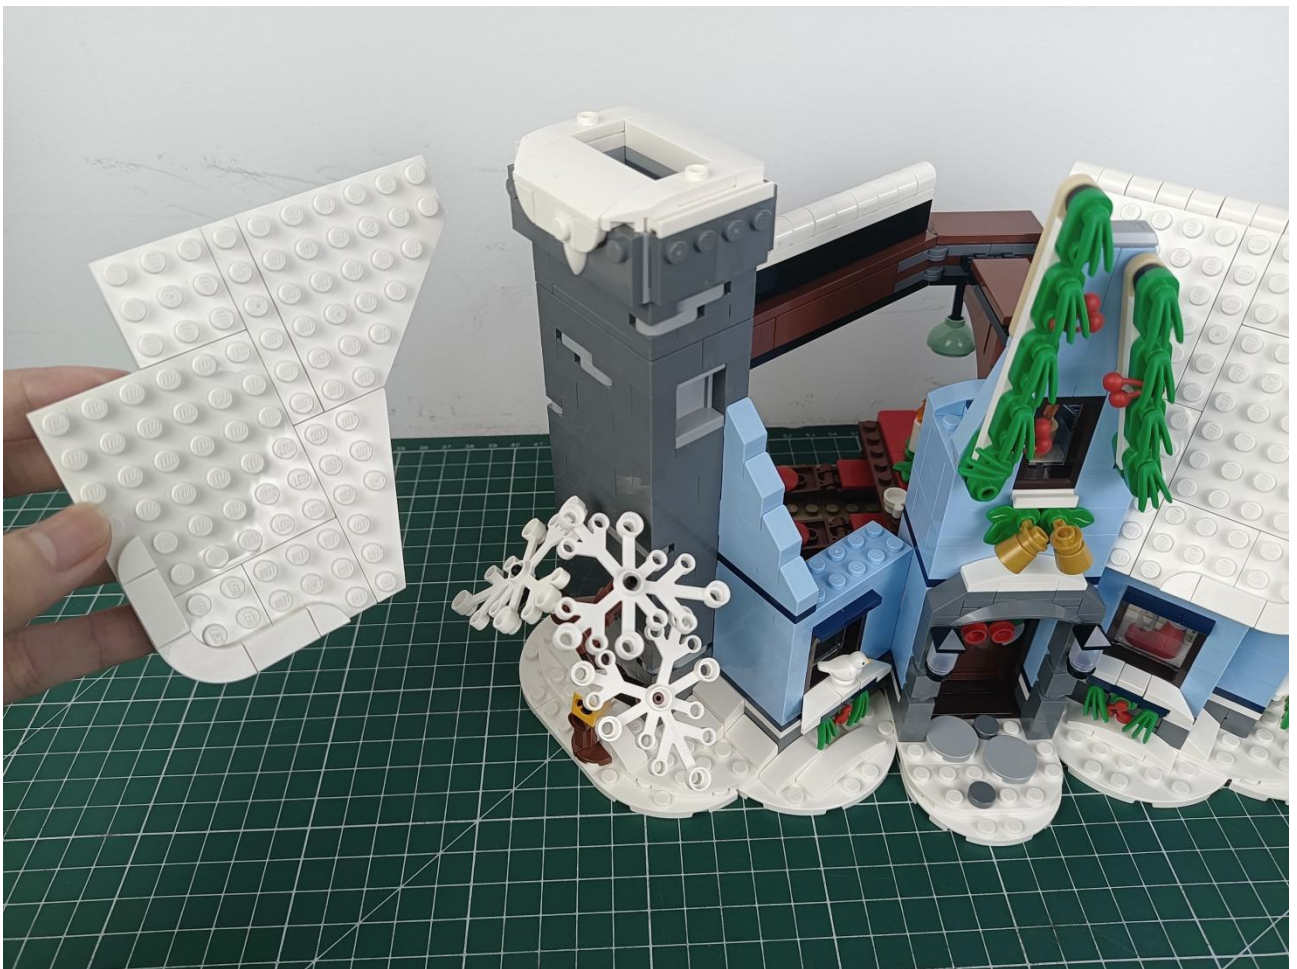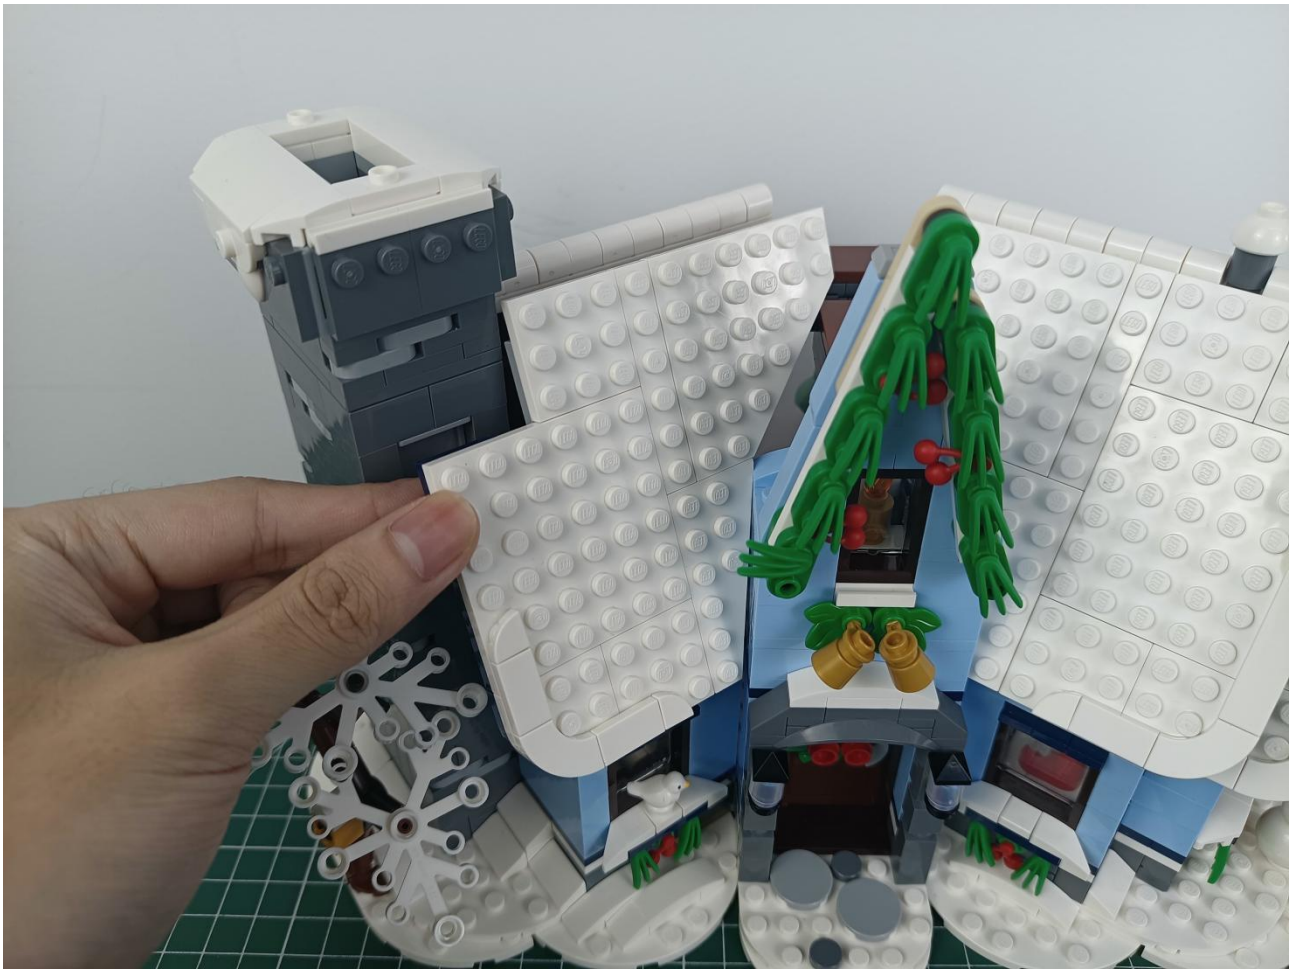

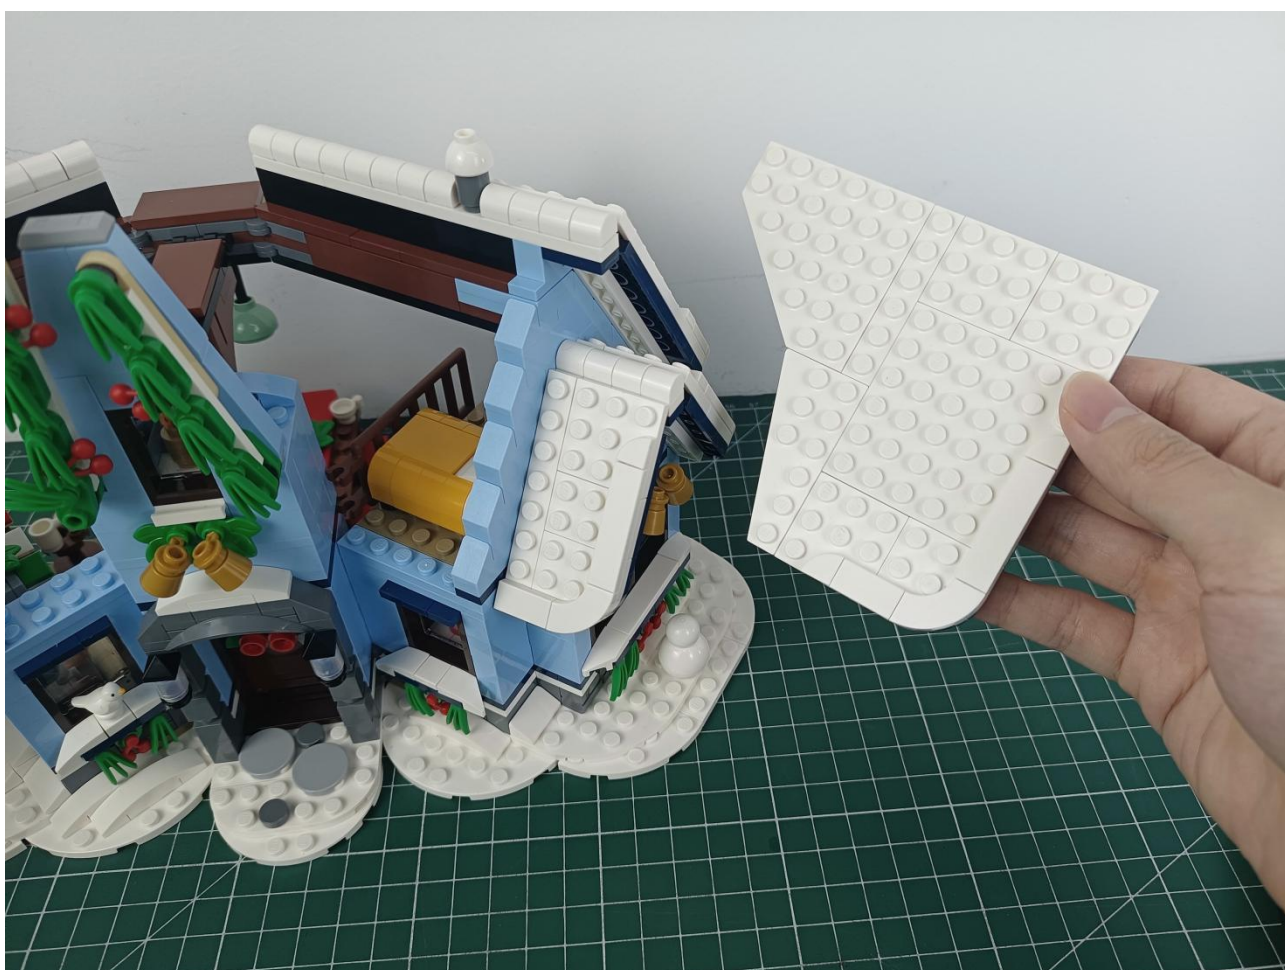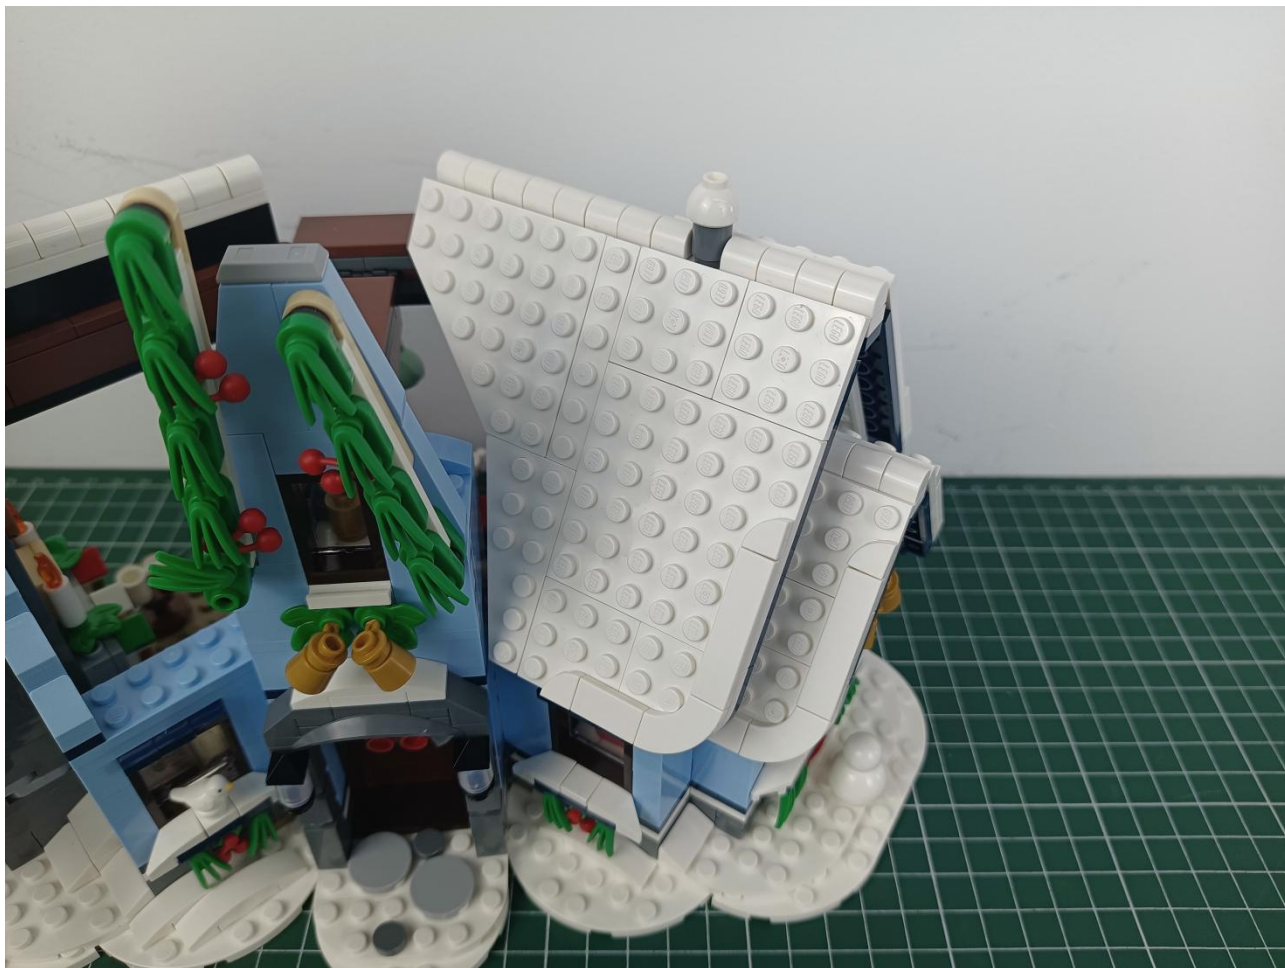


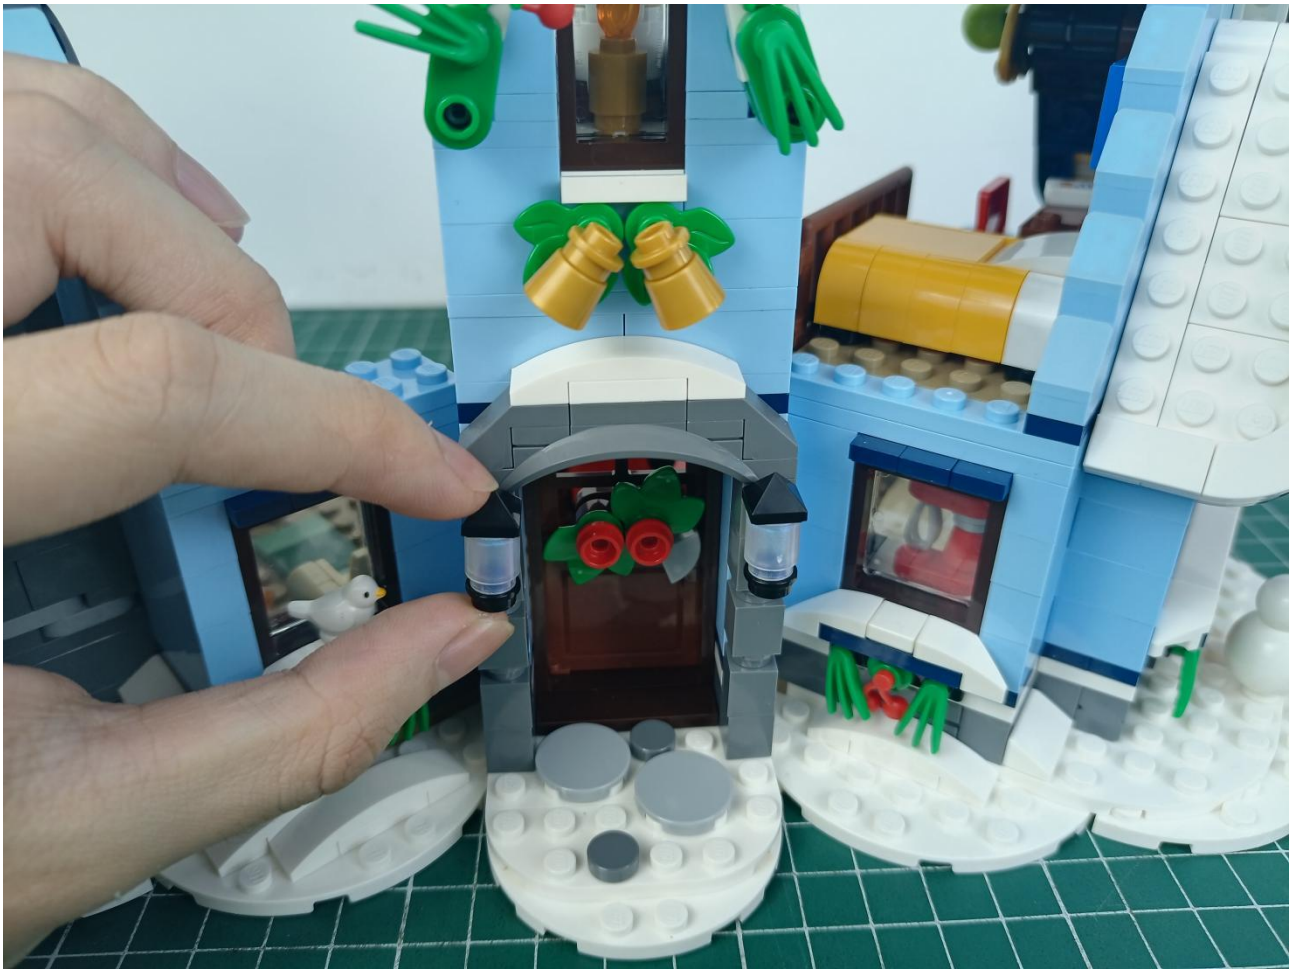



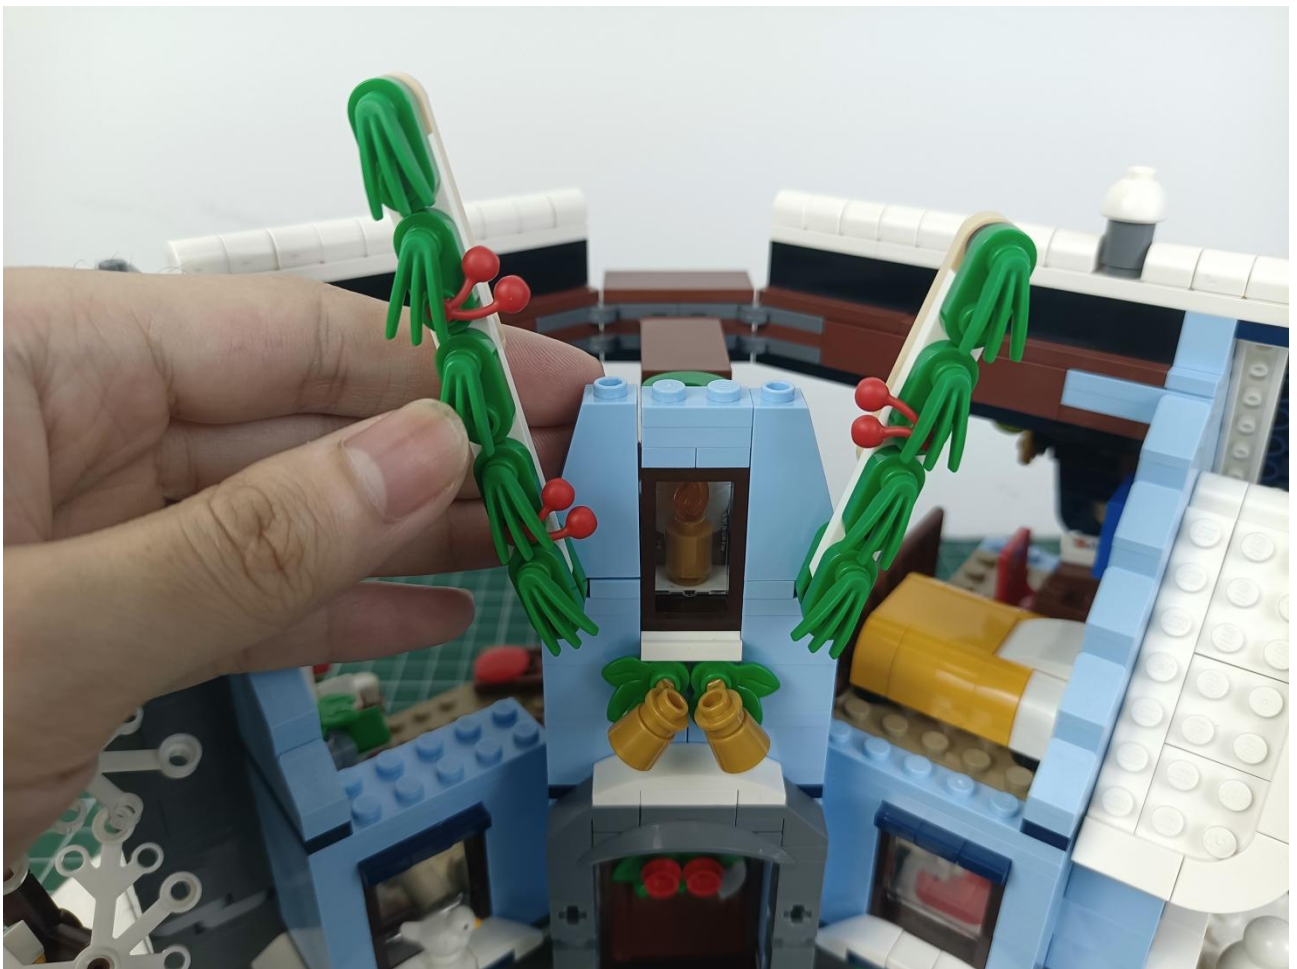




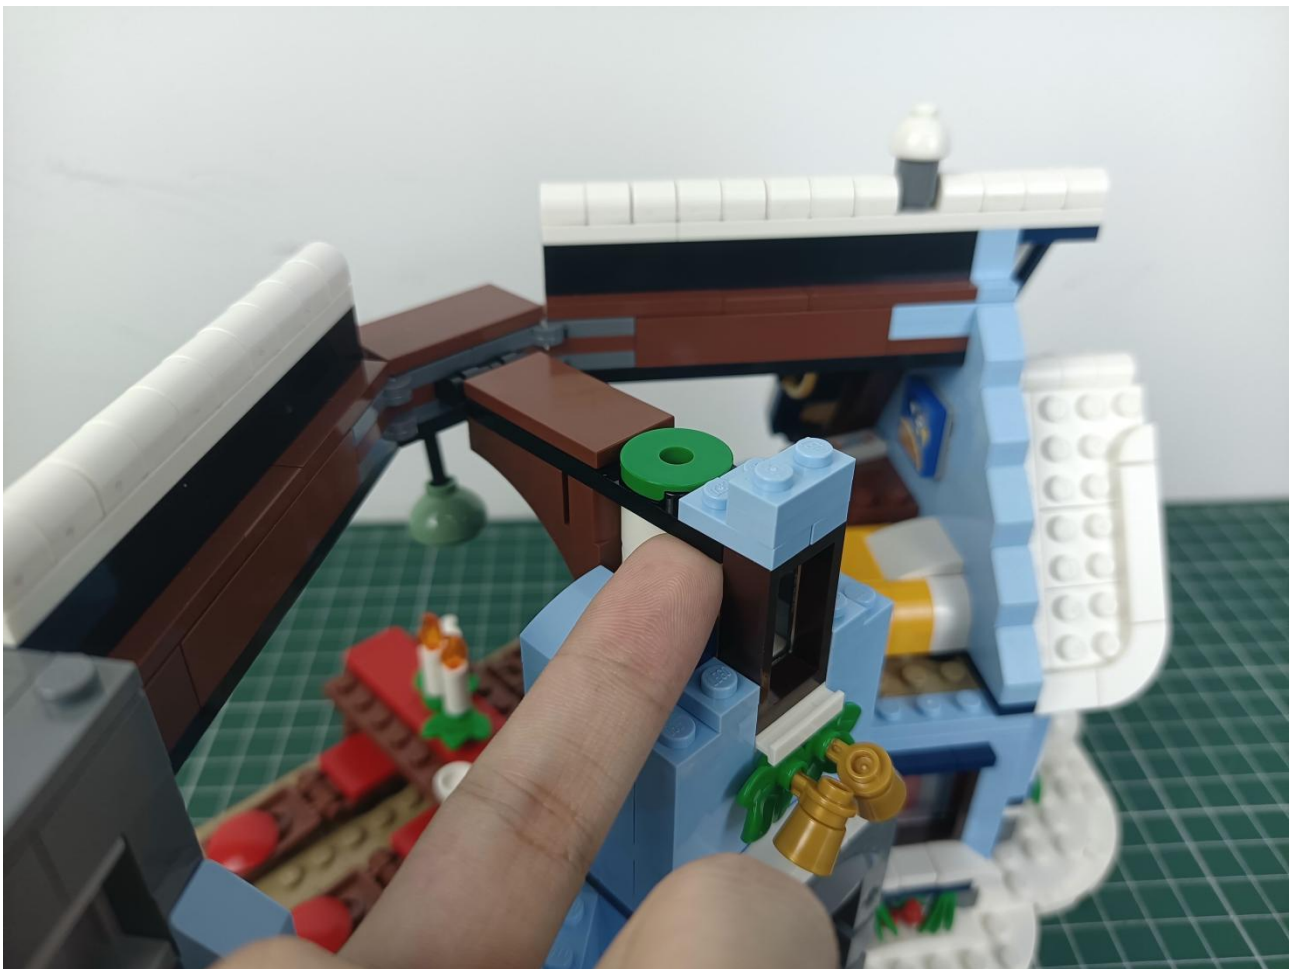







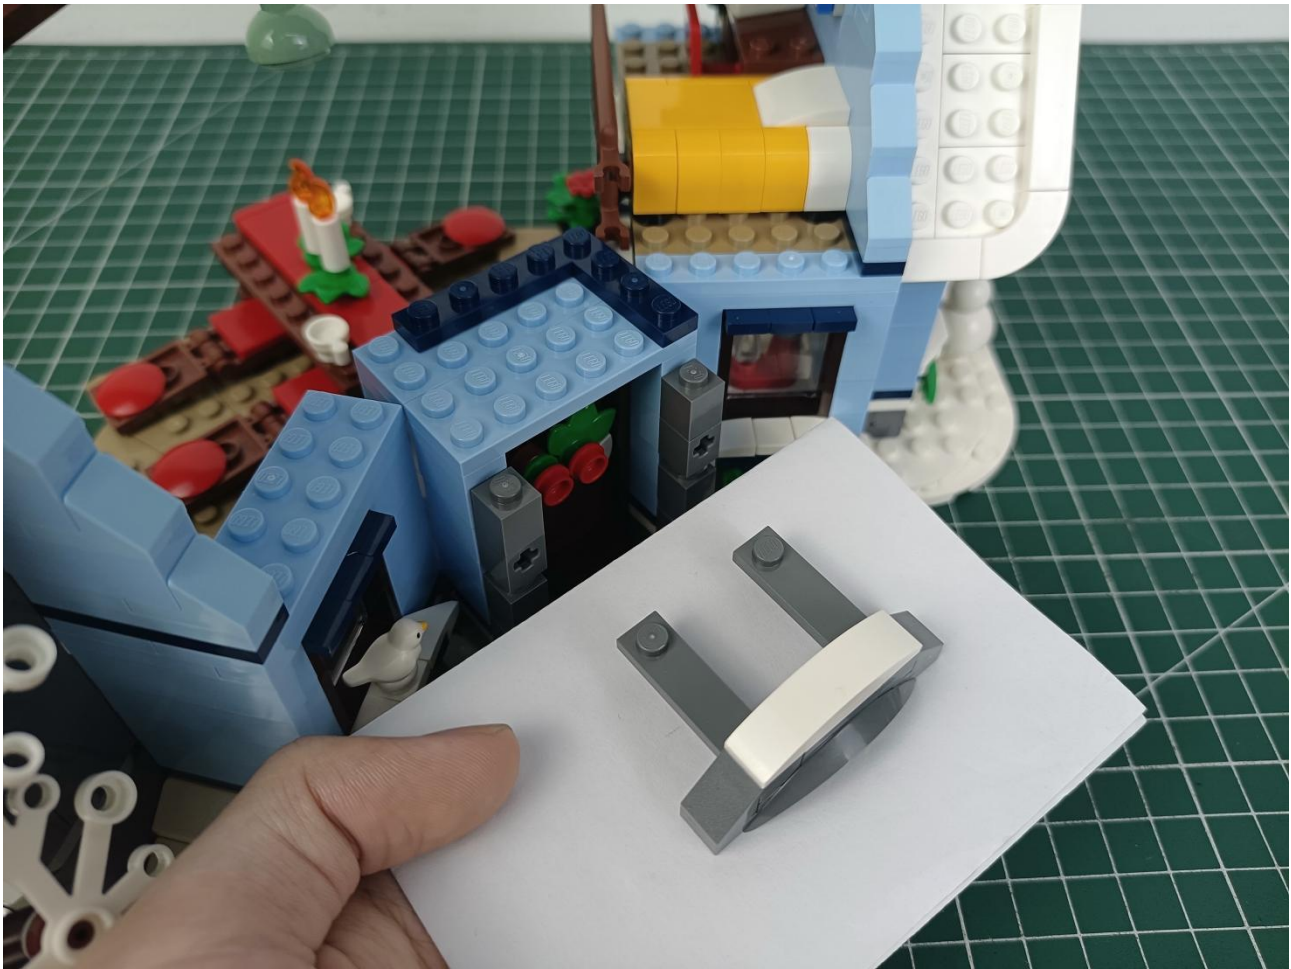






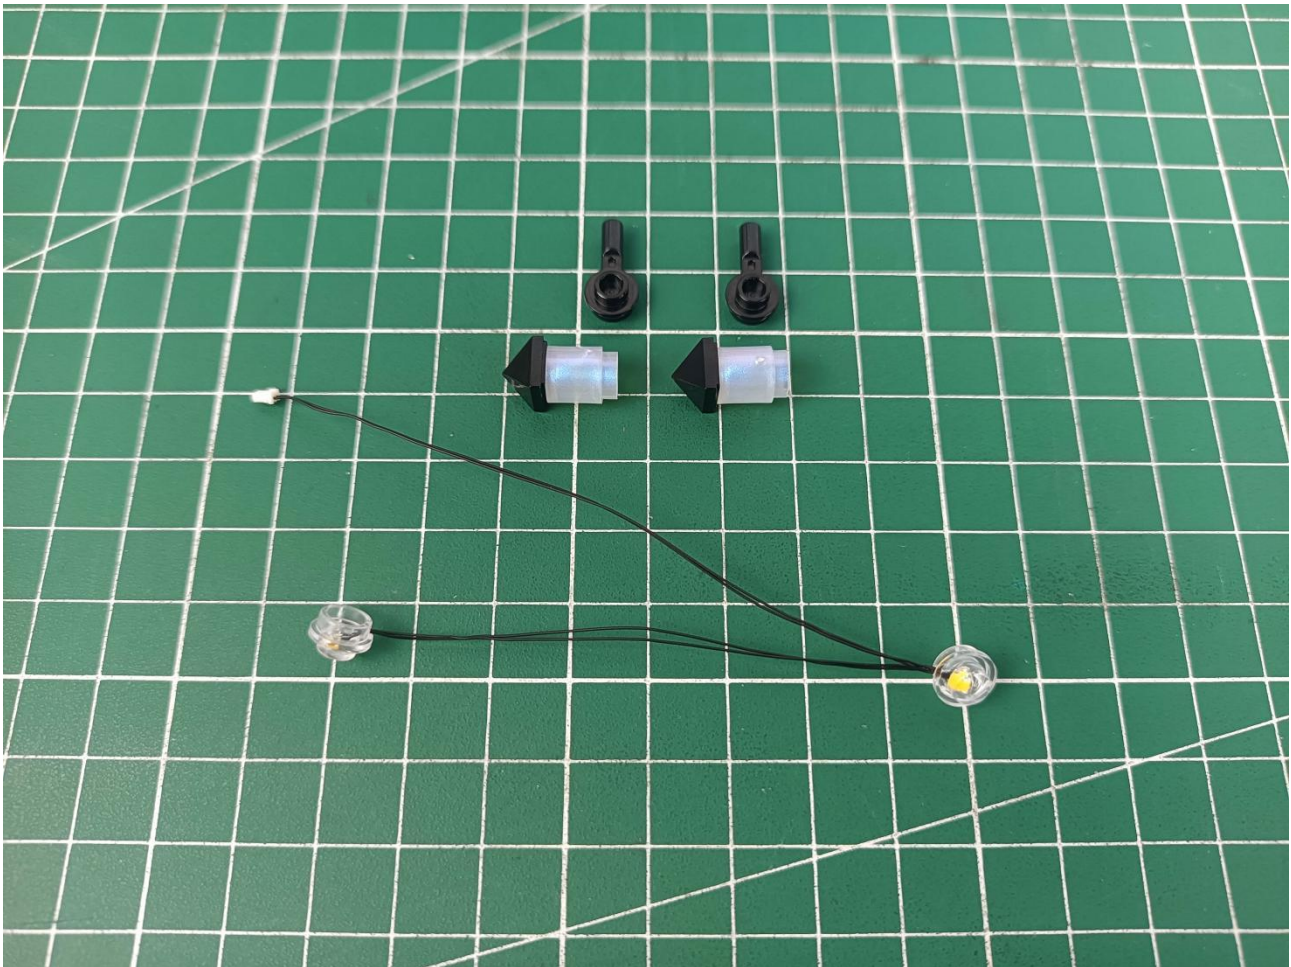







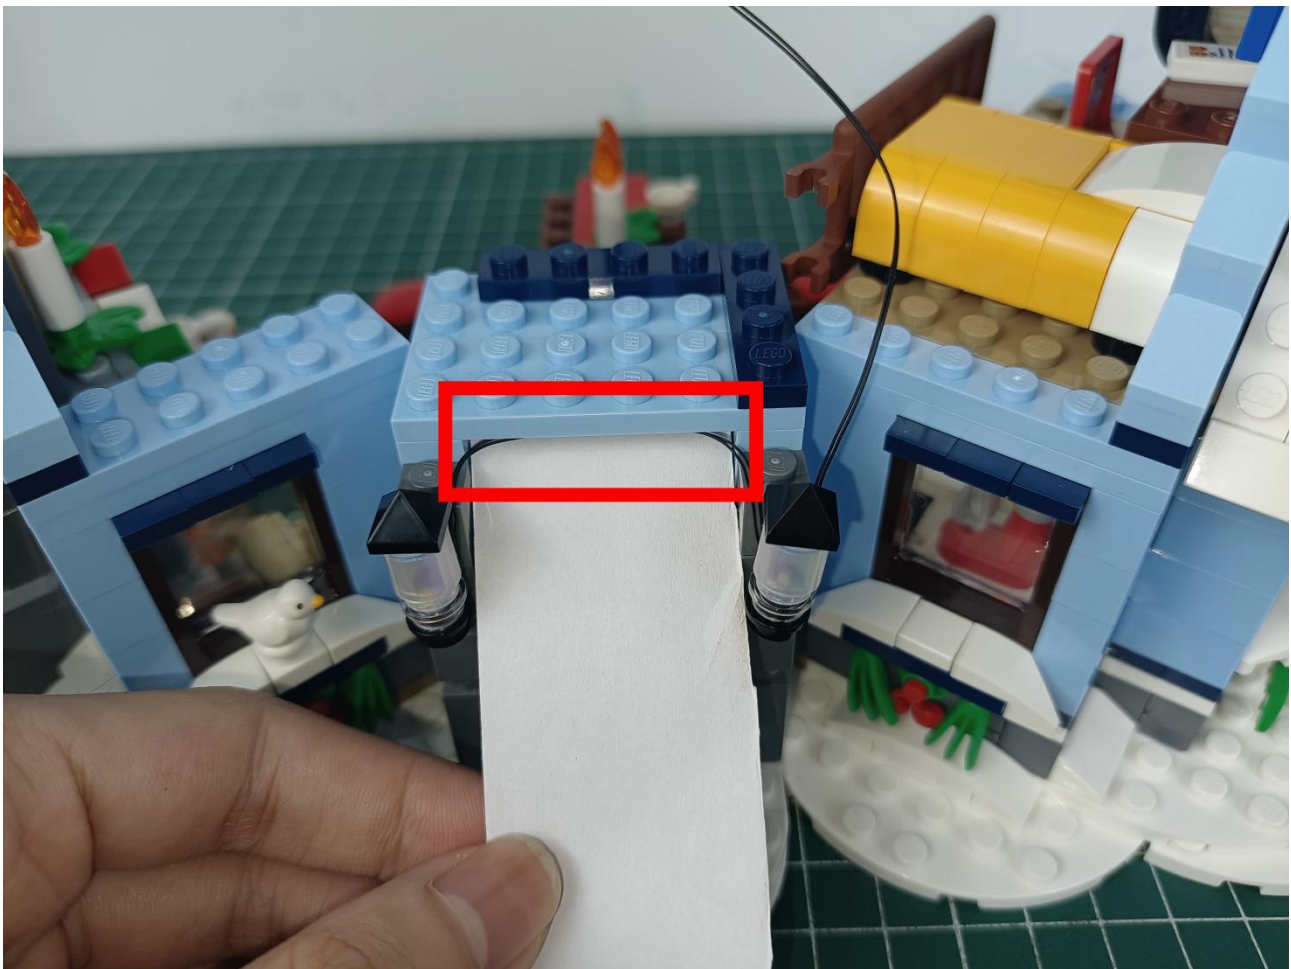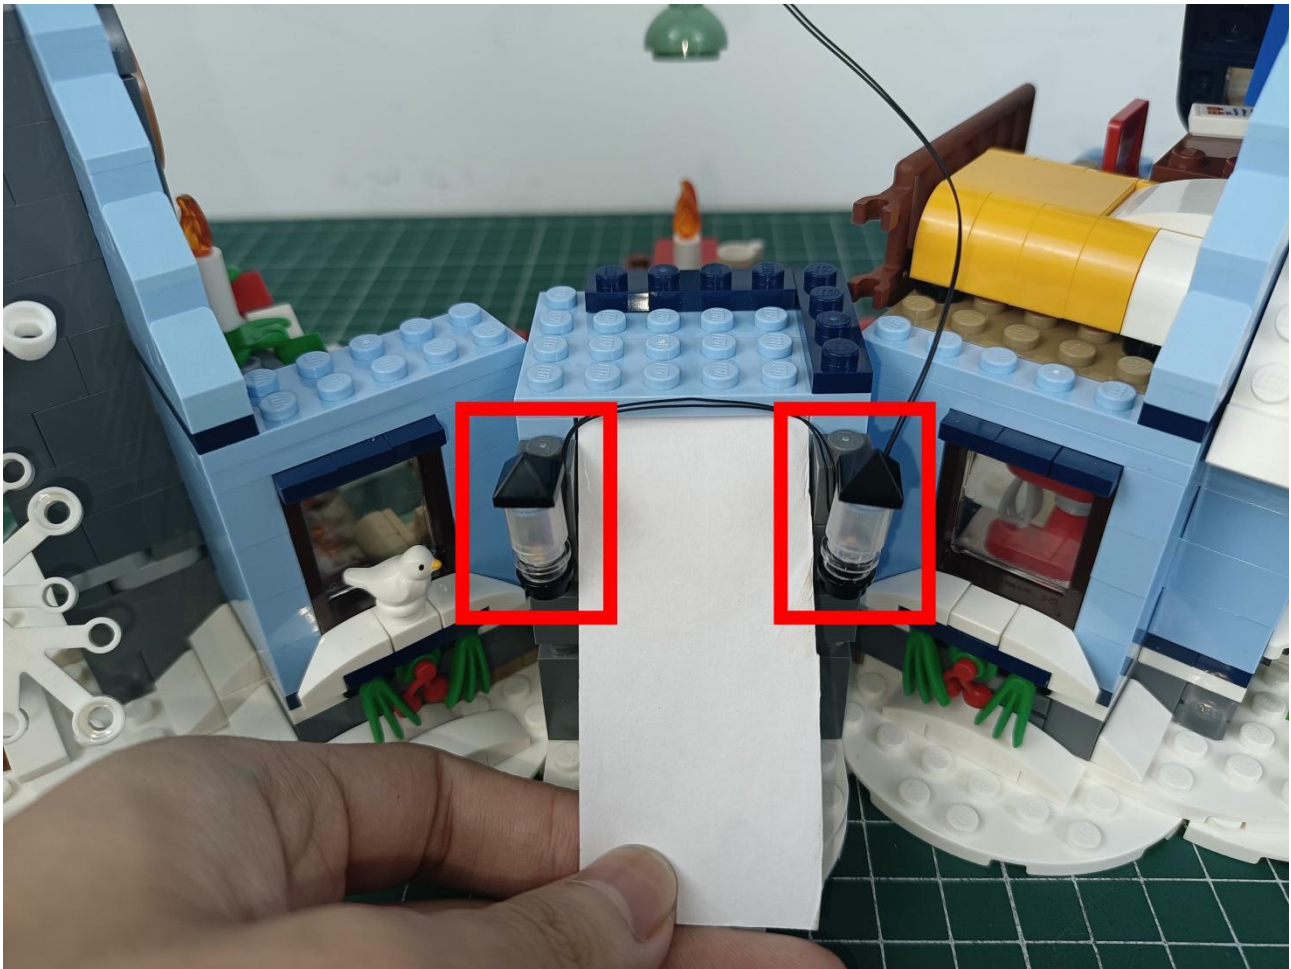

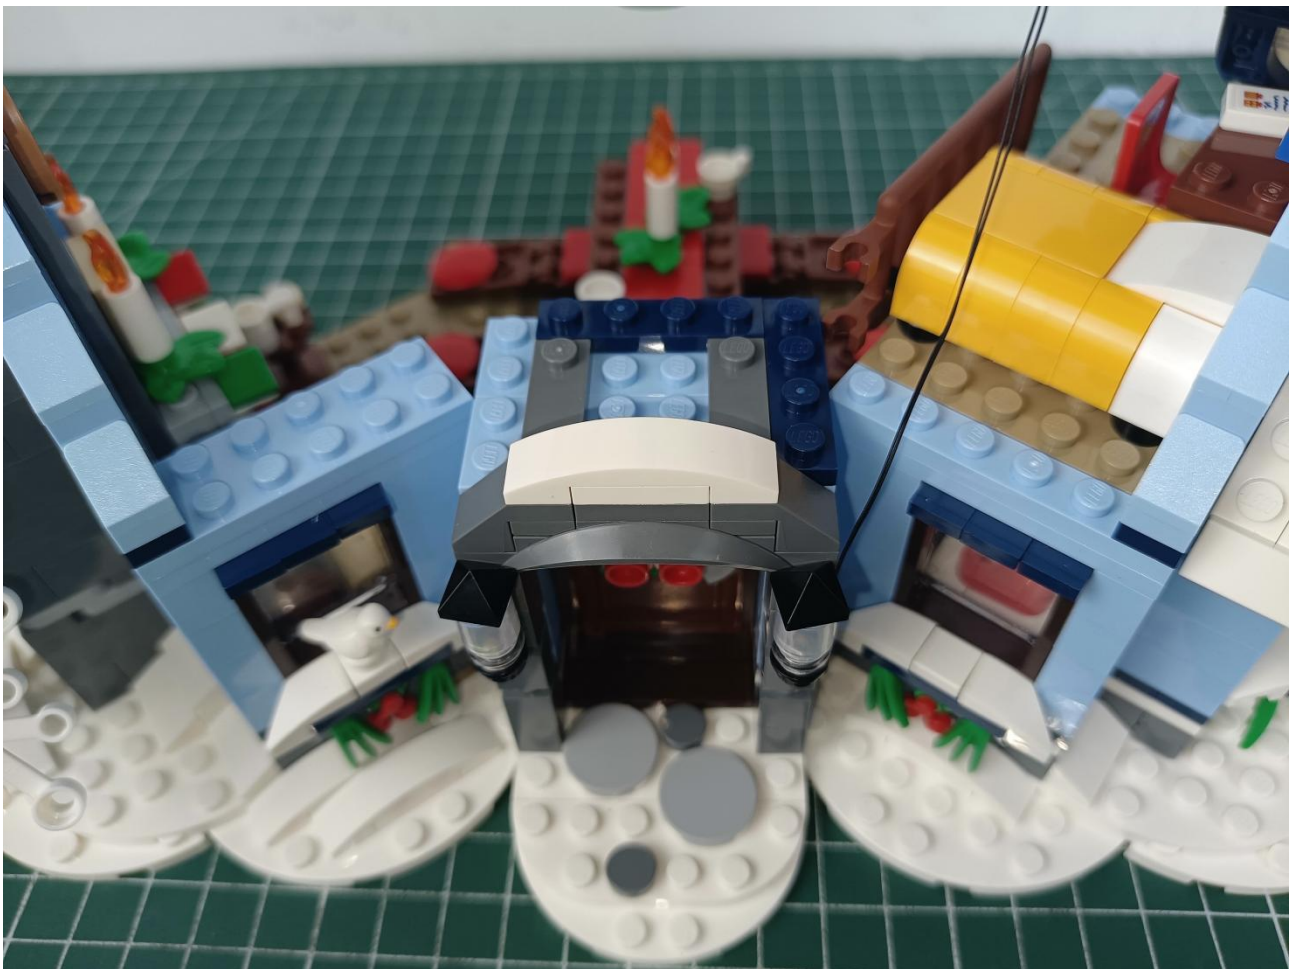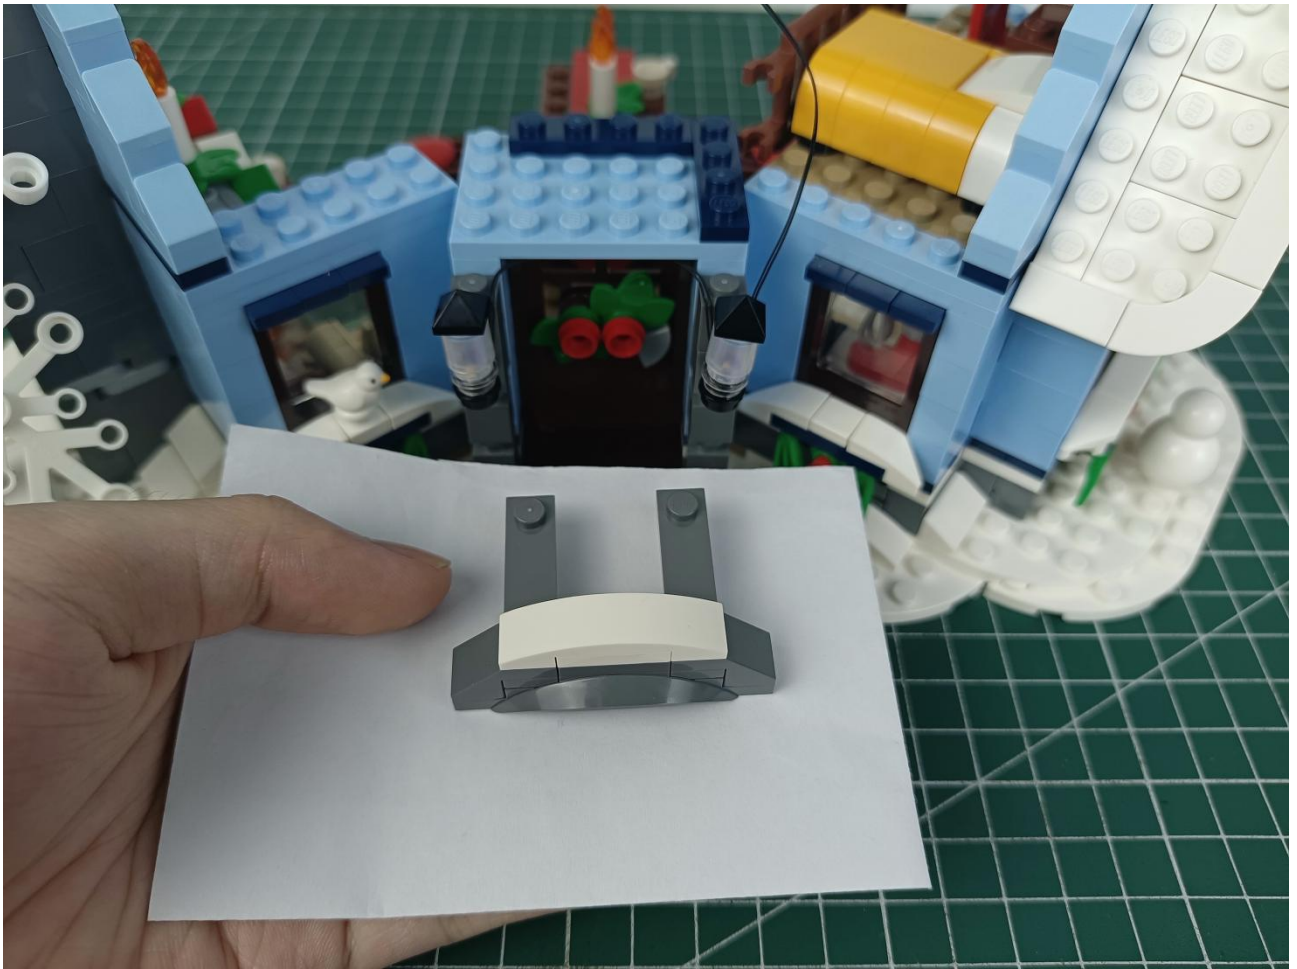


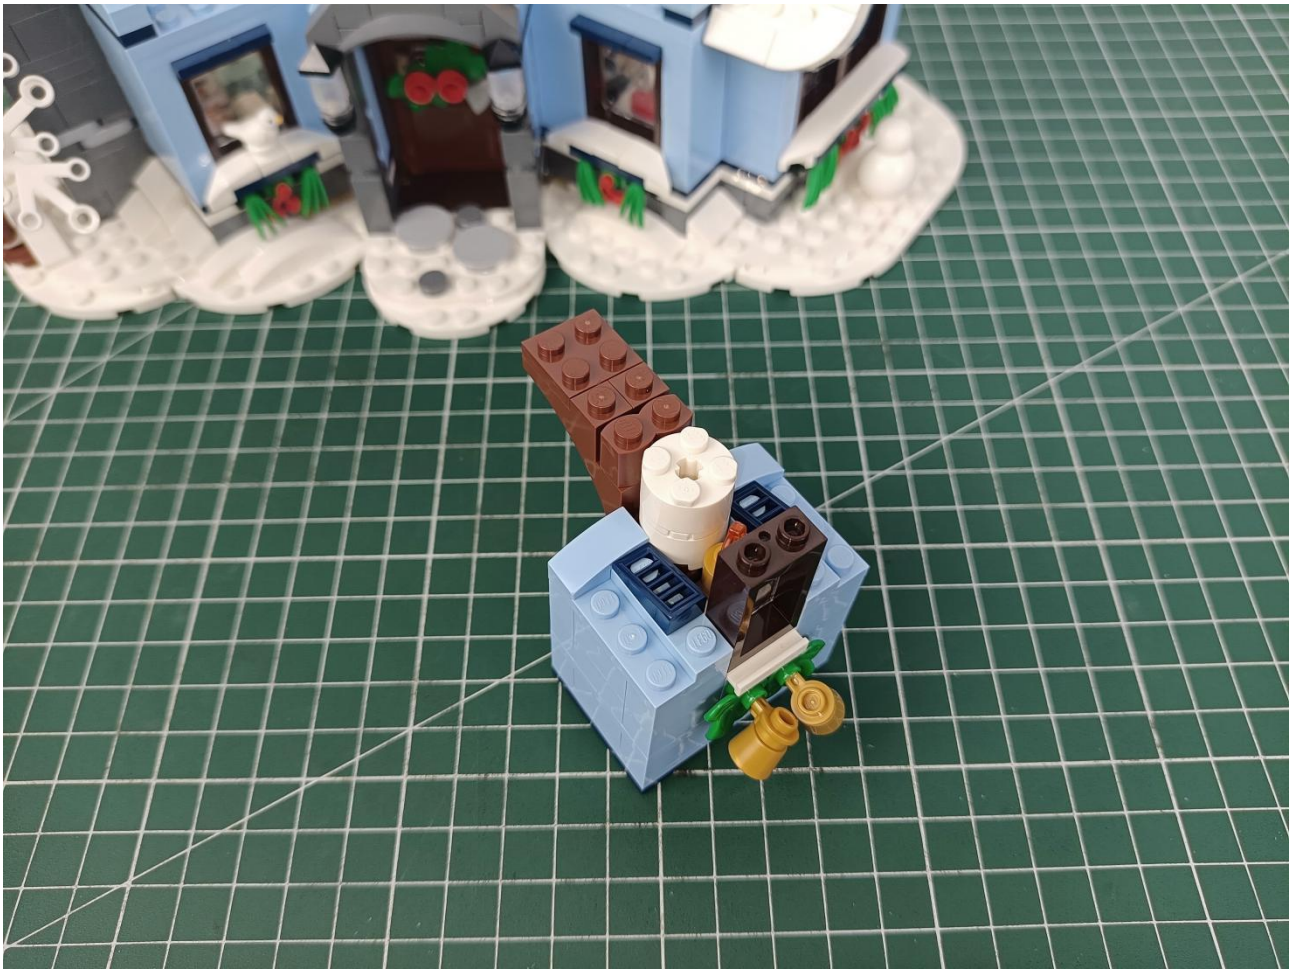






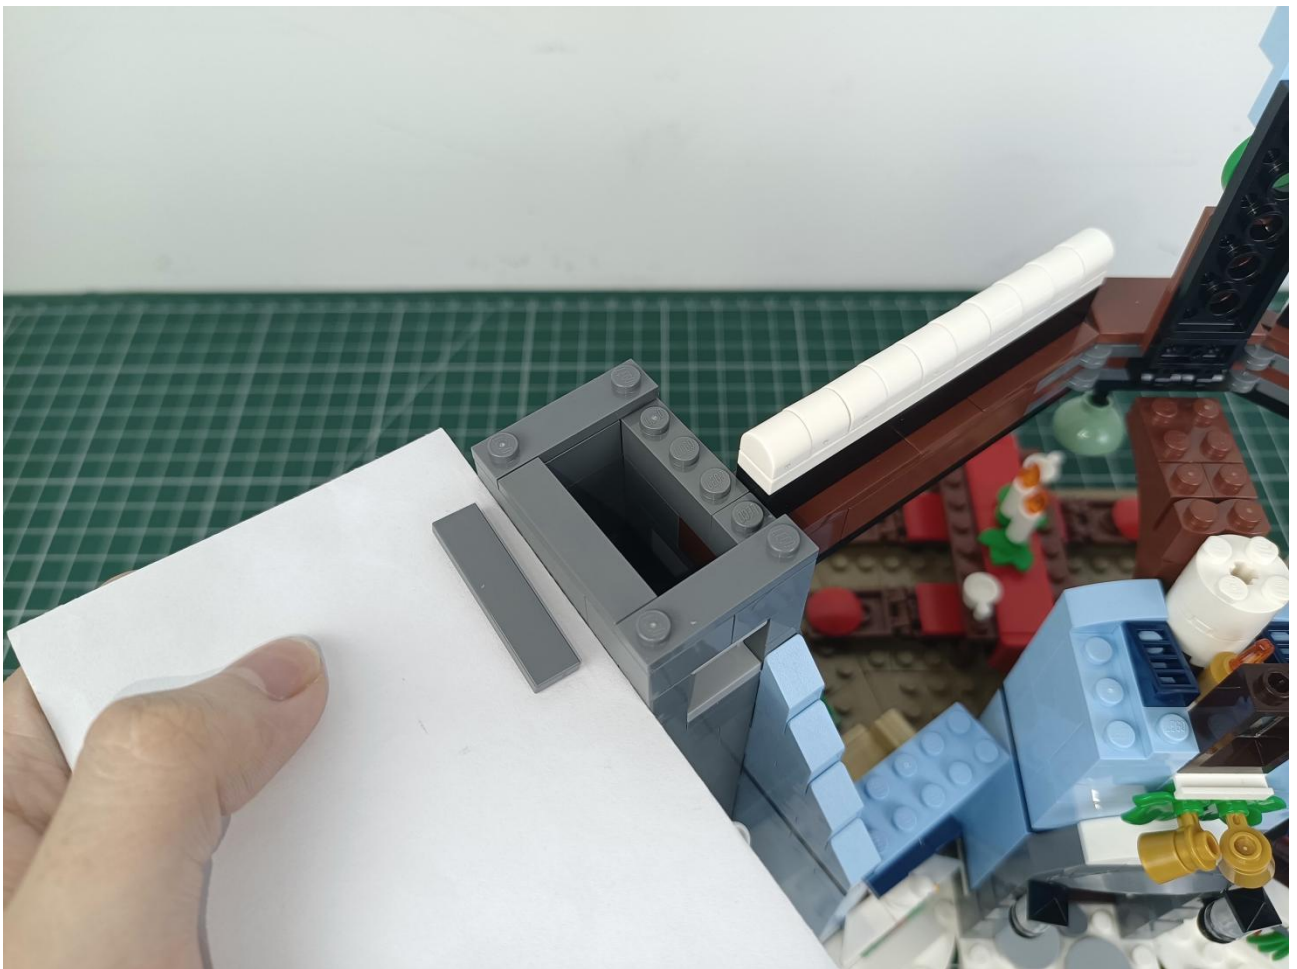





Please be careful when installing. The lamp wire is relatively slender and cannot be pressed on the raised position of the building block. It should pass along the gap, otherwise the lamp wire will be pinched.

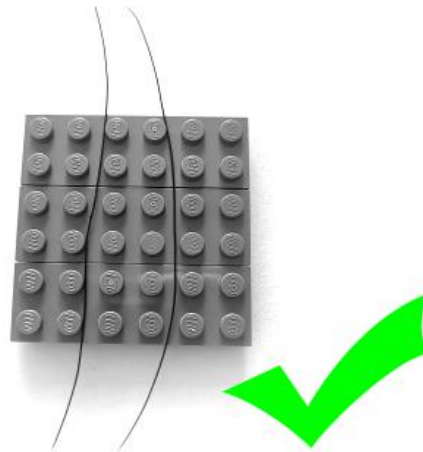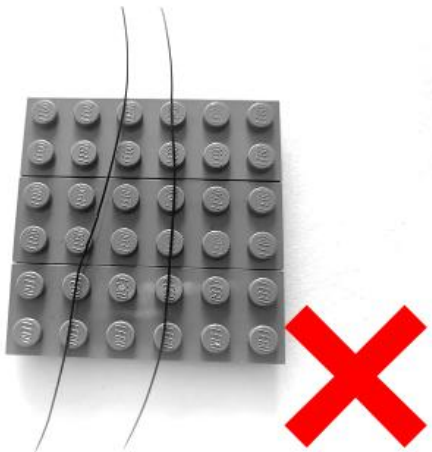


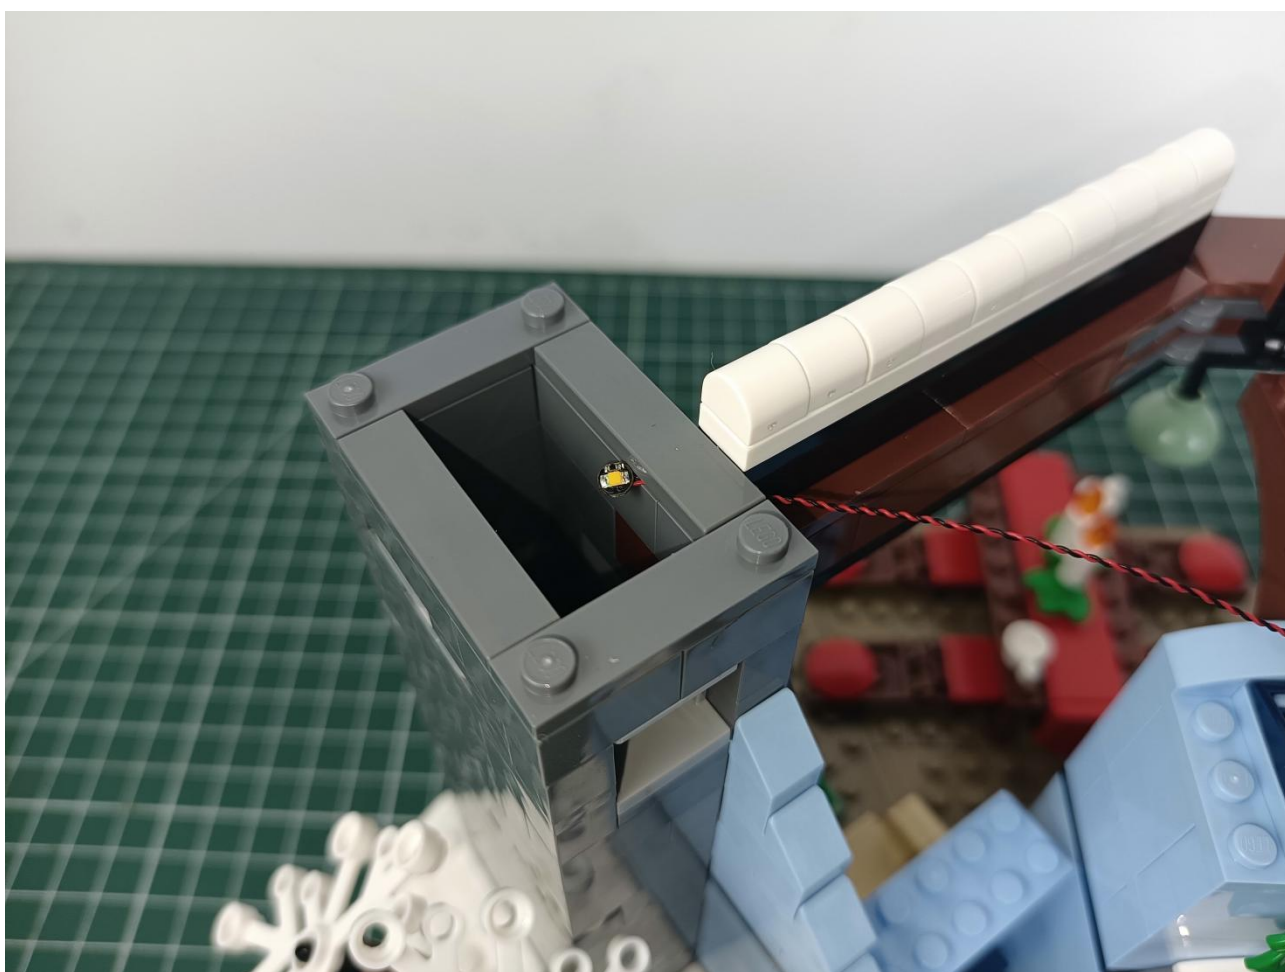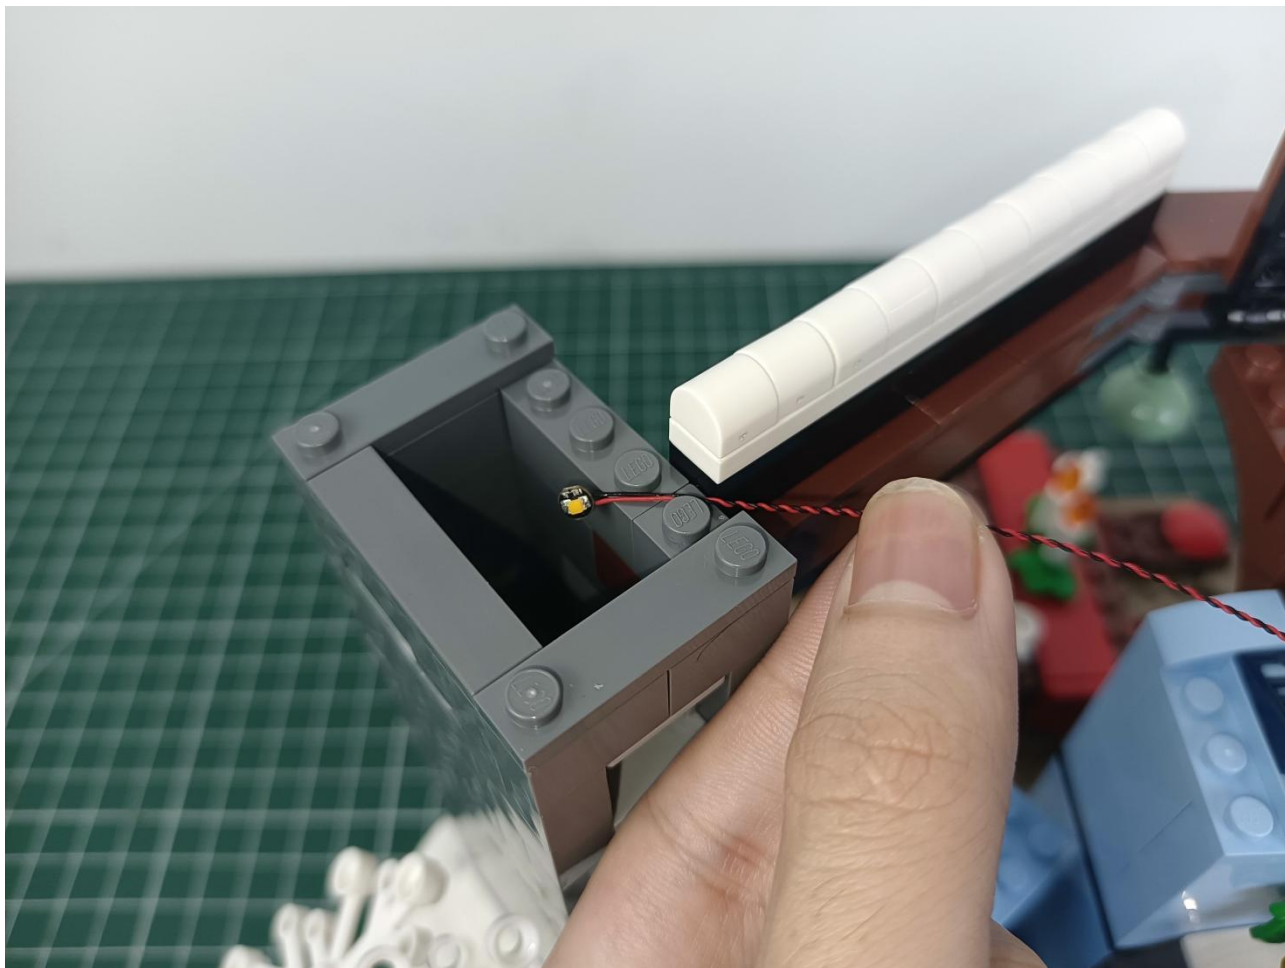


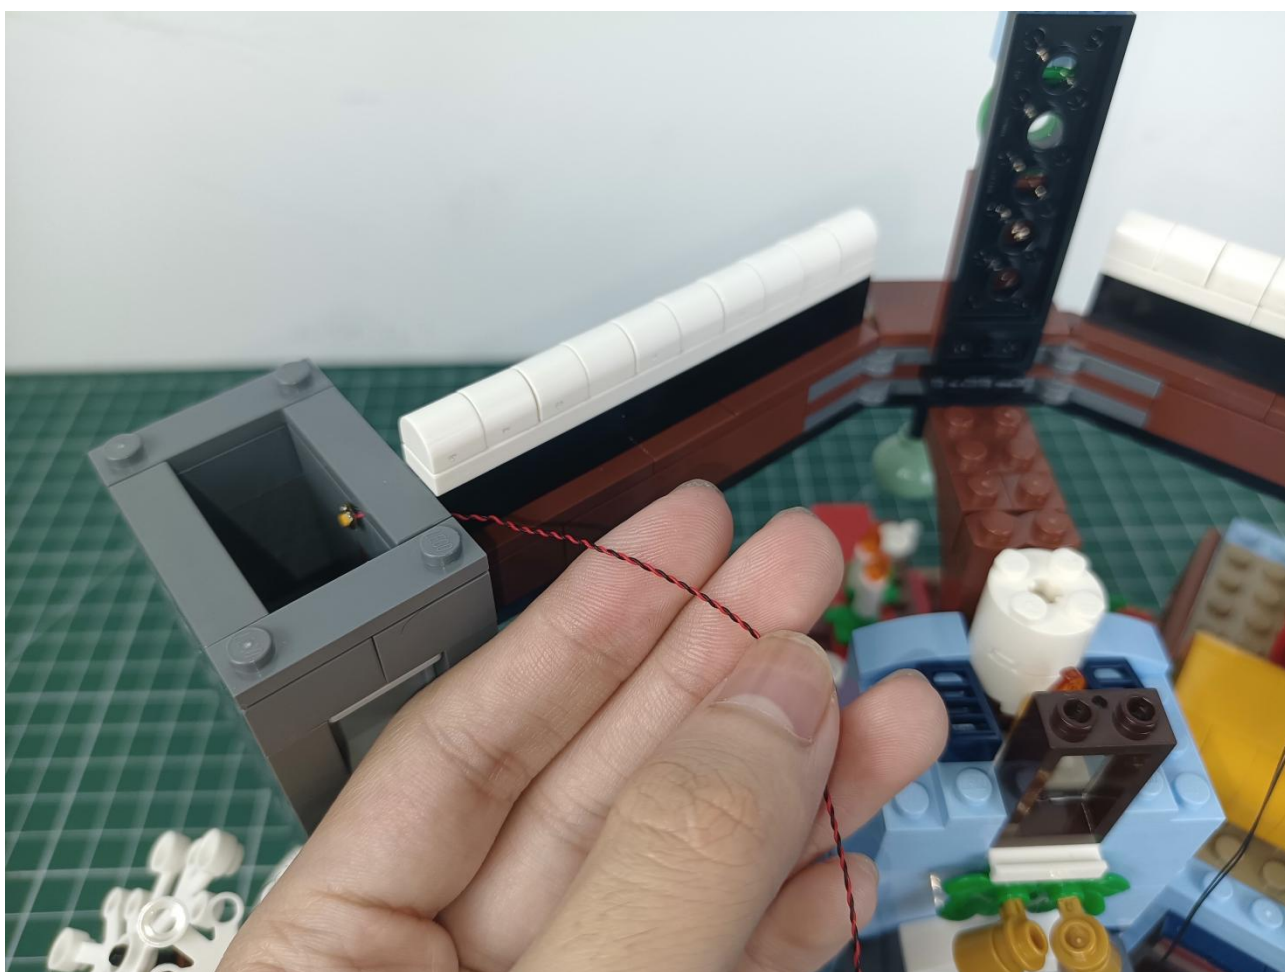





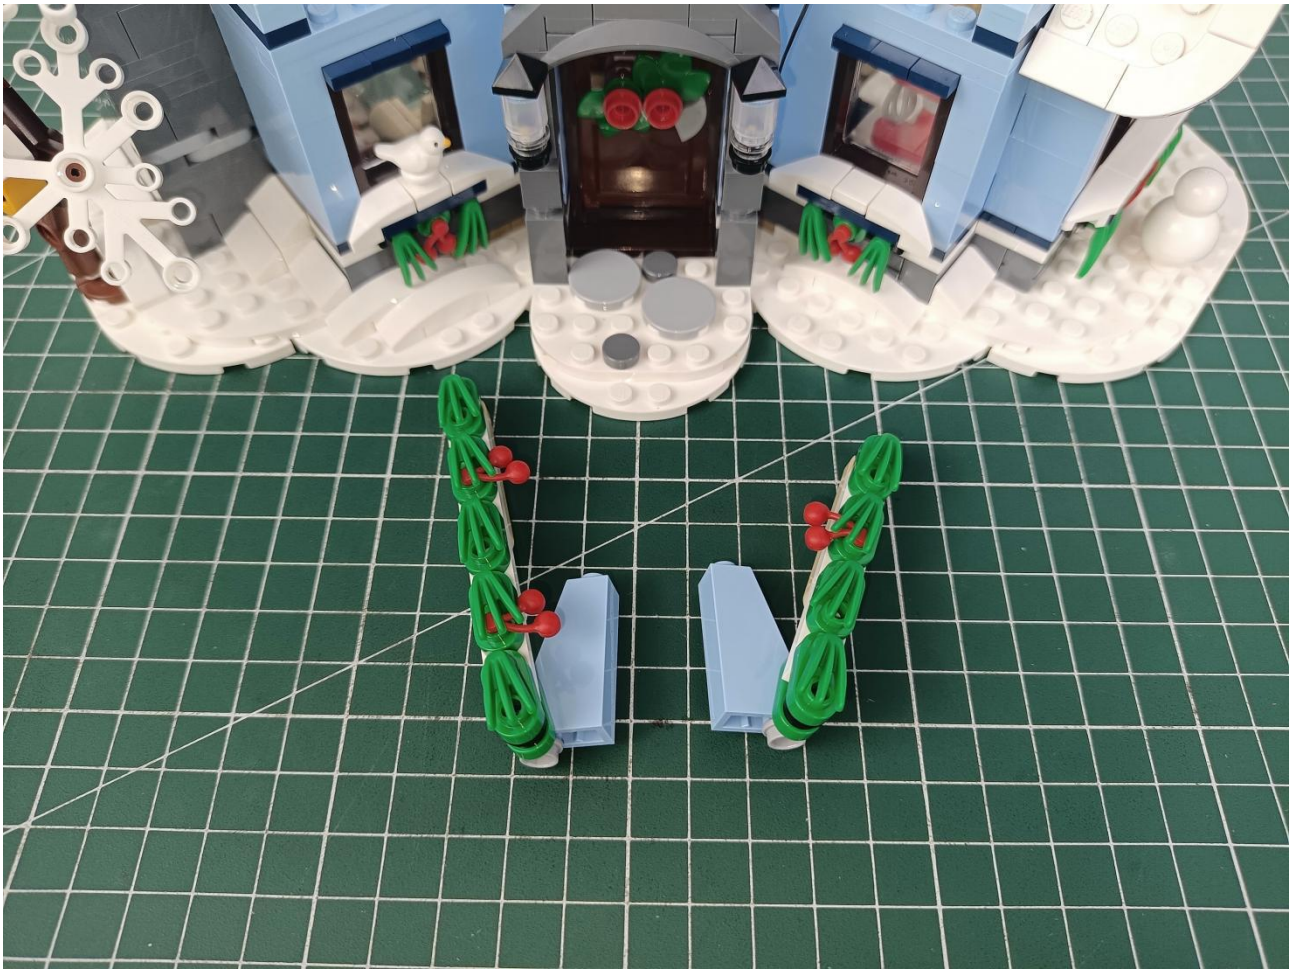



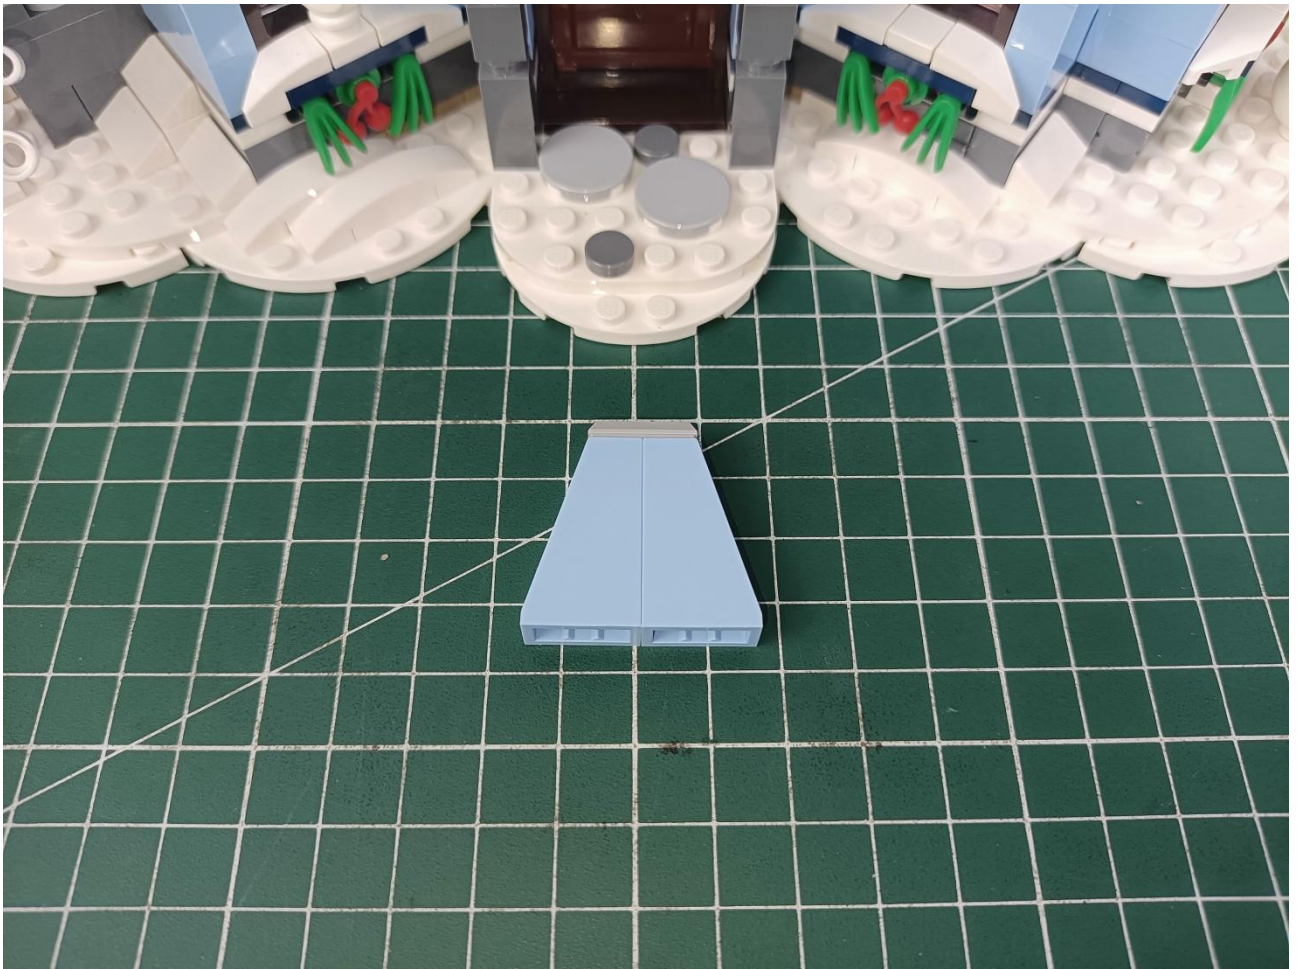



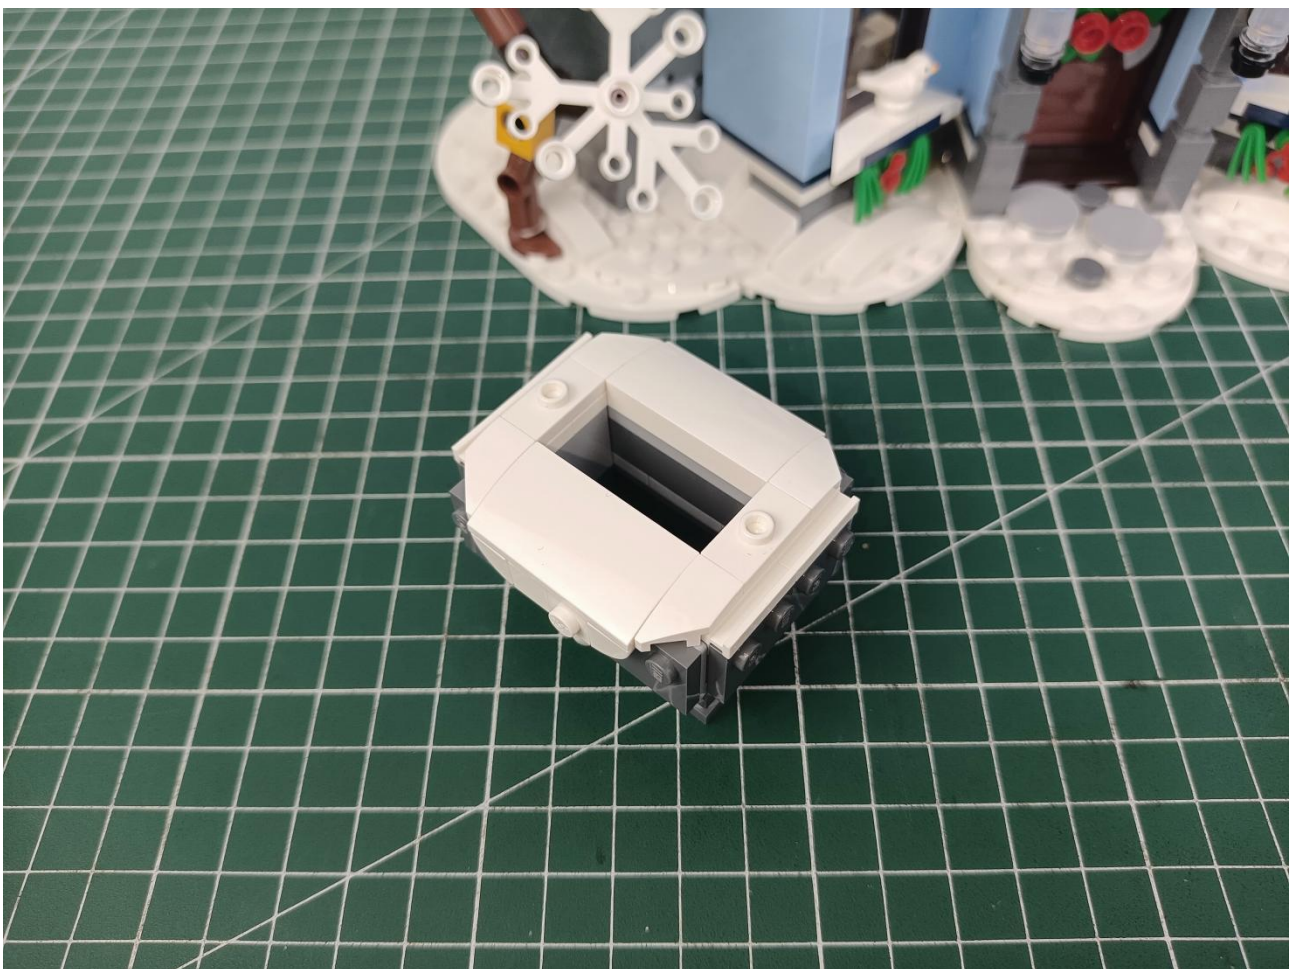






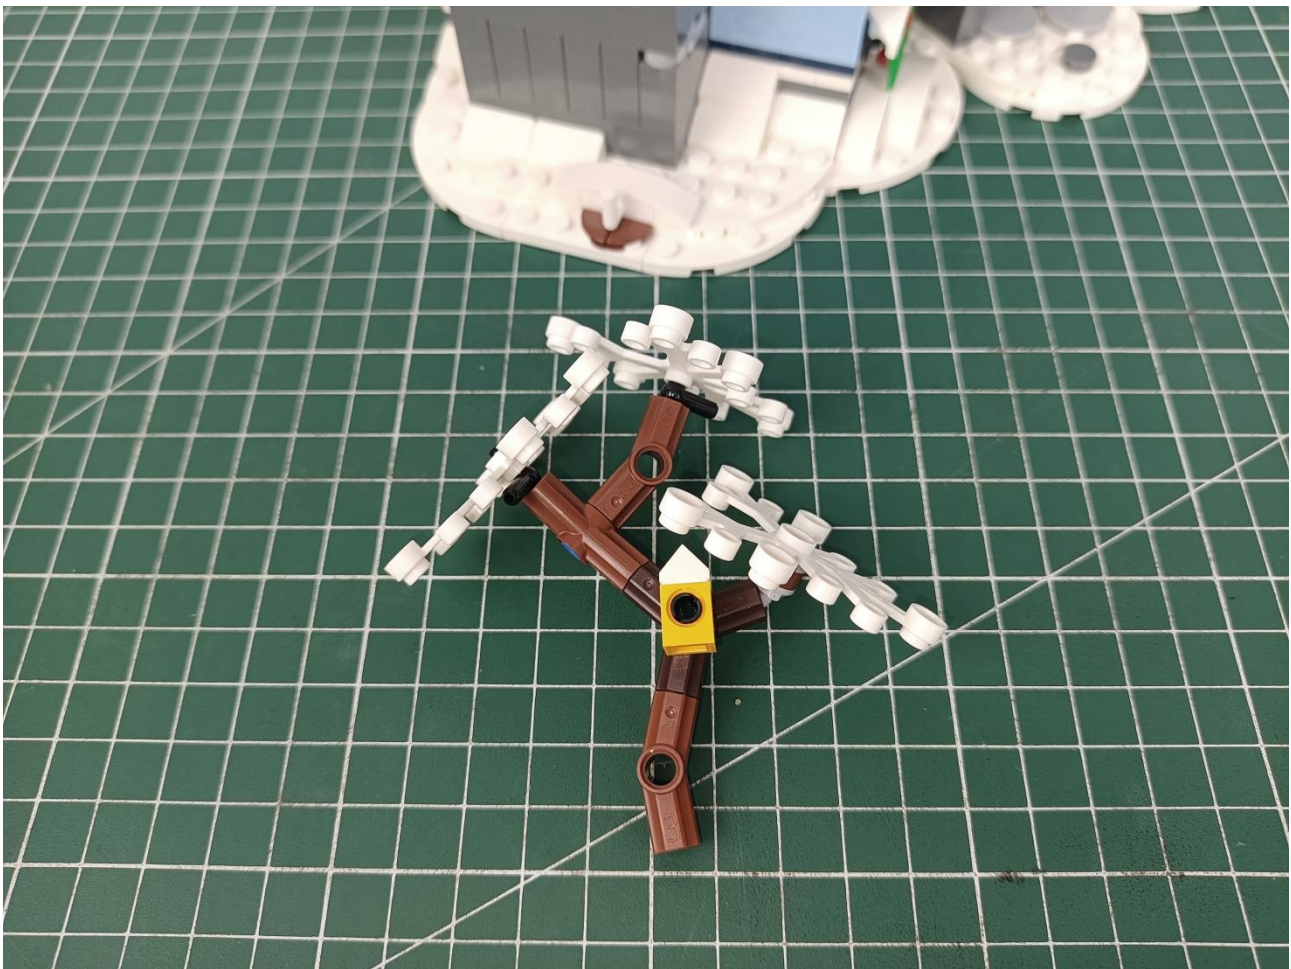


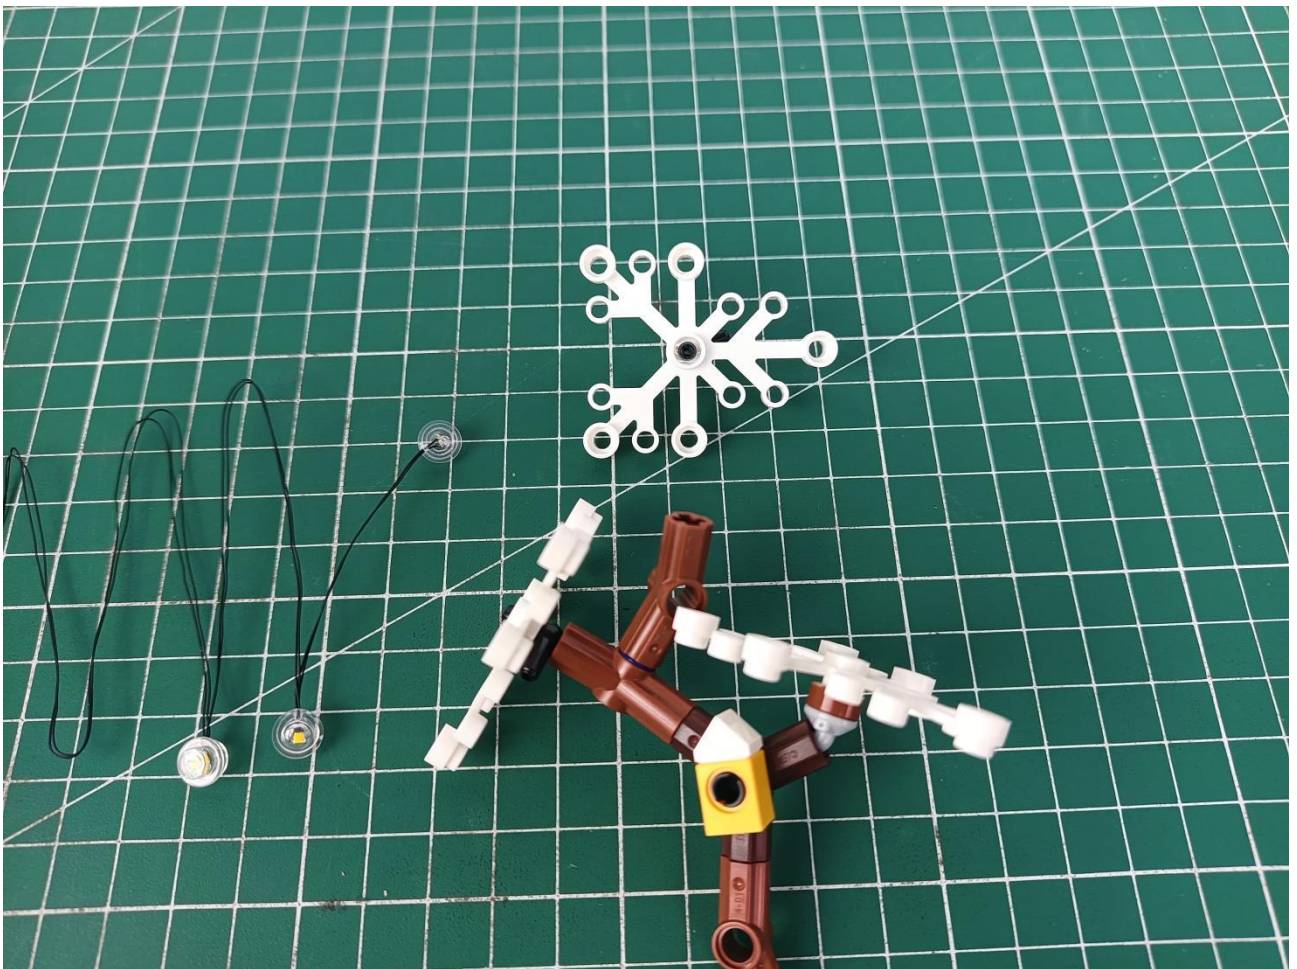
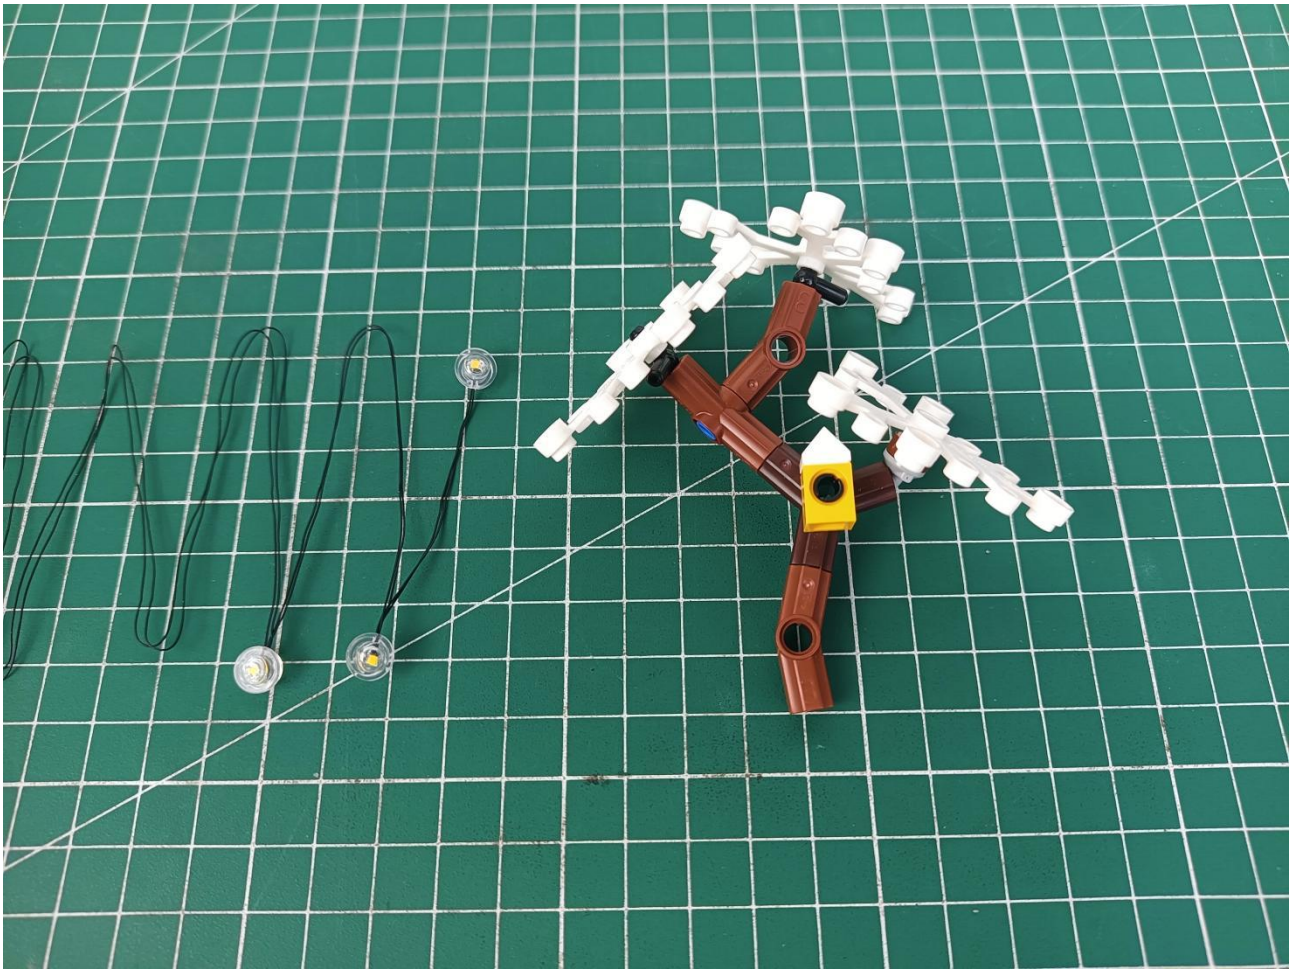


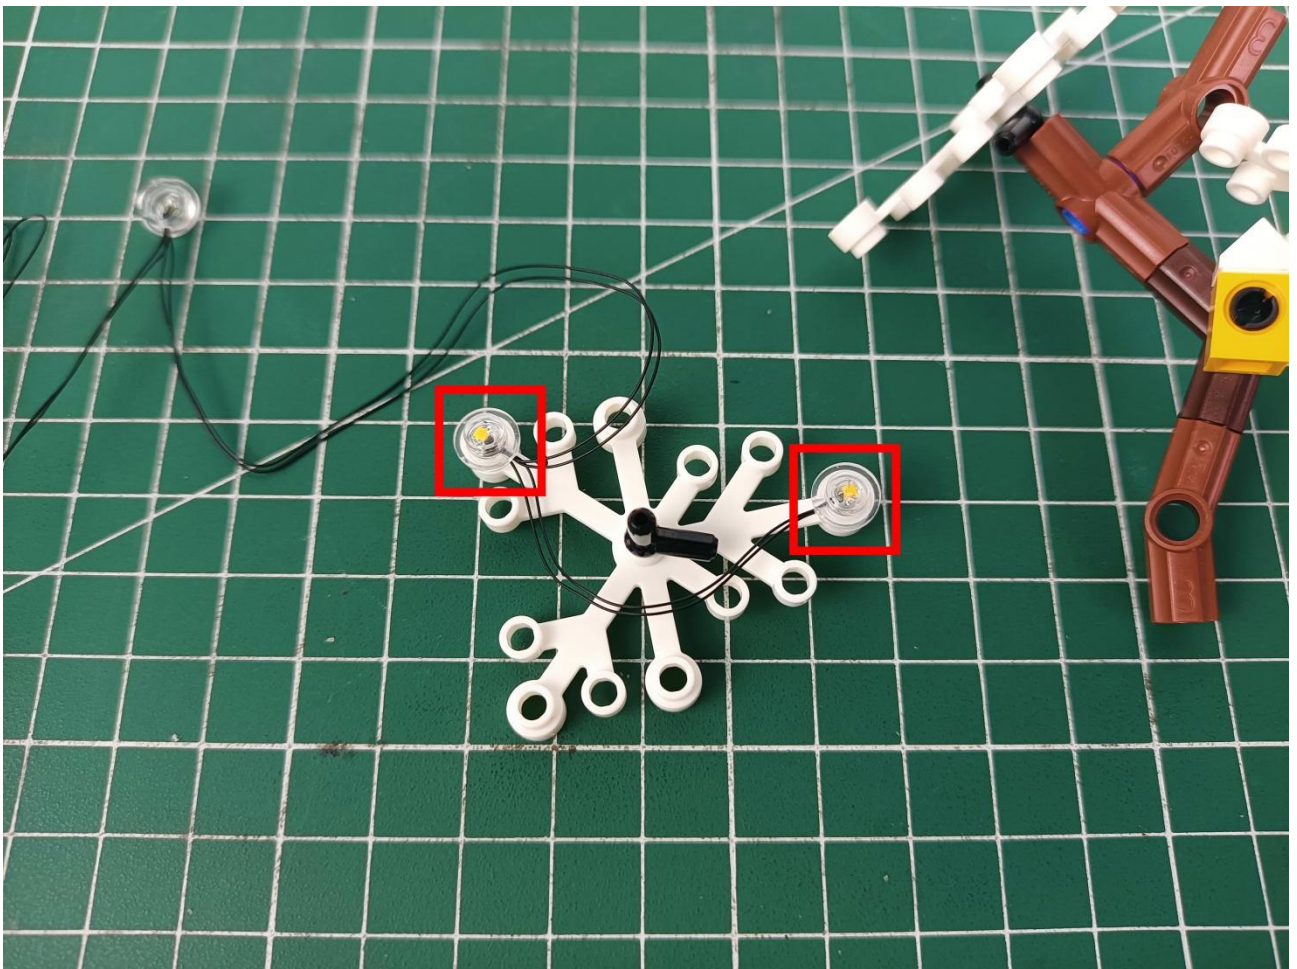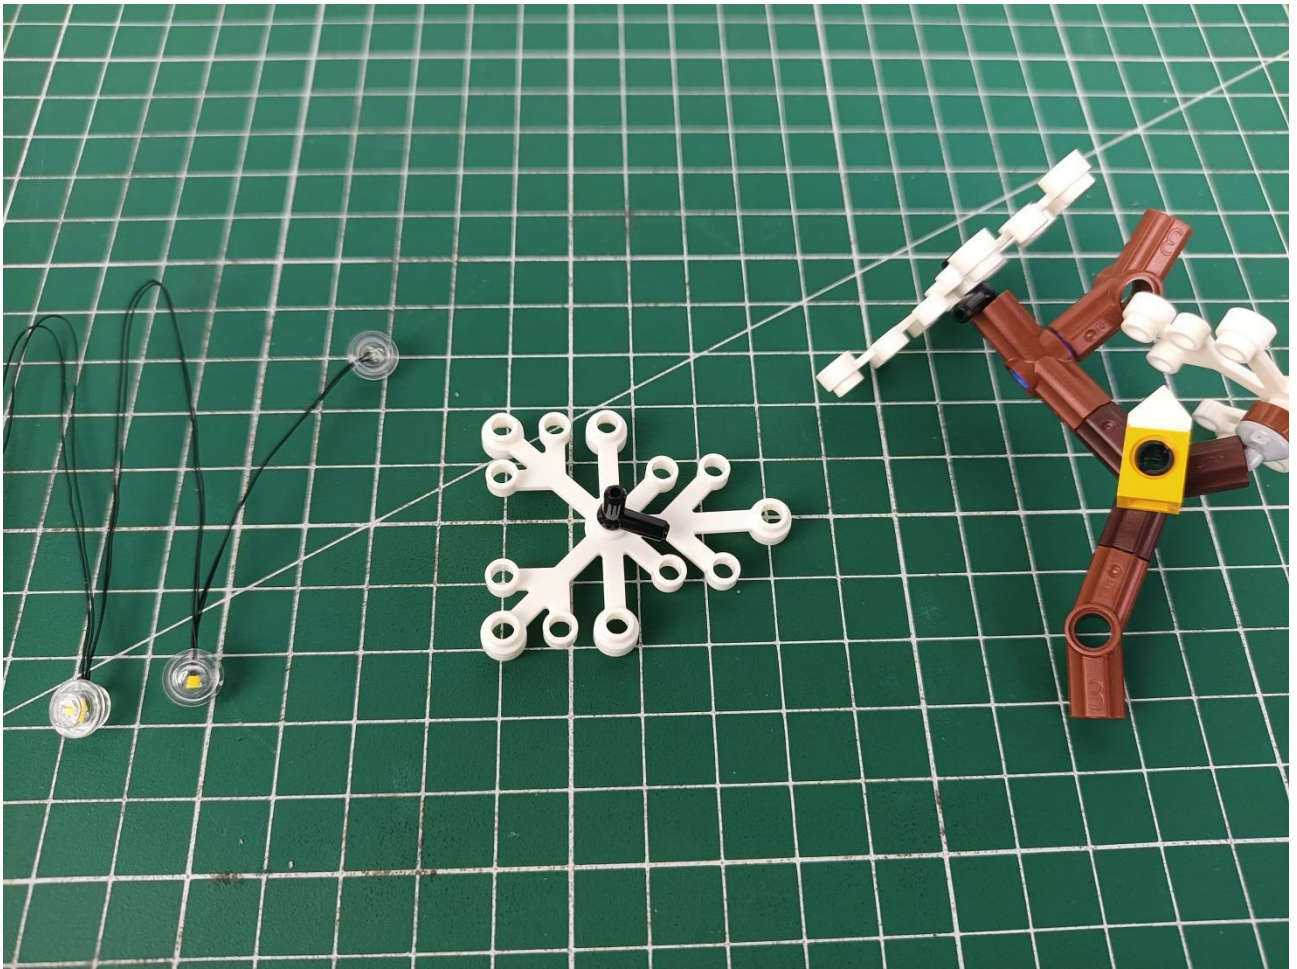


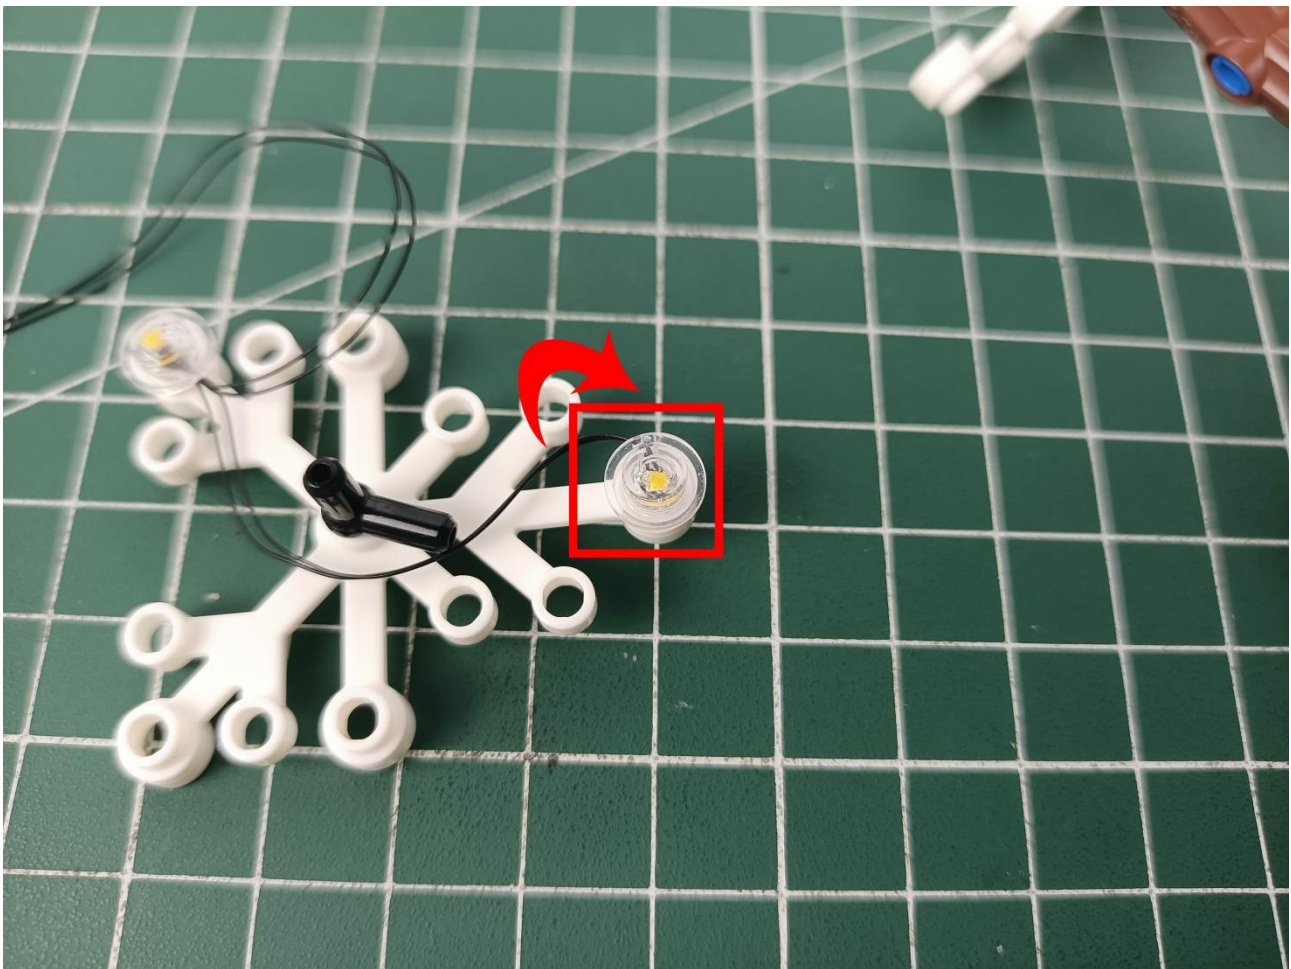
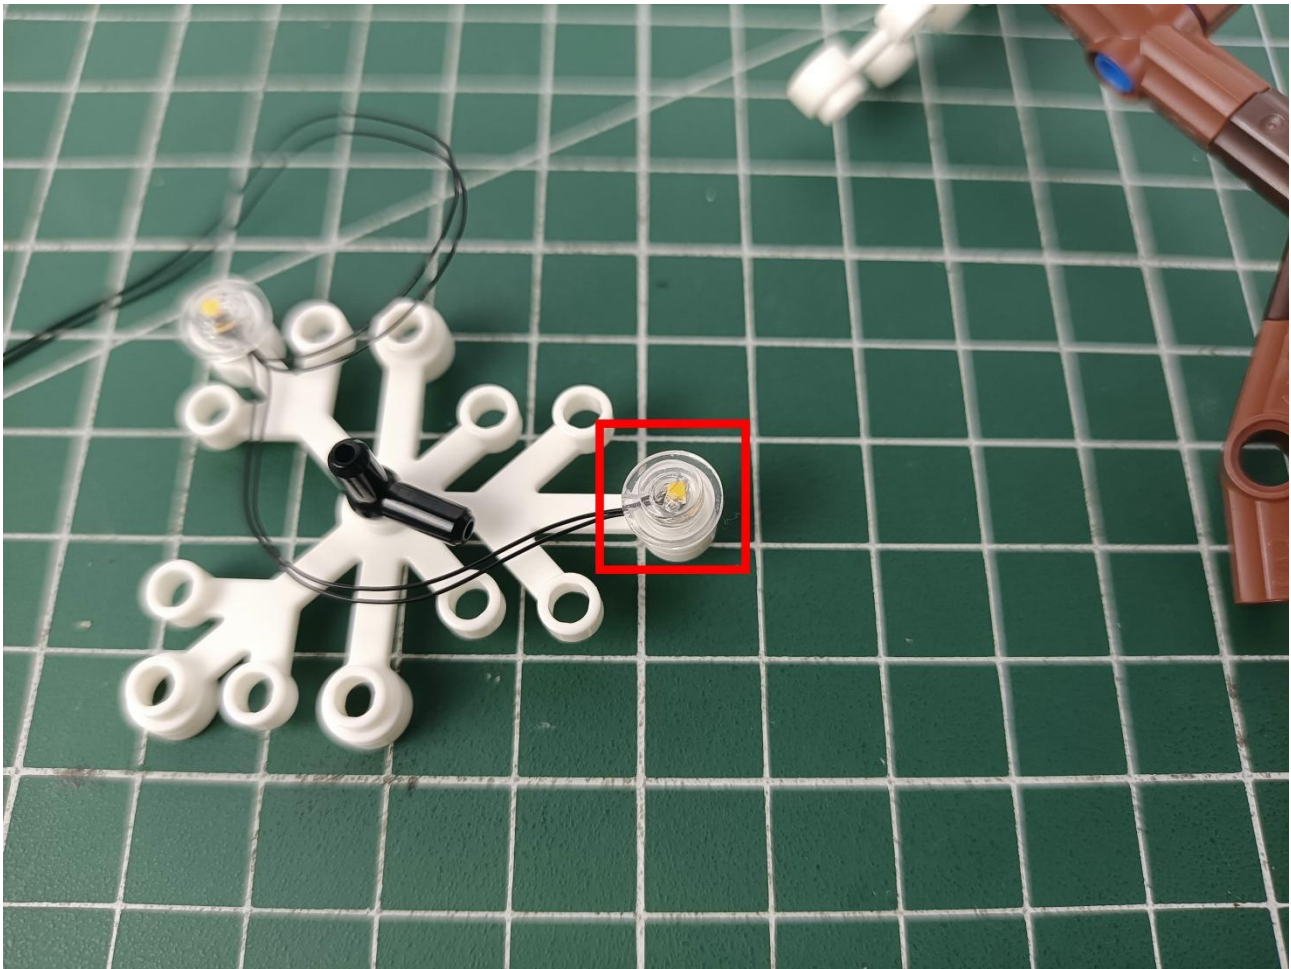


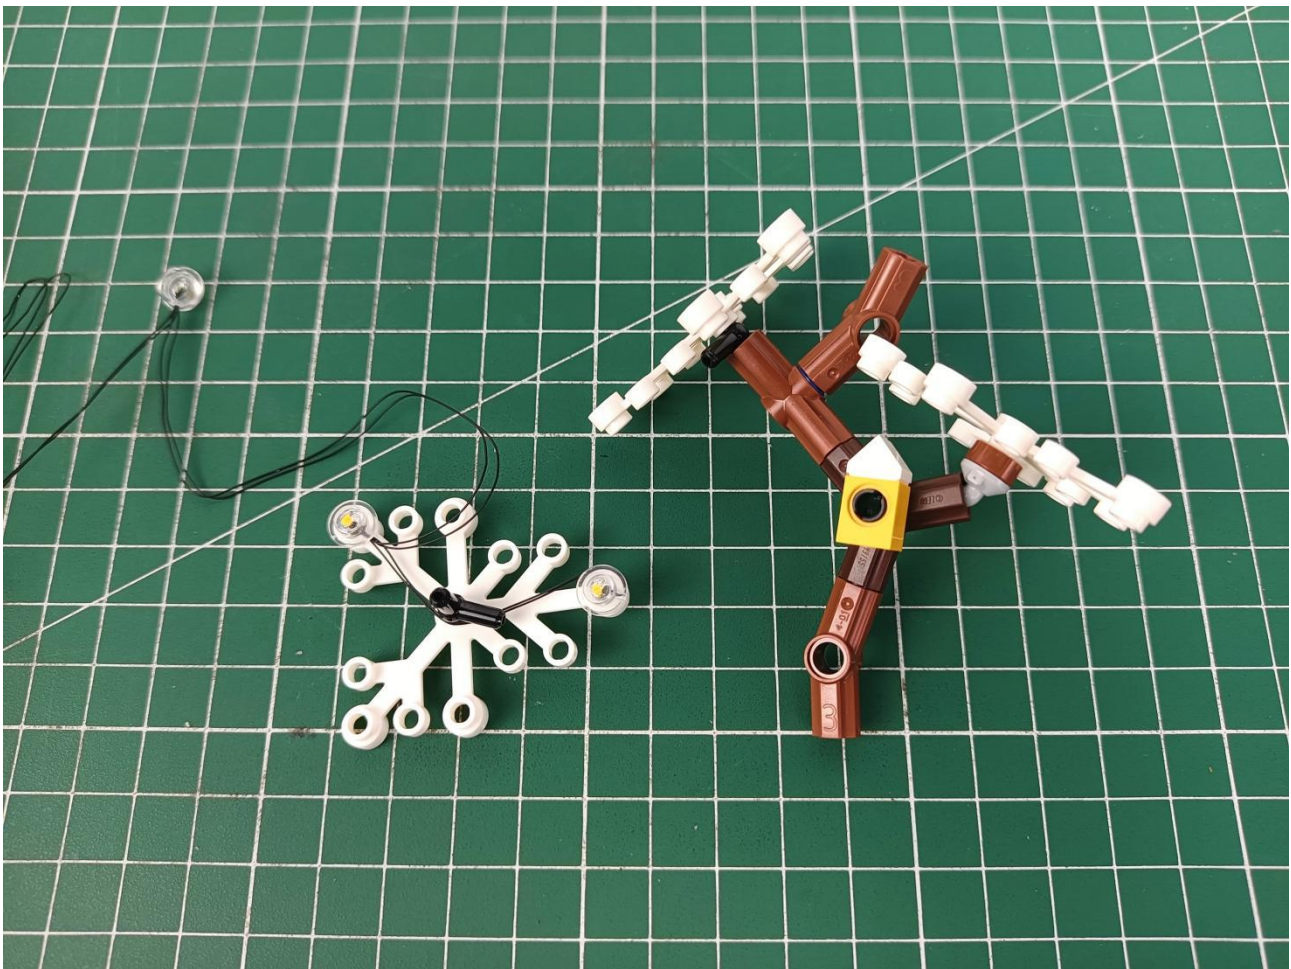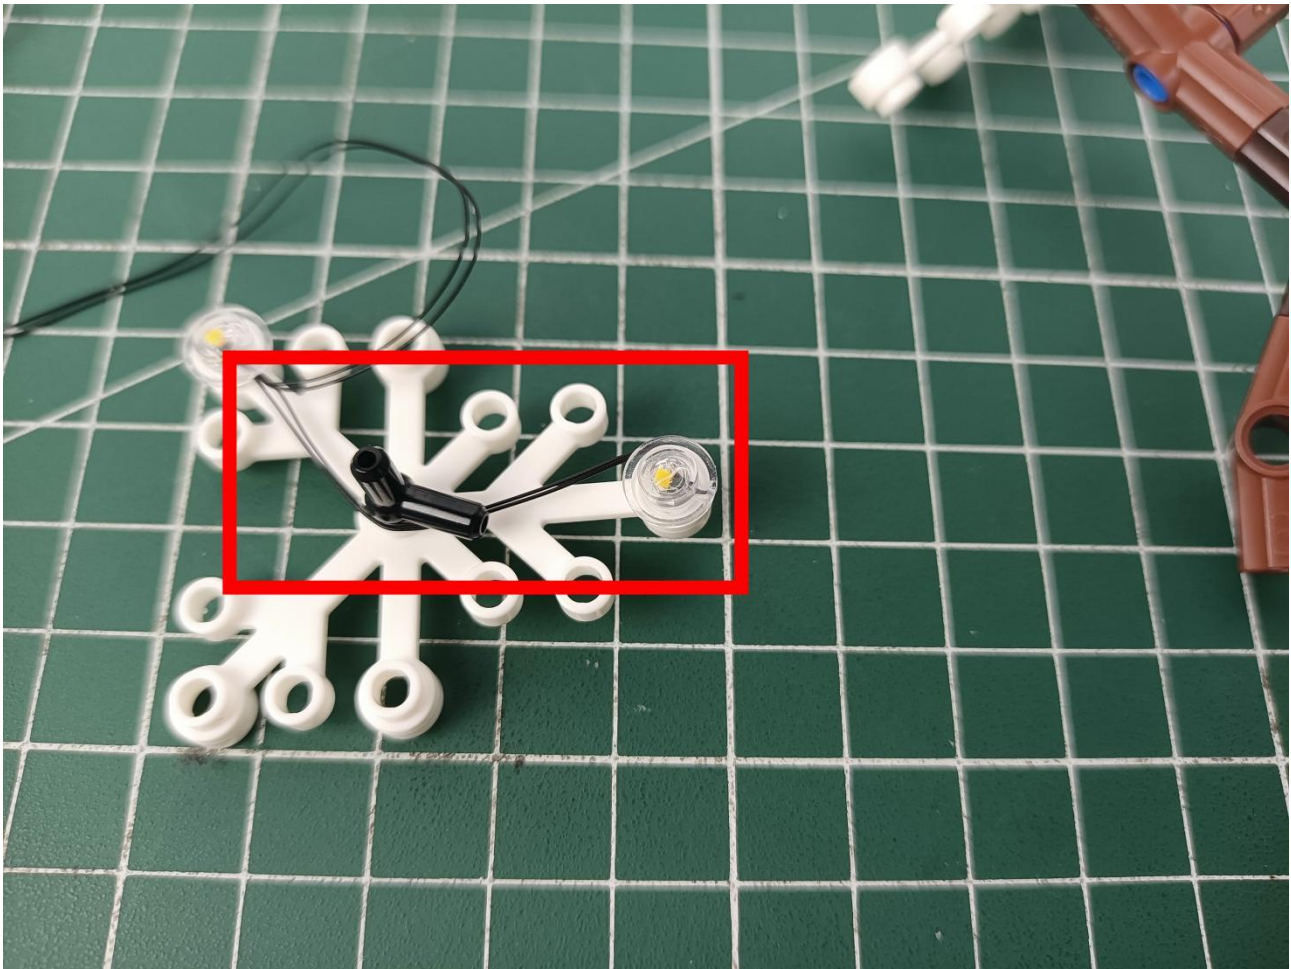



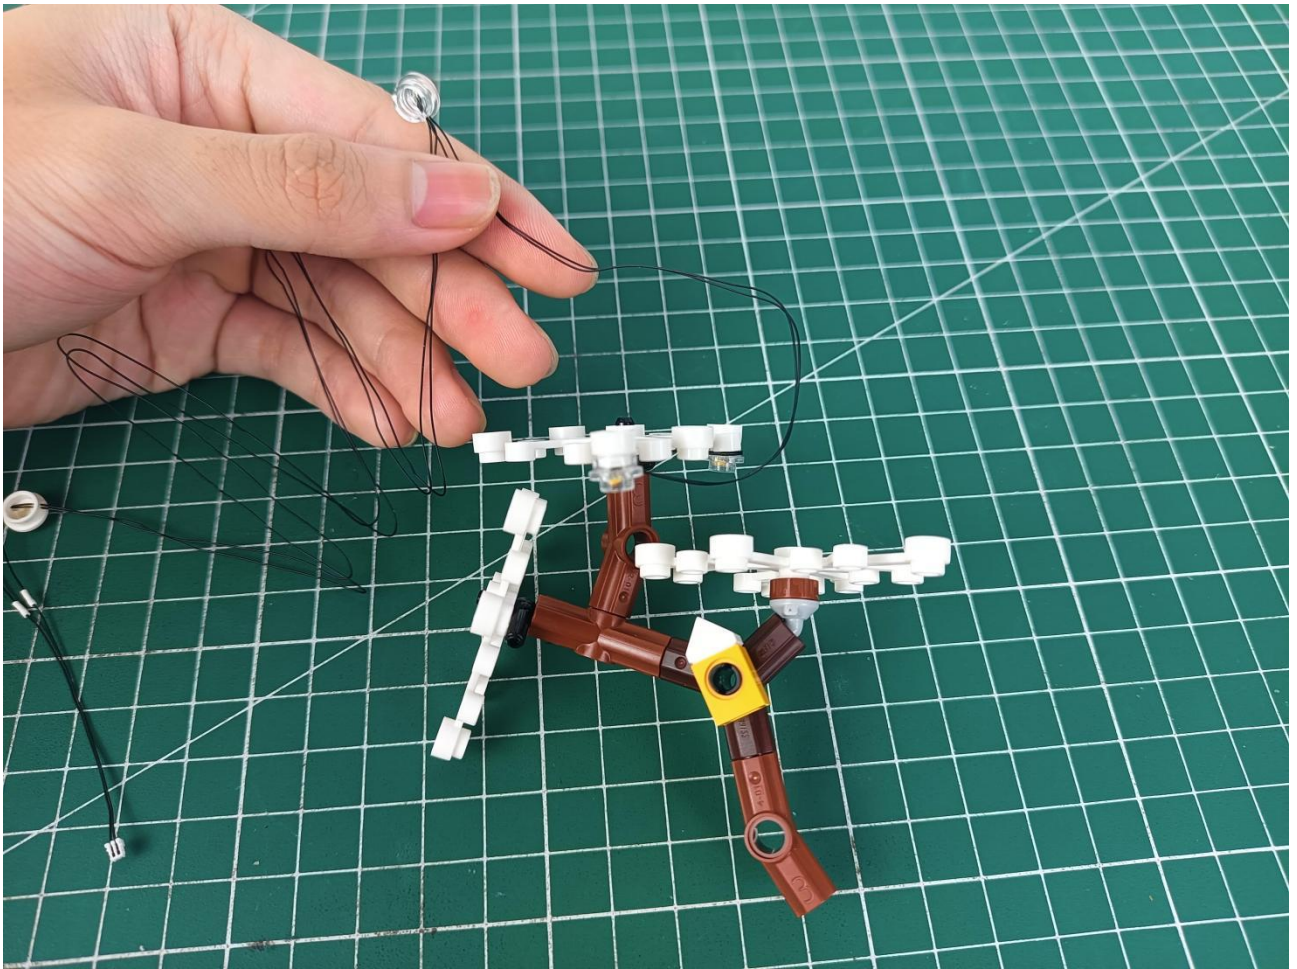


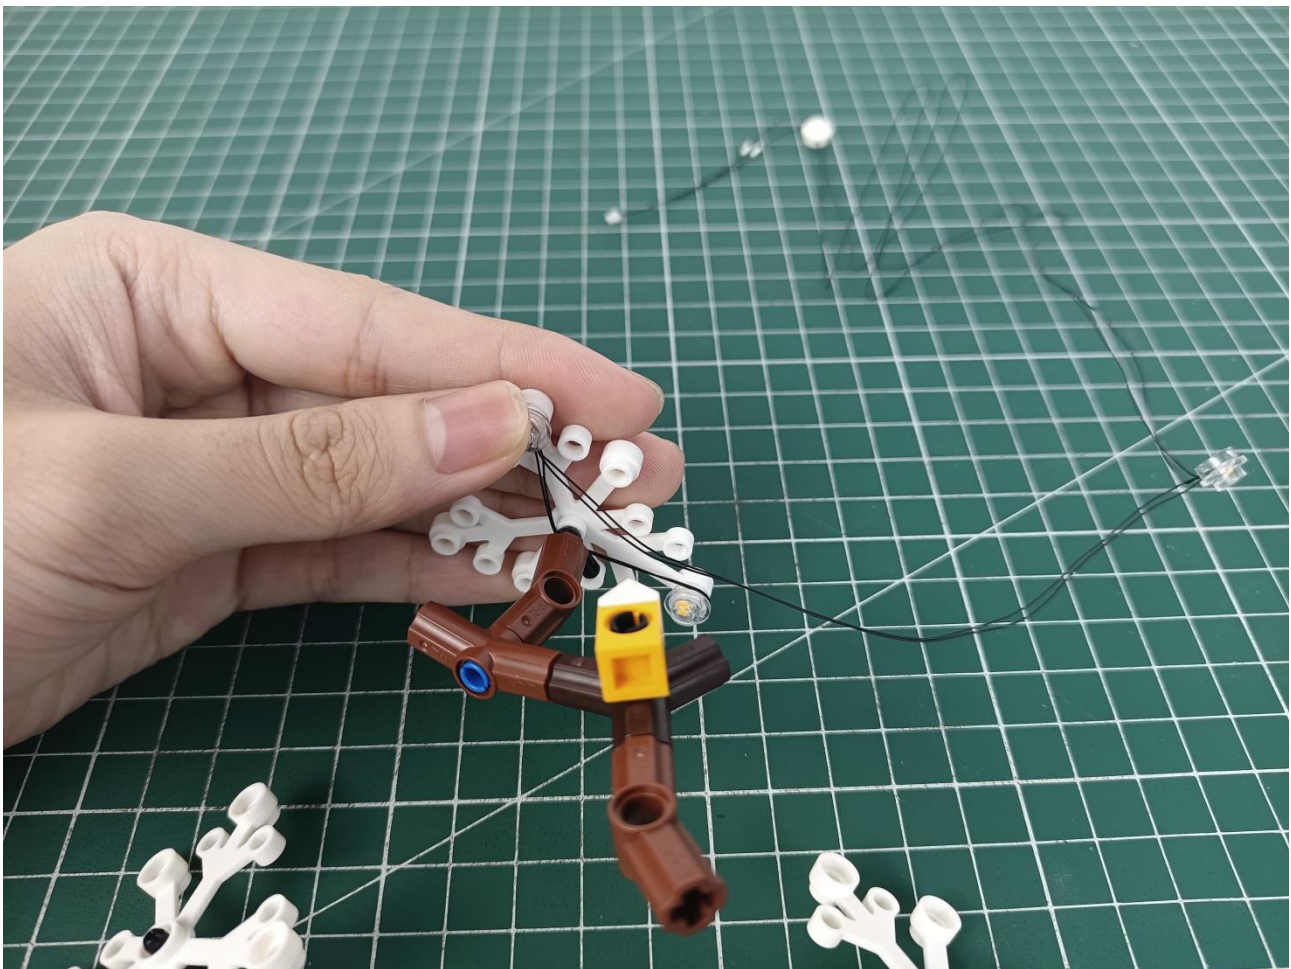
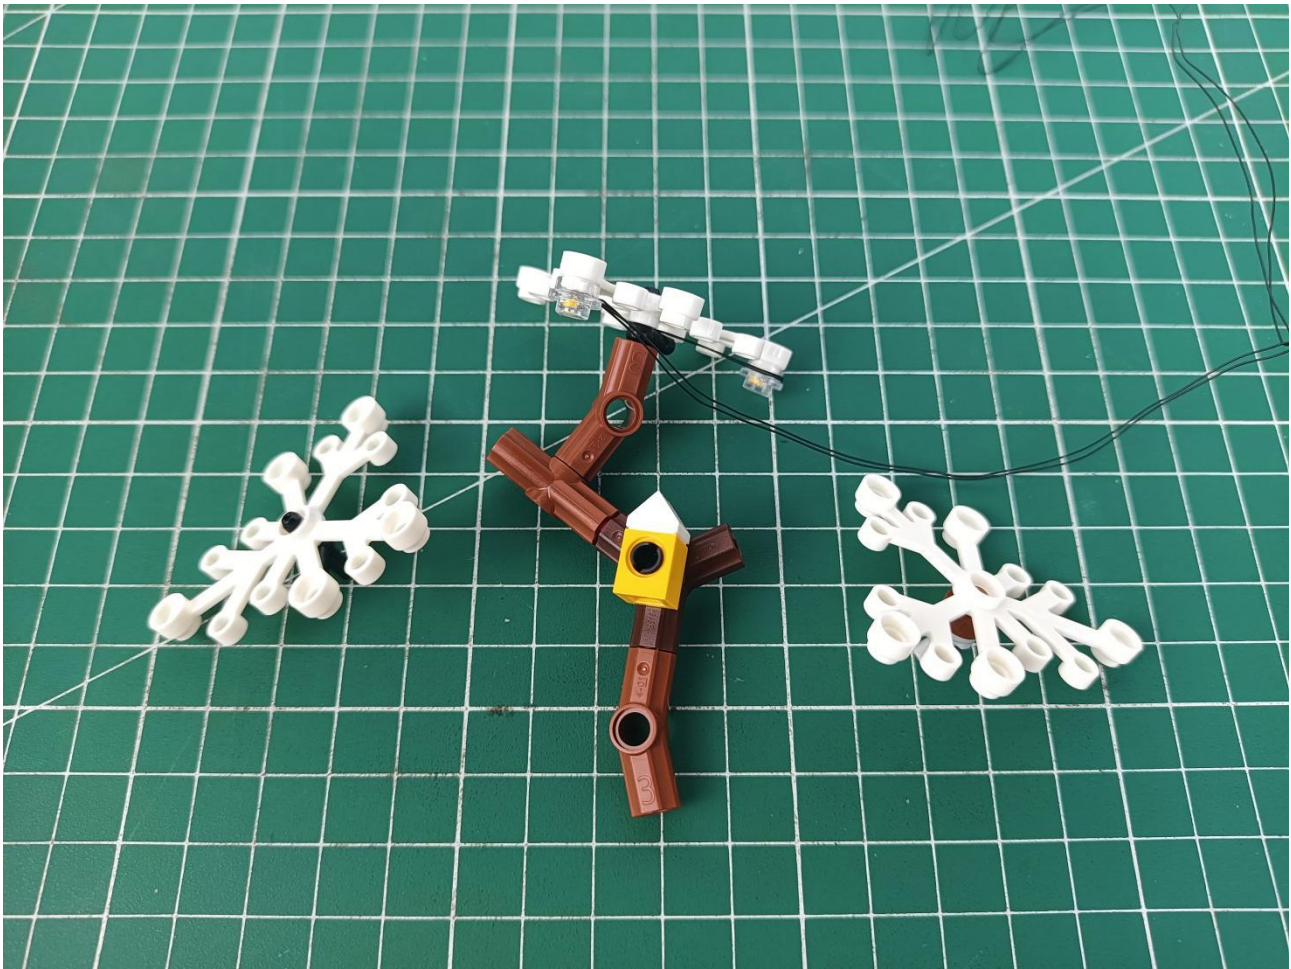



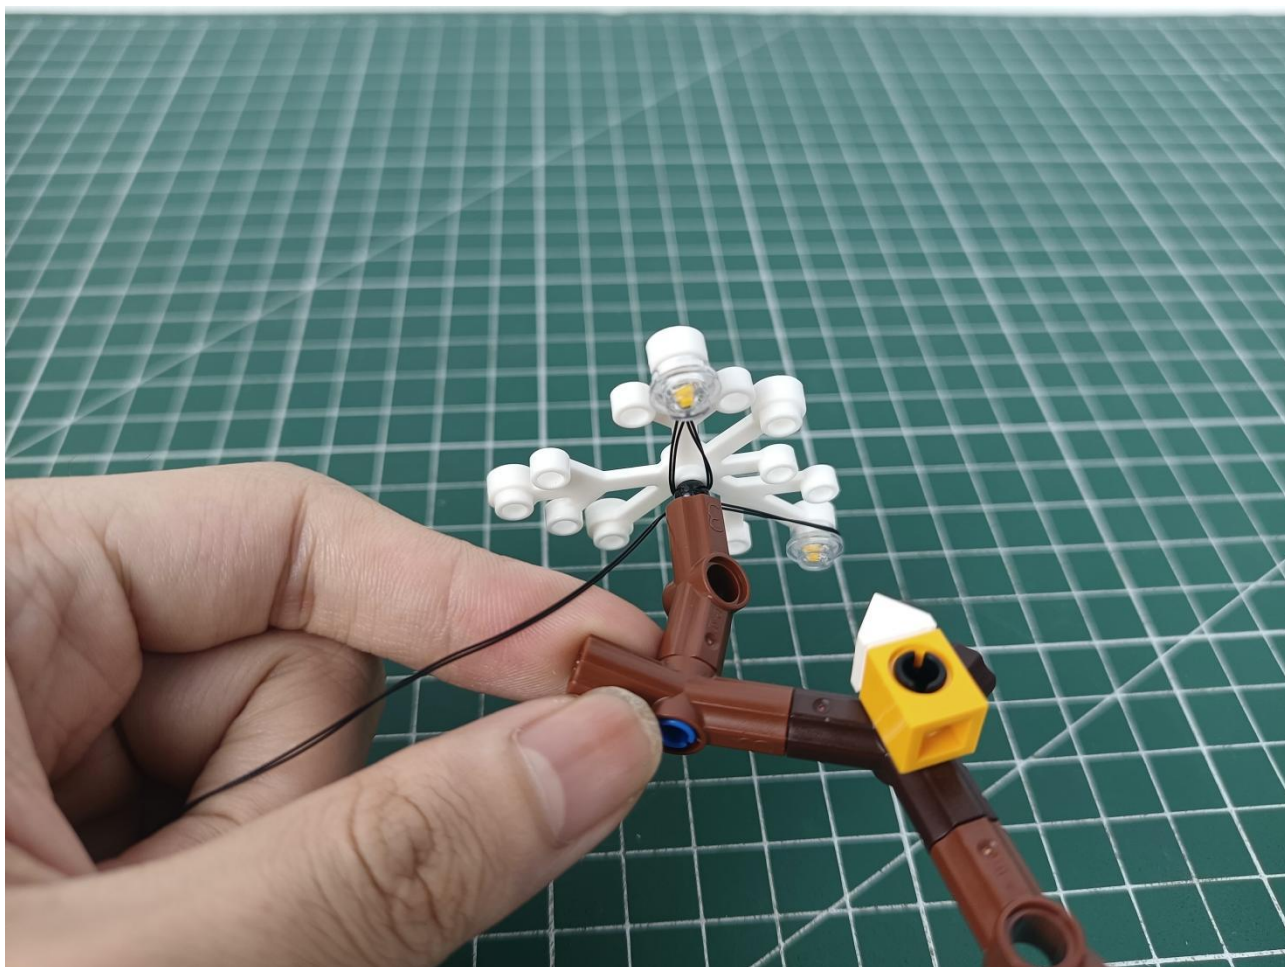


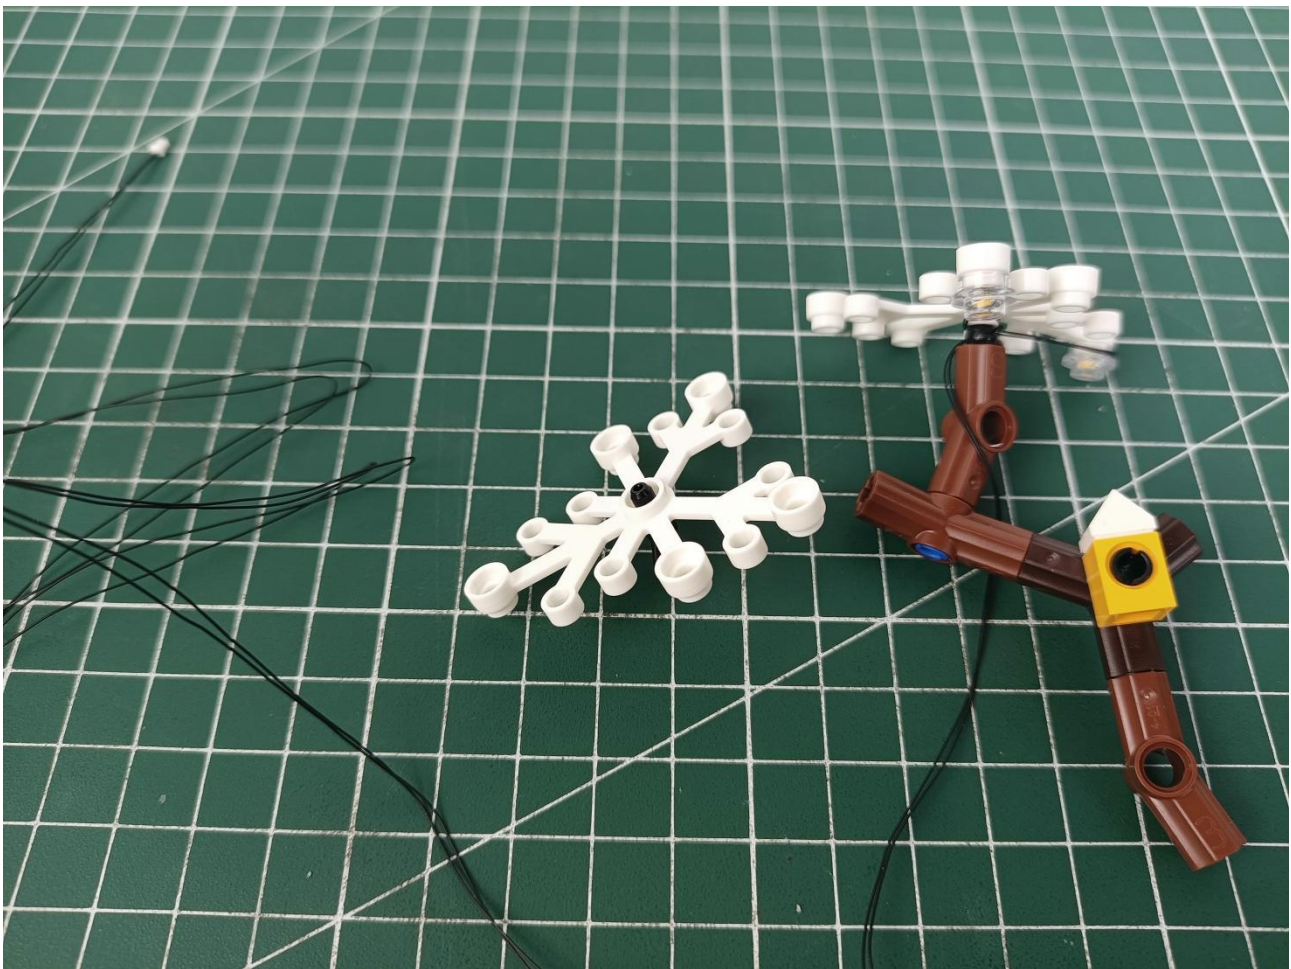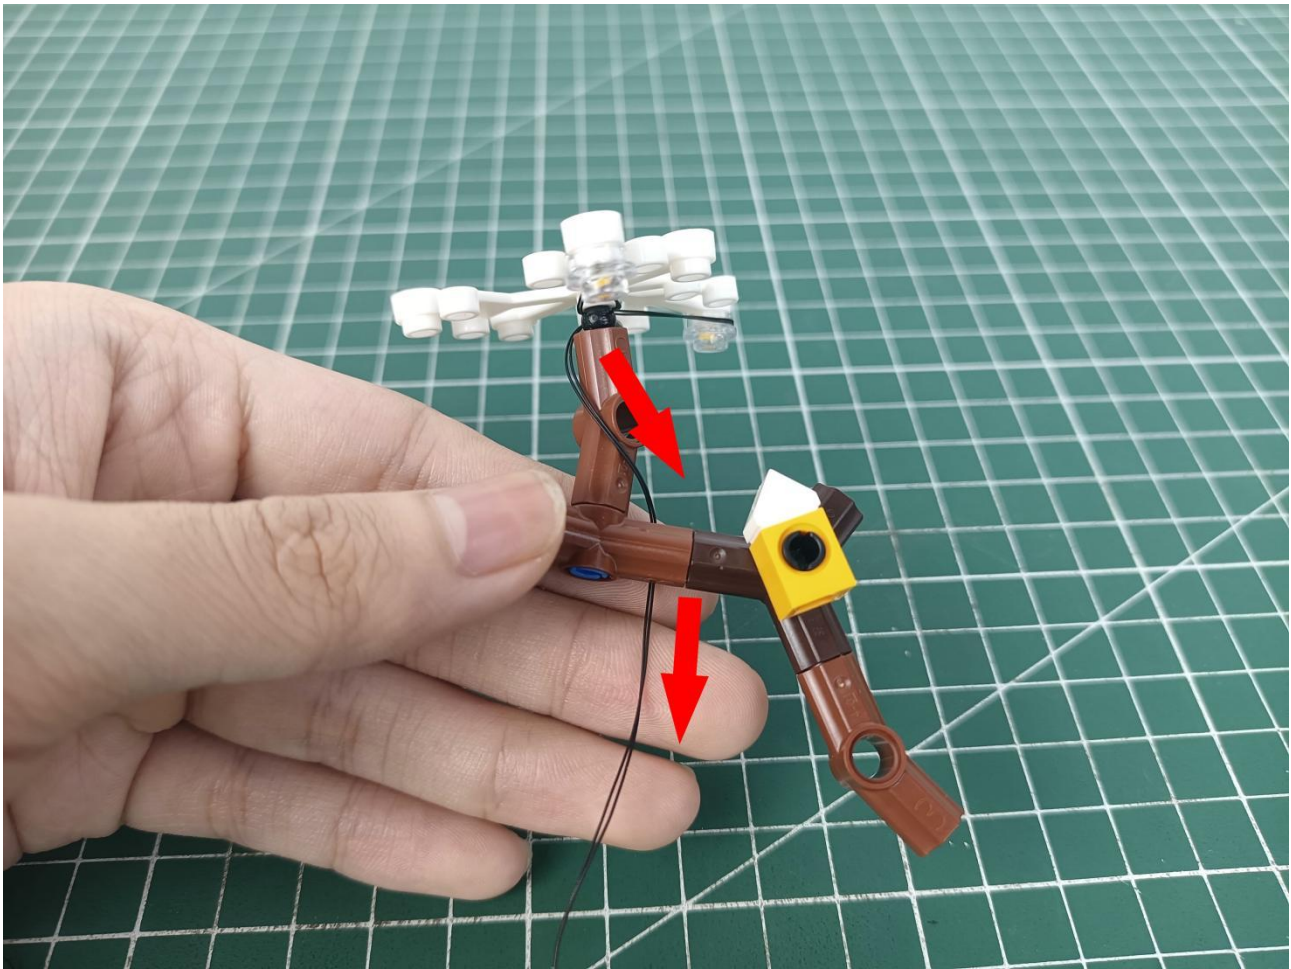



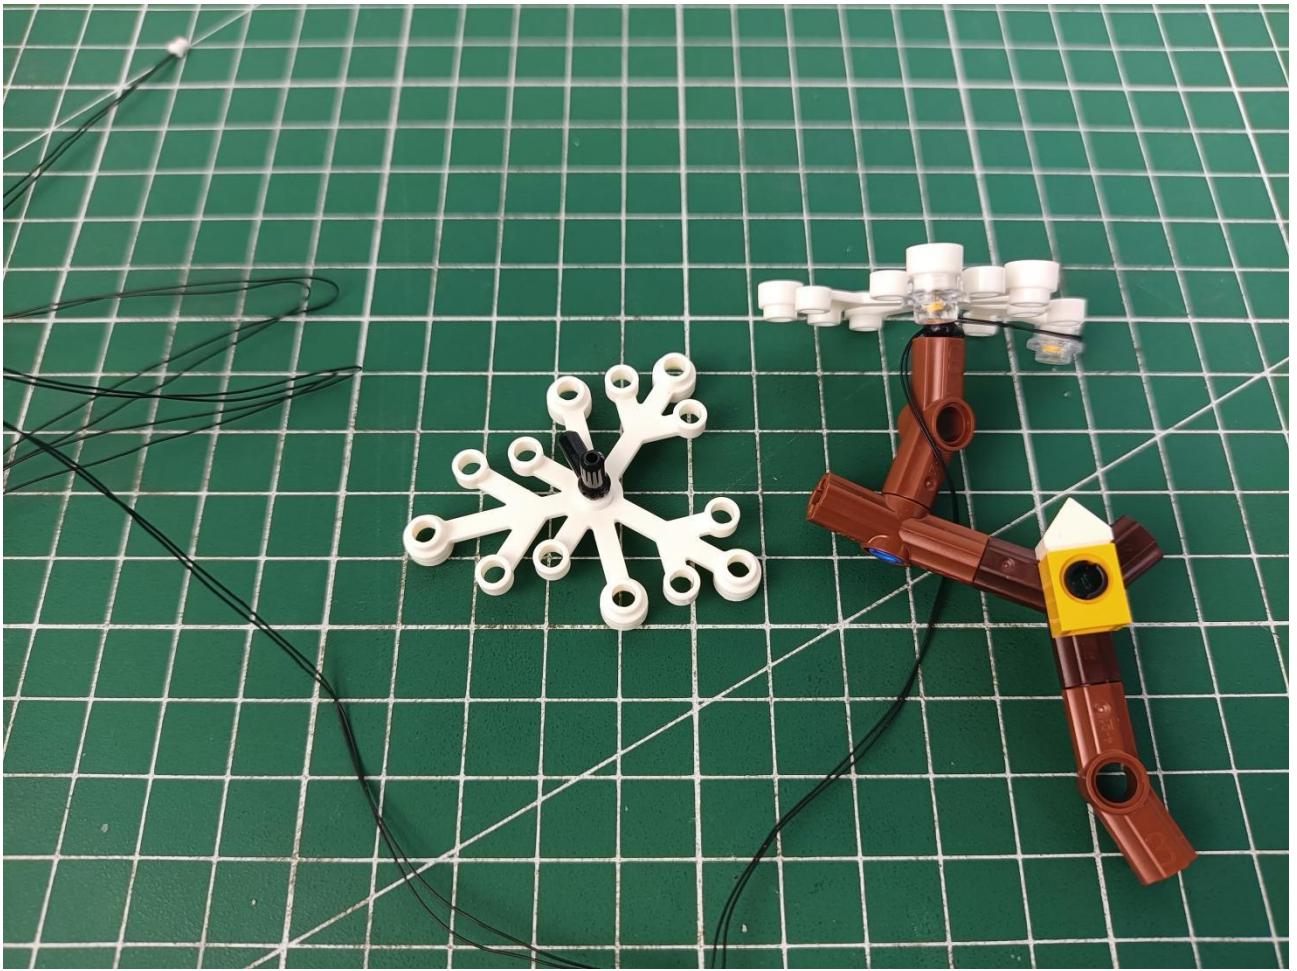


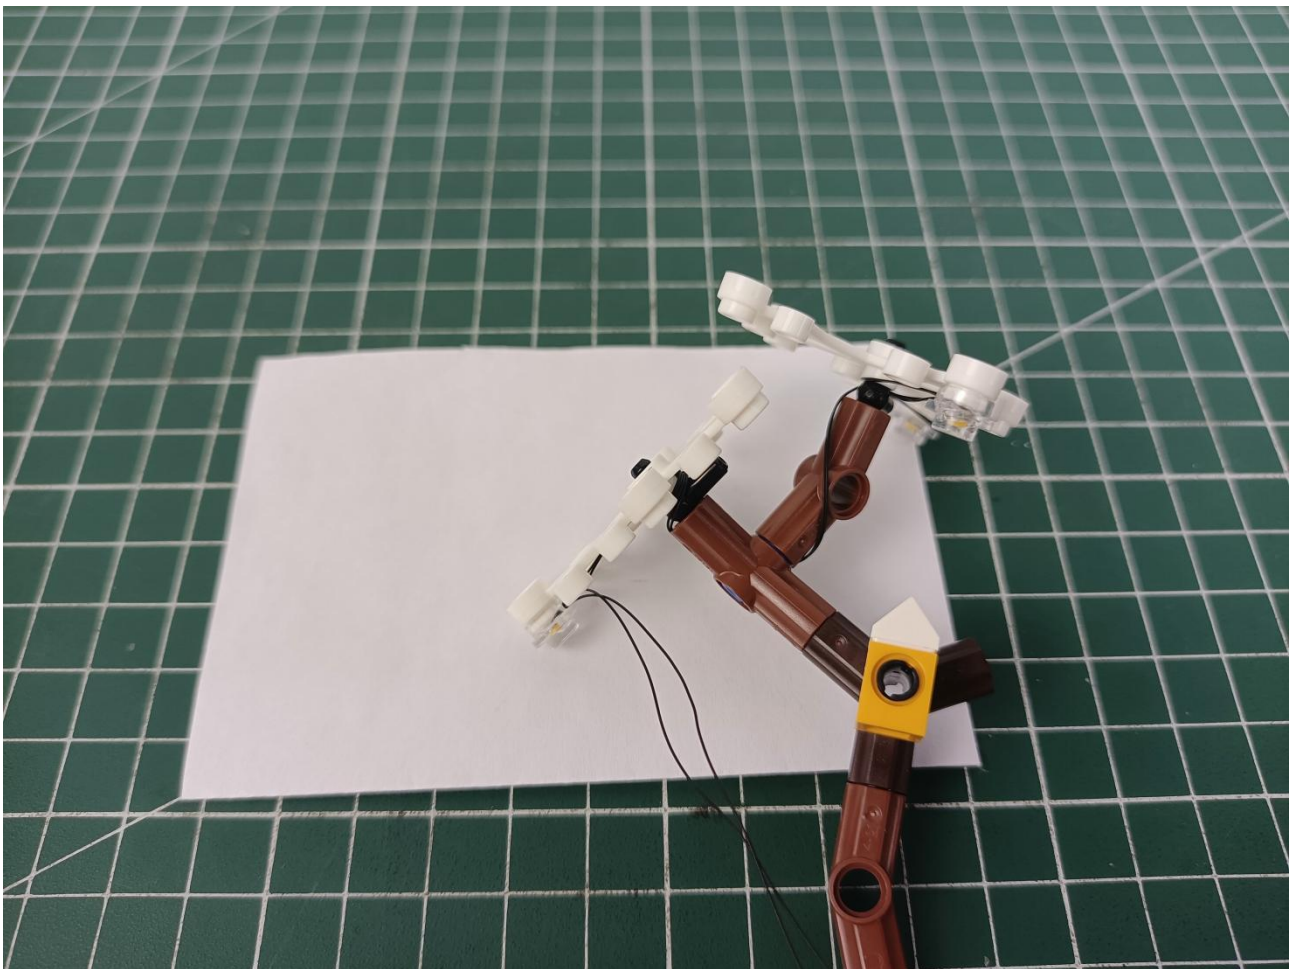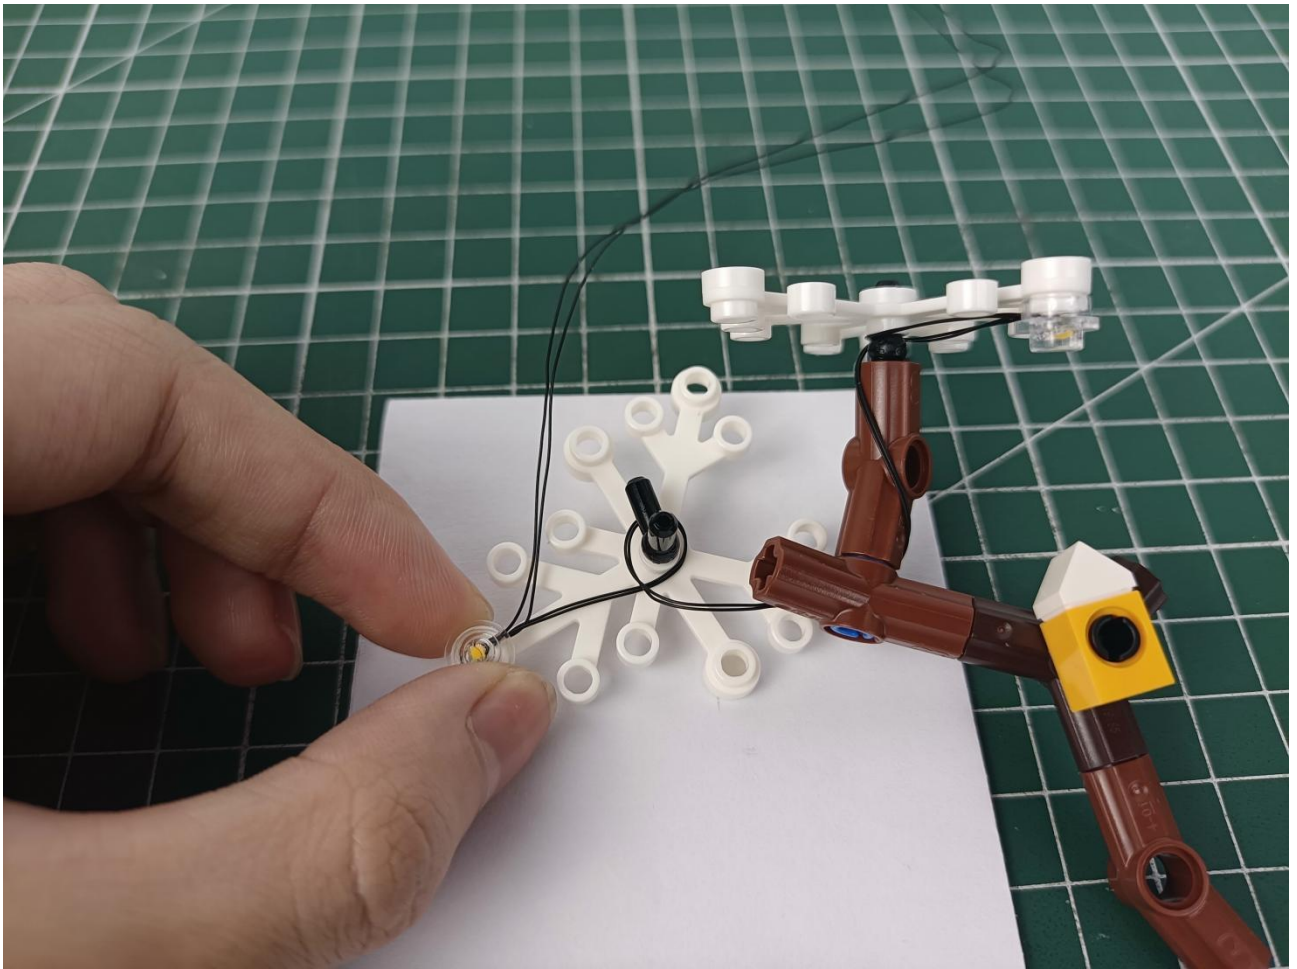


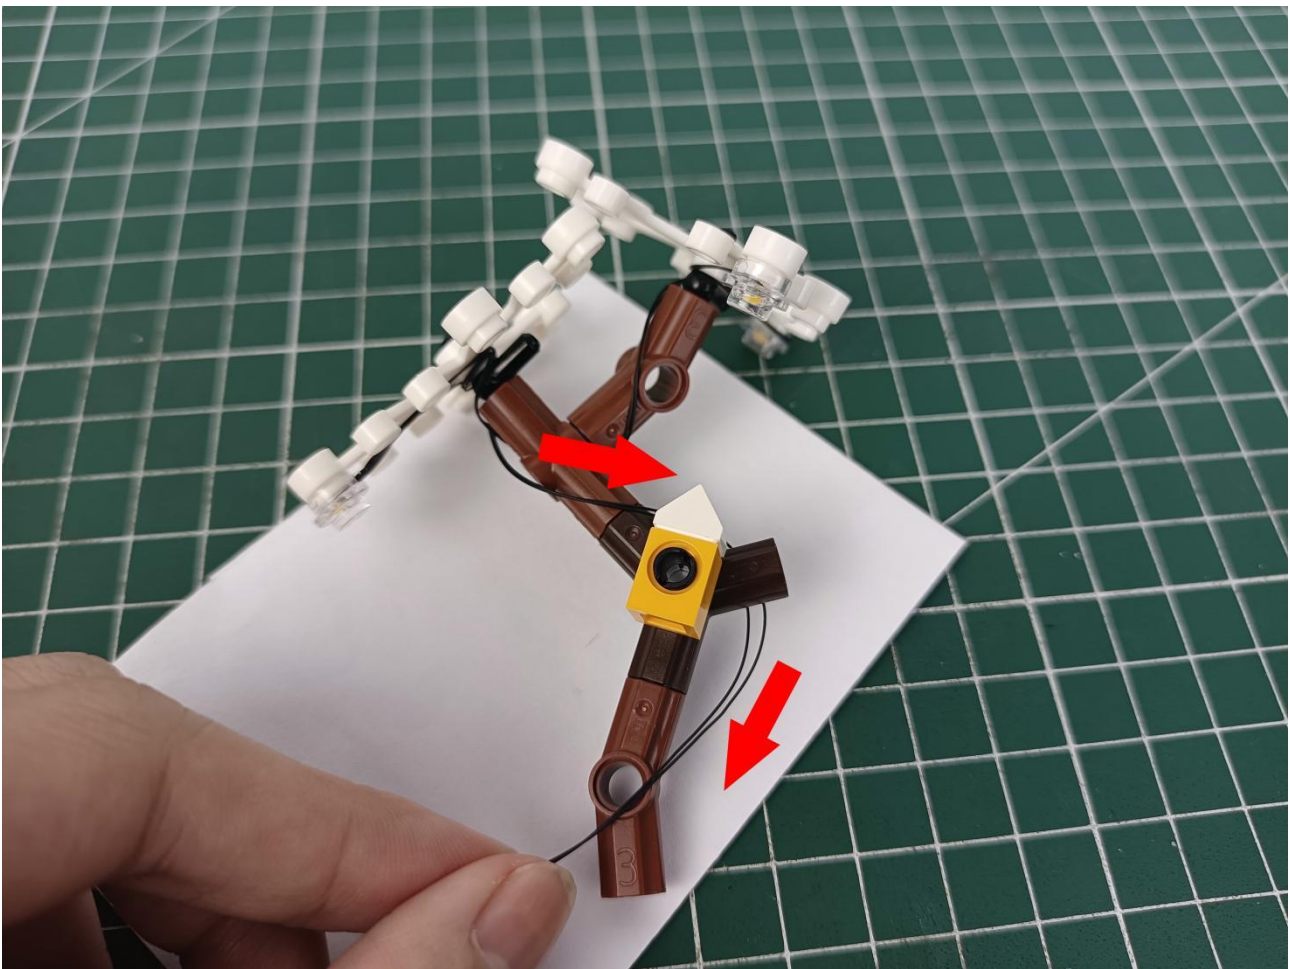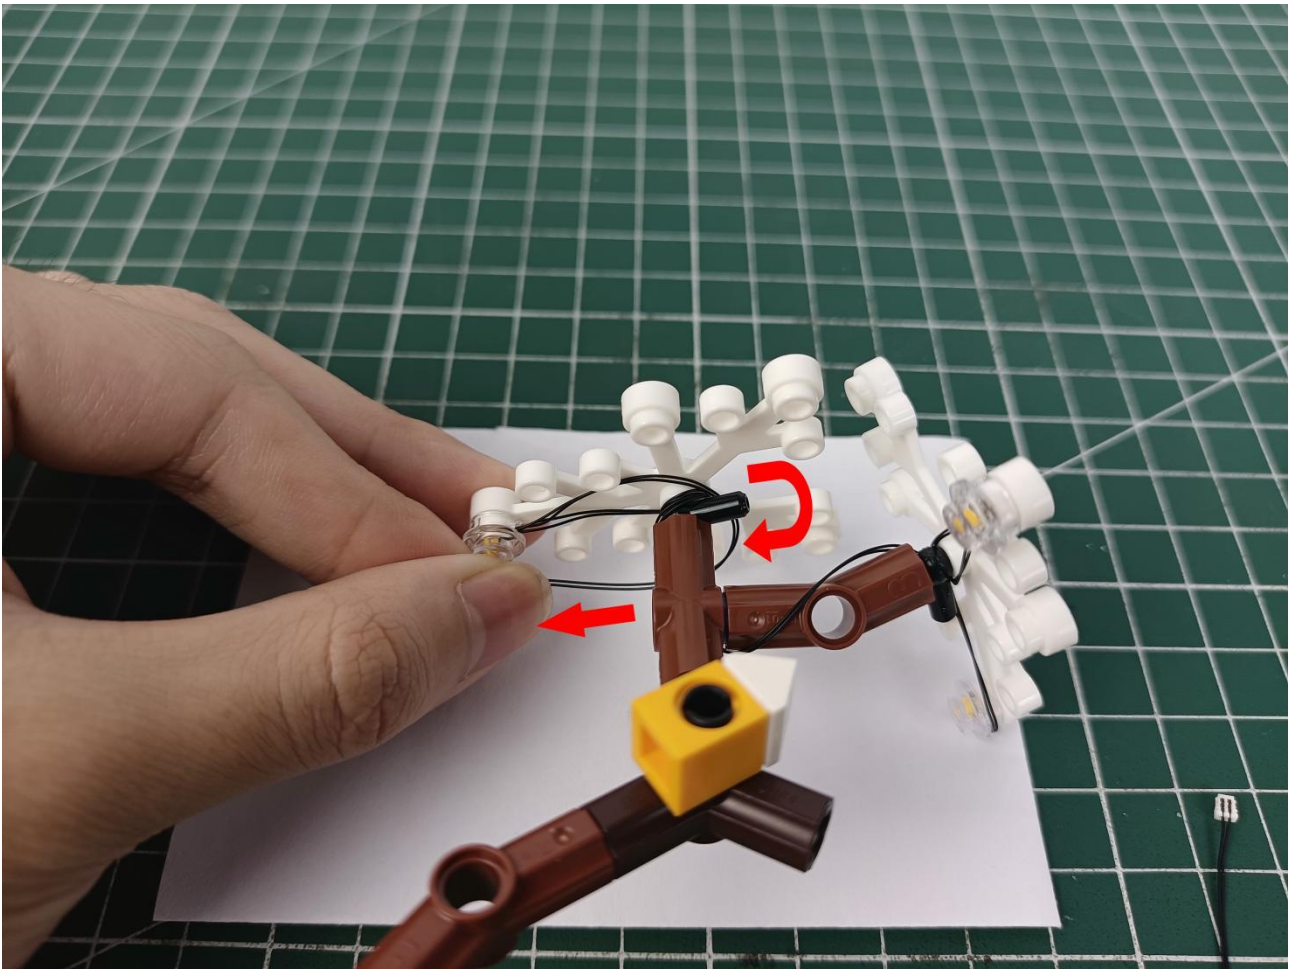


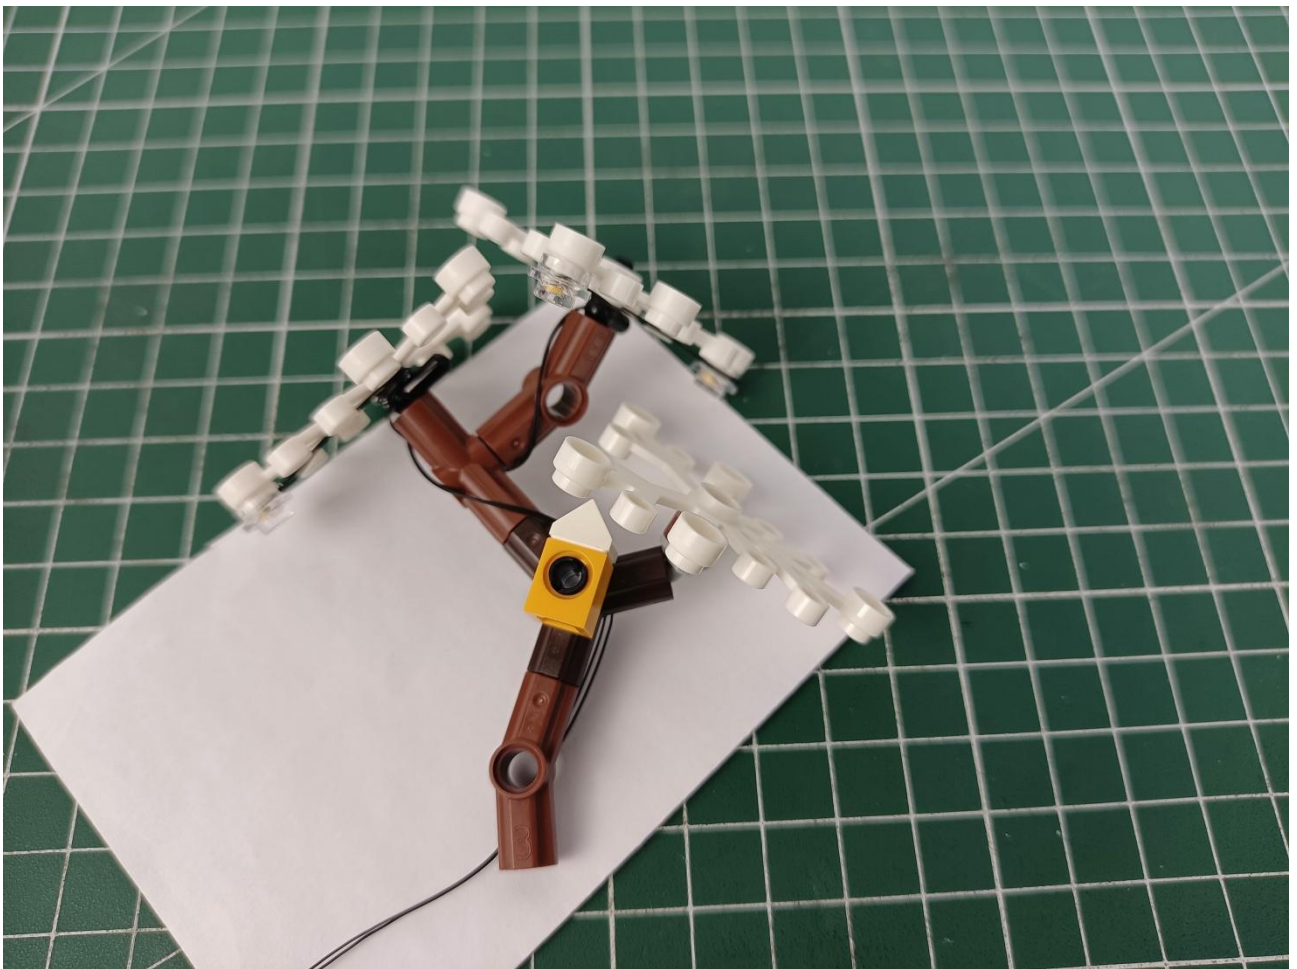
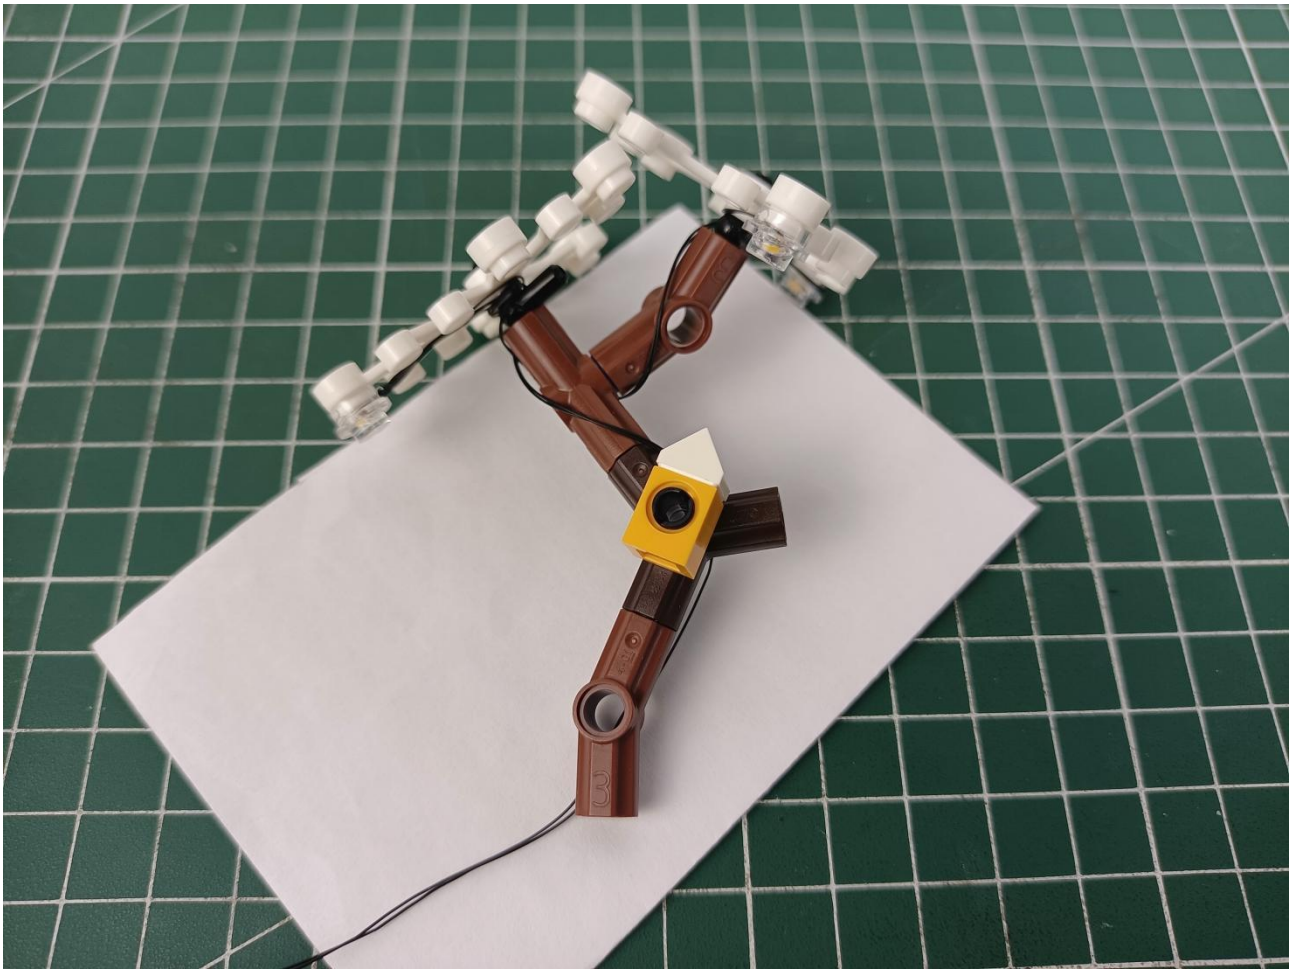



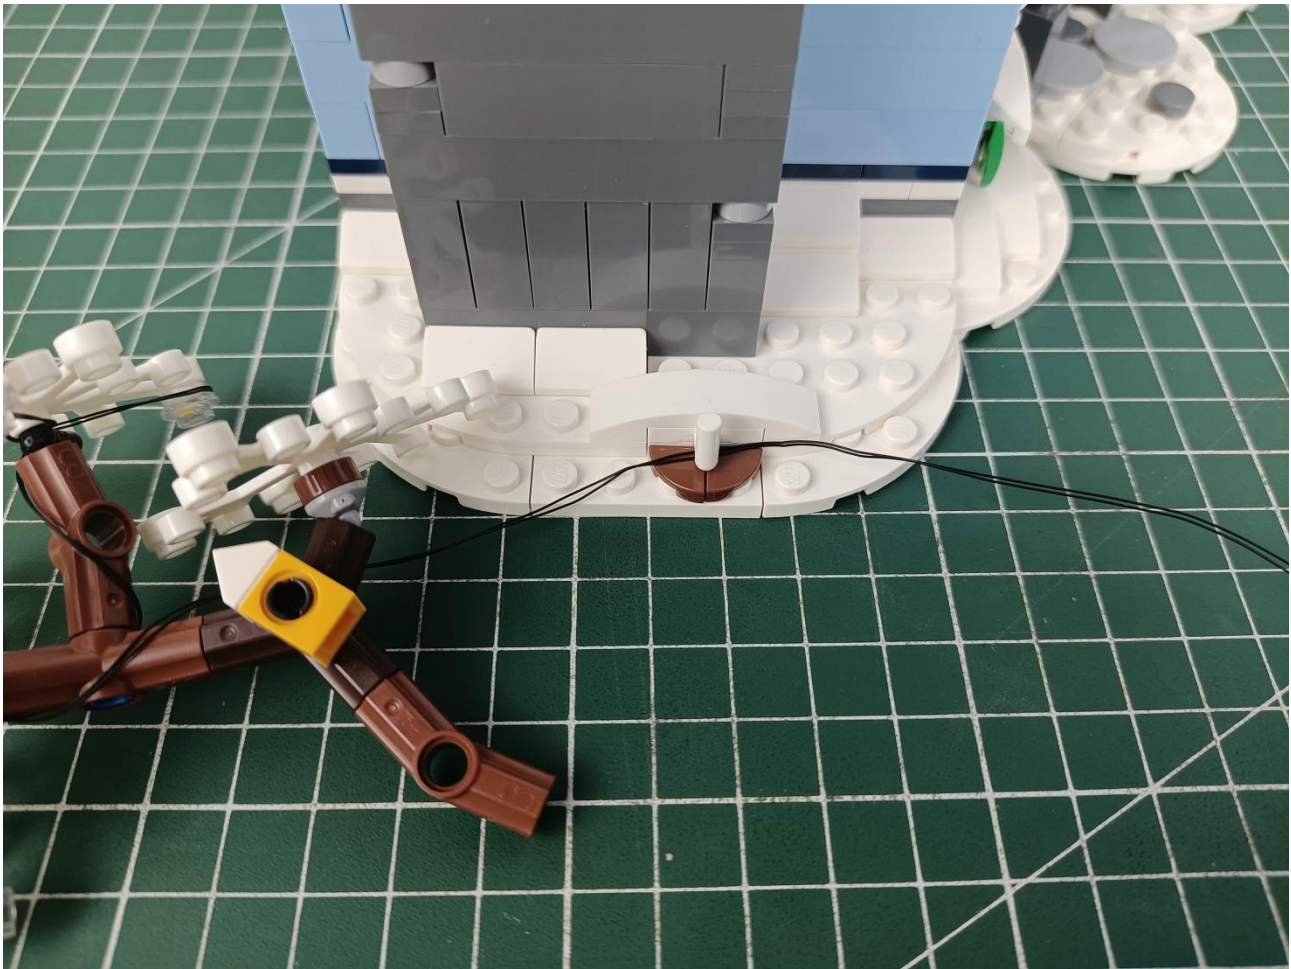


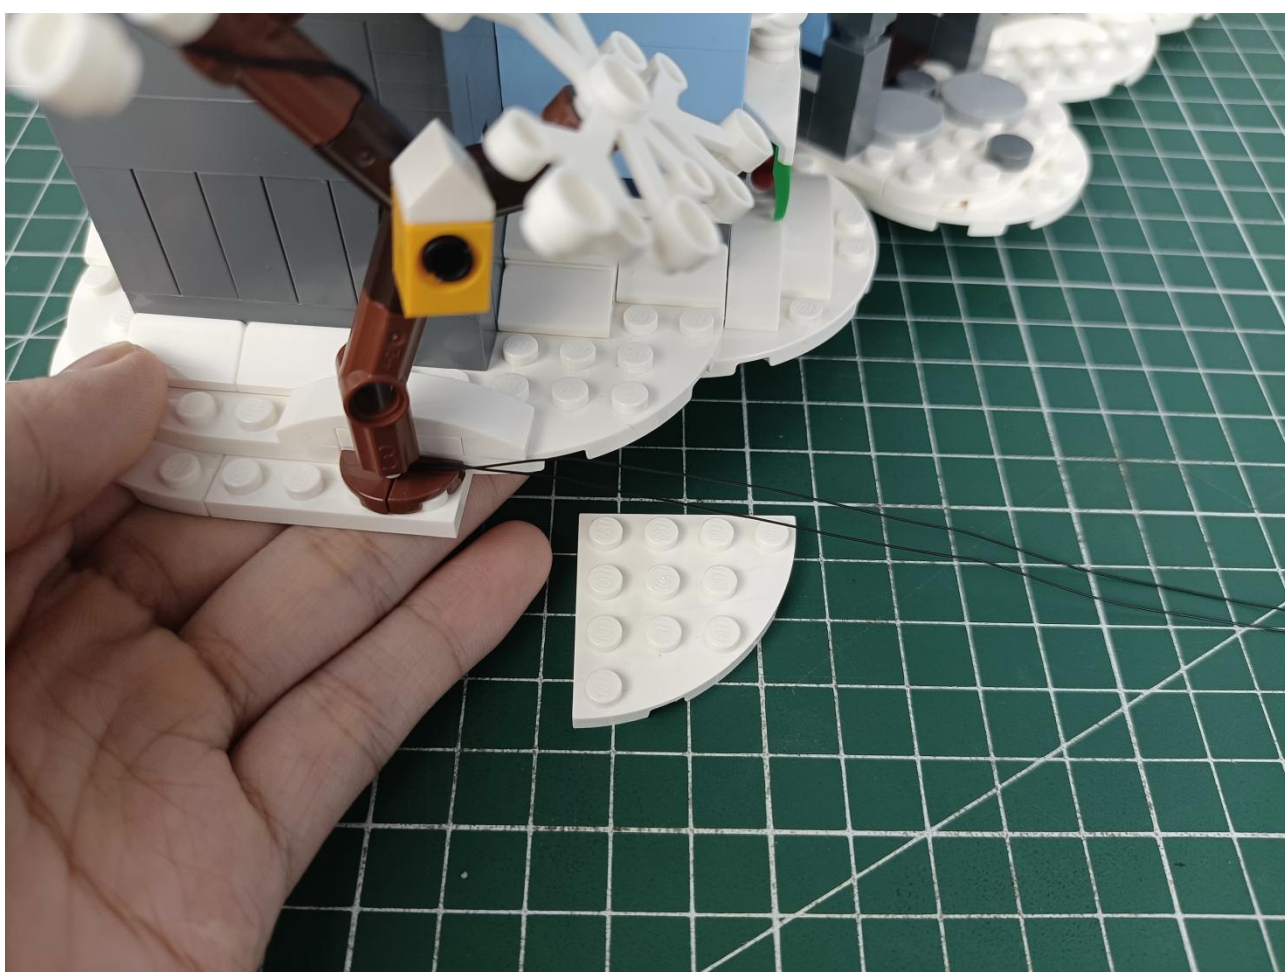
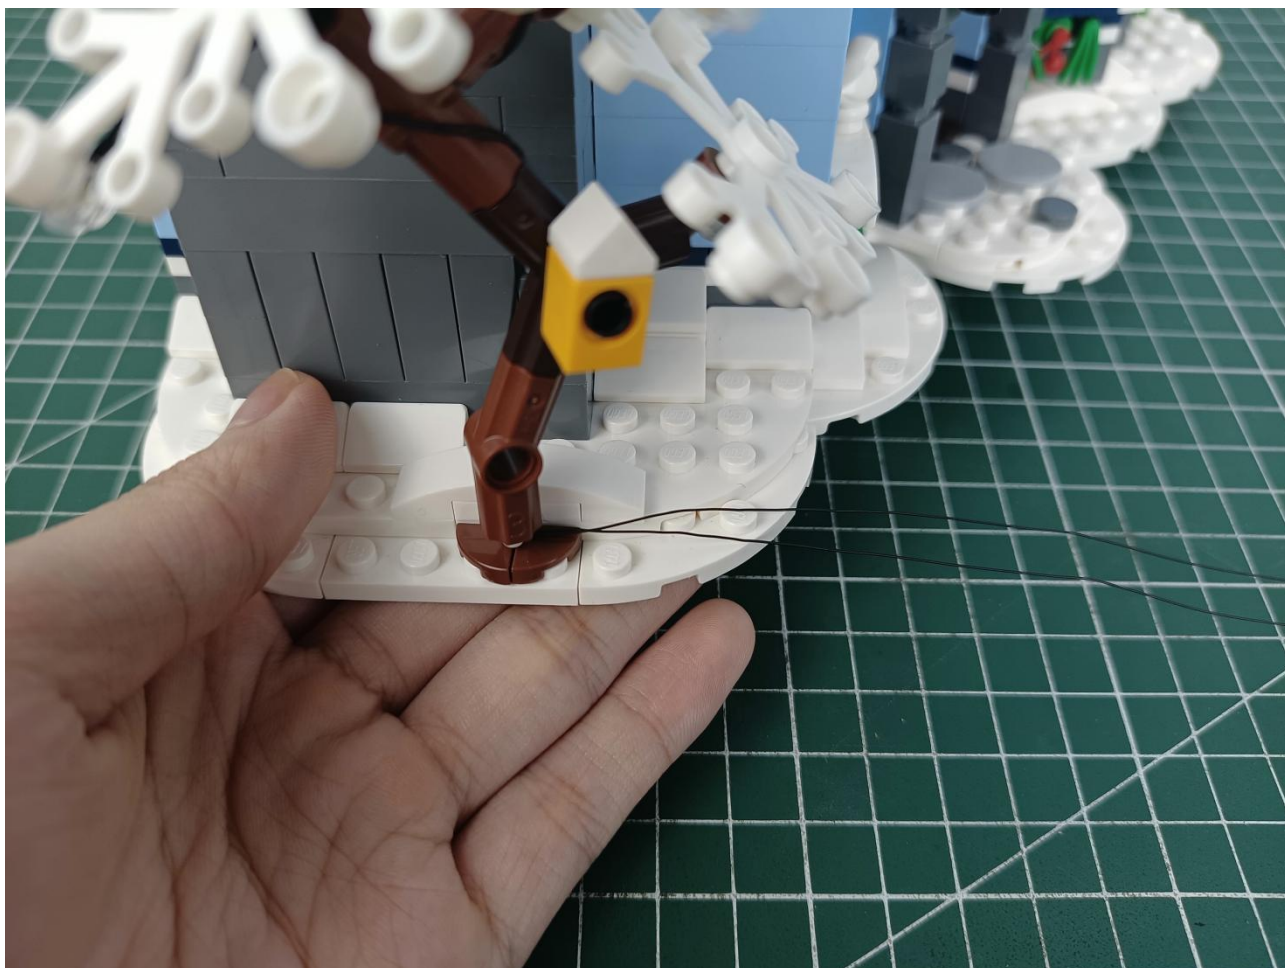



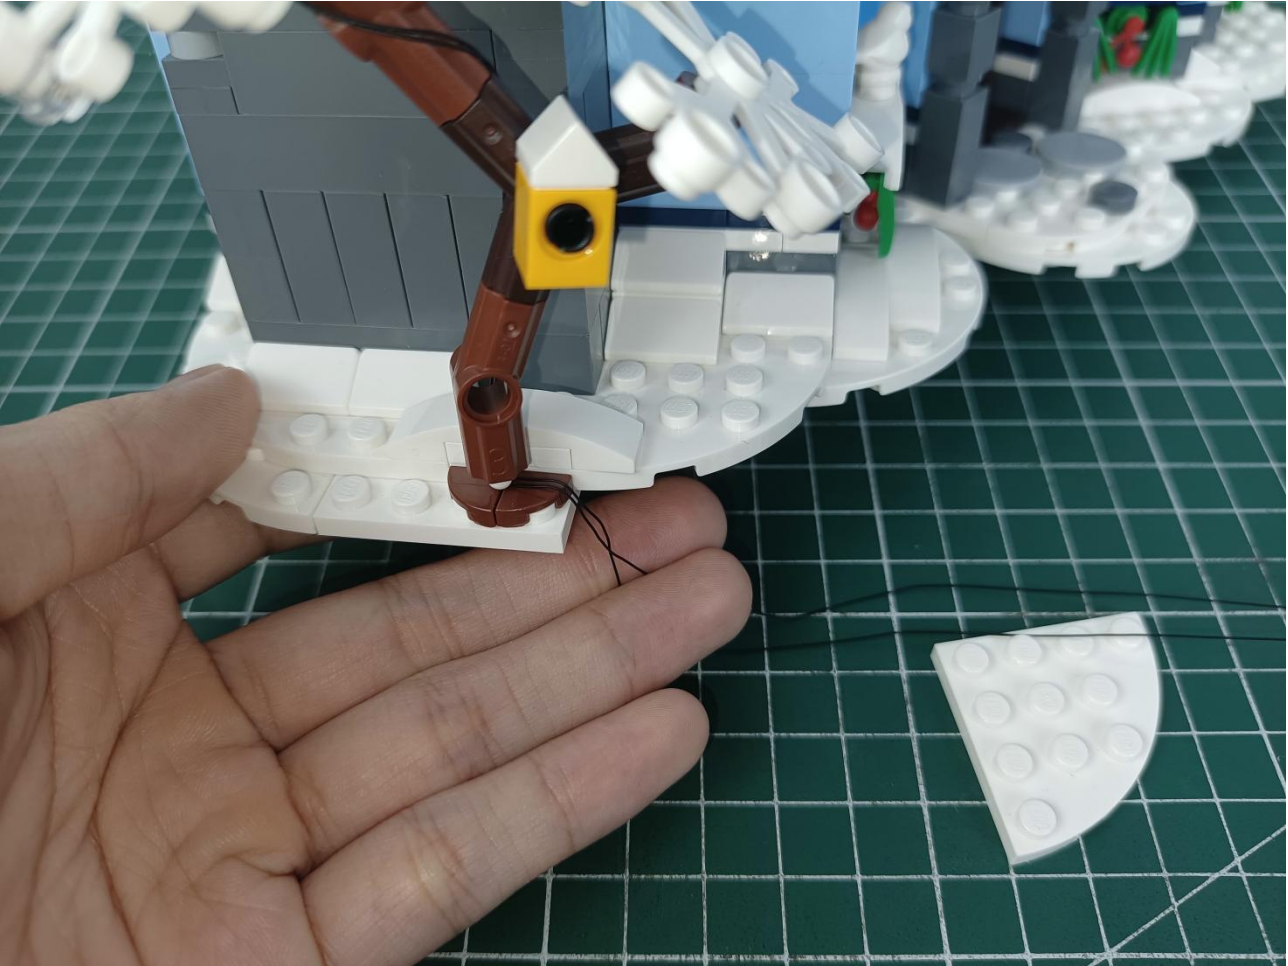


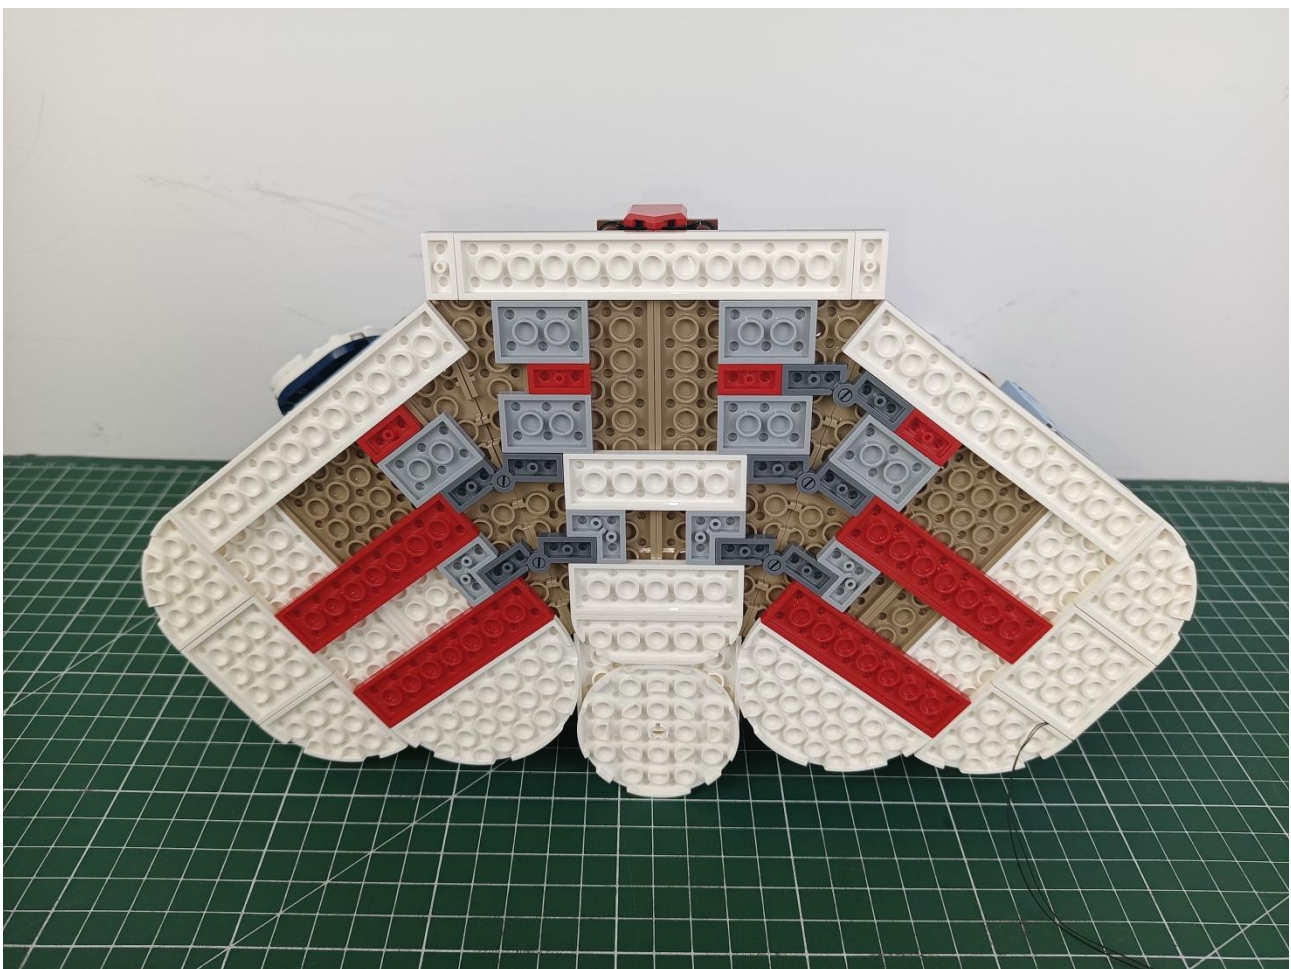


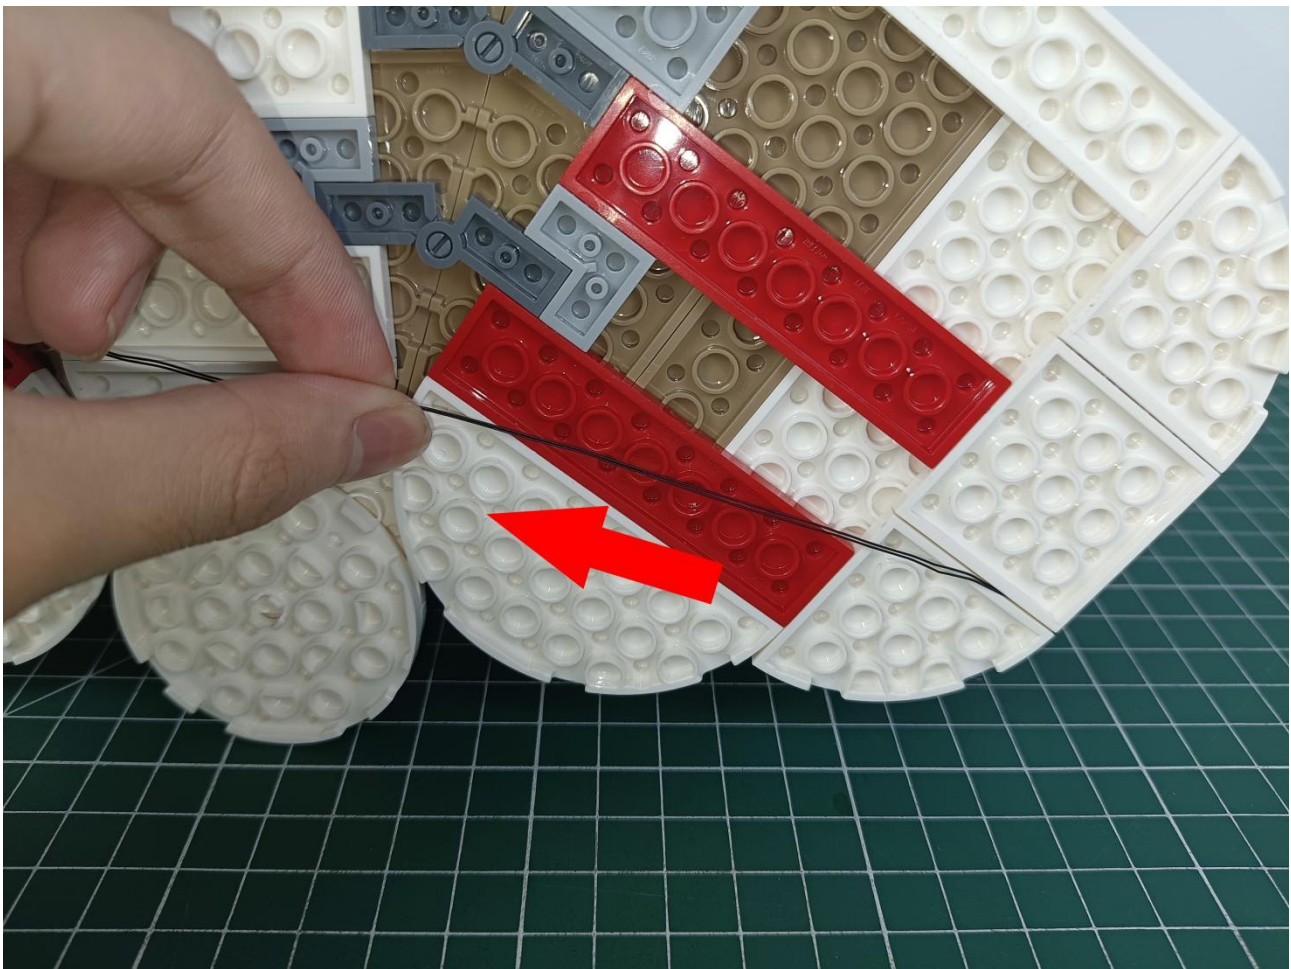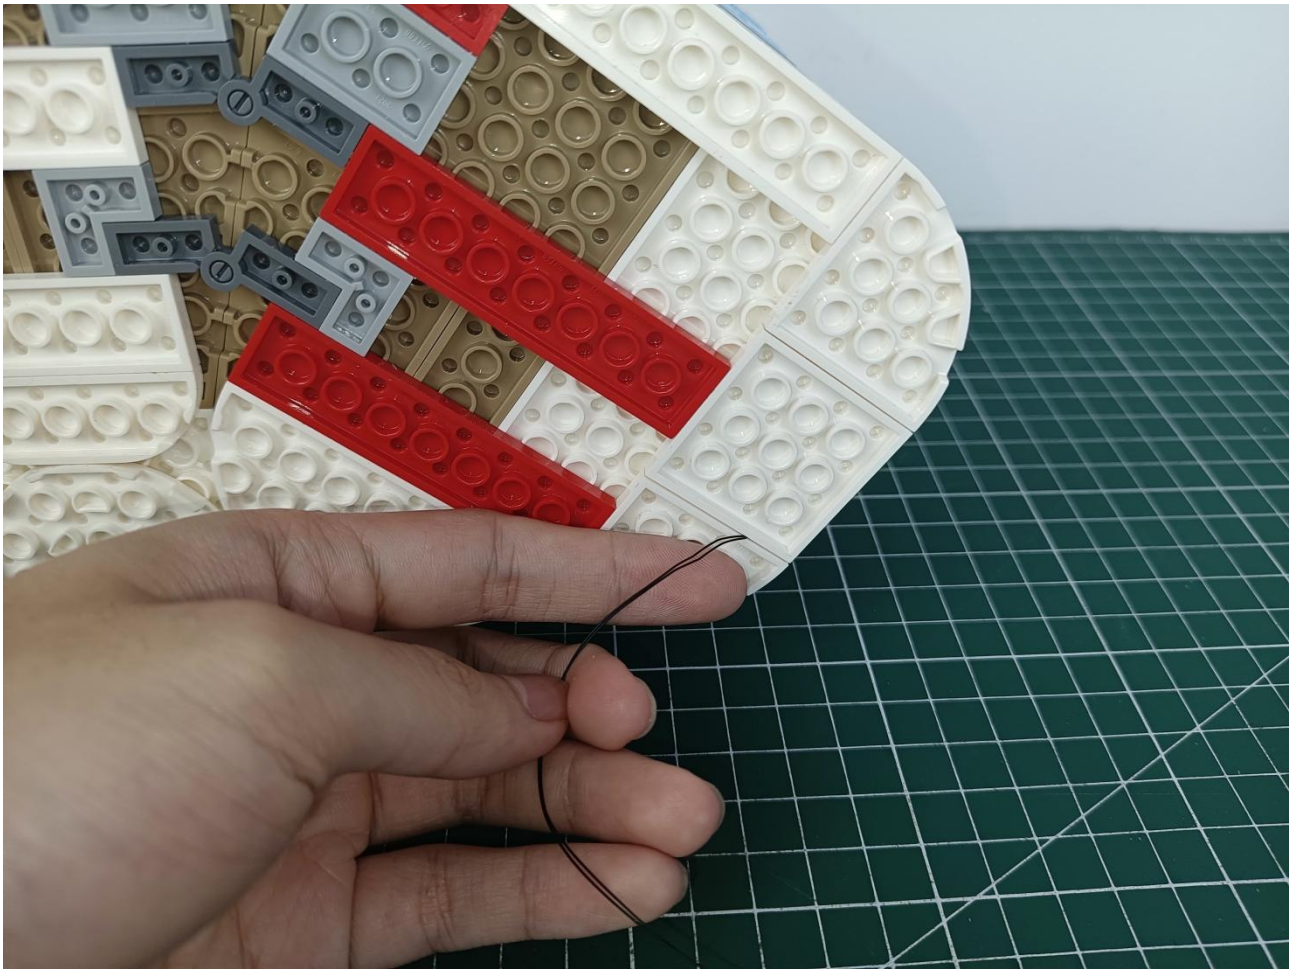

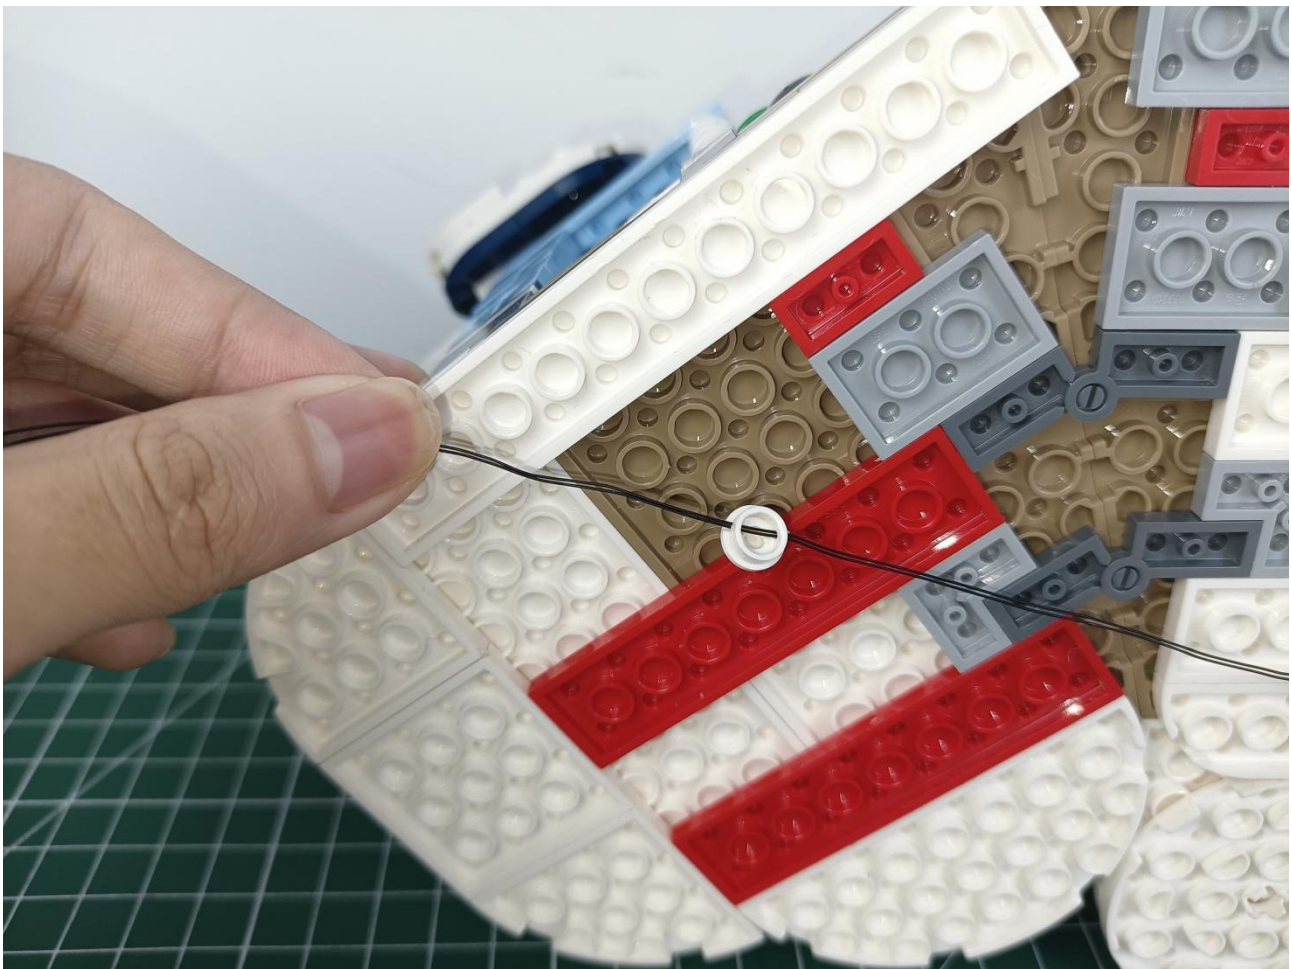
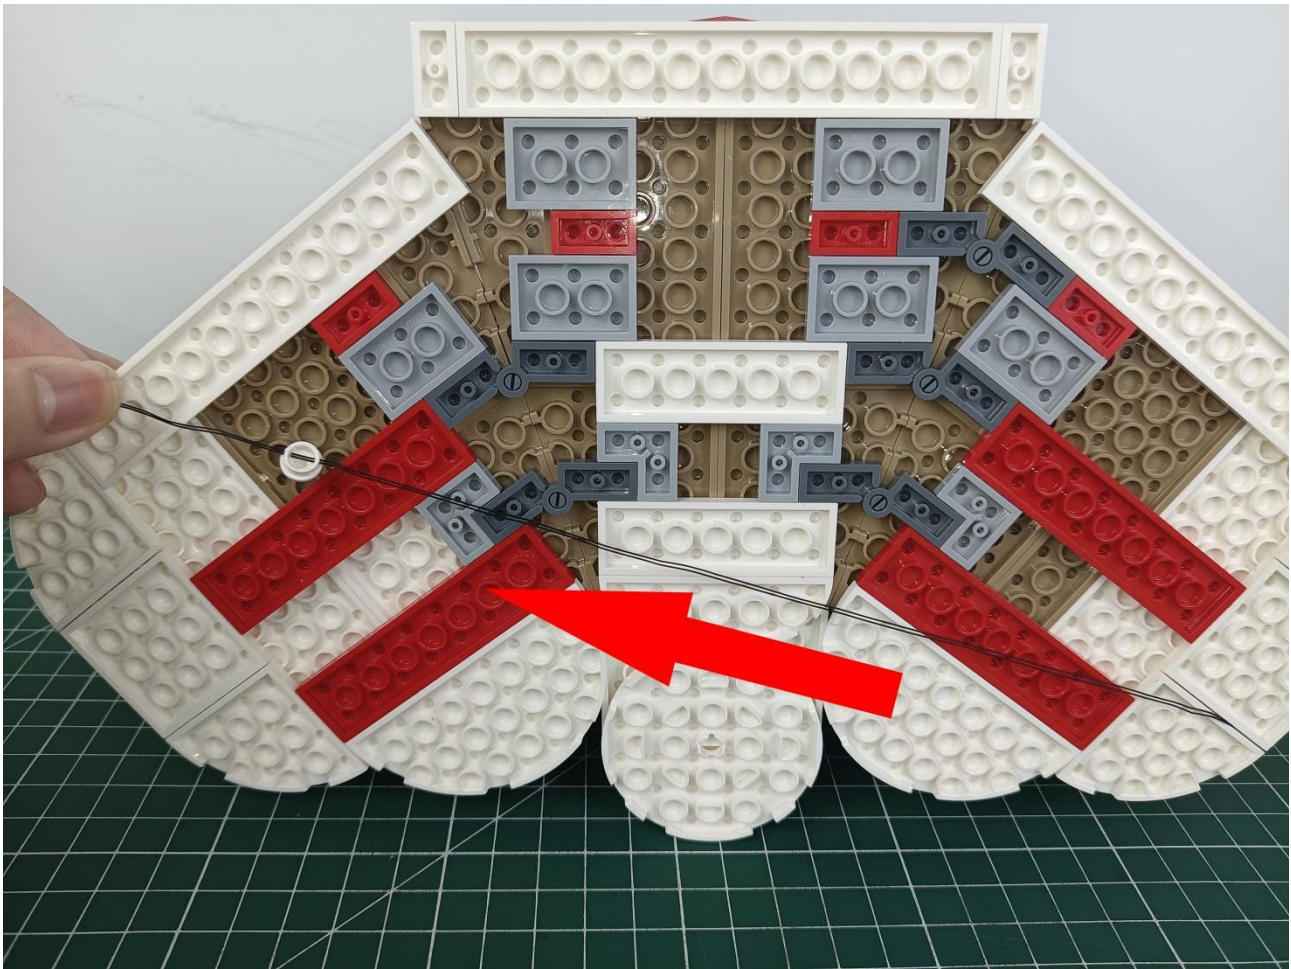


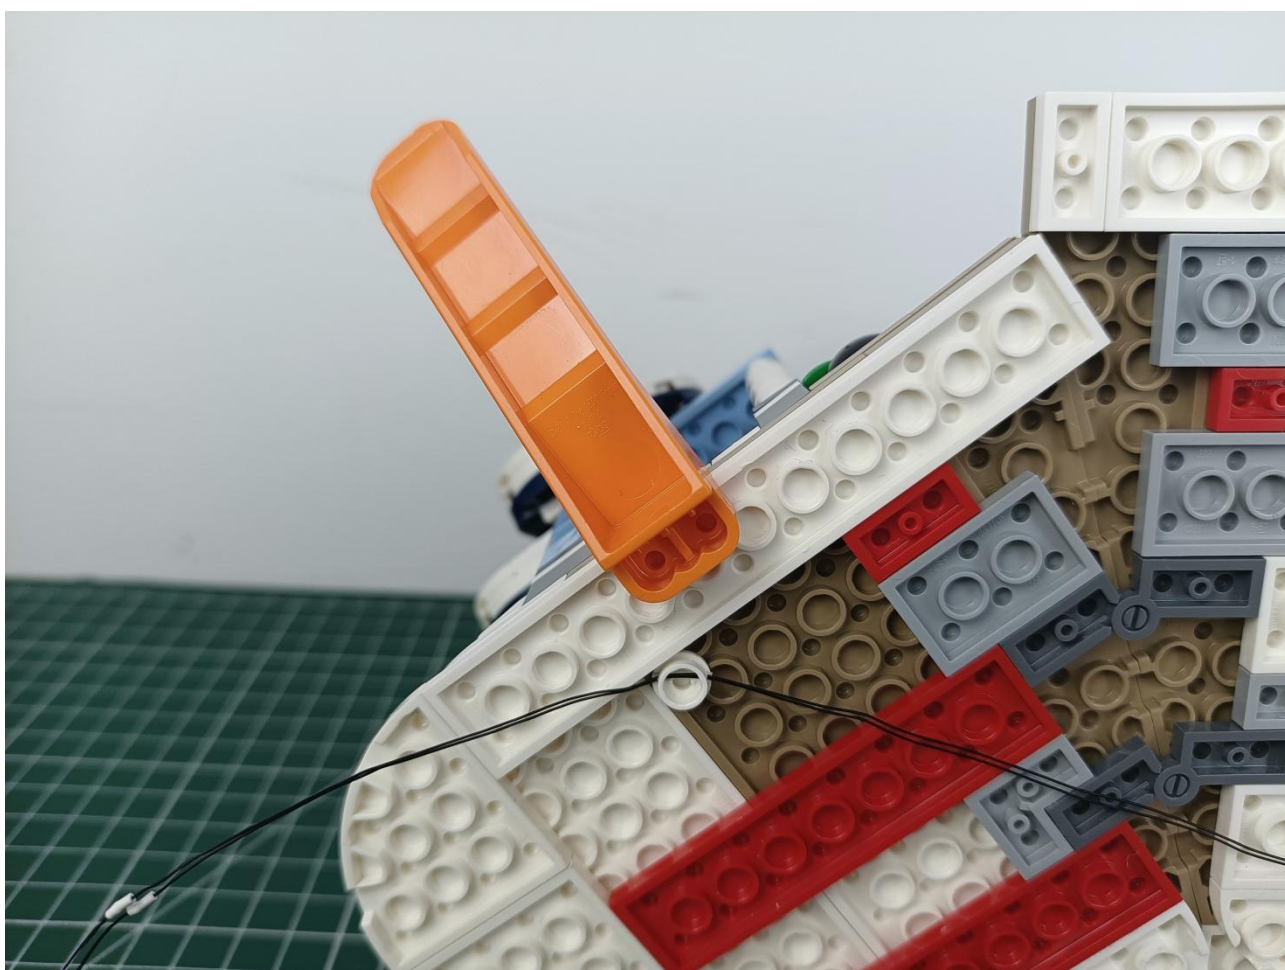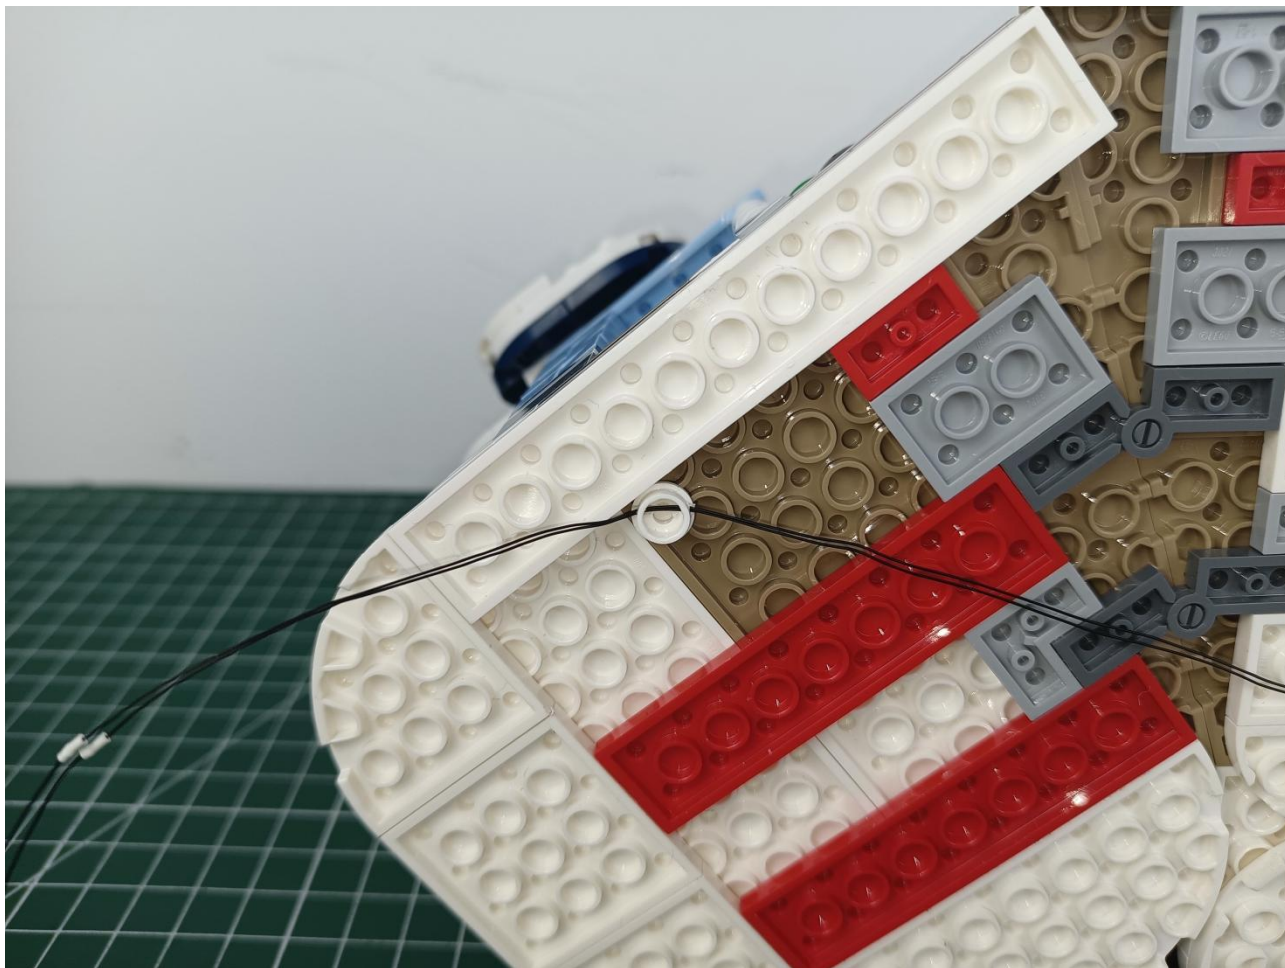


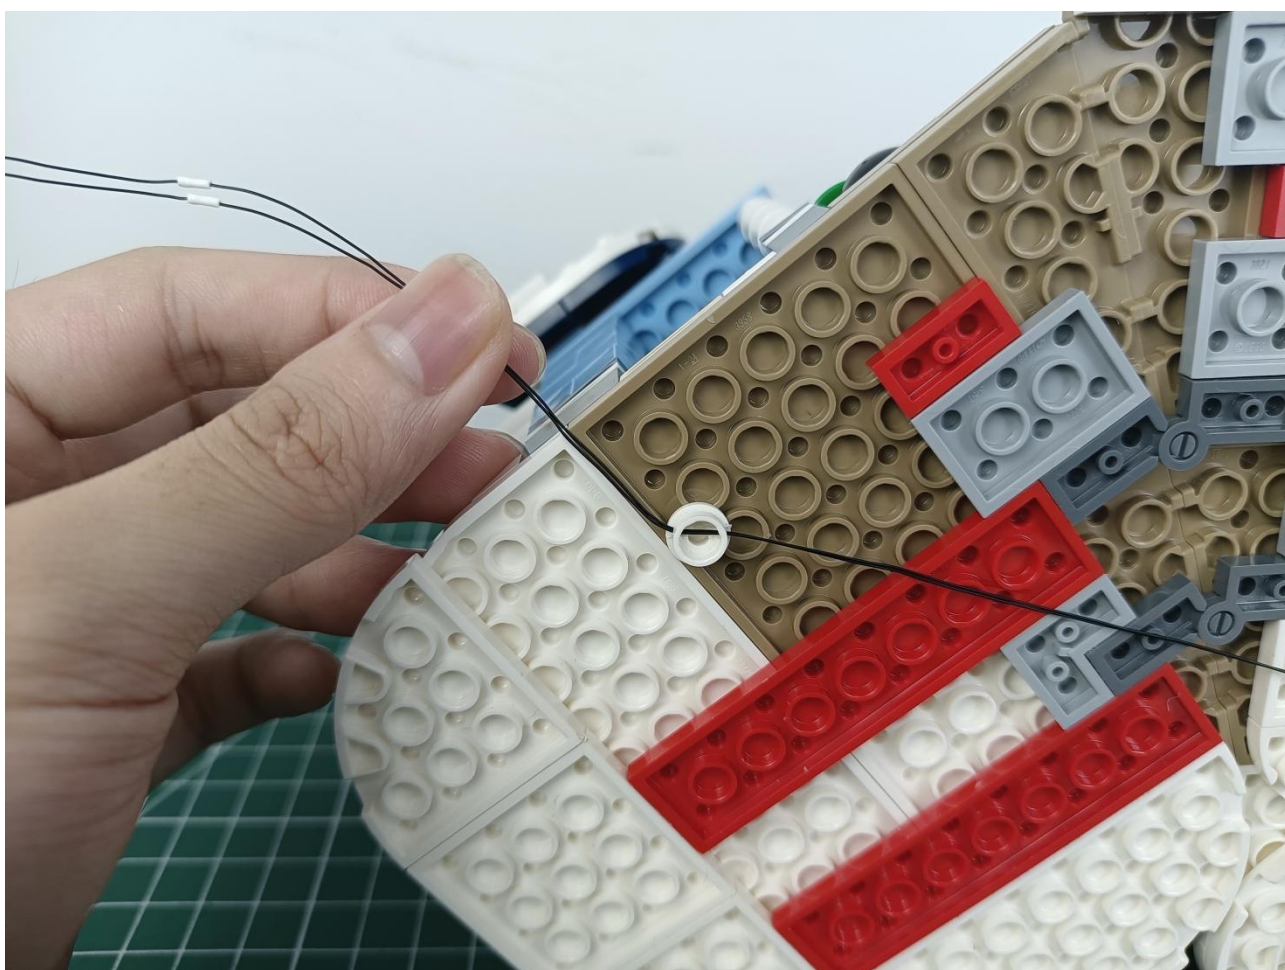
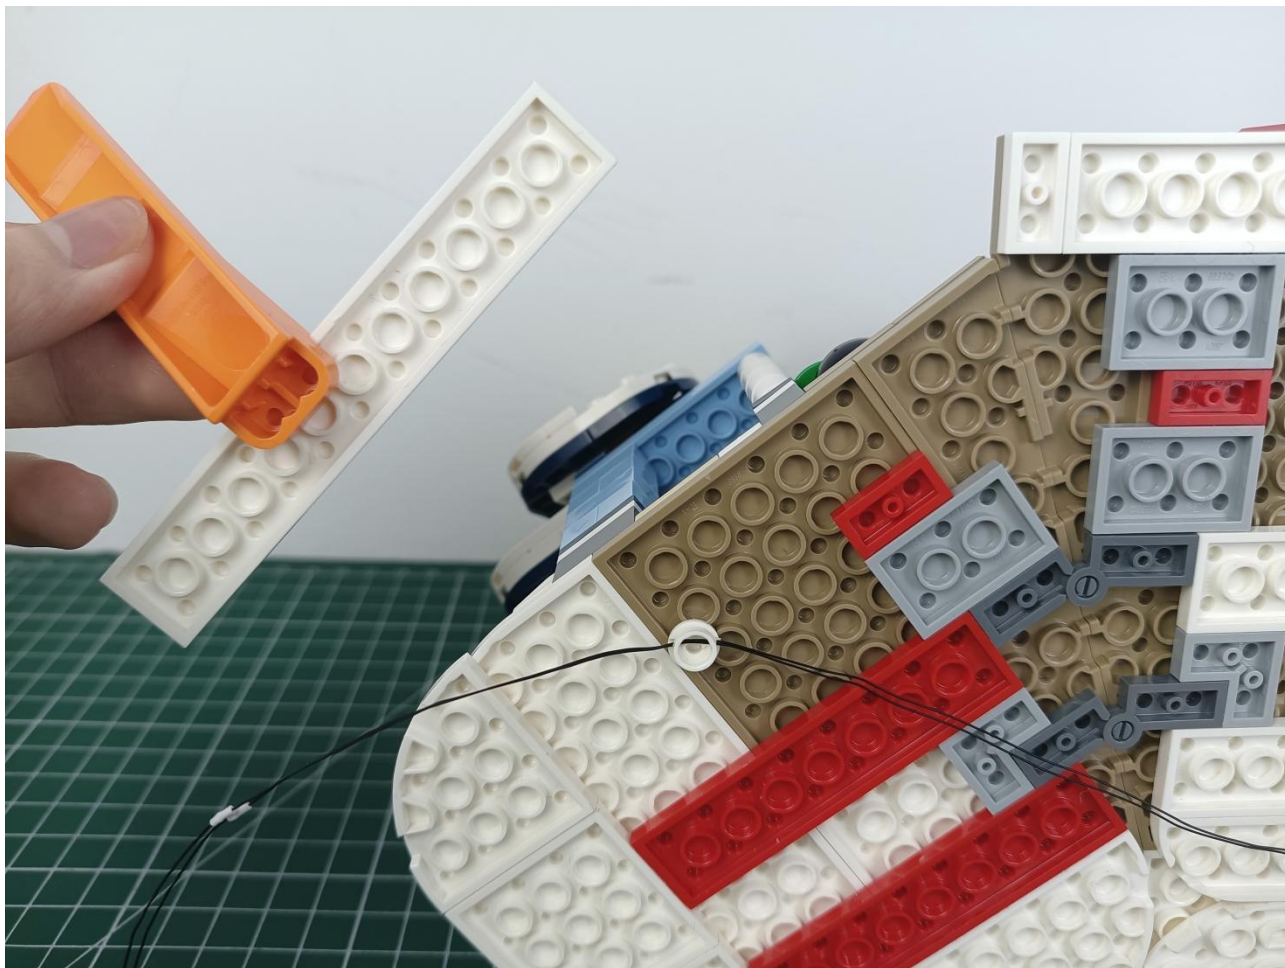



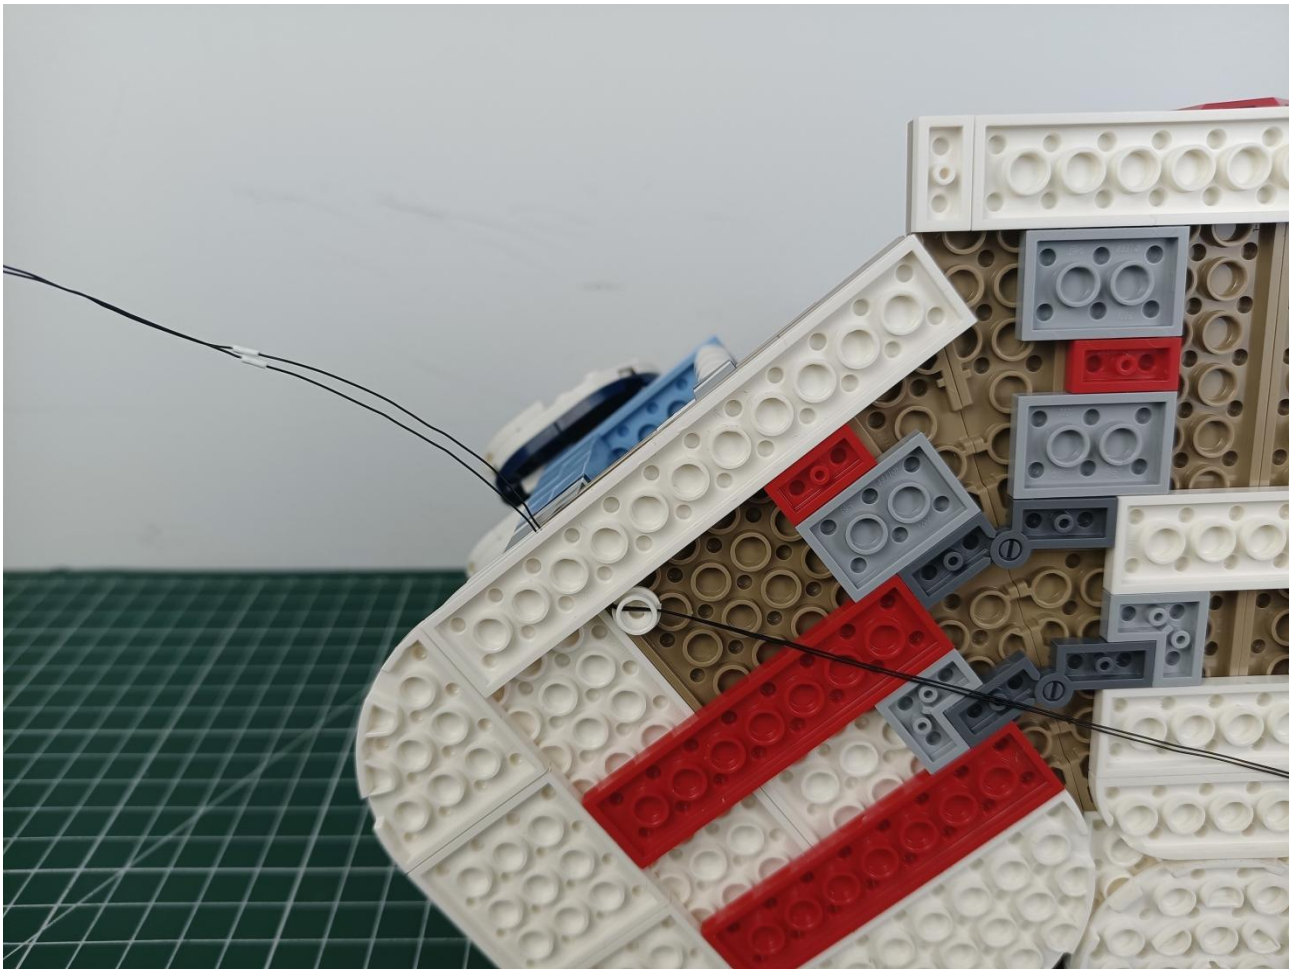





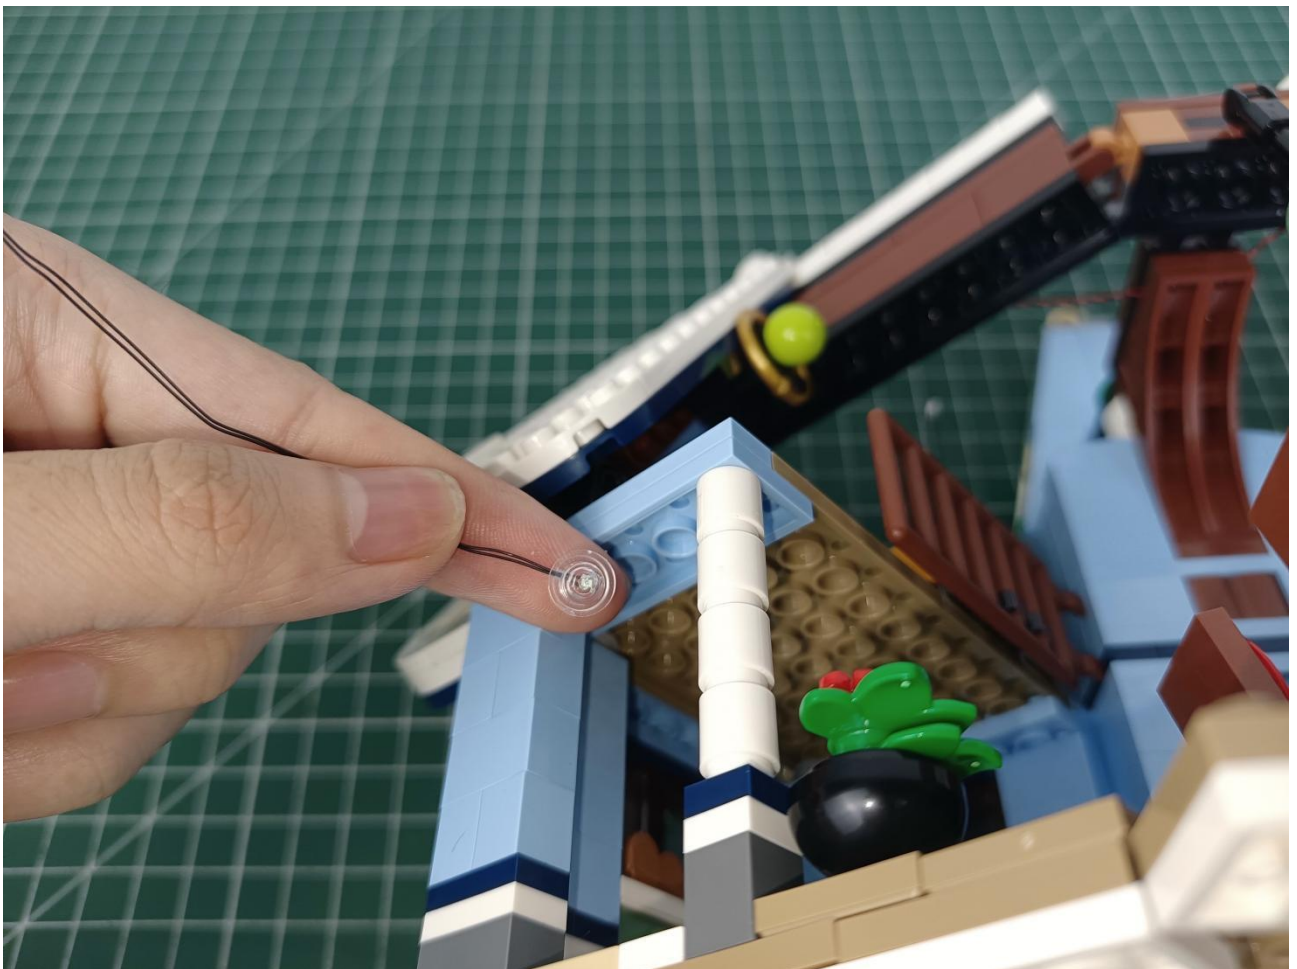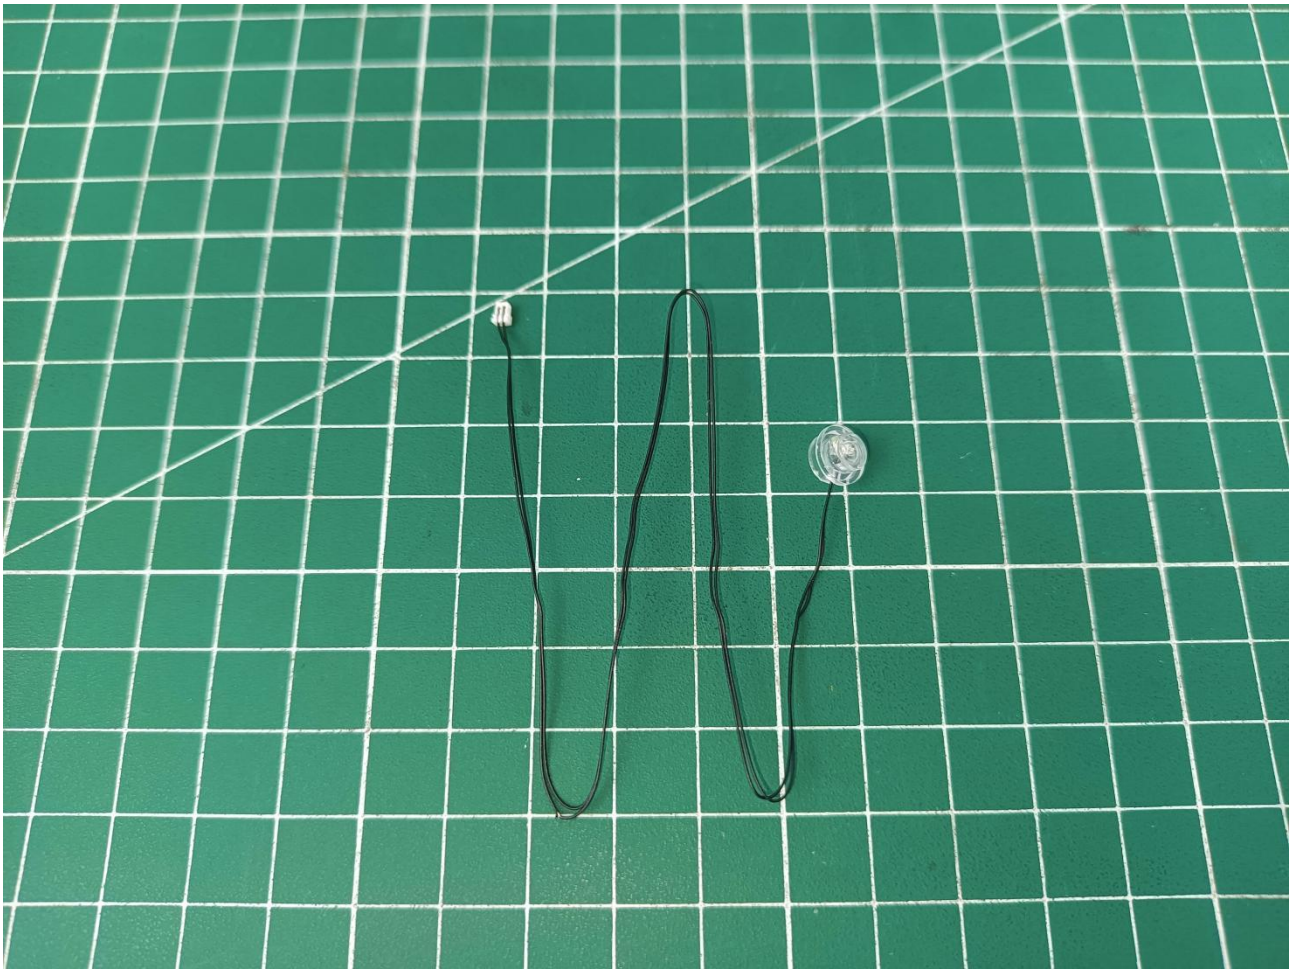


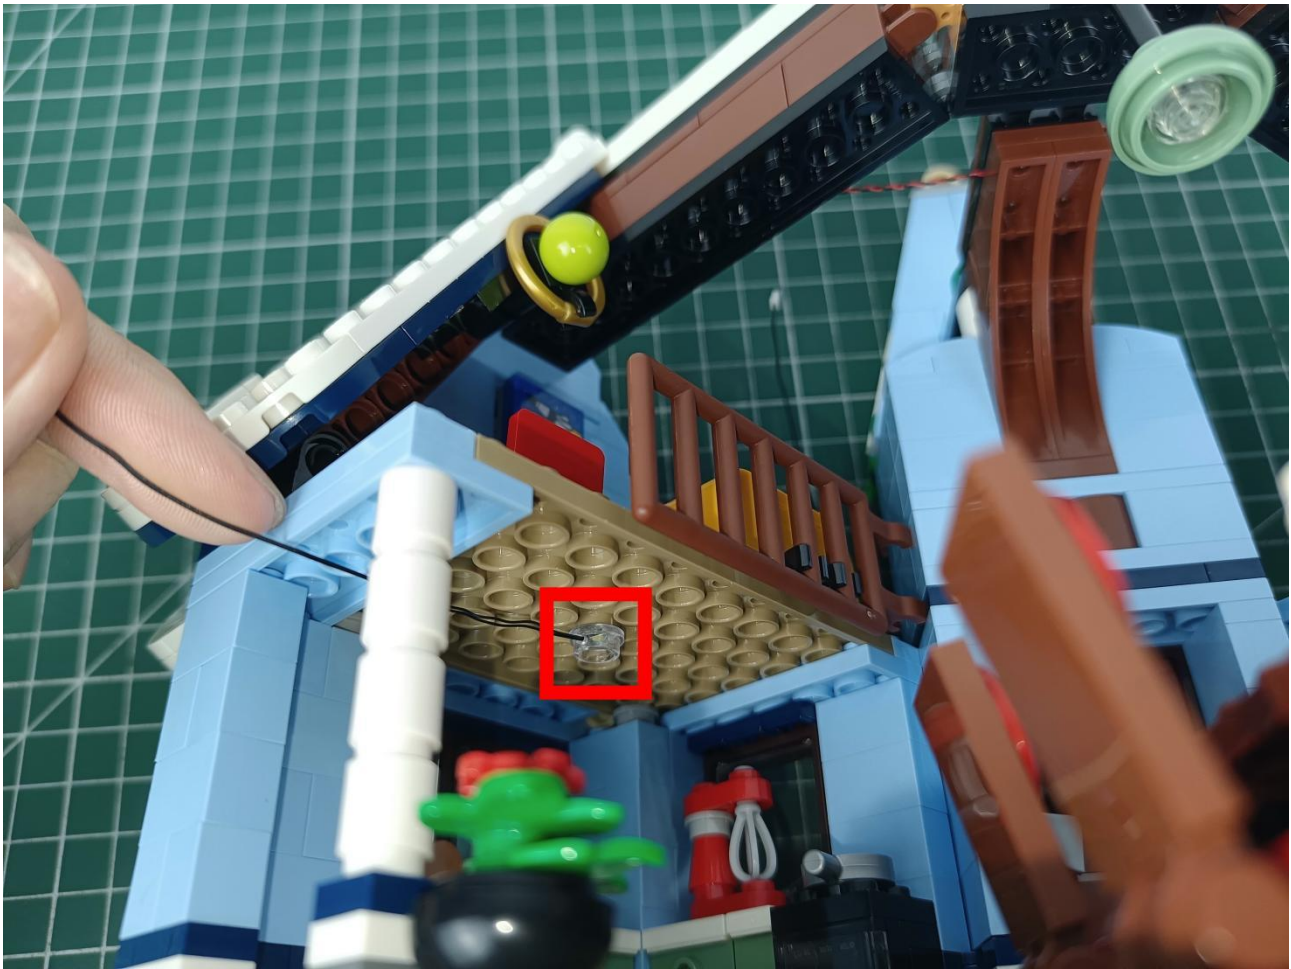

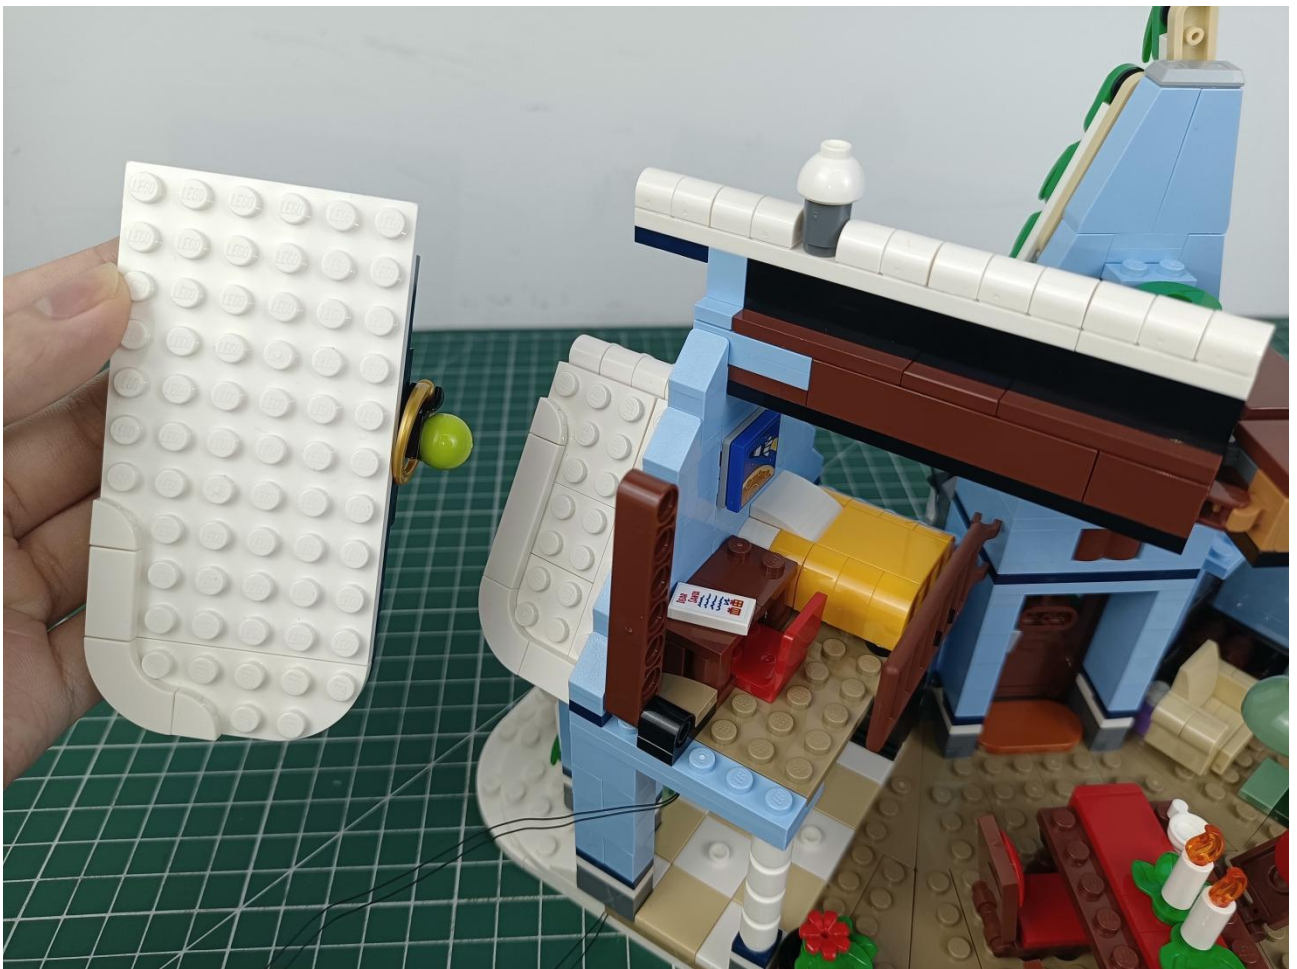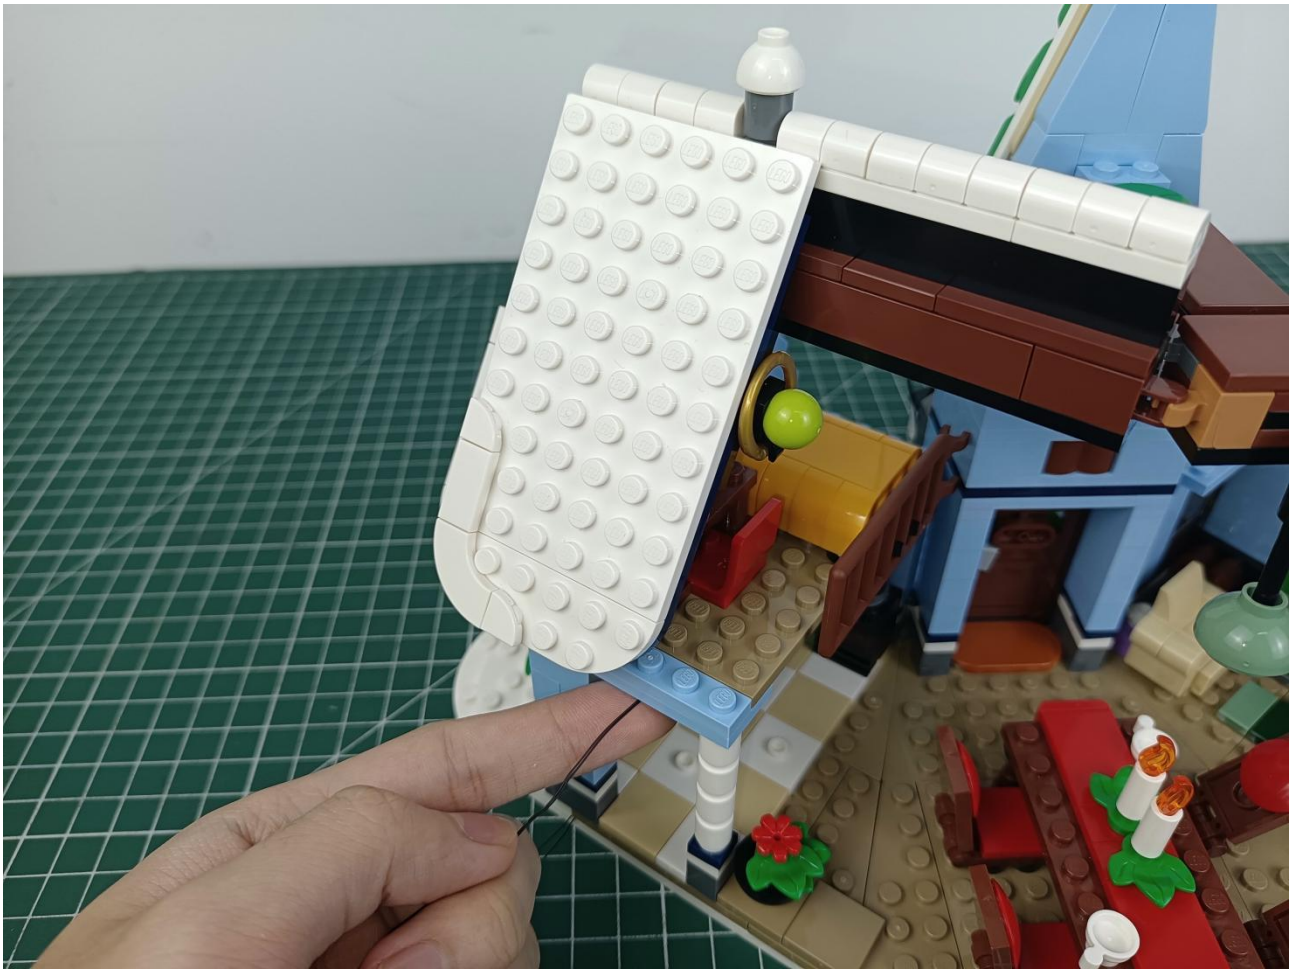

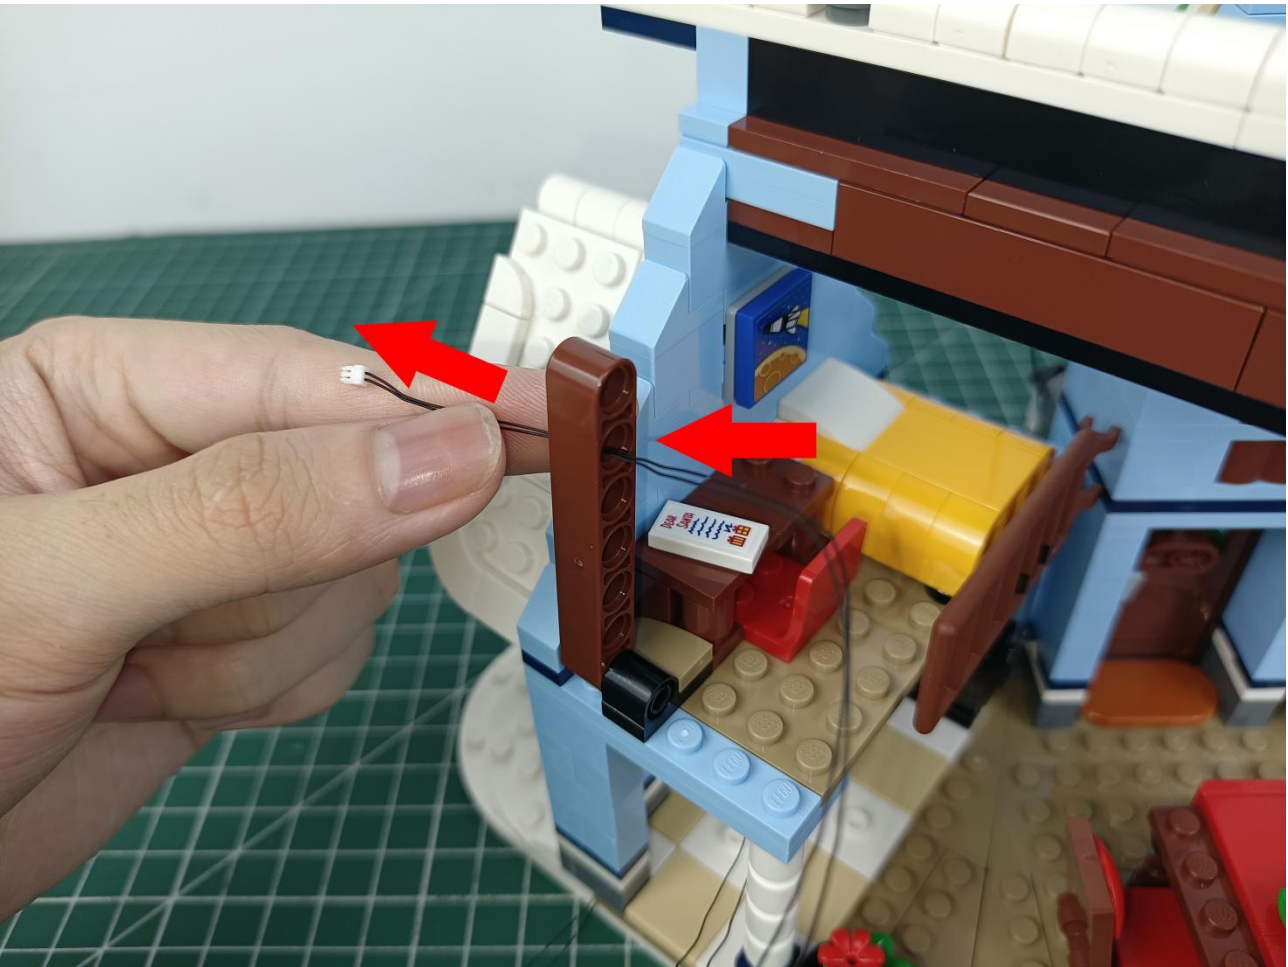
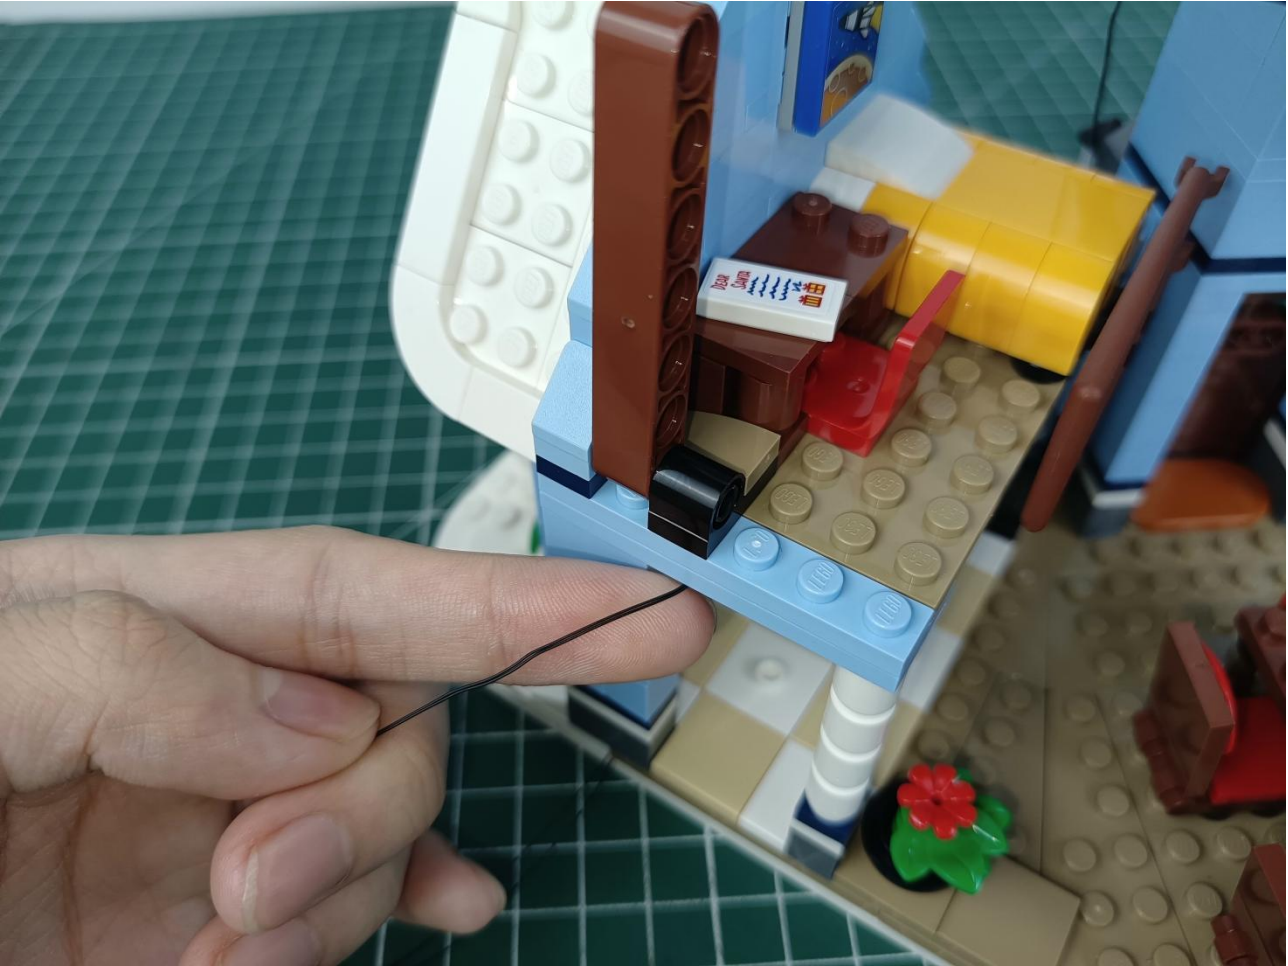


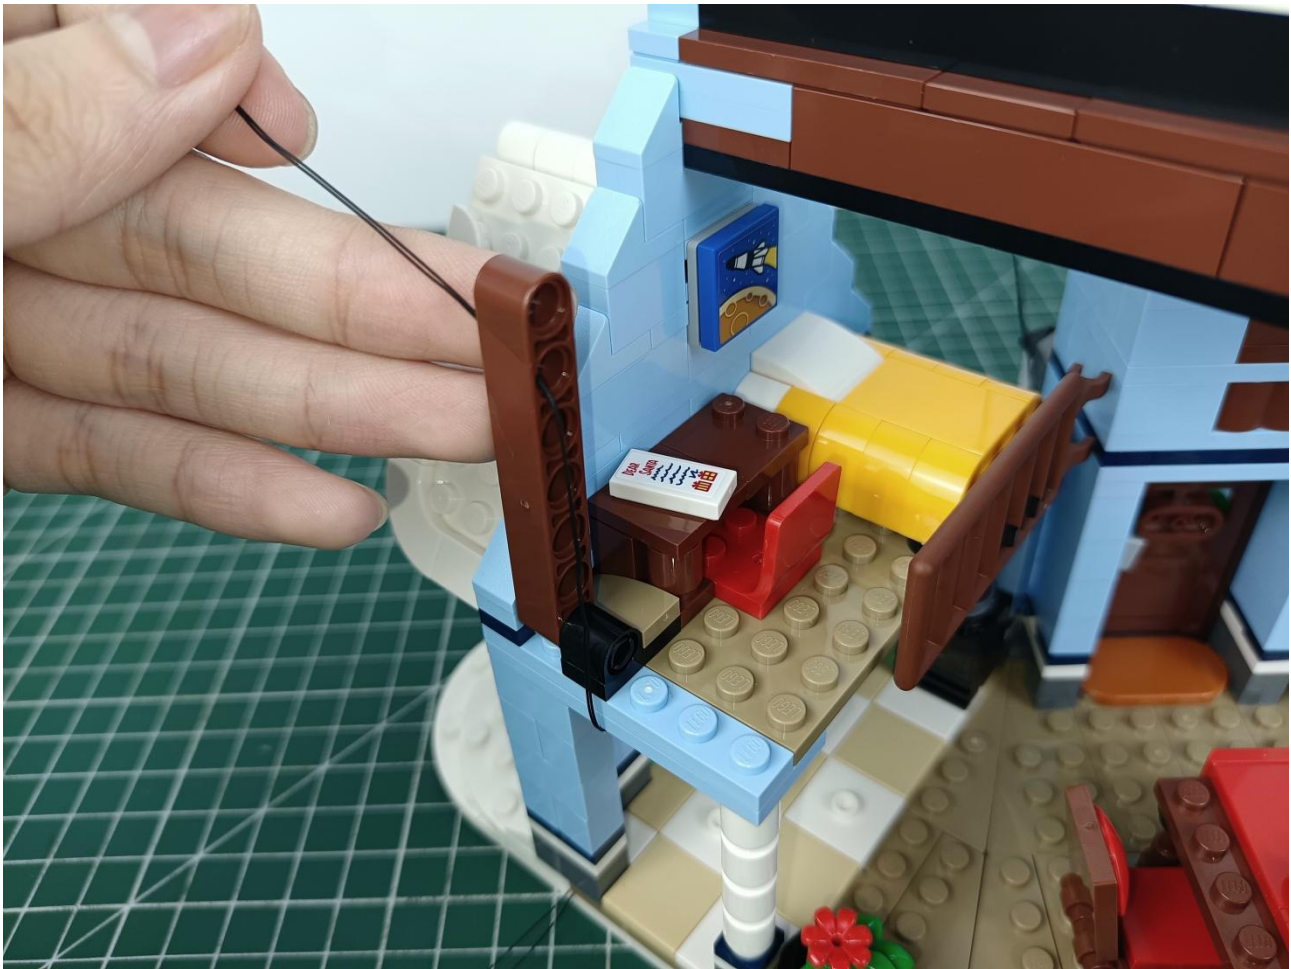



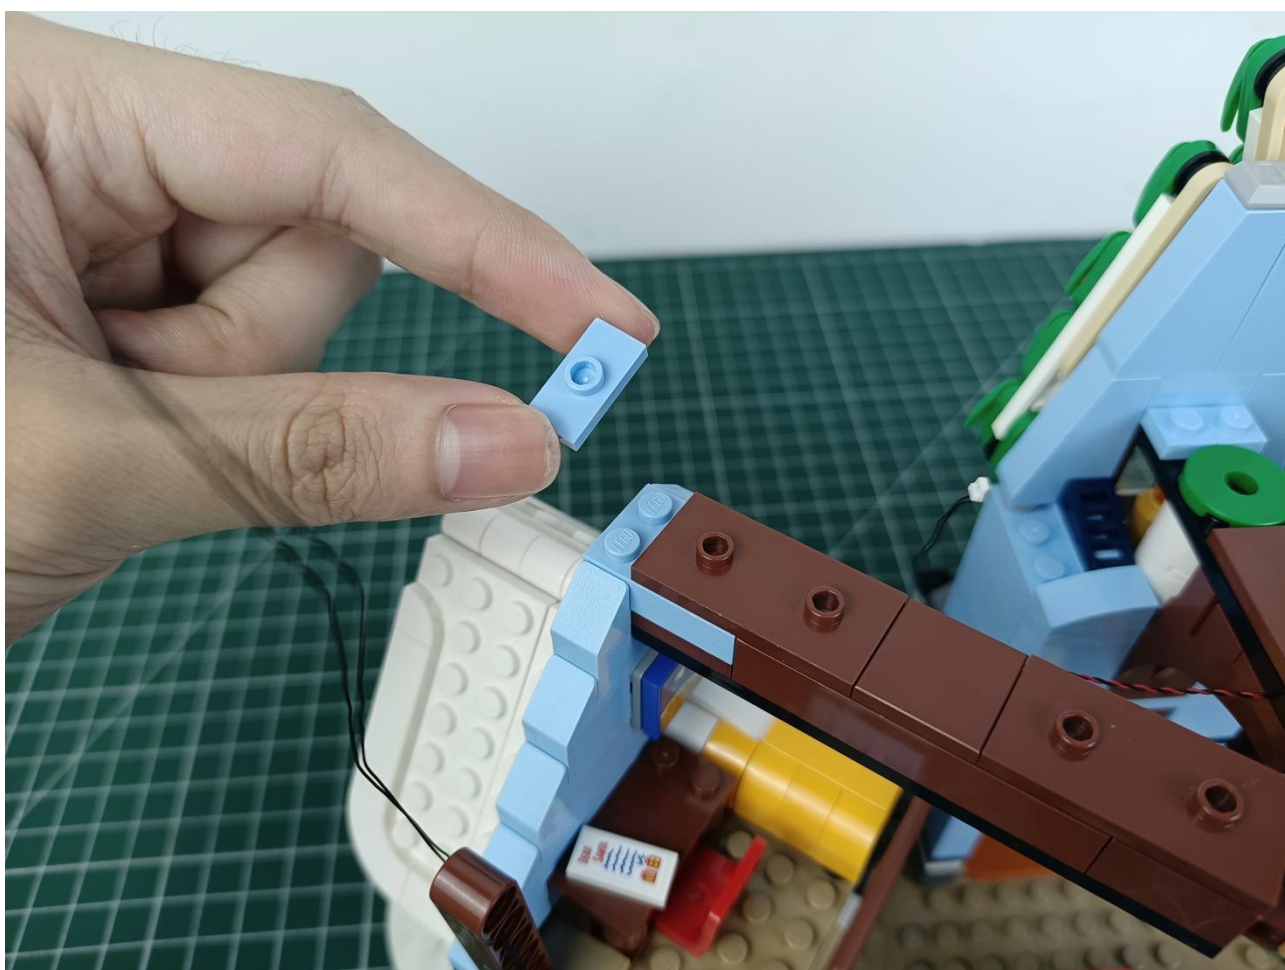



Please be careful when installing. The lamp wire is relatively slender and cannot be pressed on the

raised position of the building block. It should pass along the gap, otherwise the lamp wire will be pinched.

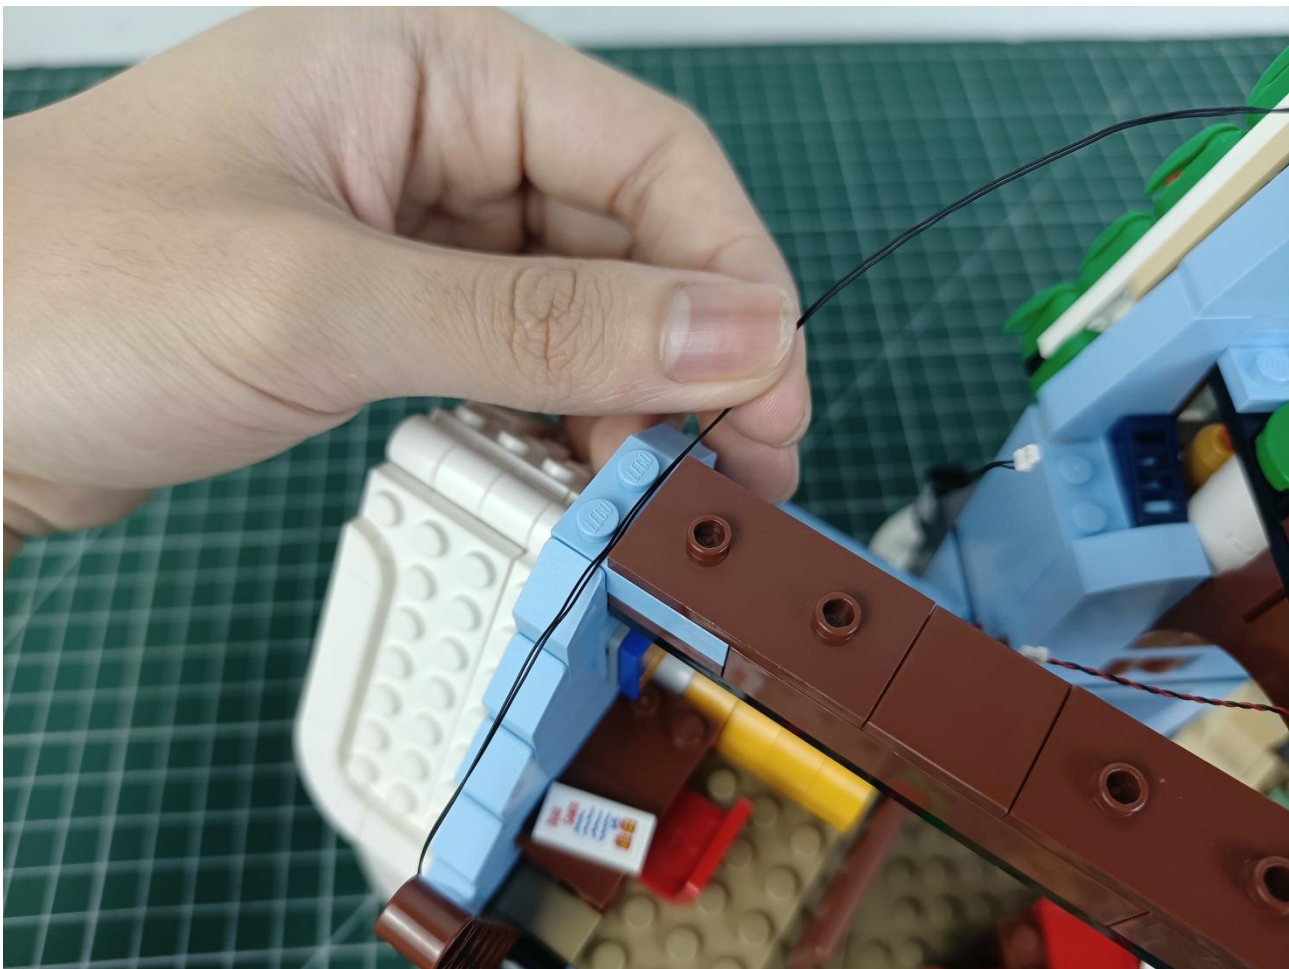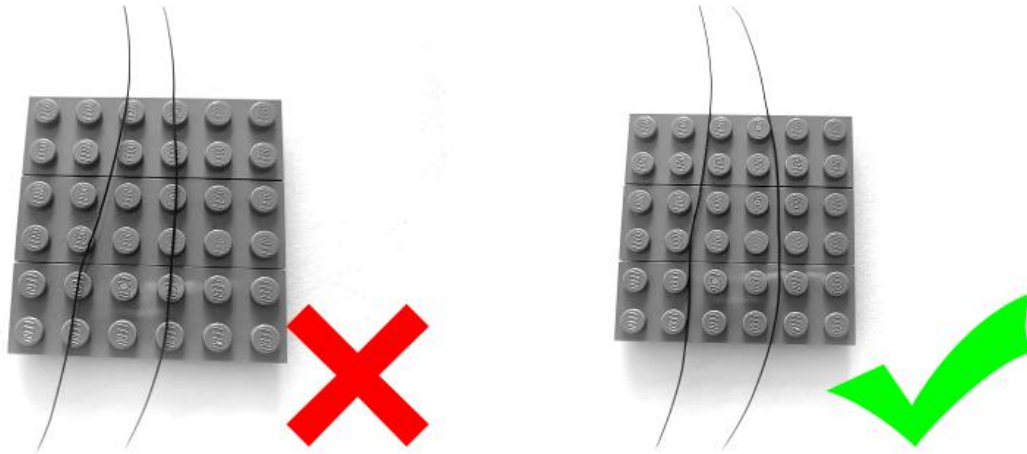



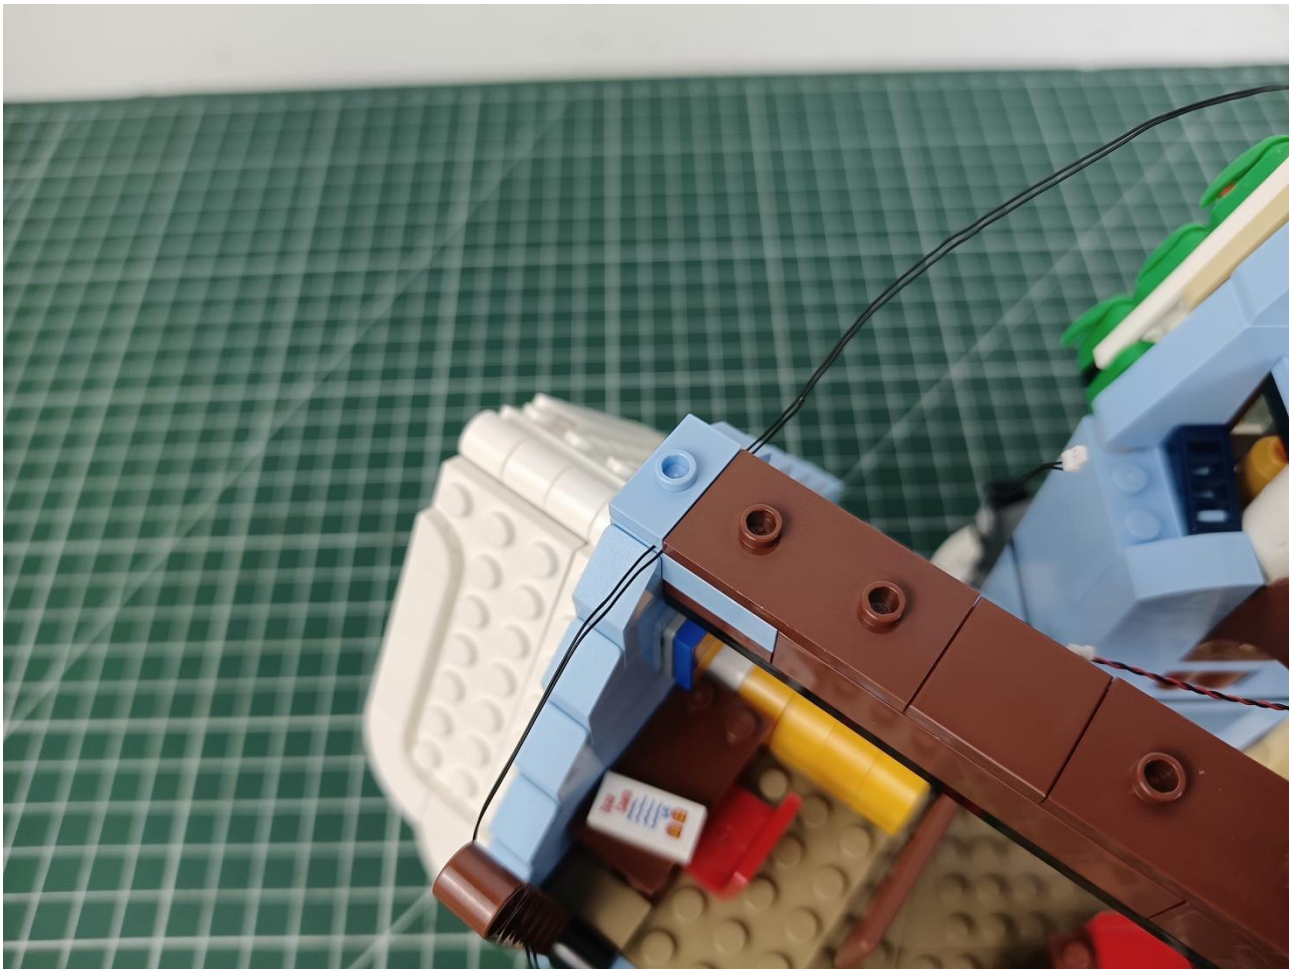


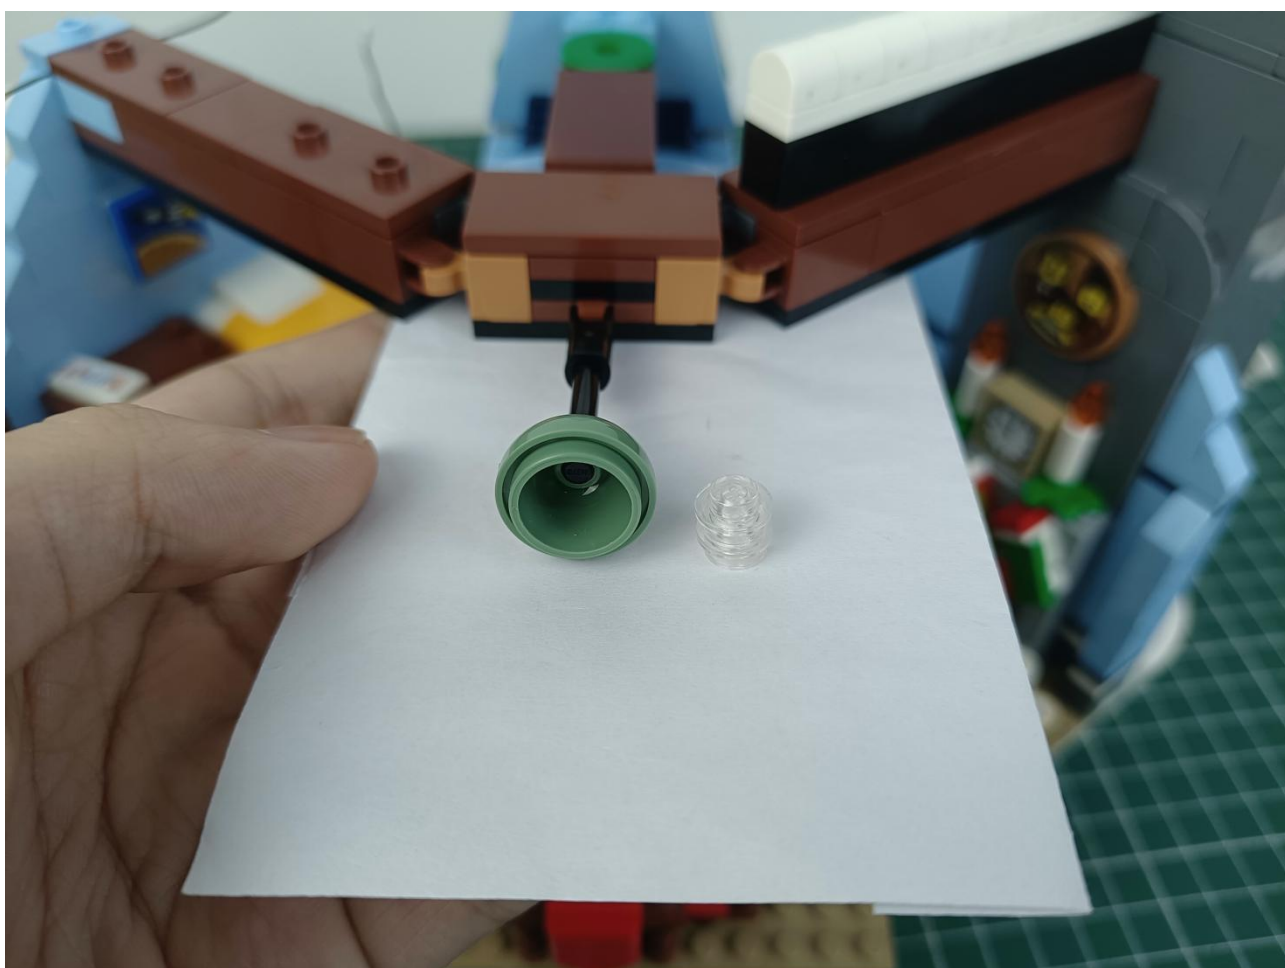
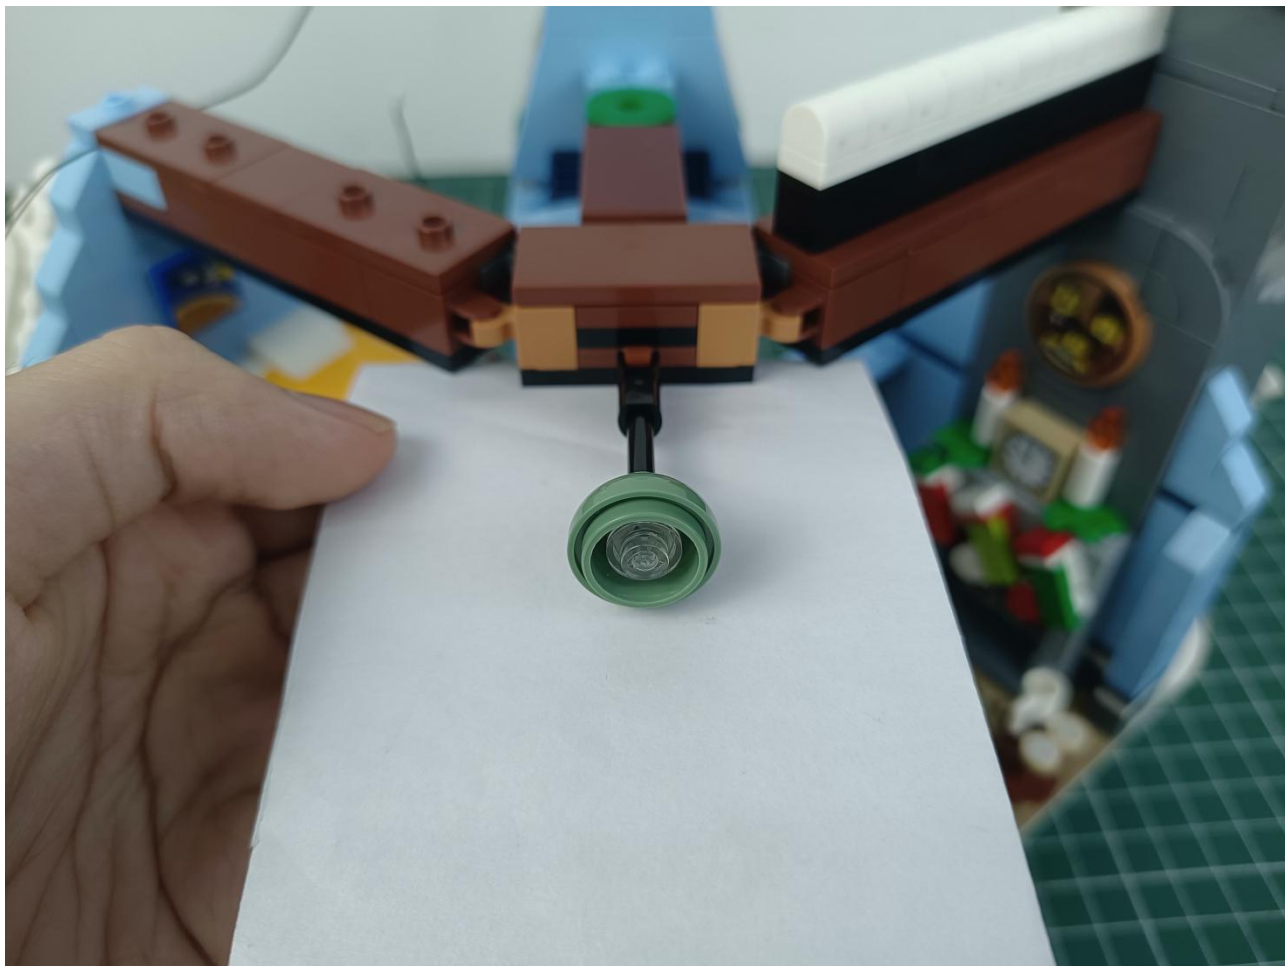



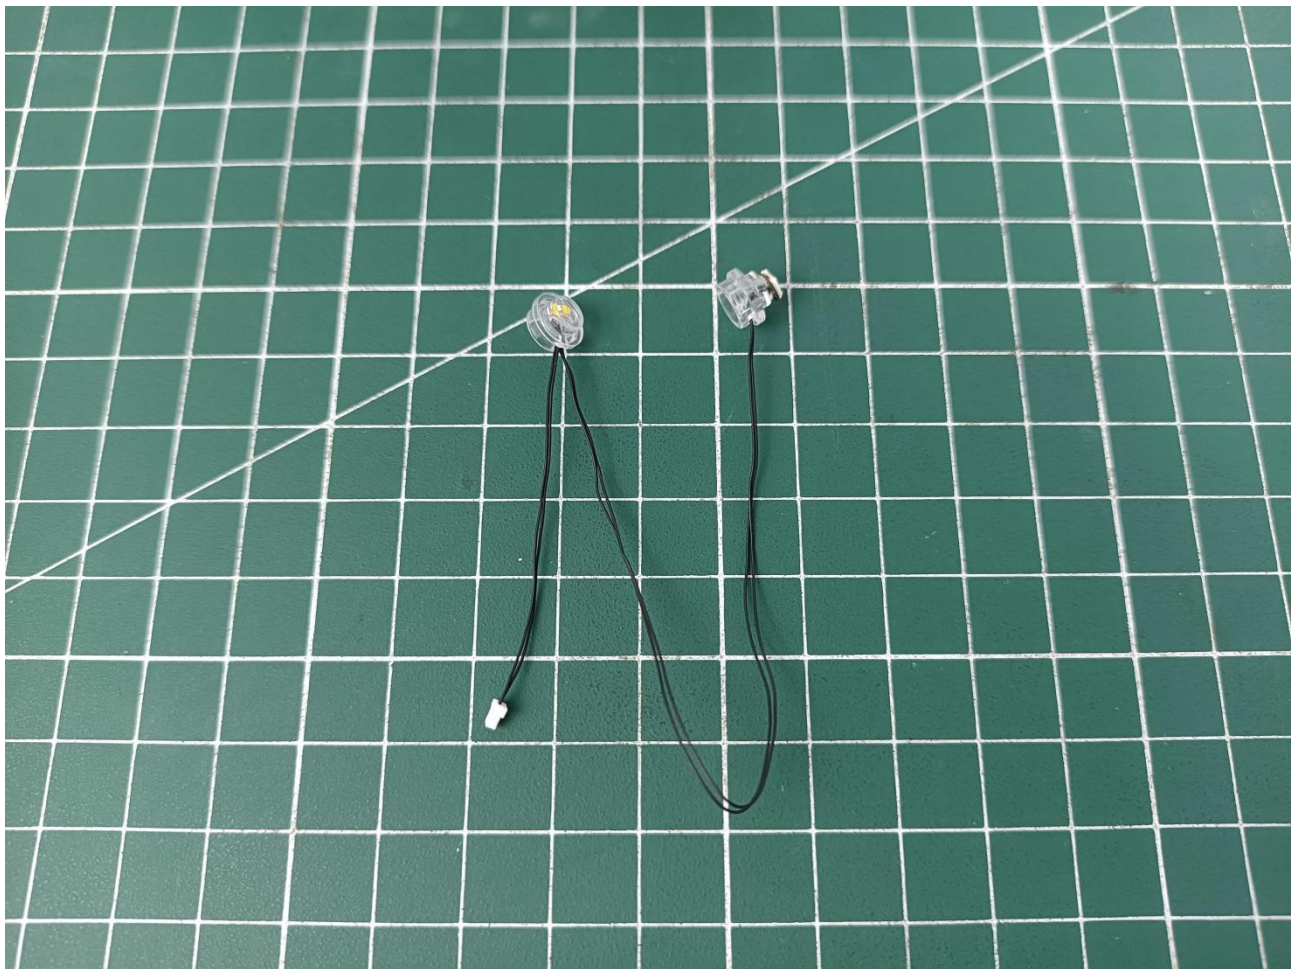






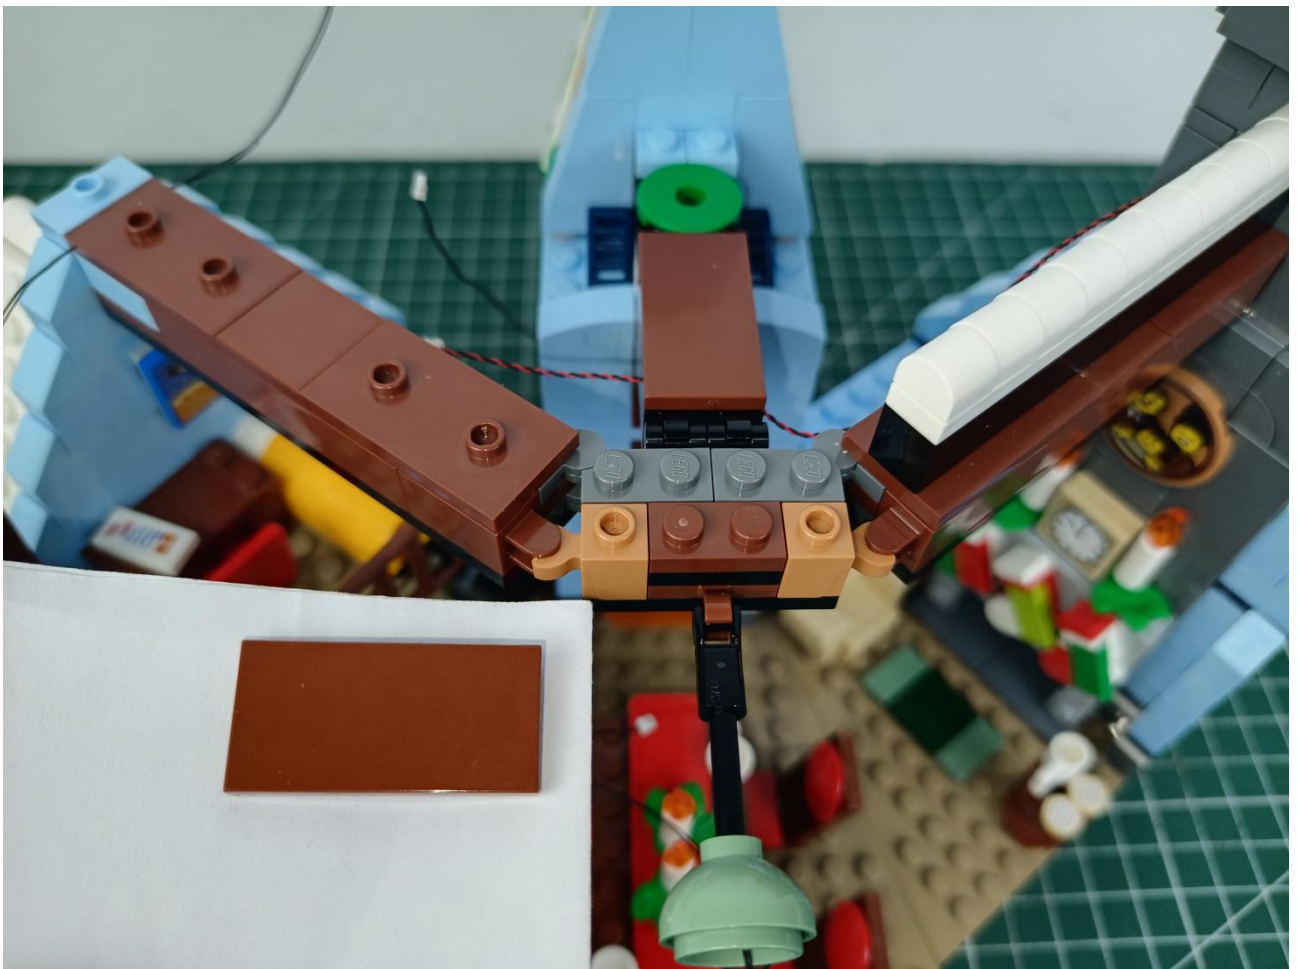


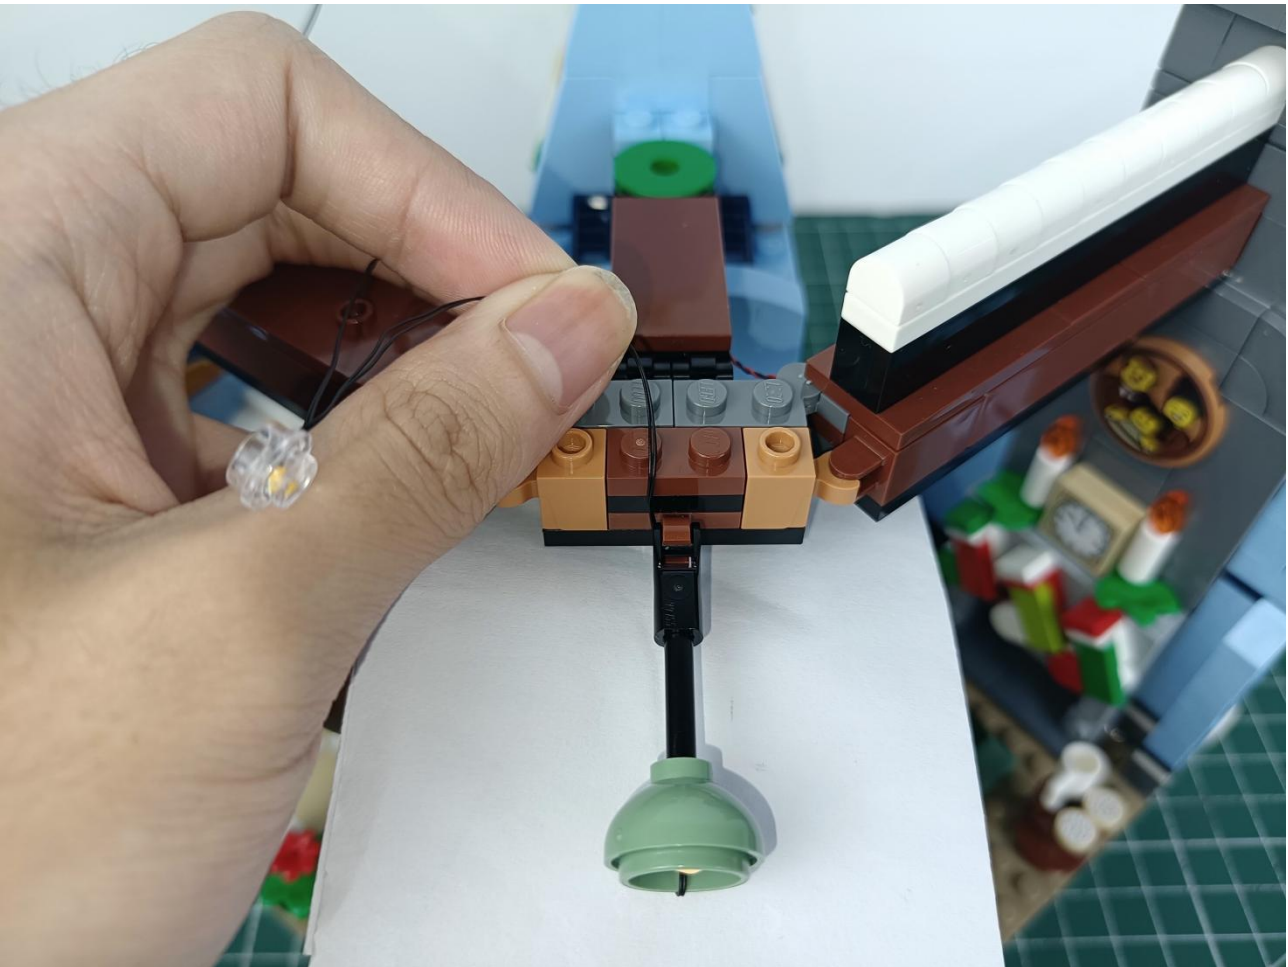
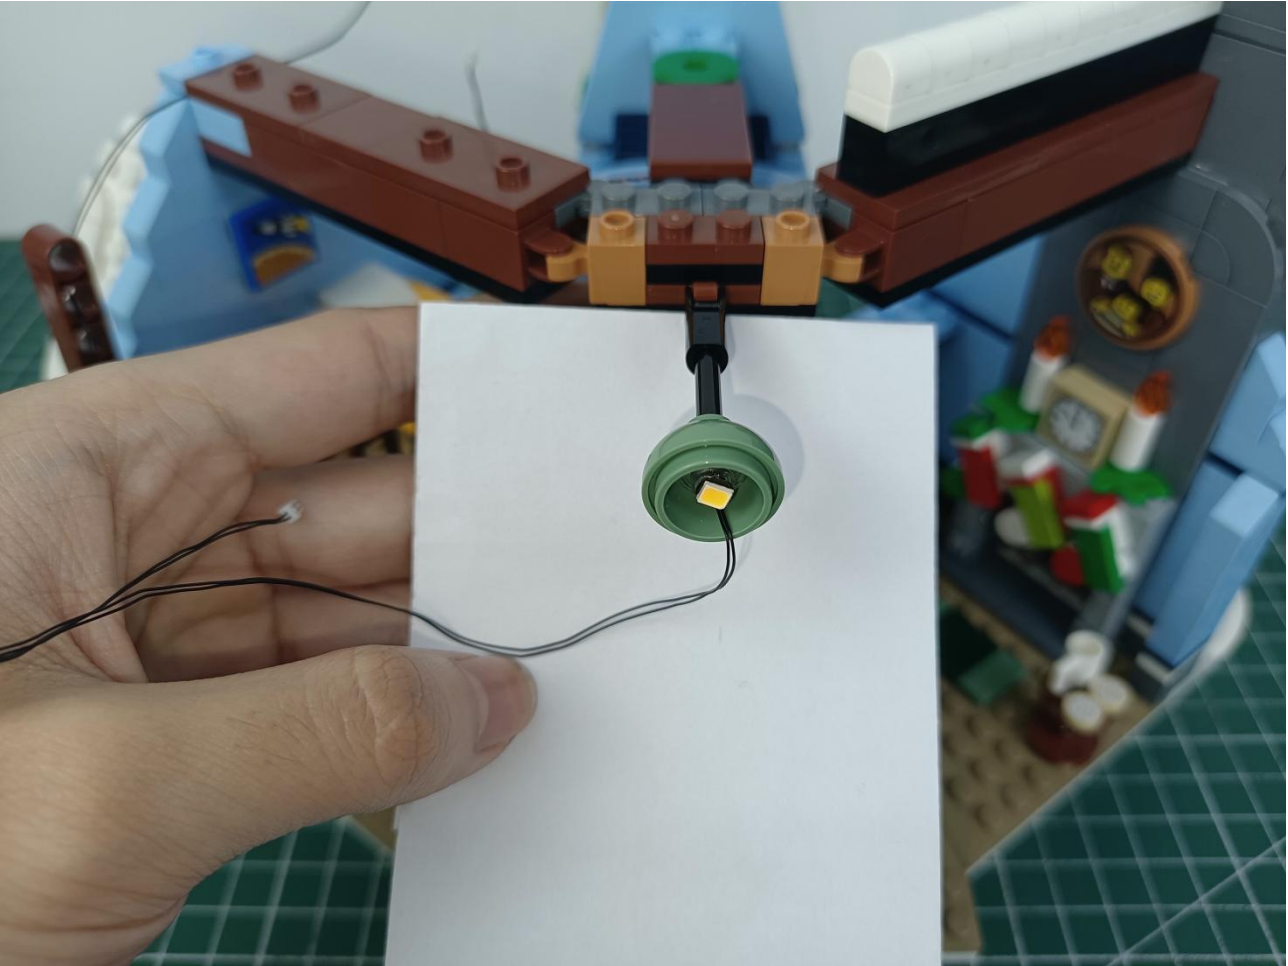


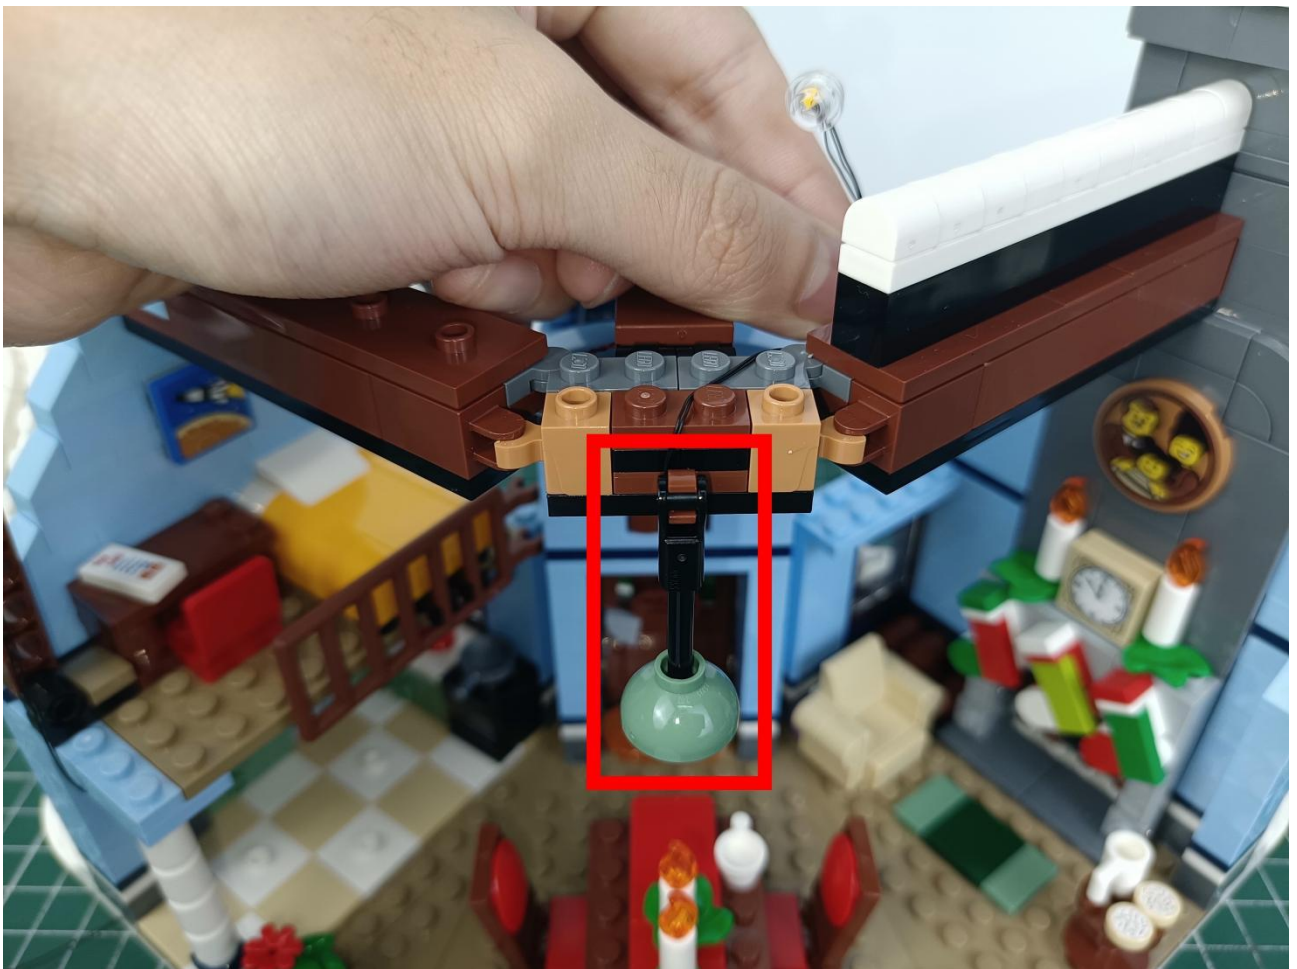
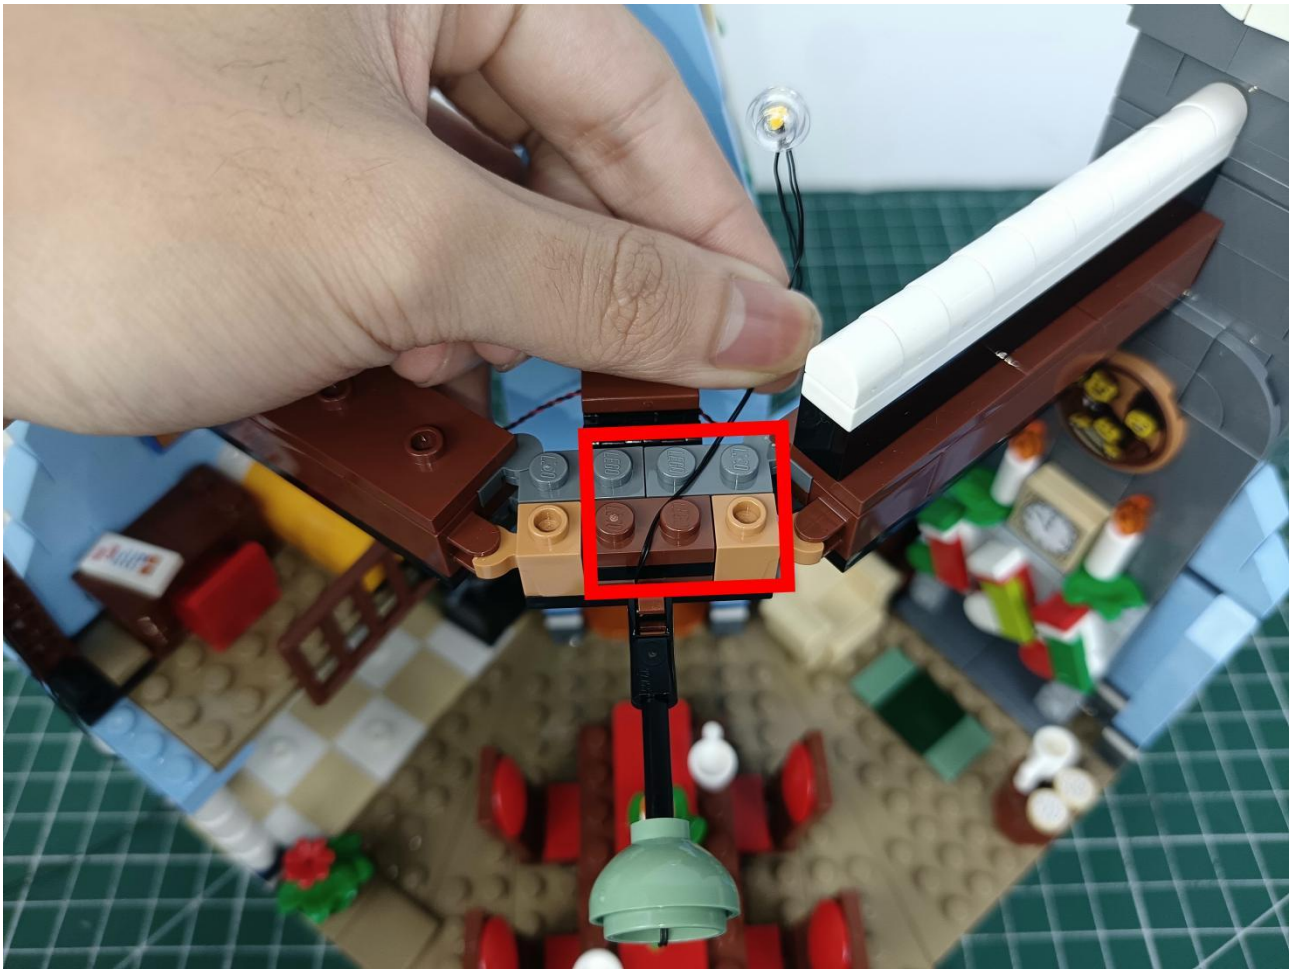


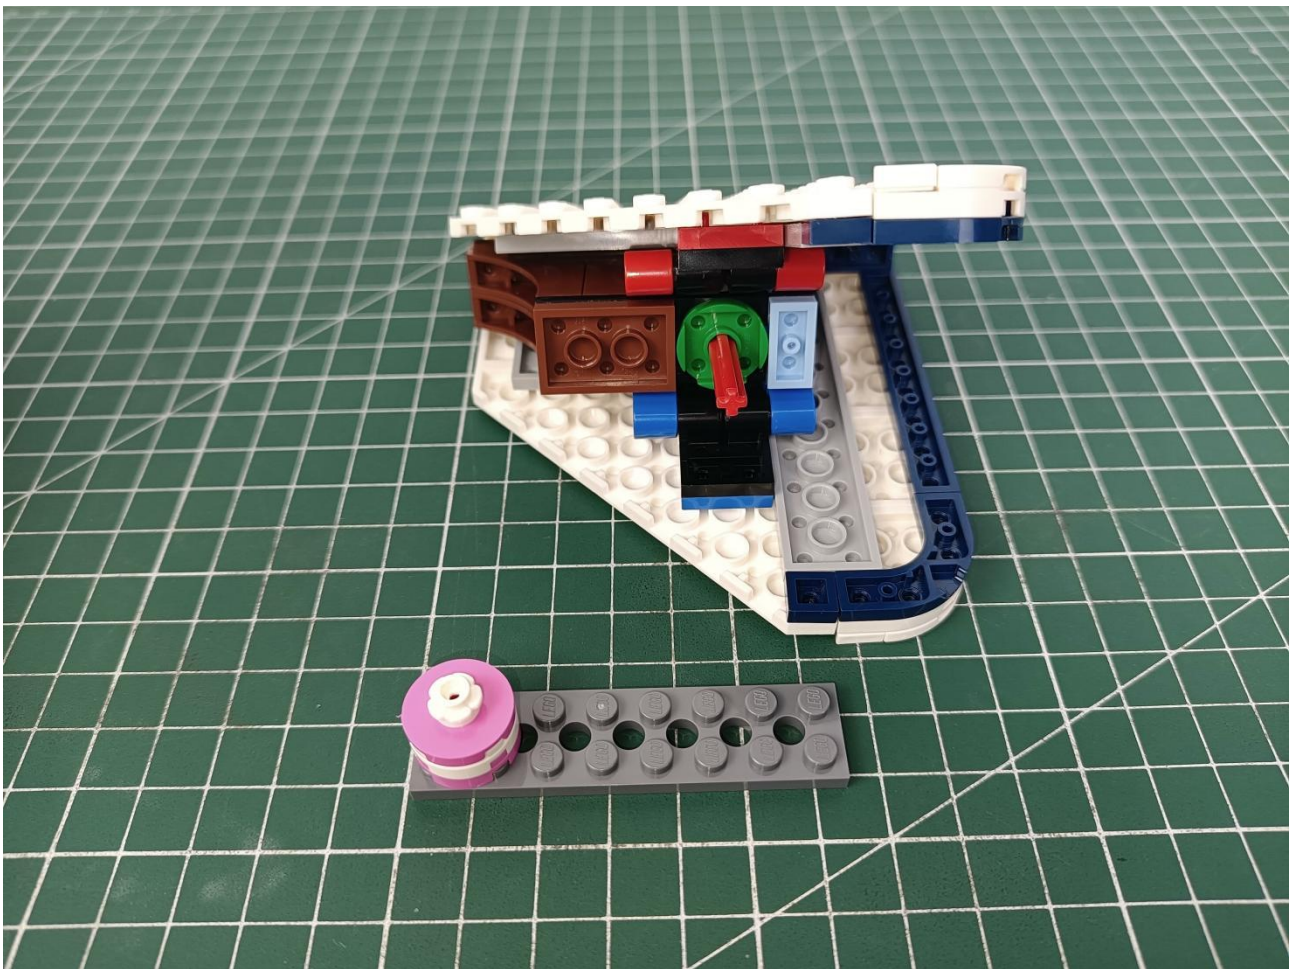
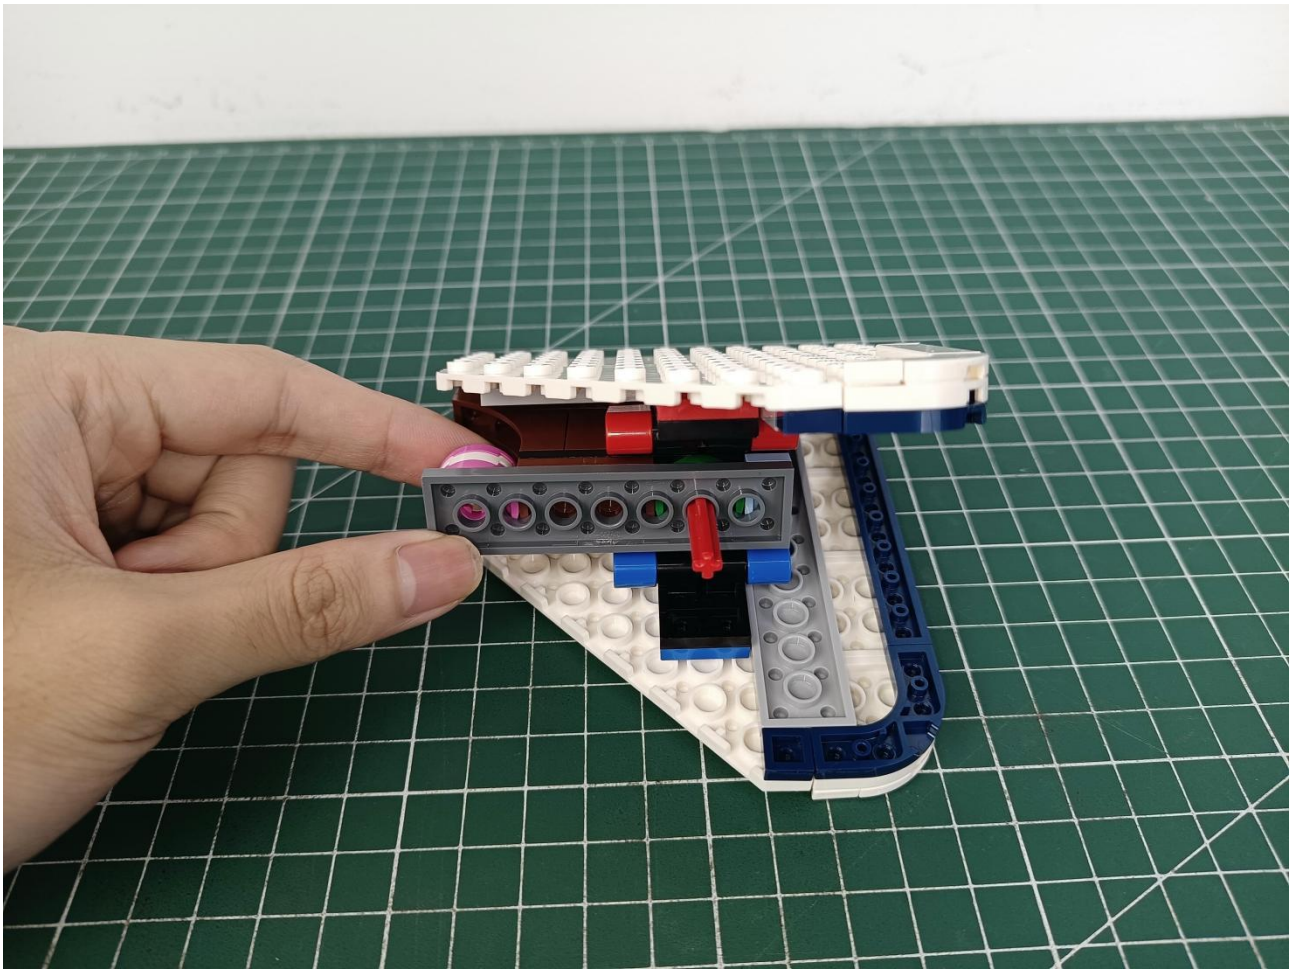



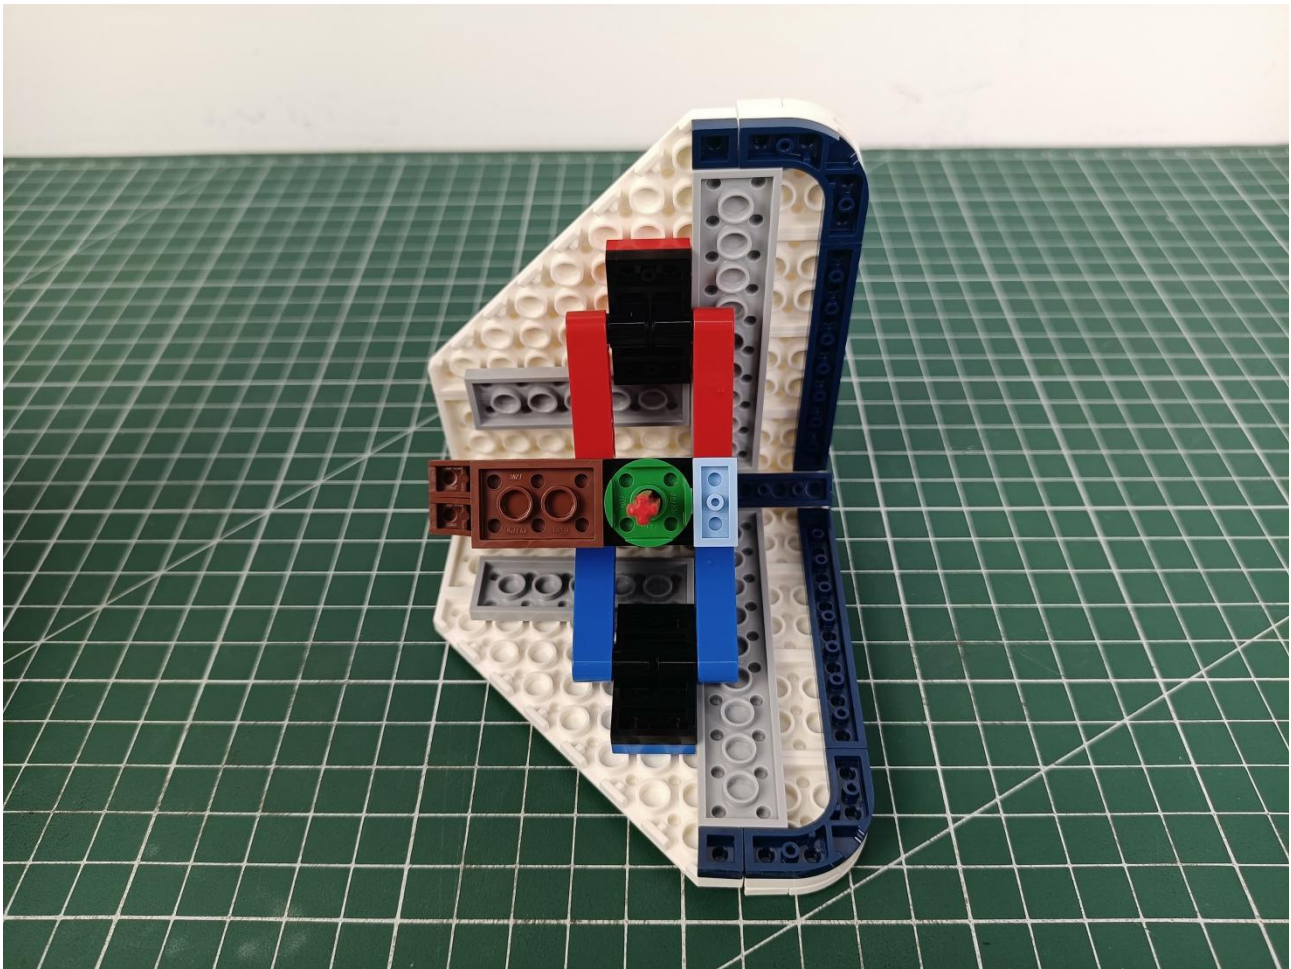


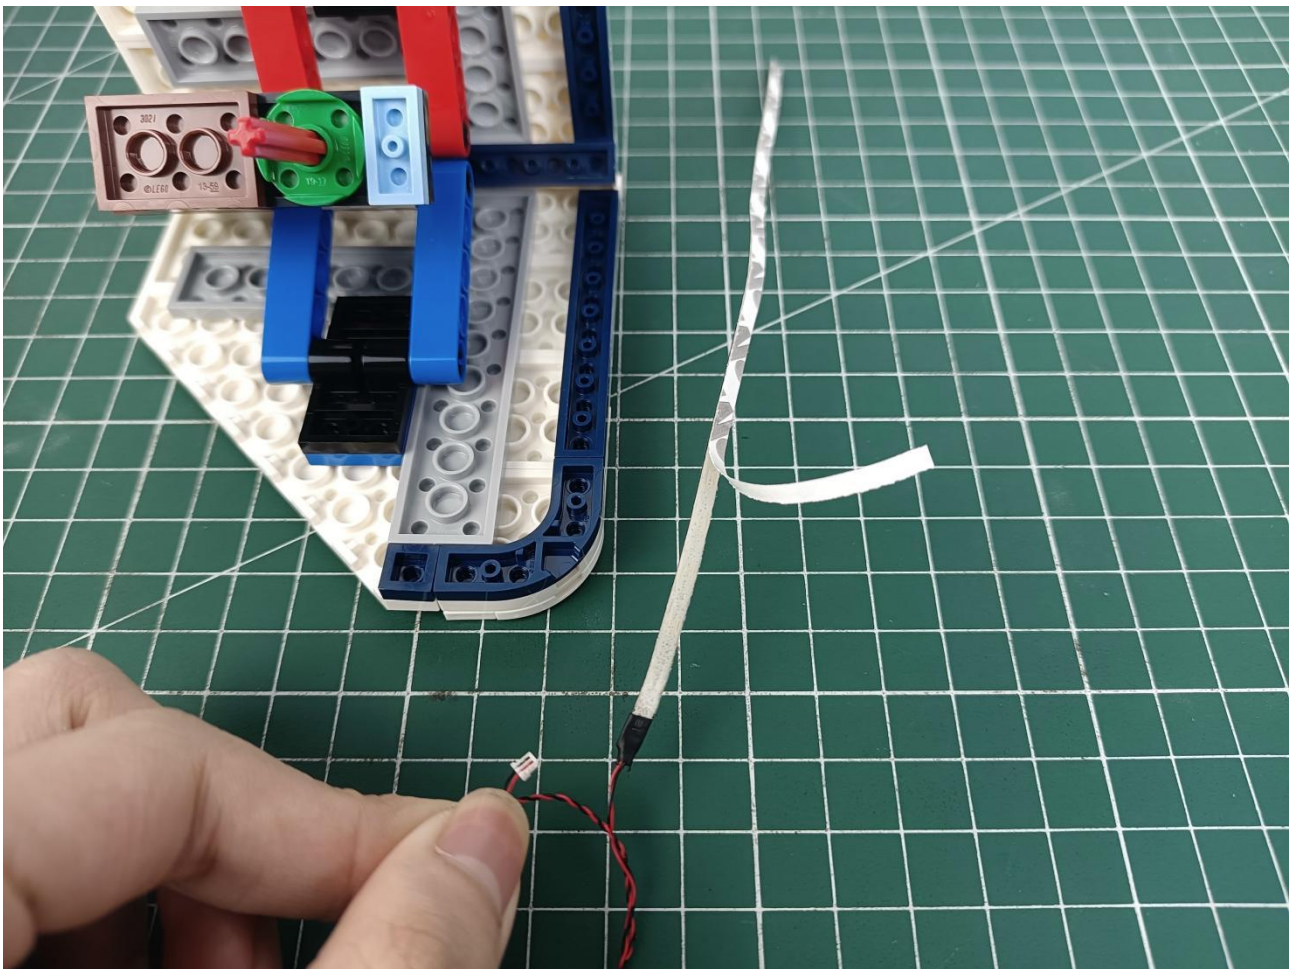
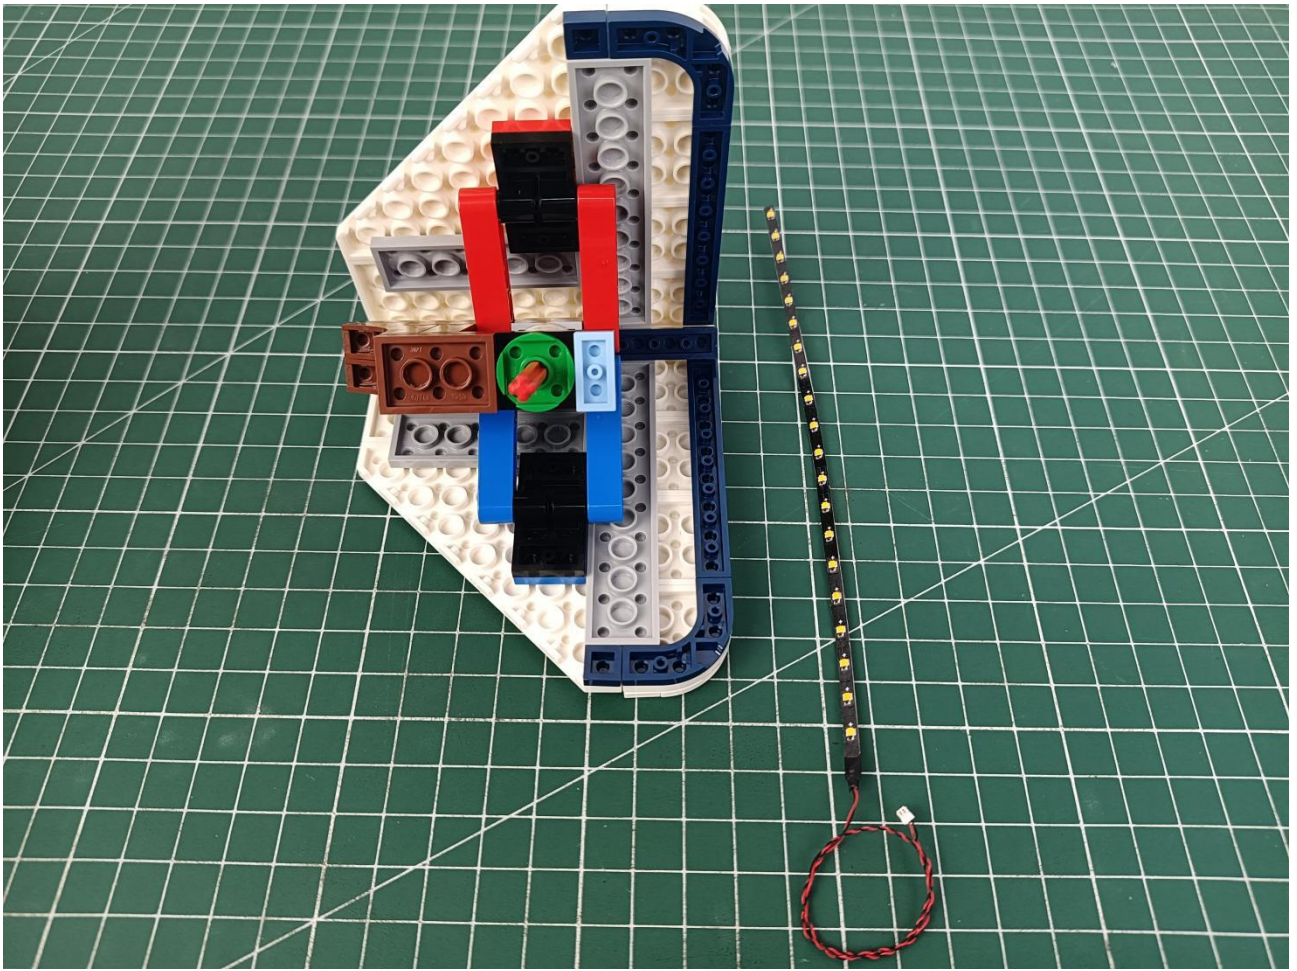


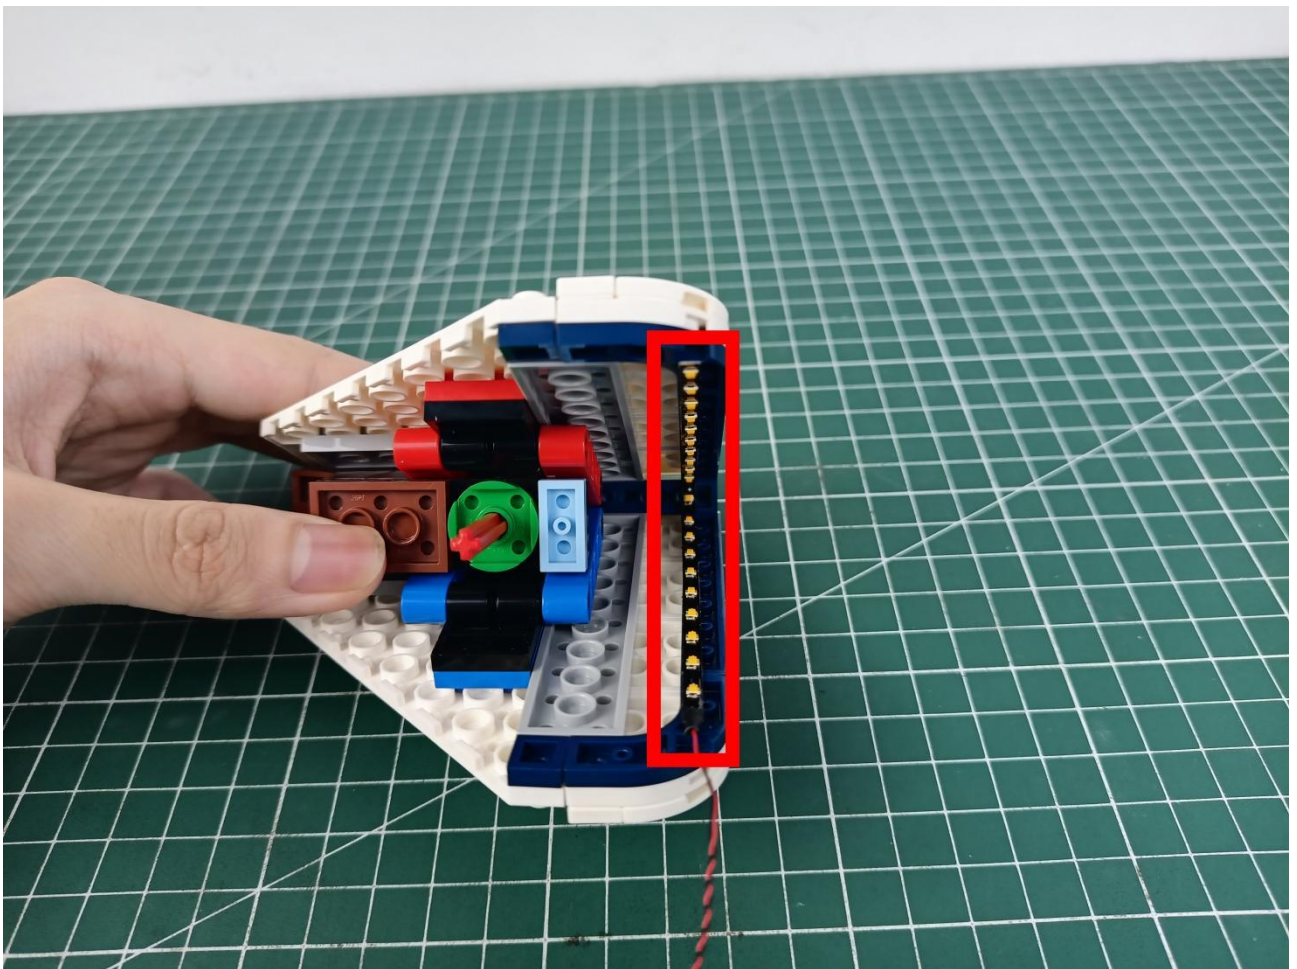
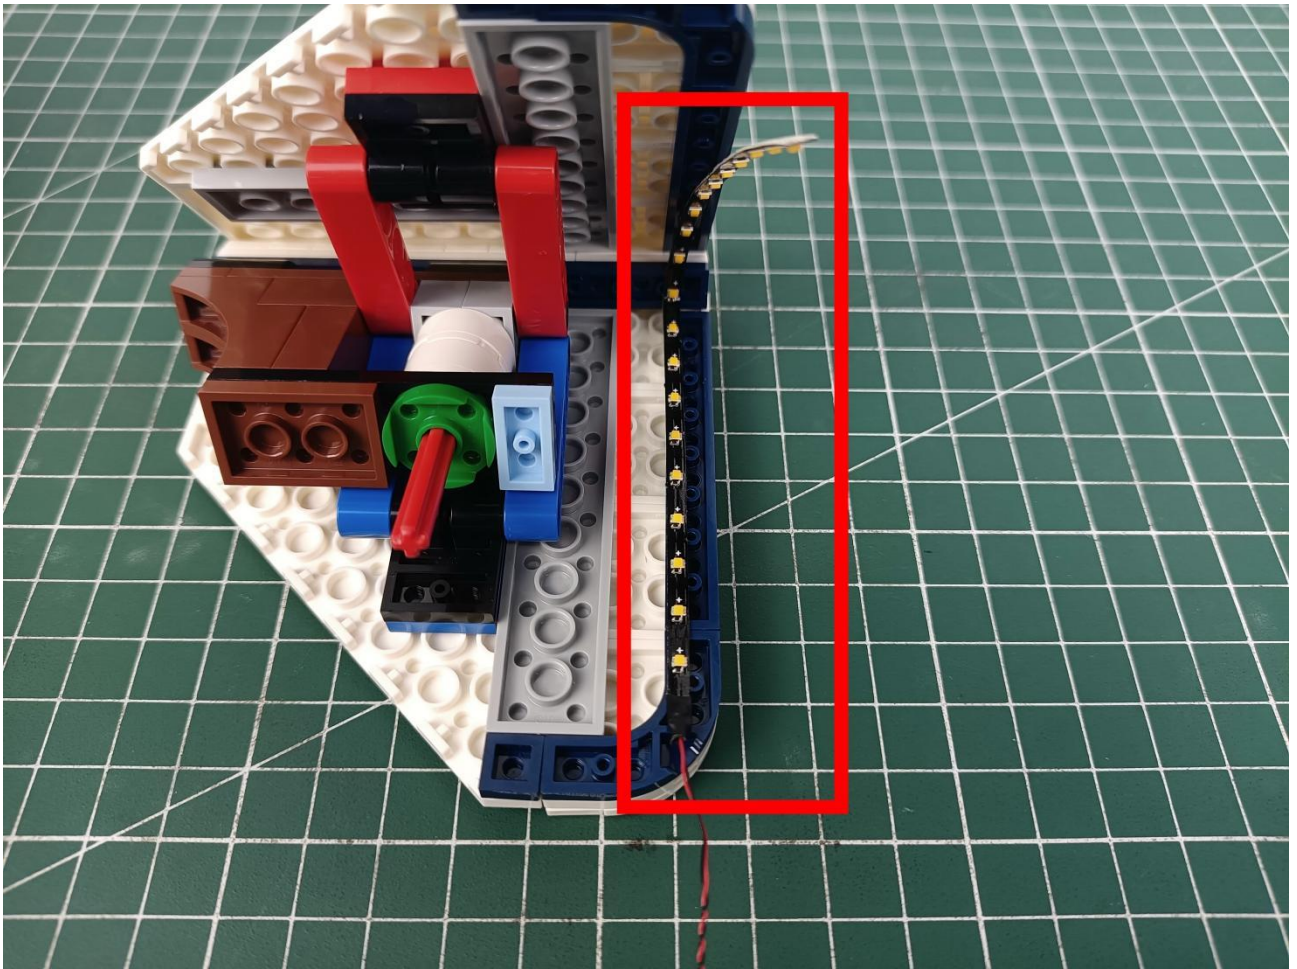


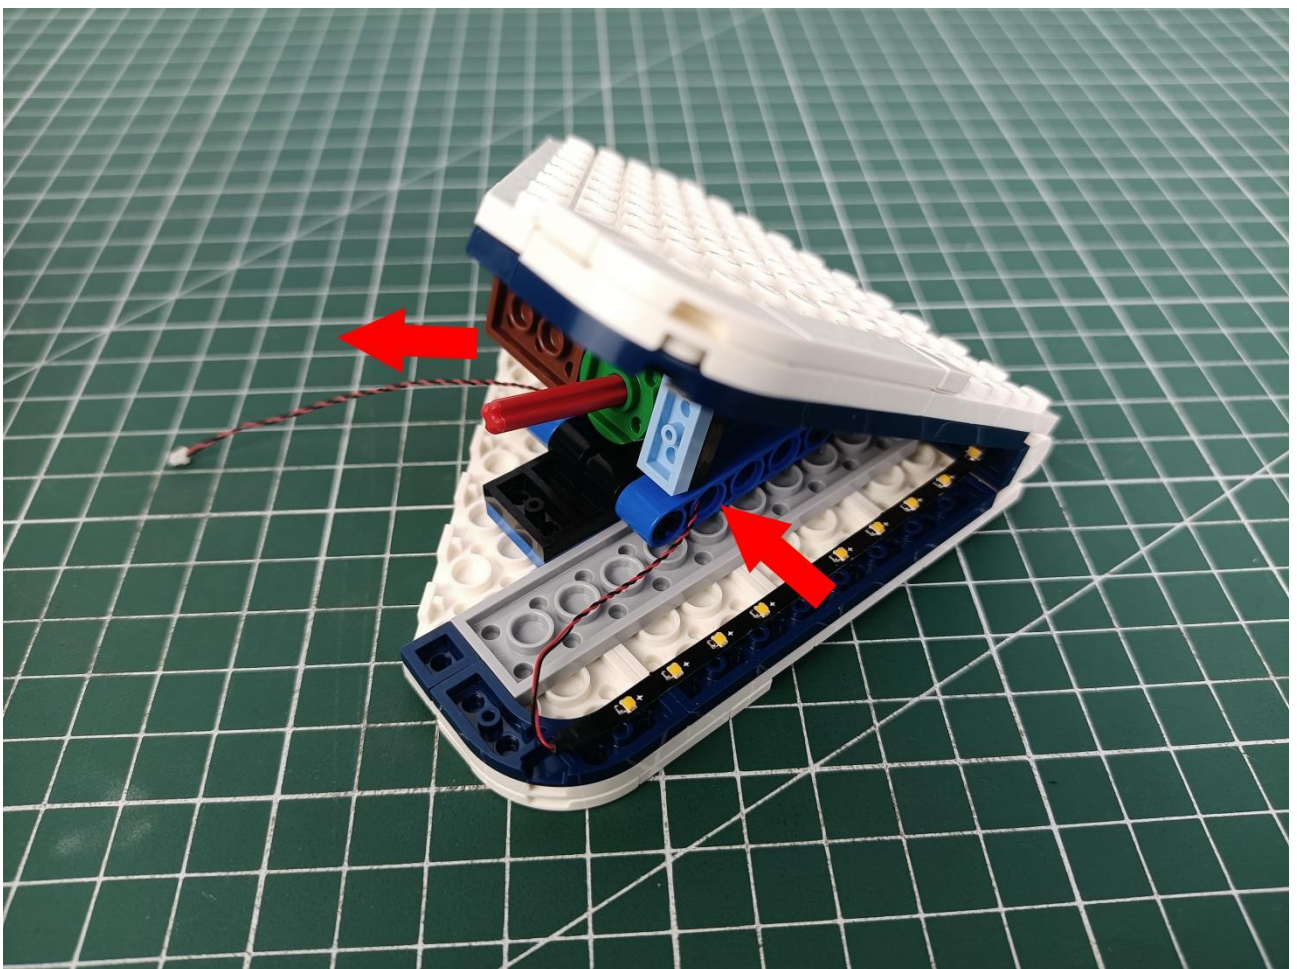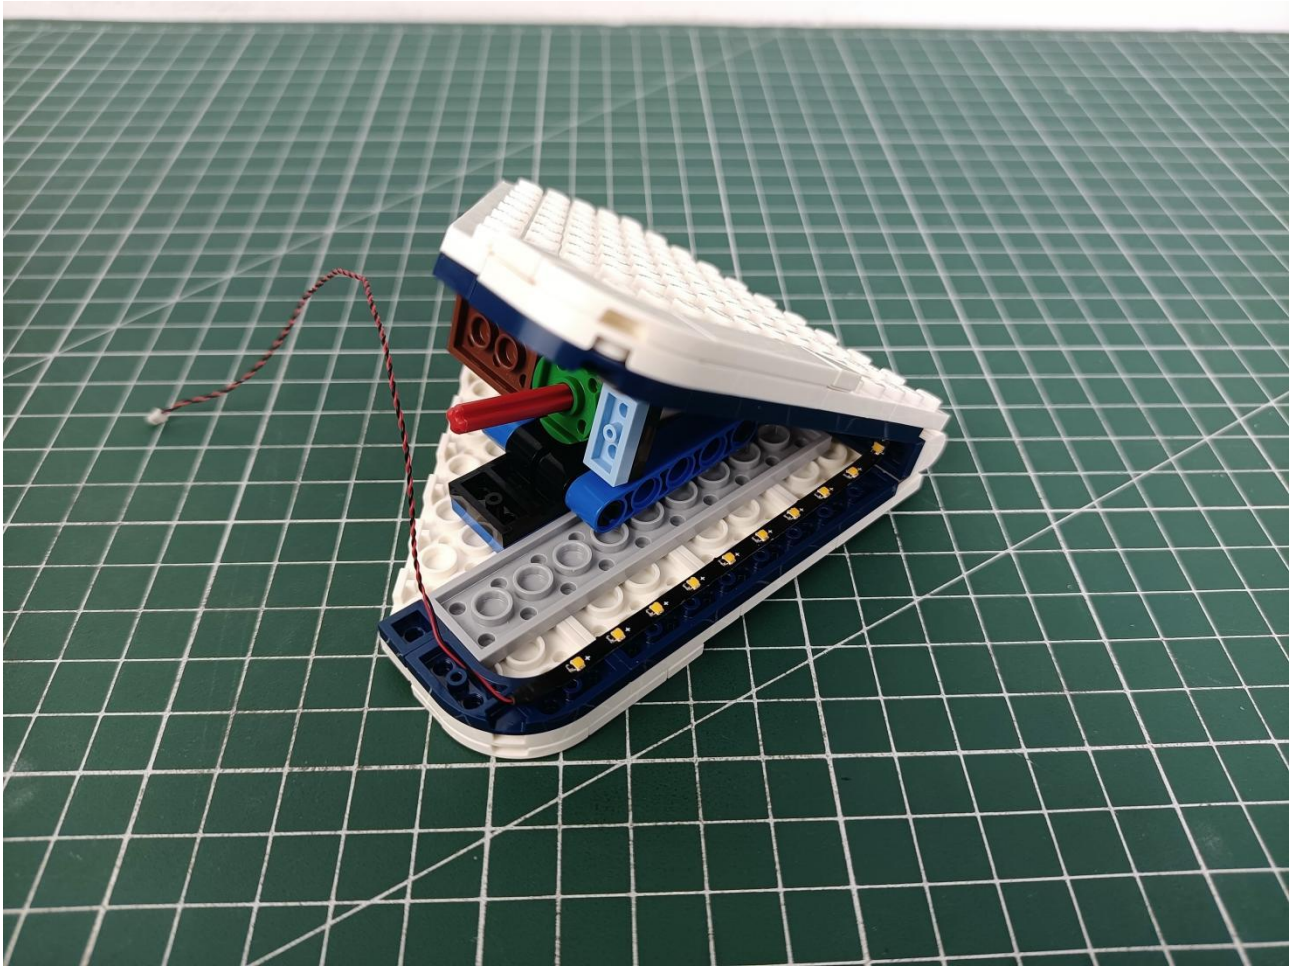

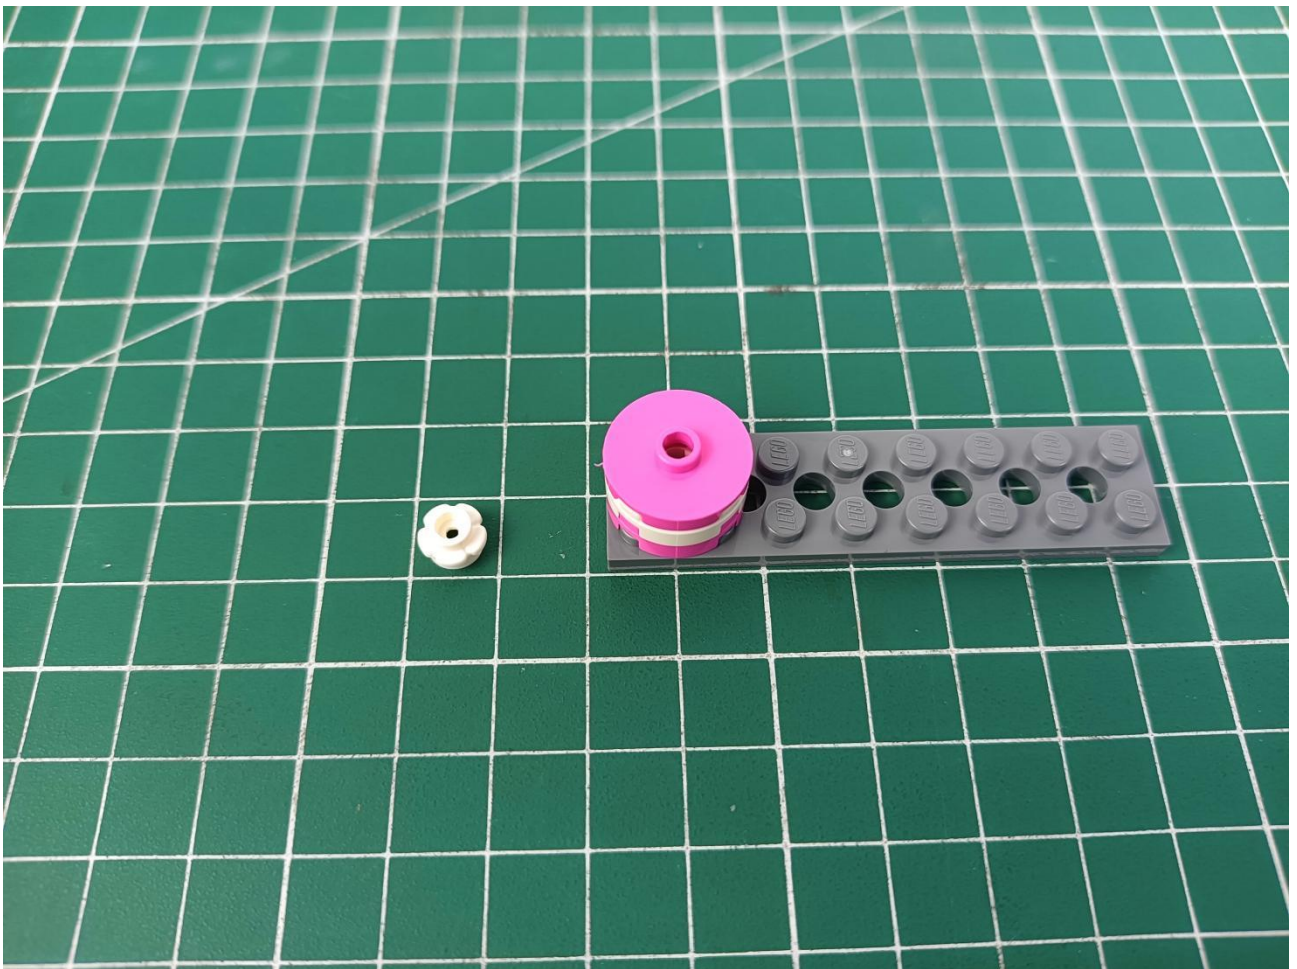
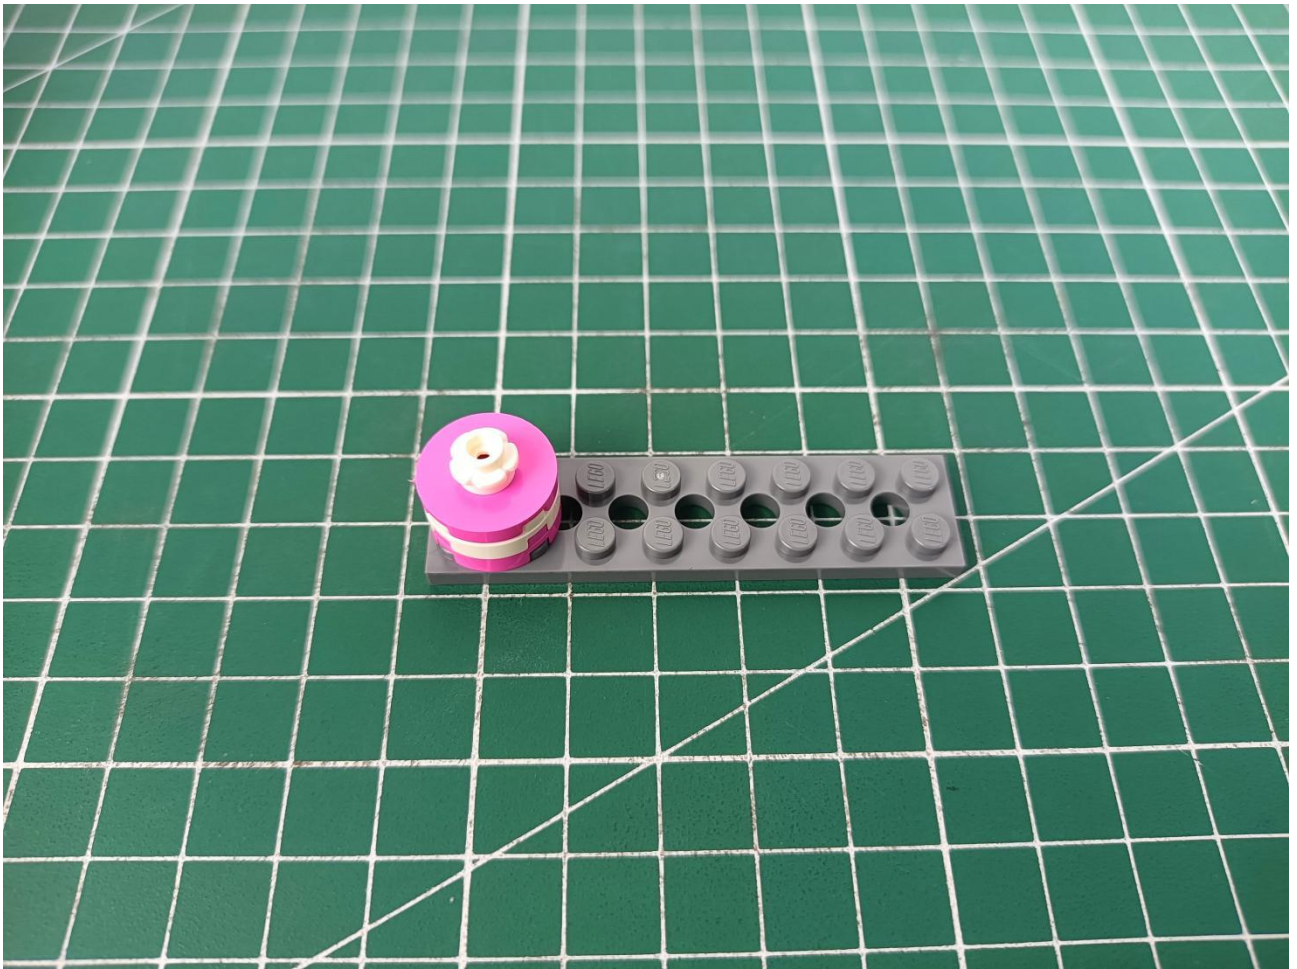


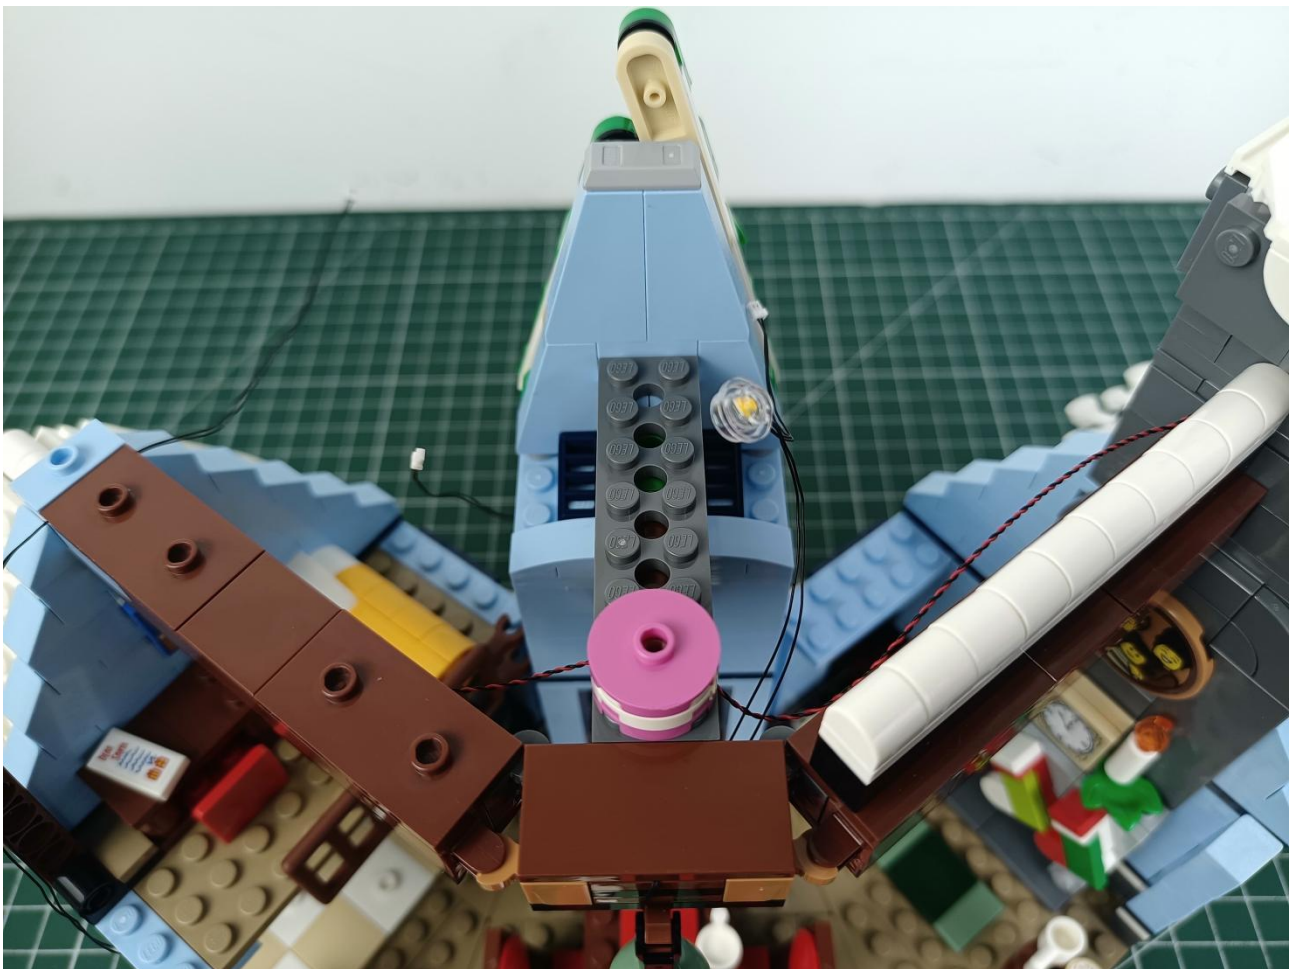
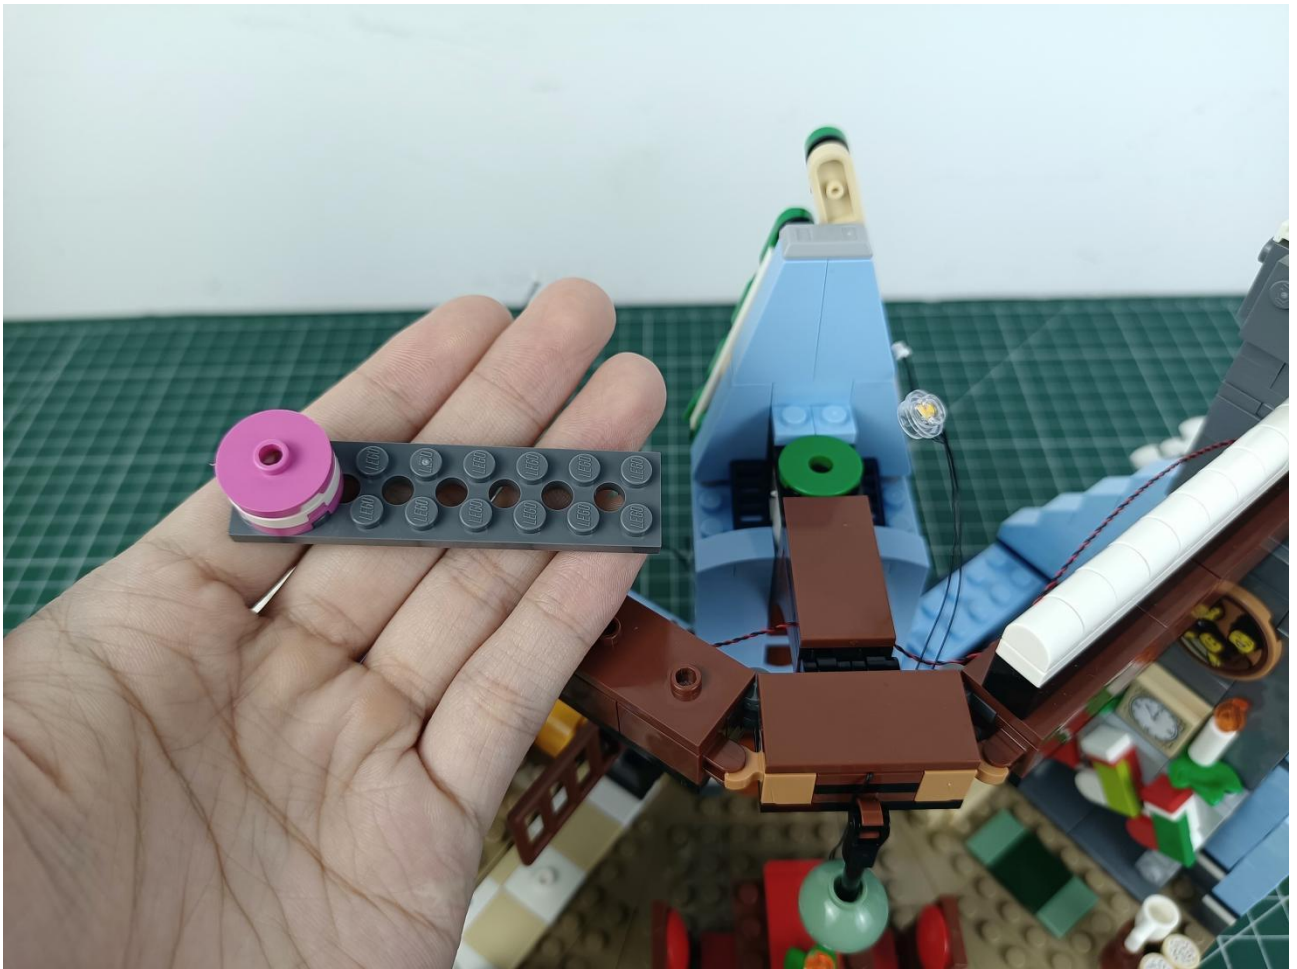


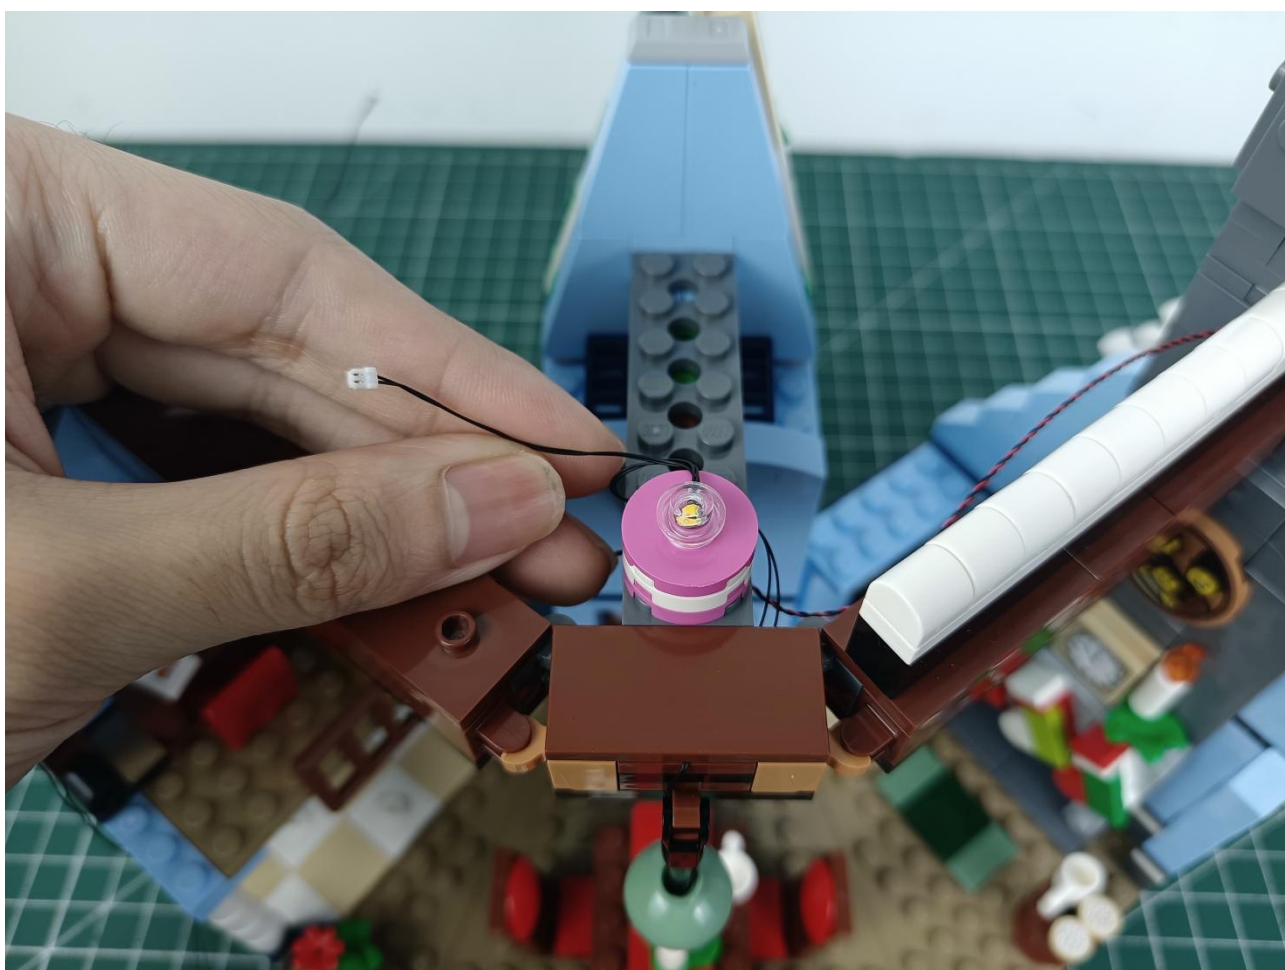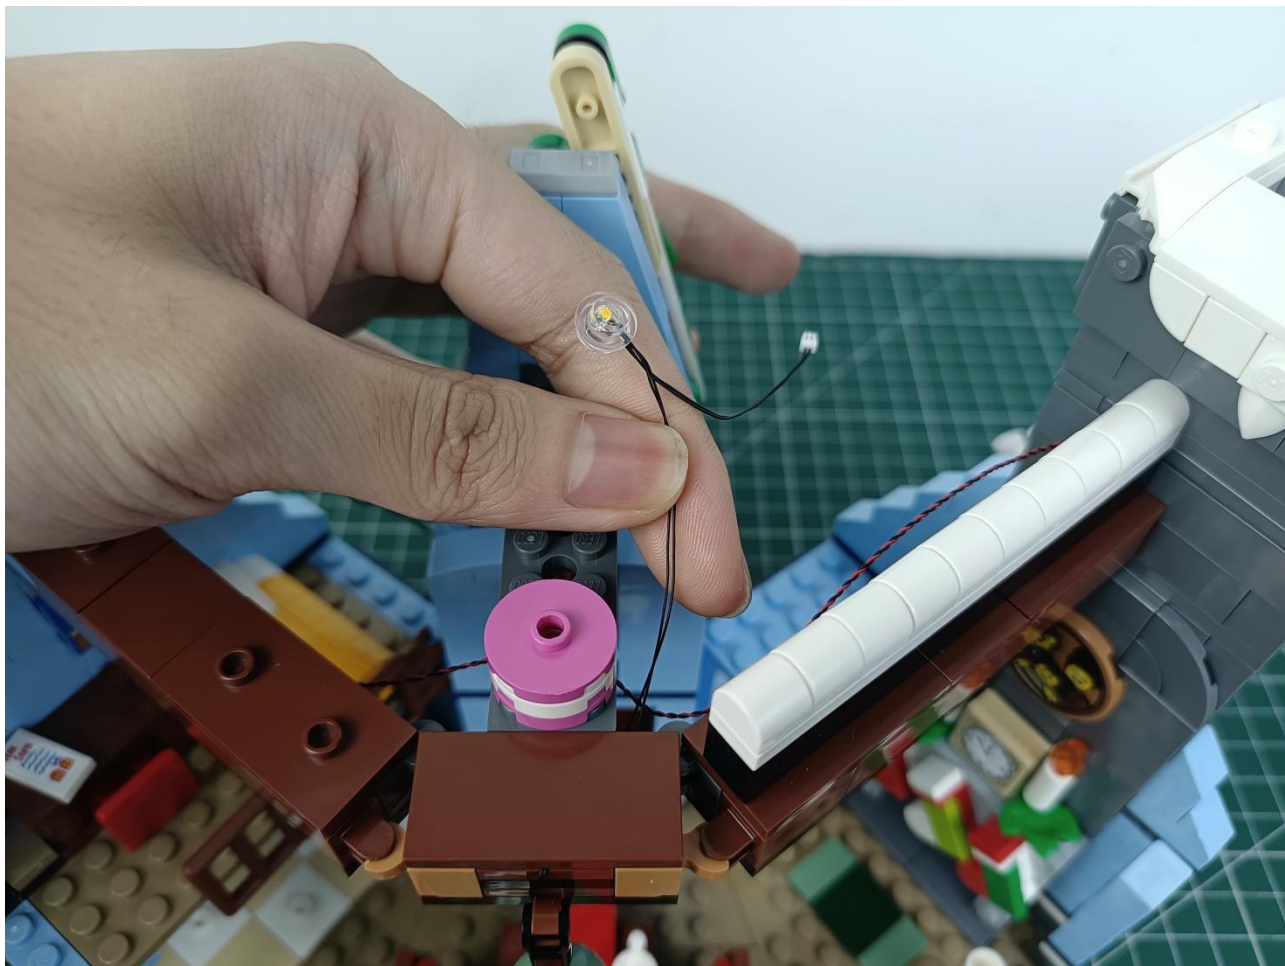


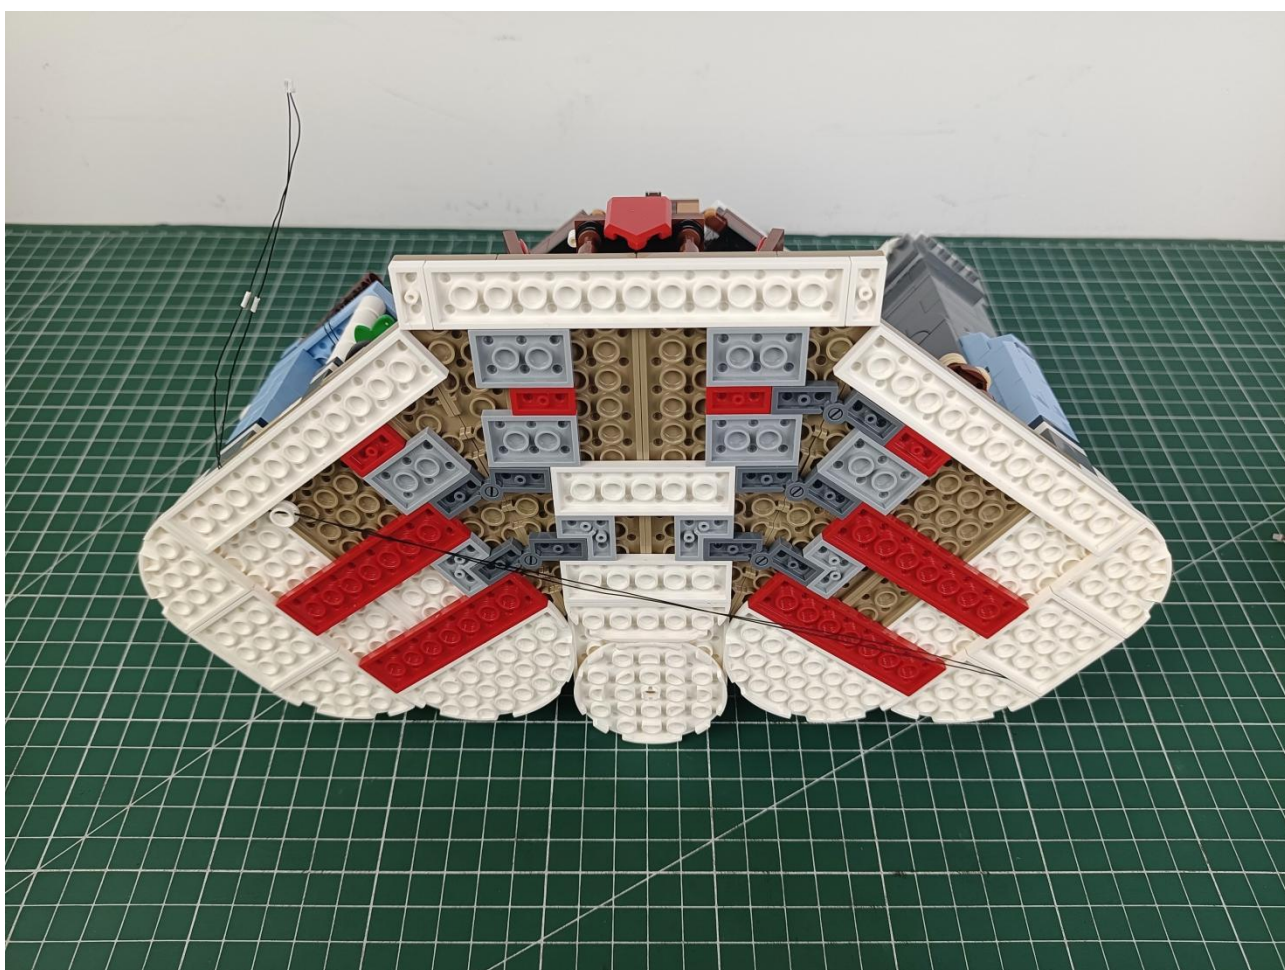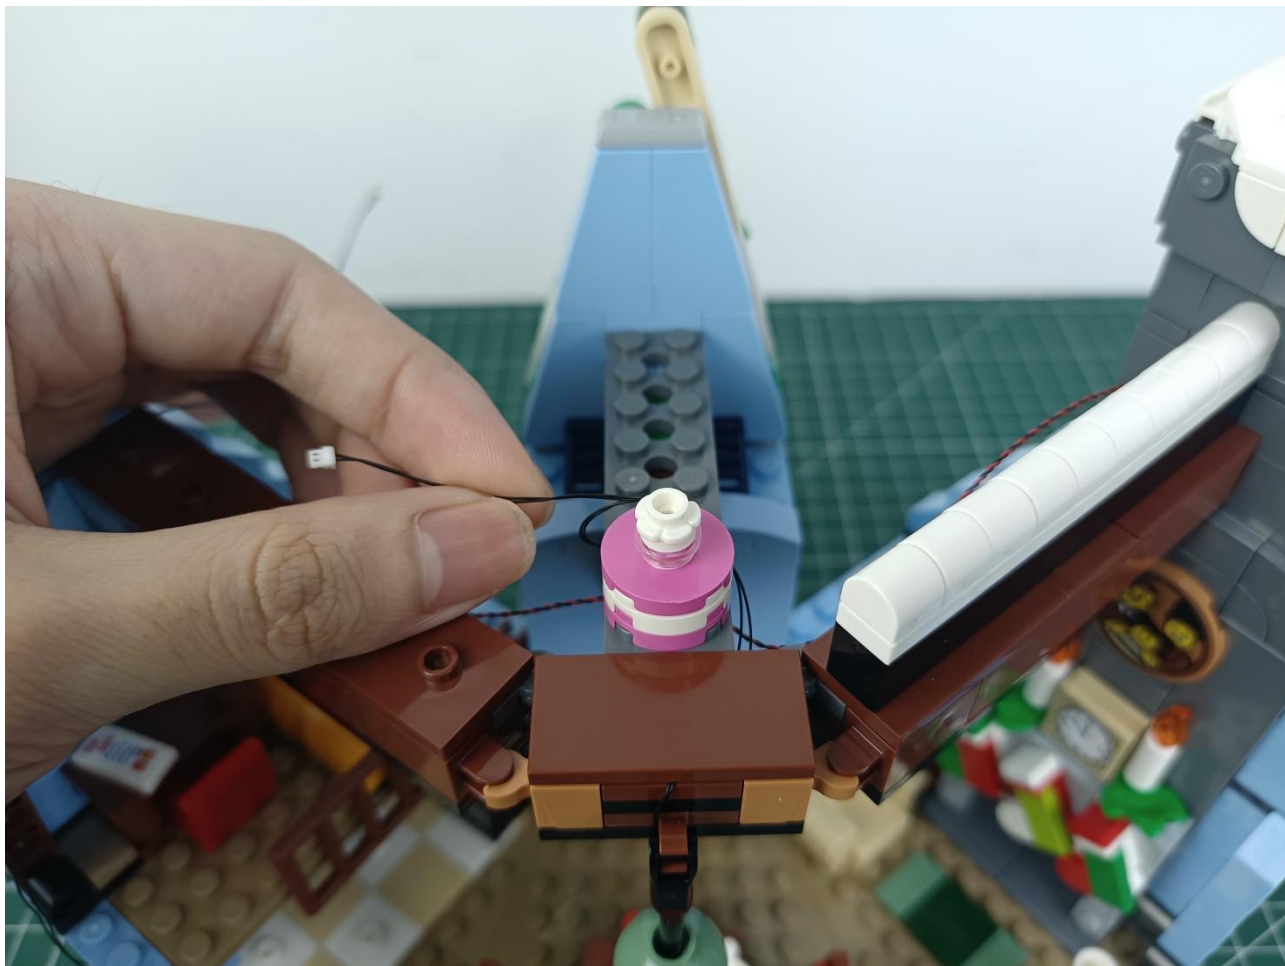





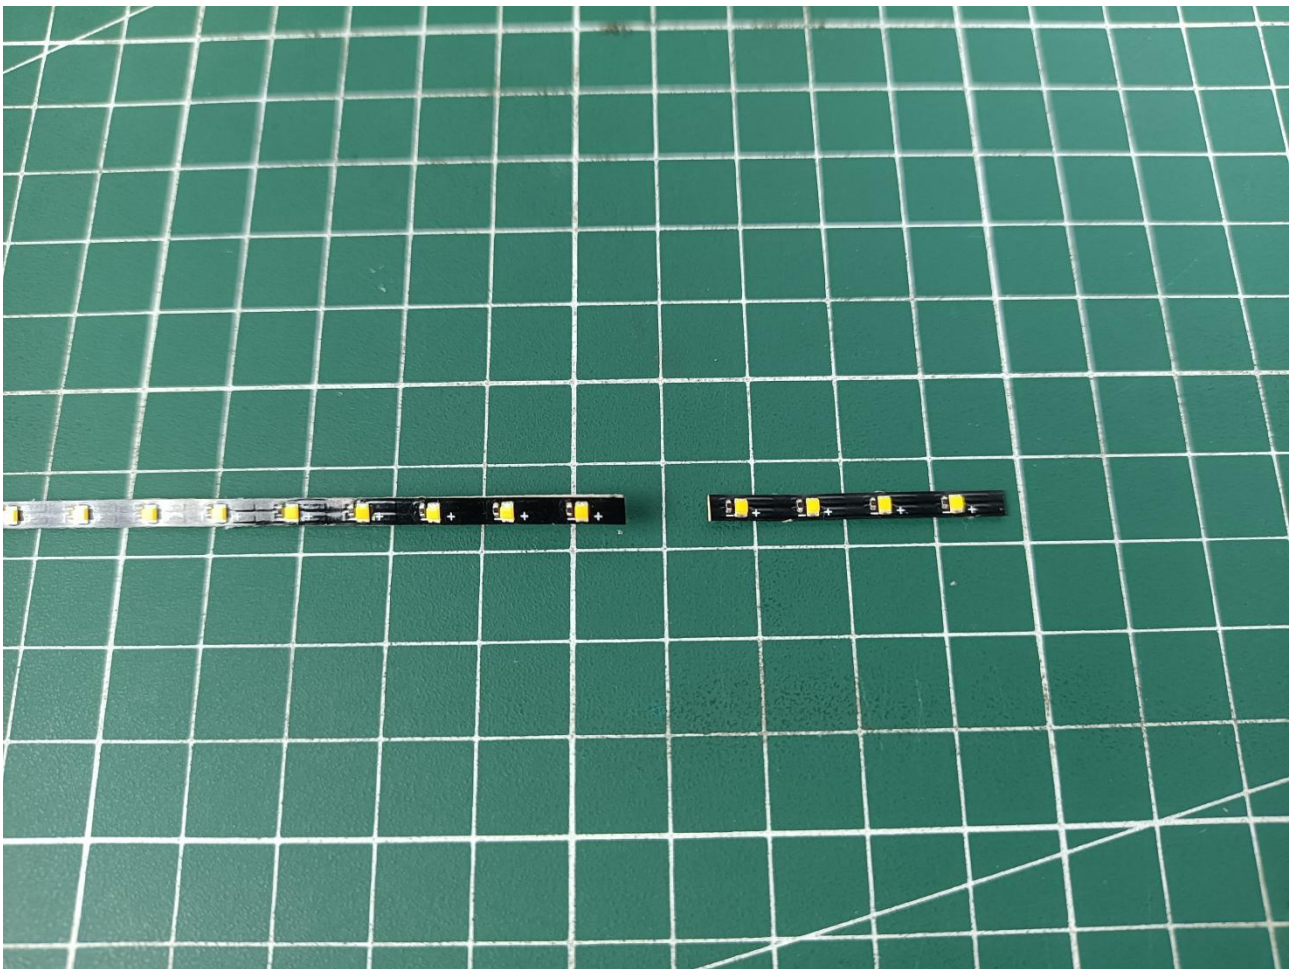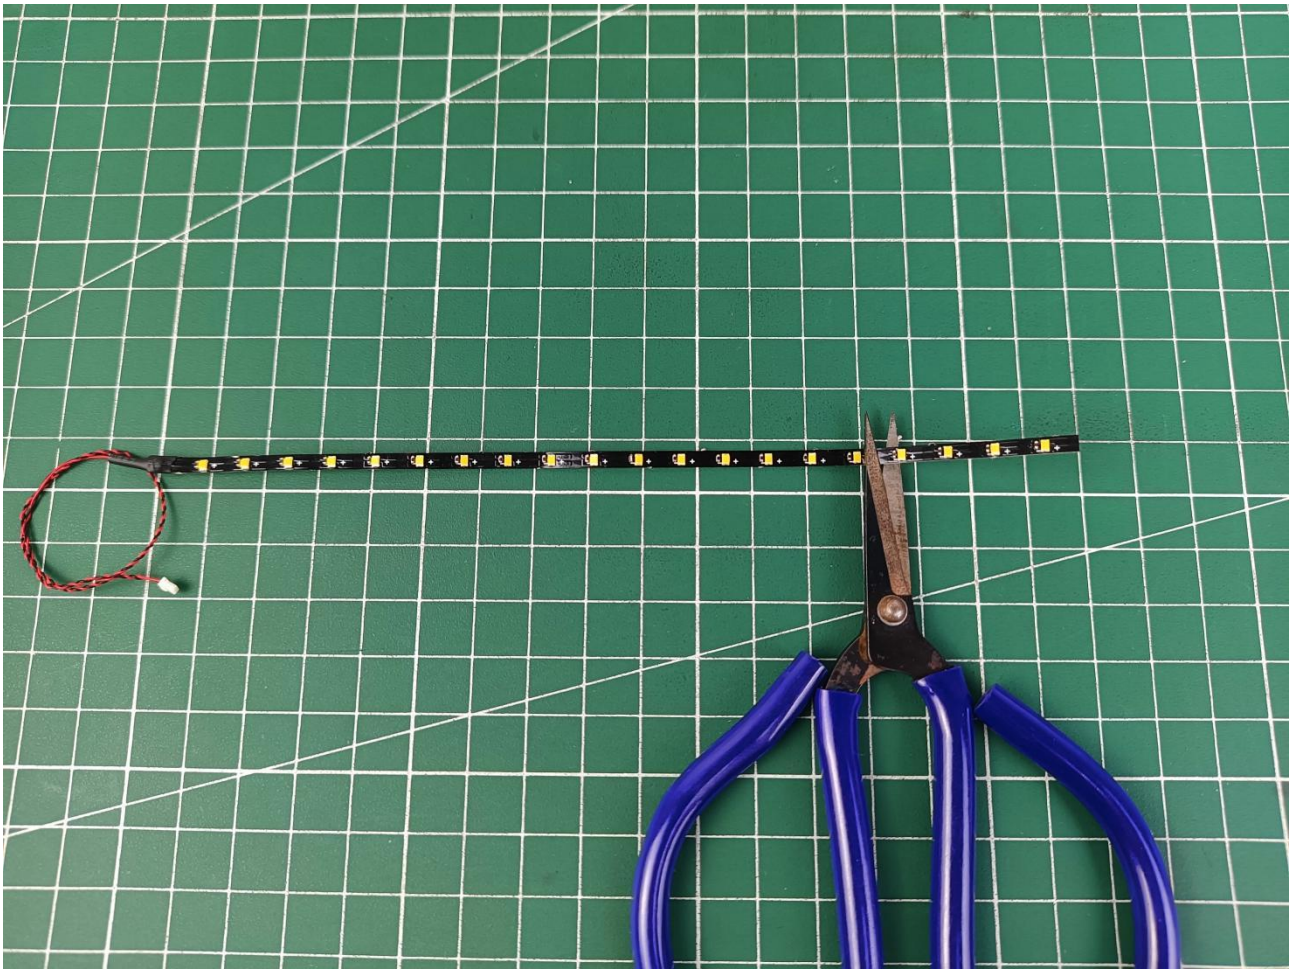

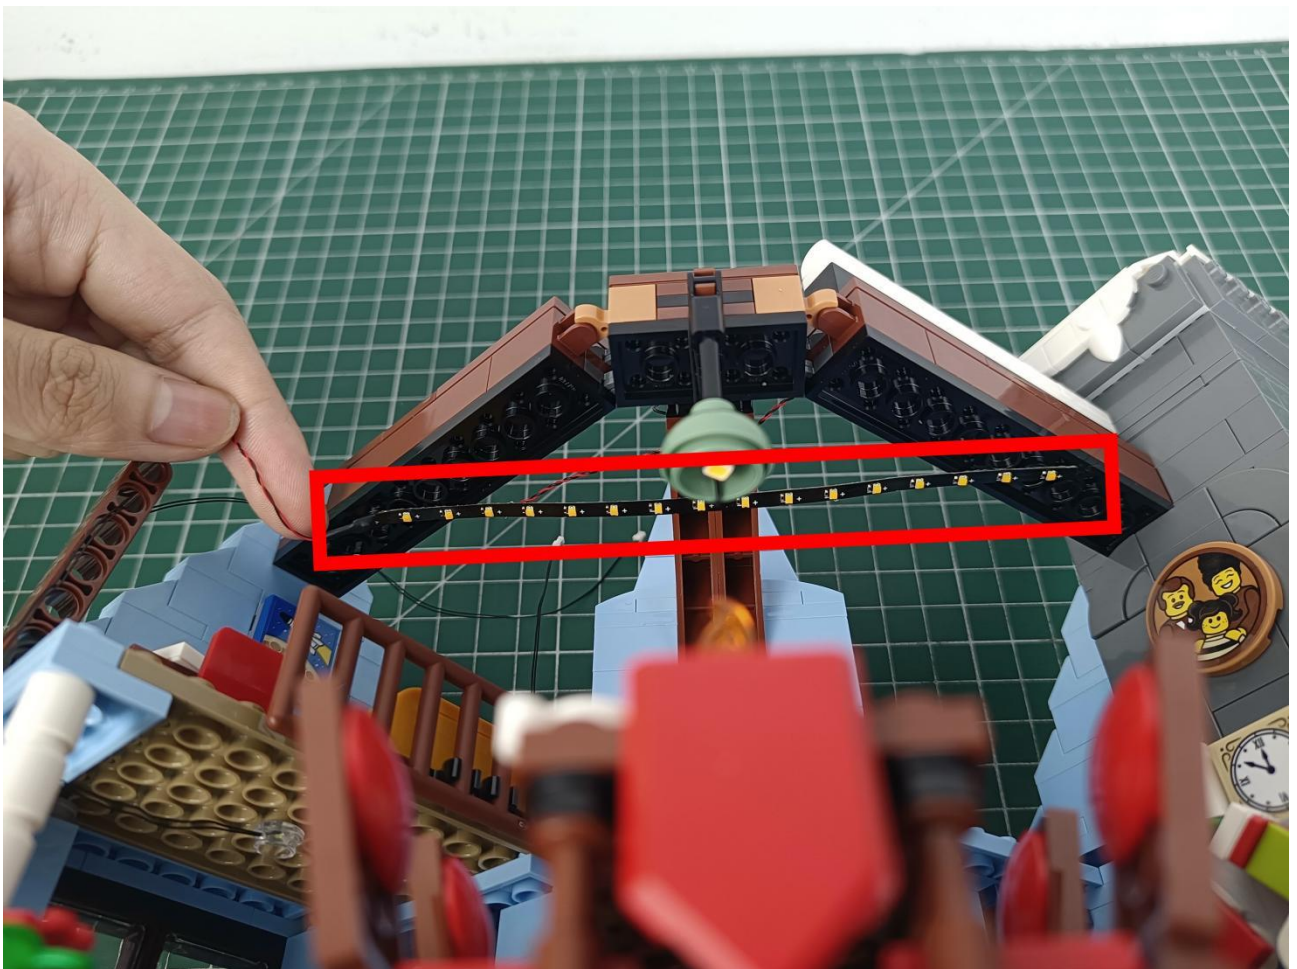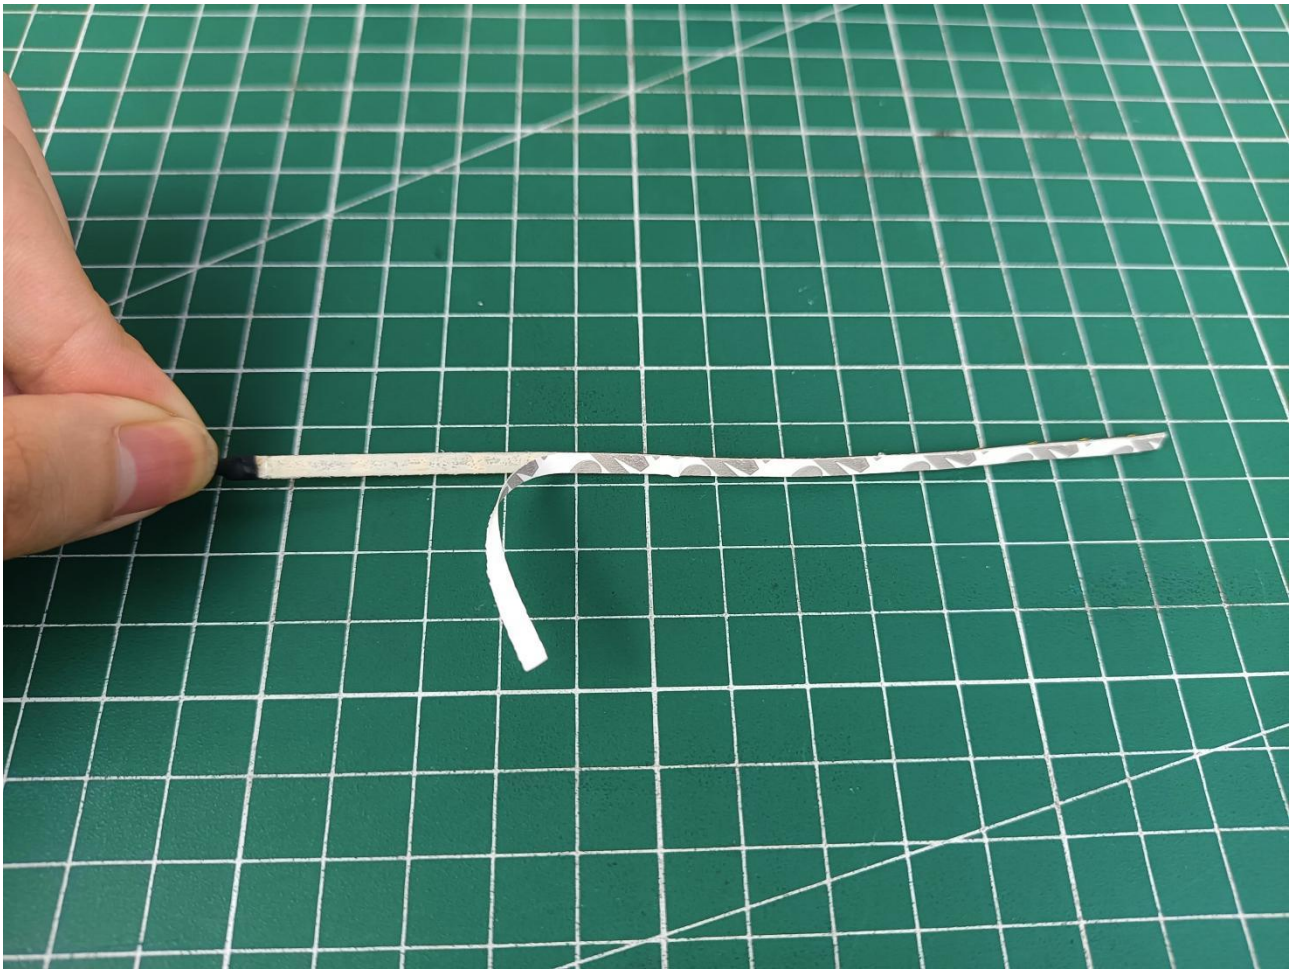



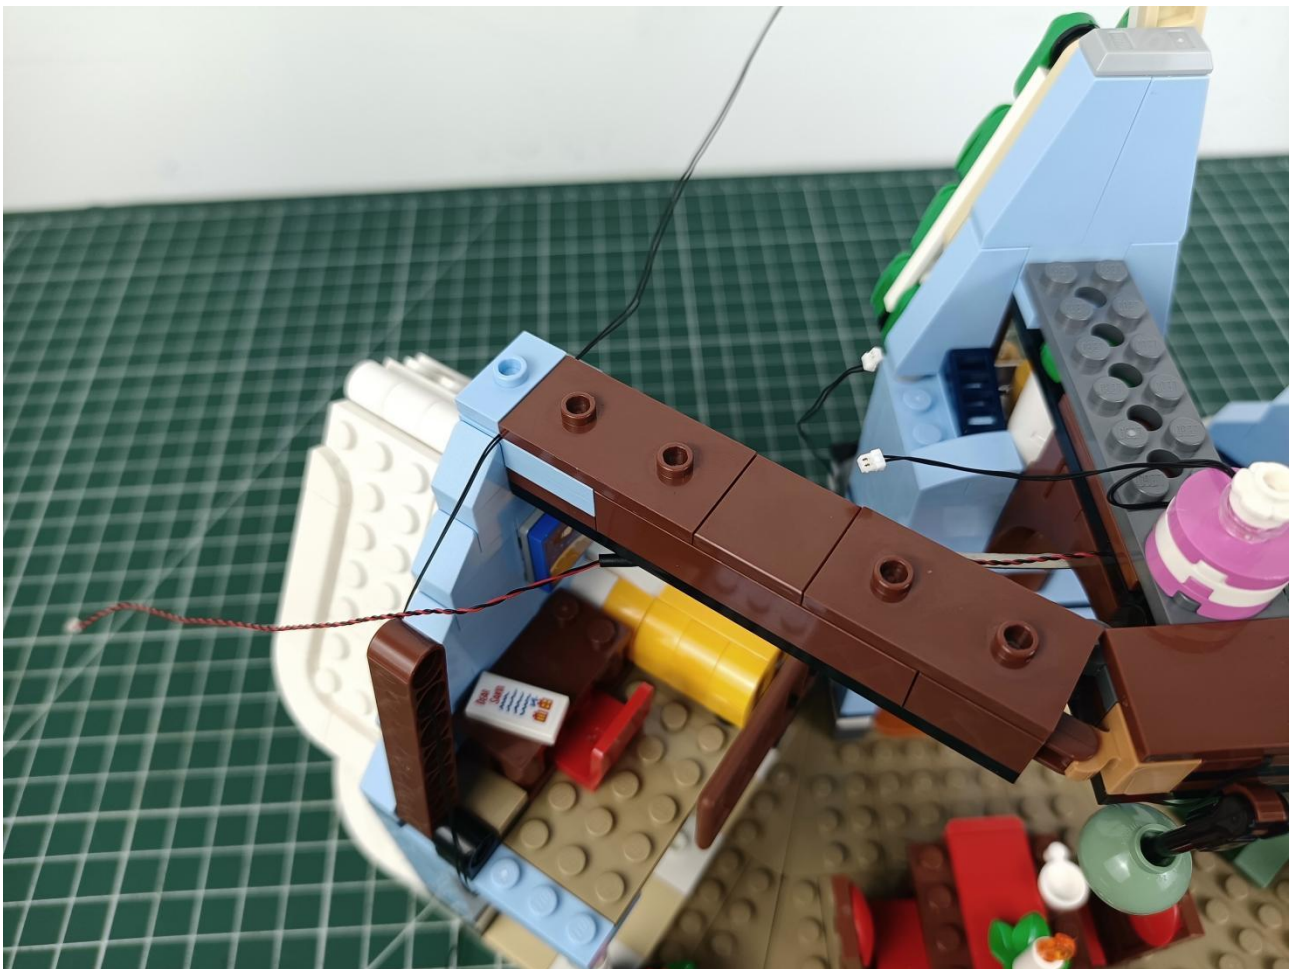



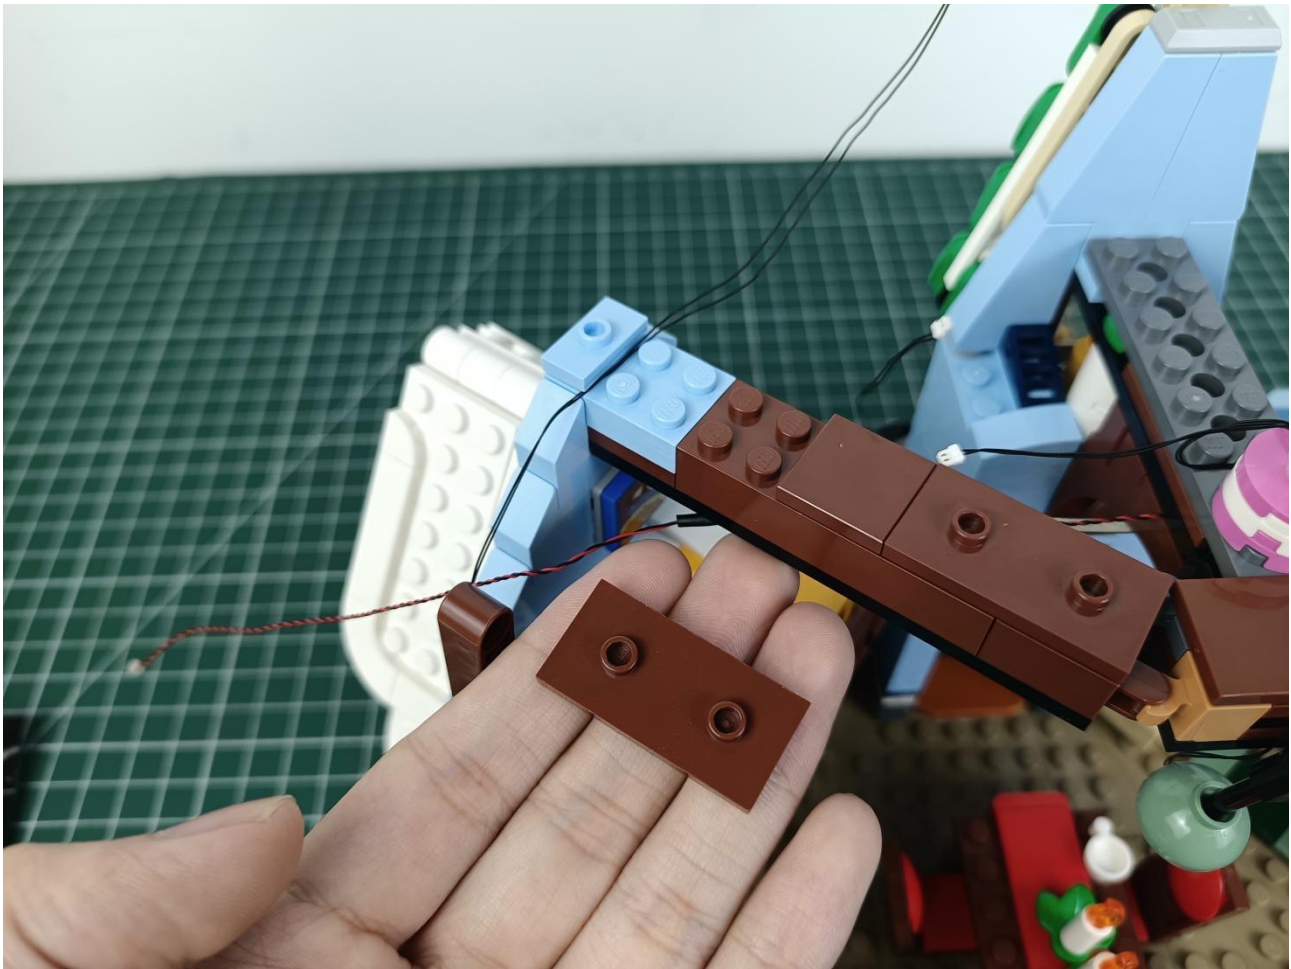


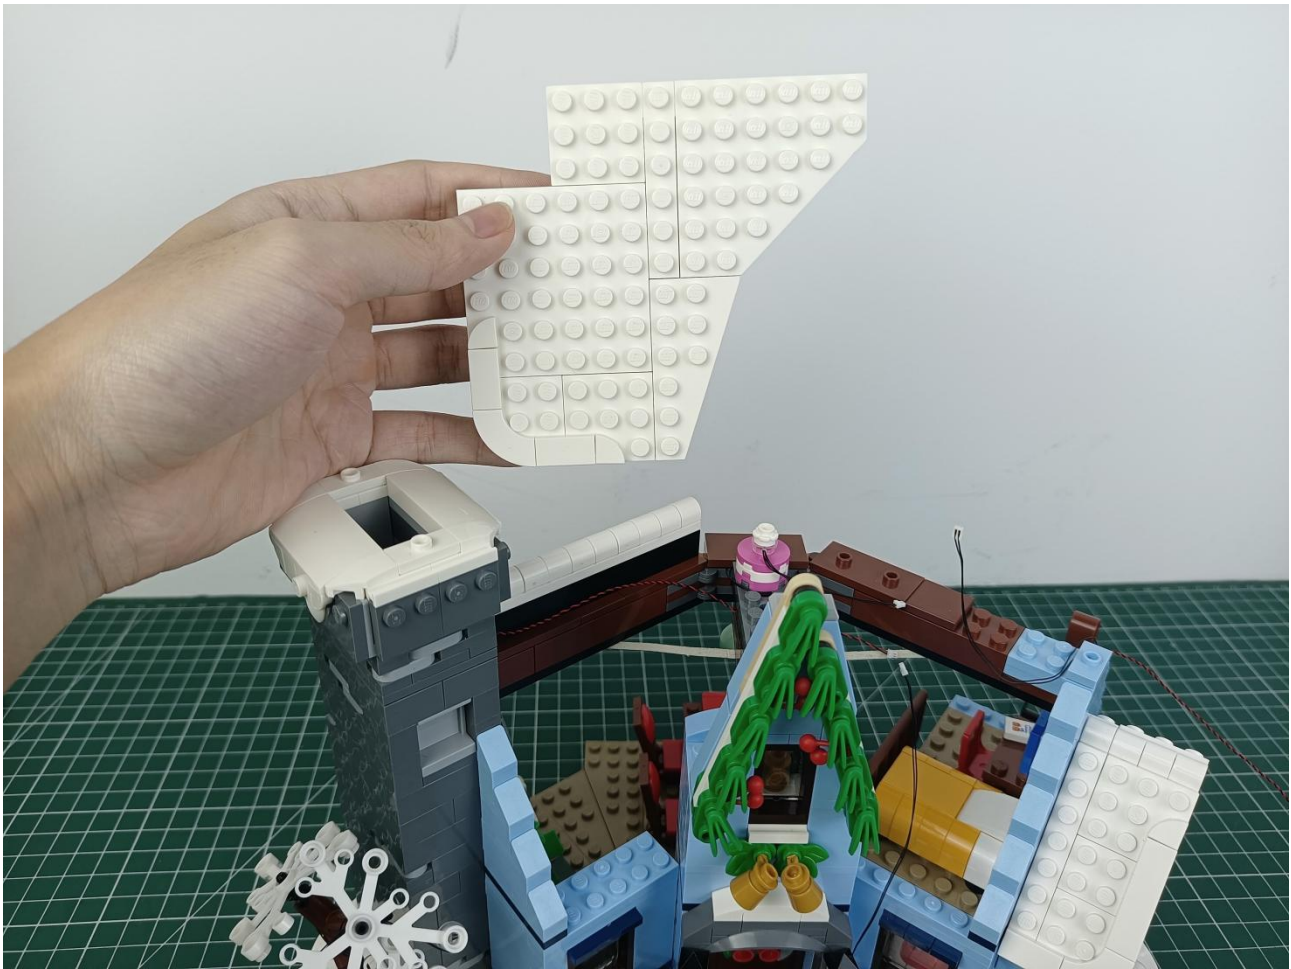






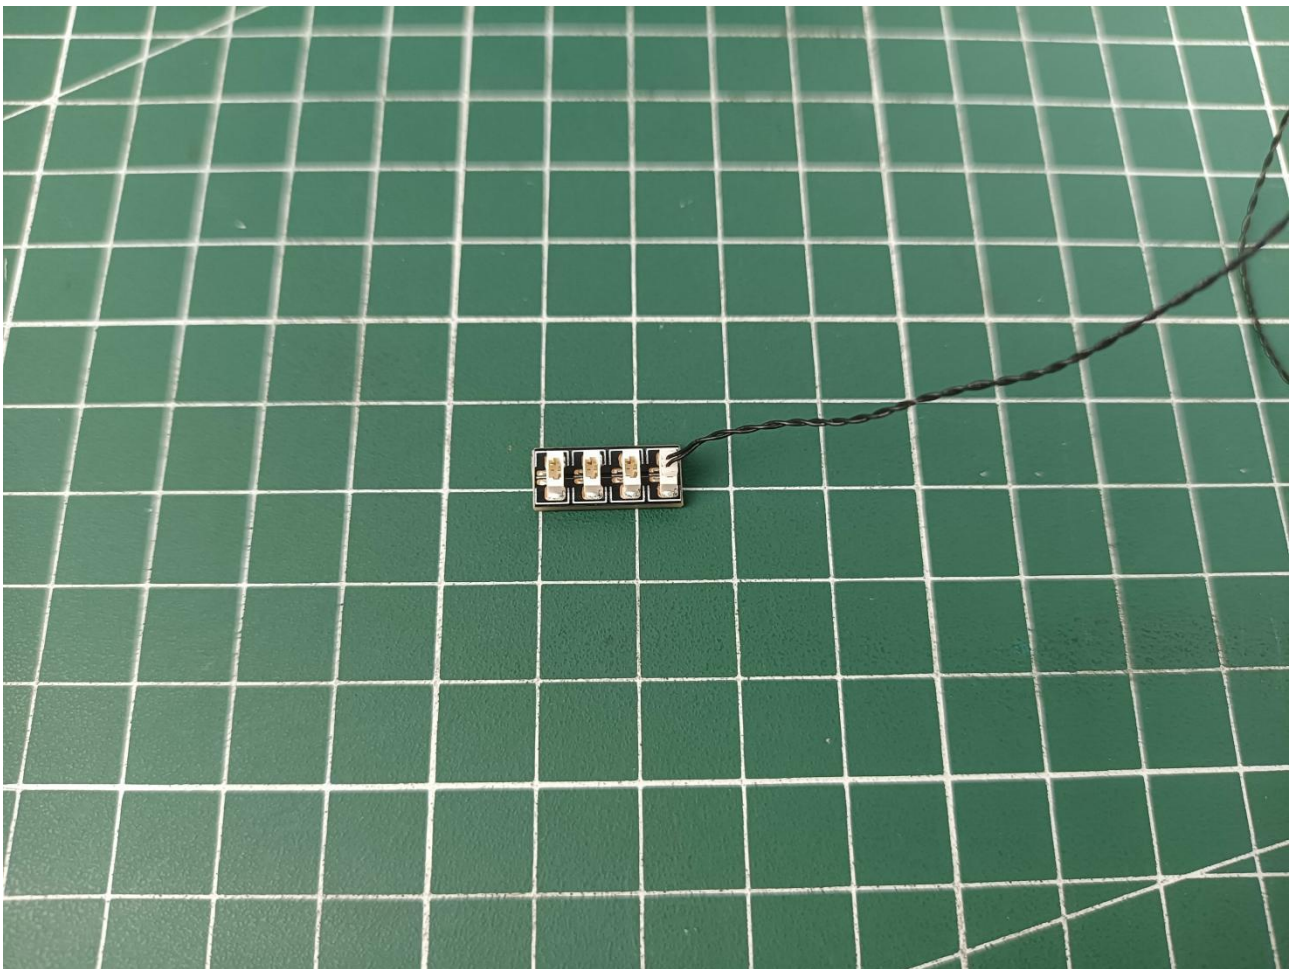


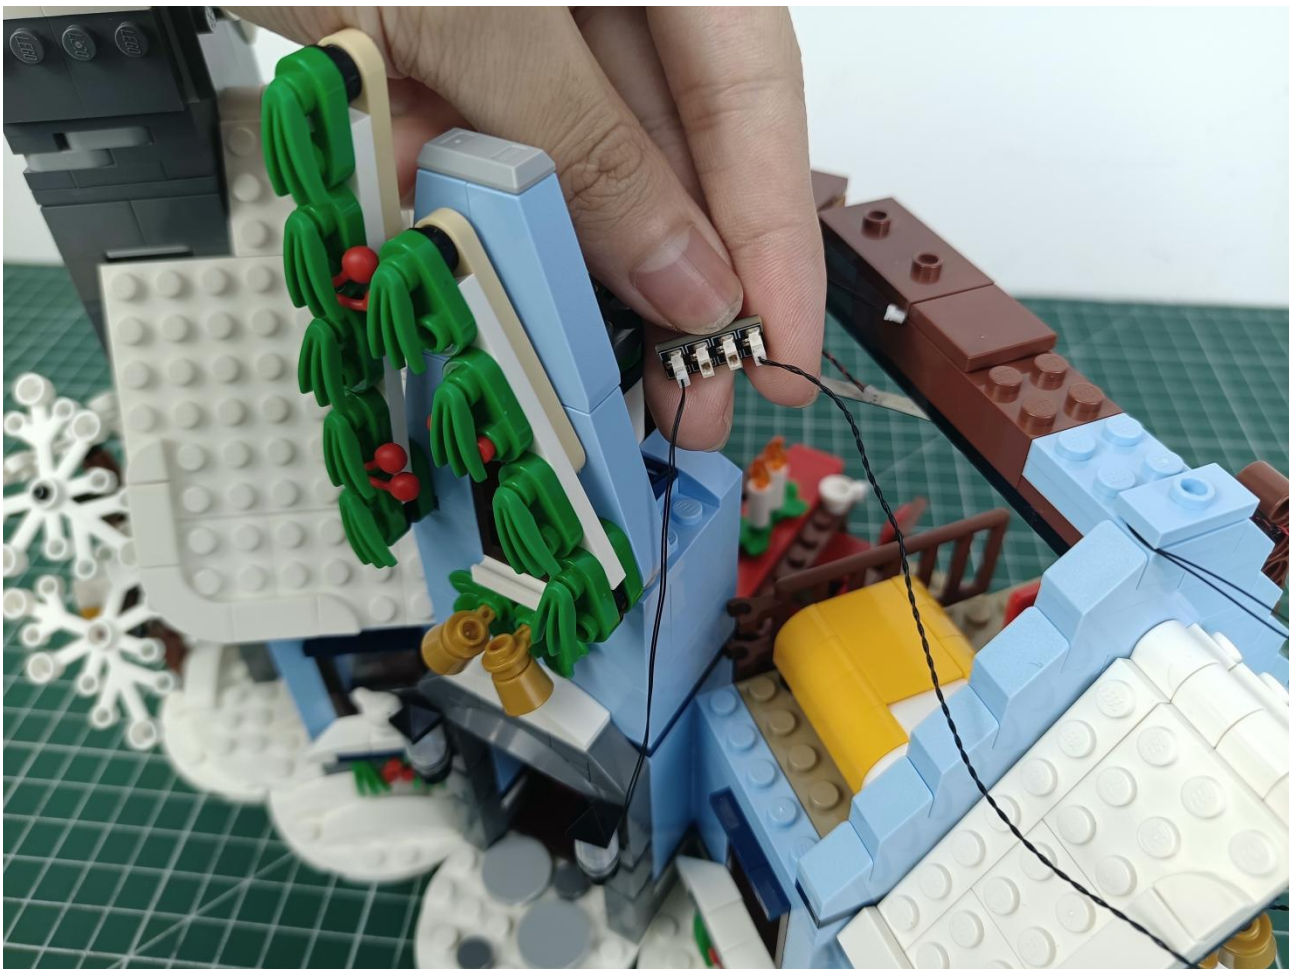
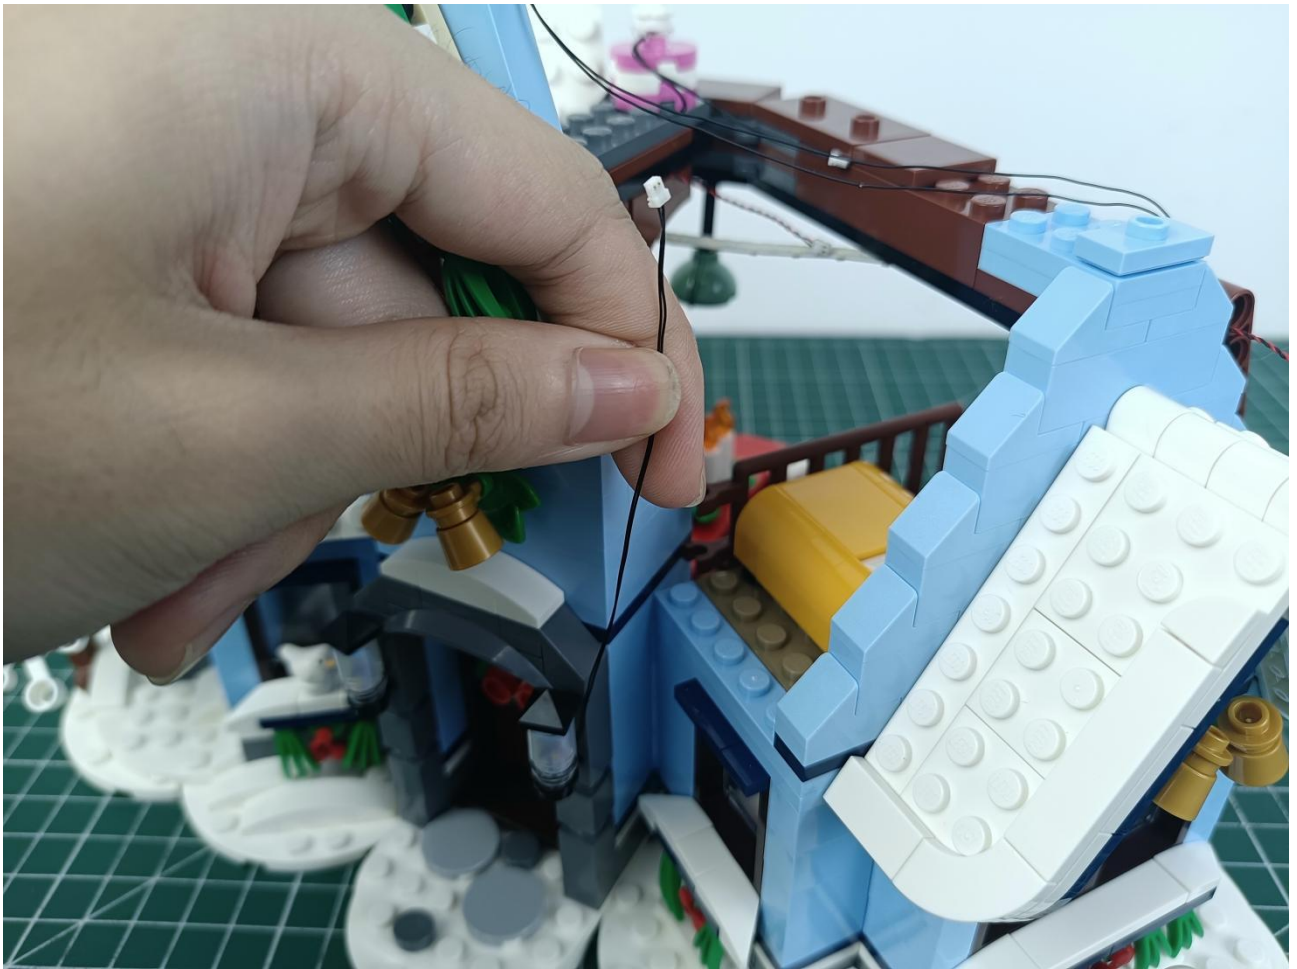


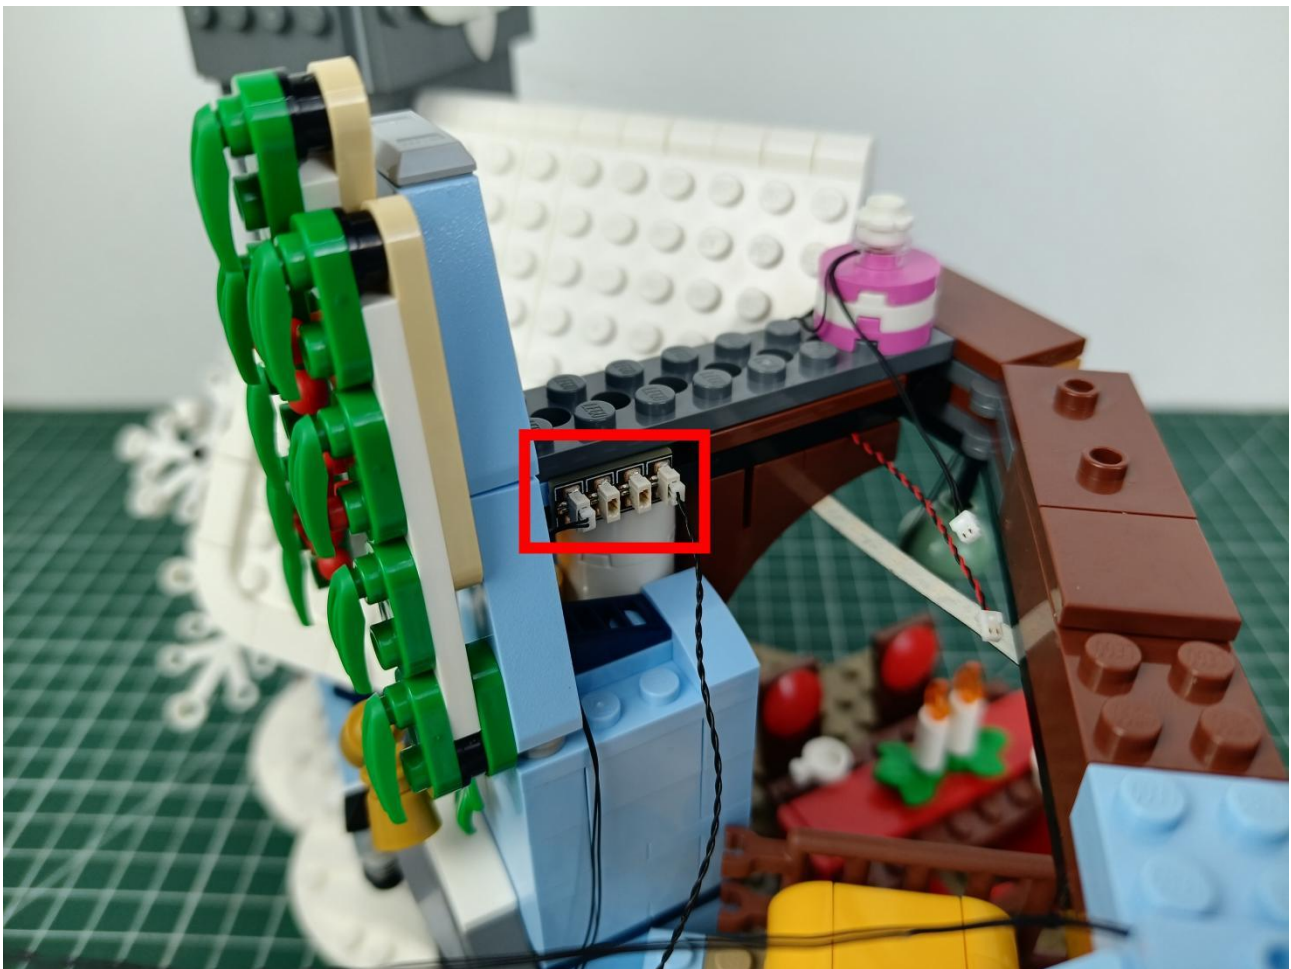
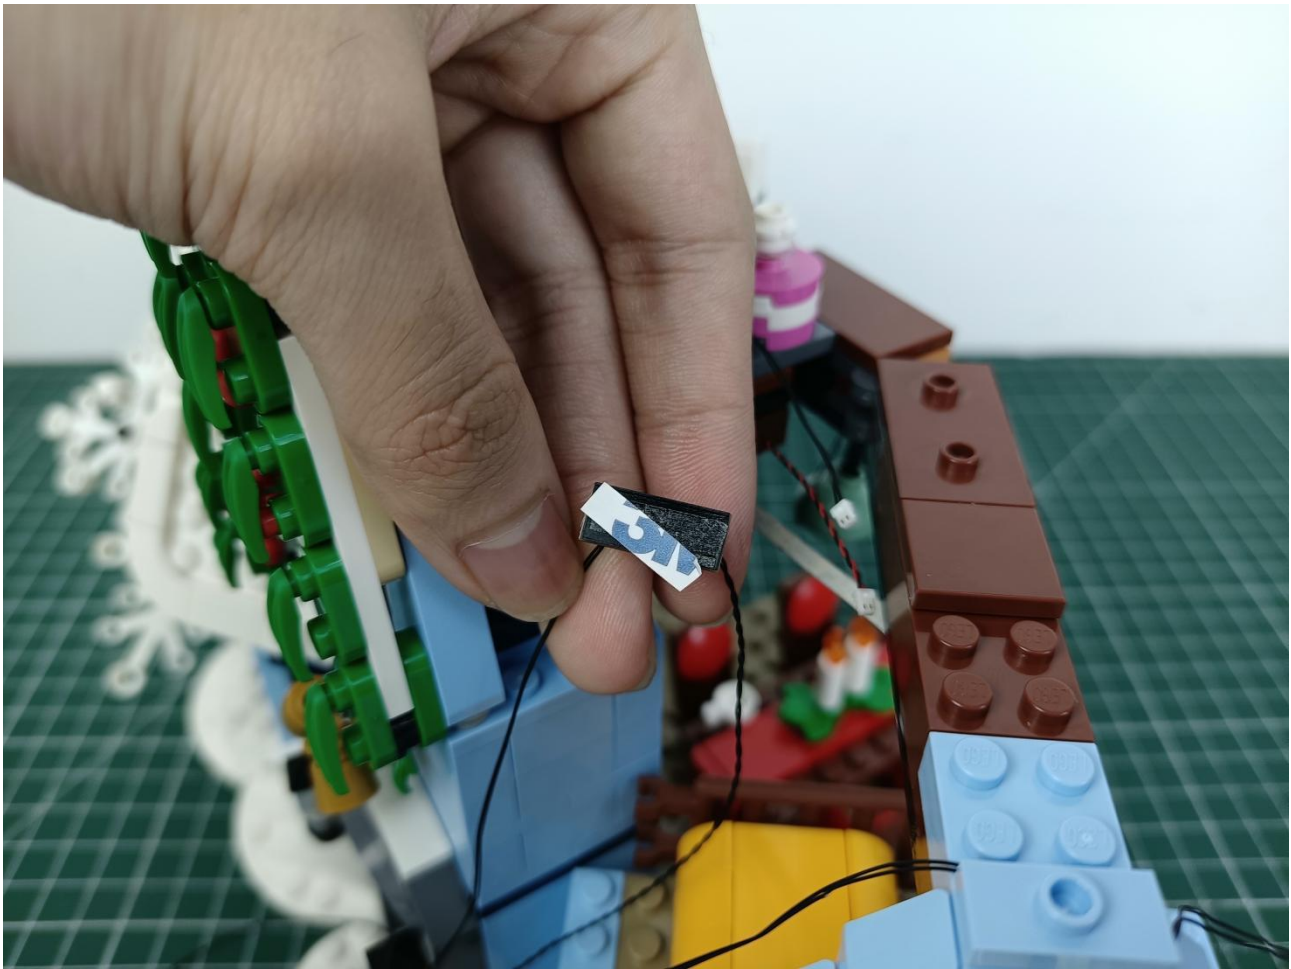






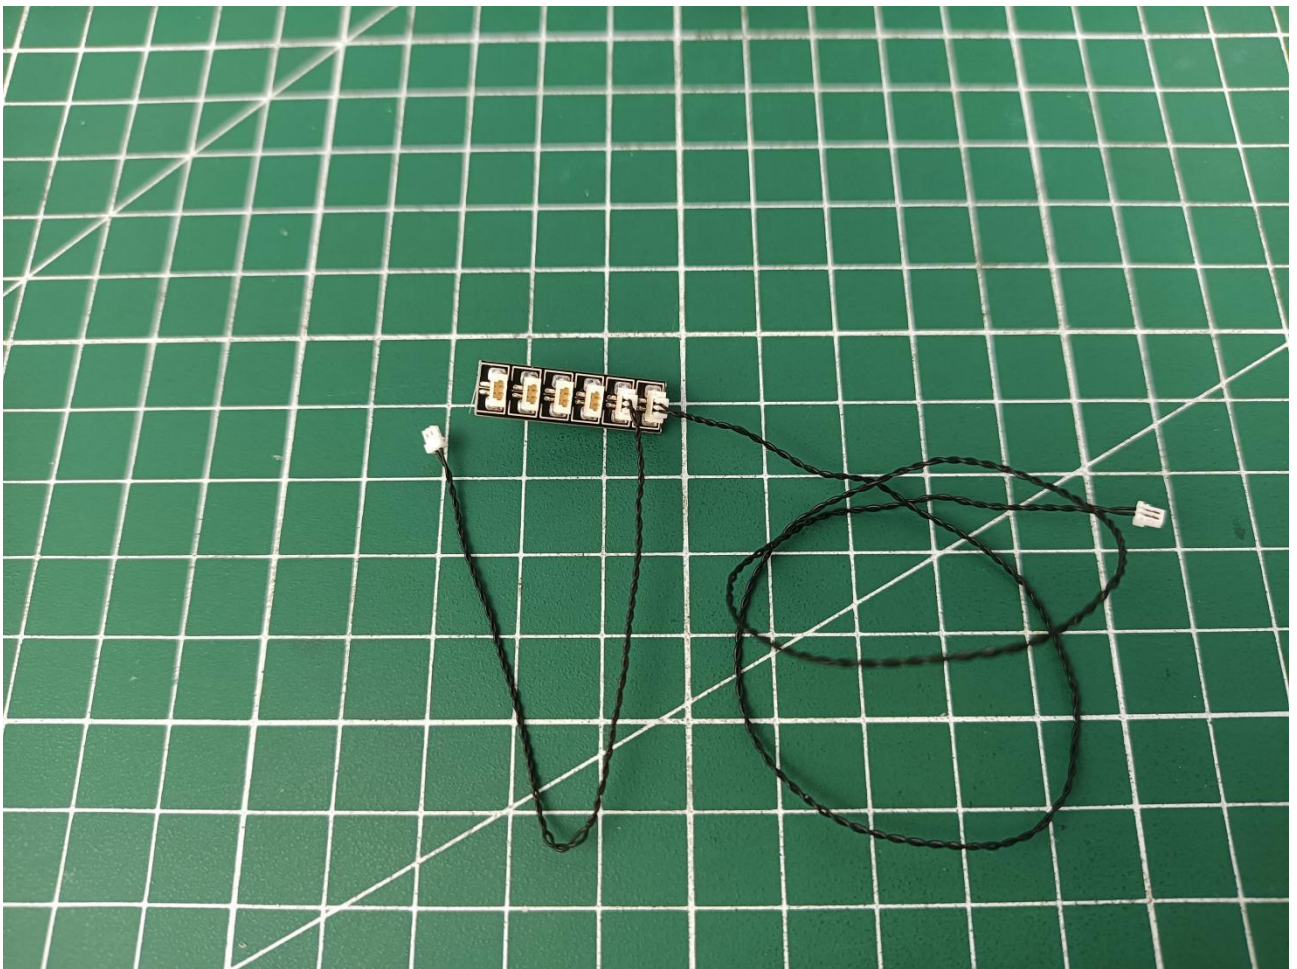
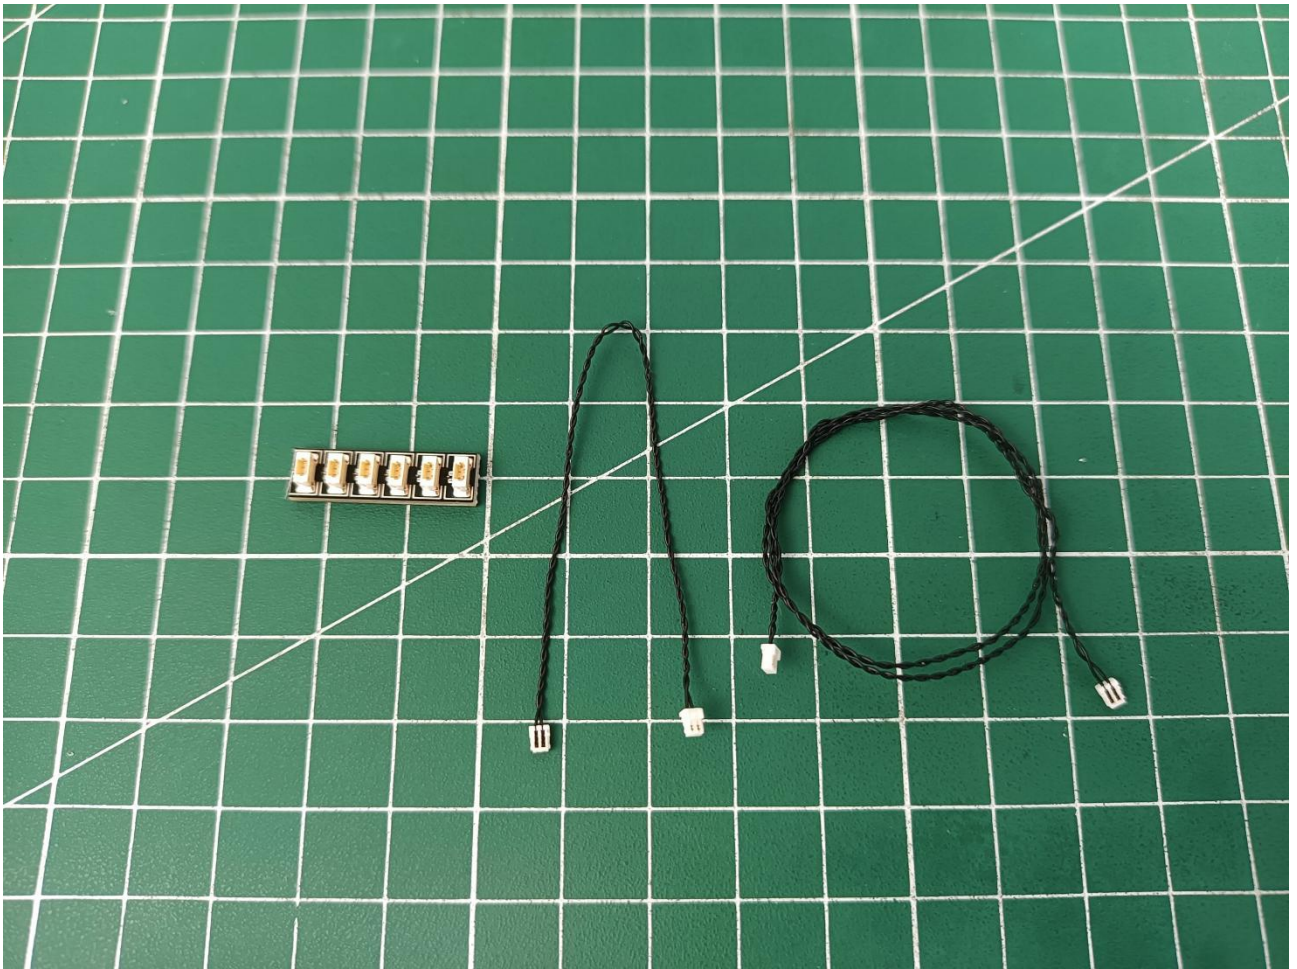


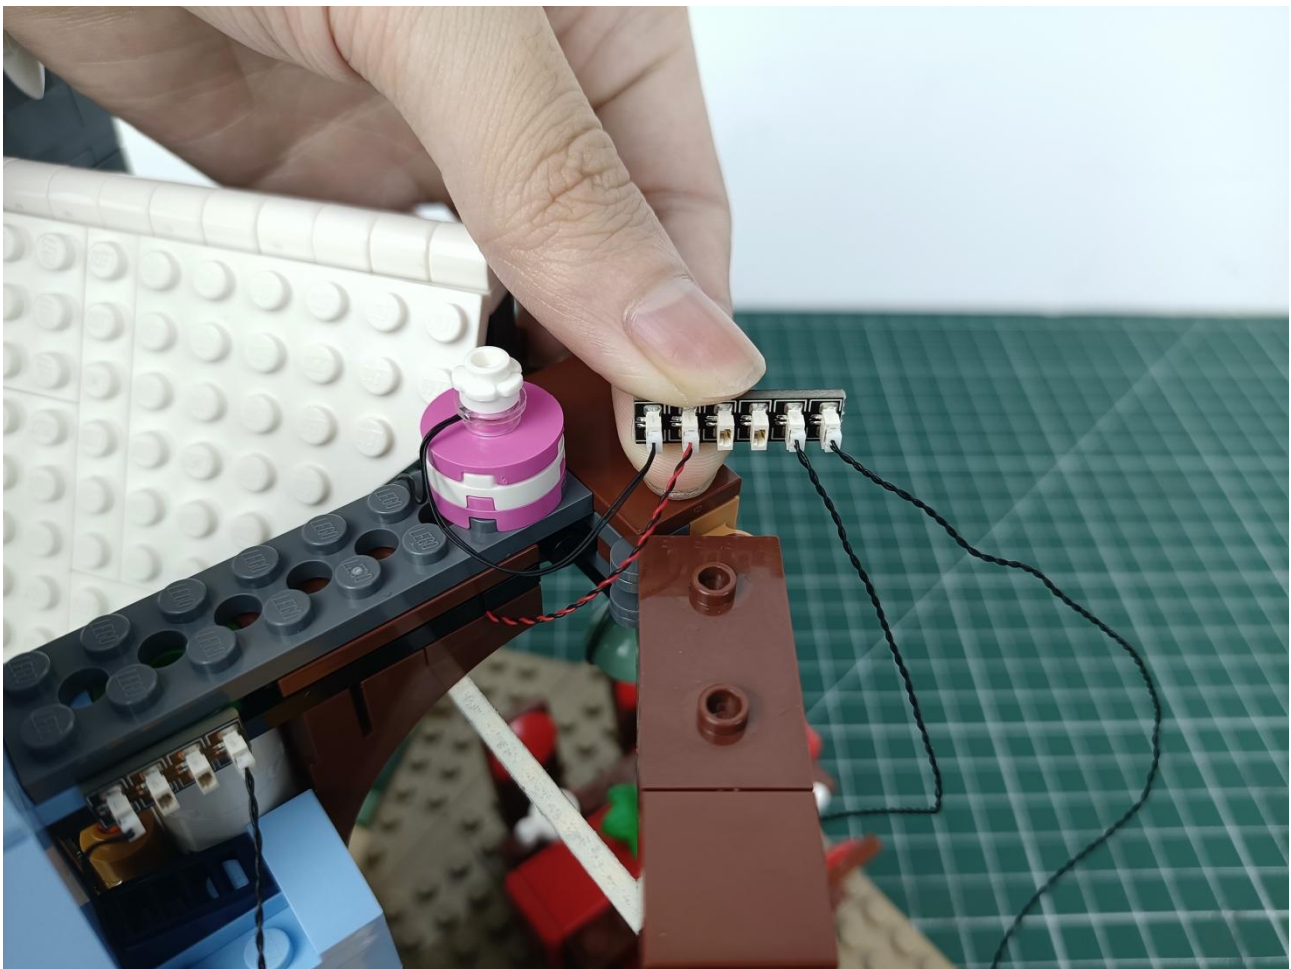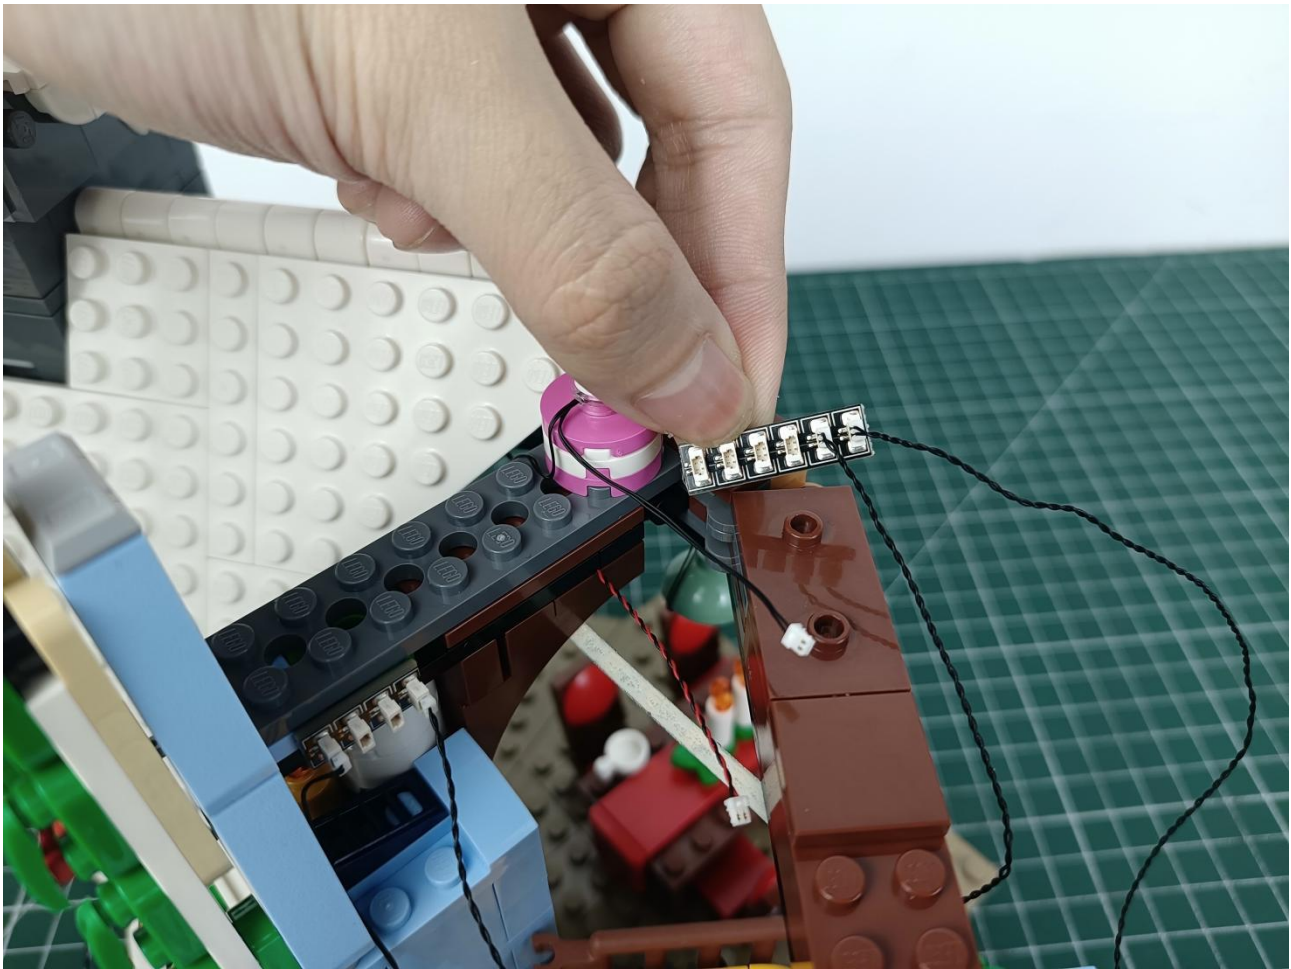


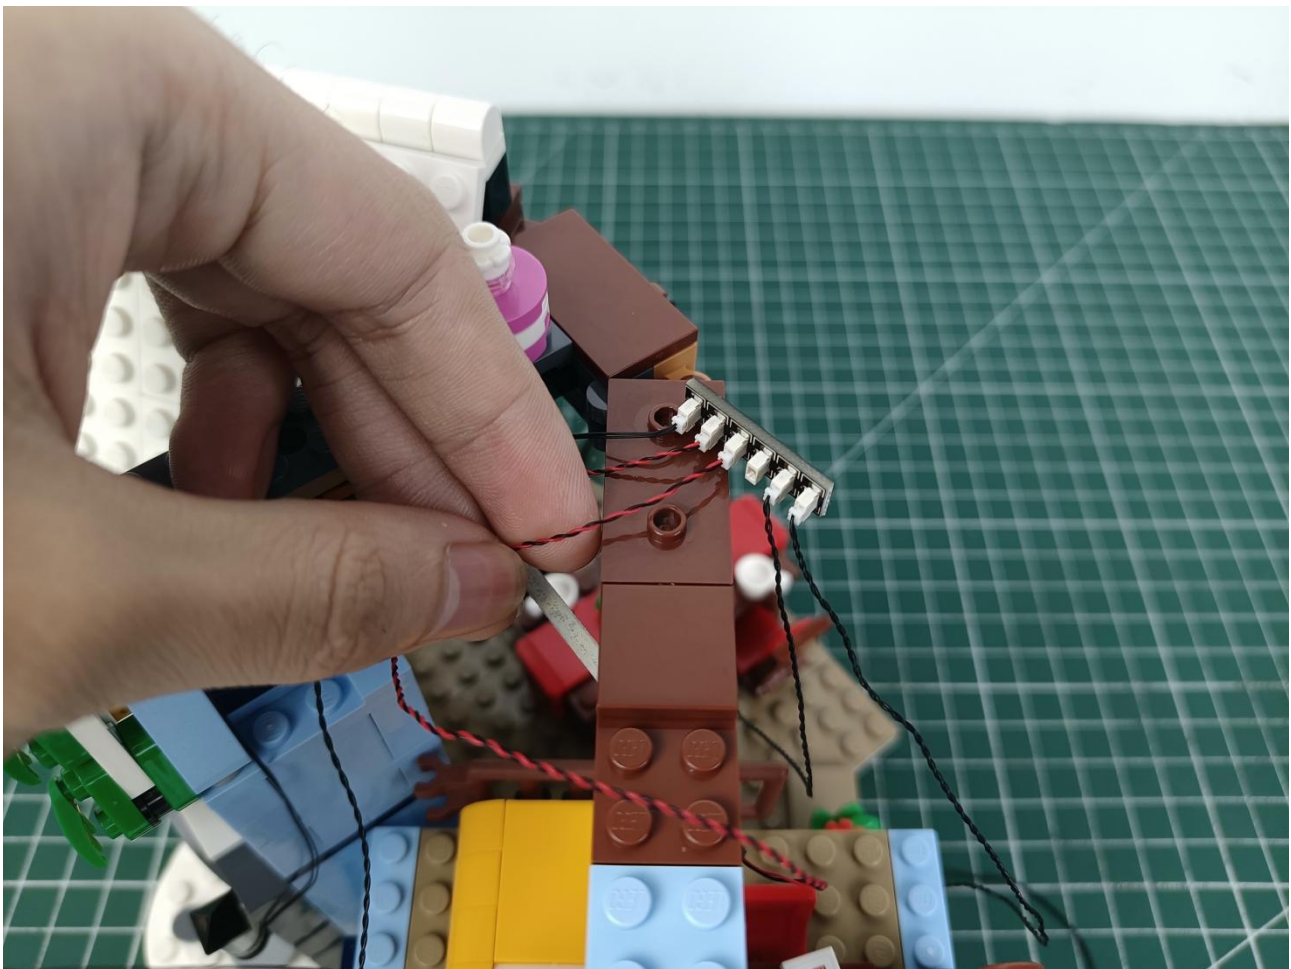
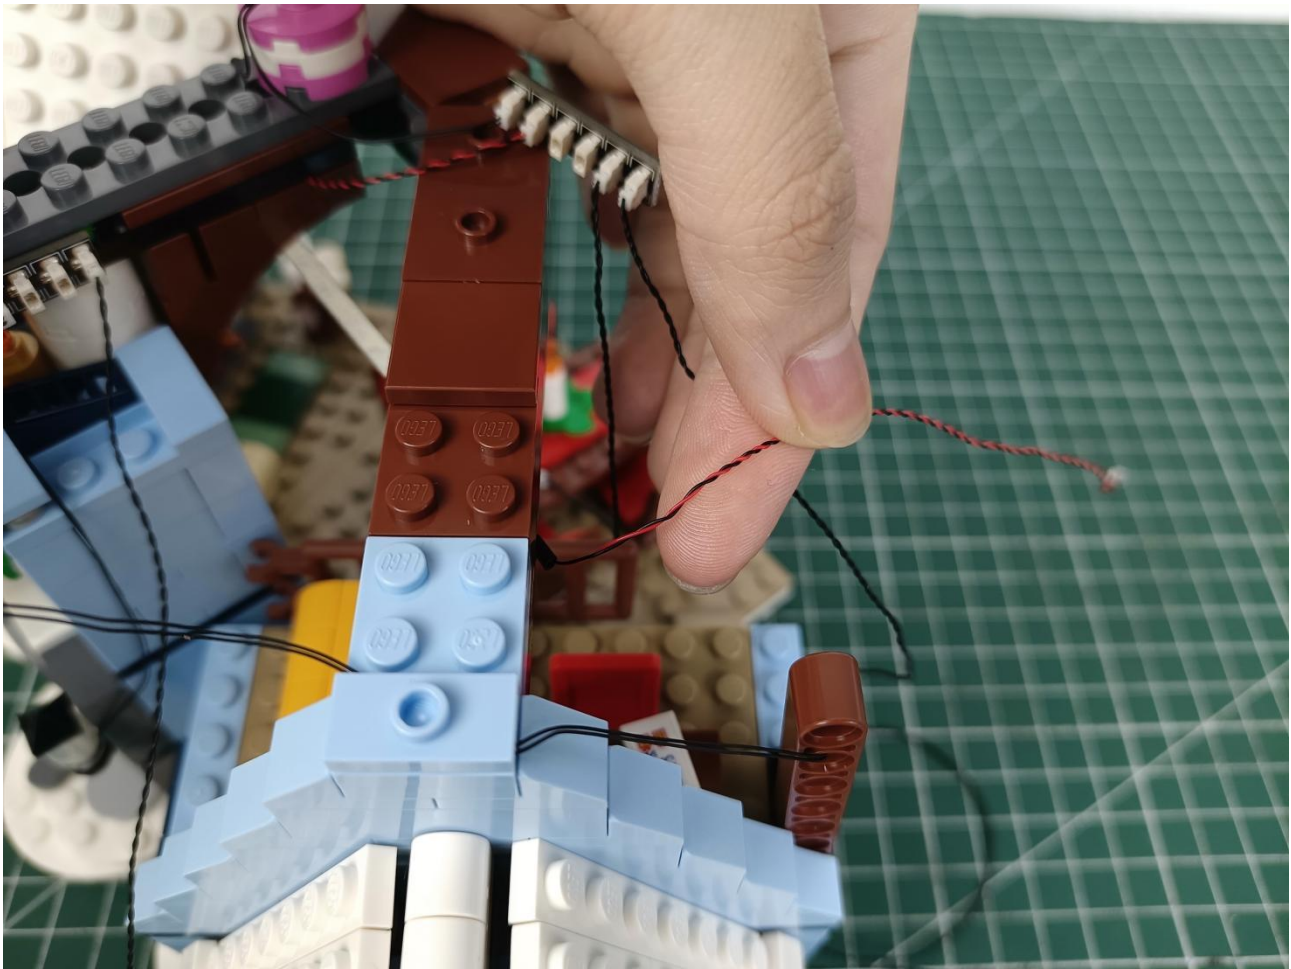


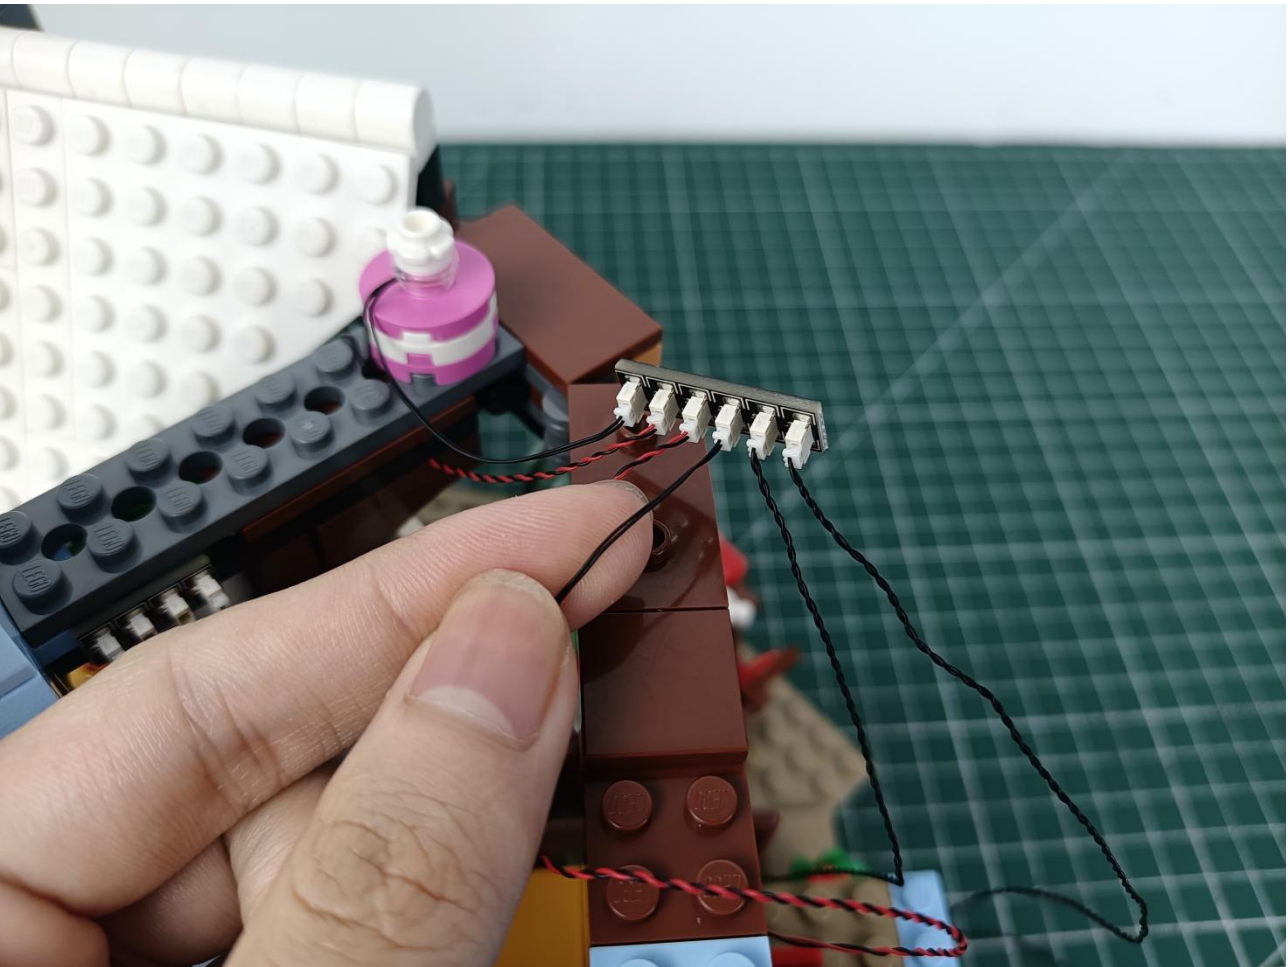
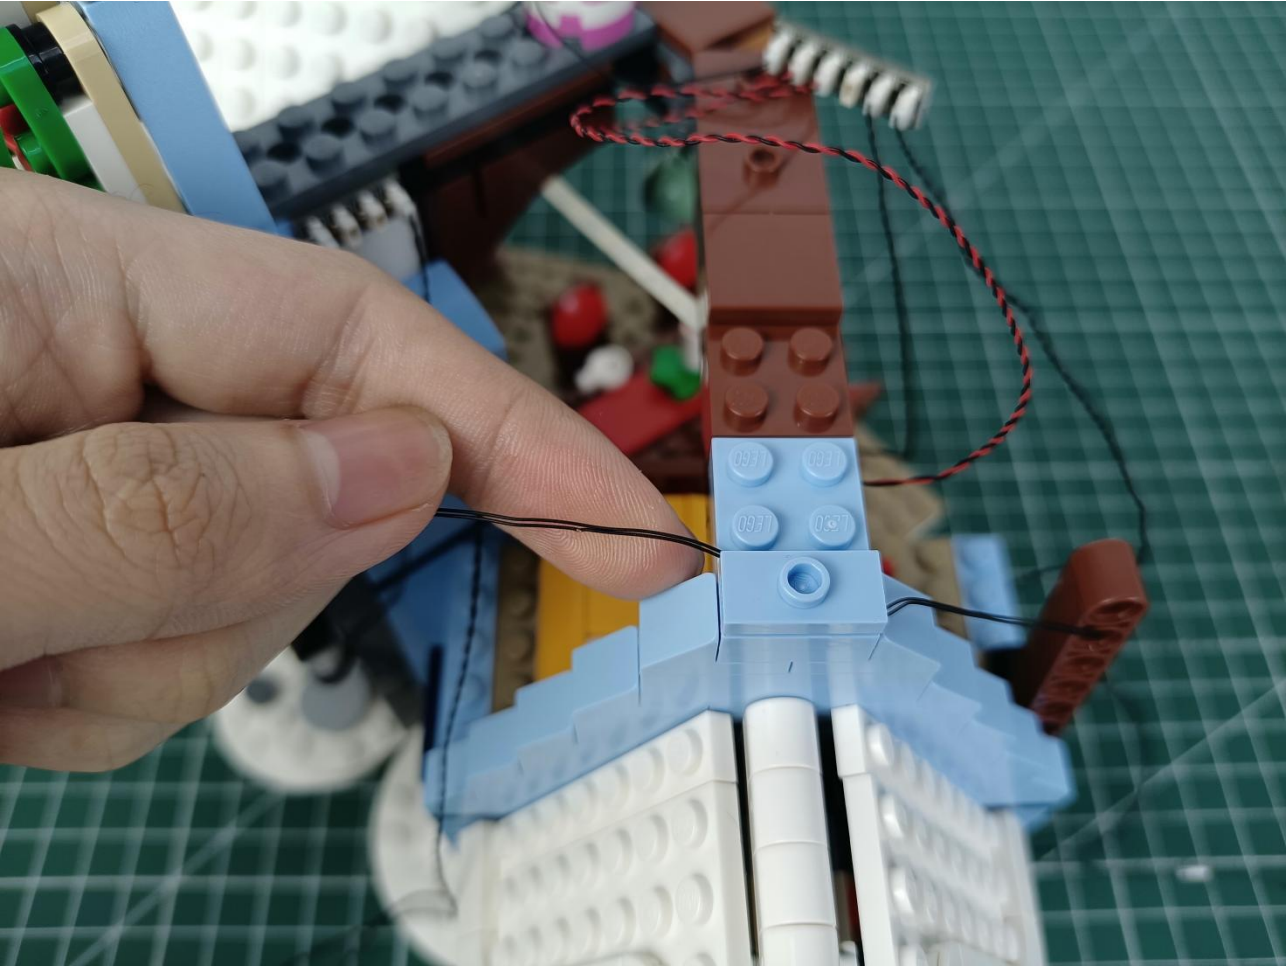


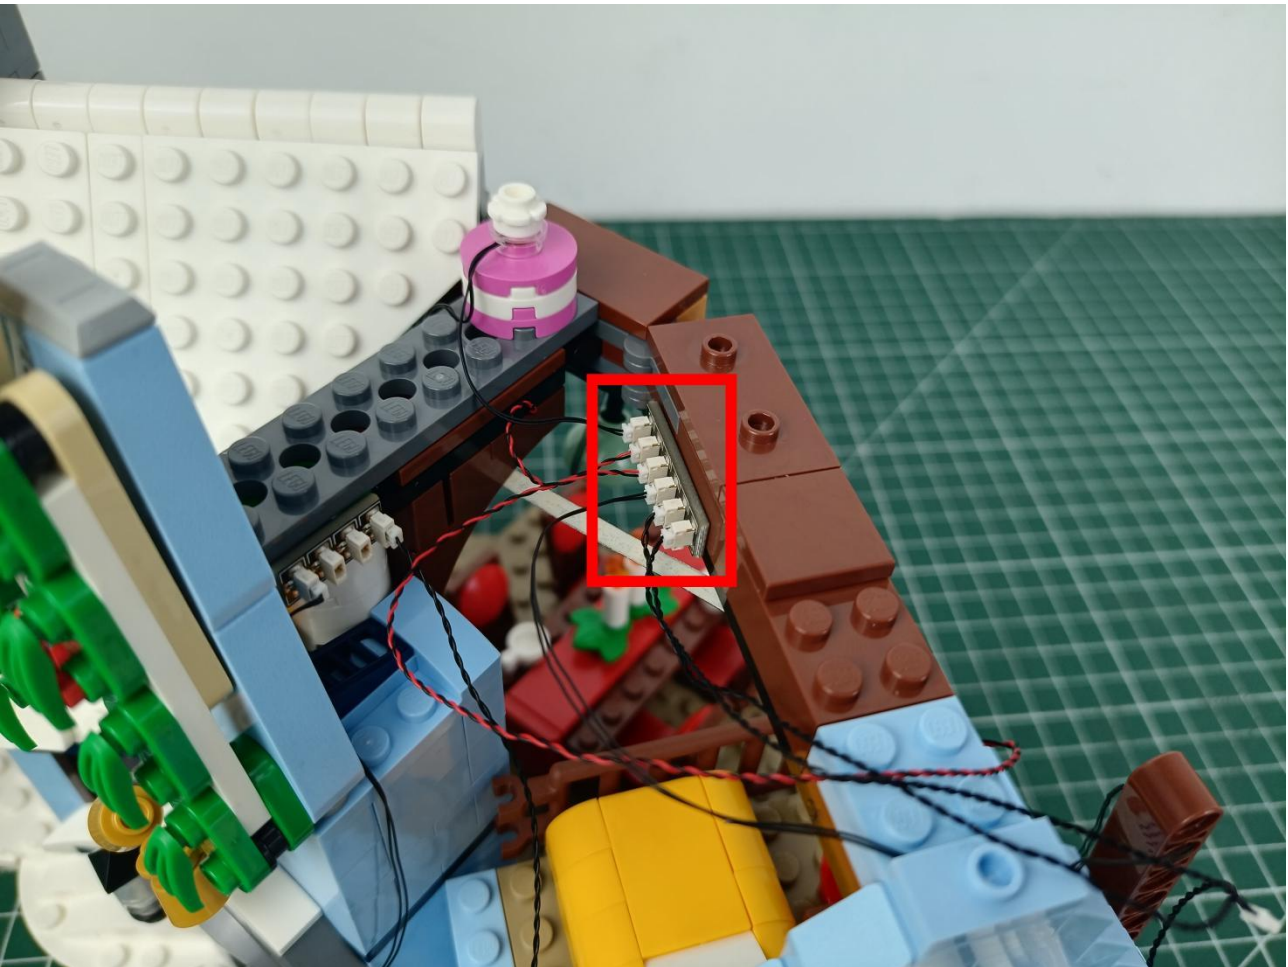
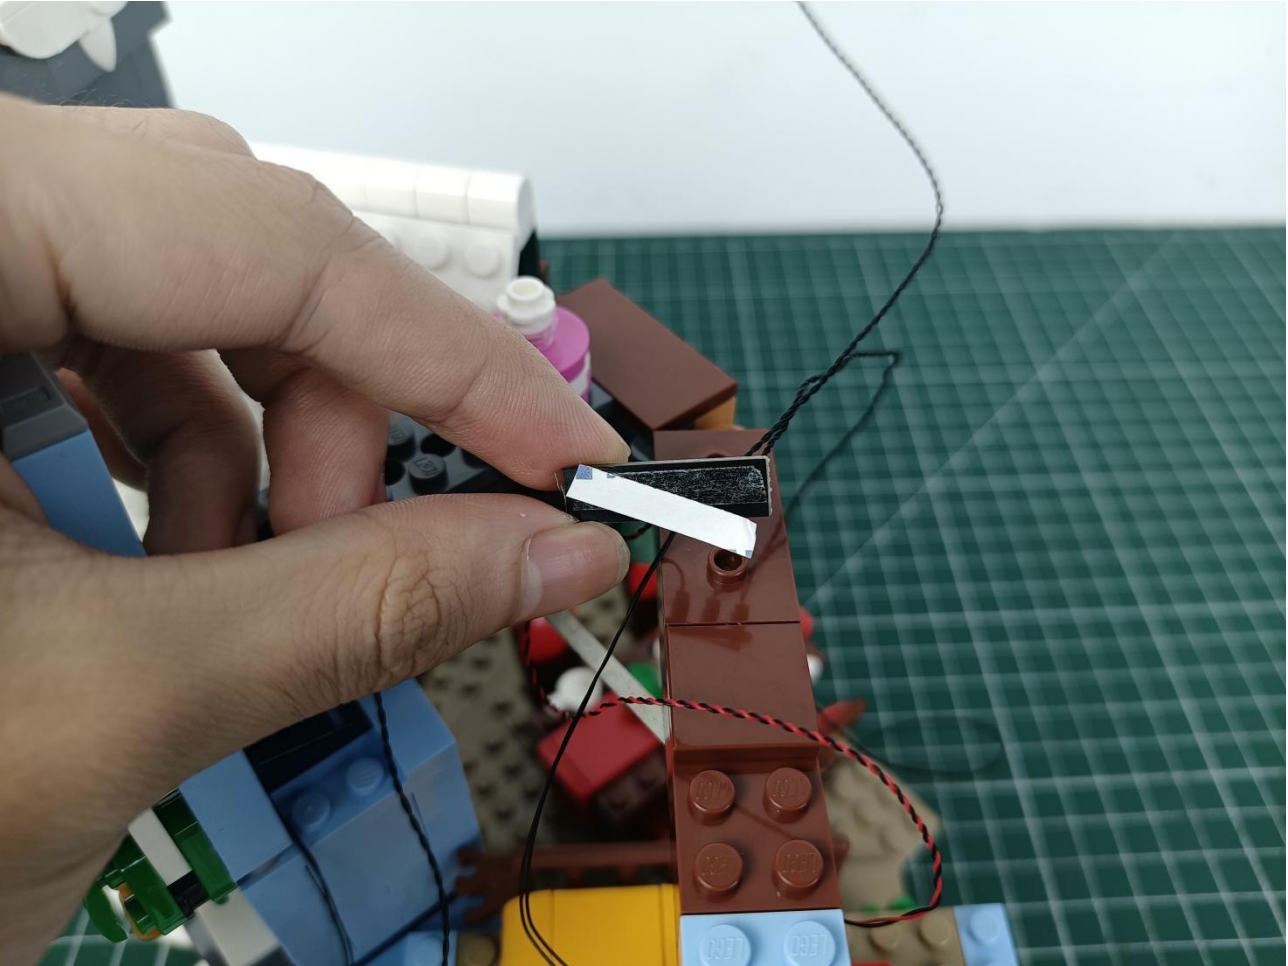


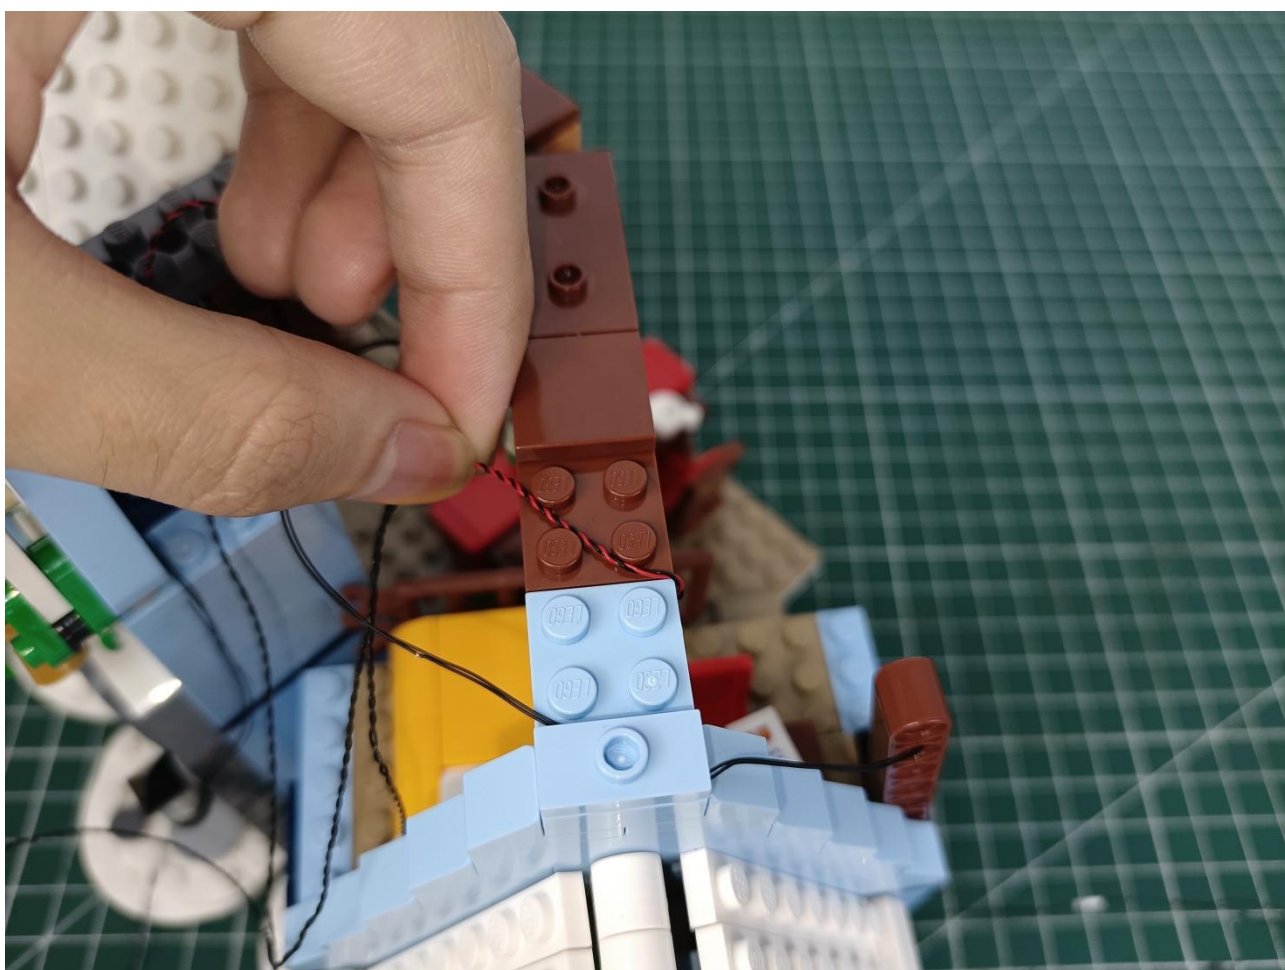
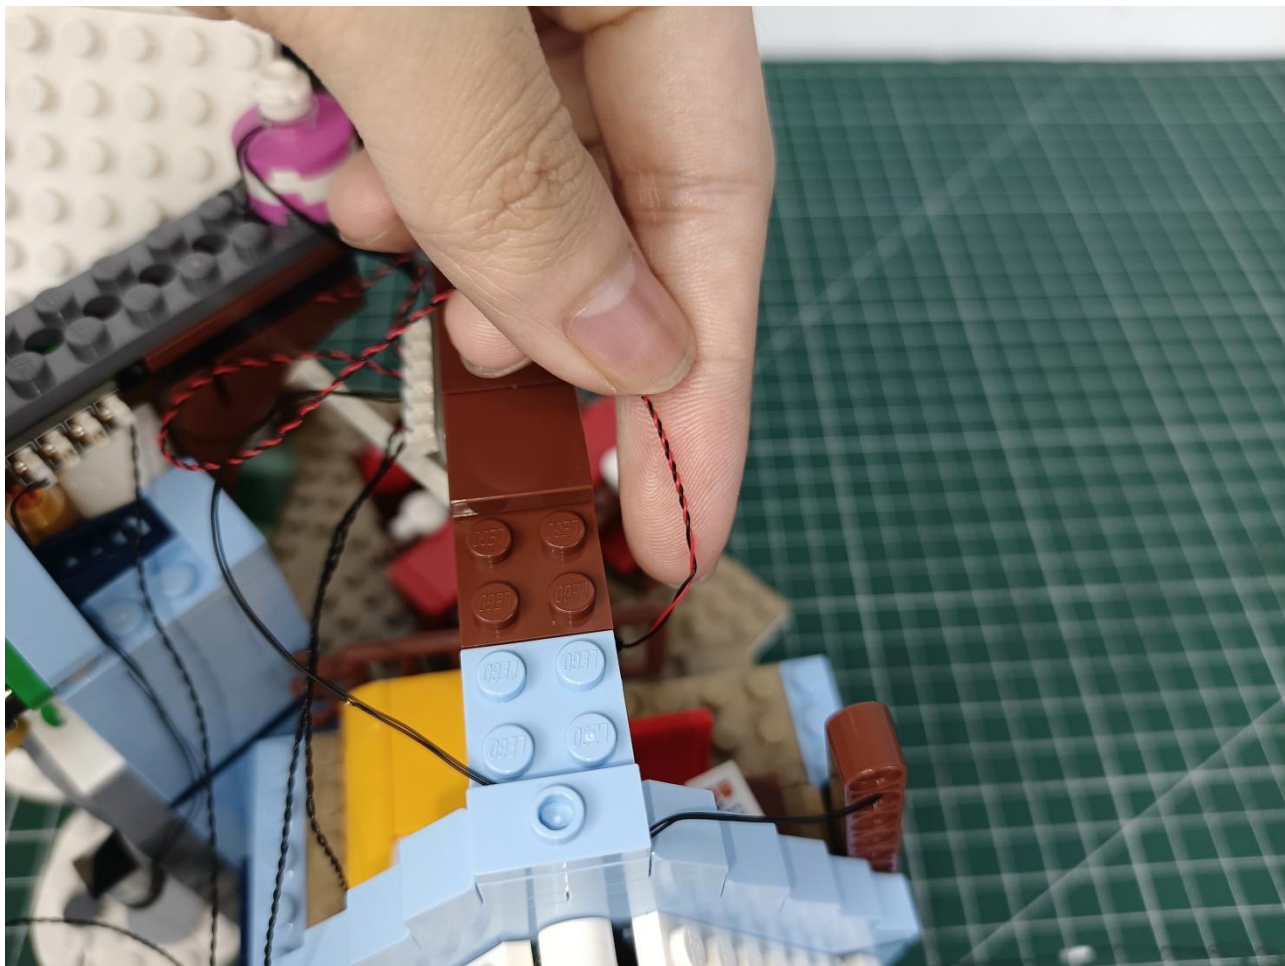



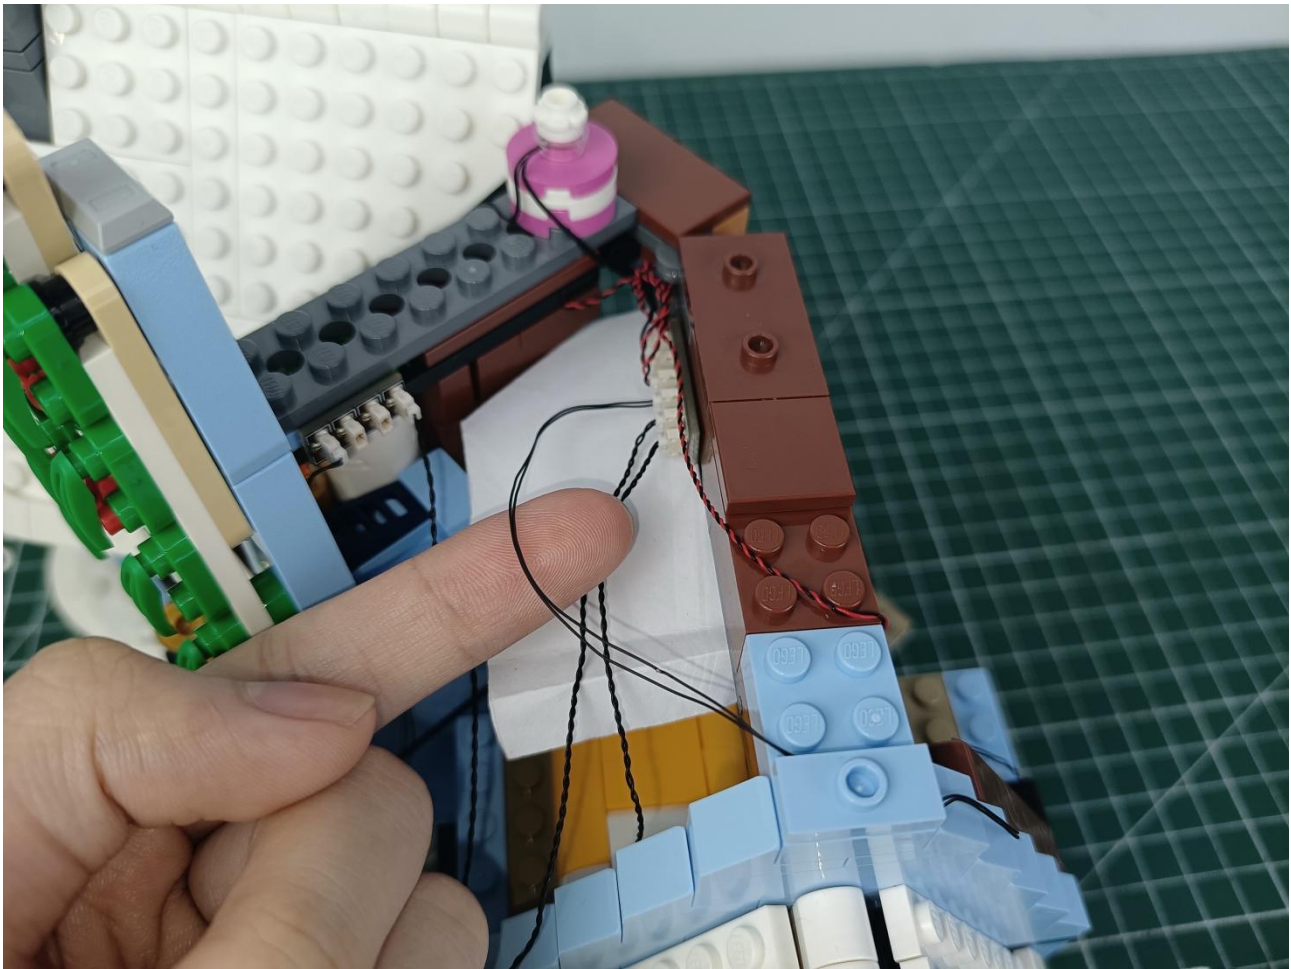


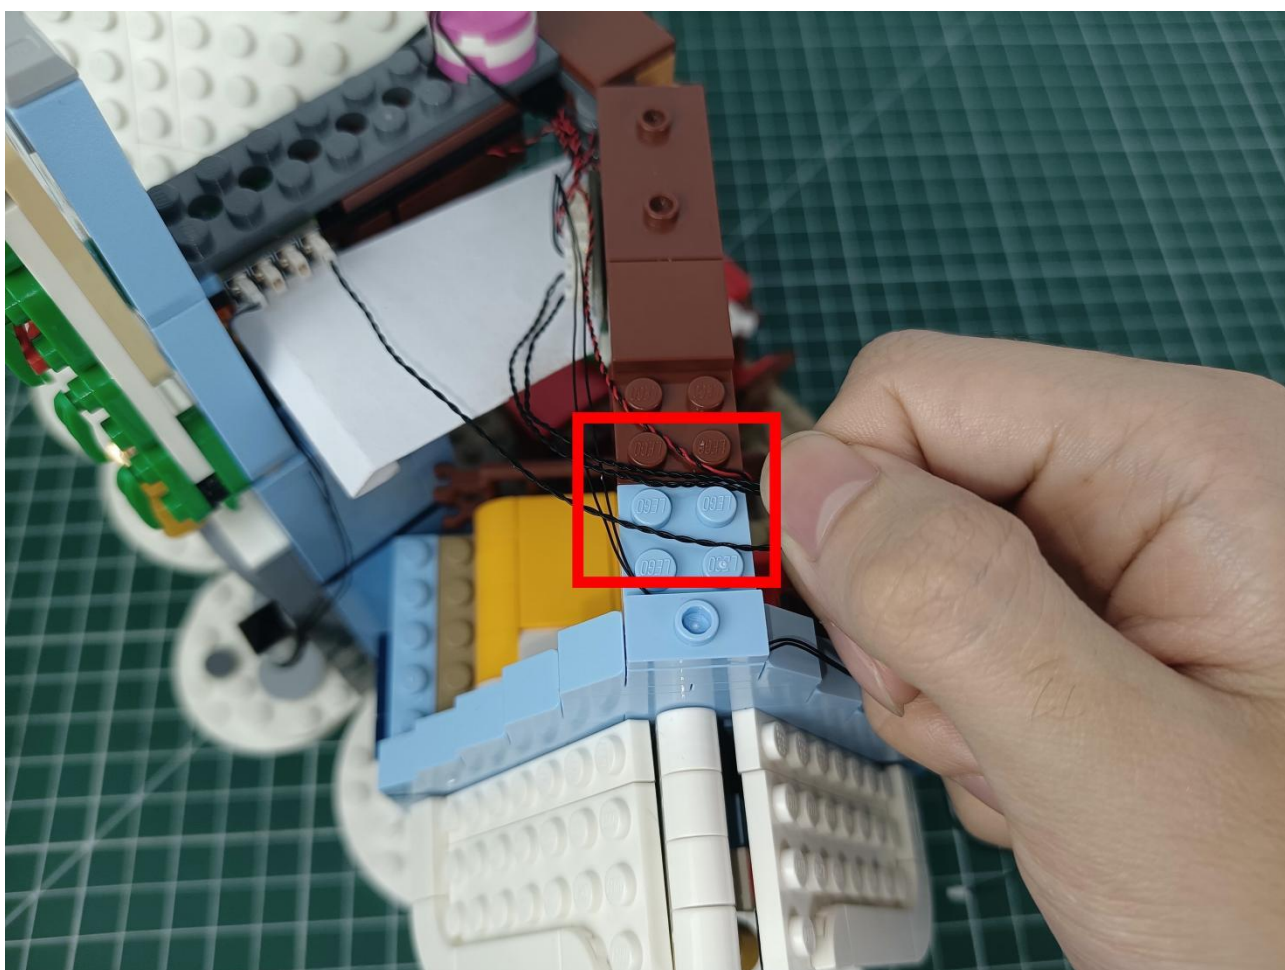
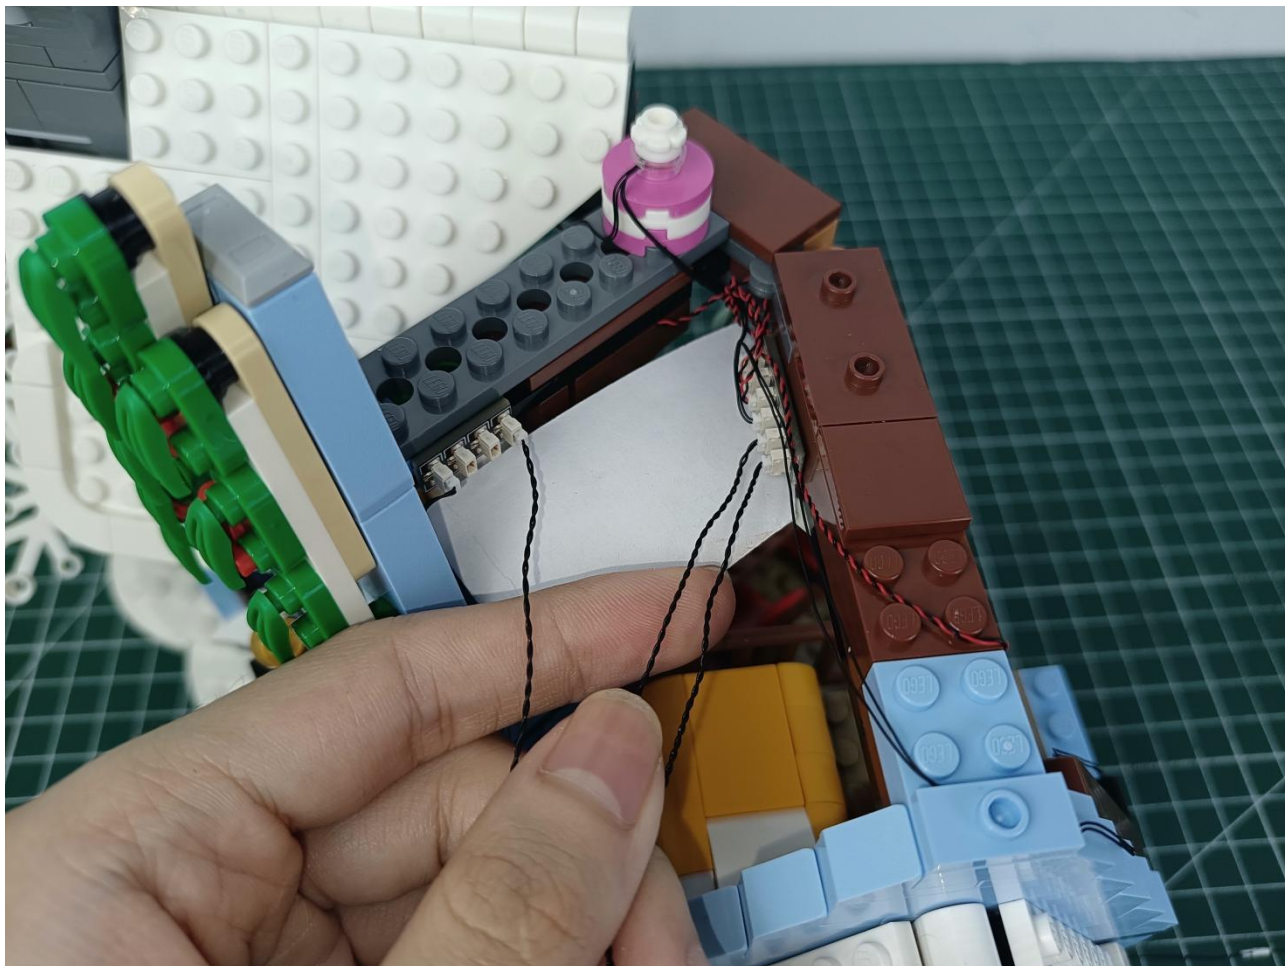


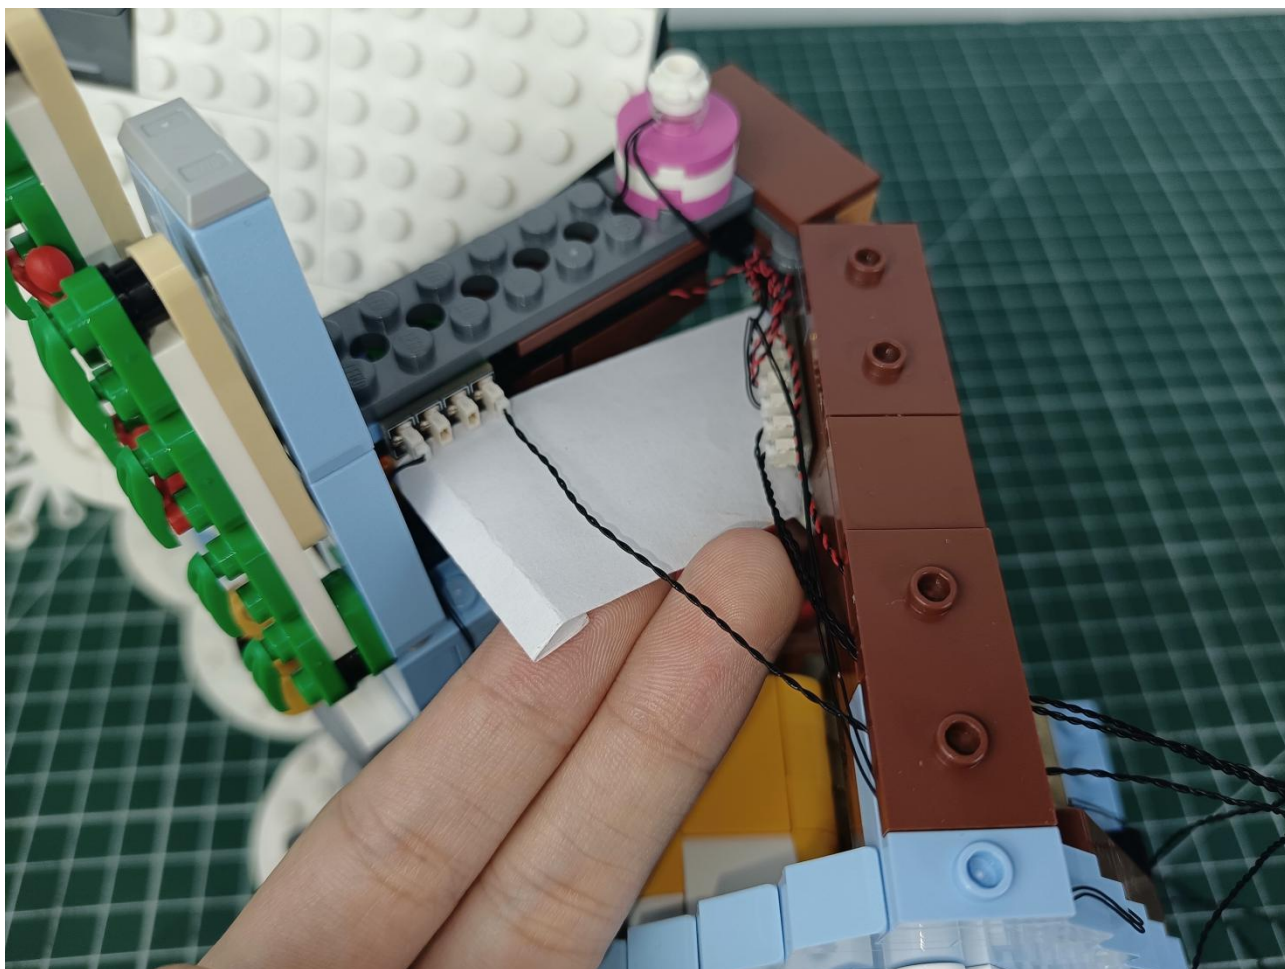
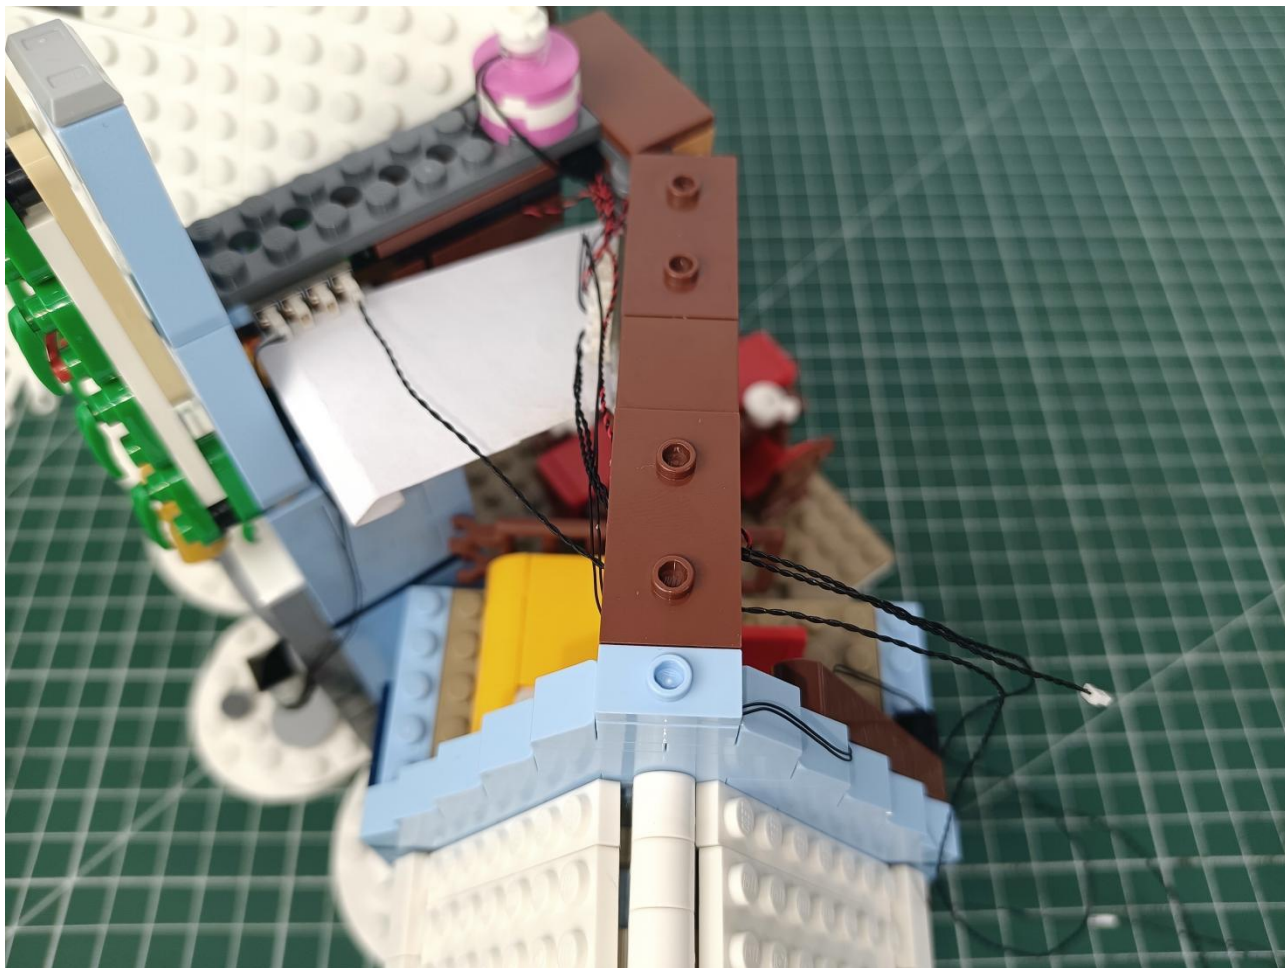


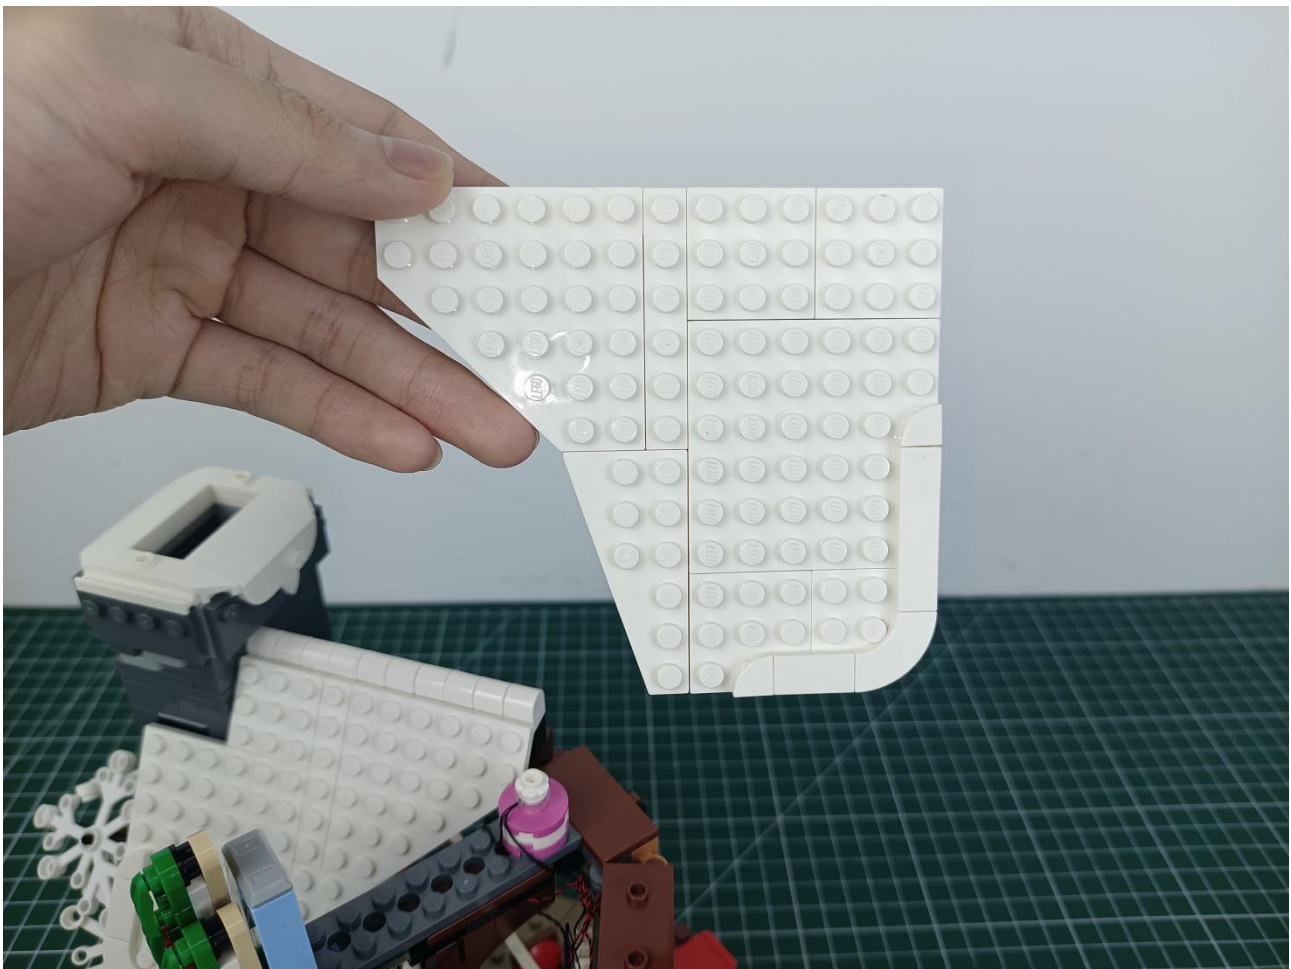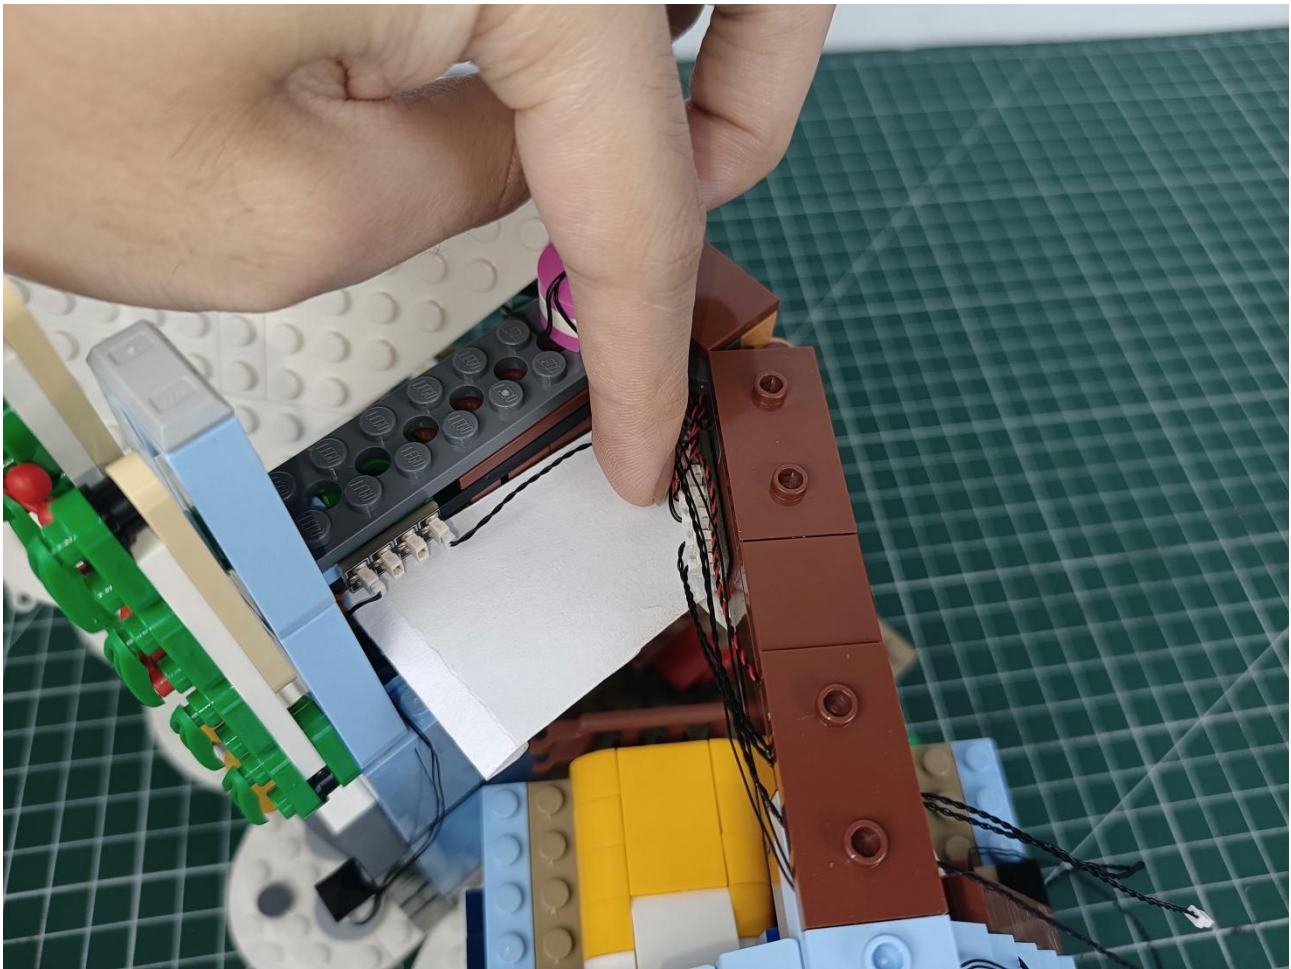


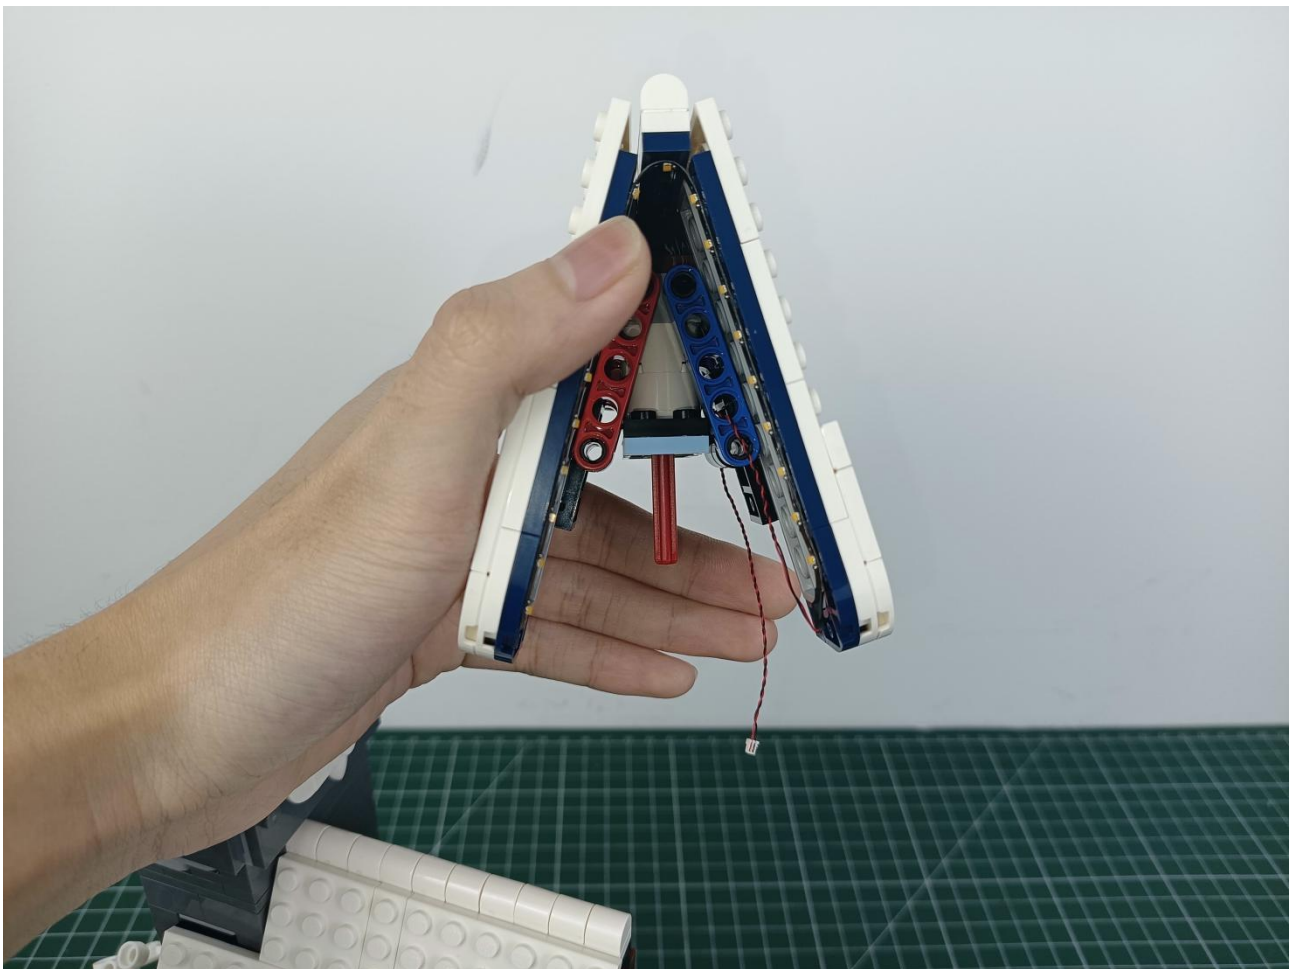
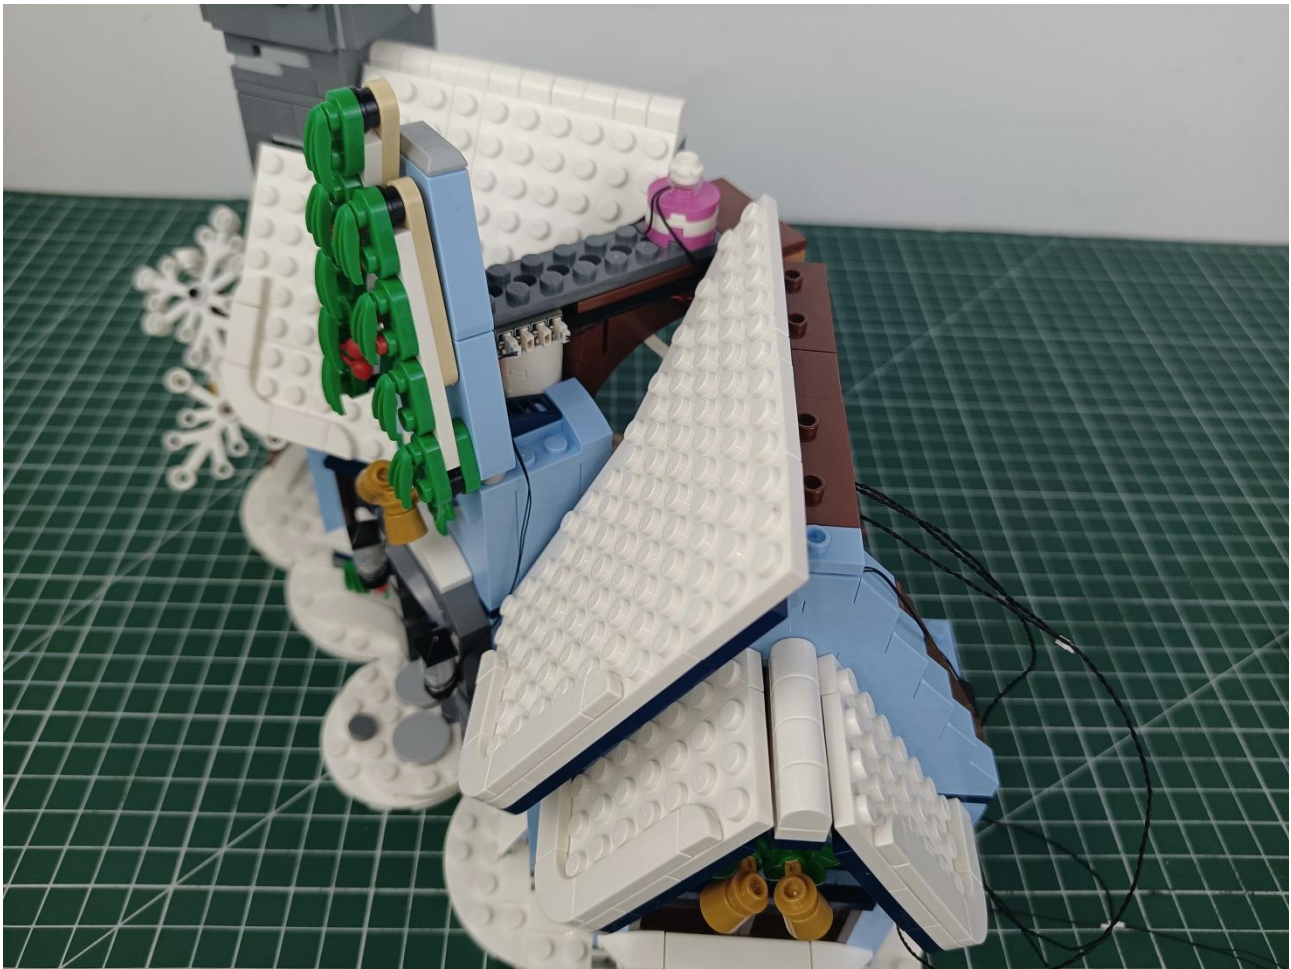


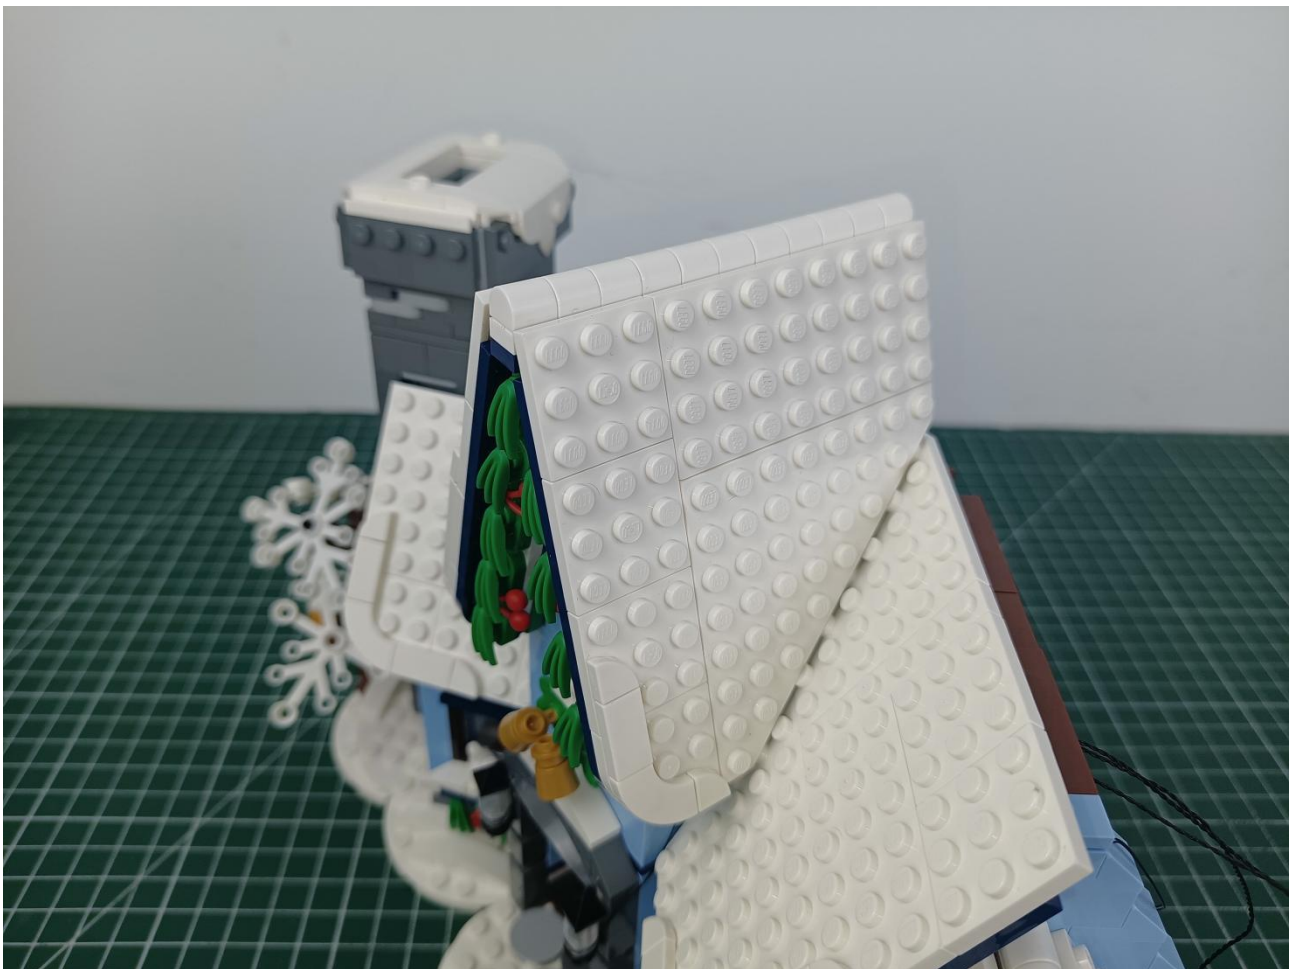
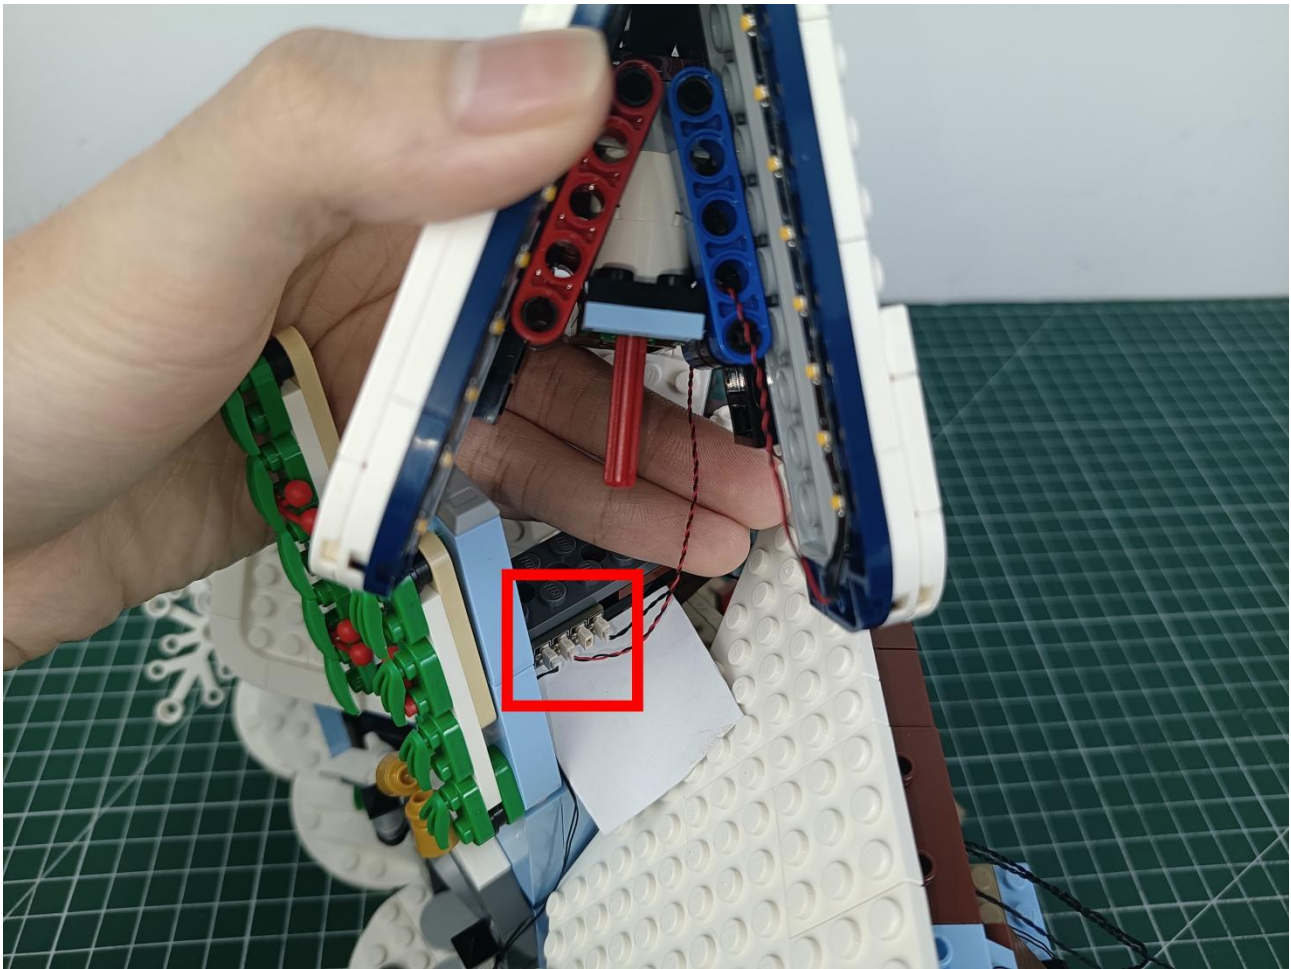


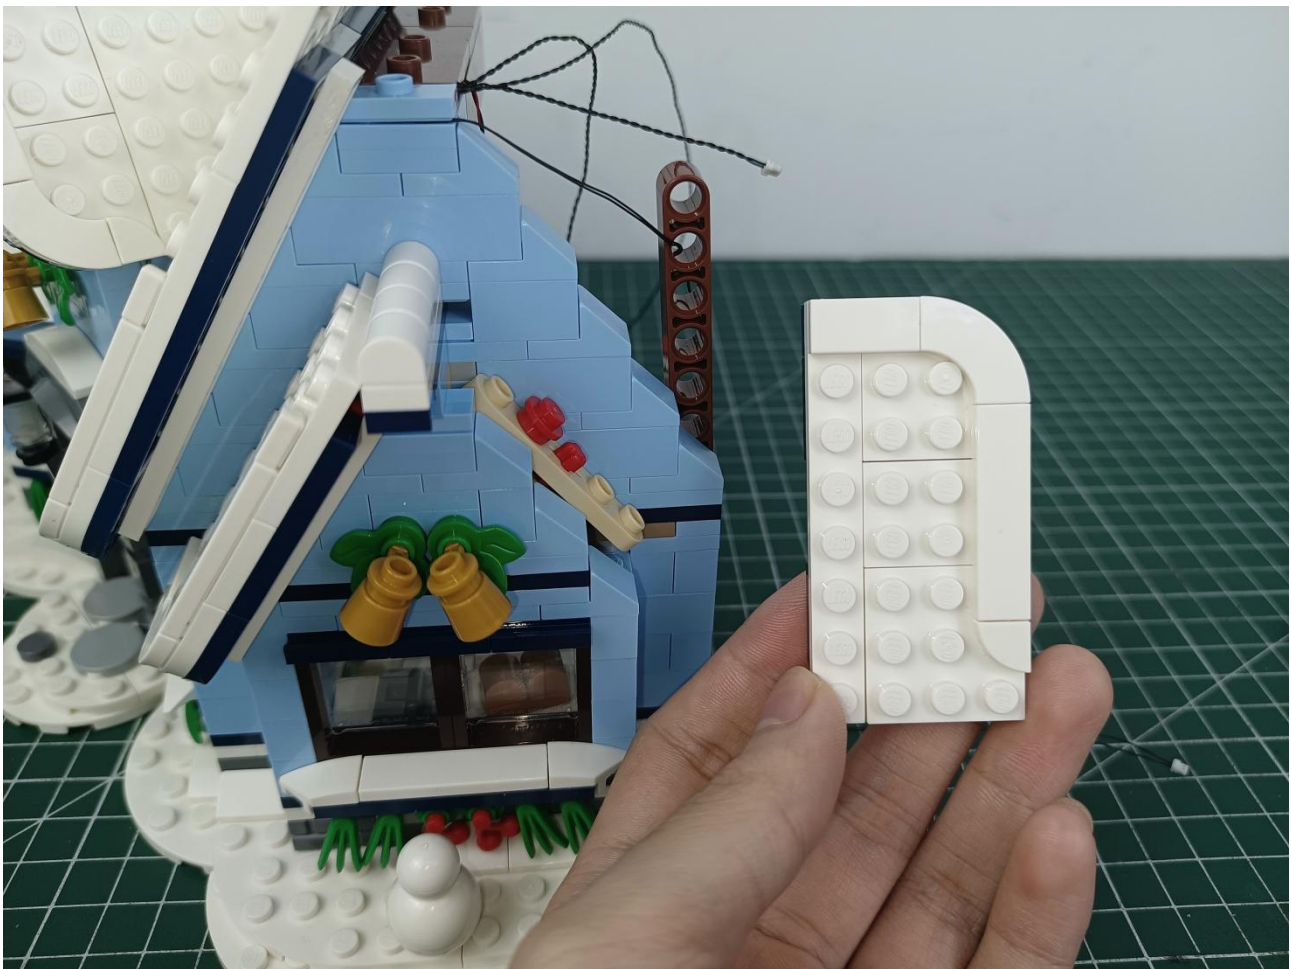
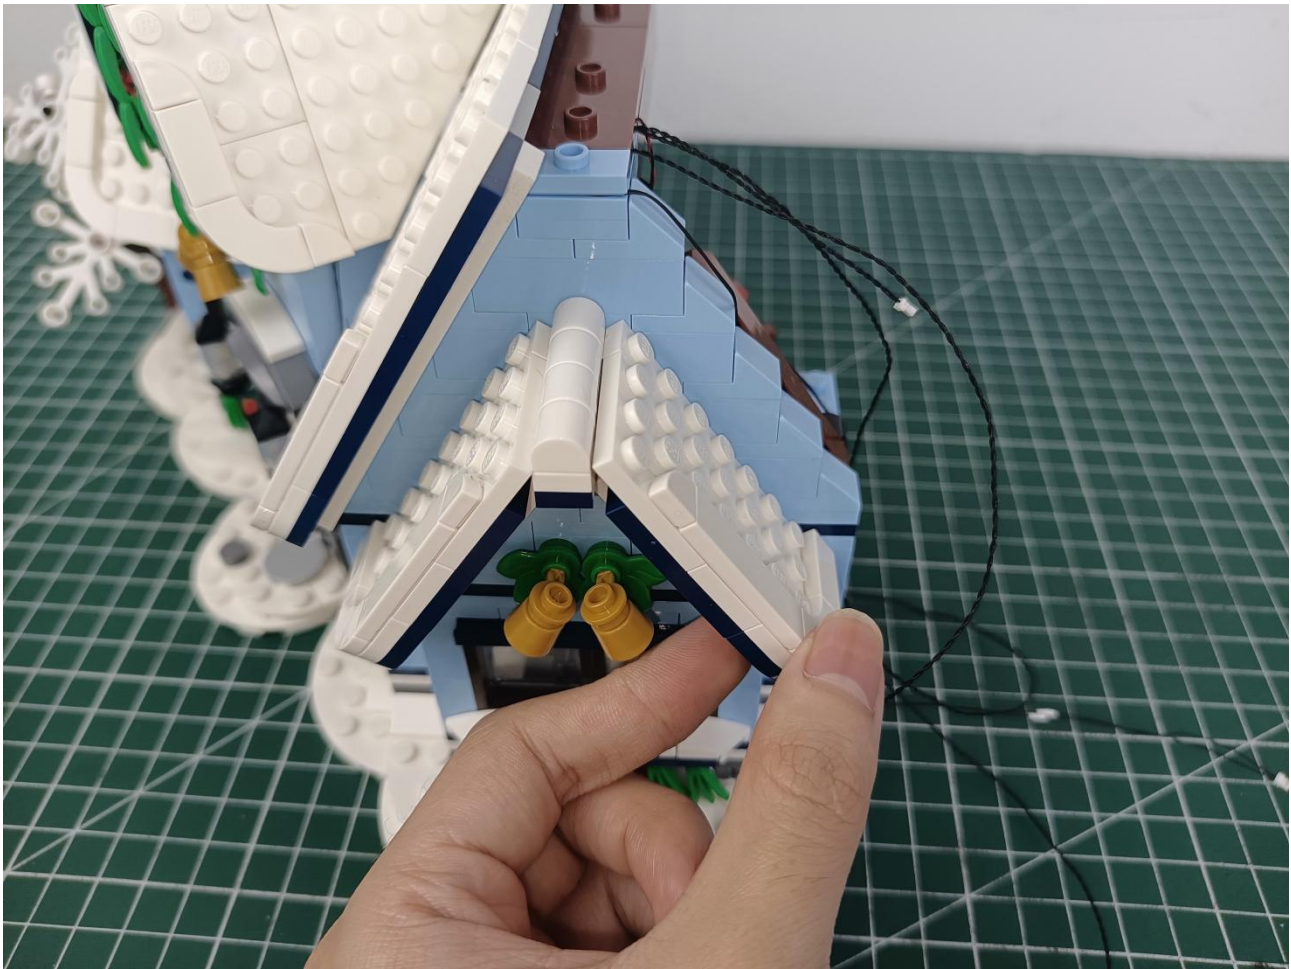


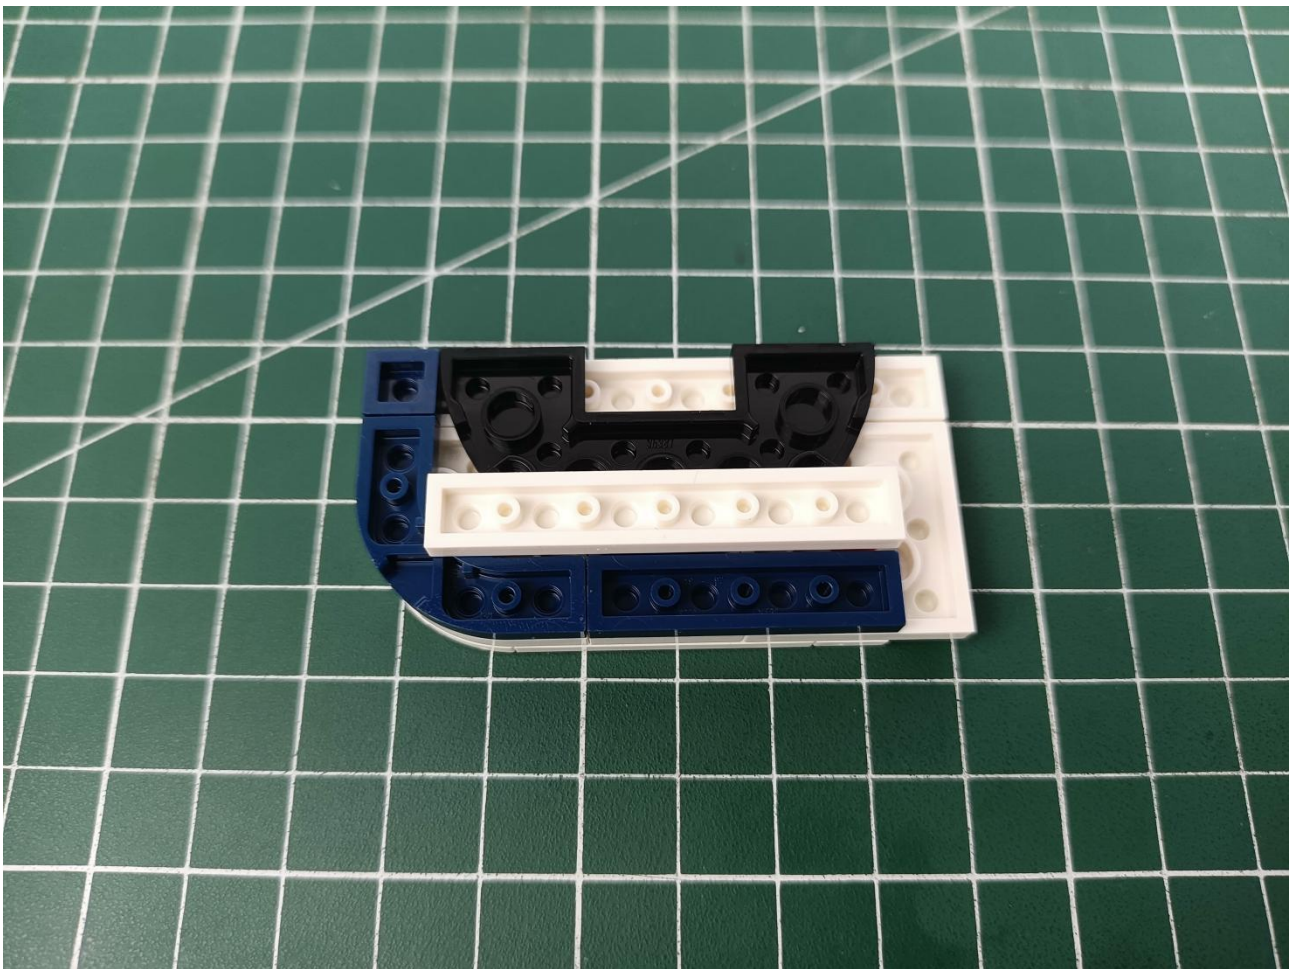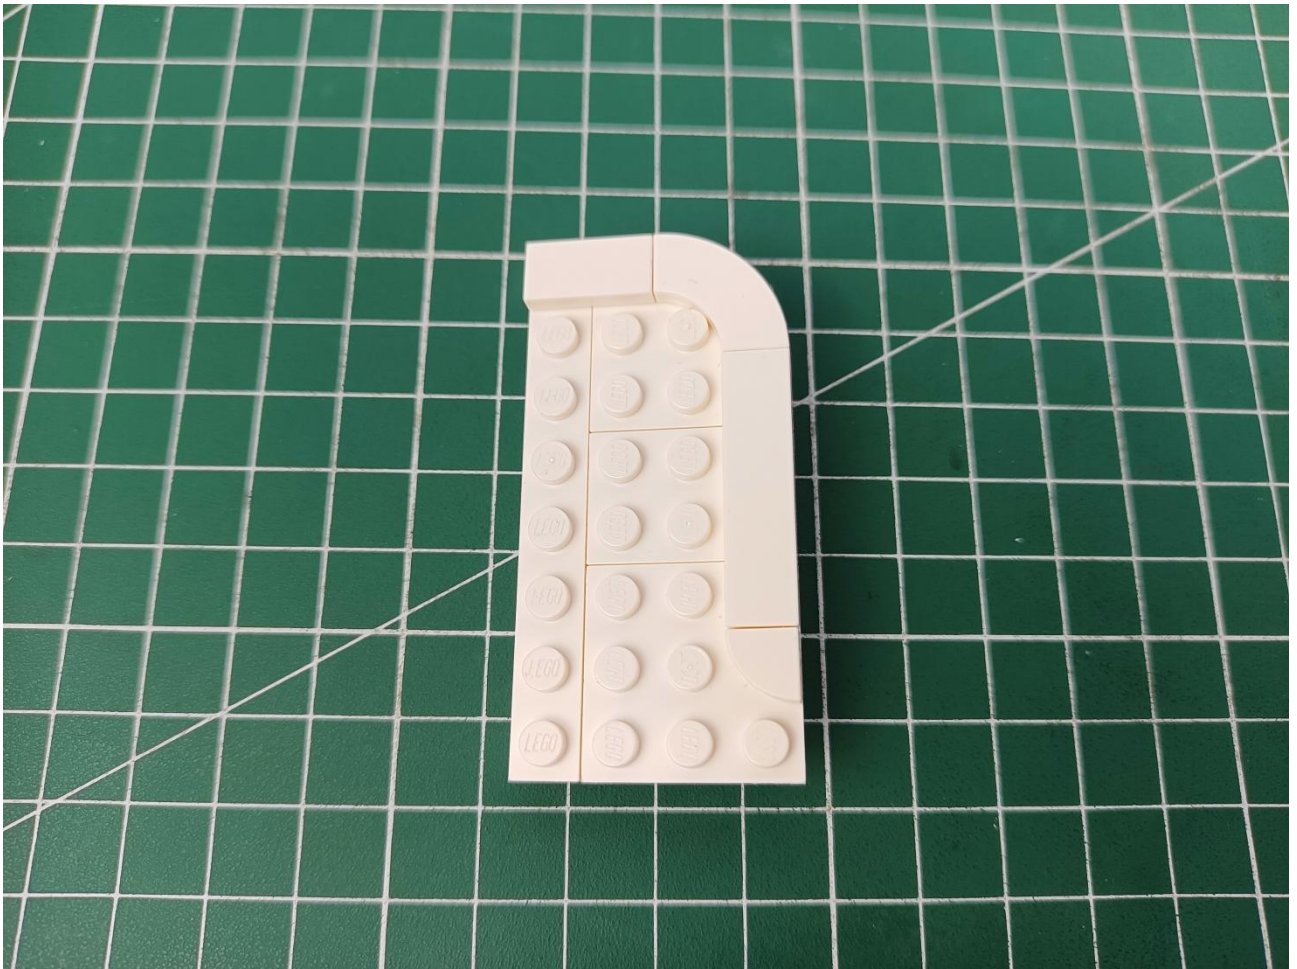



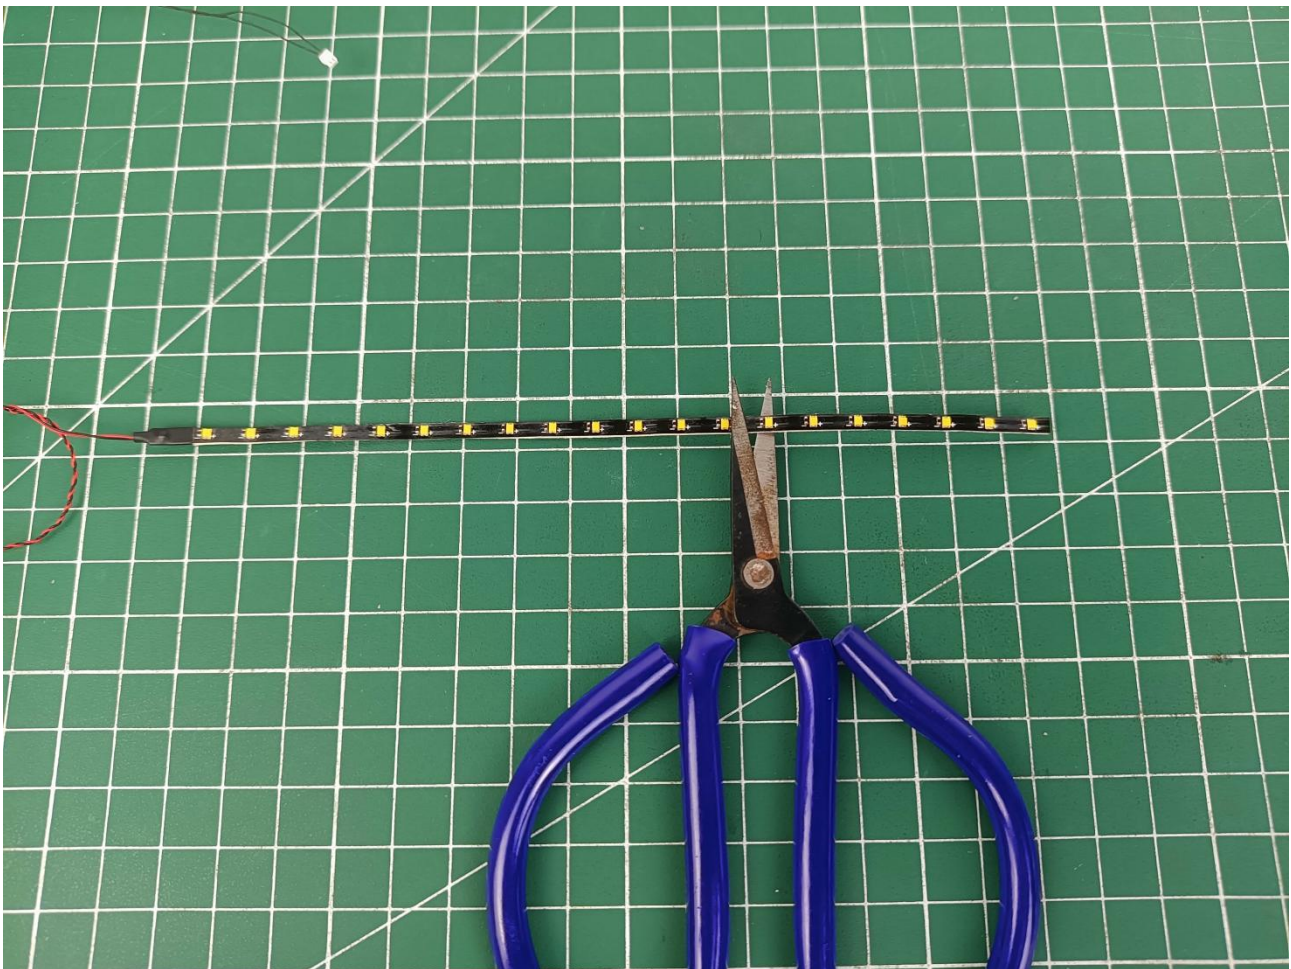


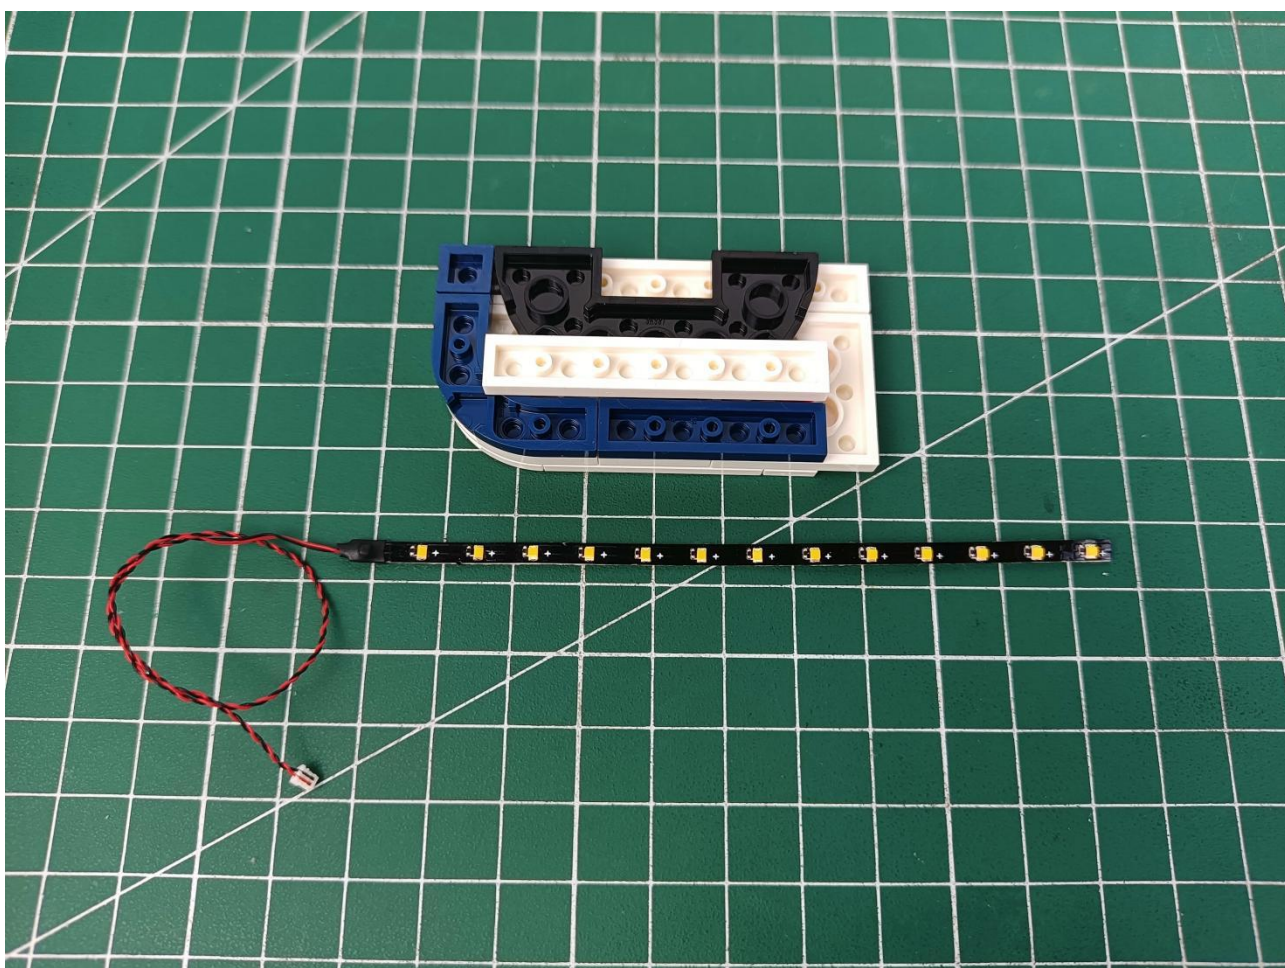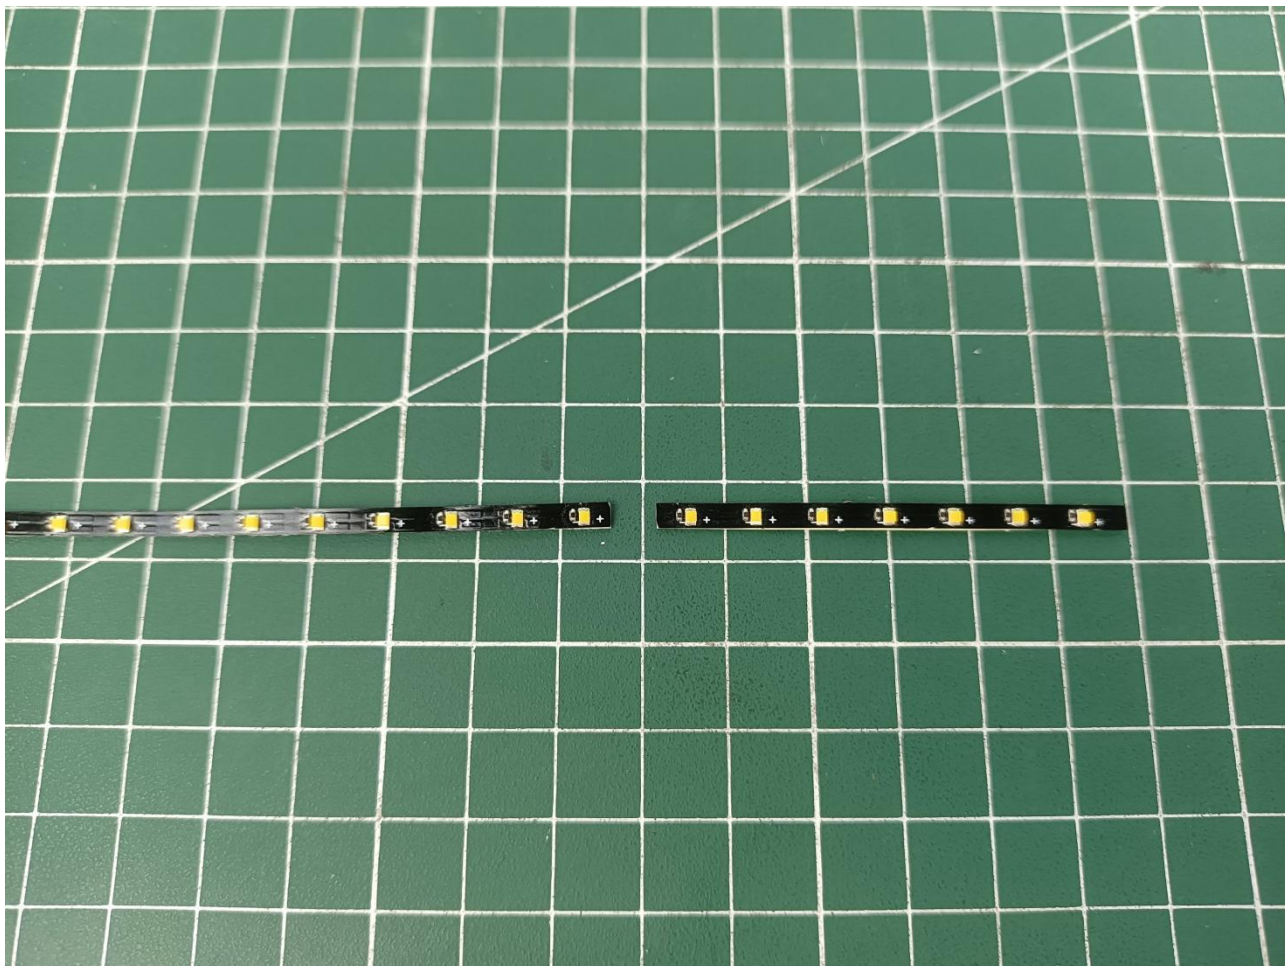


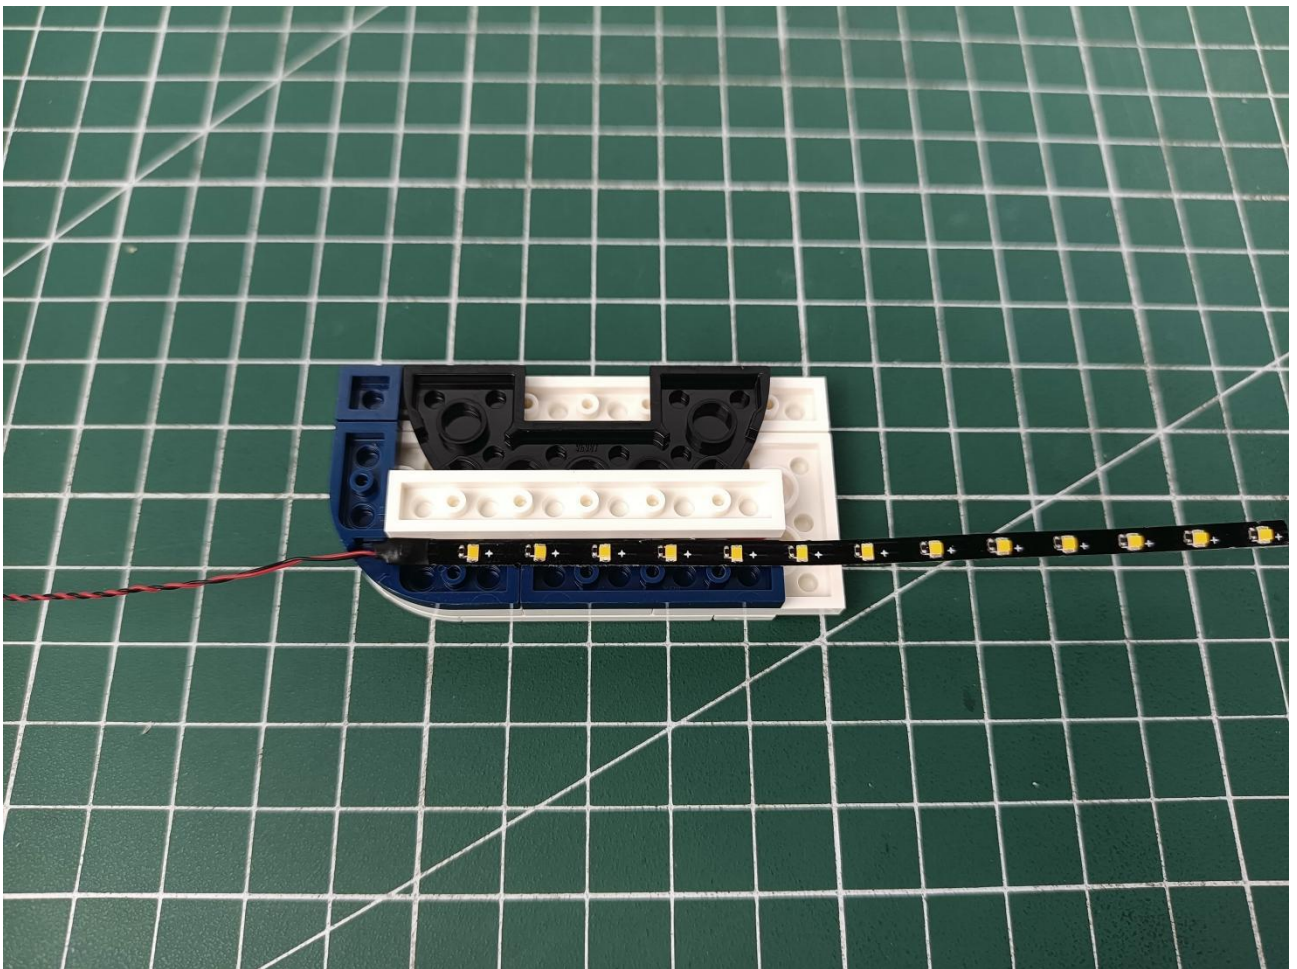
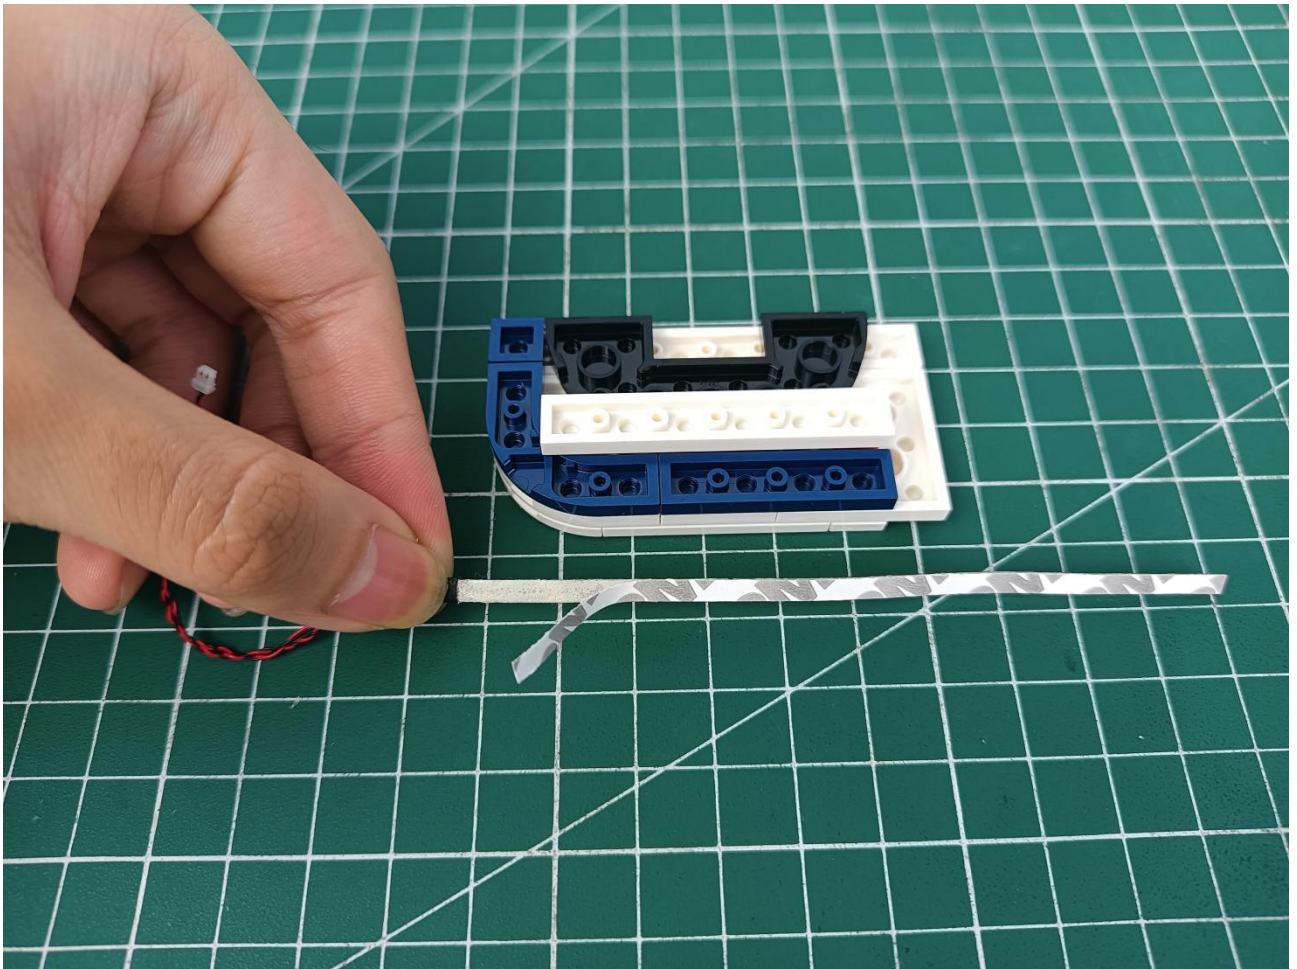


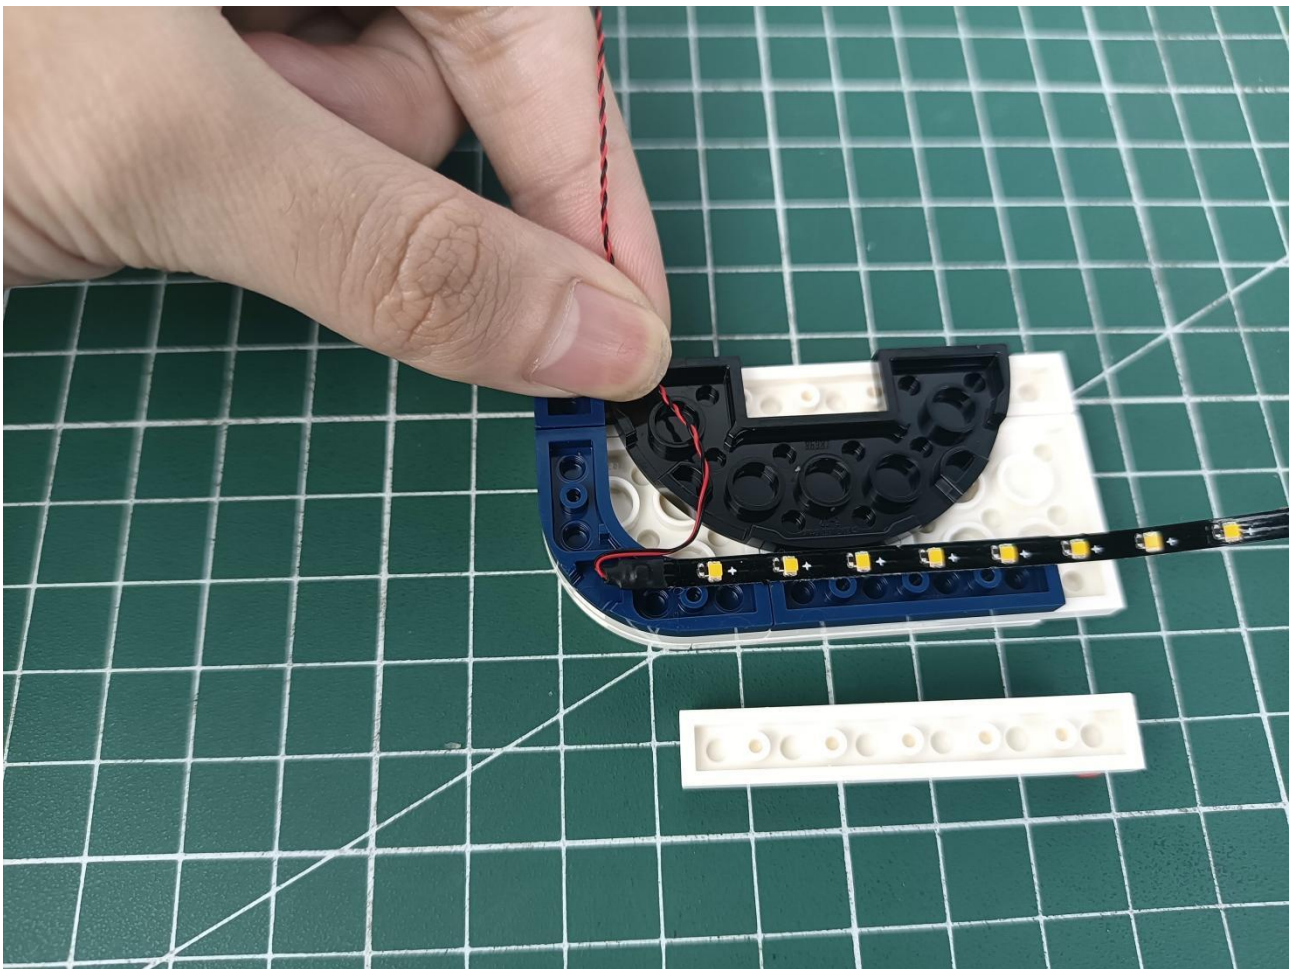
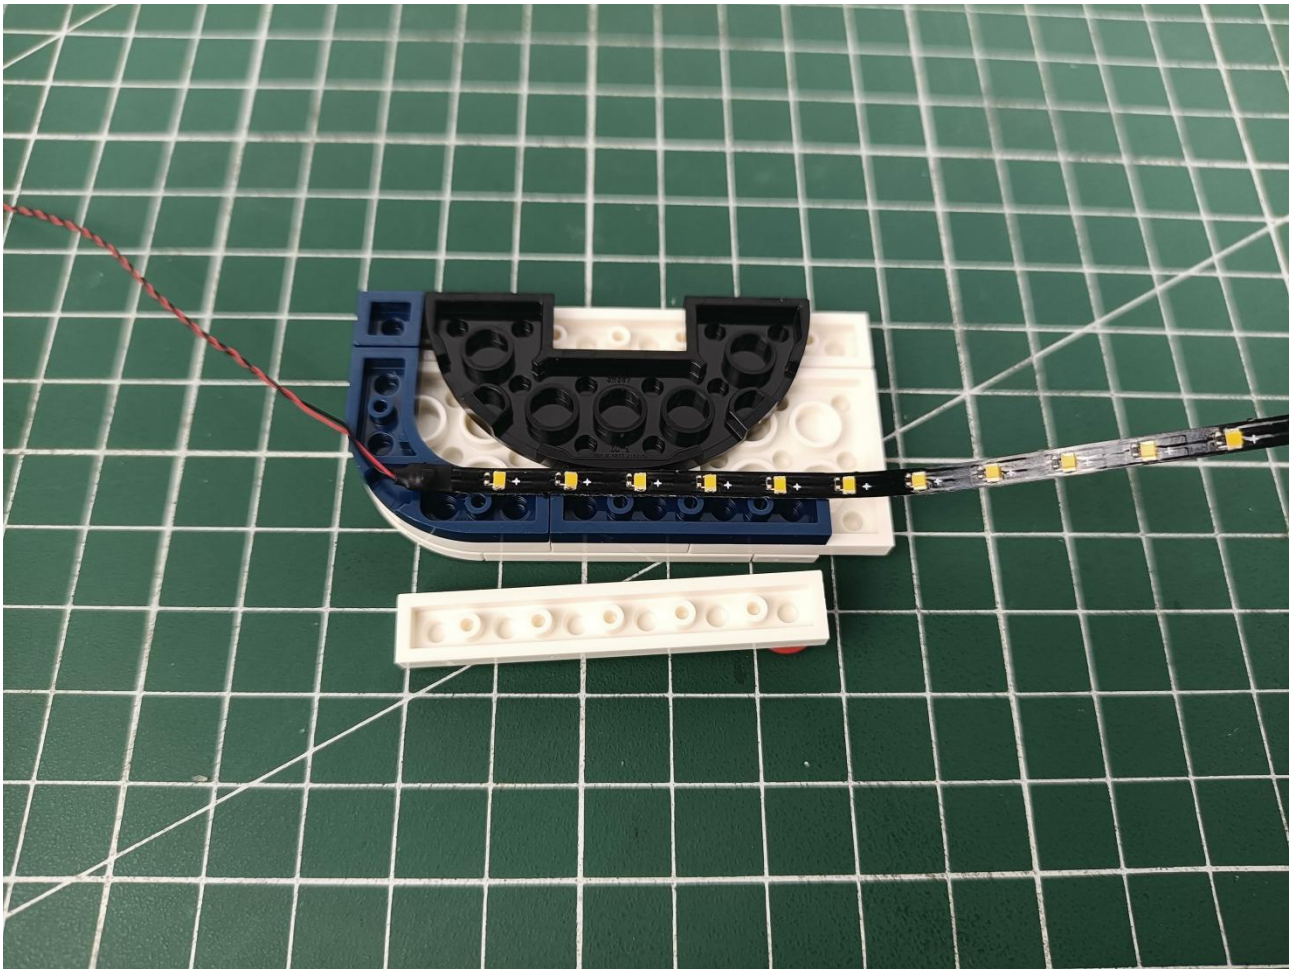



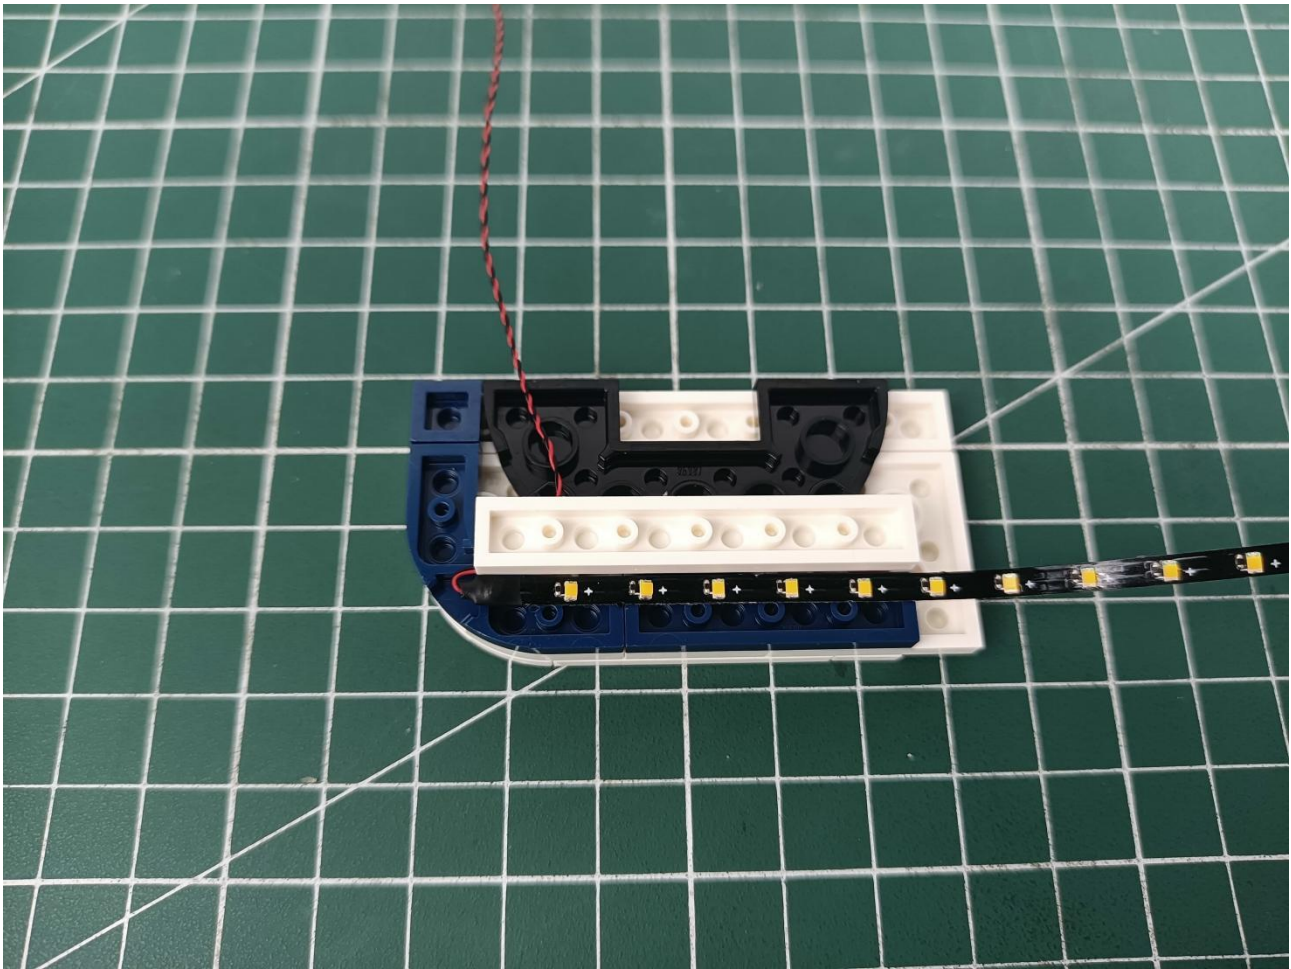


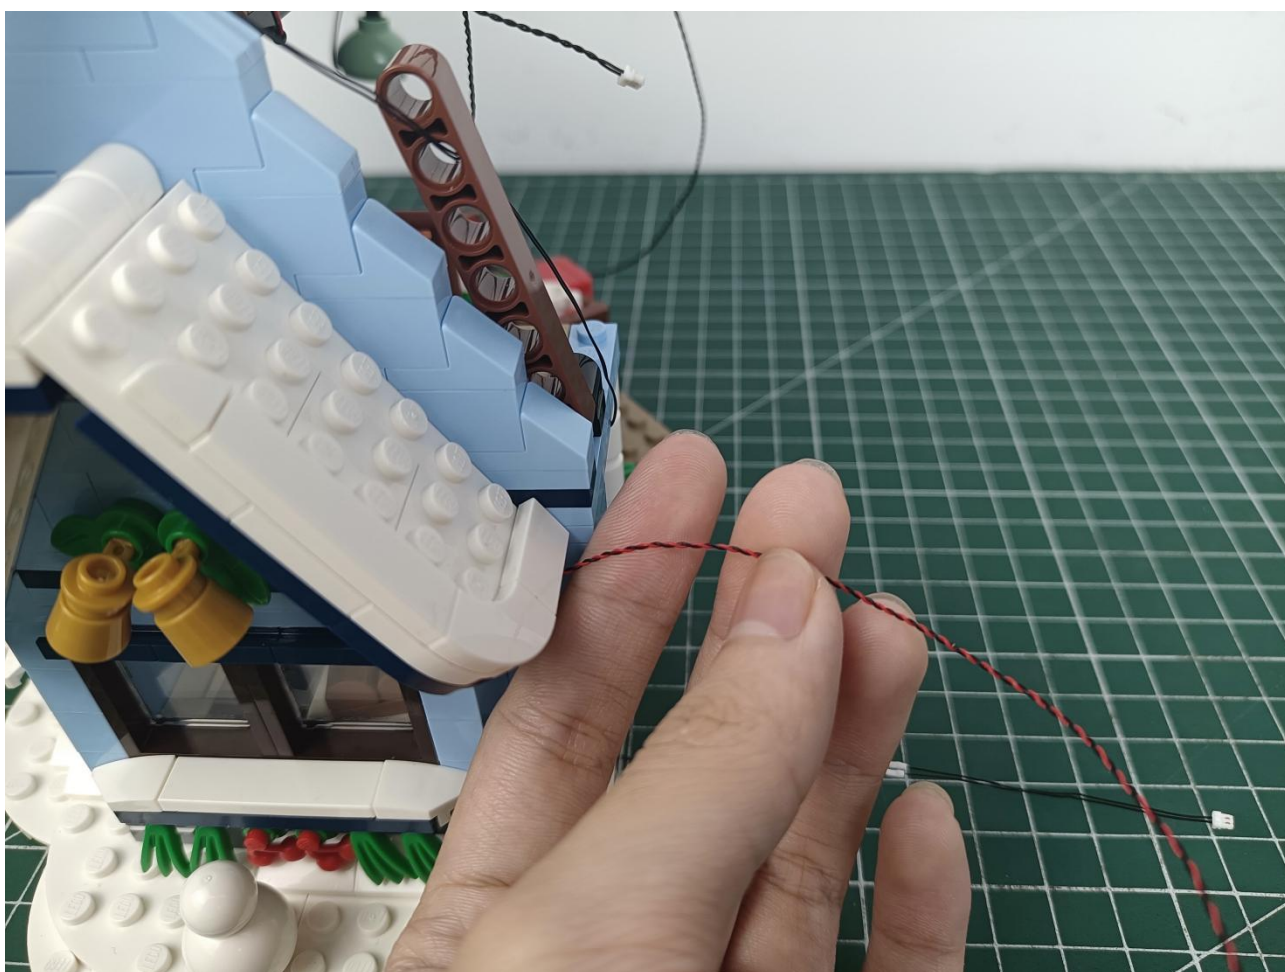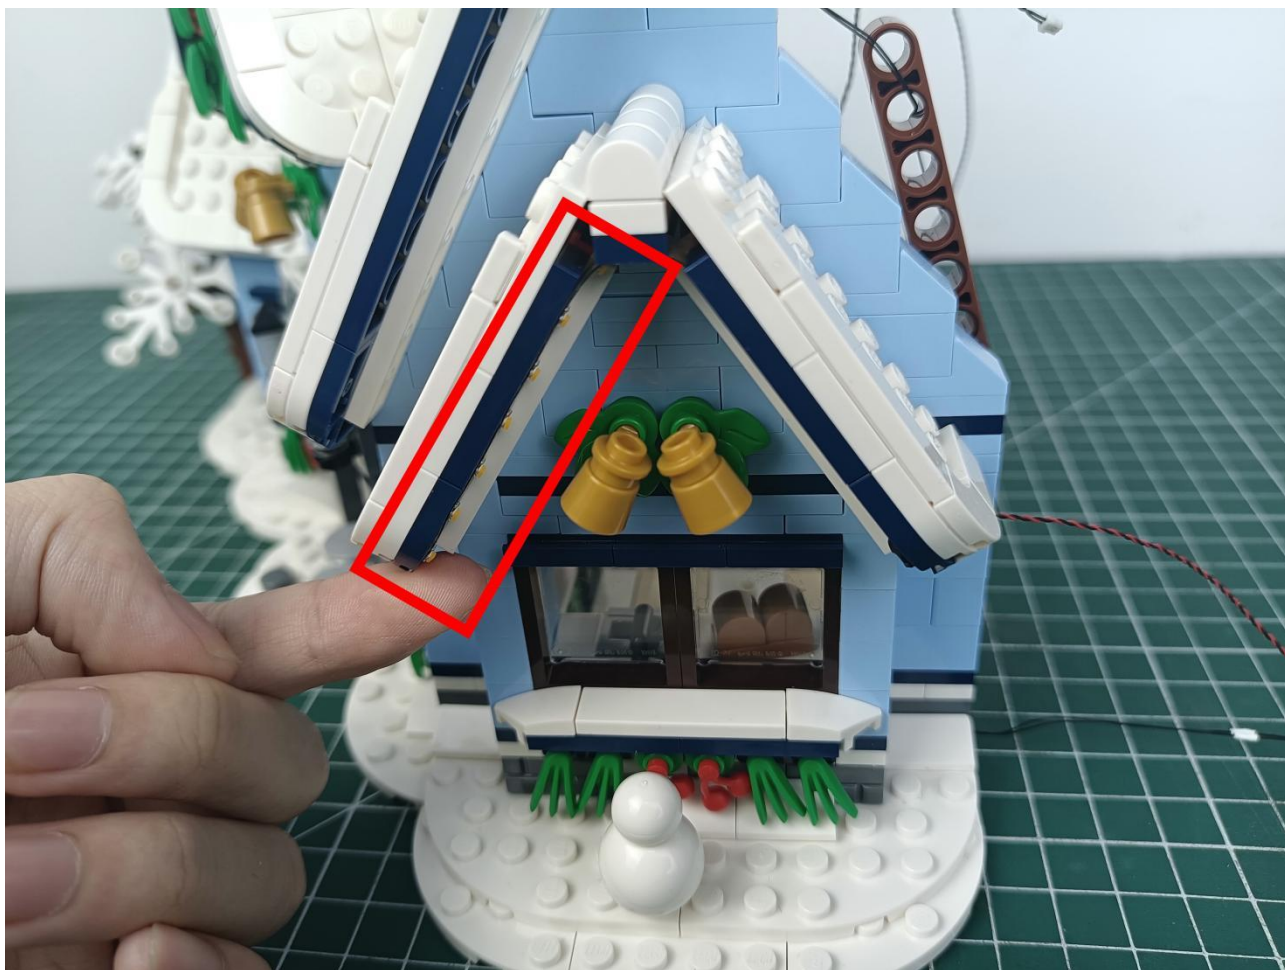



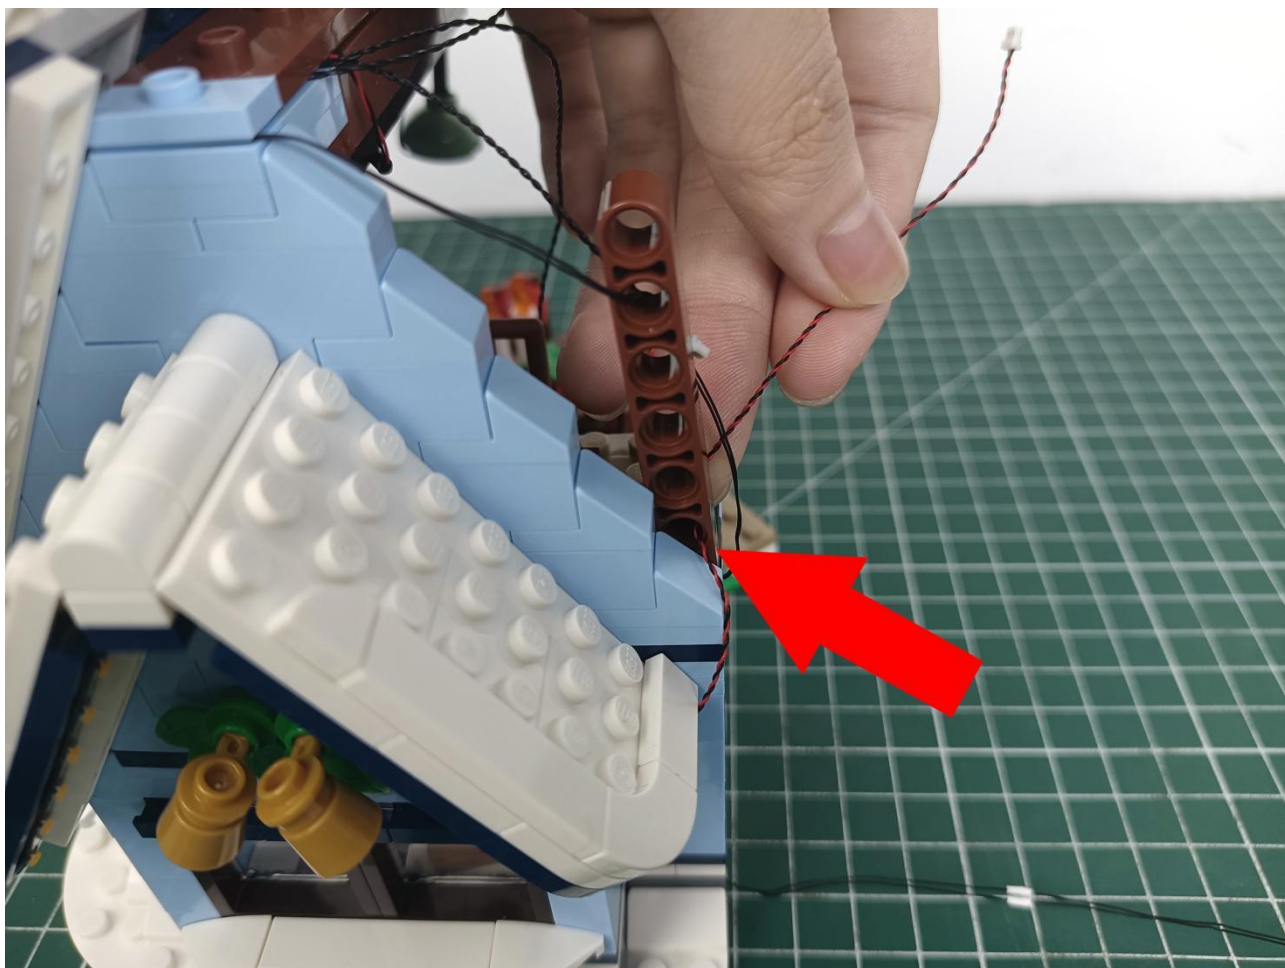


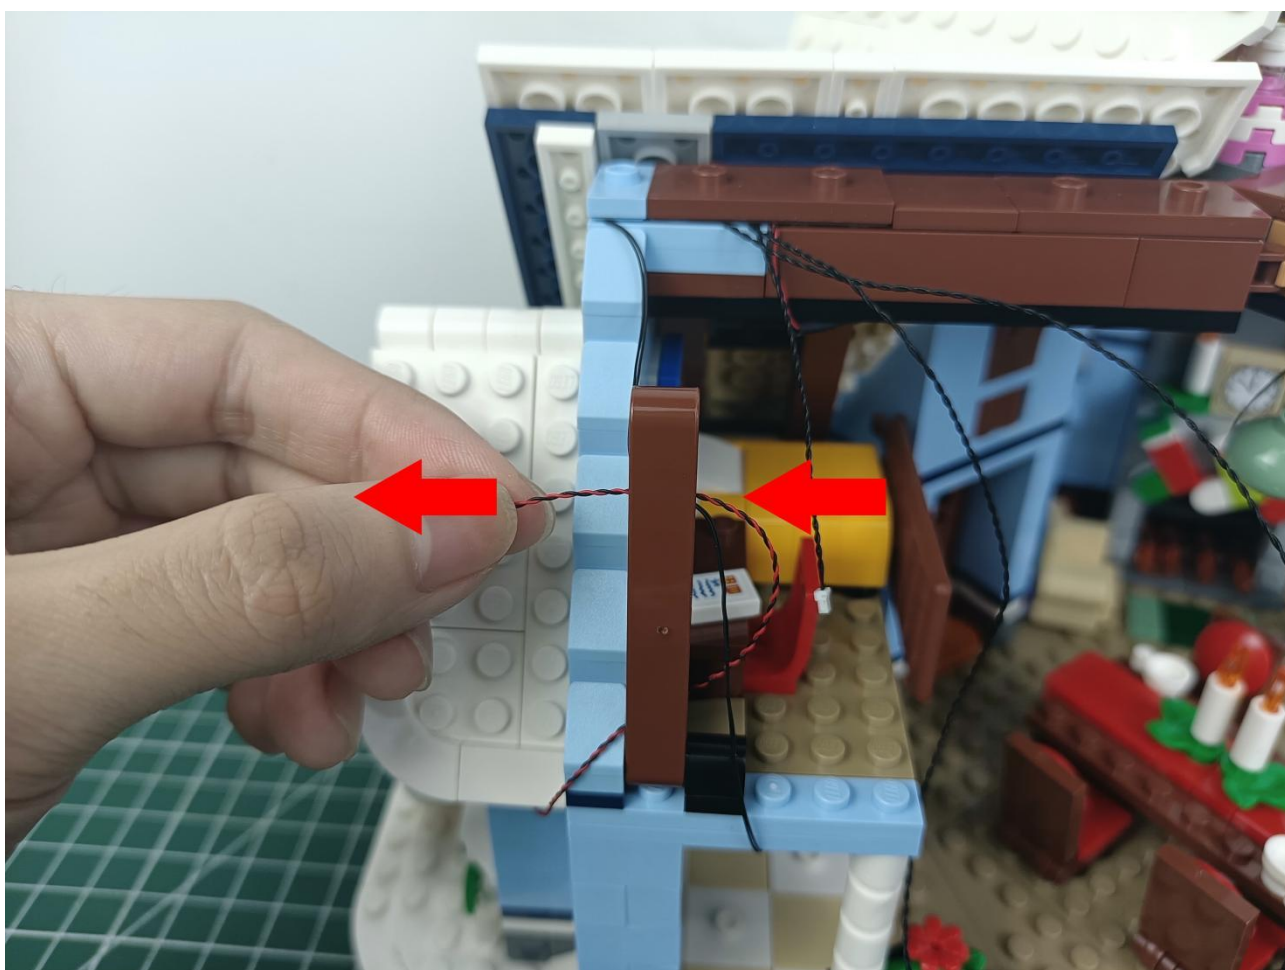
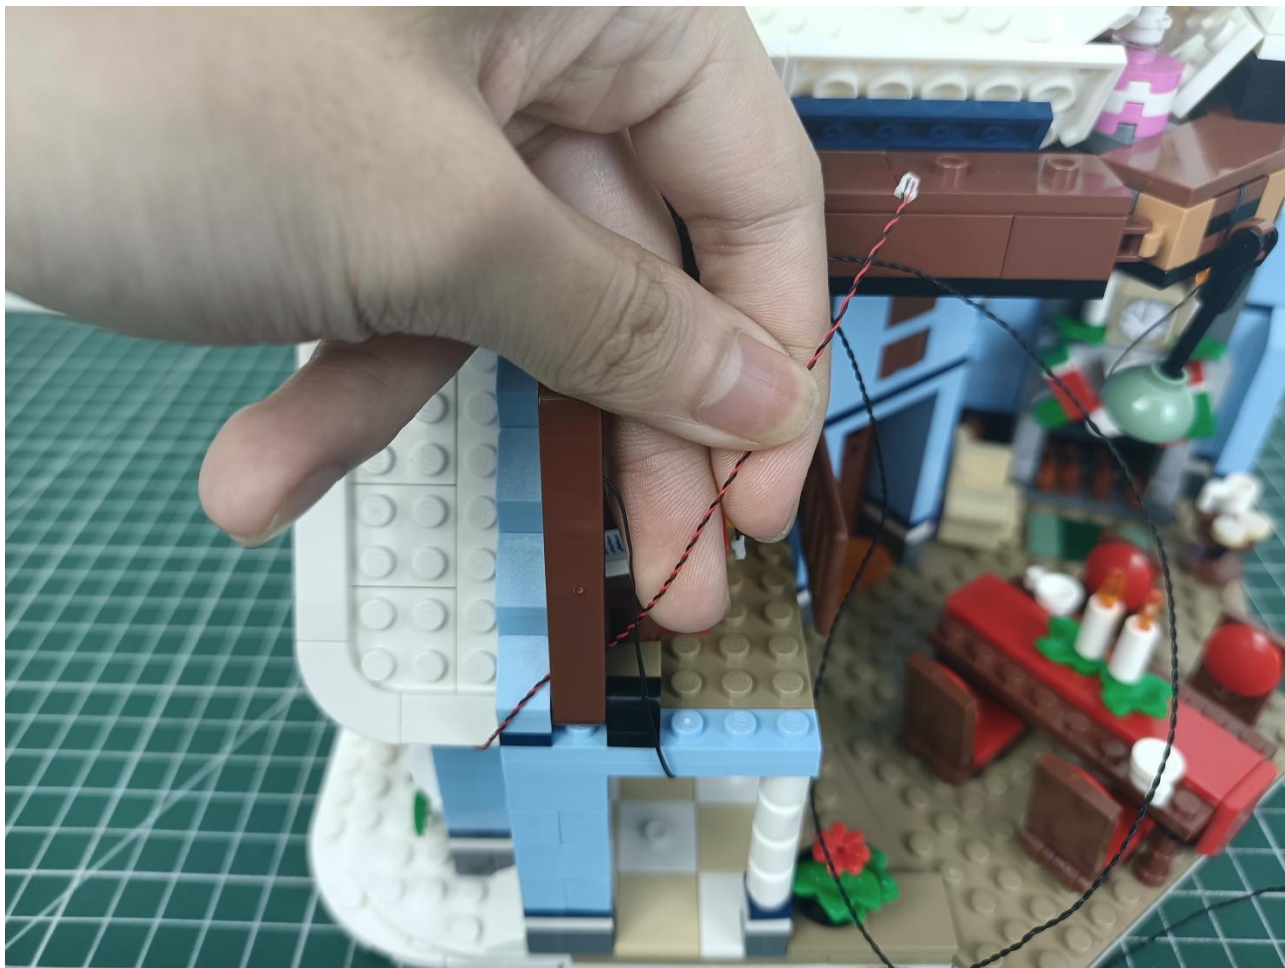


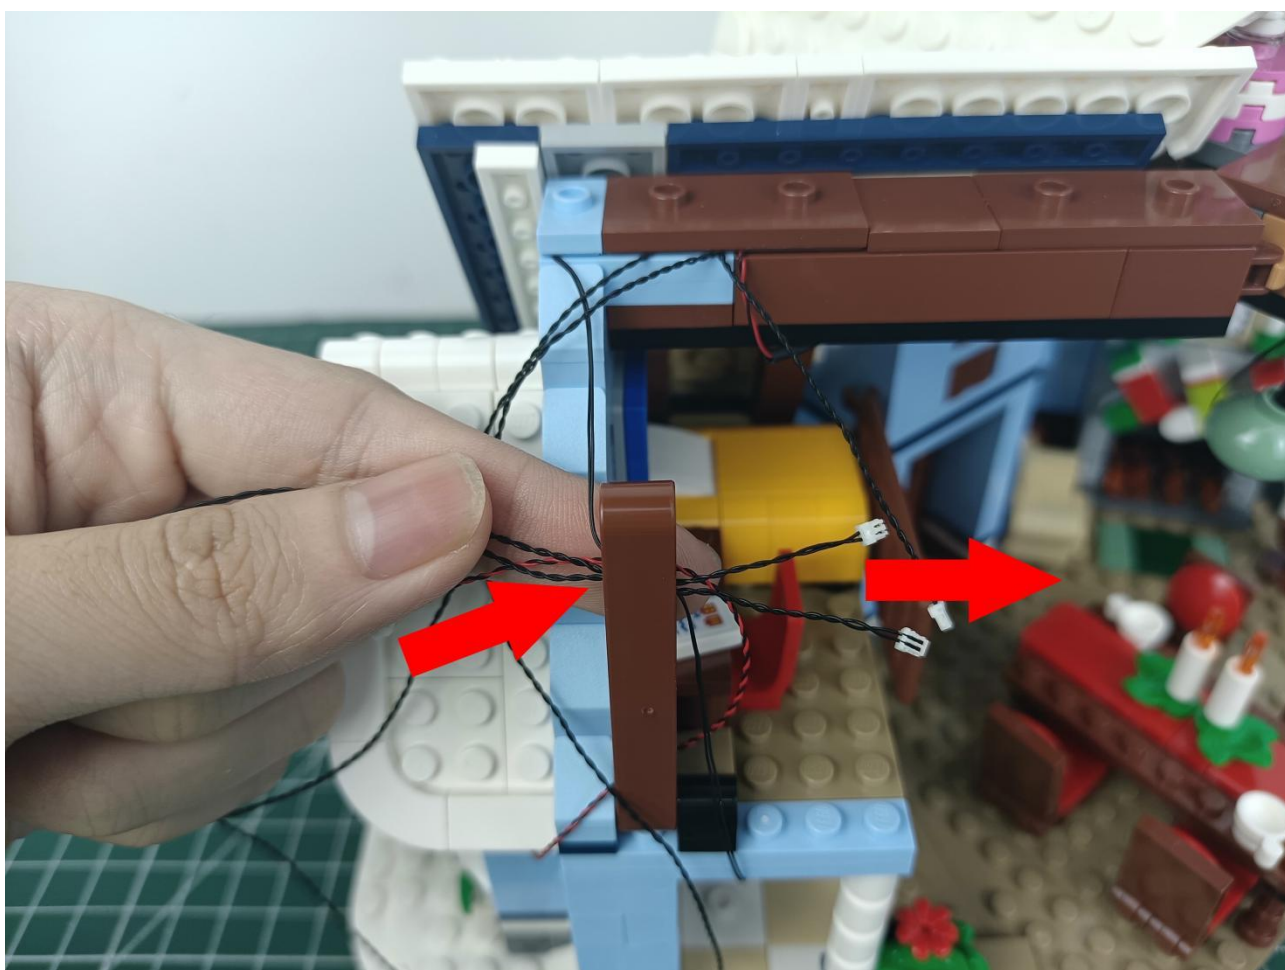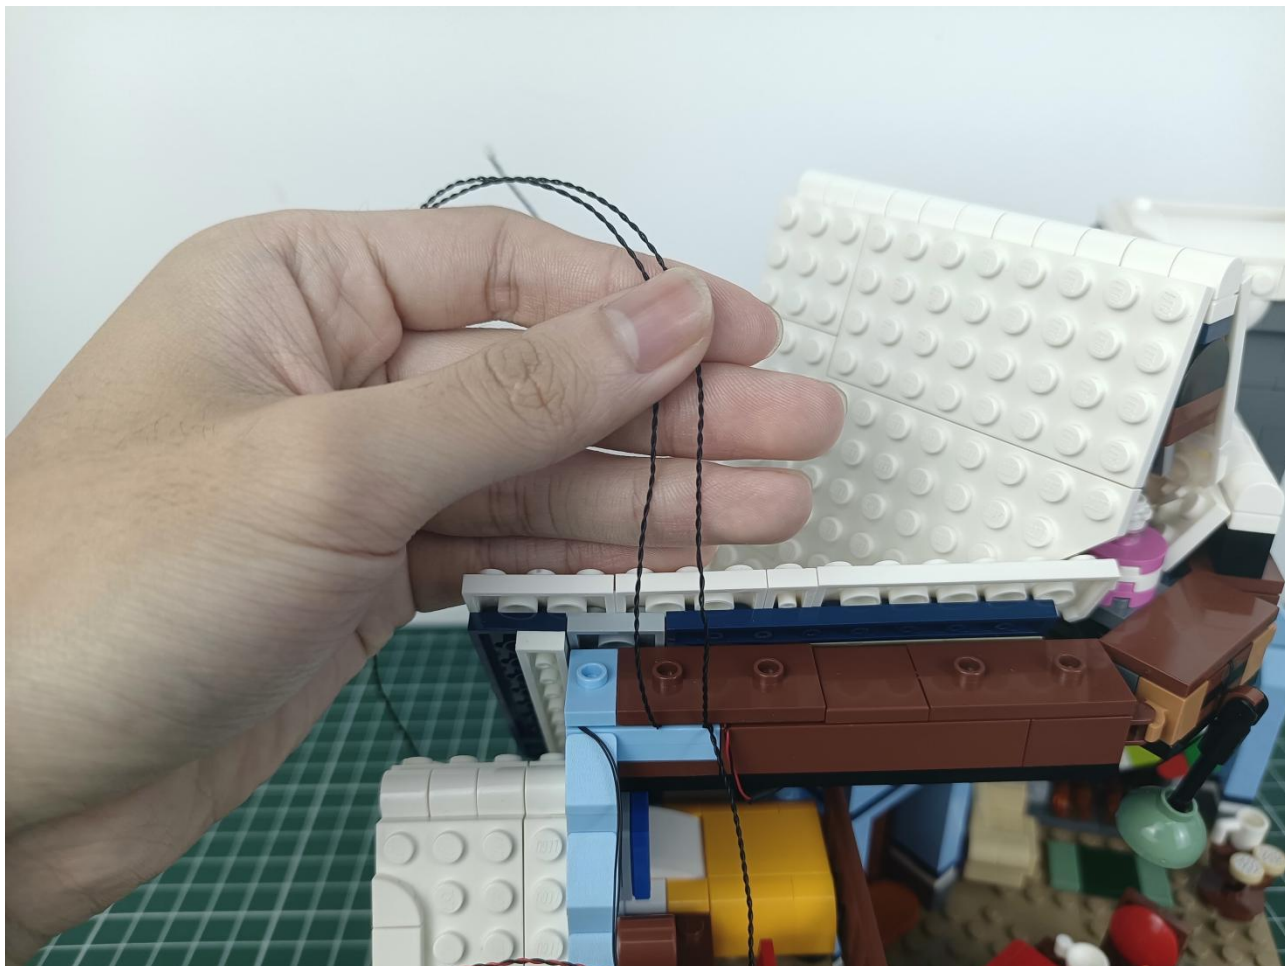


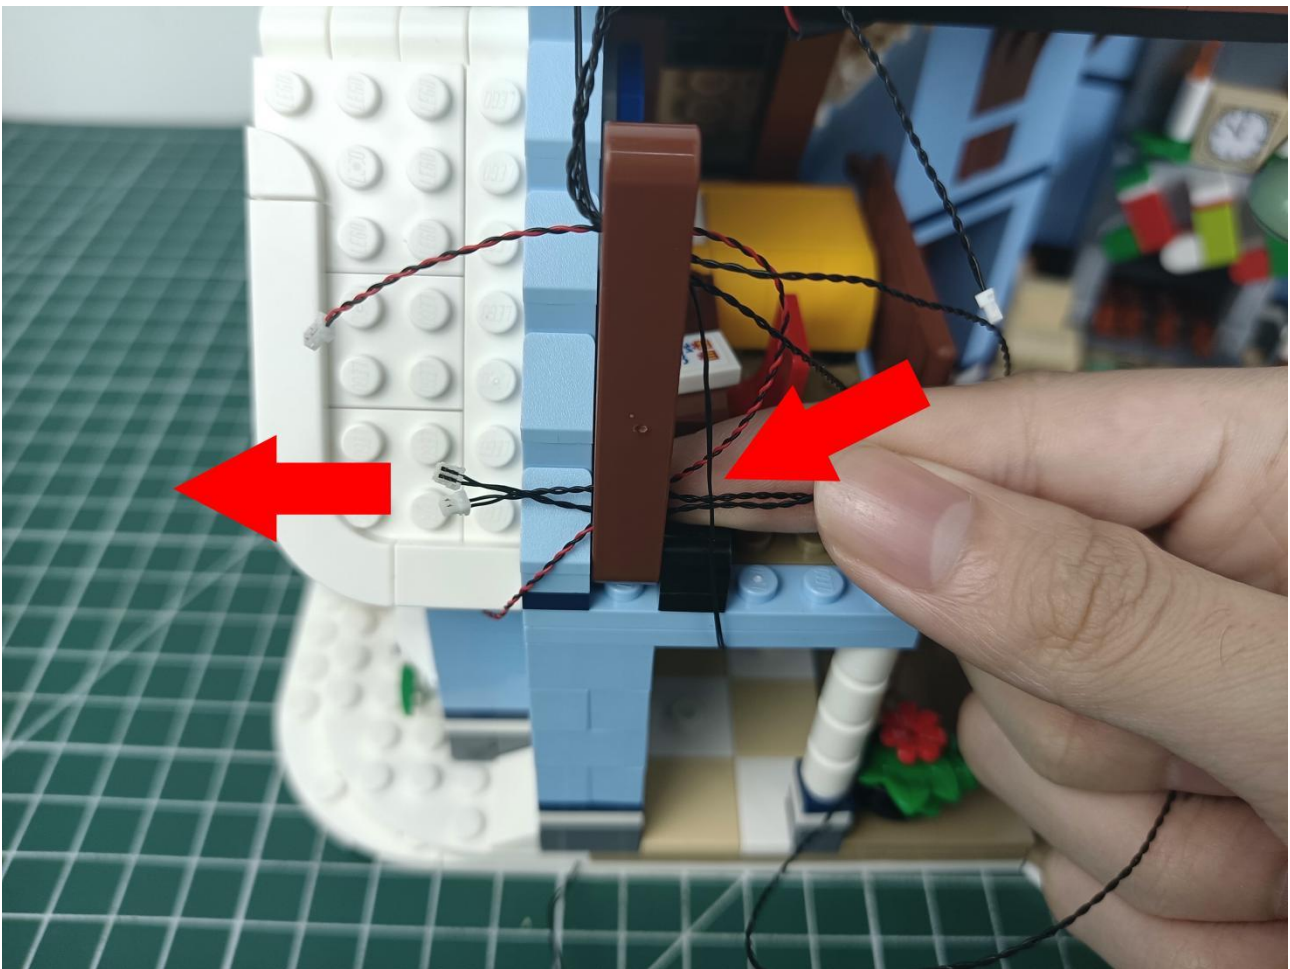
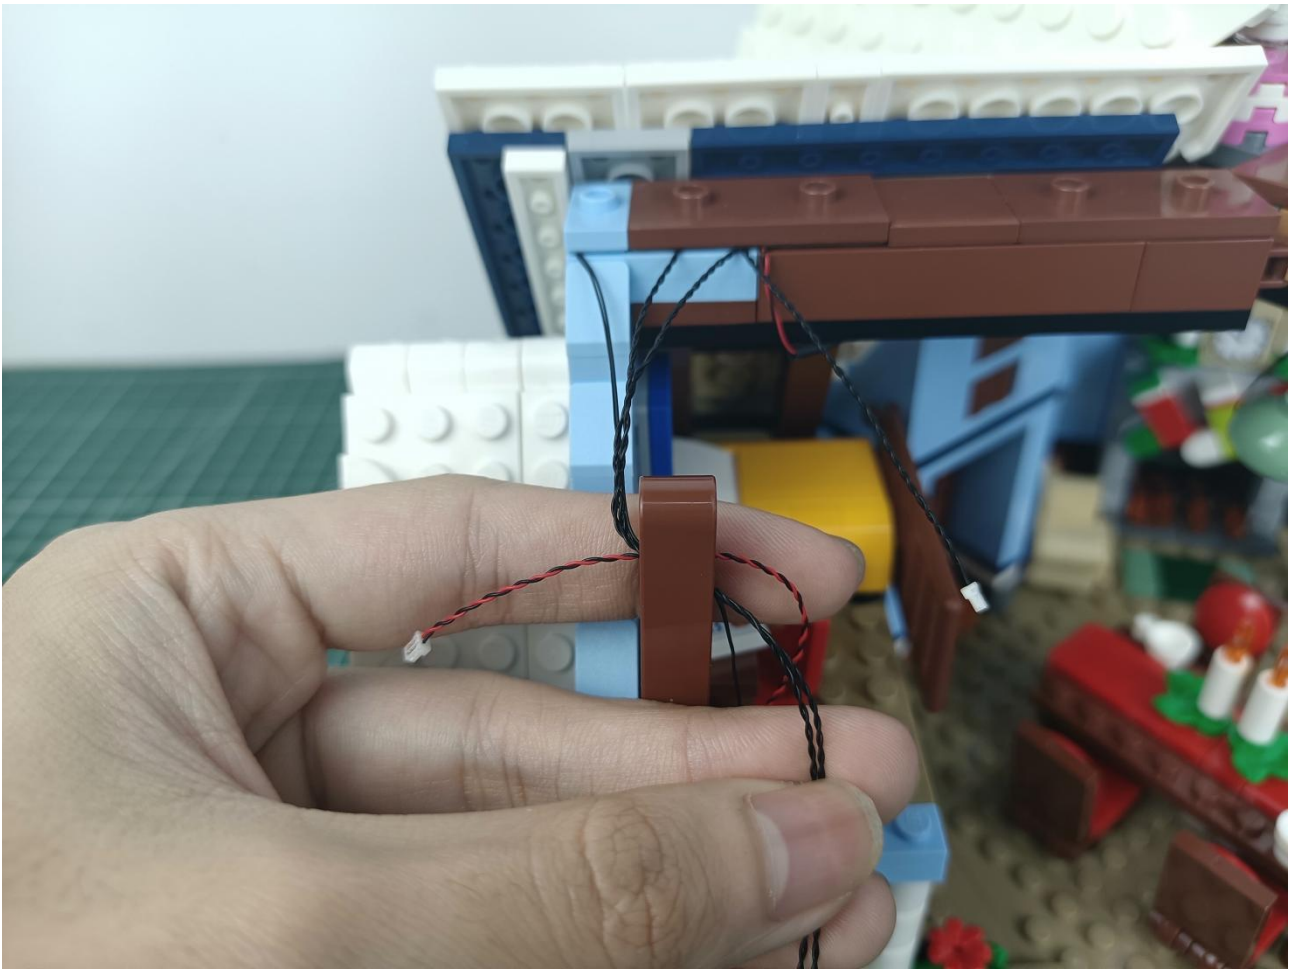



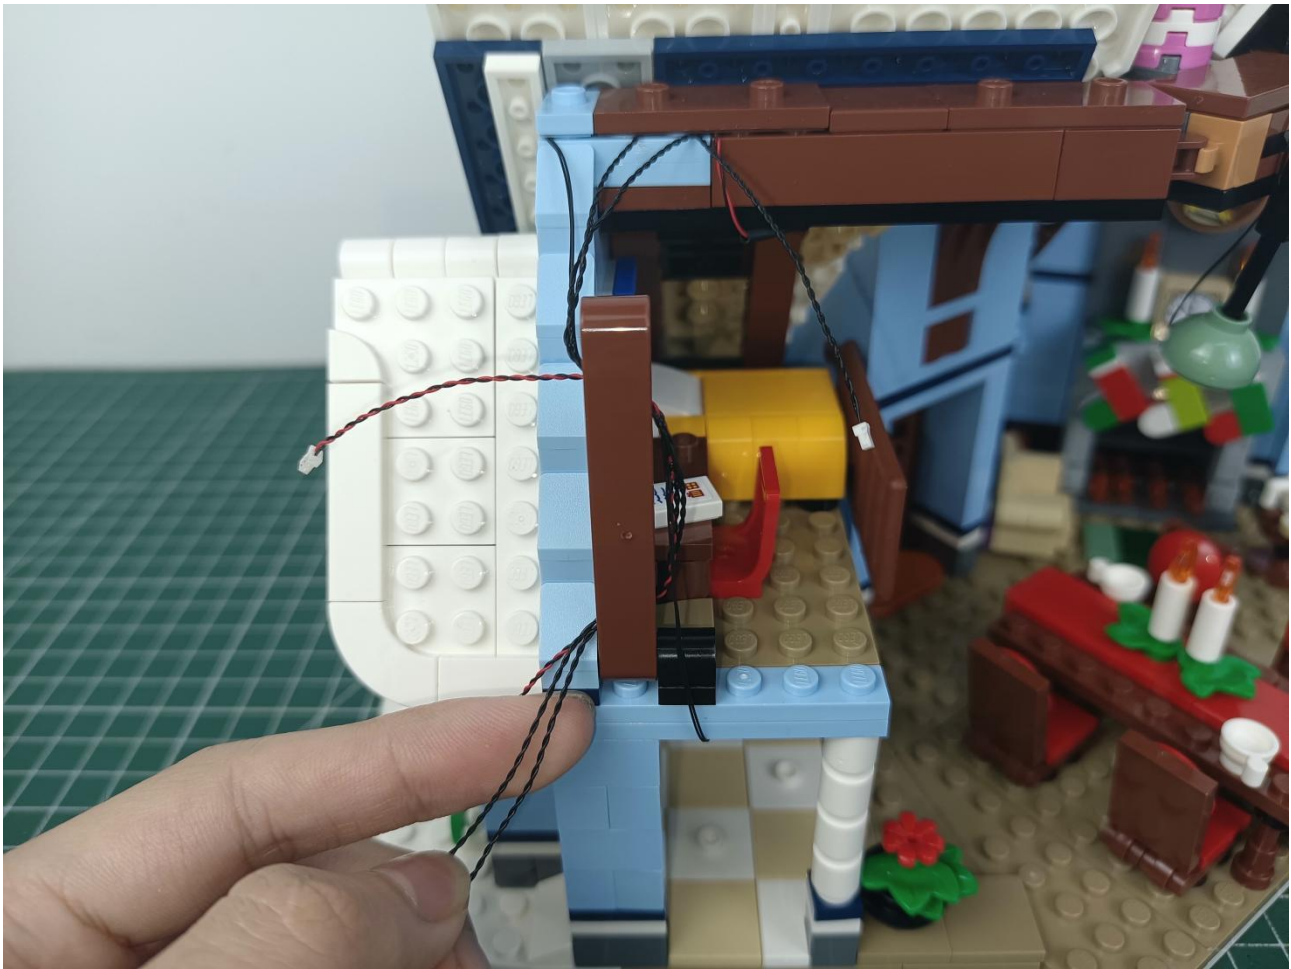


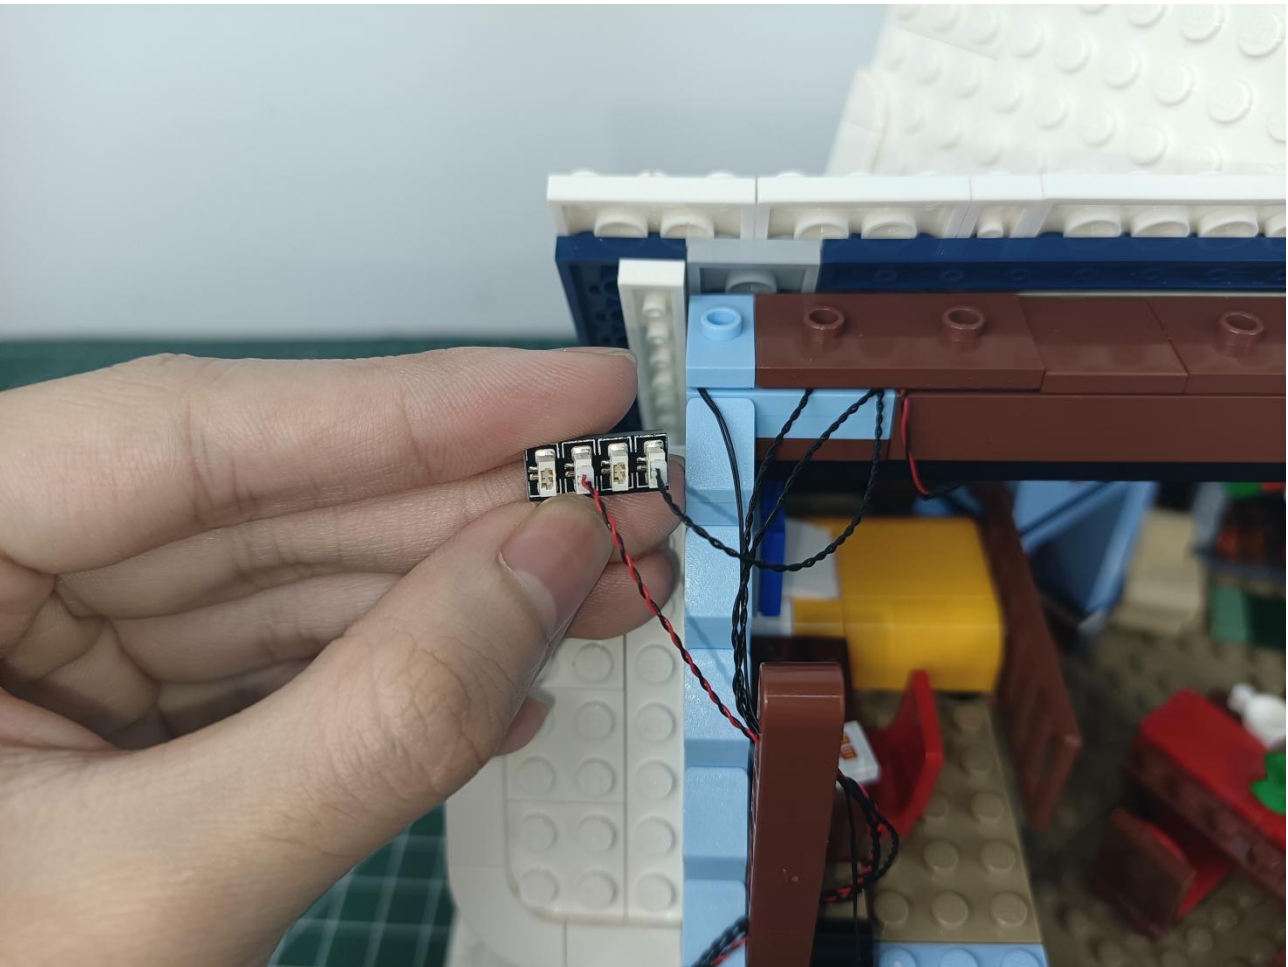
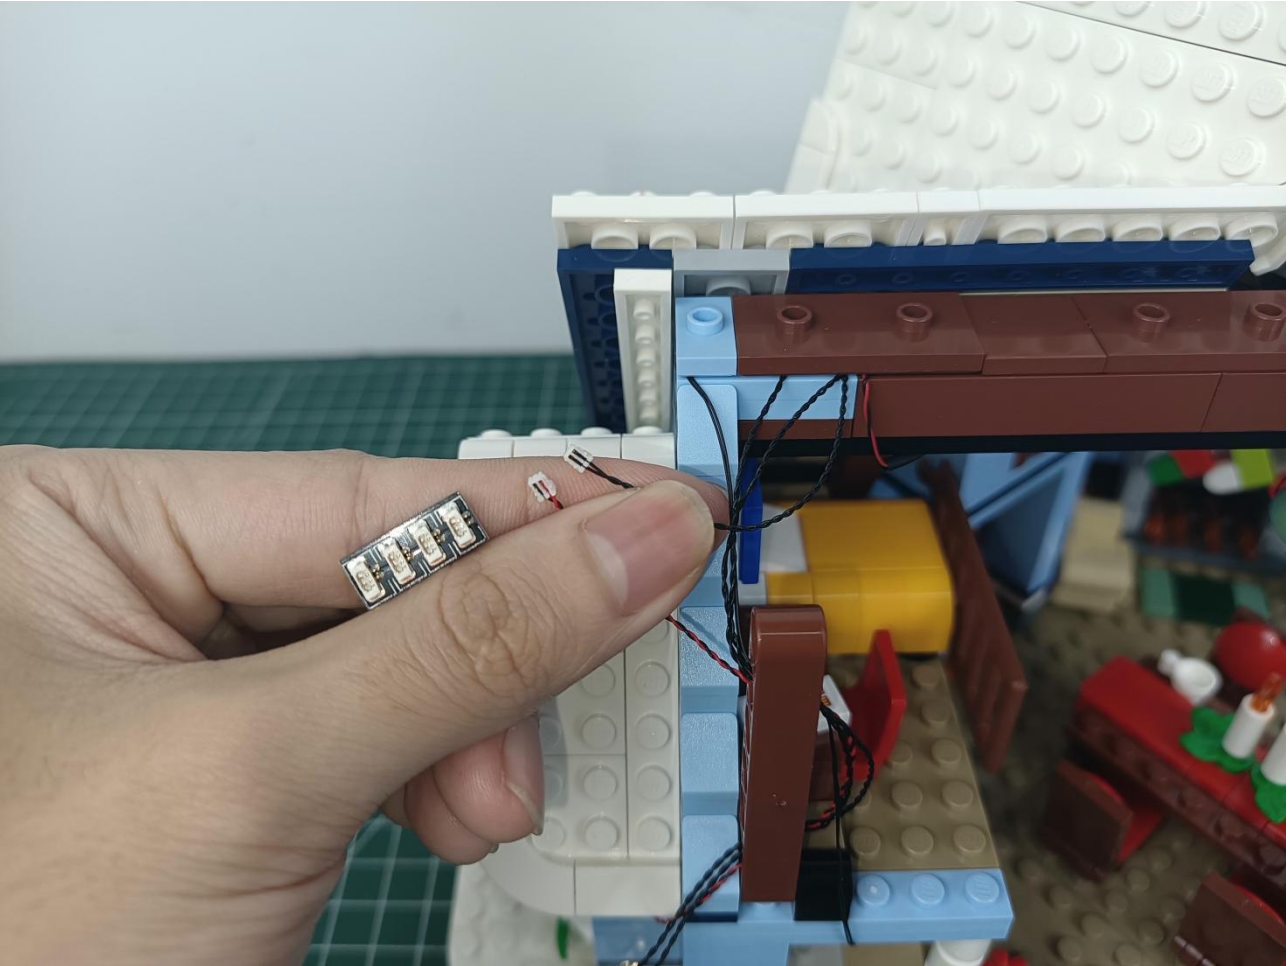


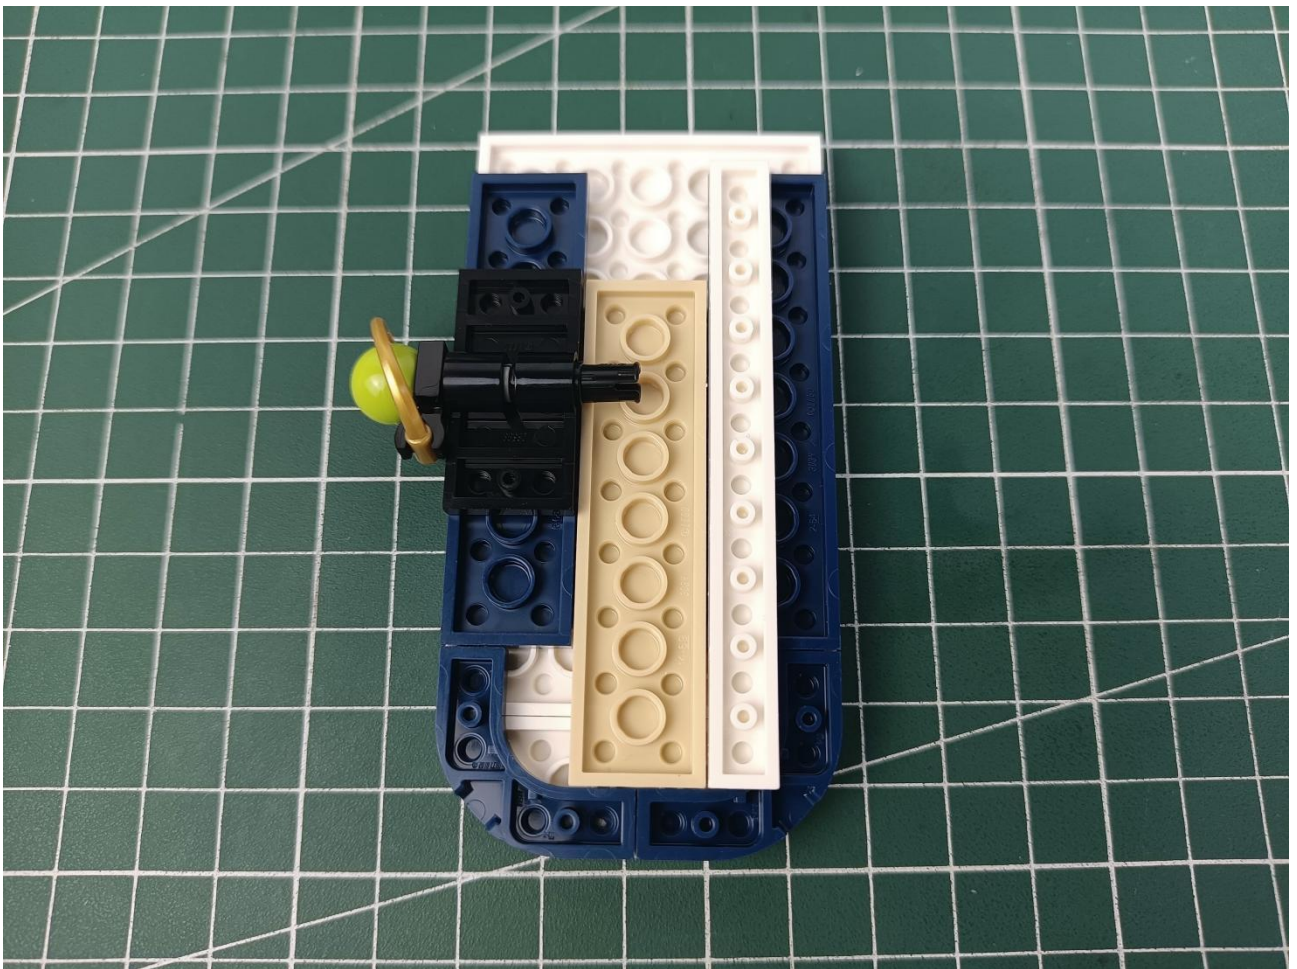
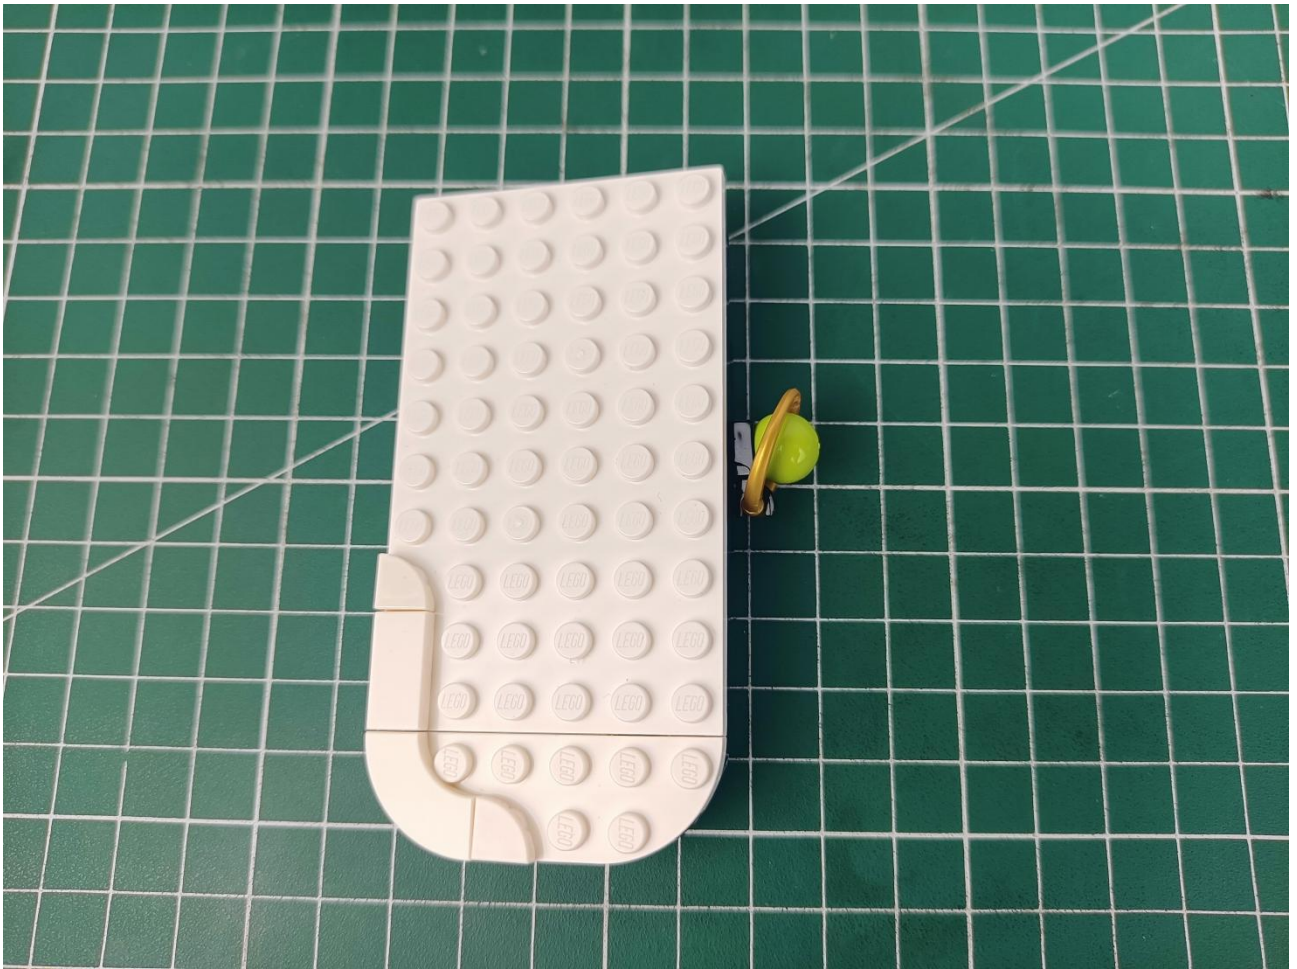



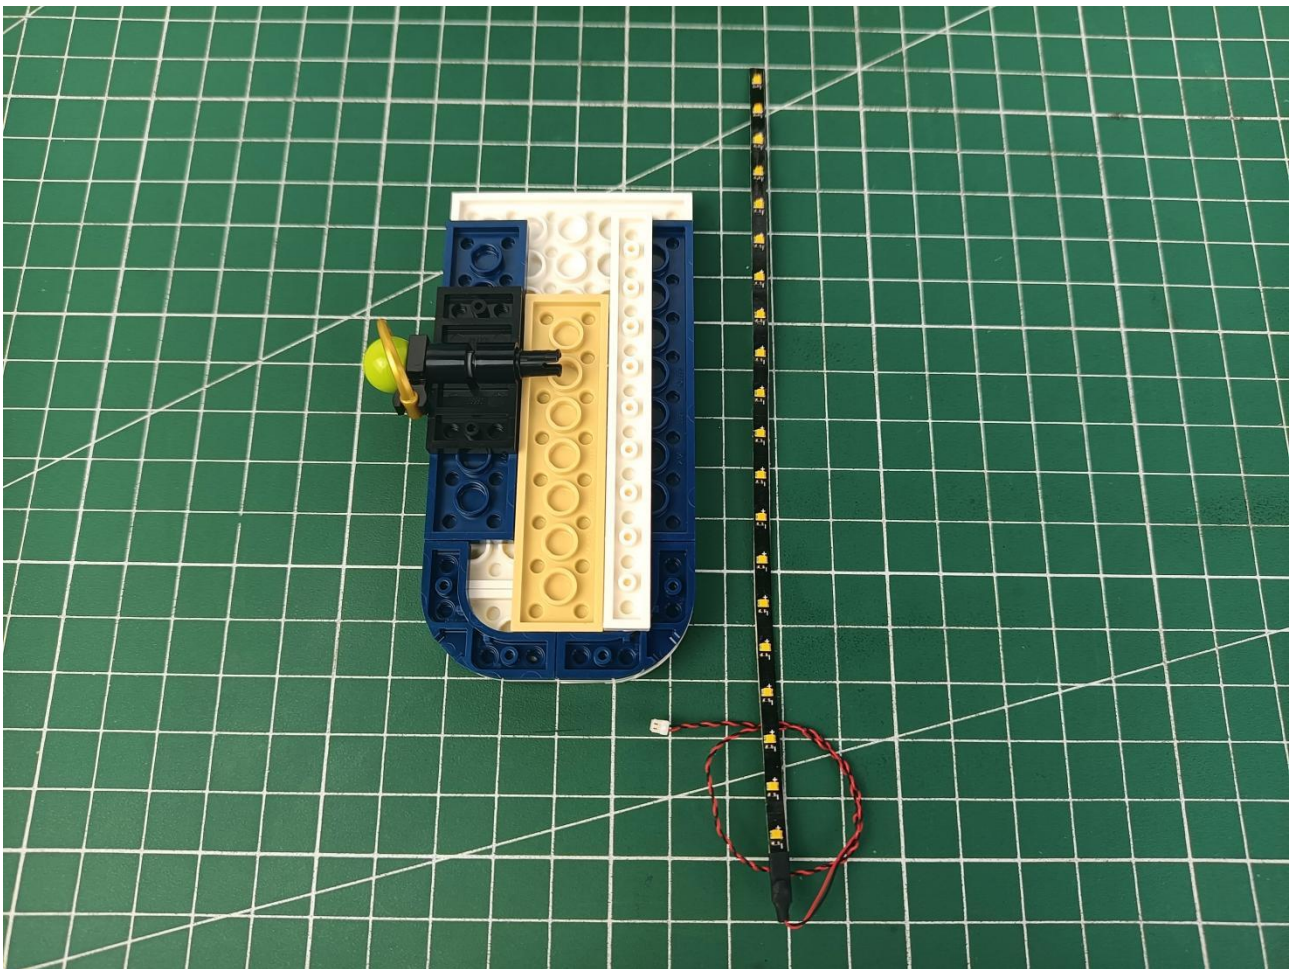


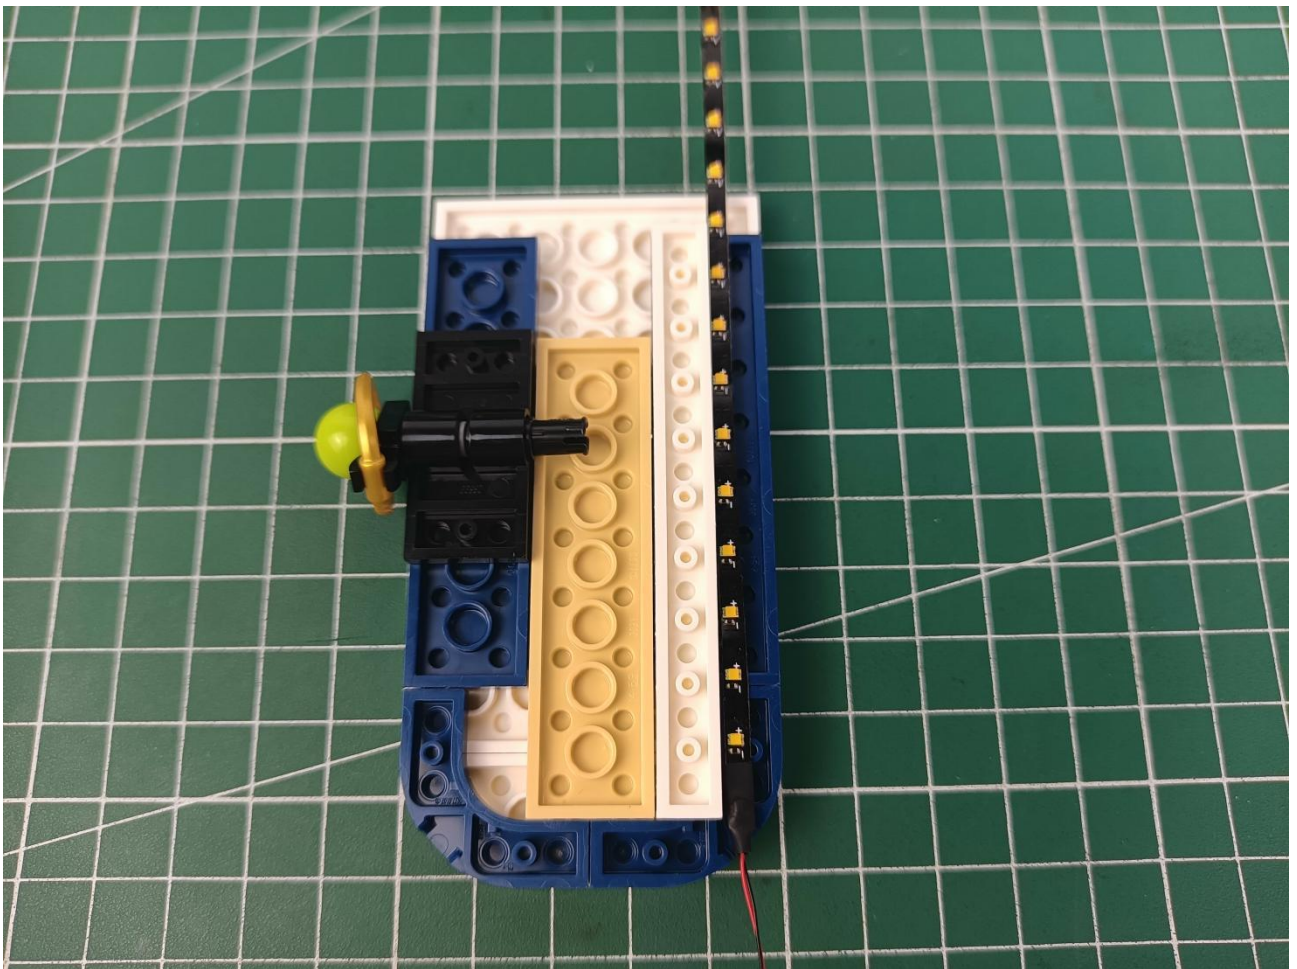
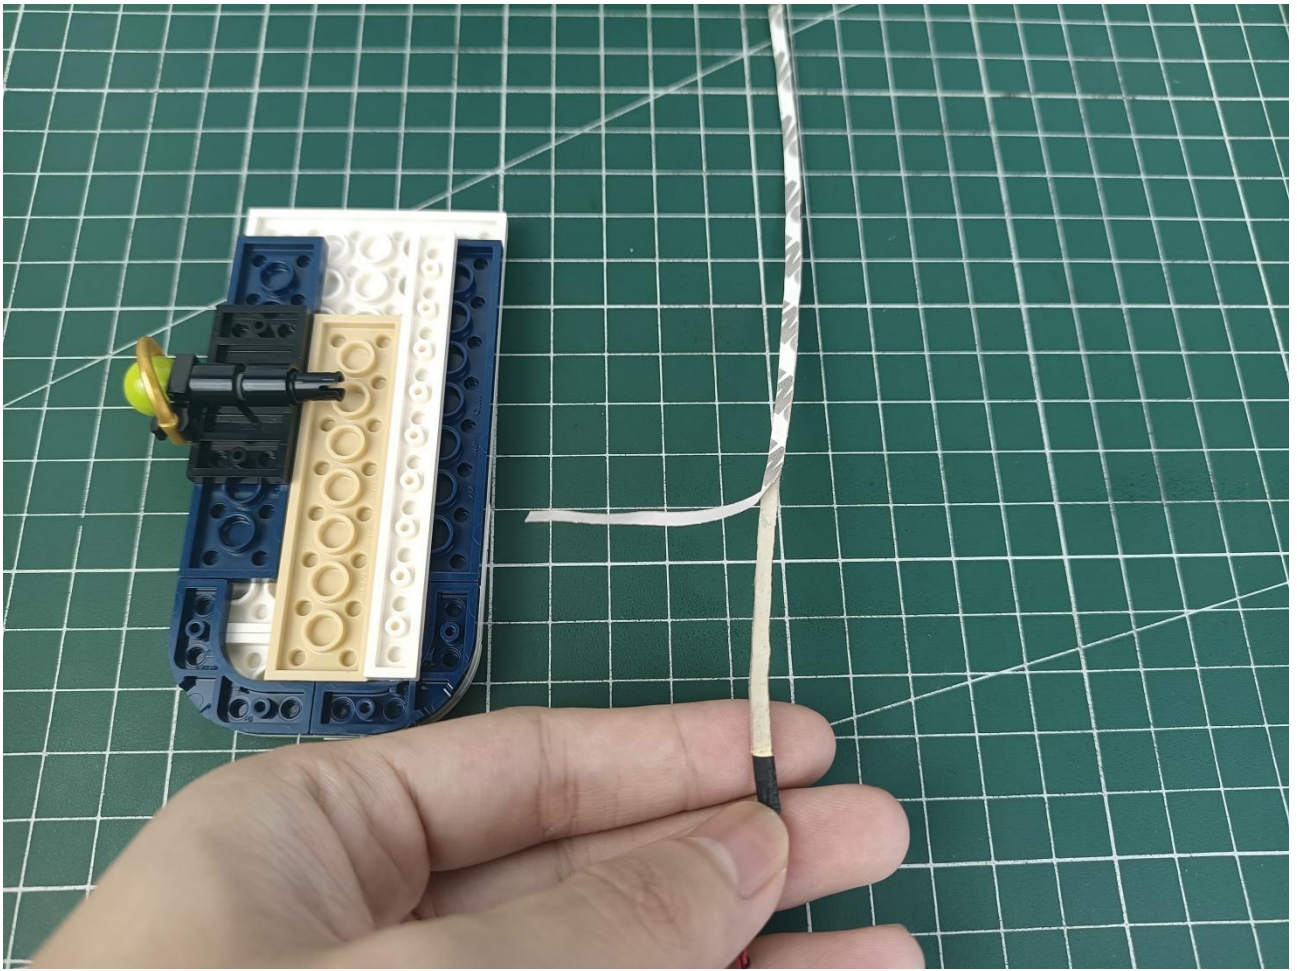


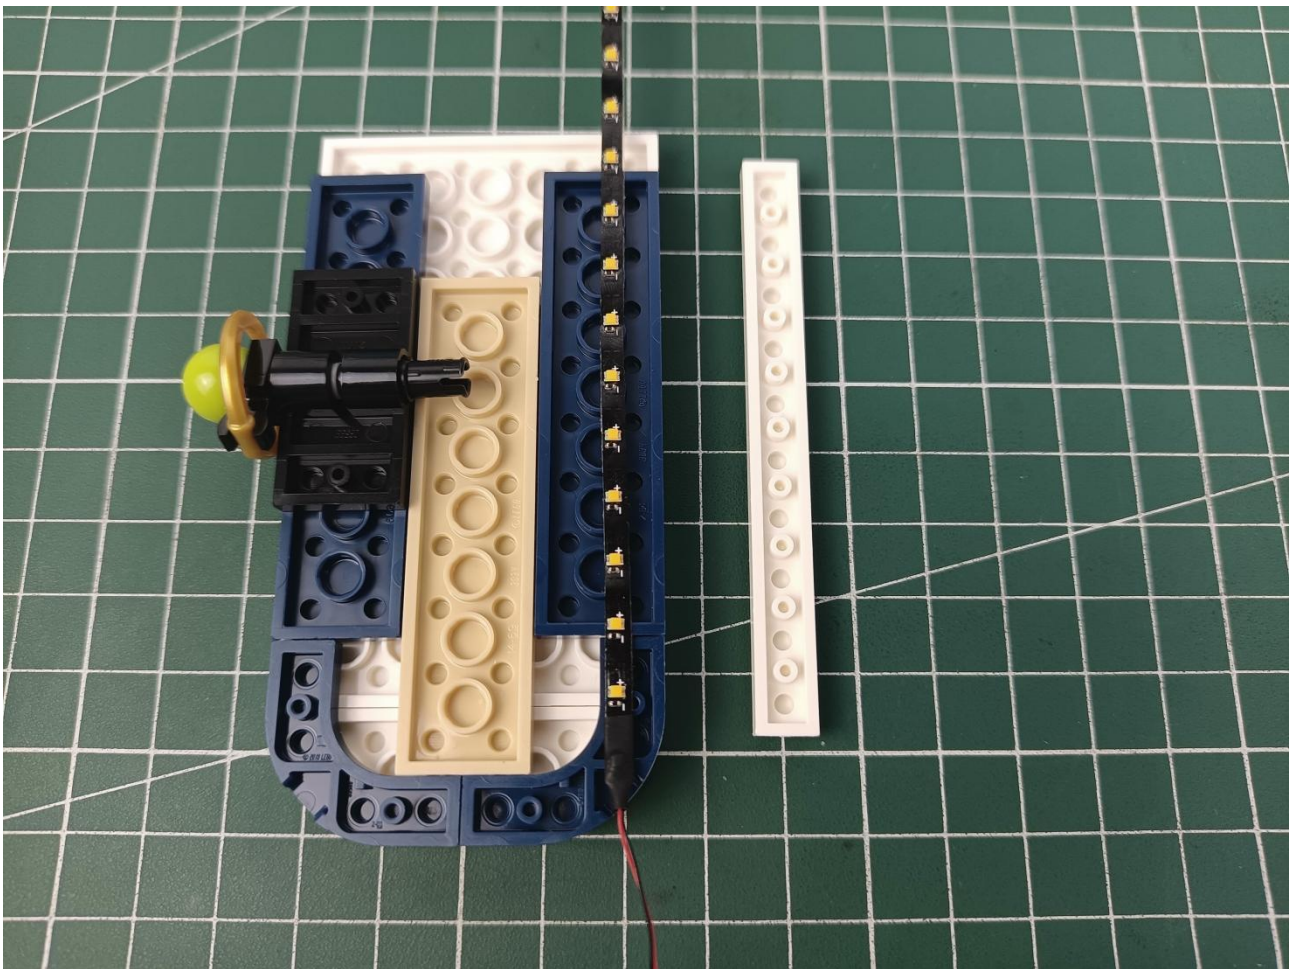
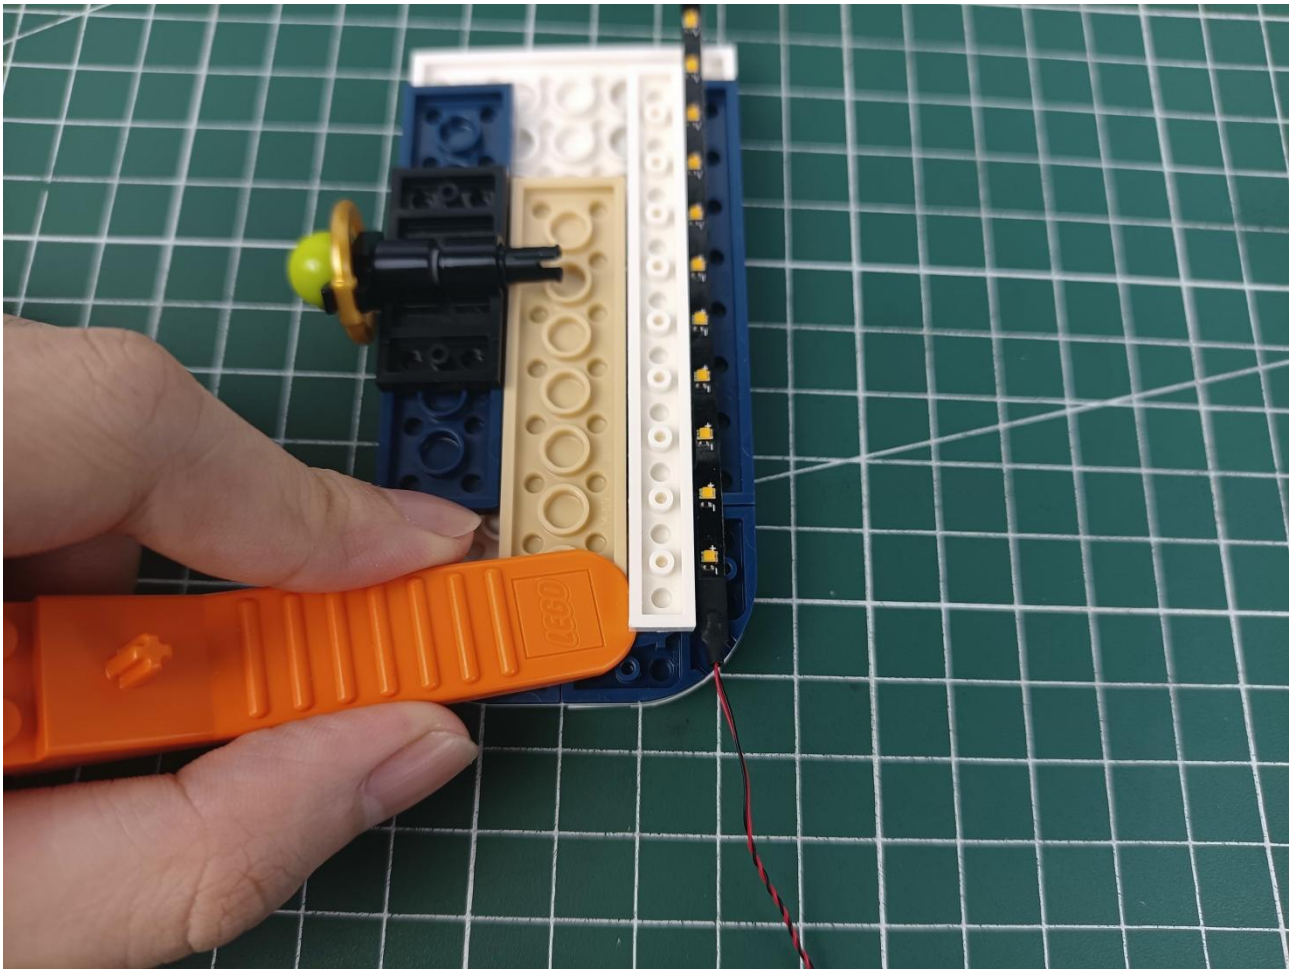


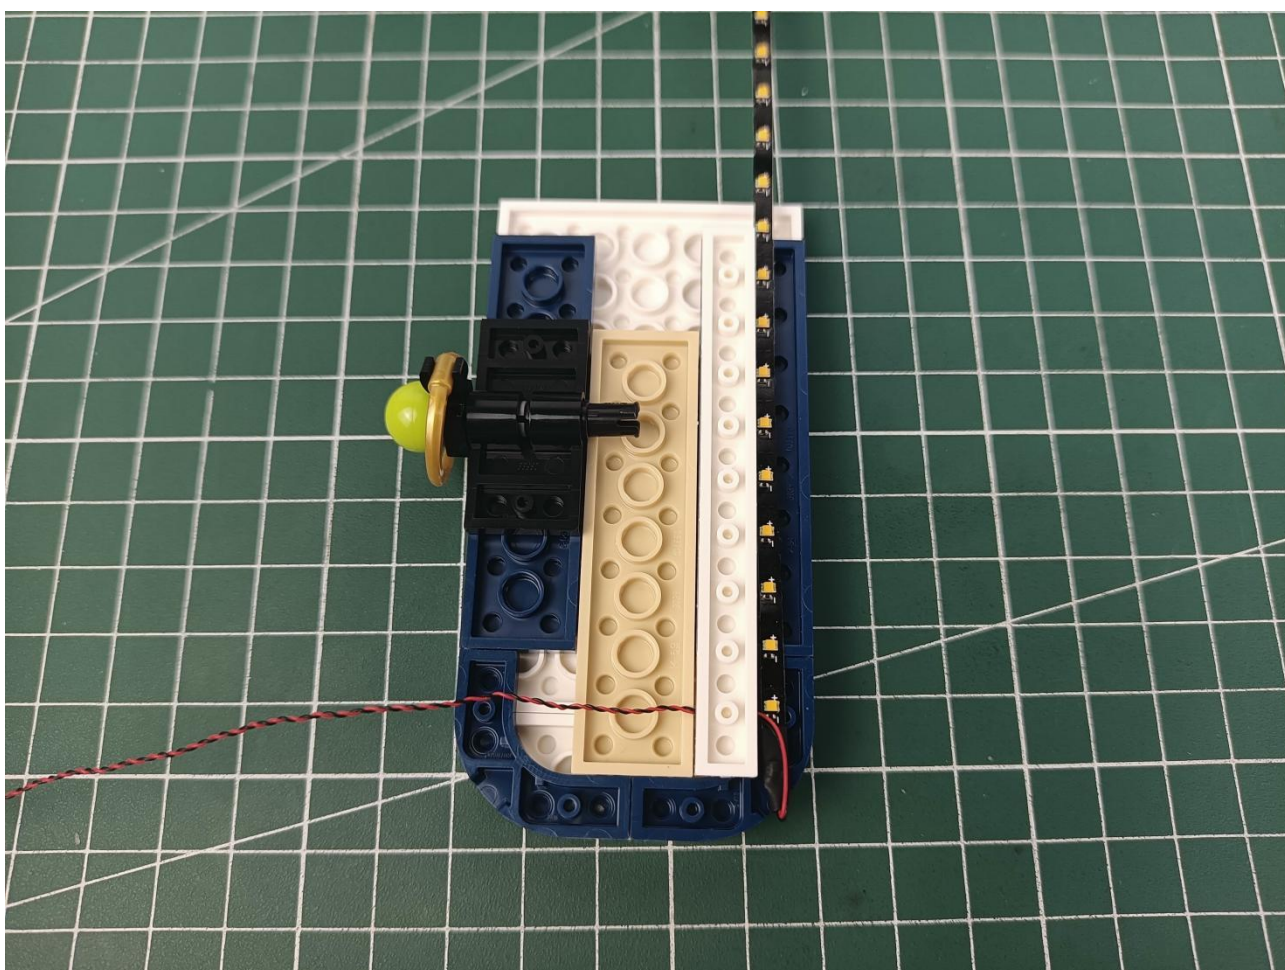
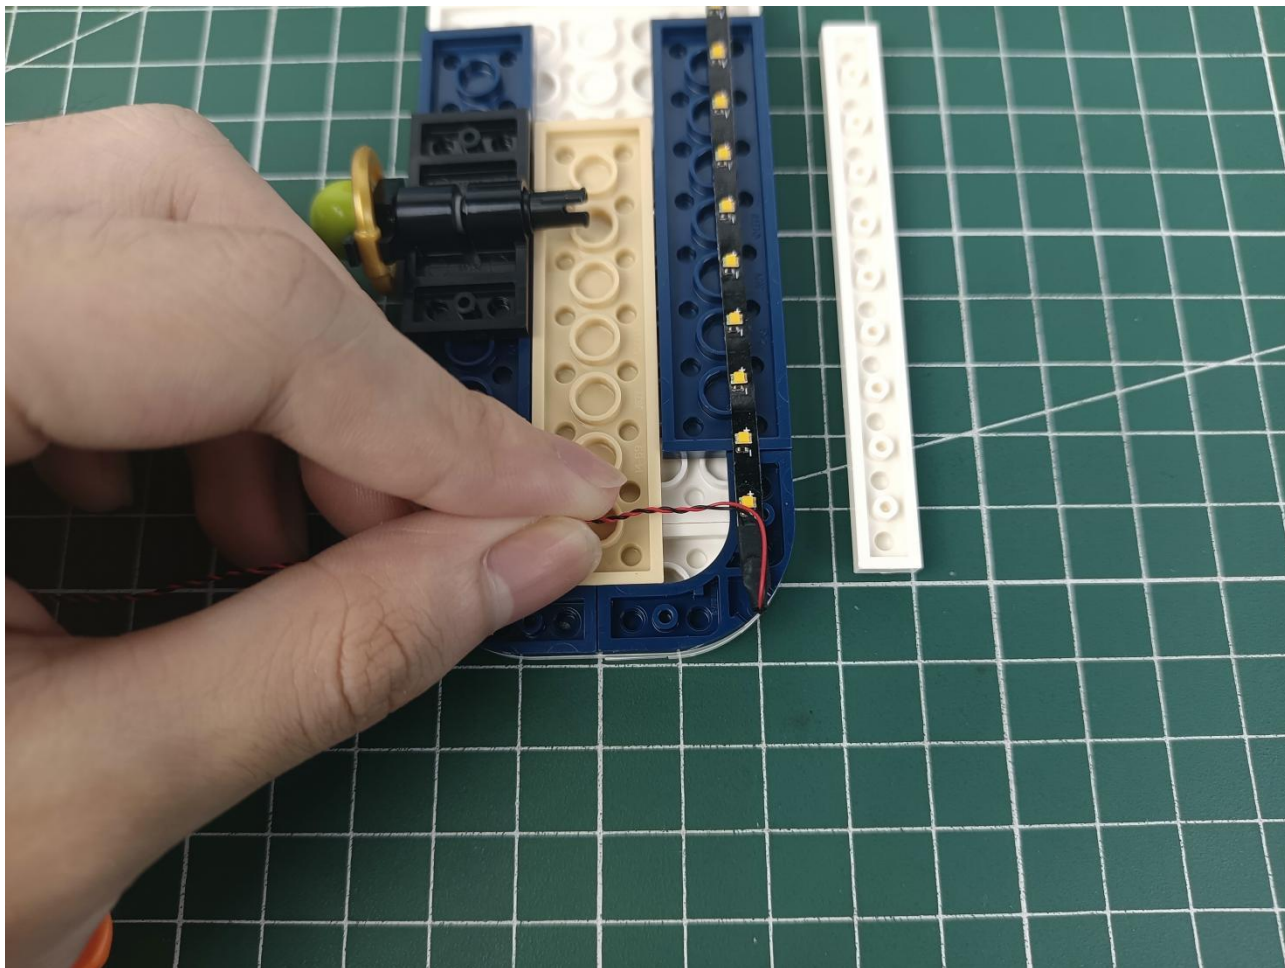


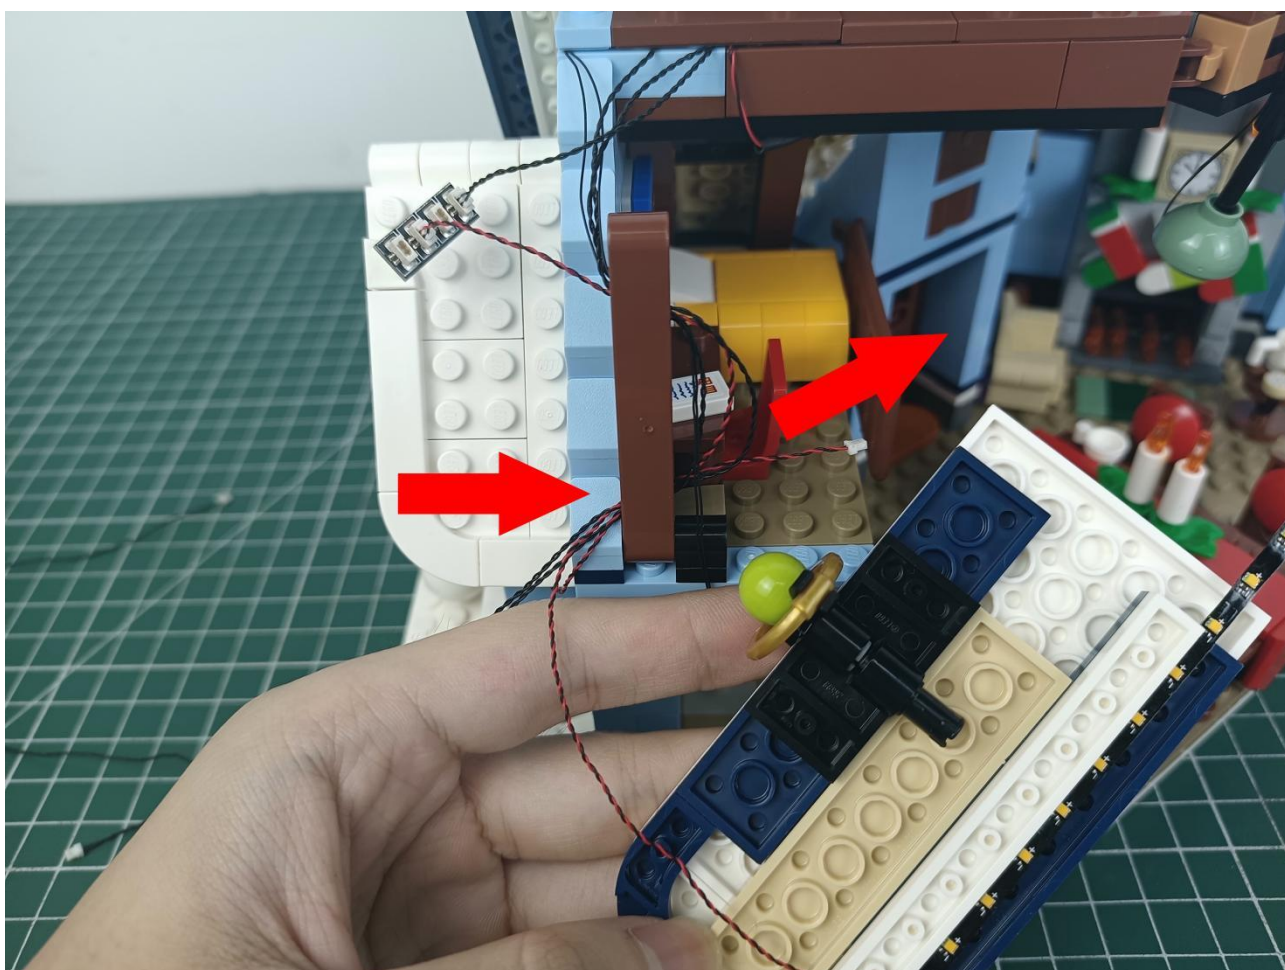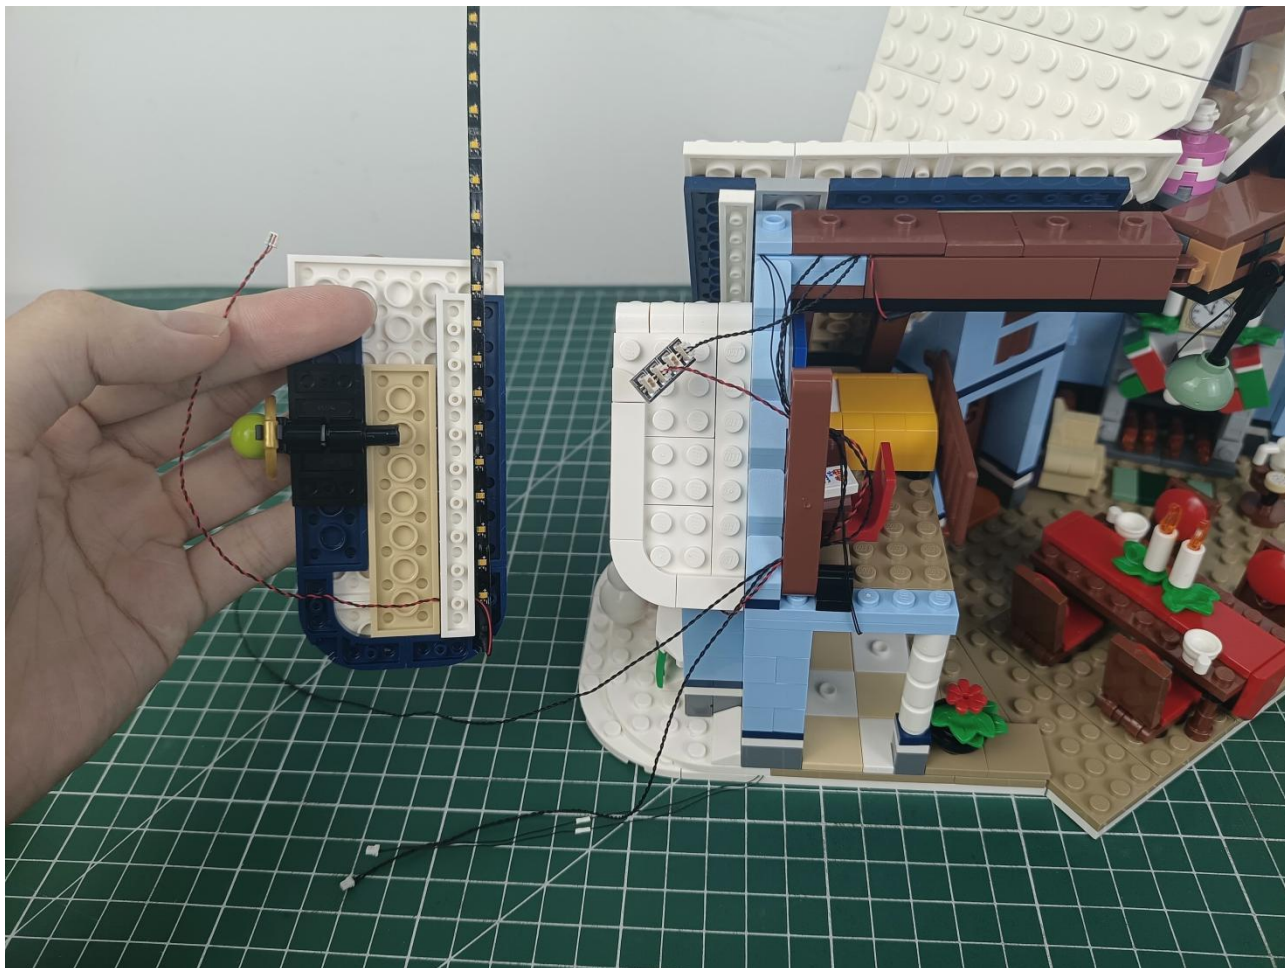


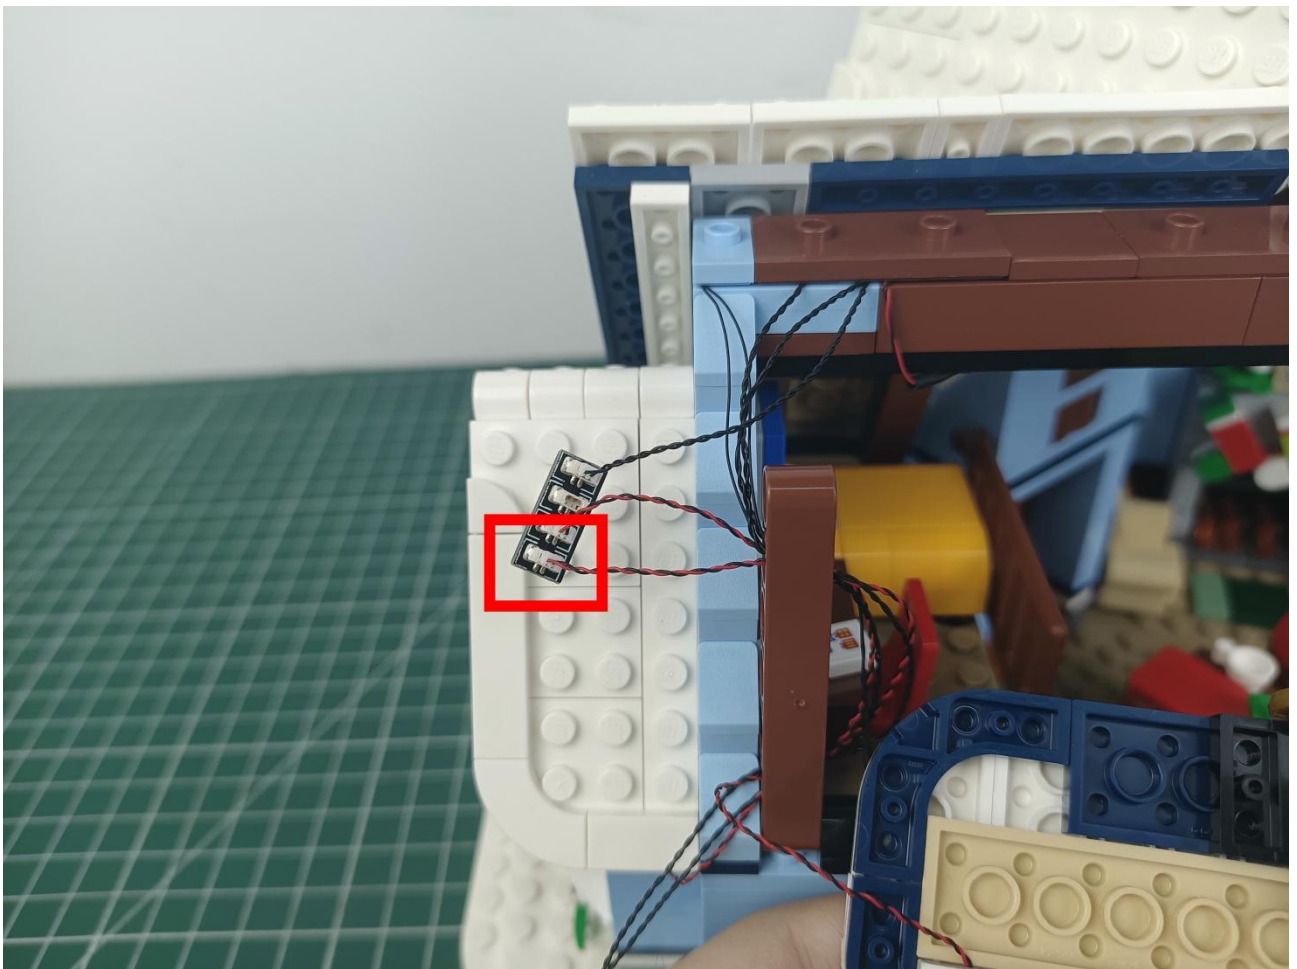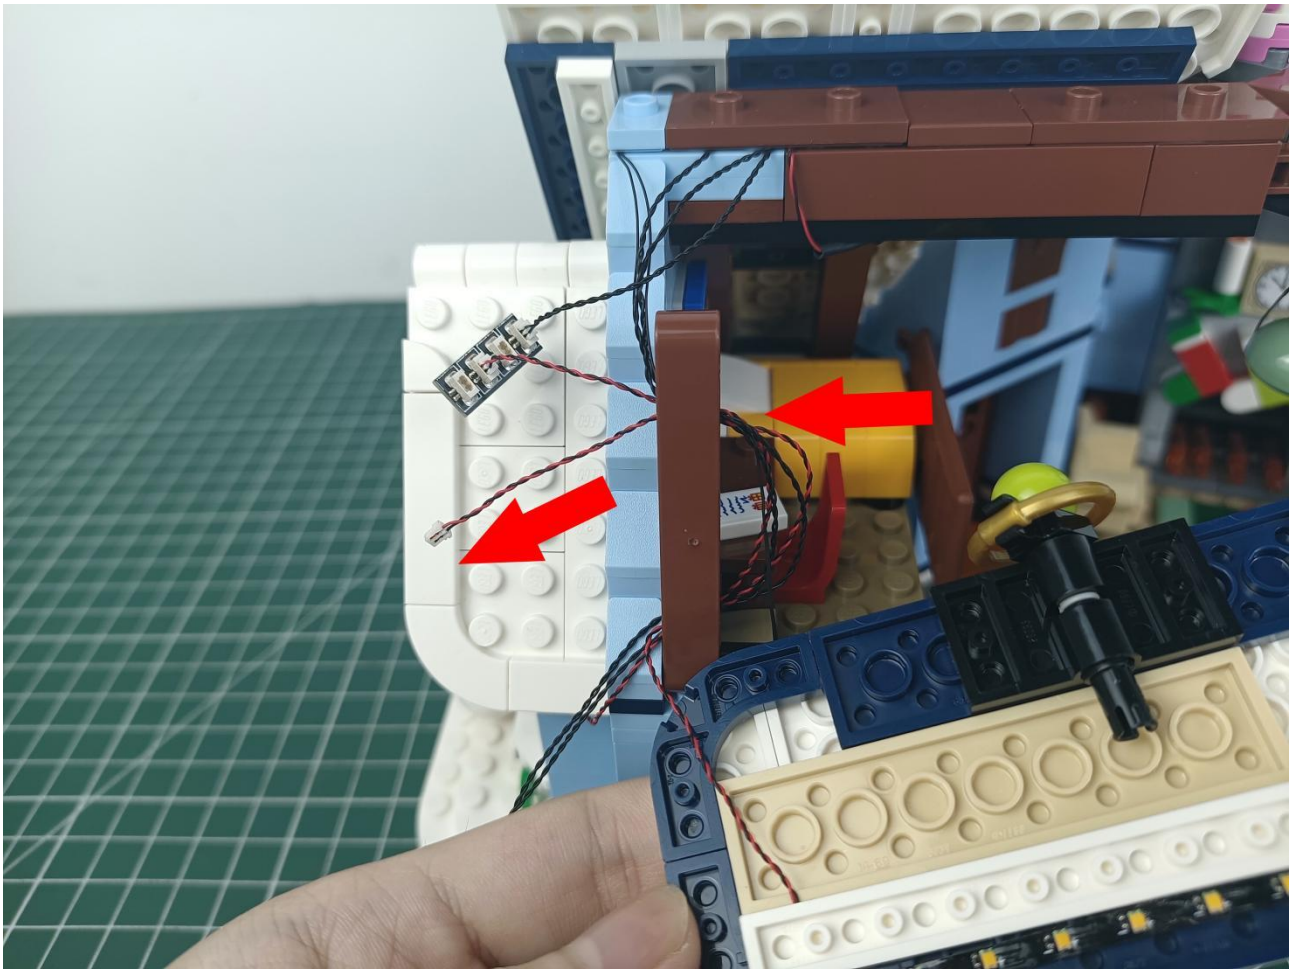

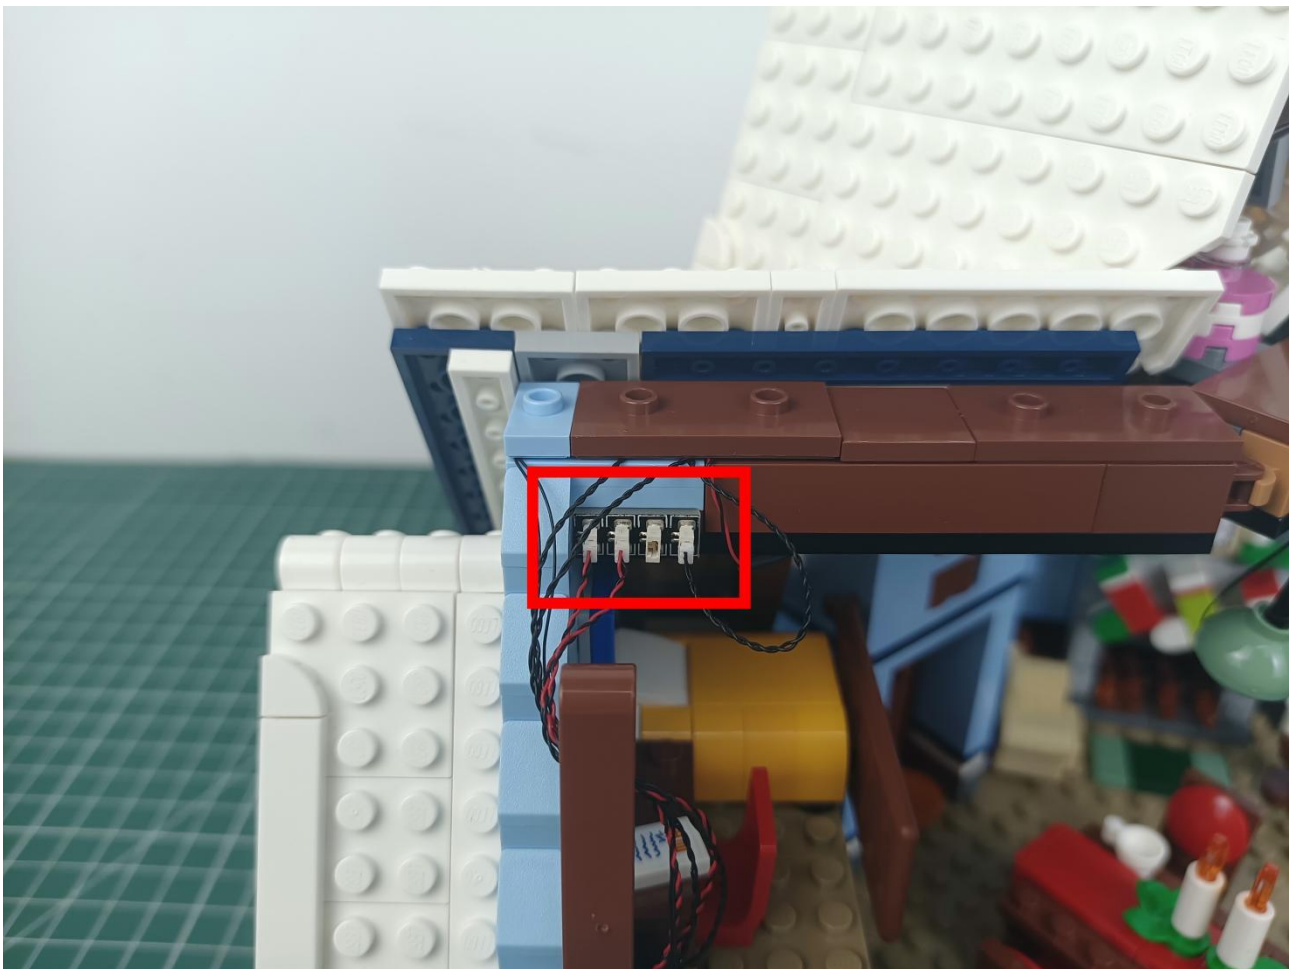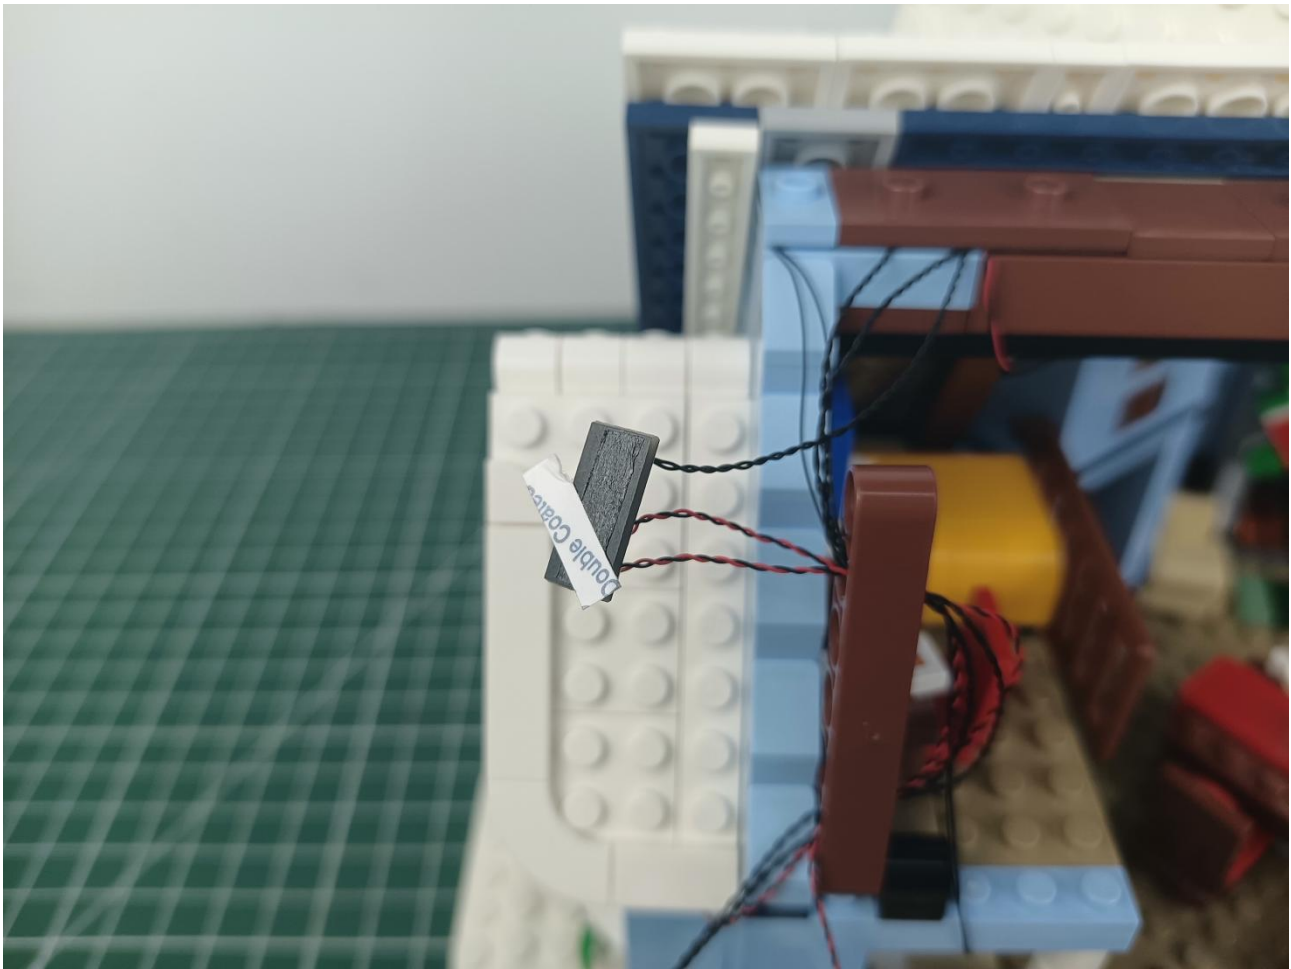


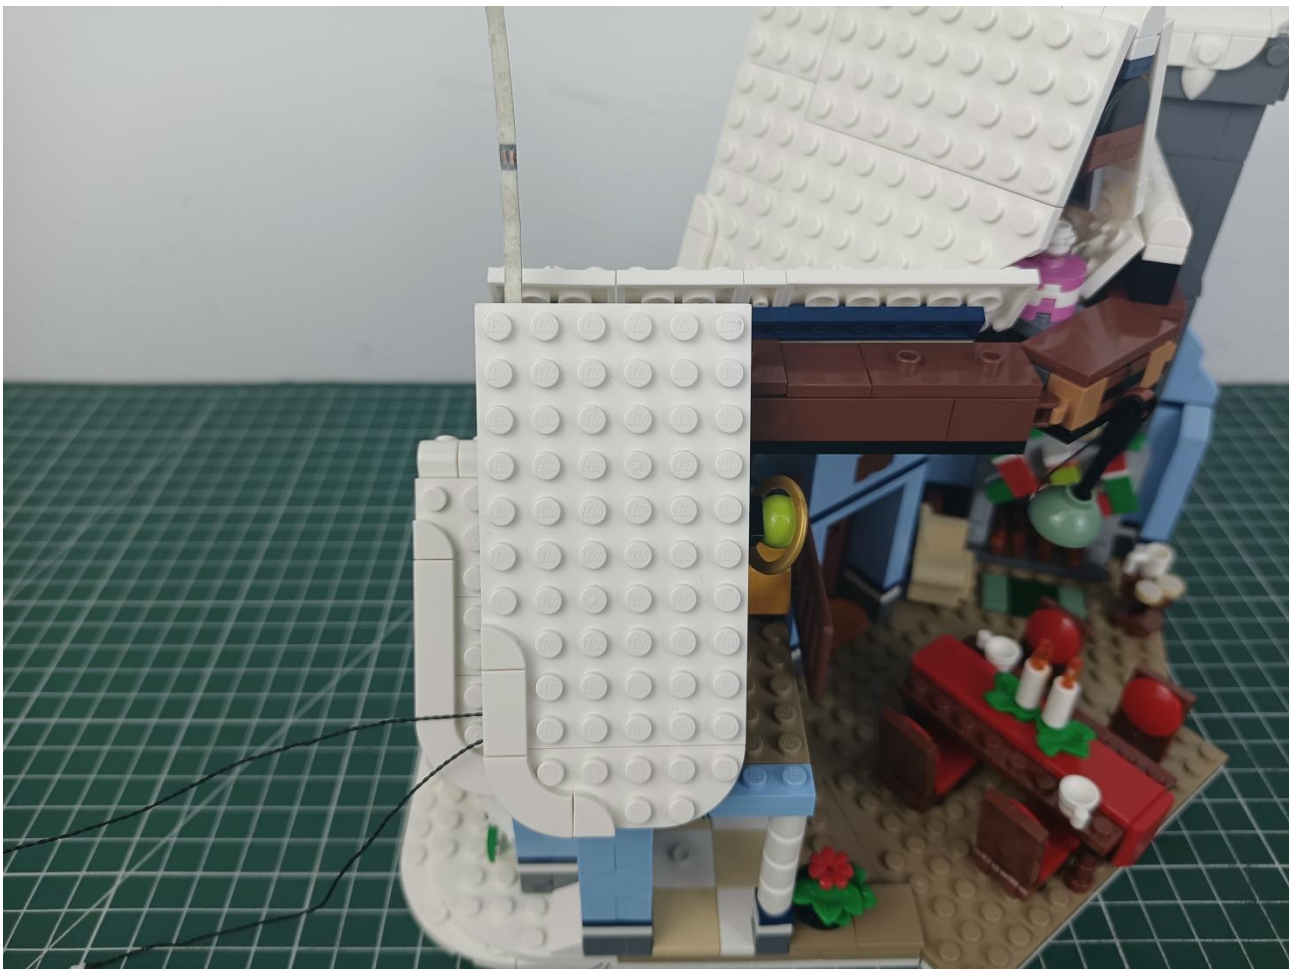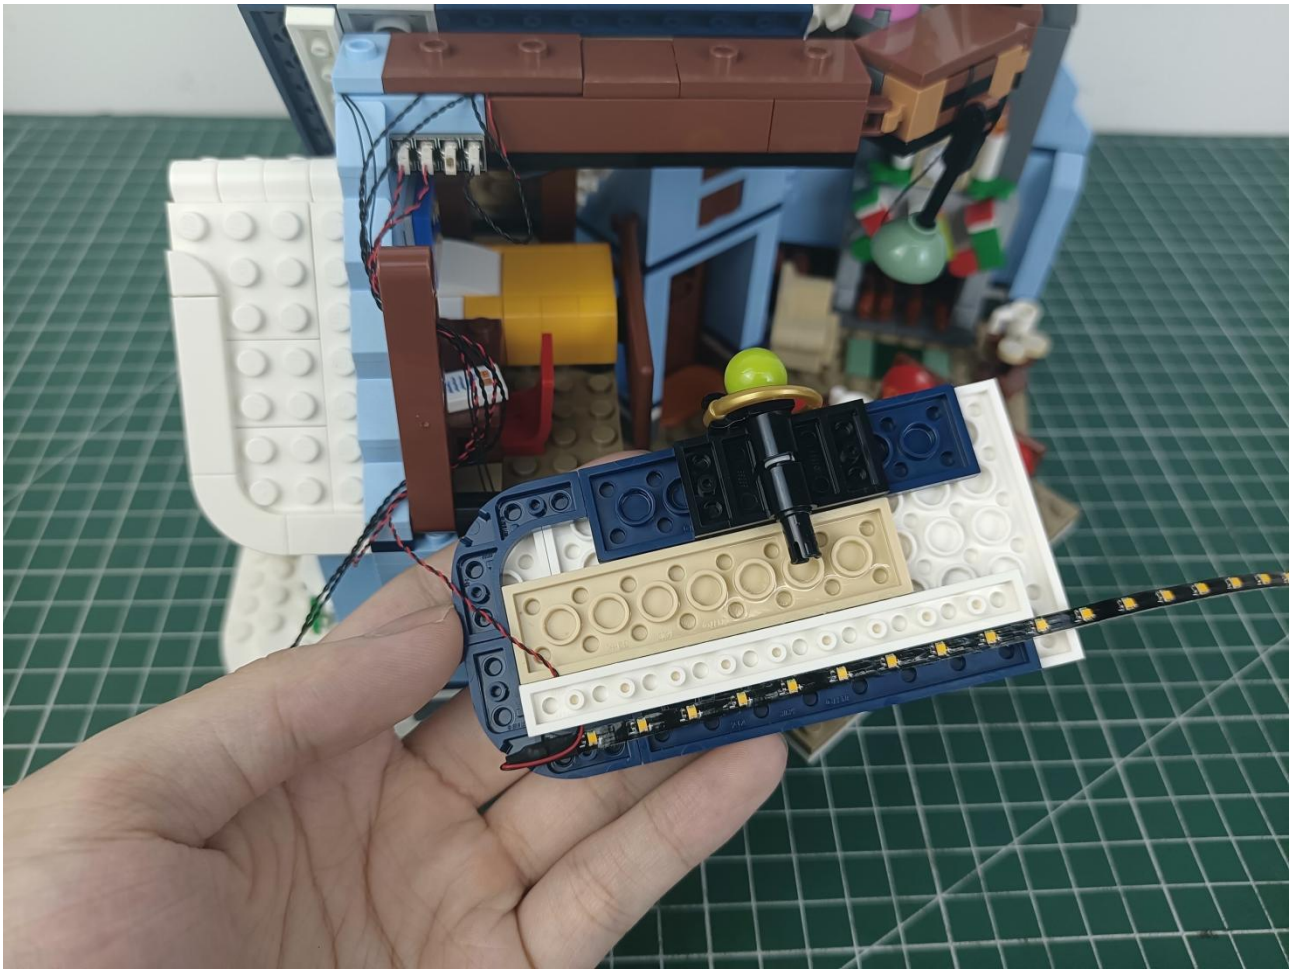

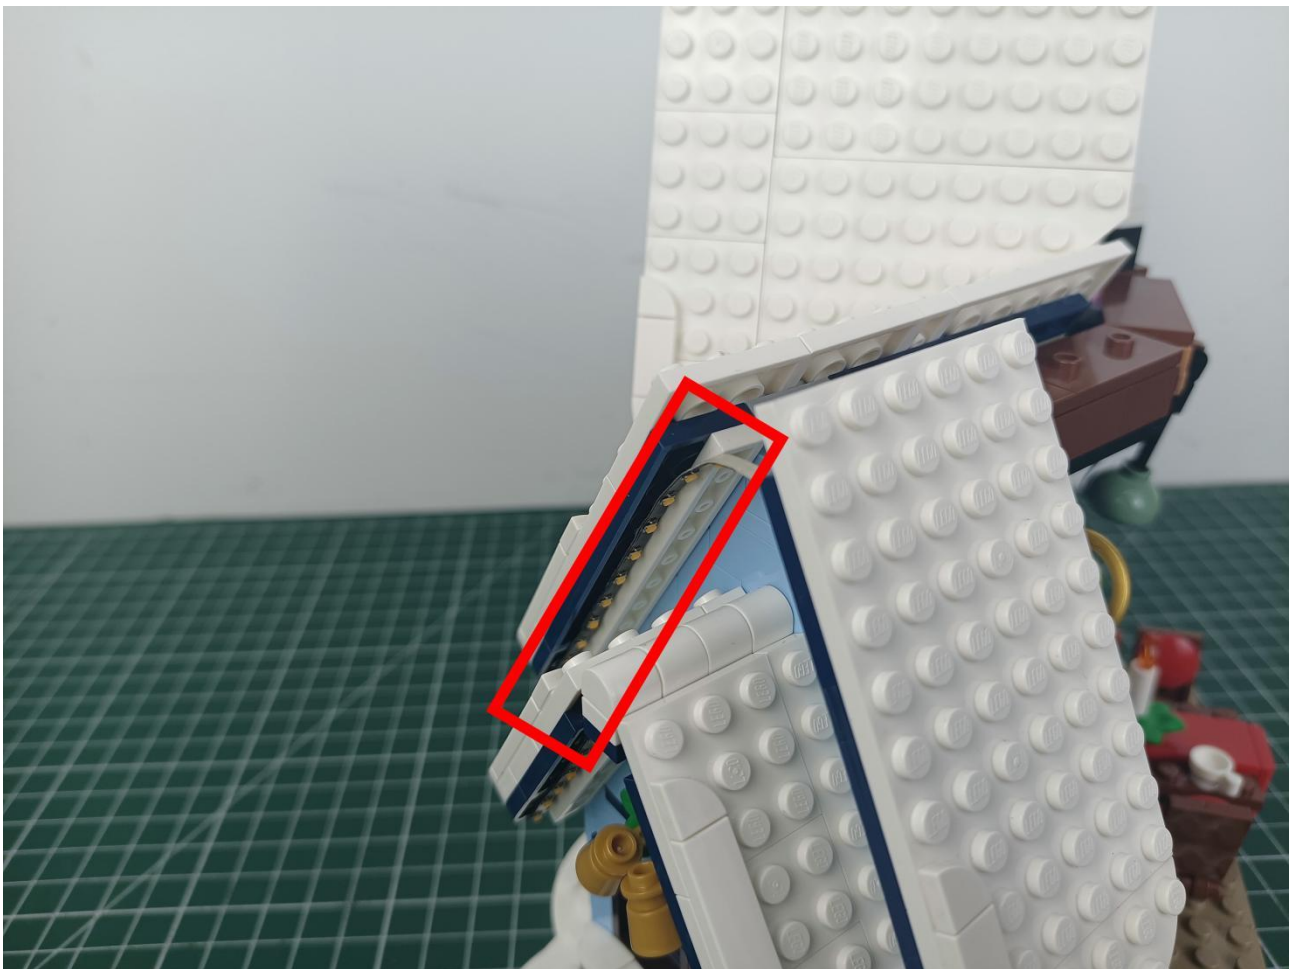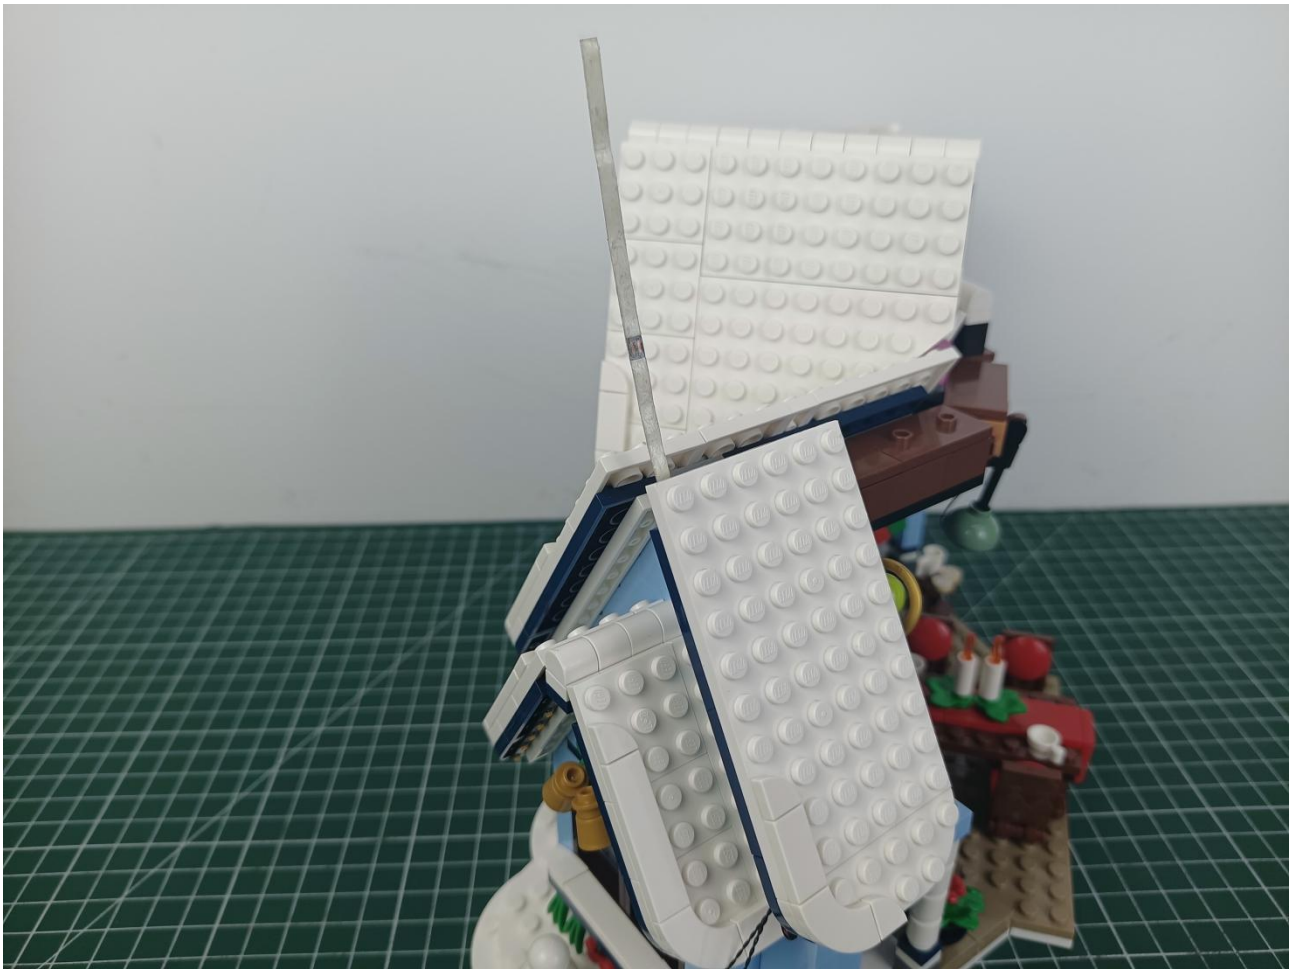



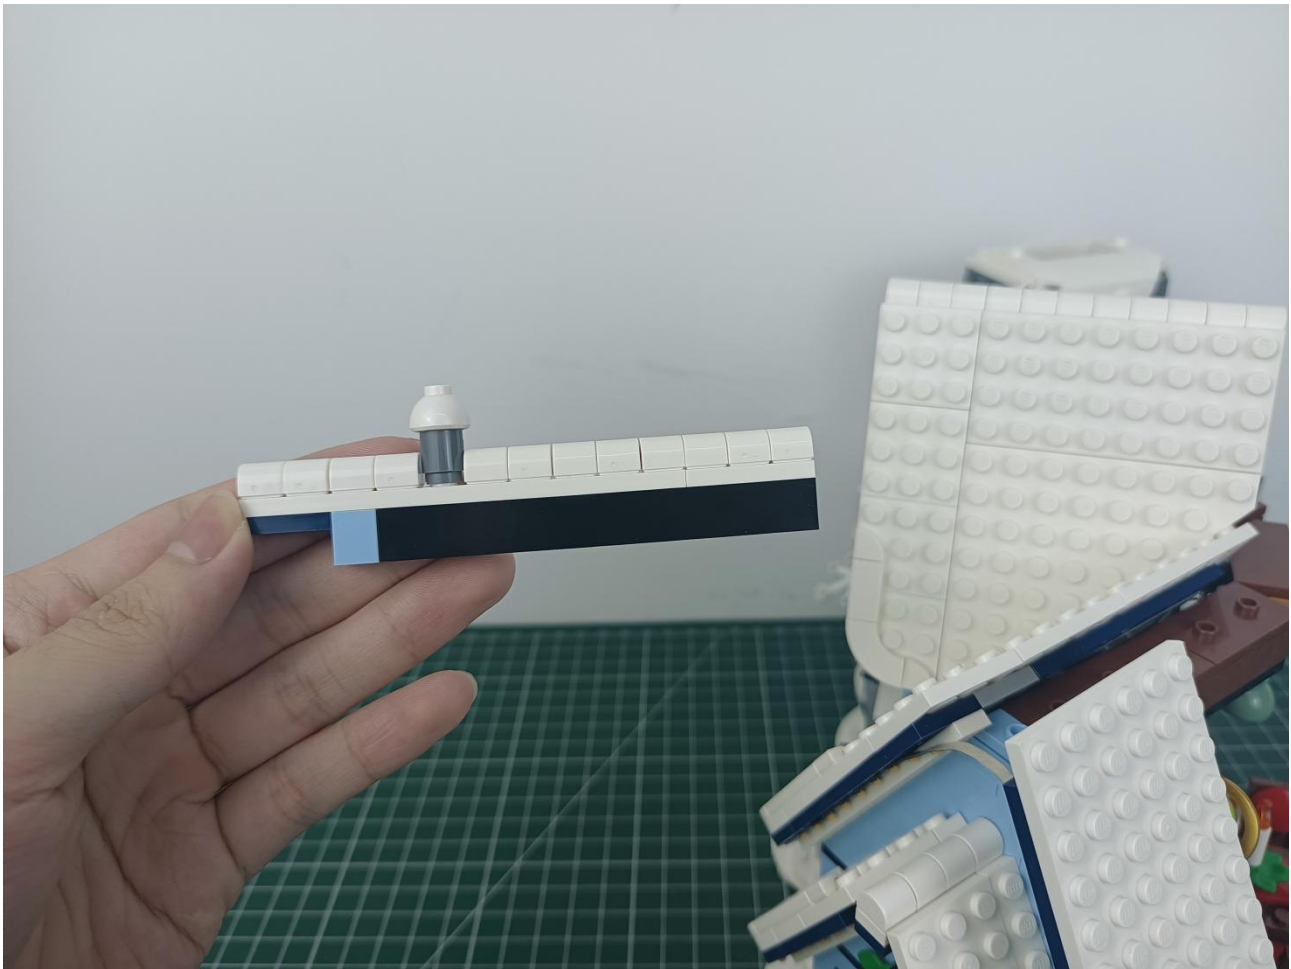






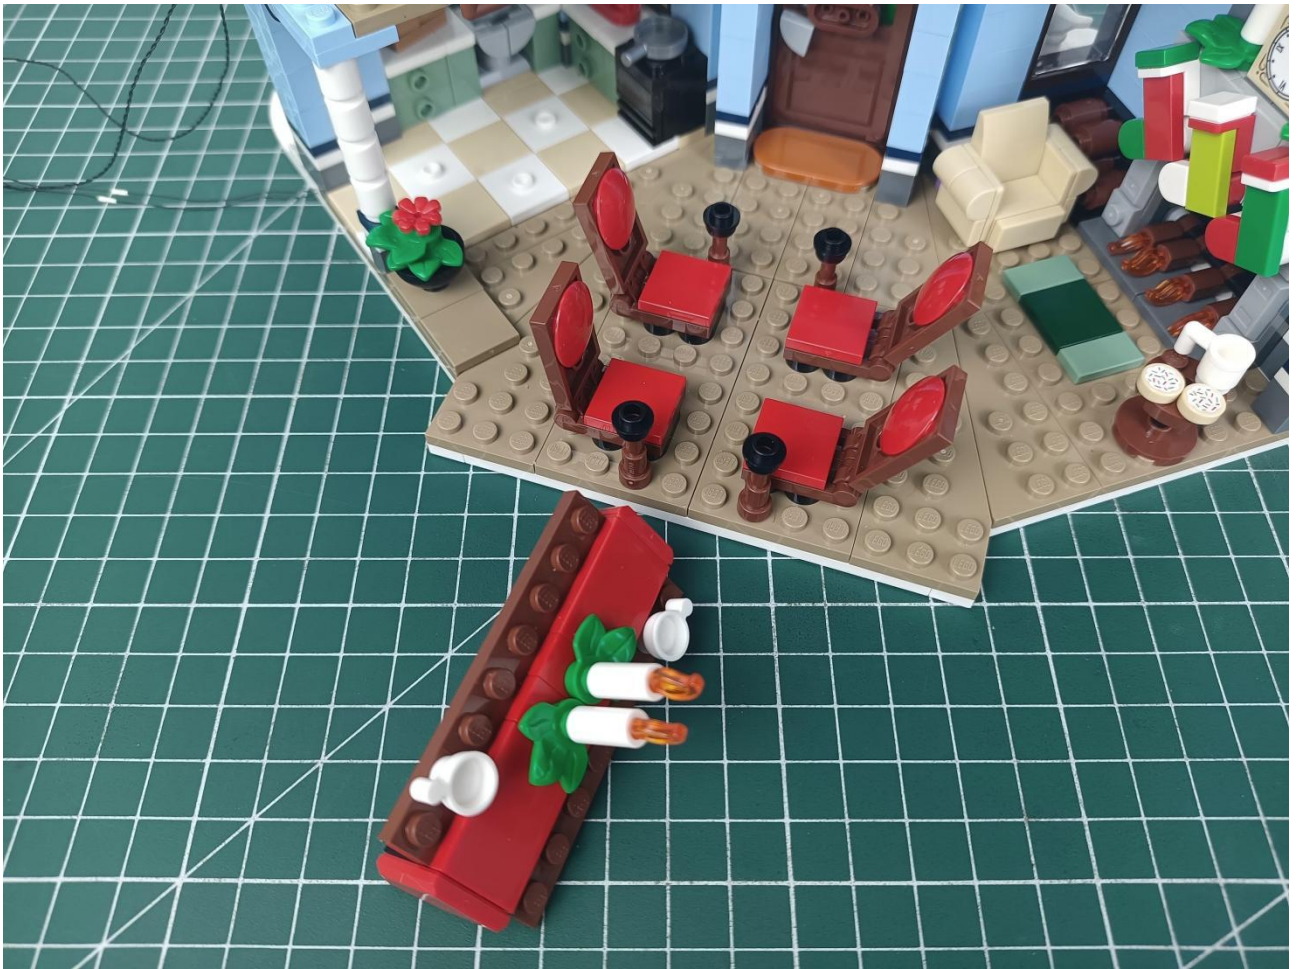







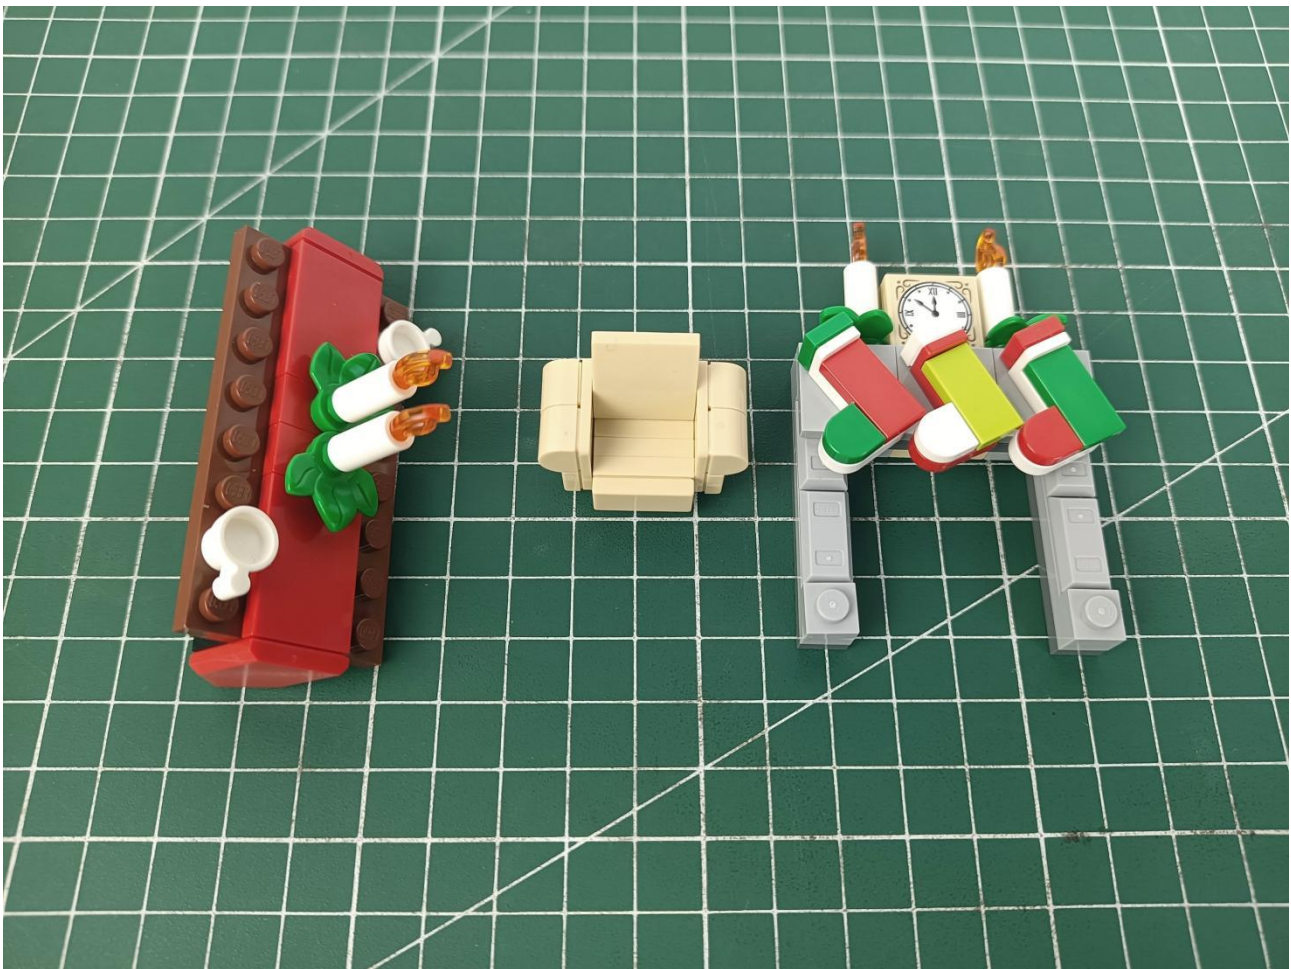


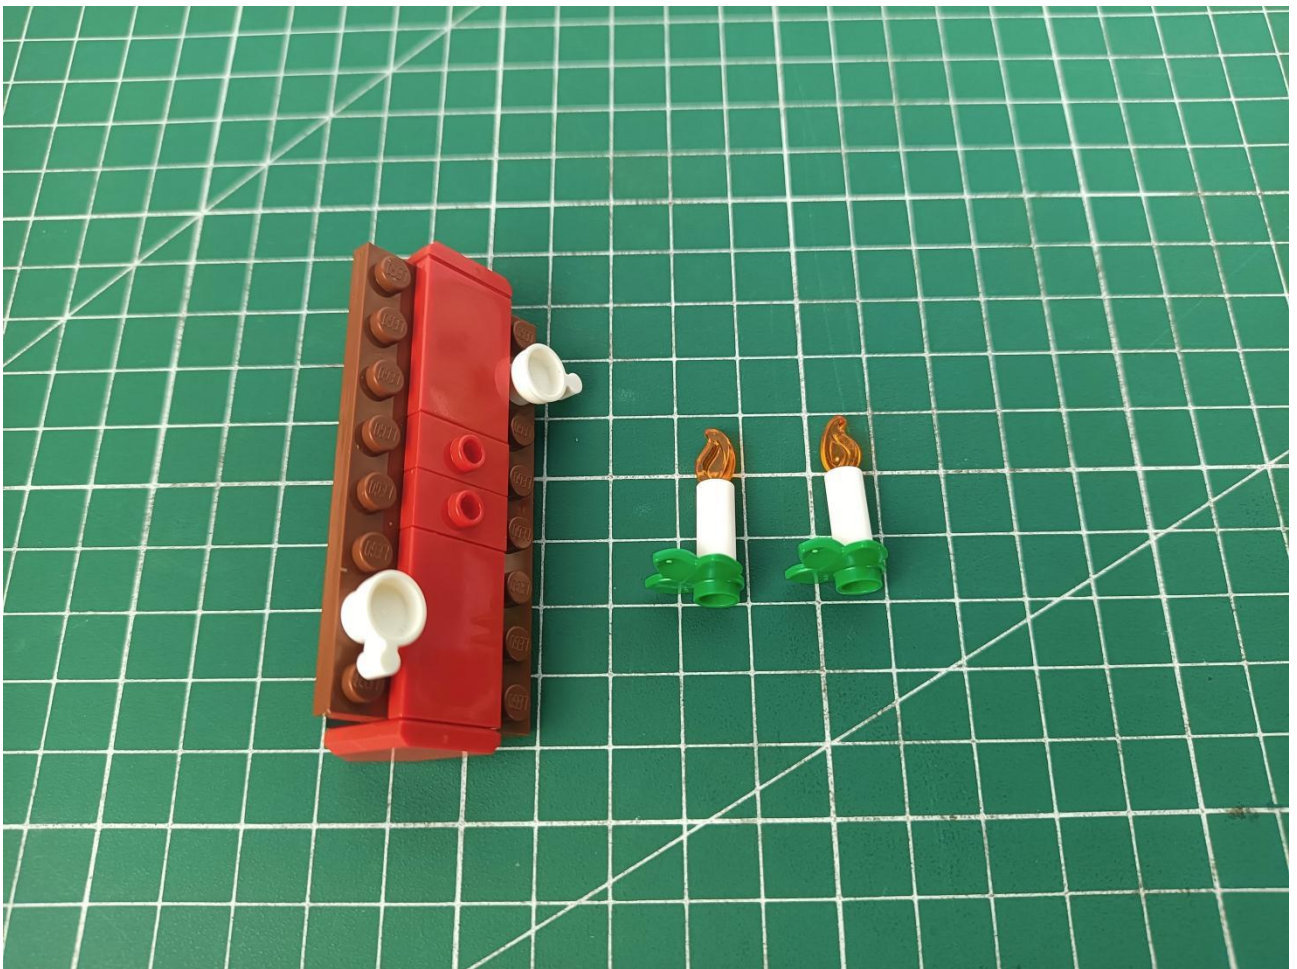
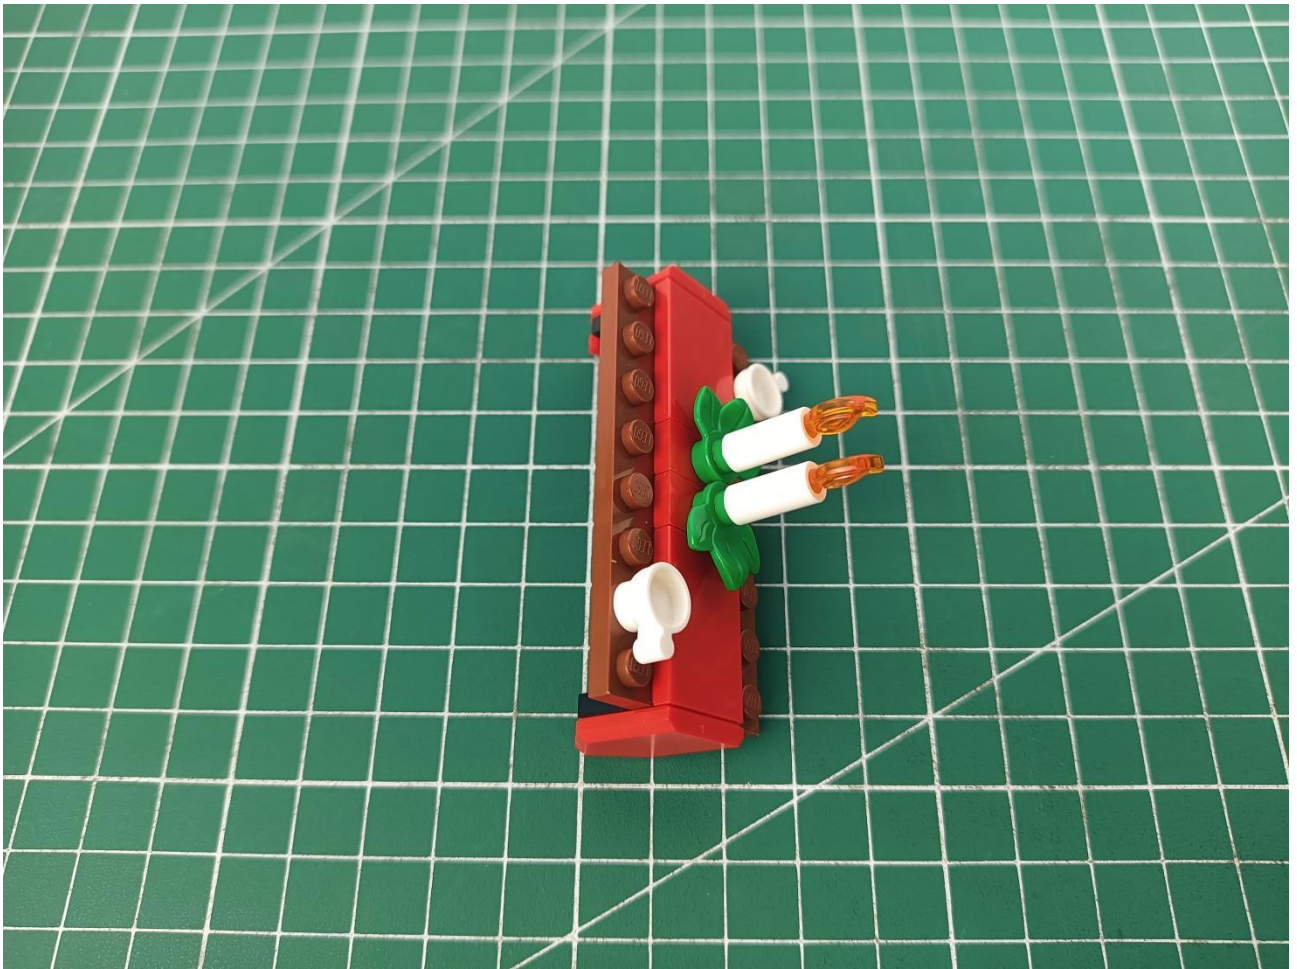



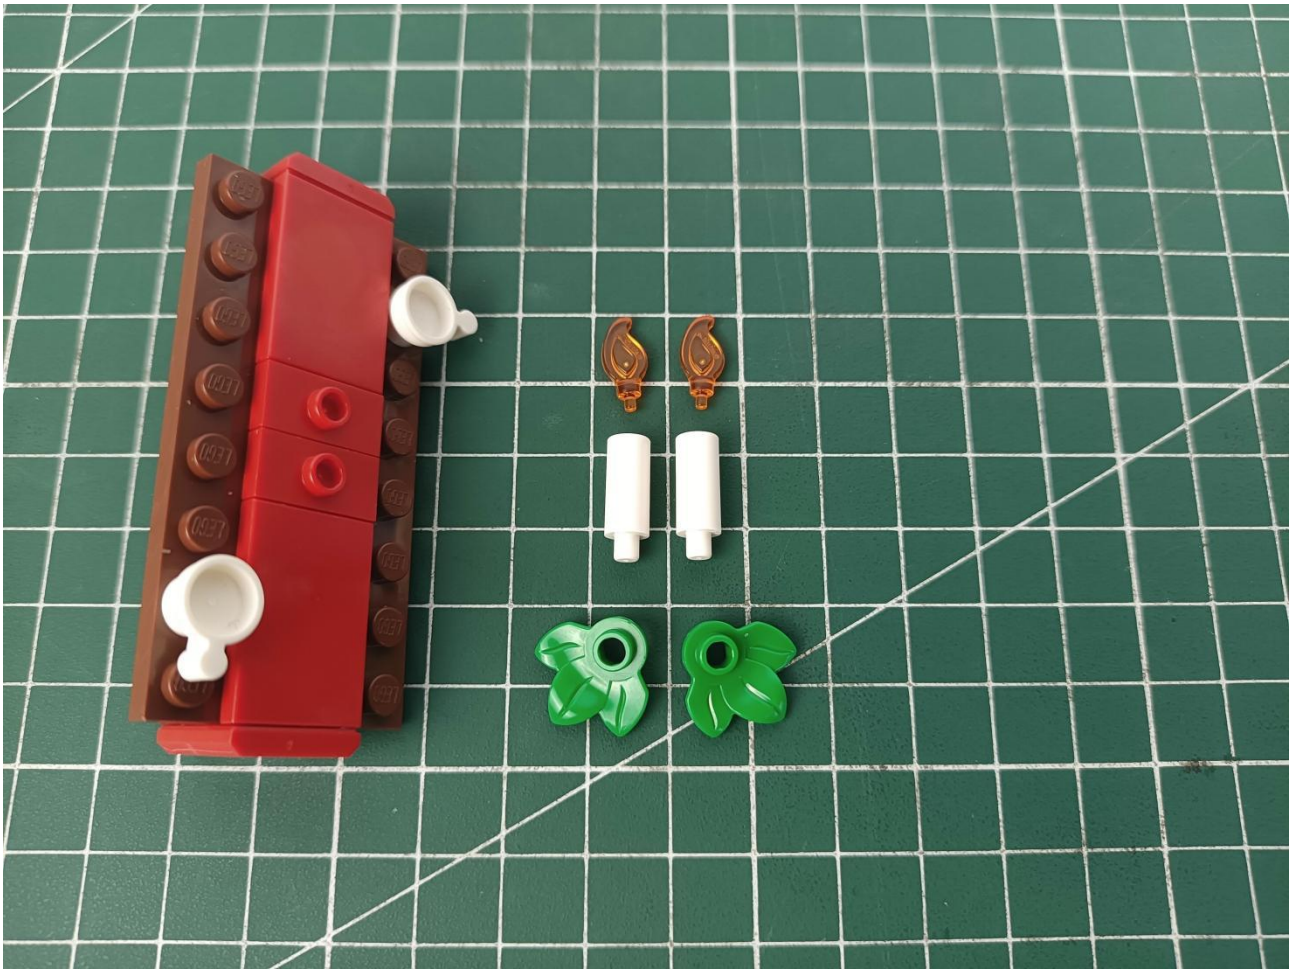


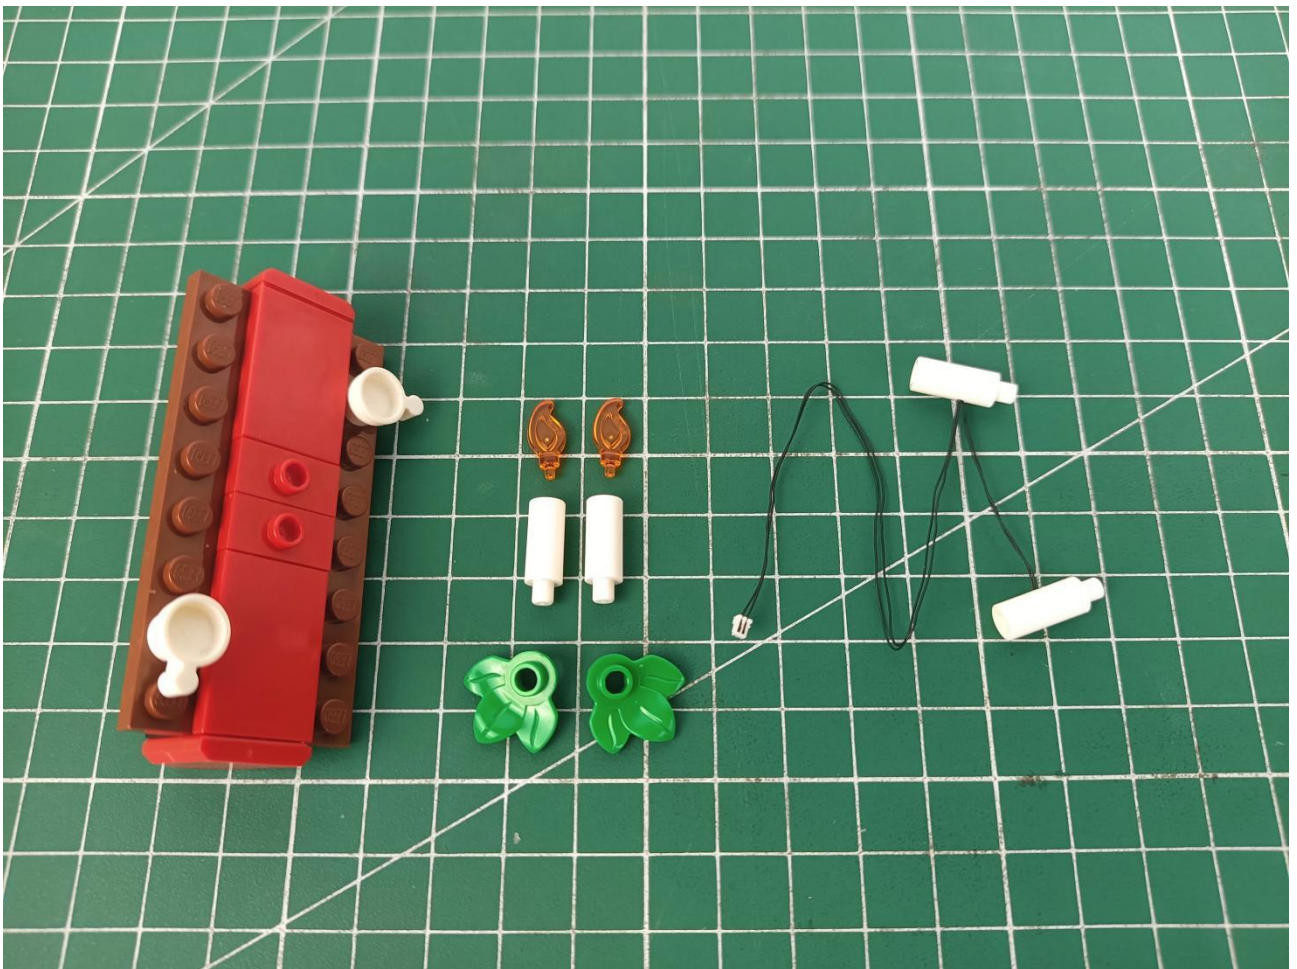
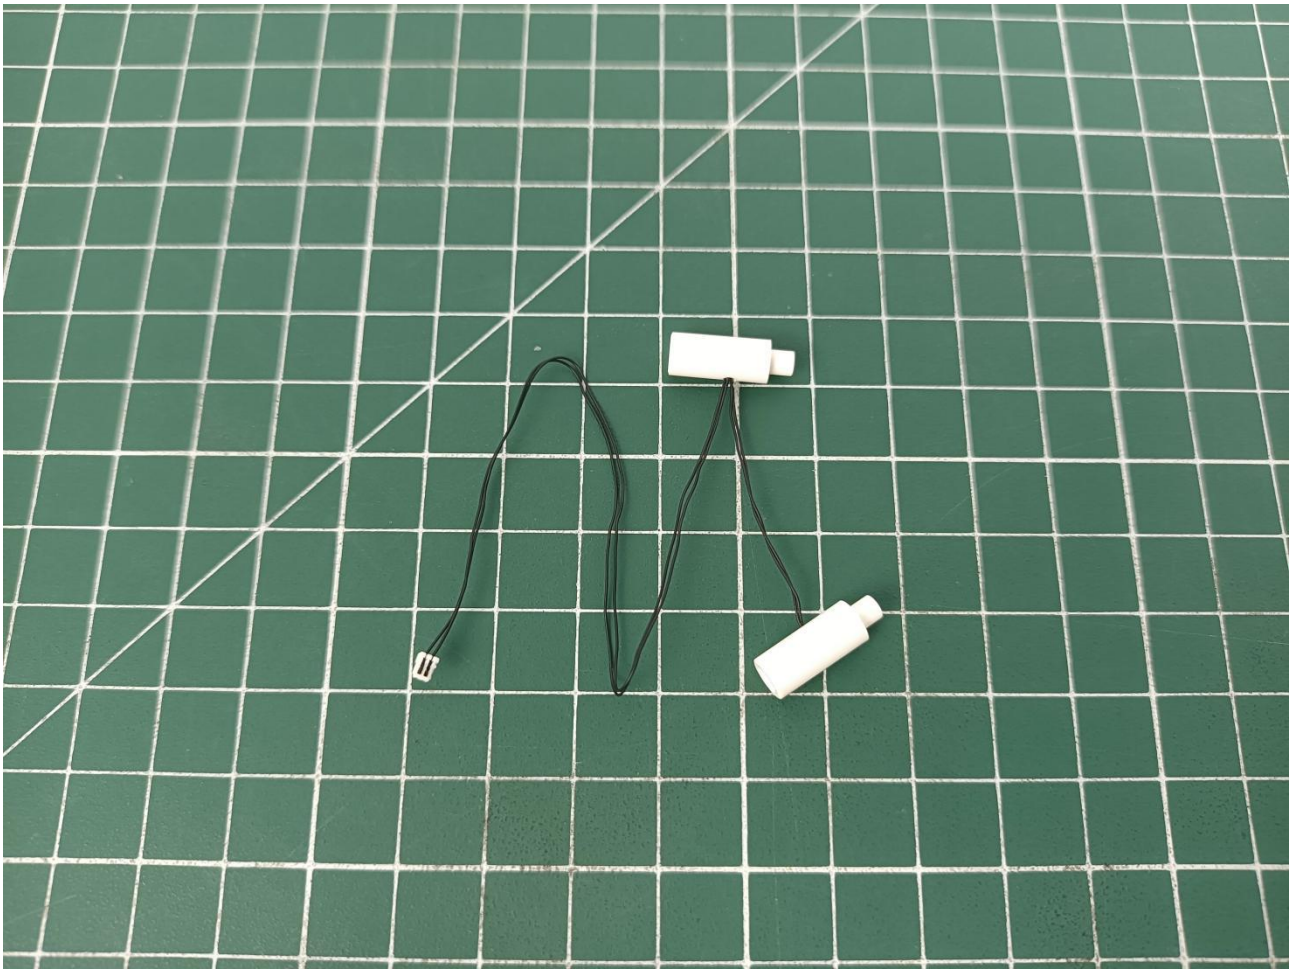


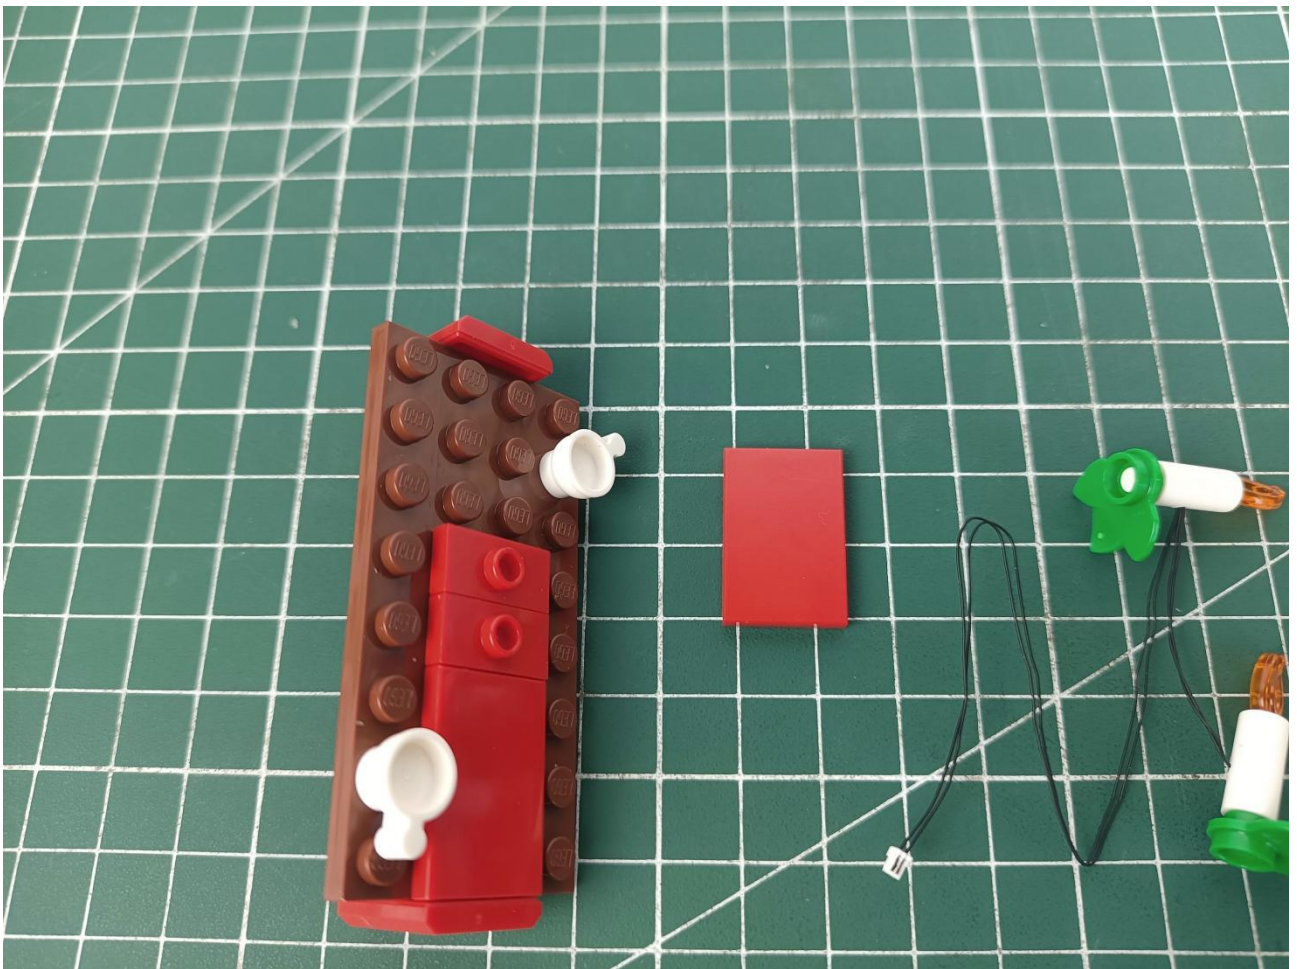
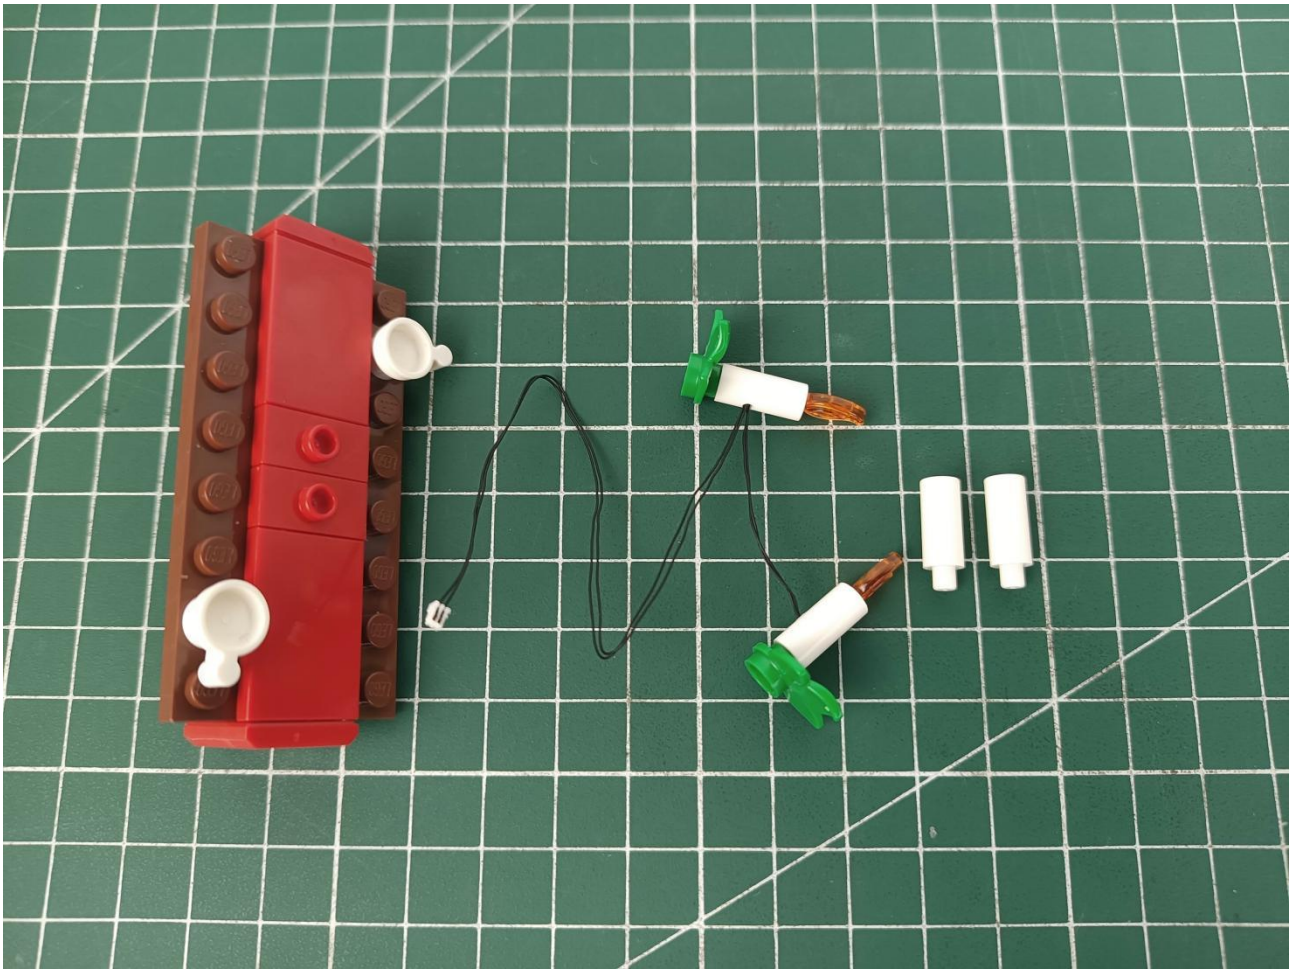


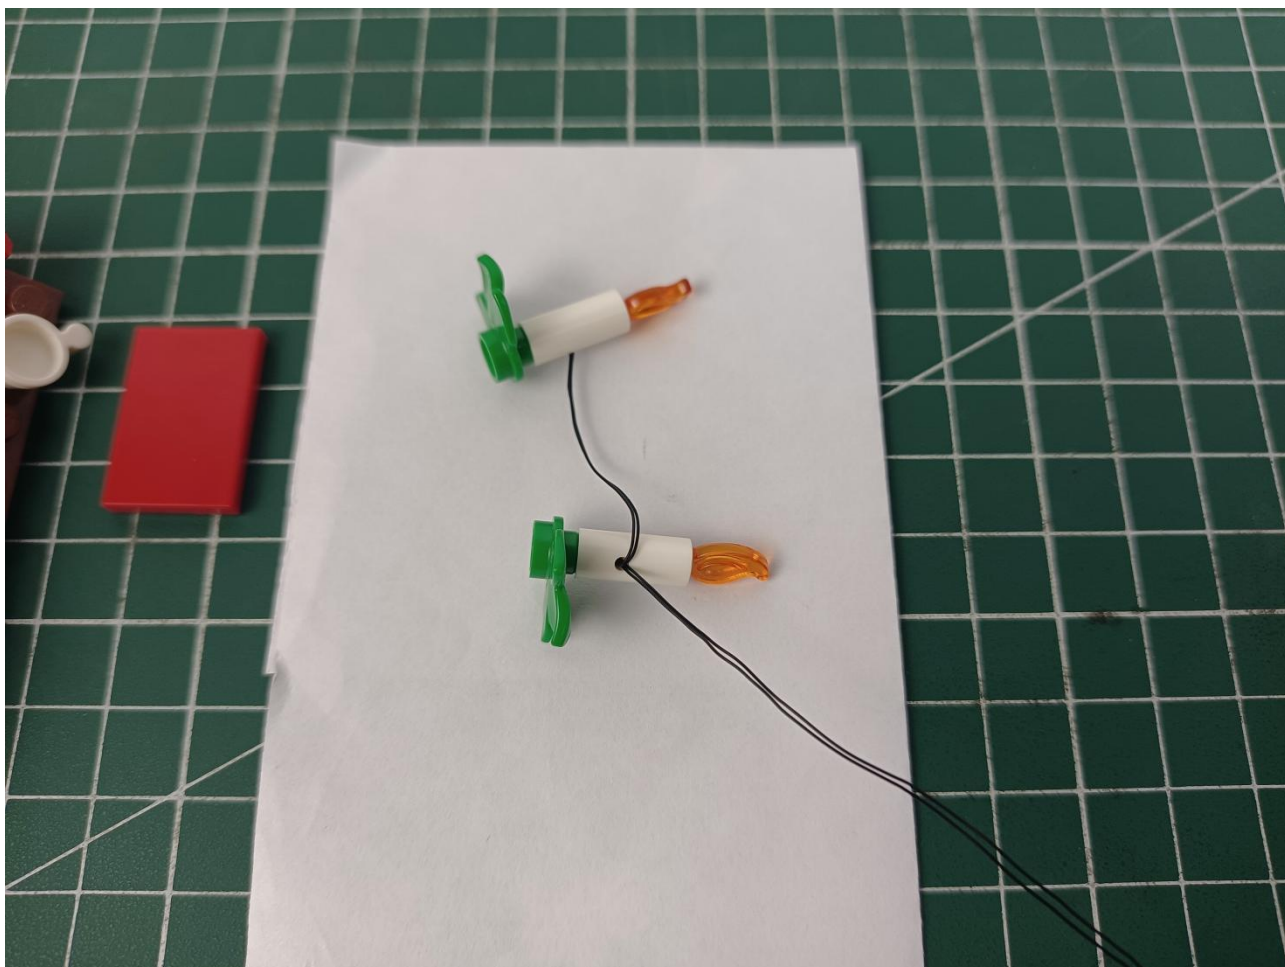
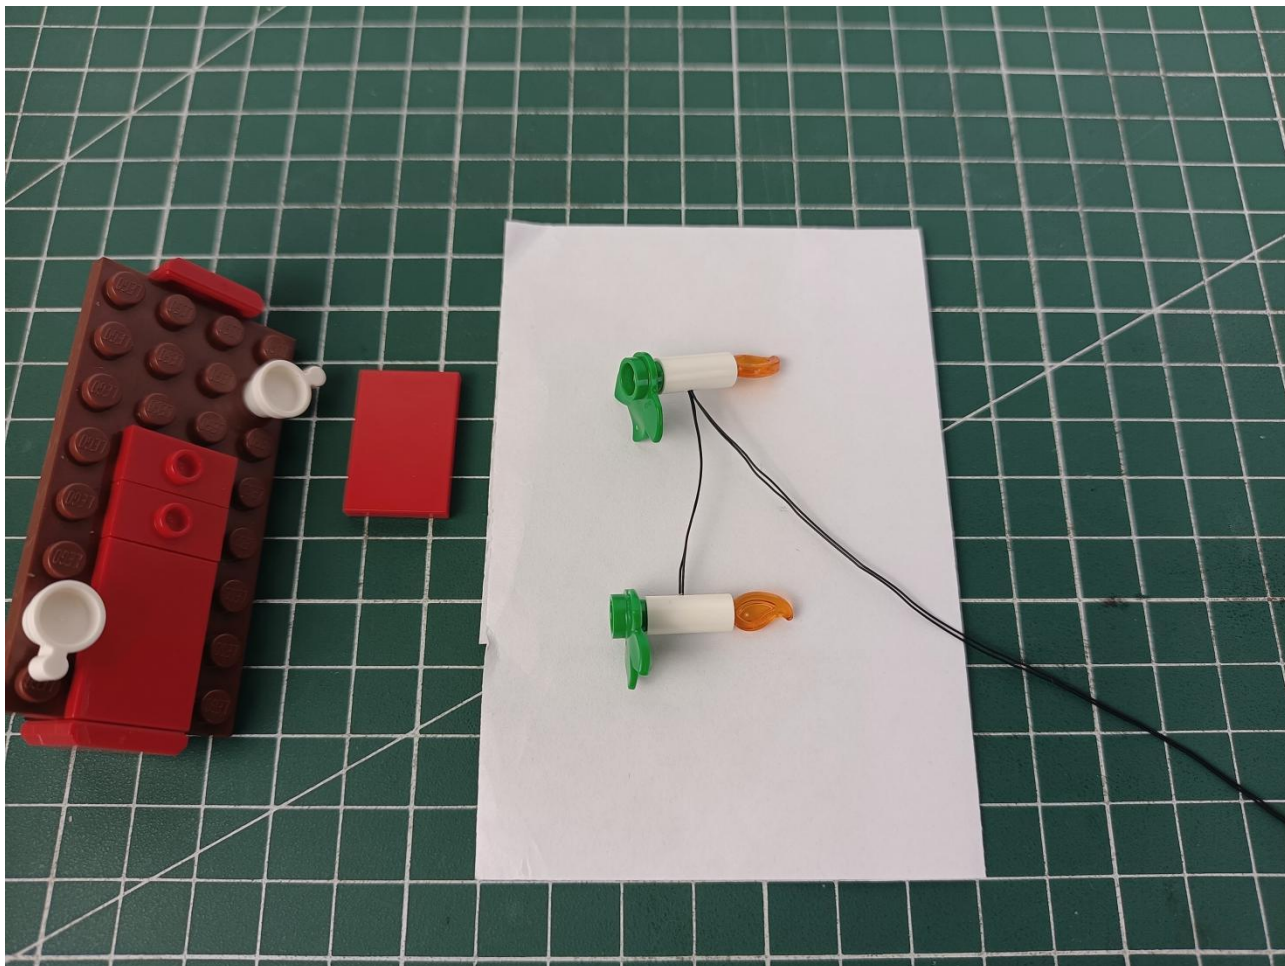


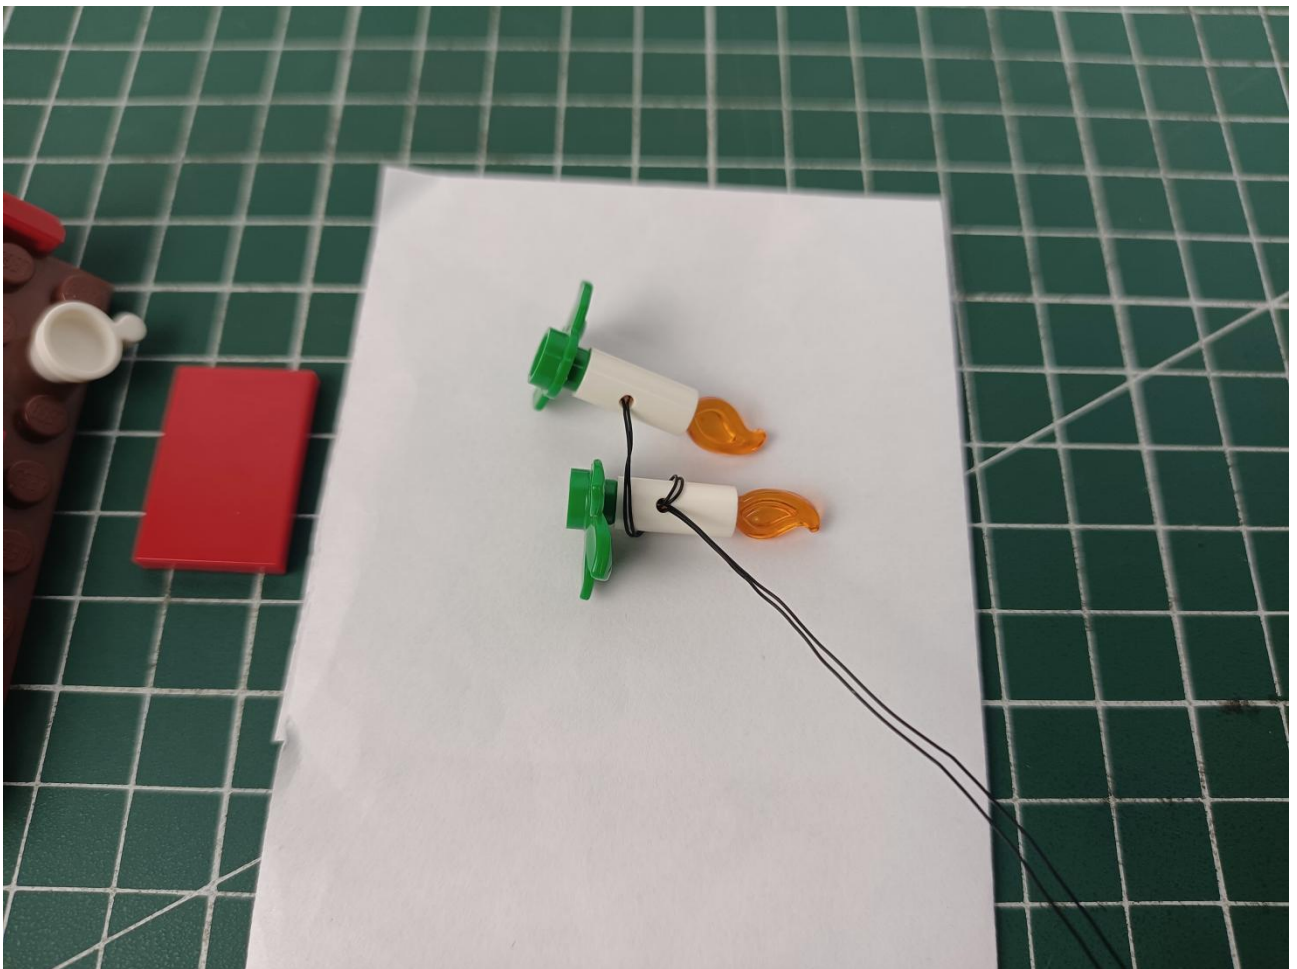
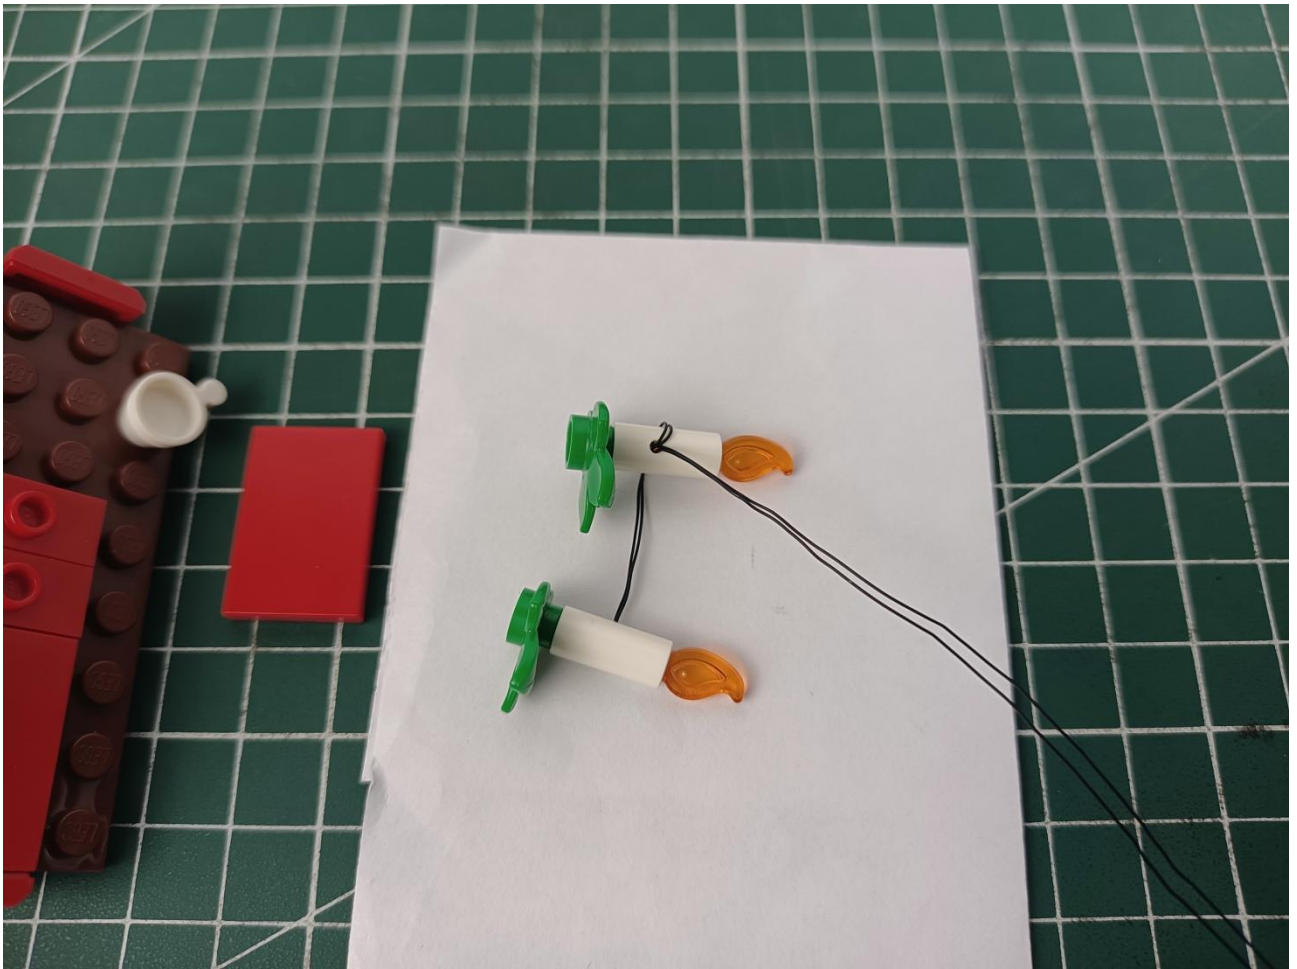


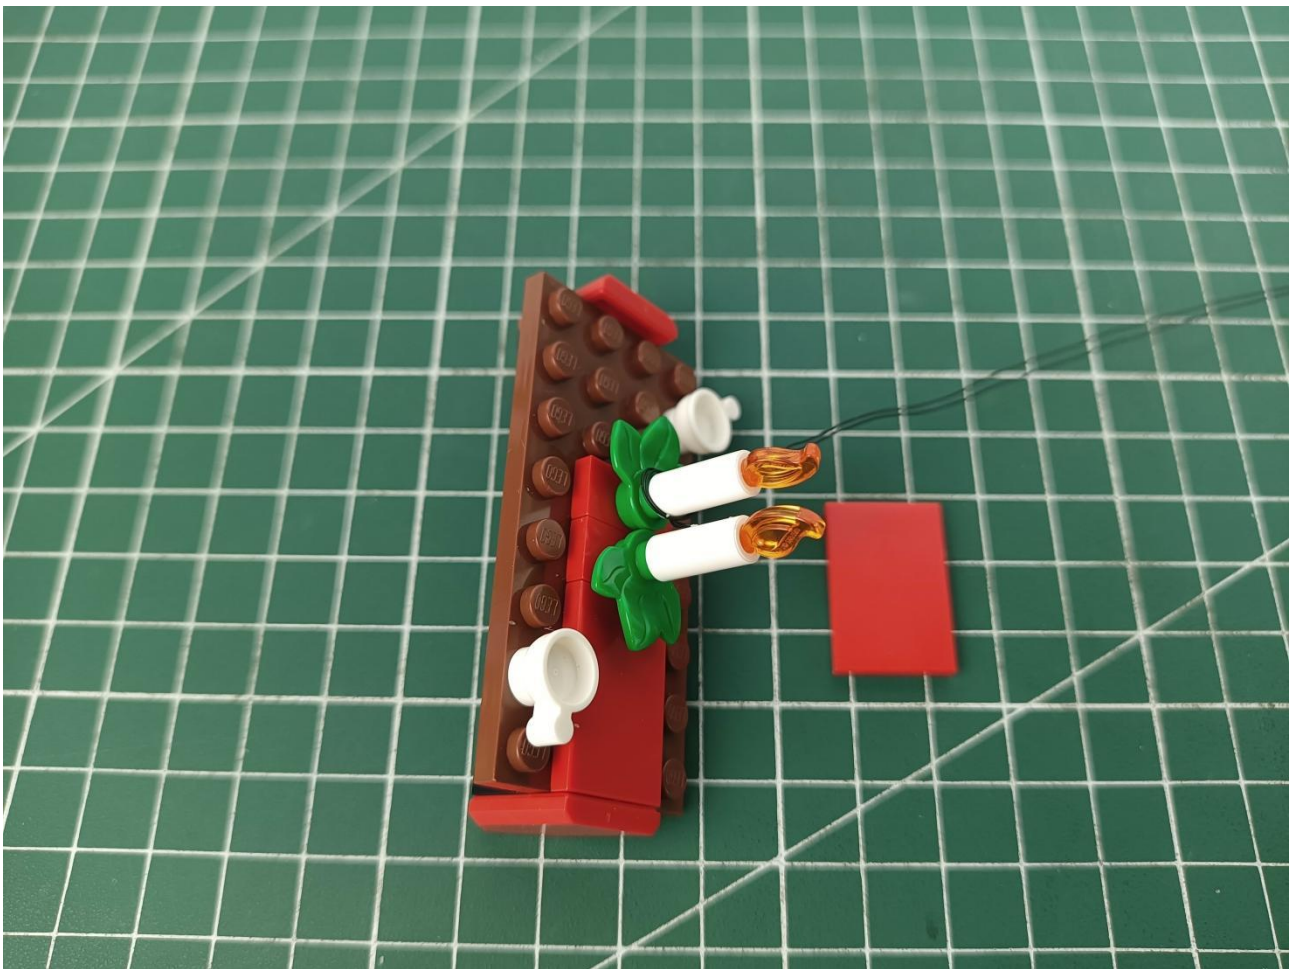
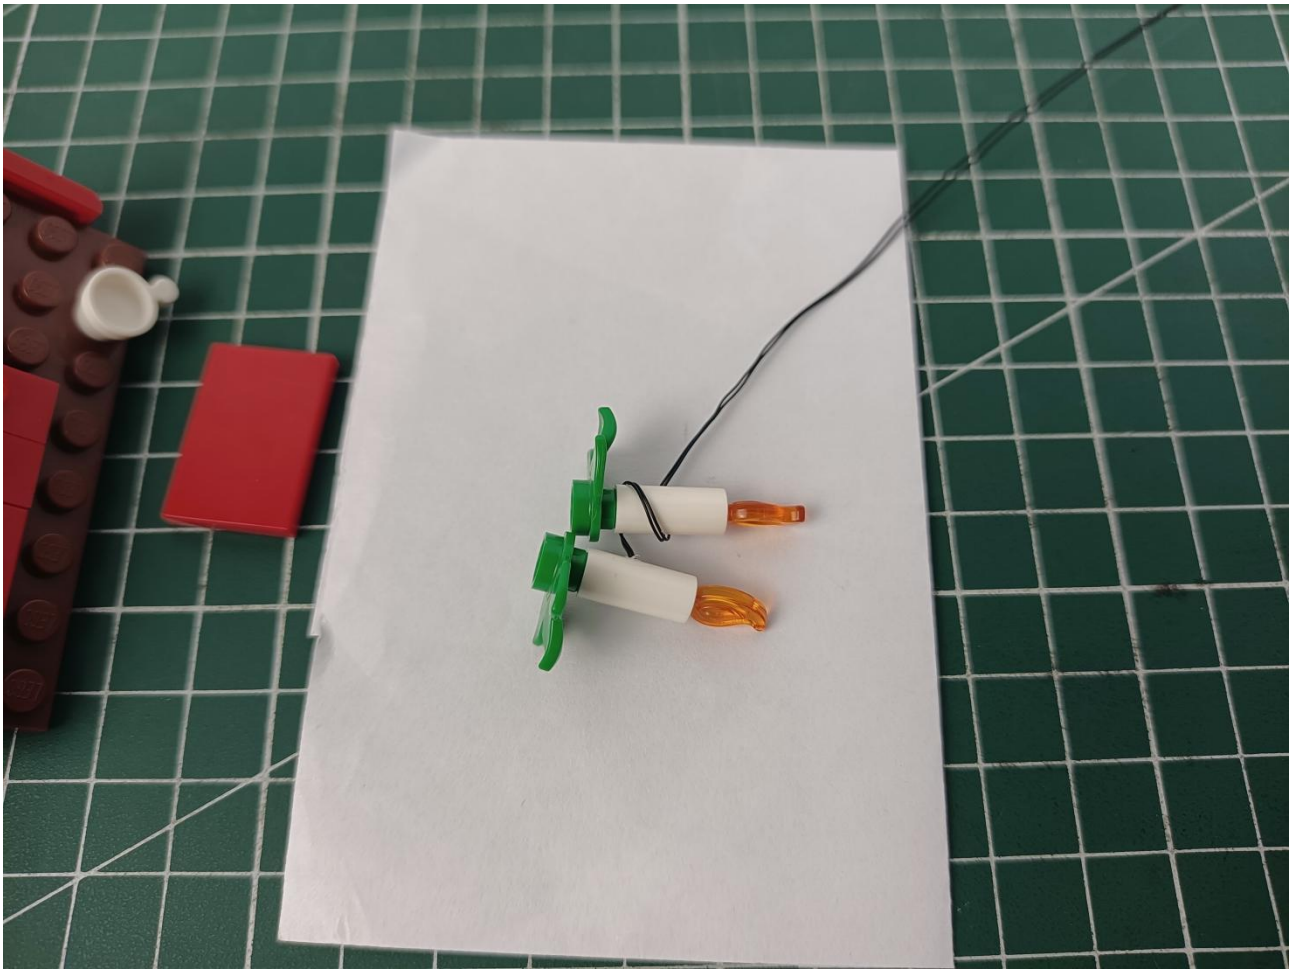


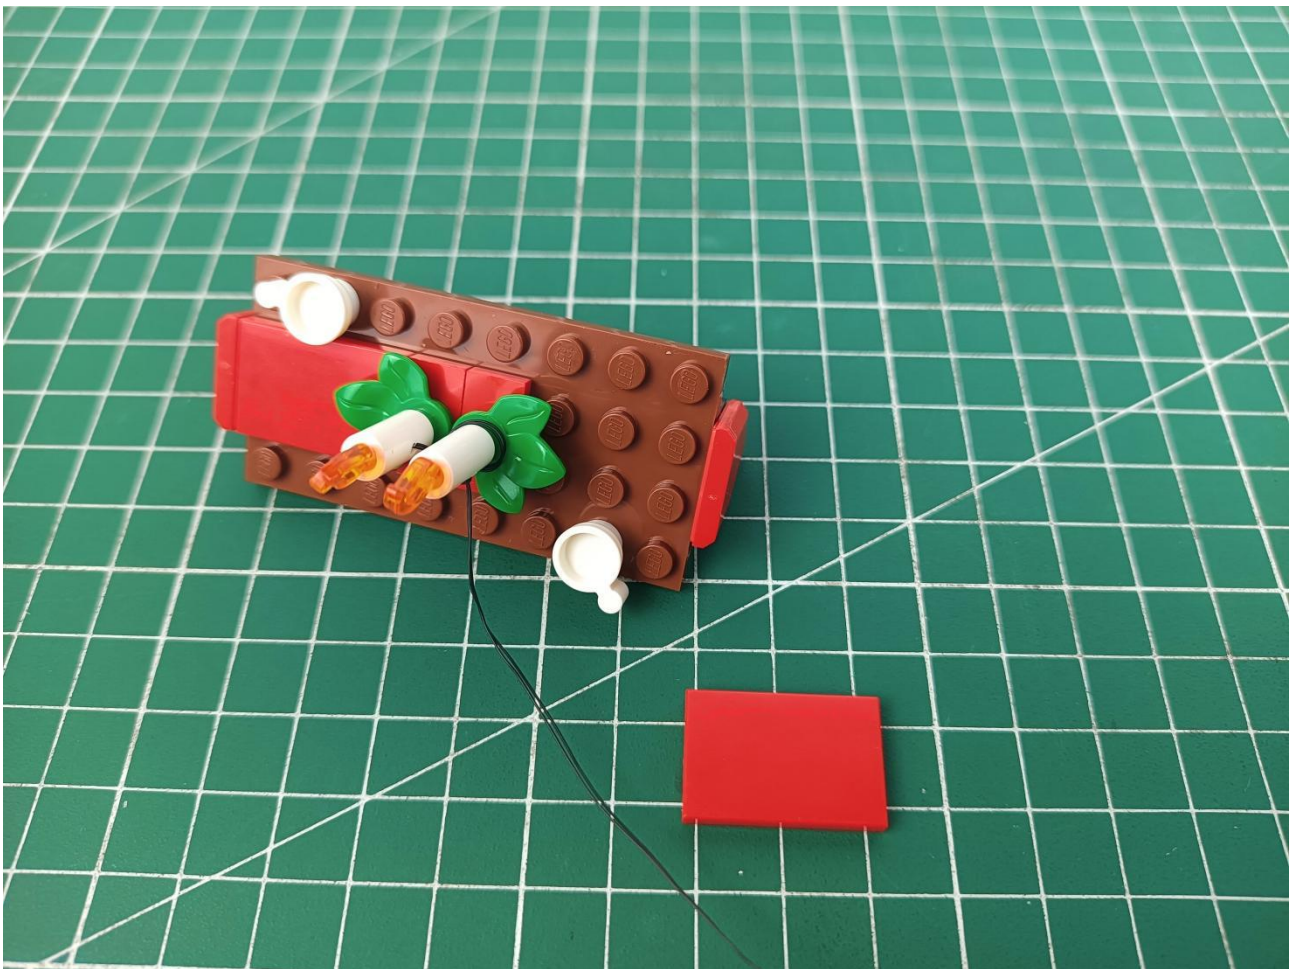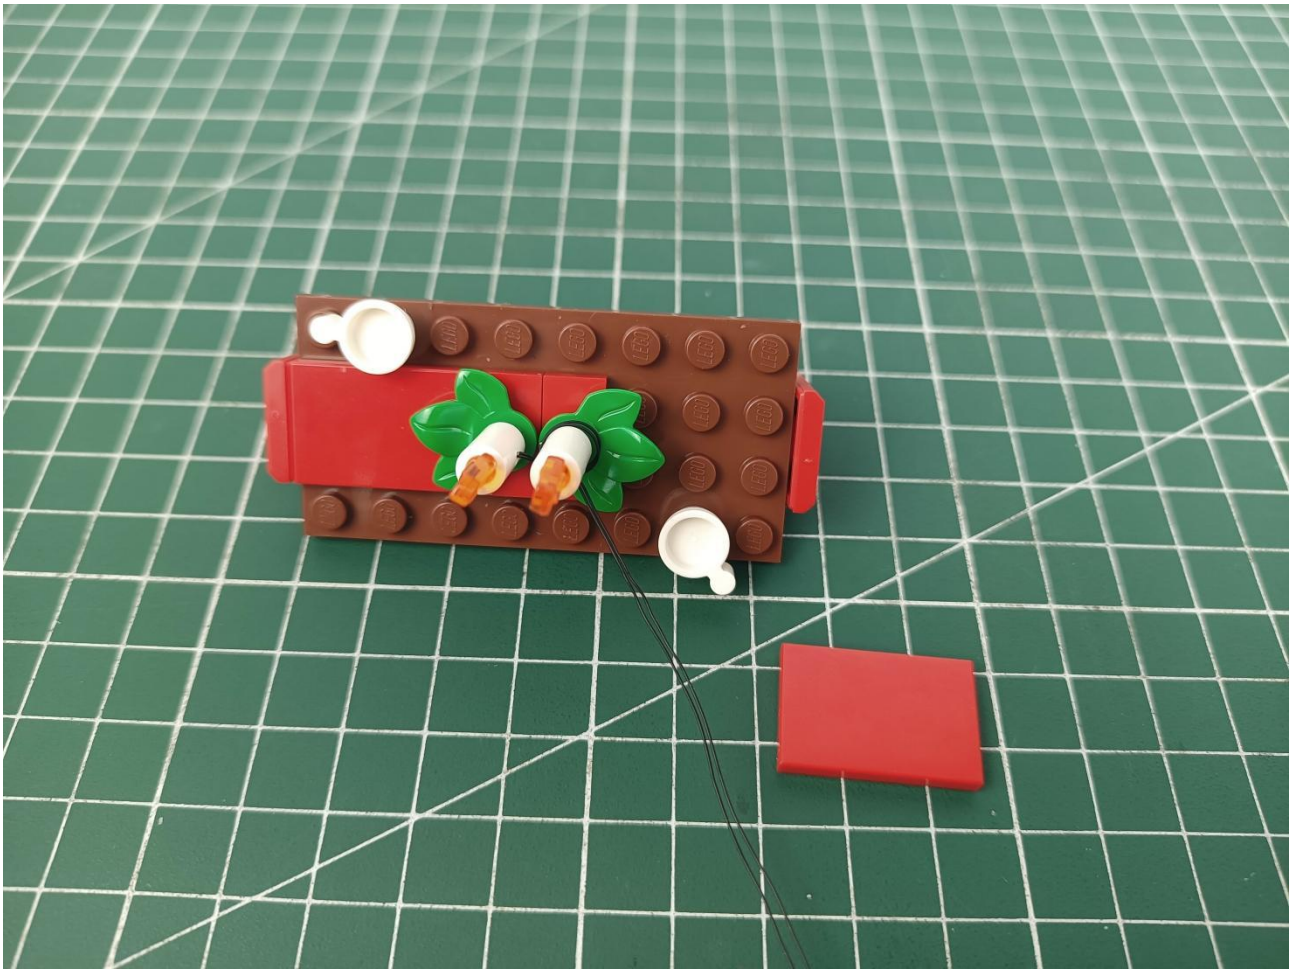


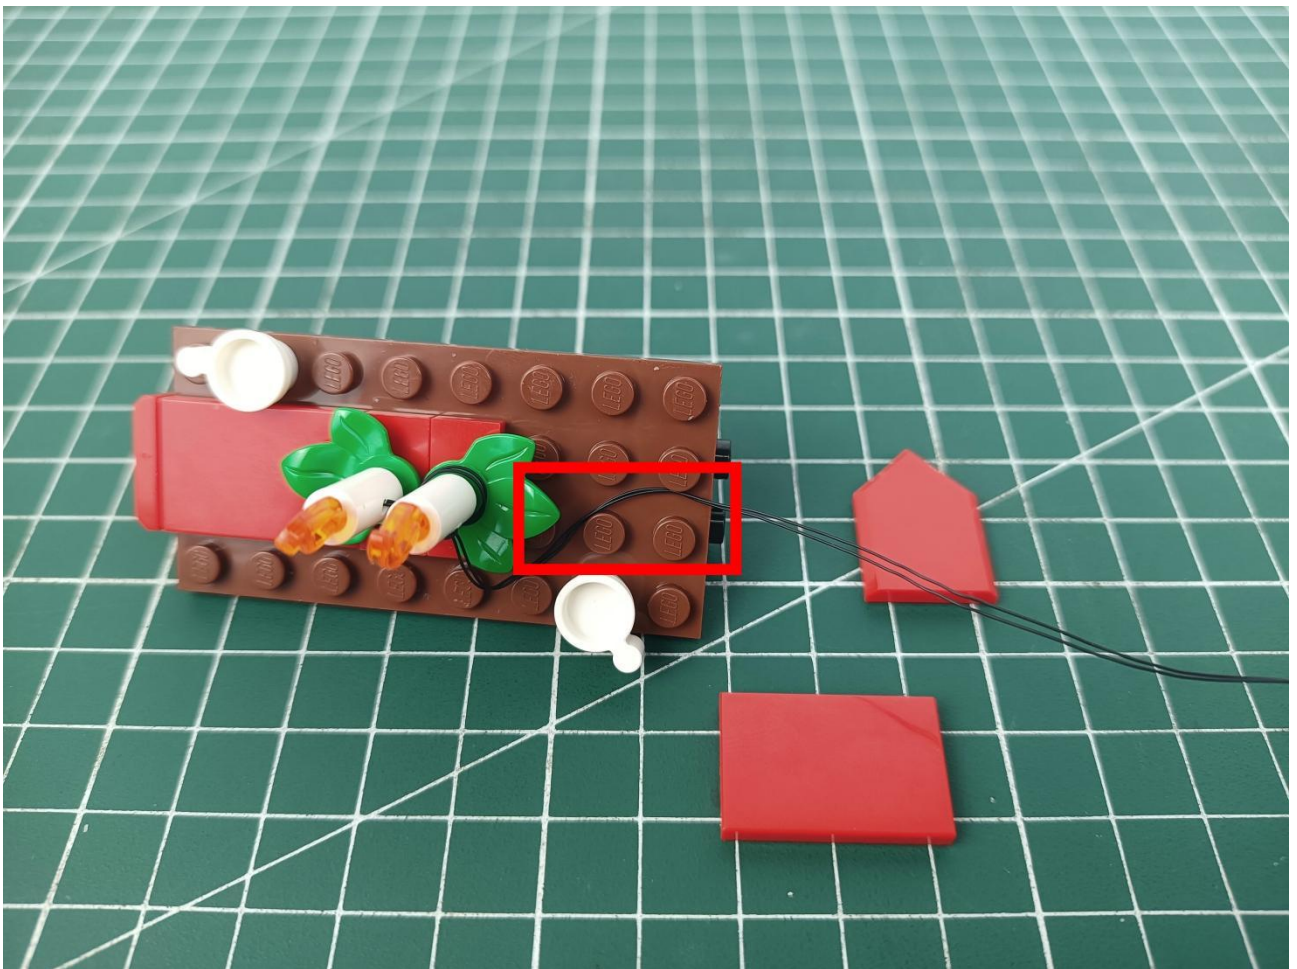
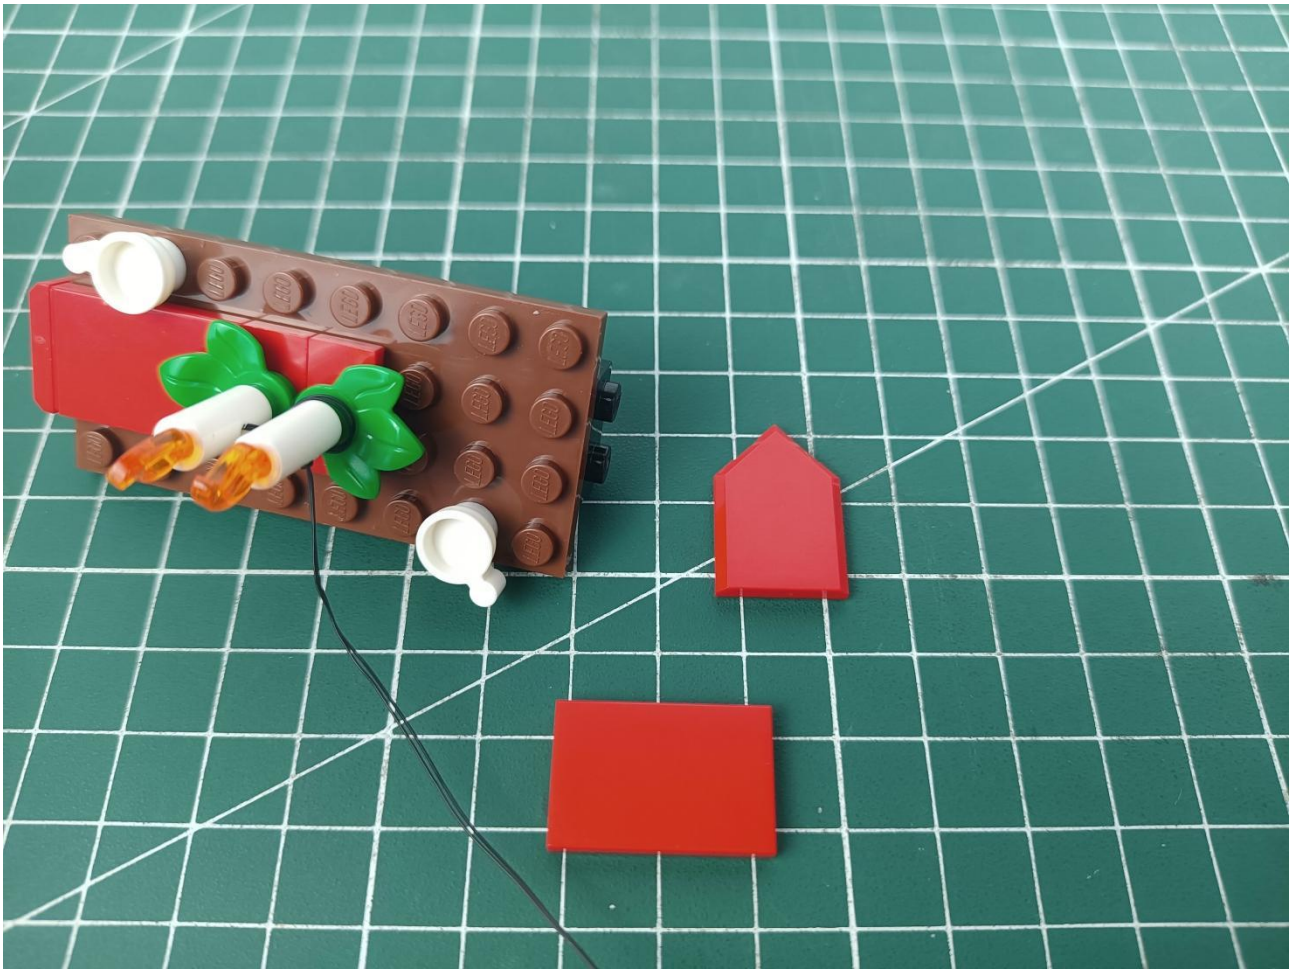


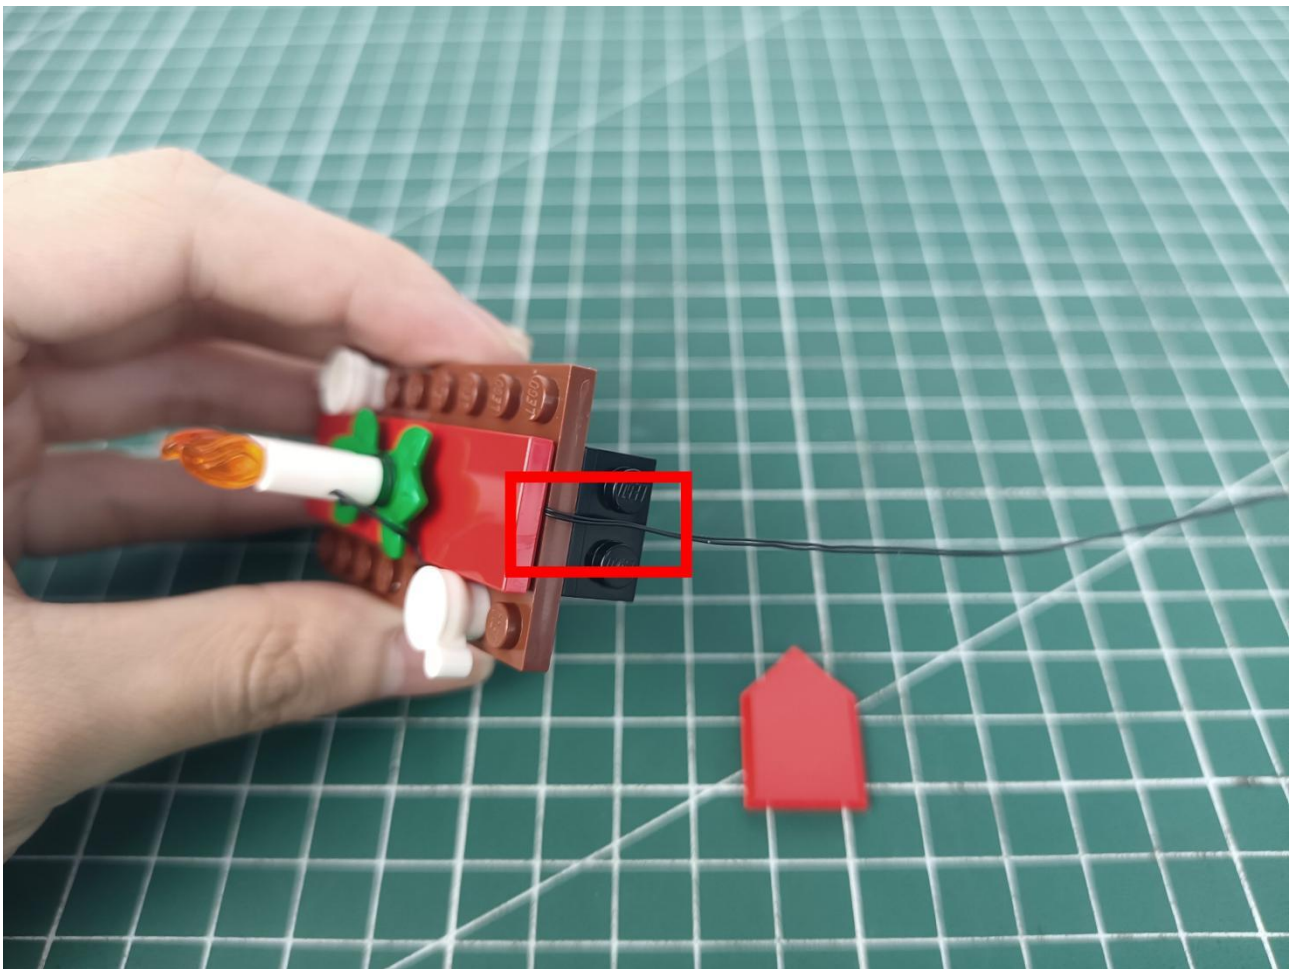
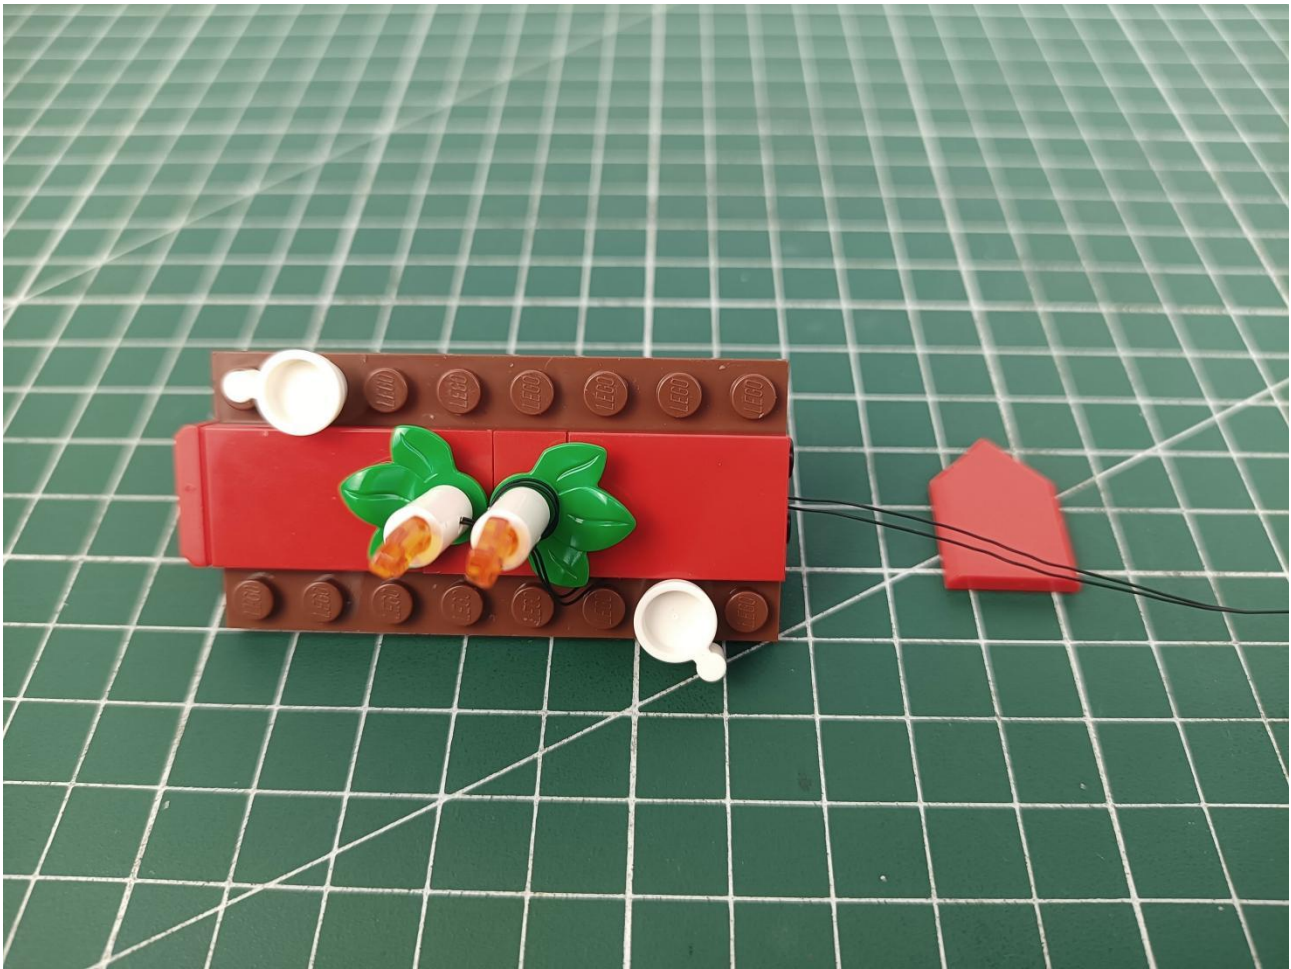


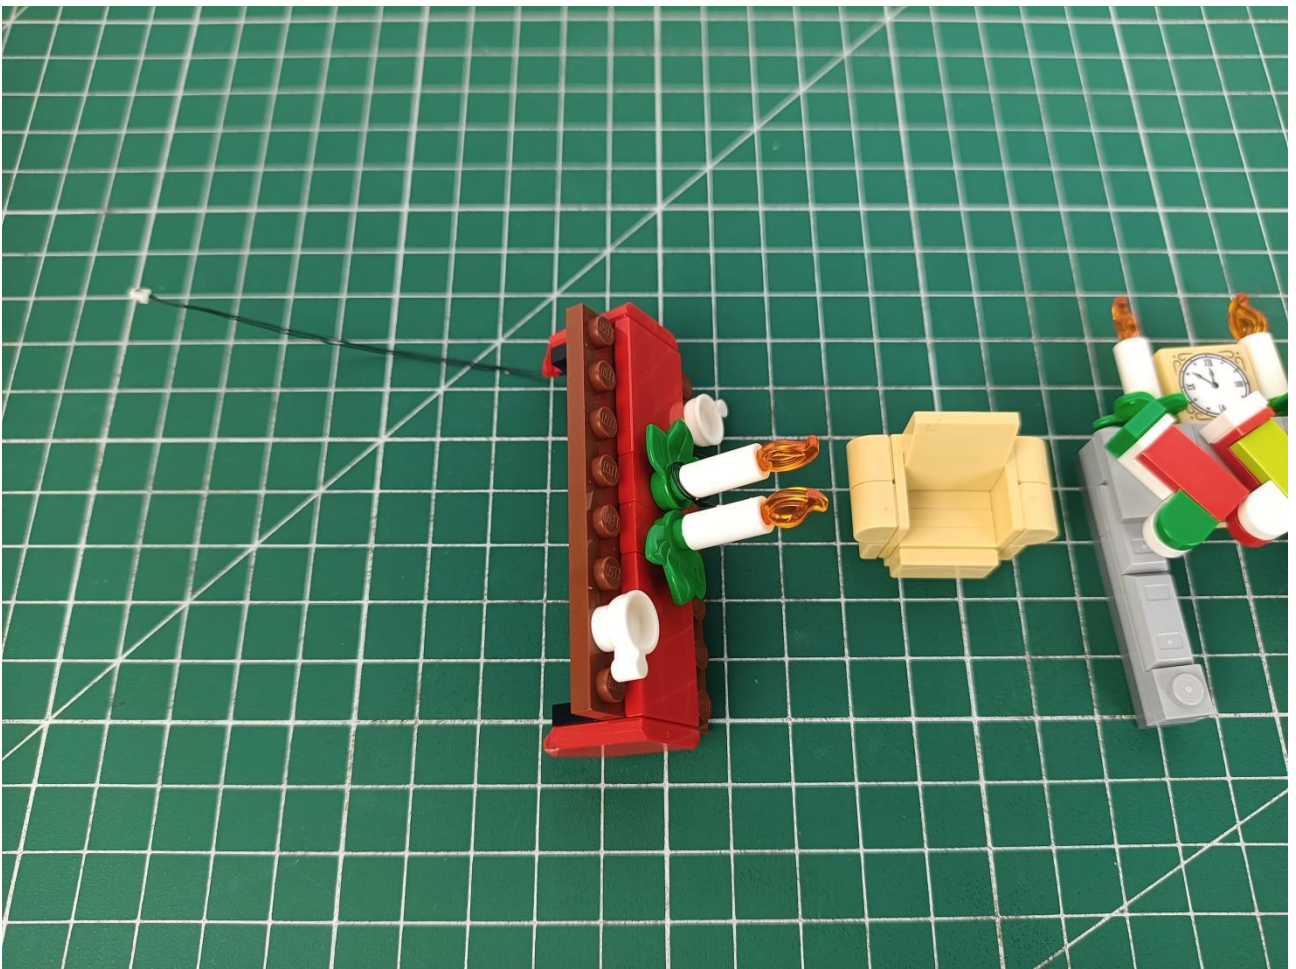
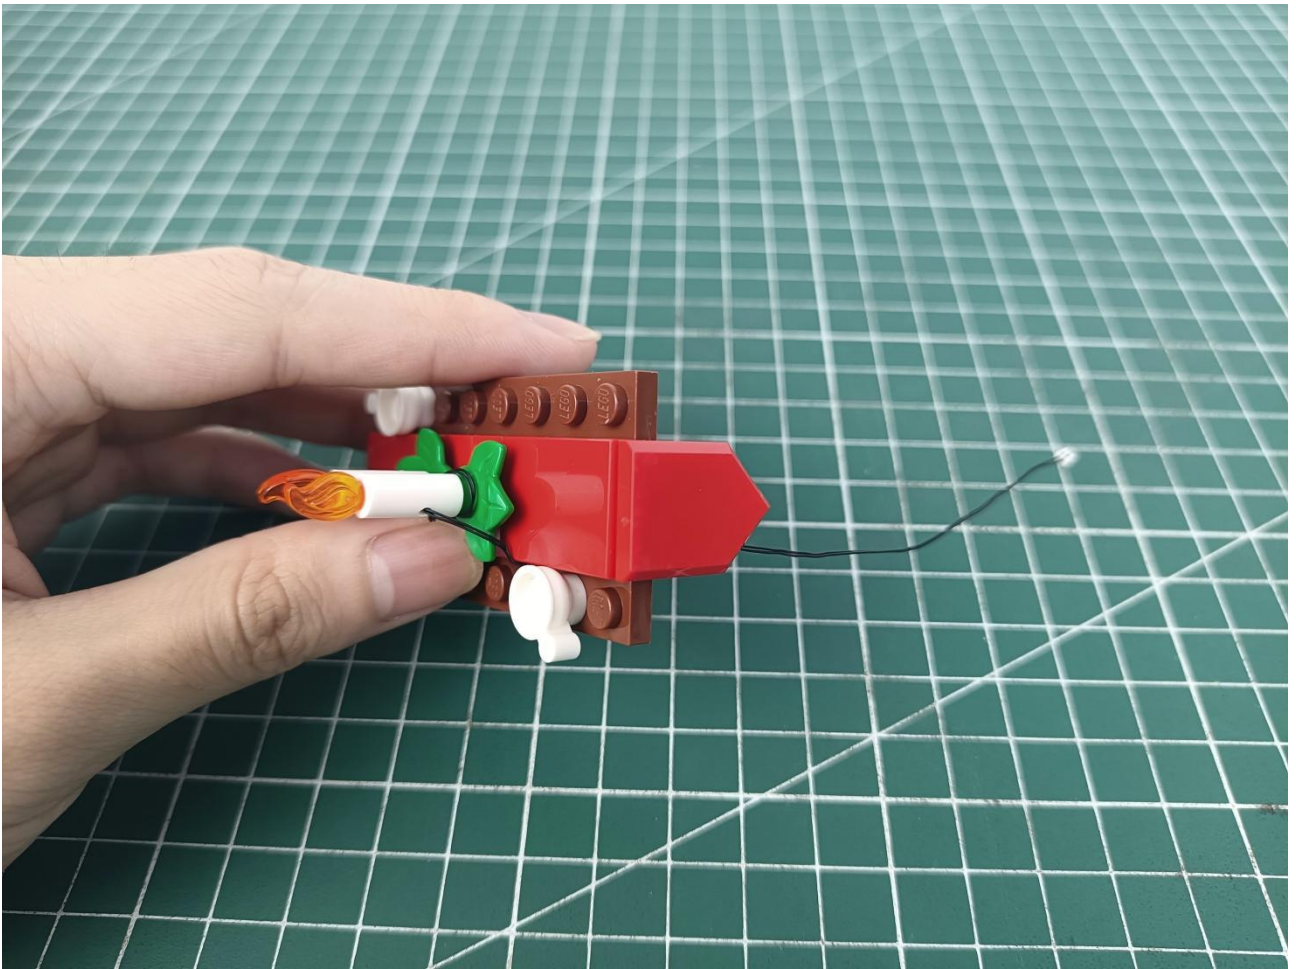


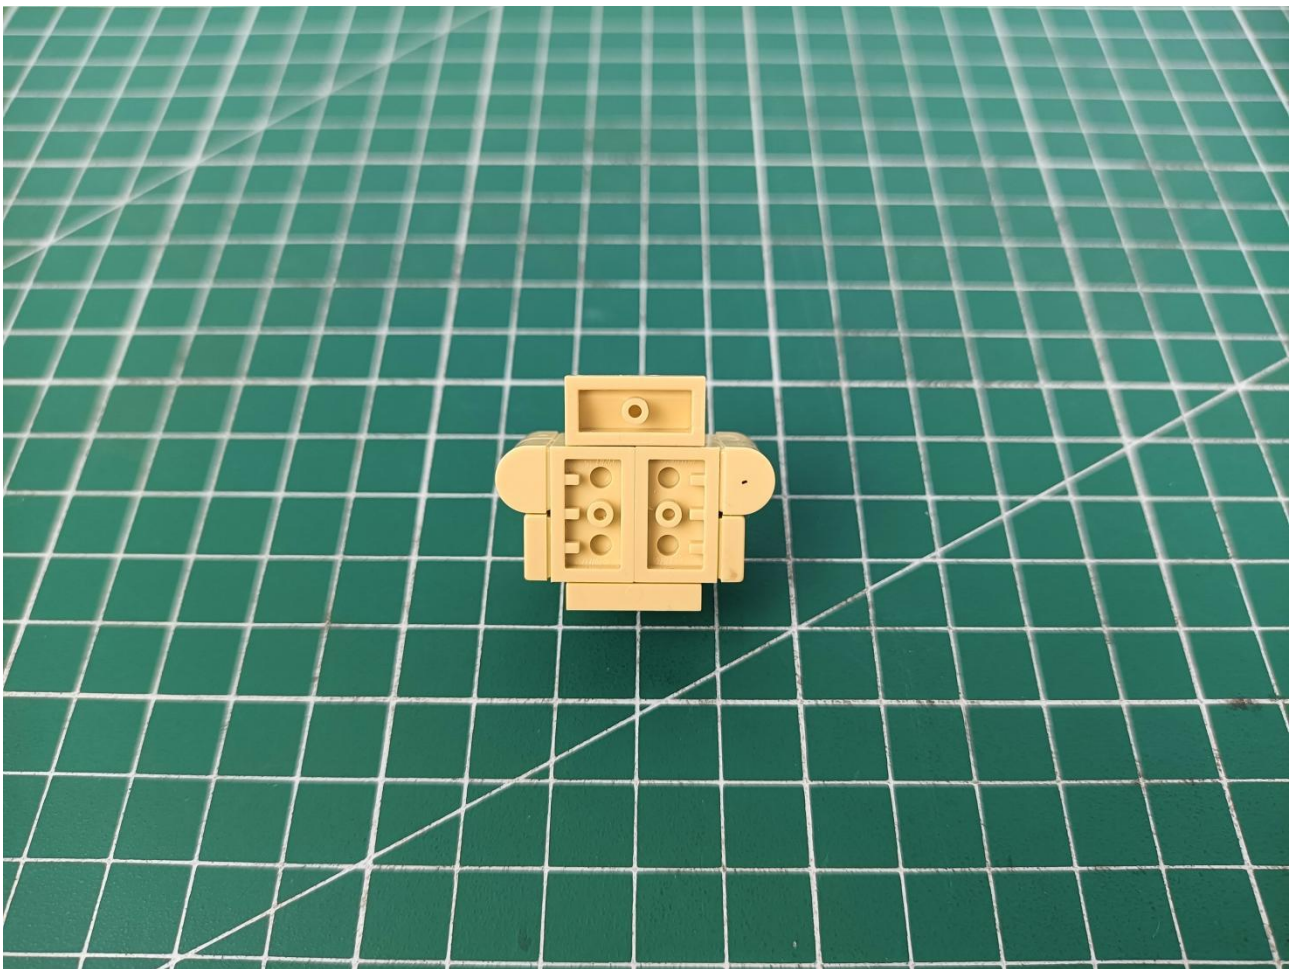
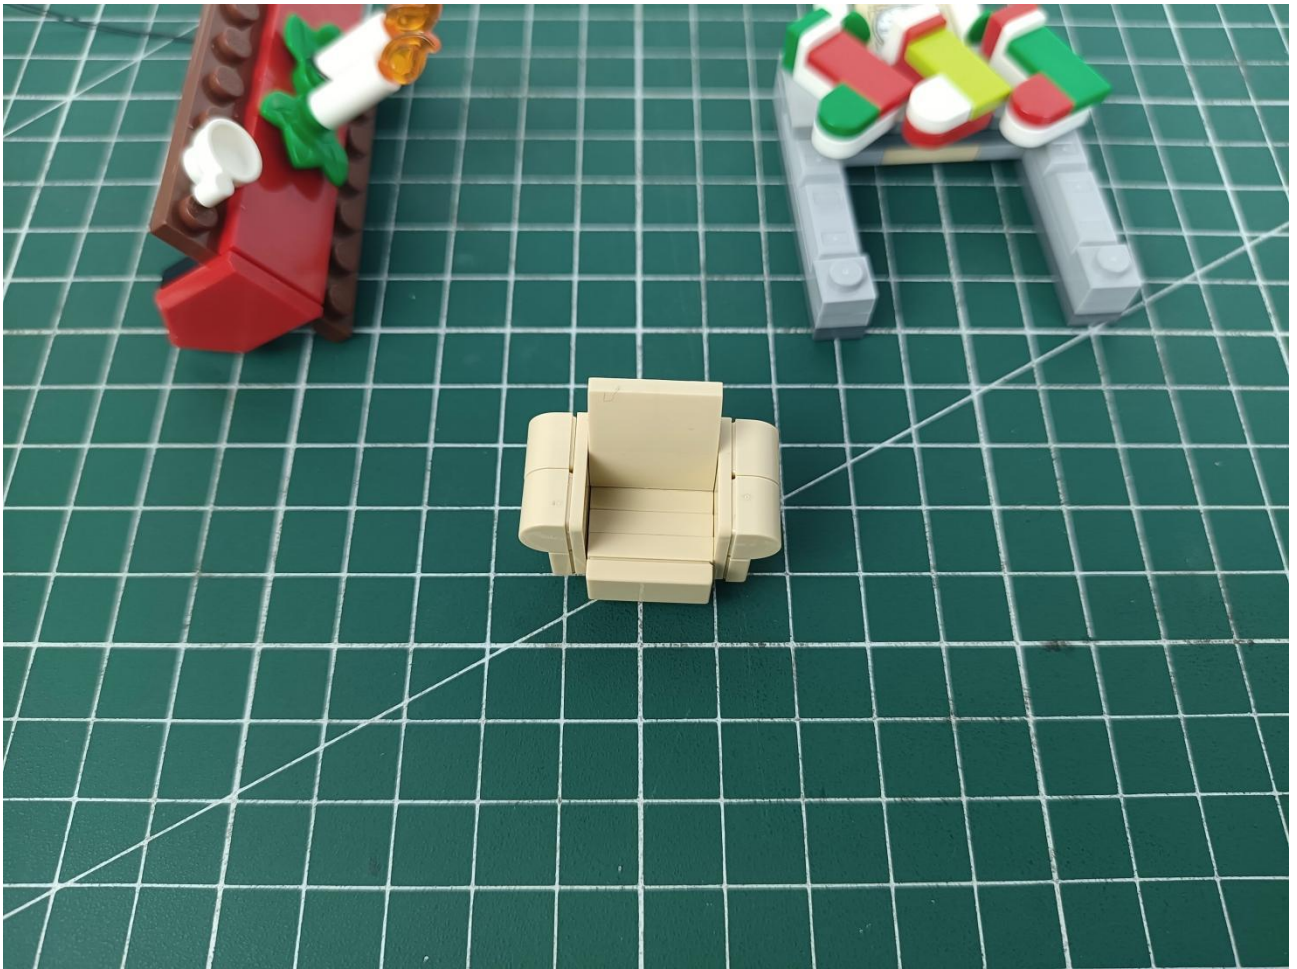



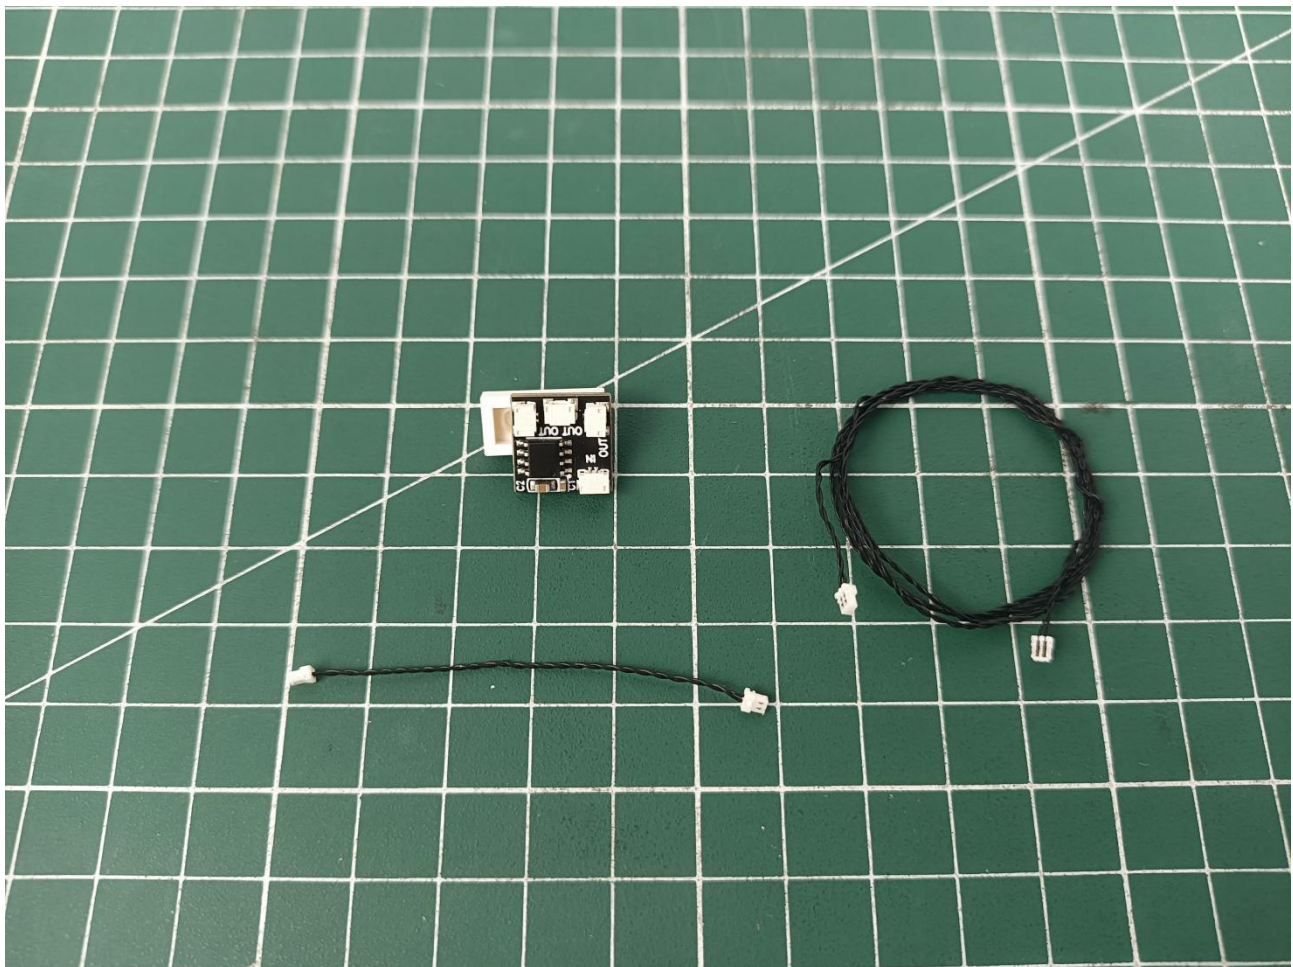


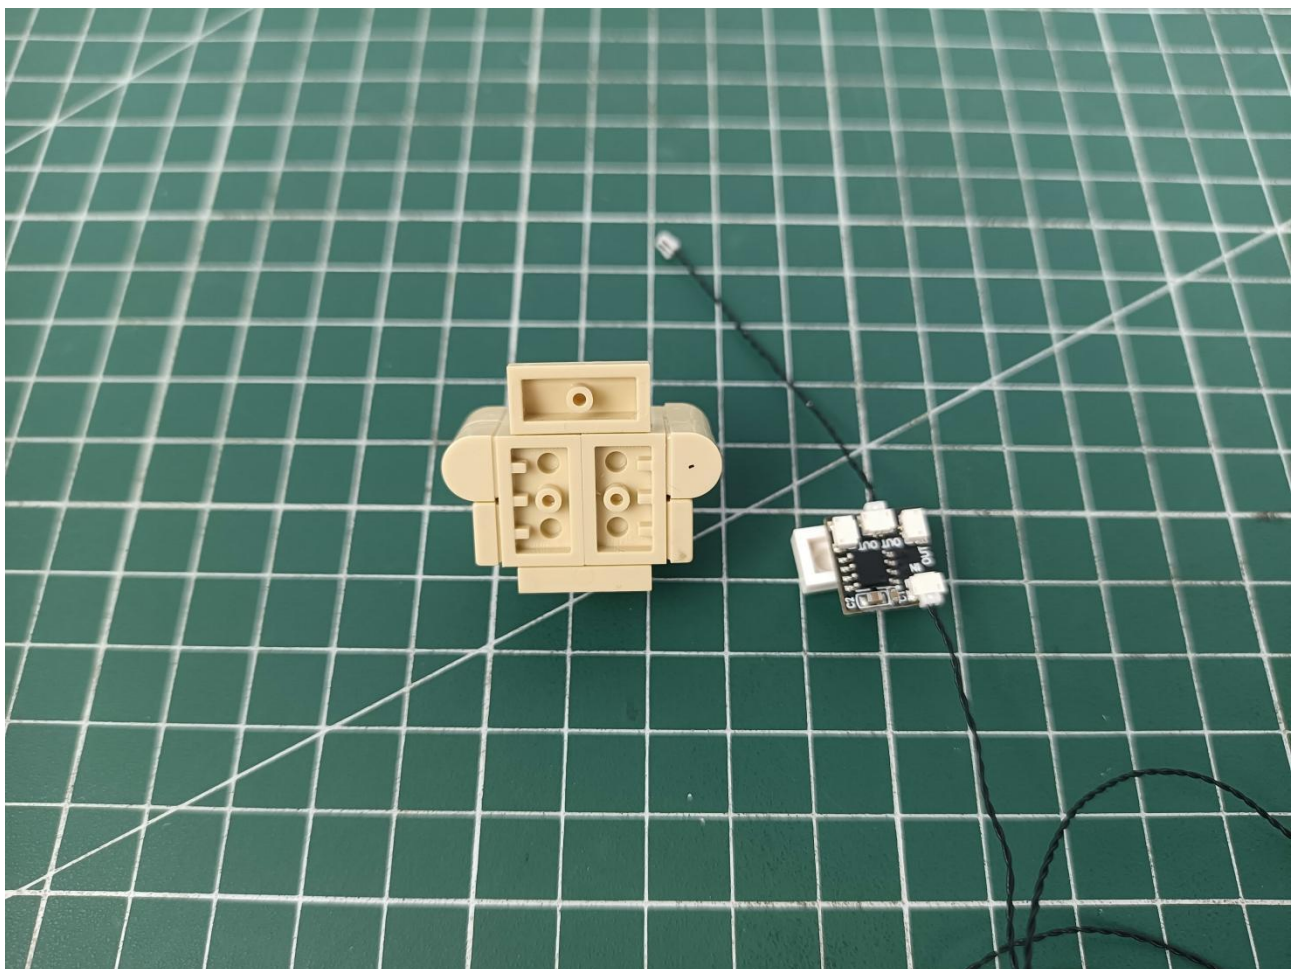
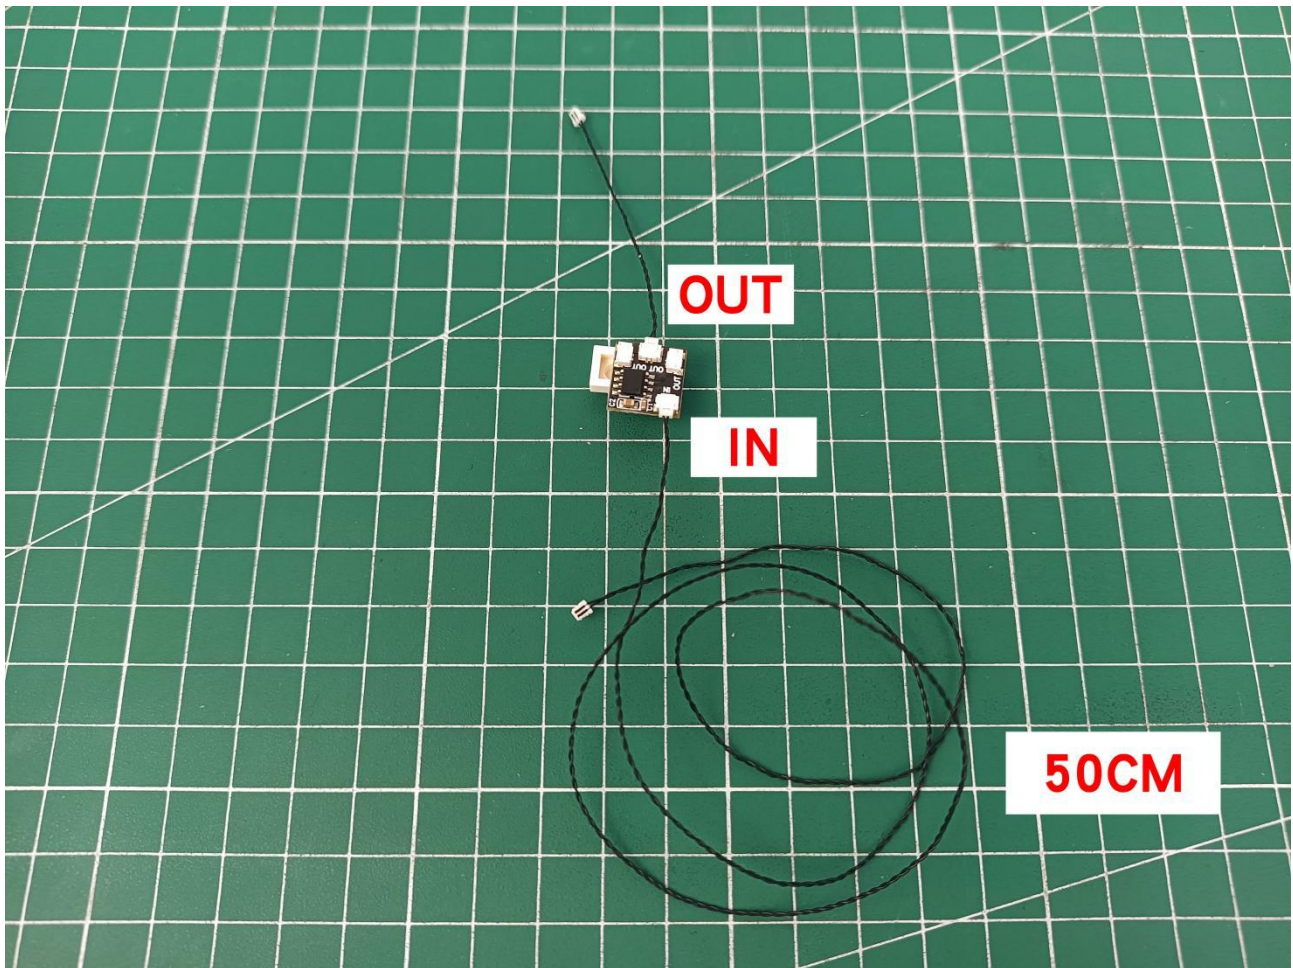


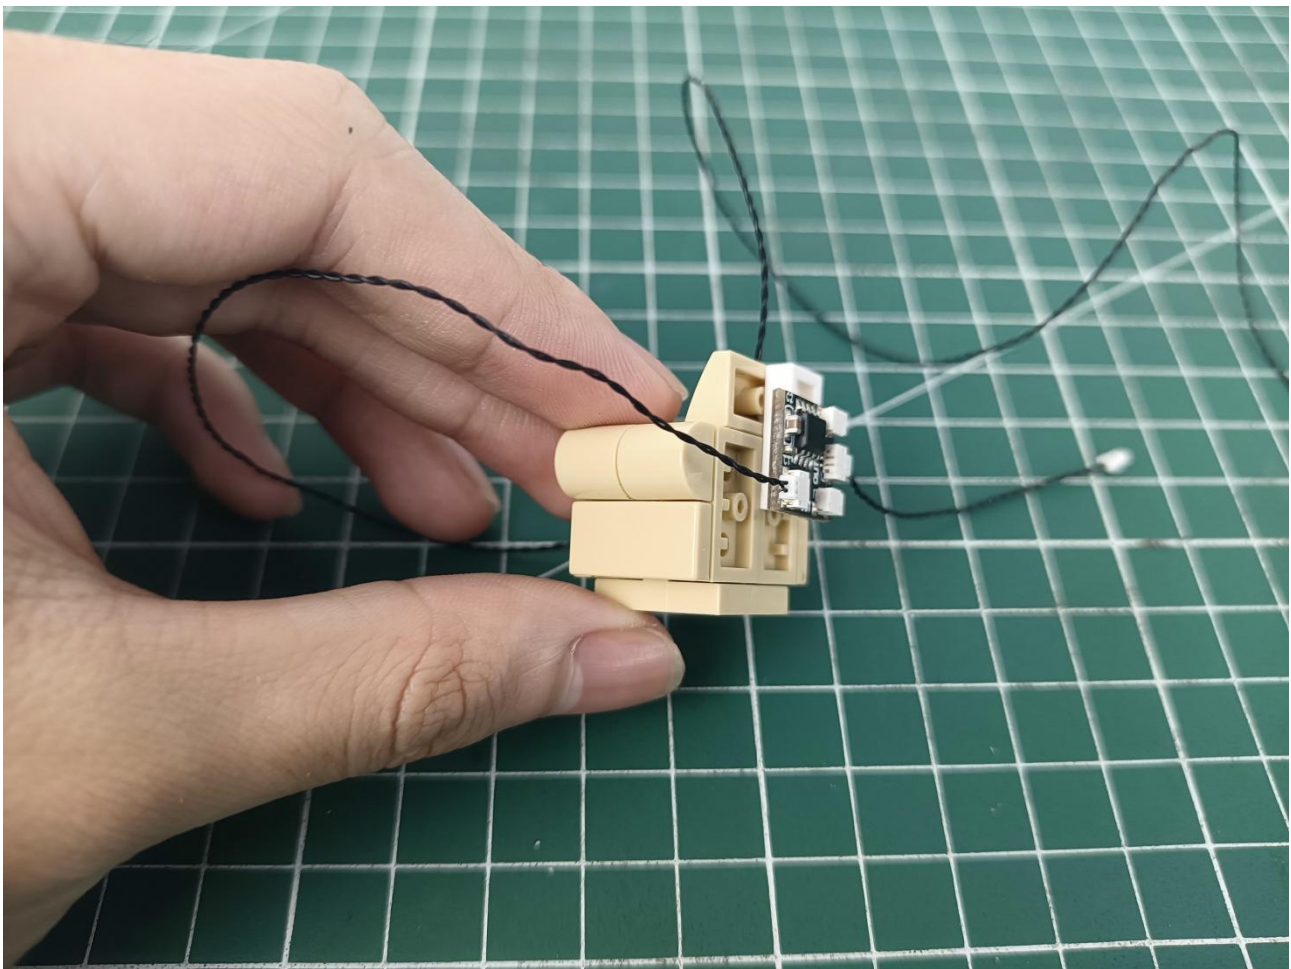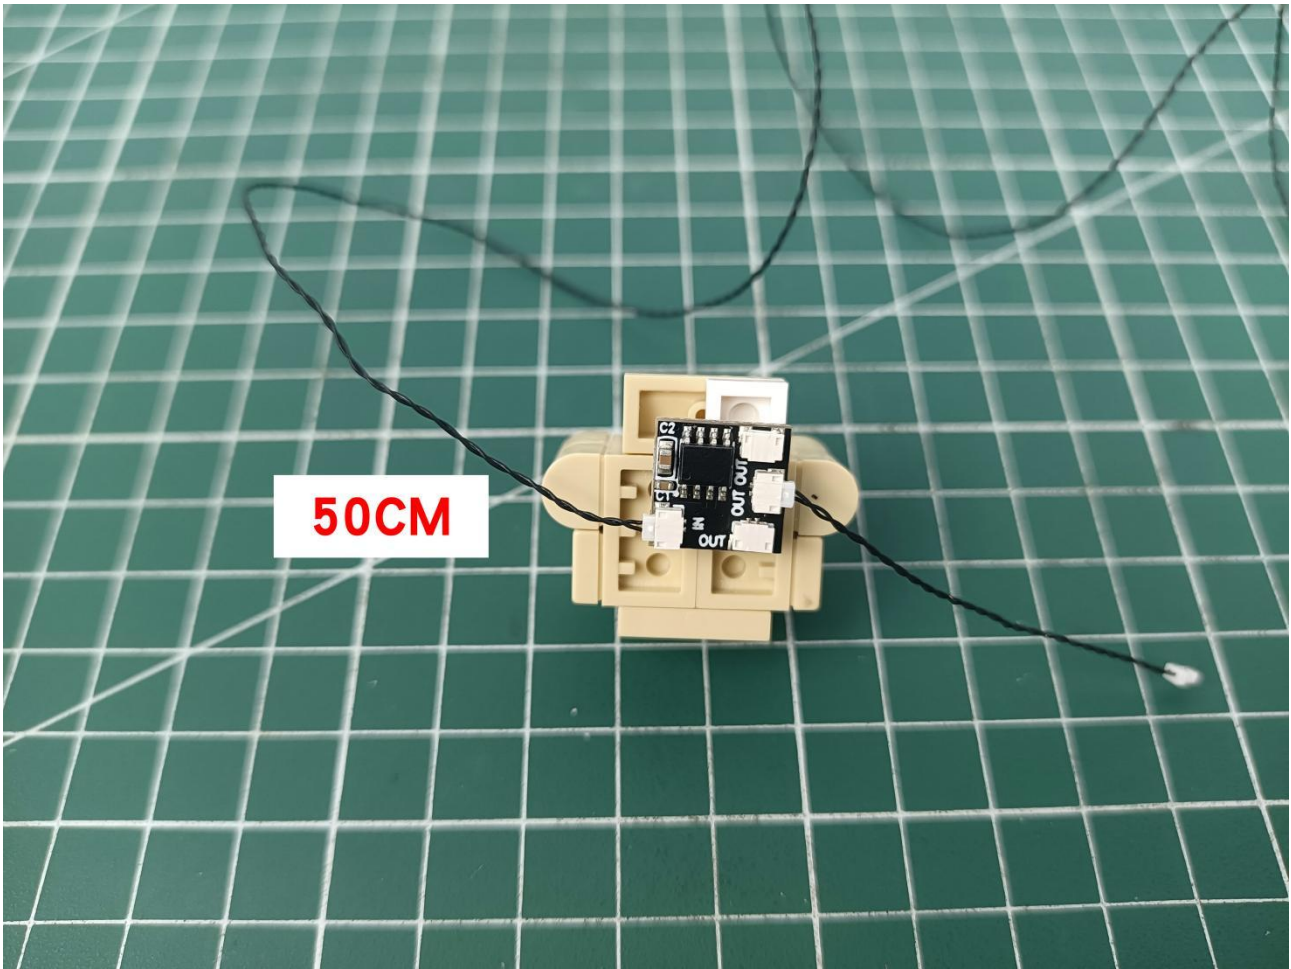


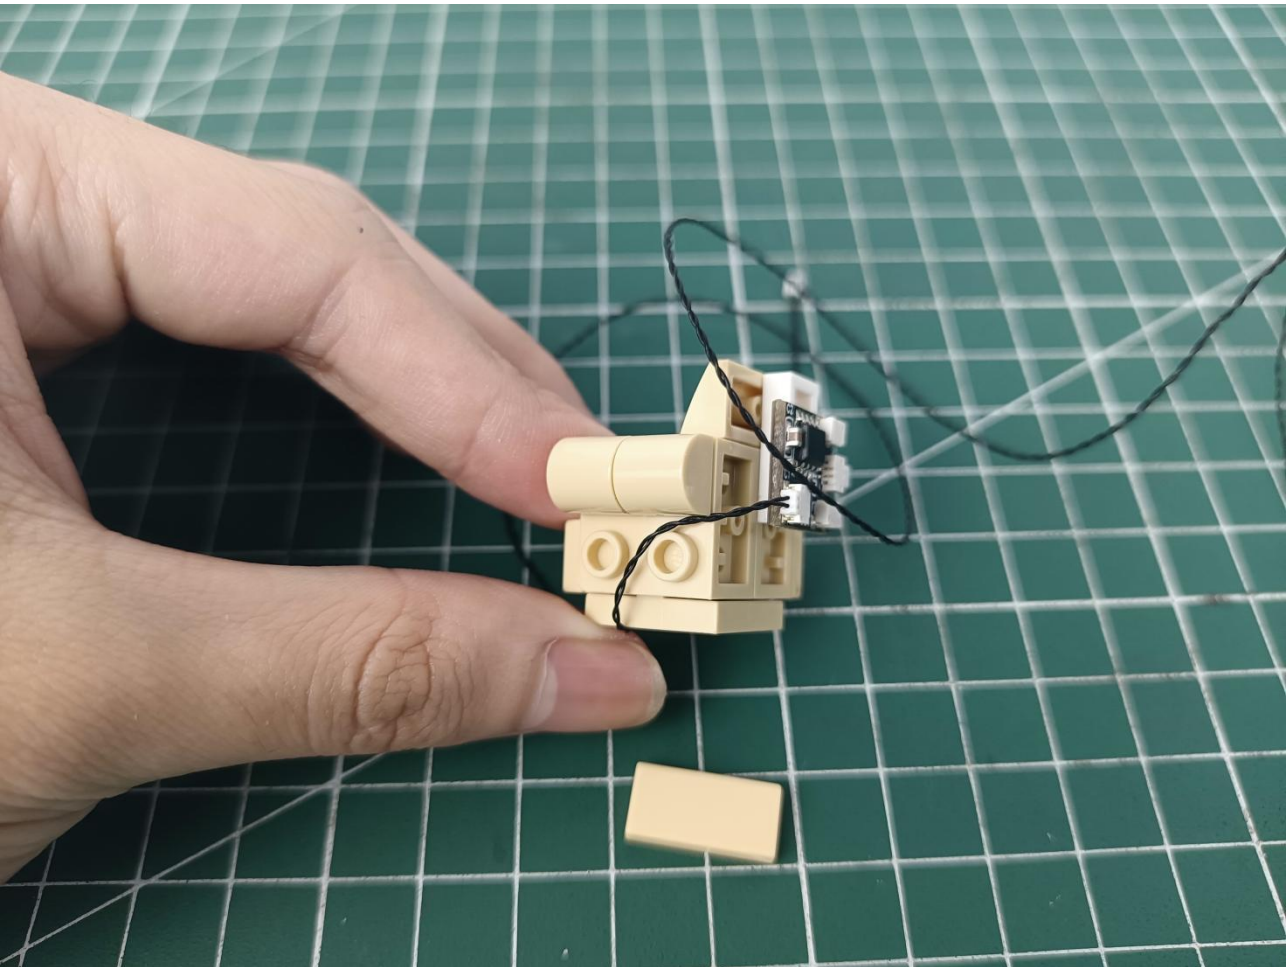
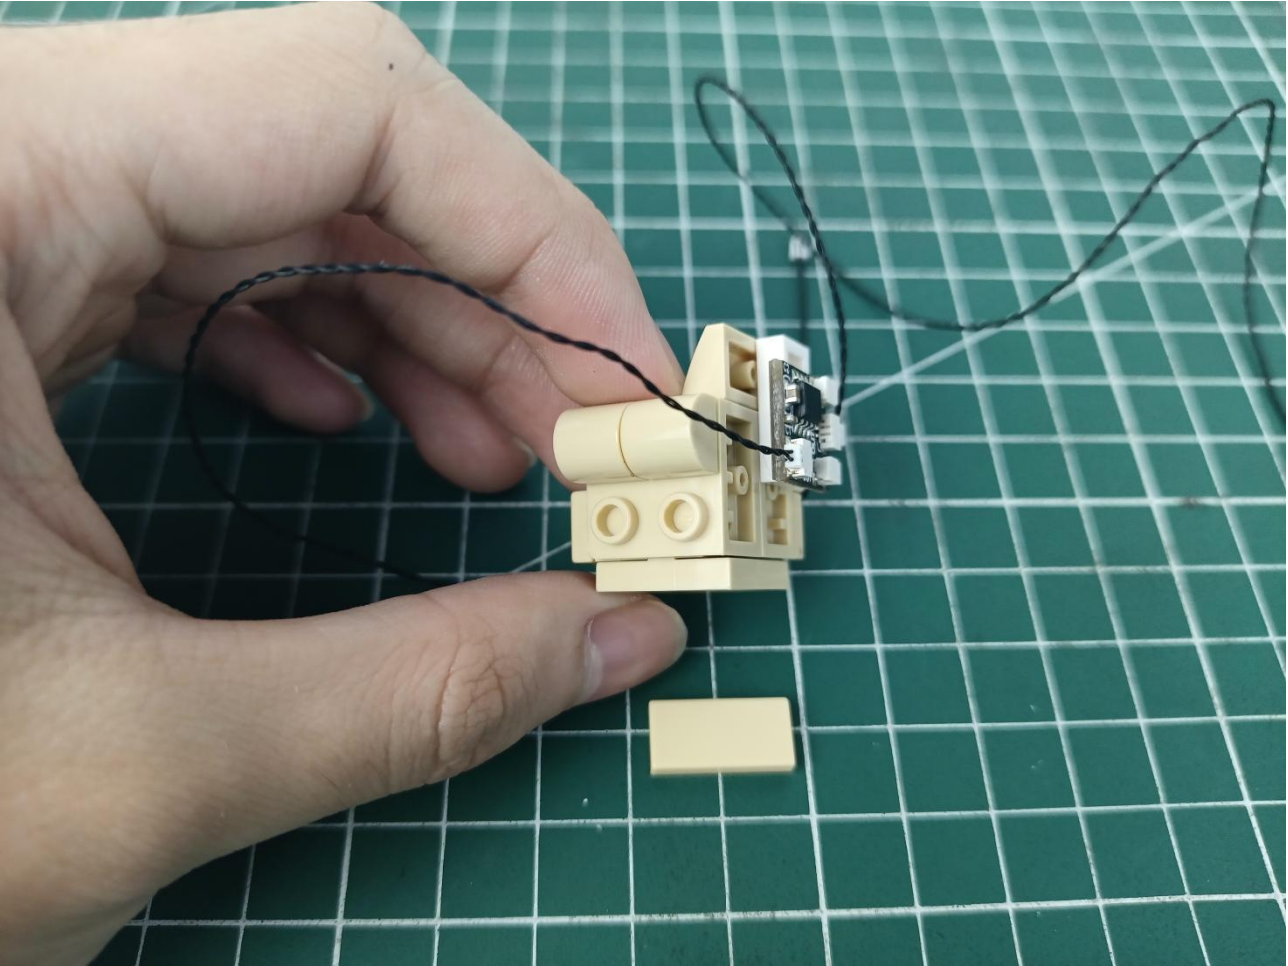


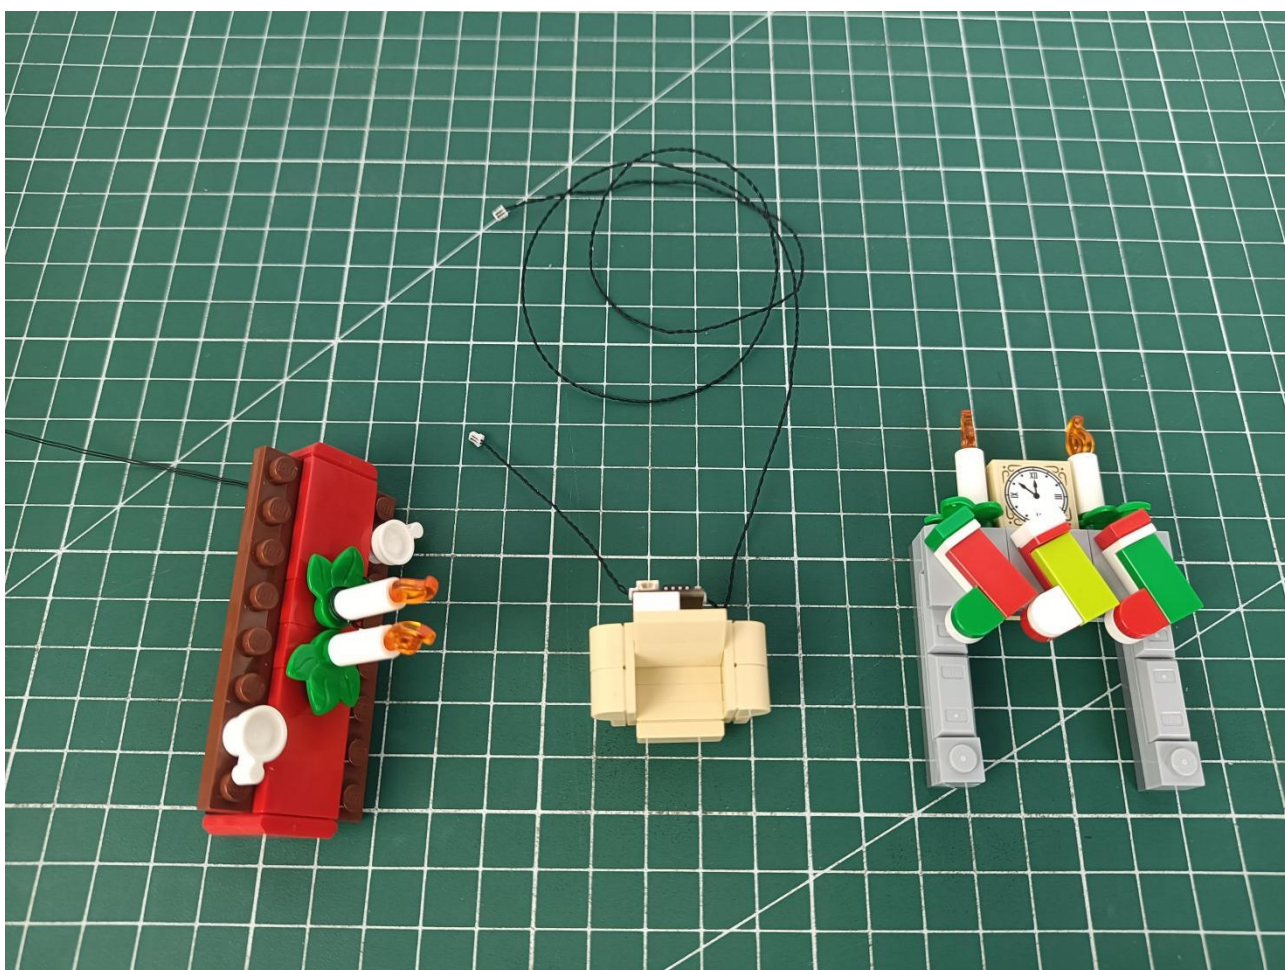
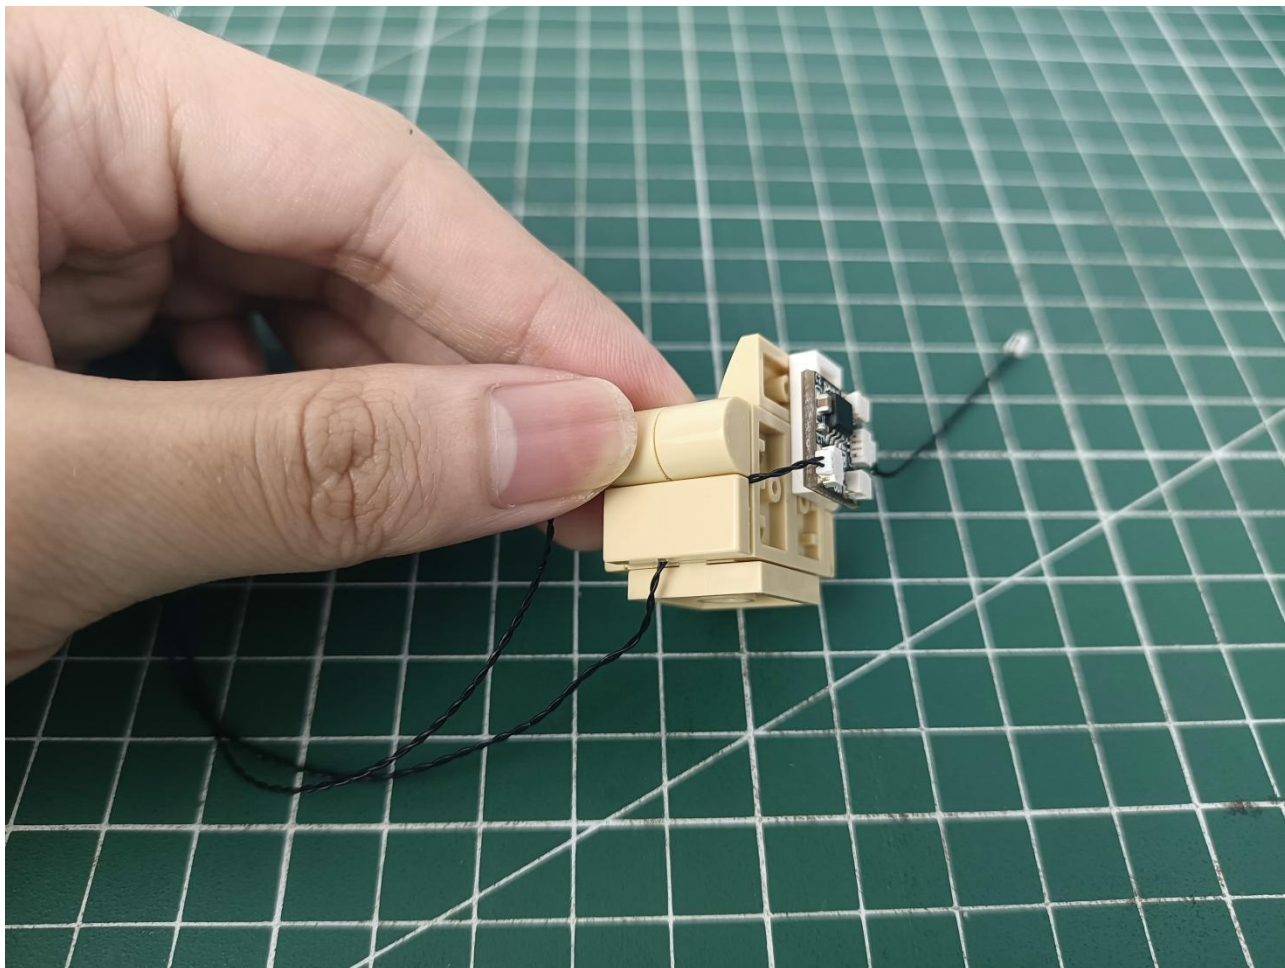


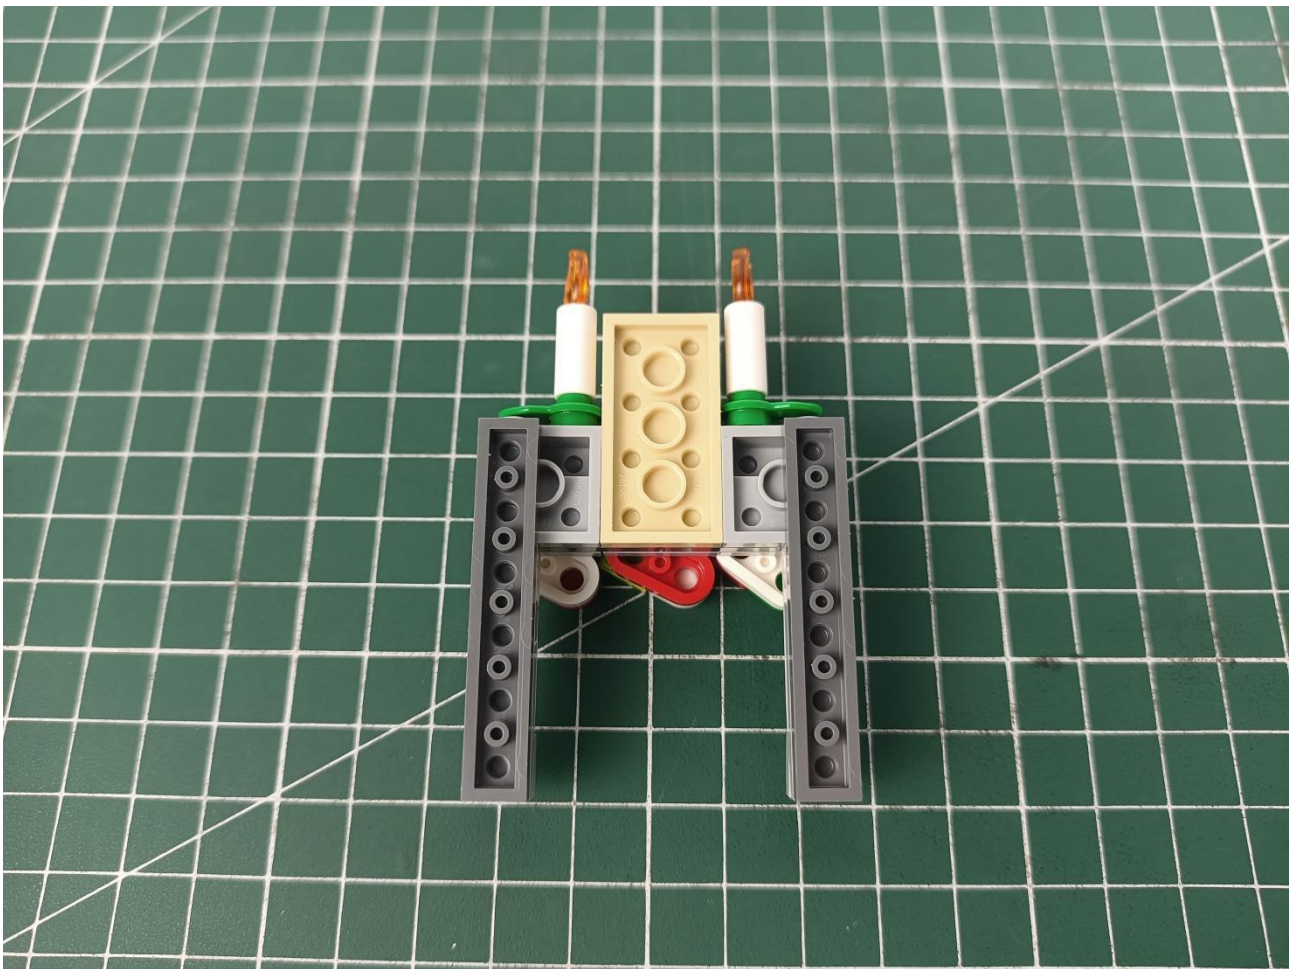
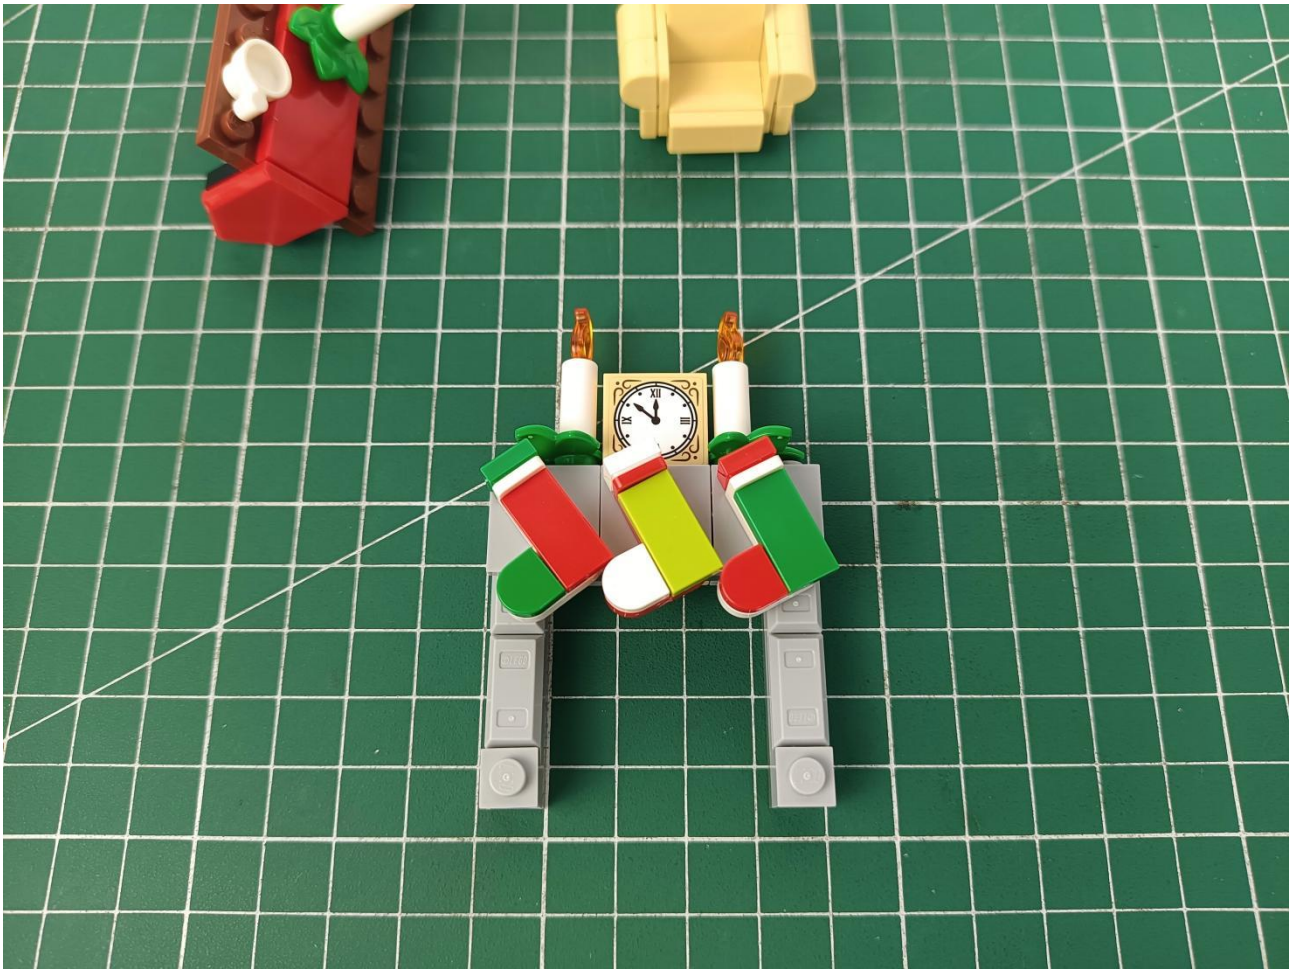


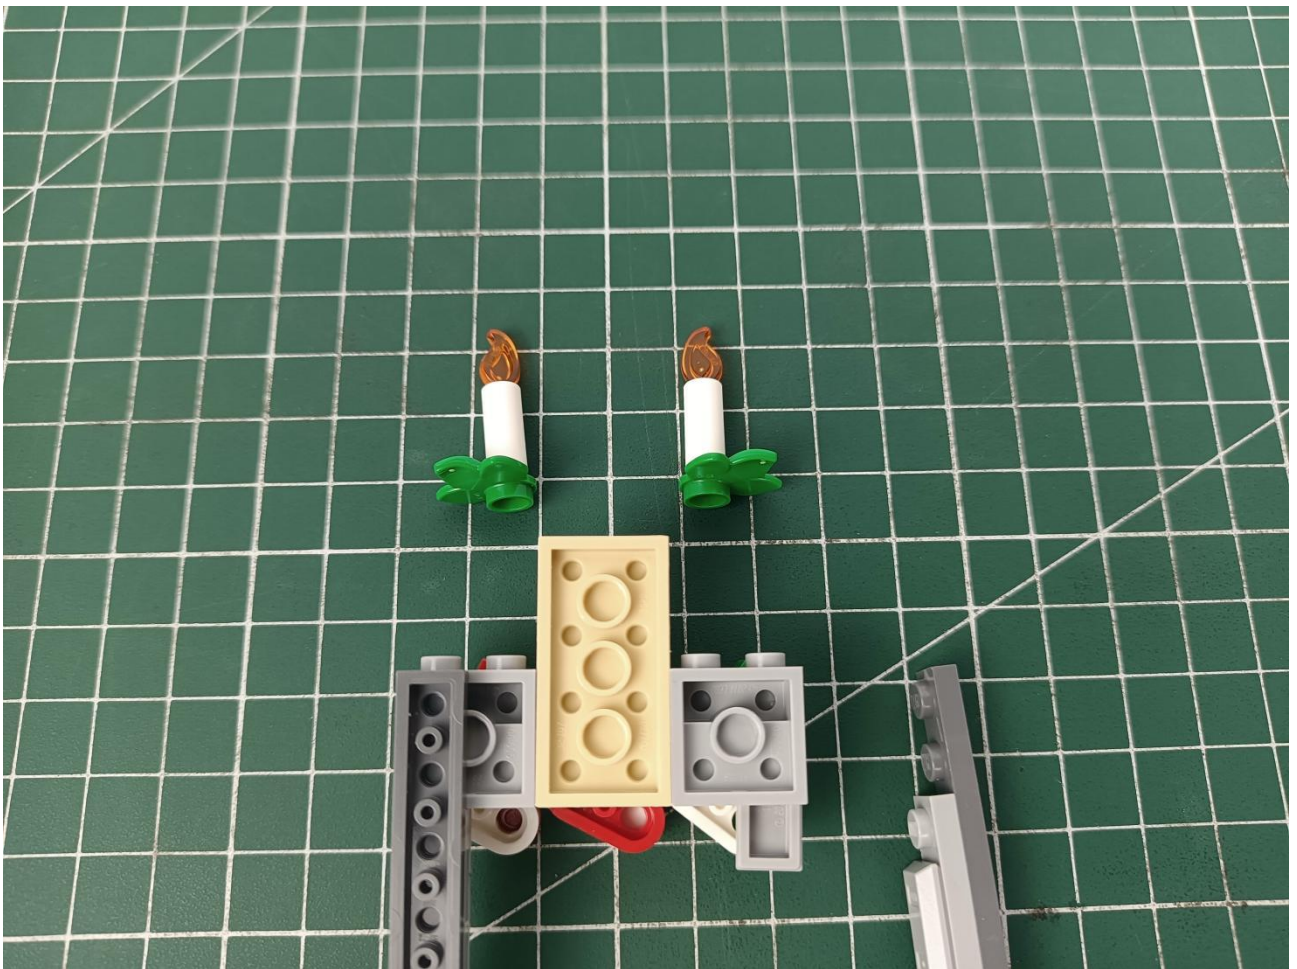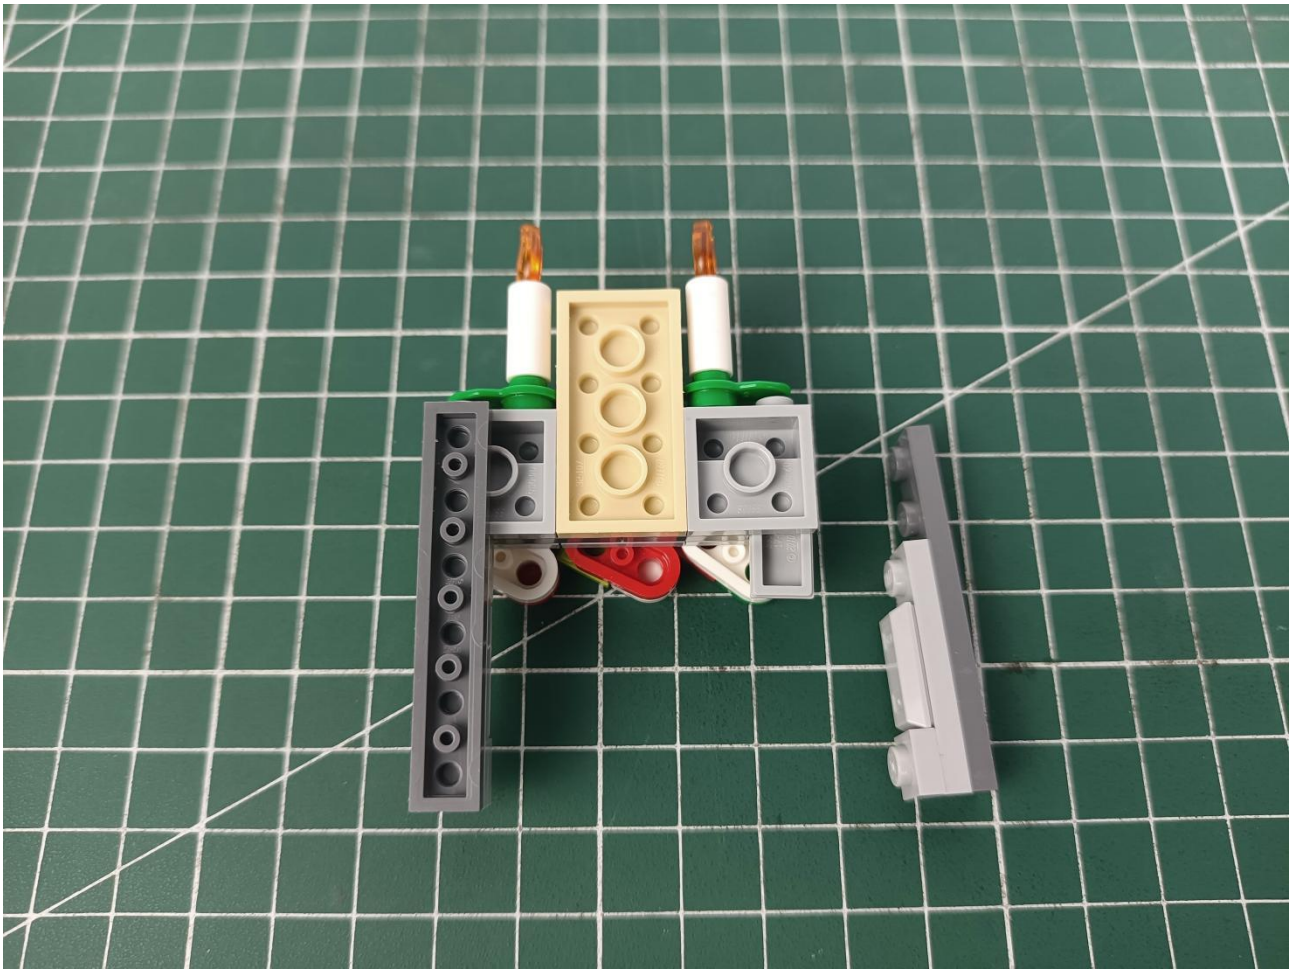



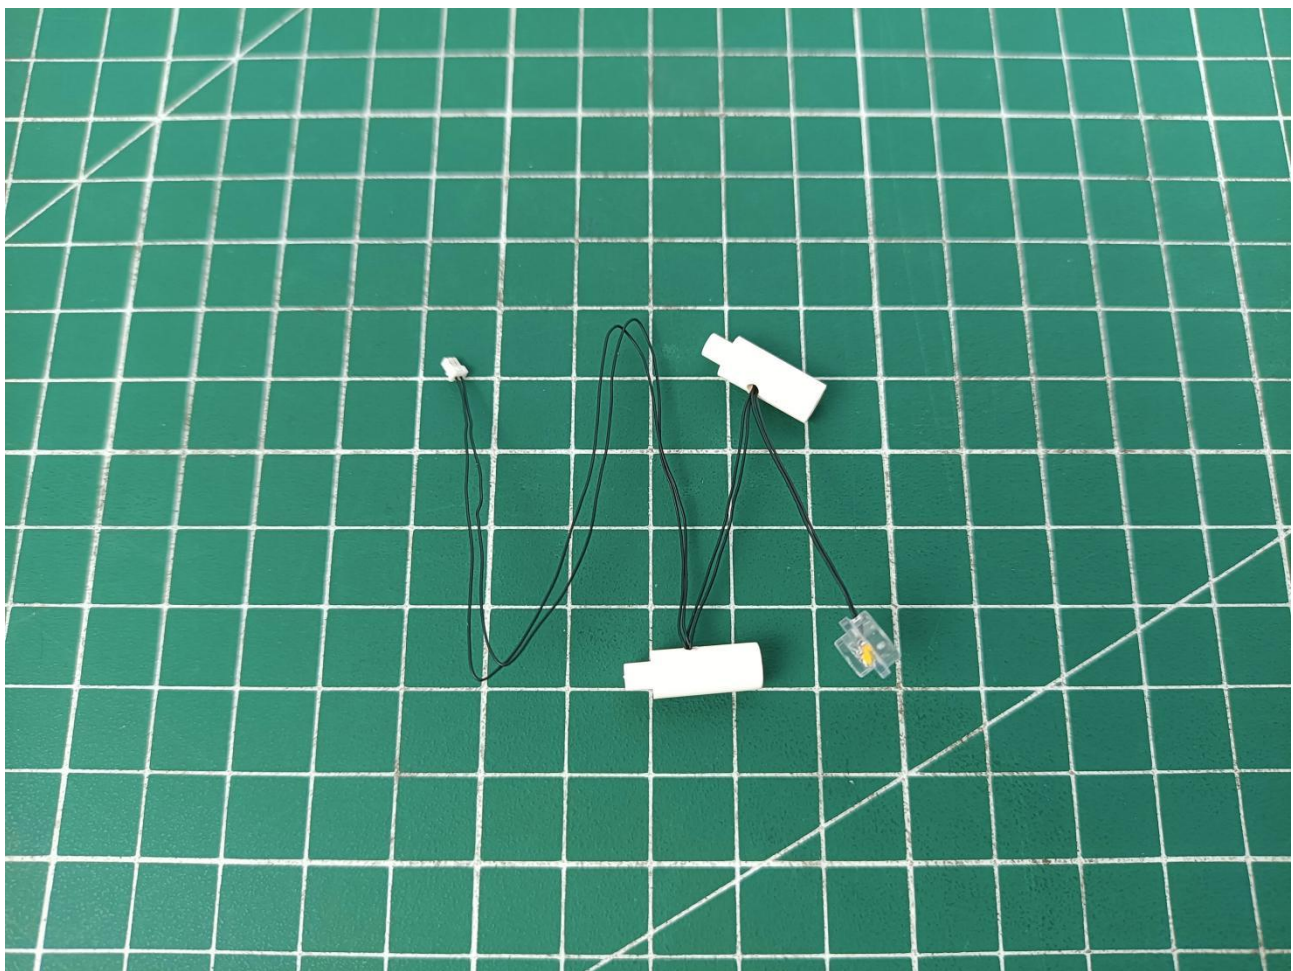


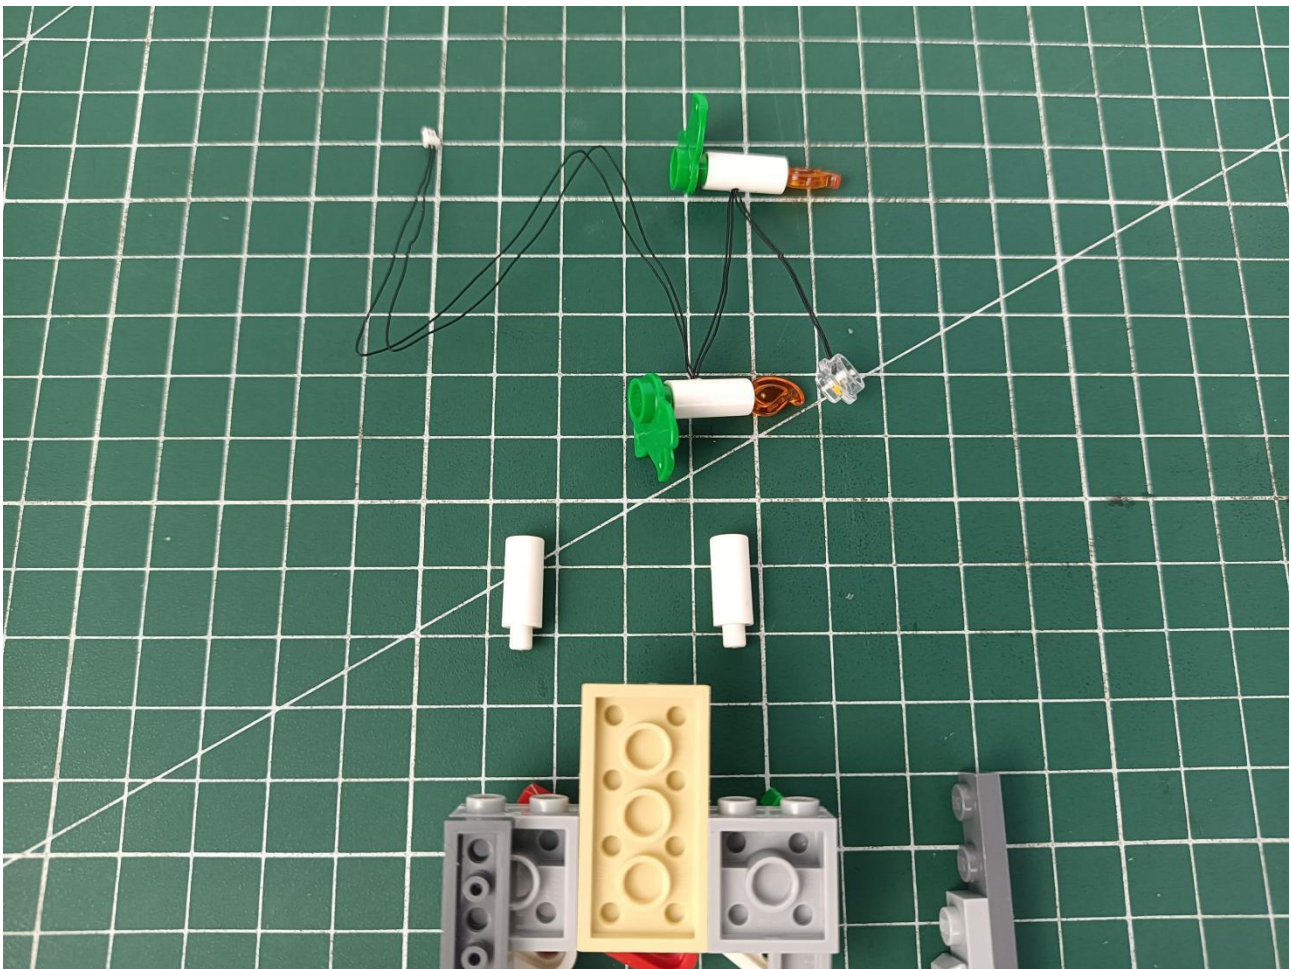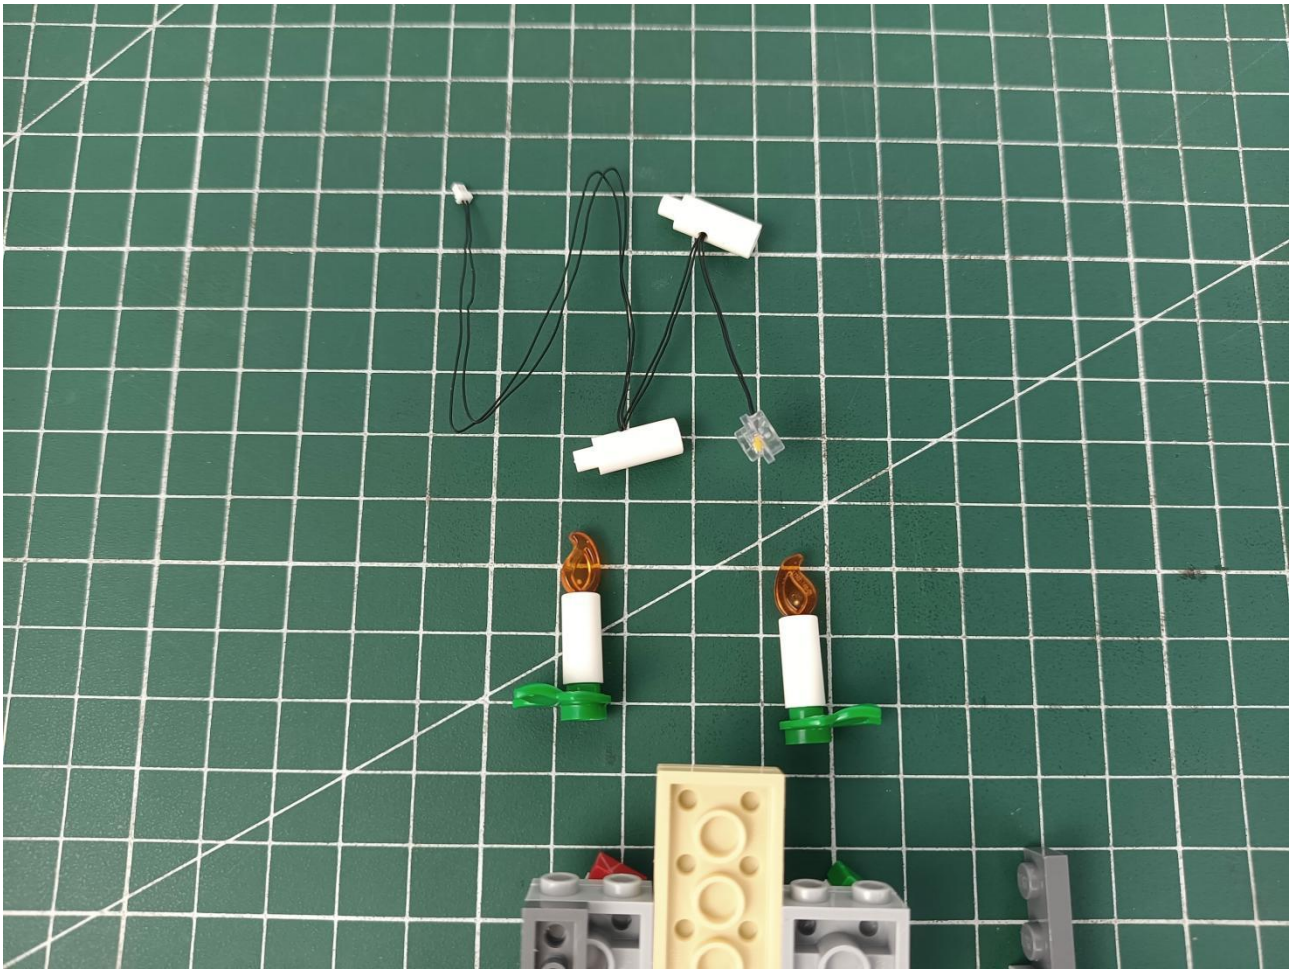


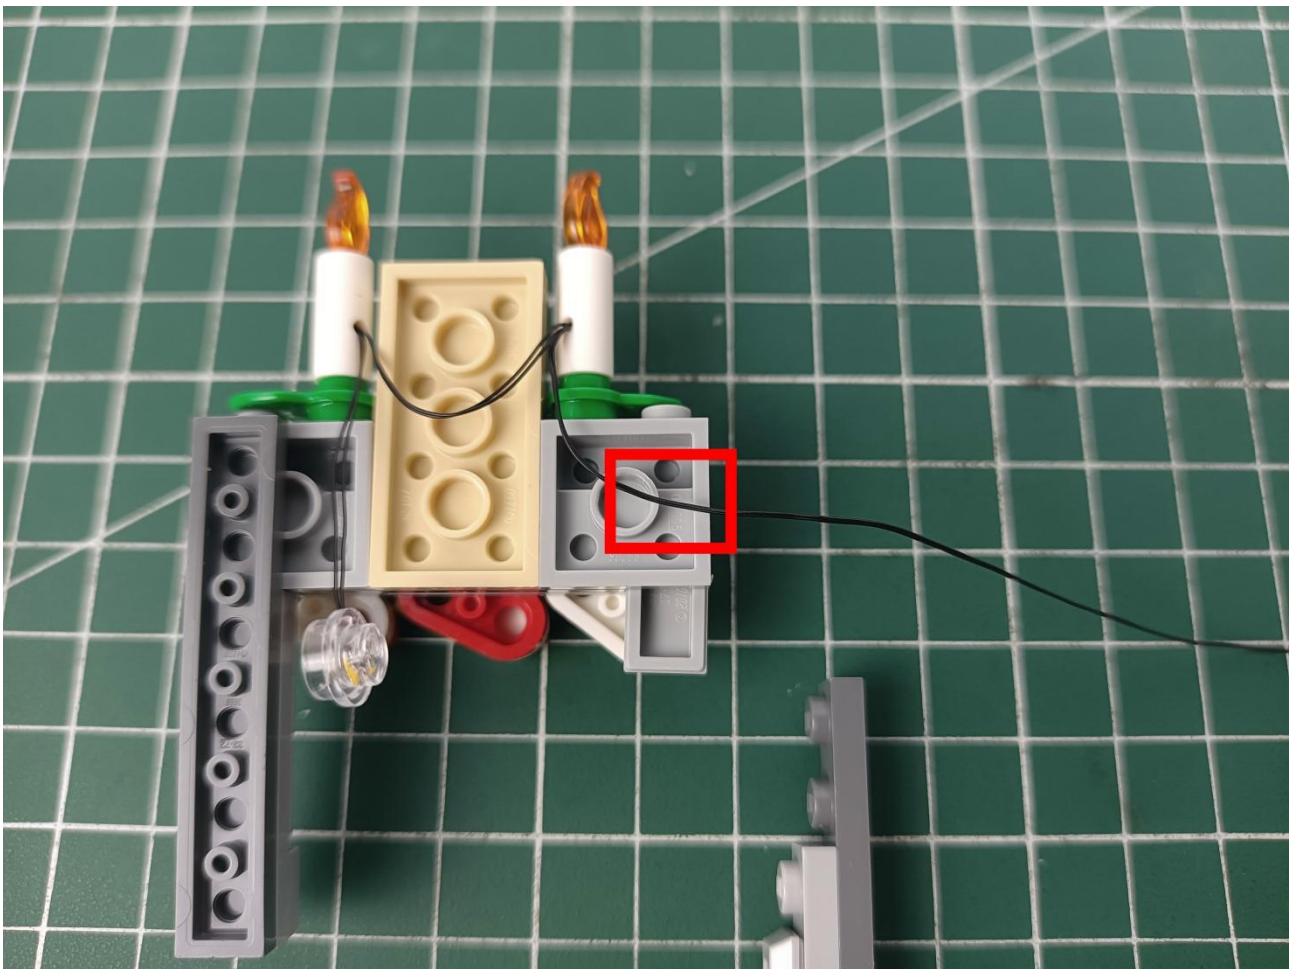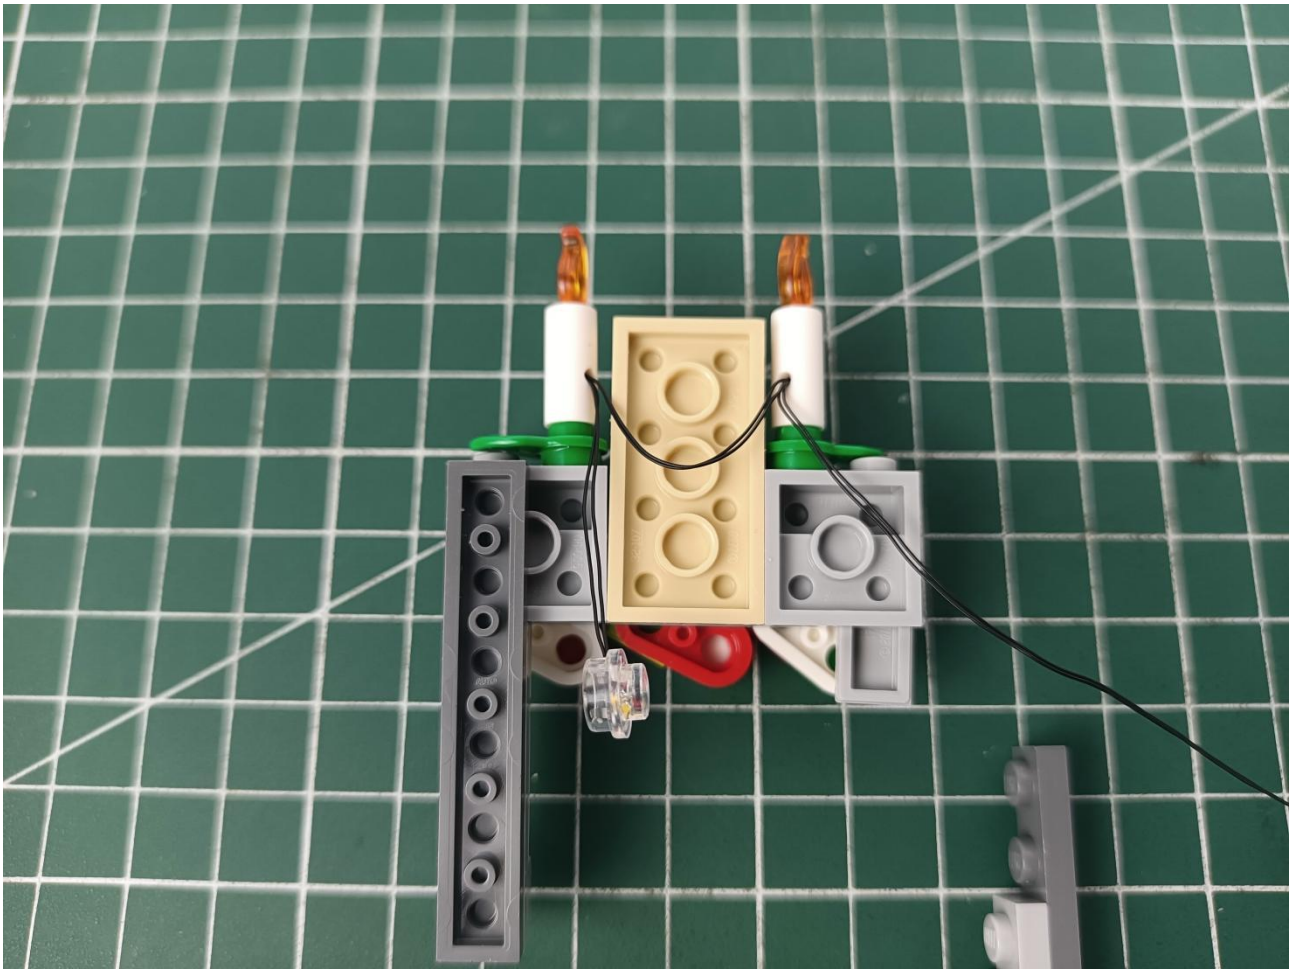


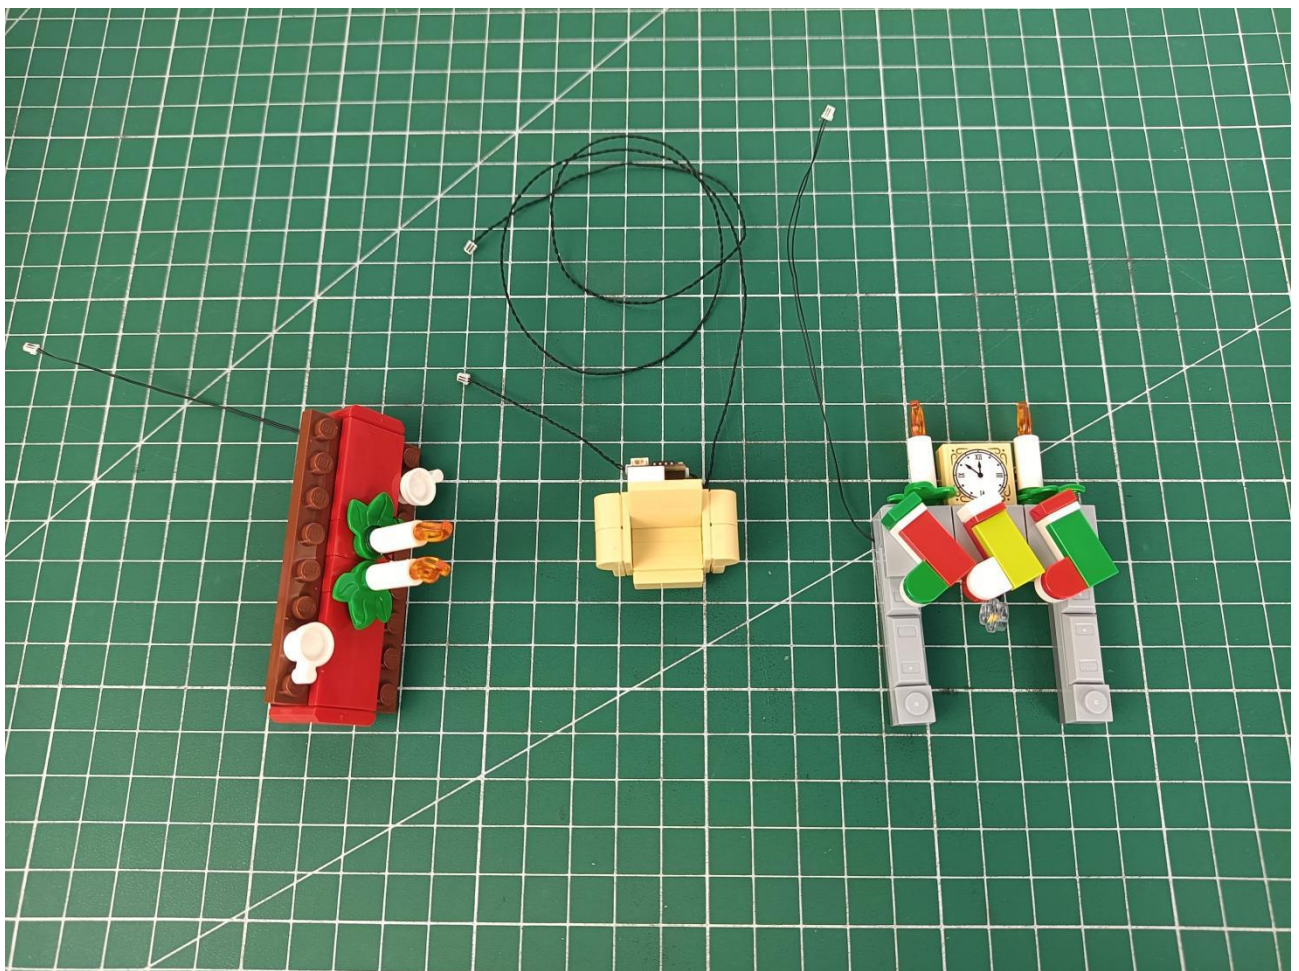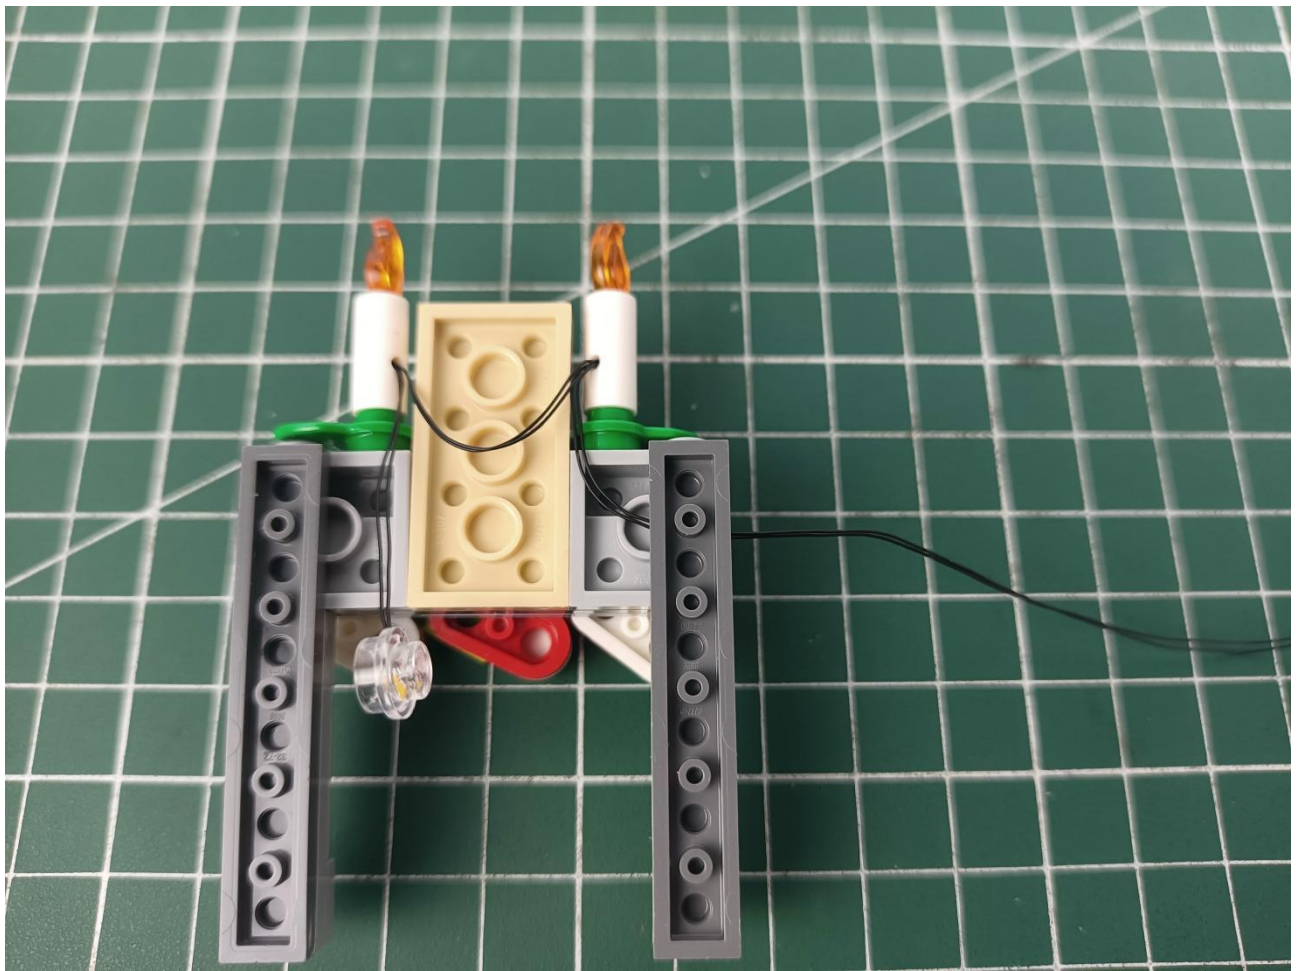

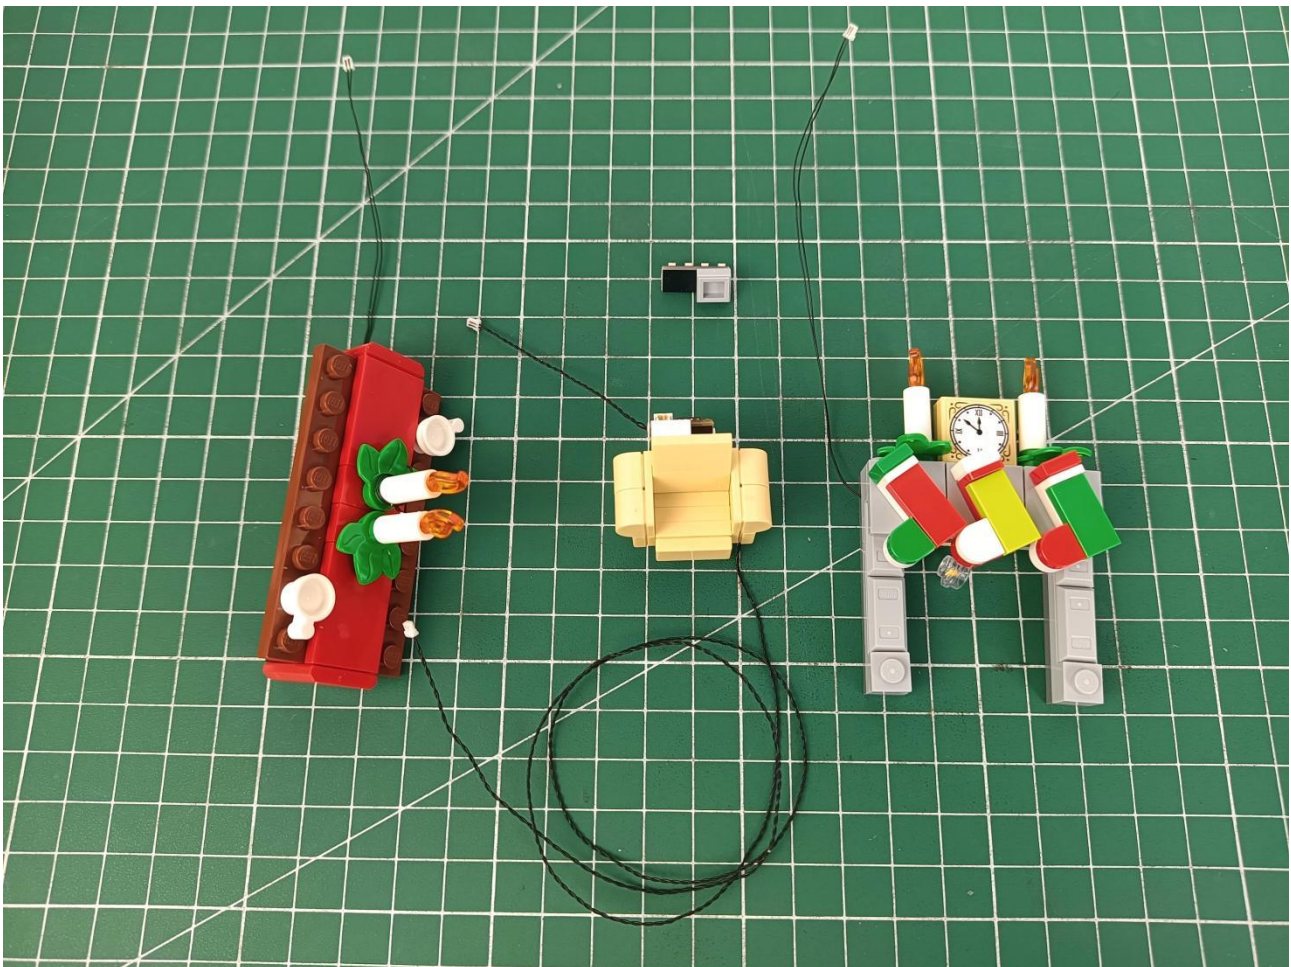


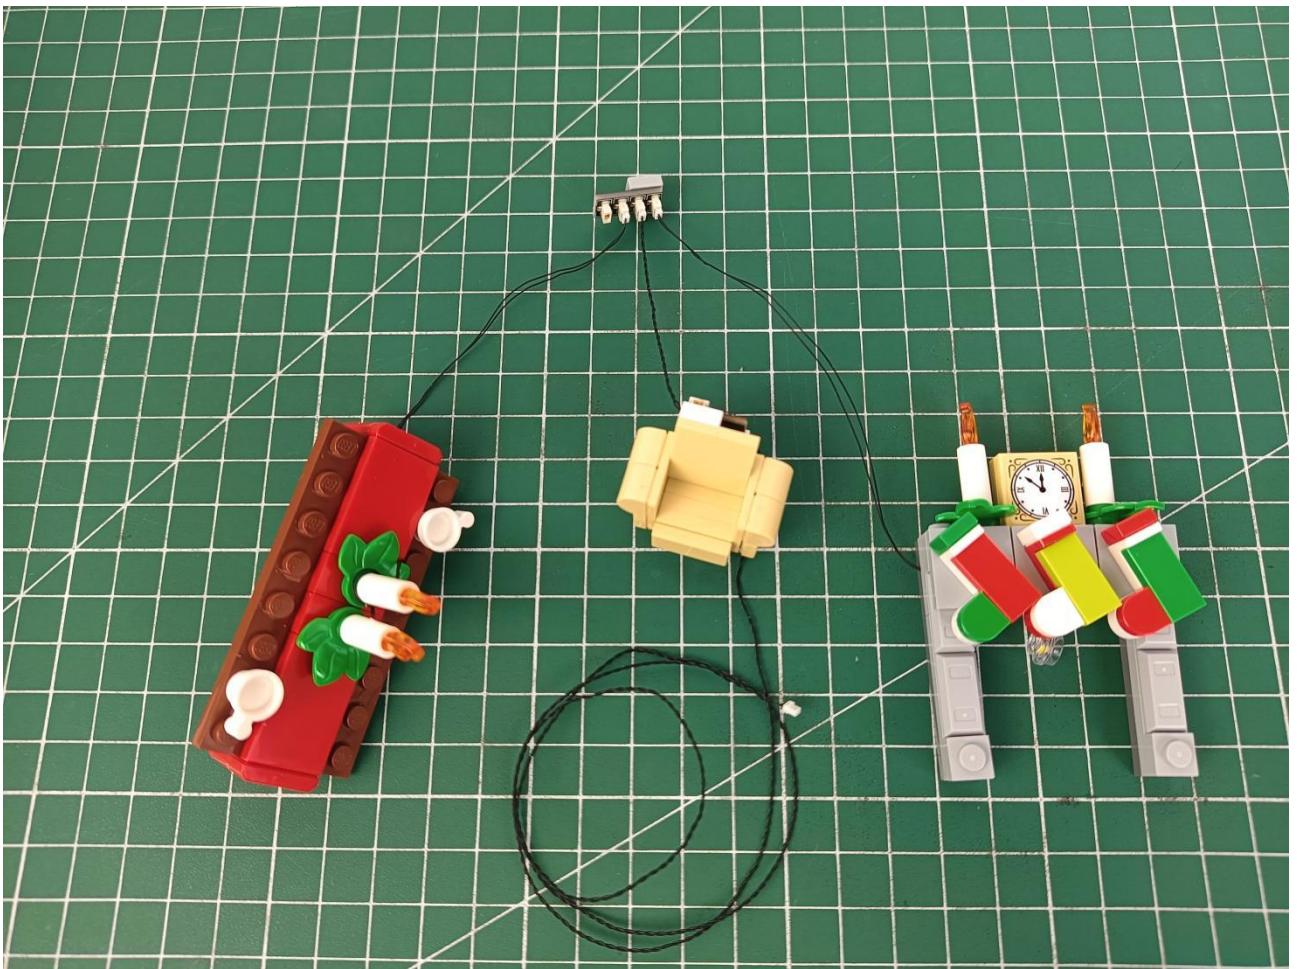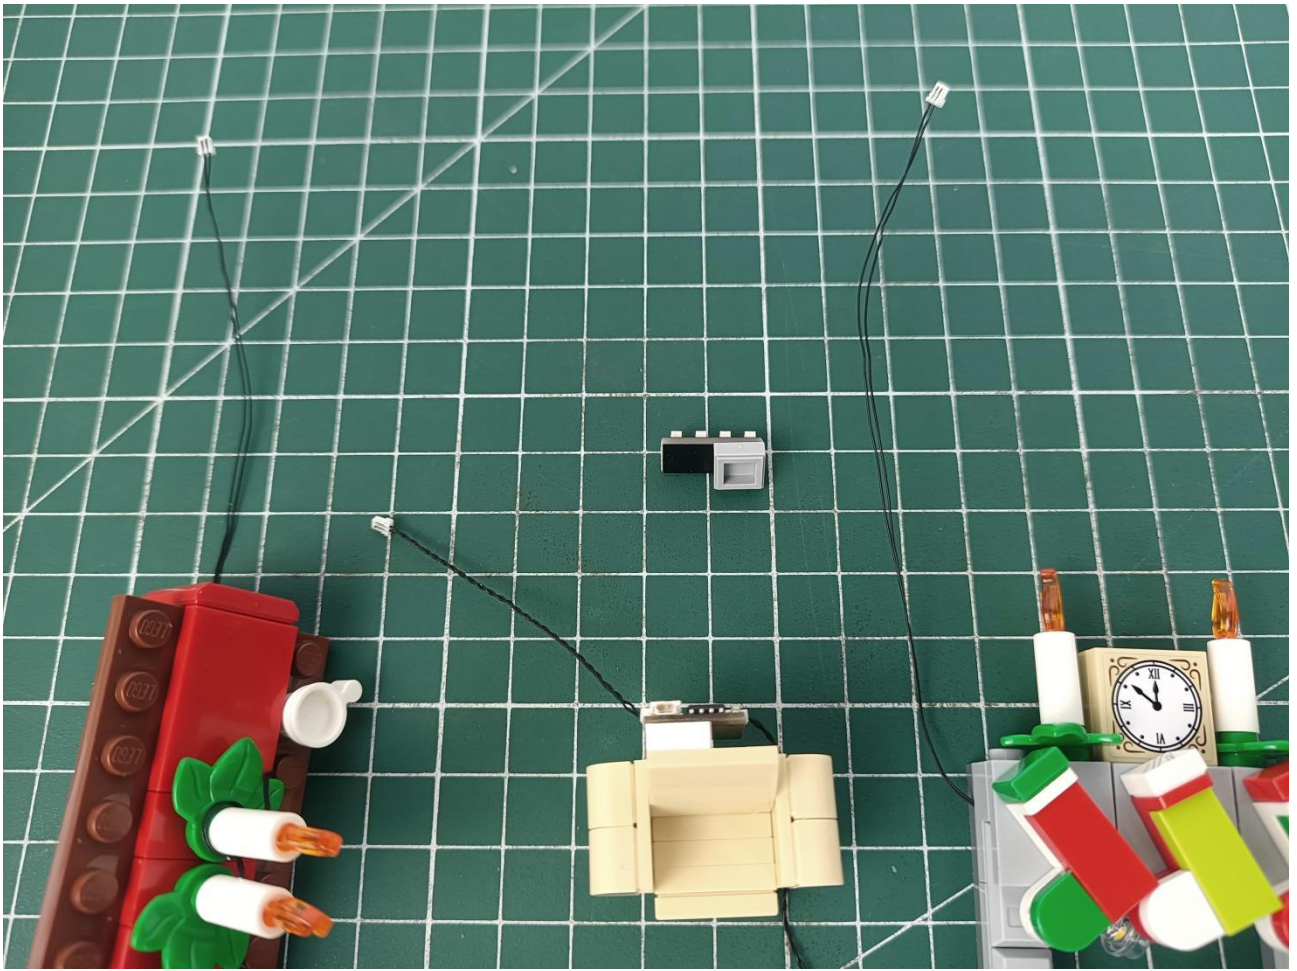

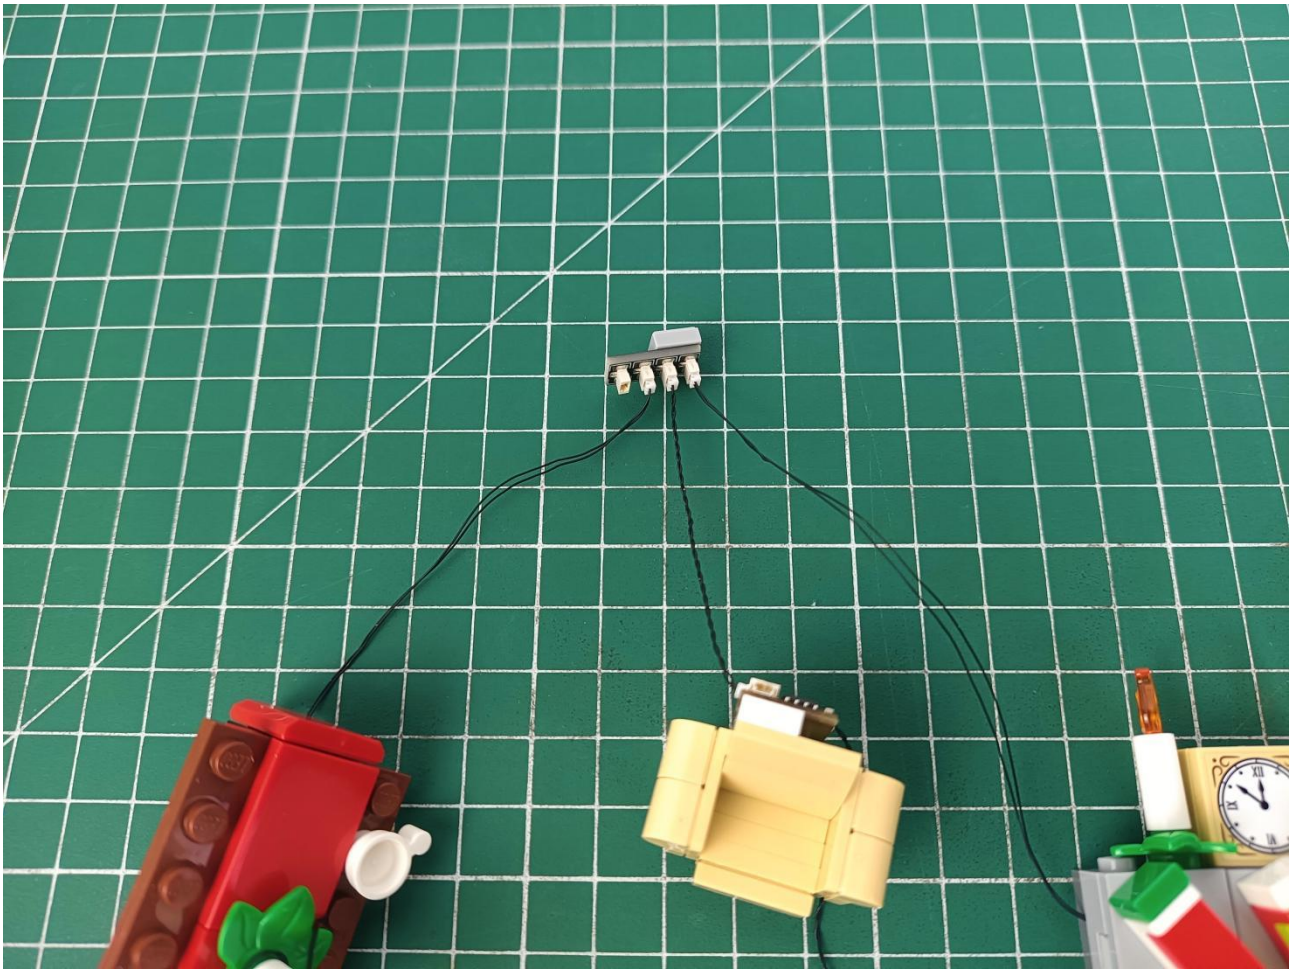


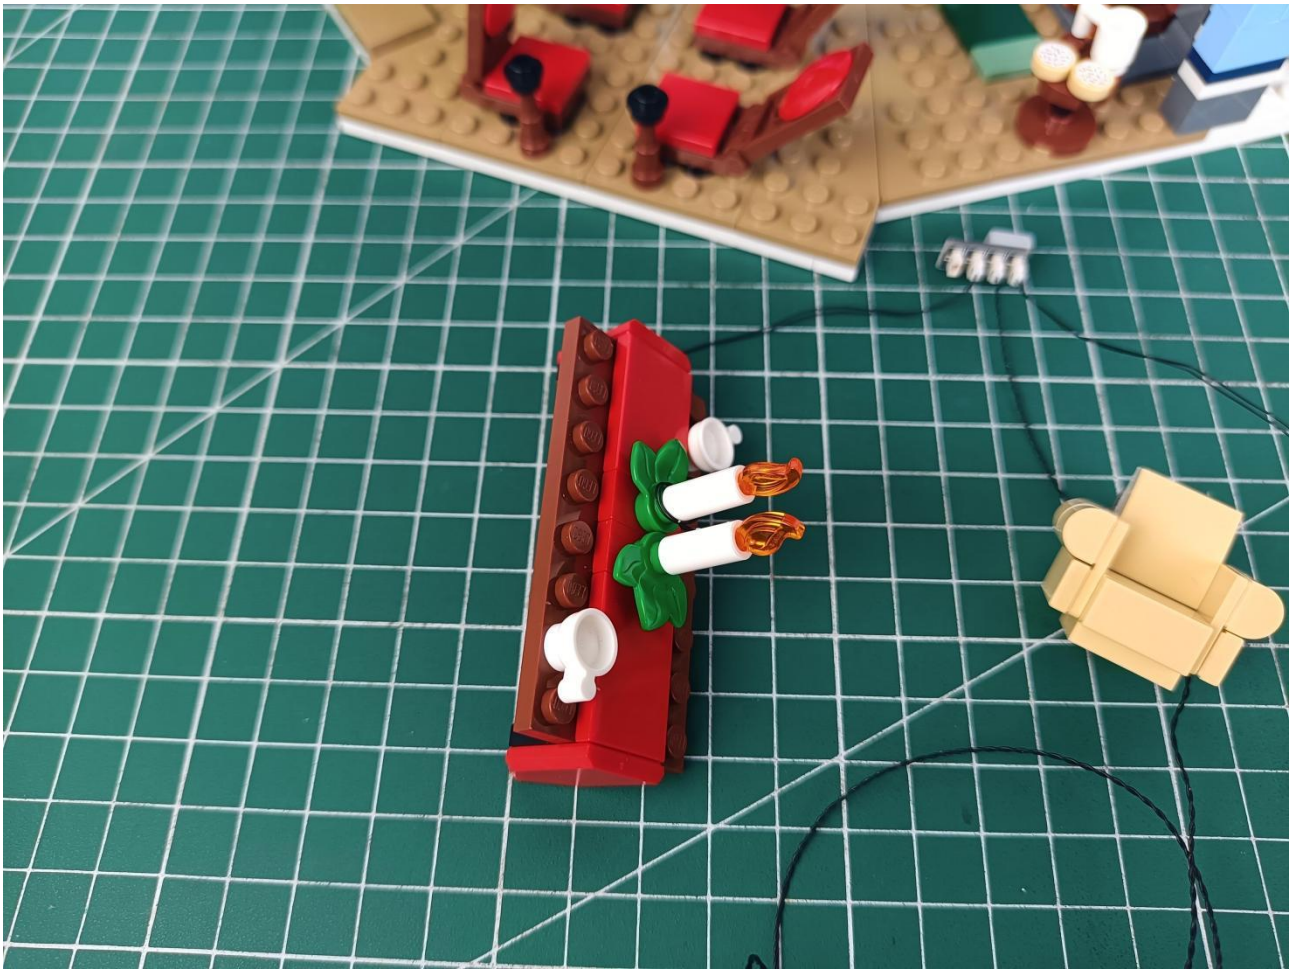







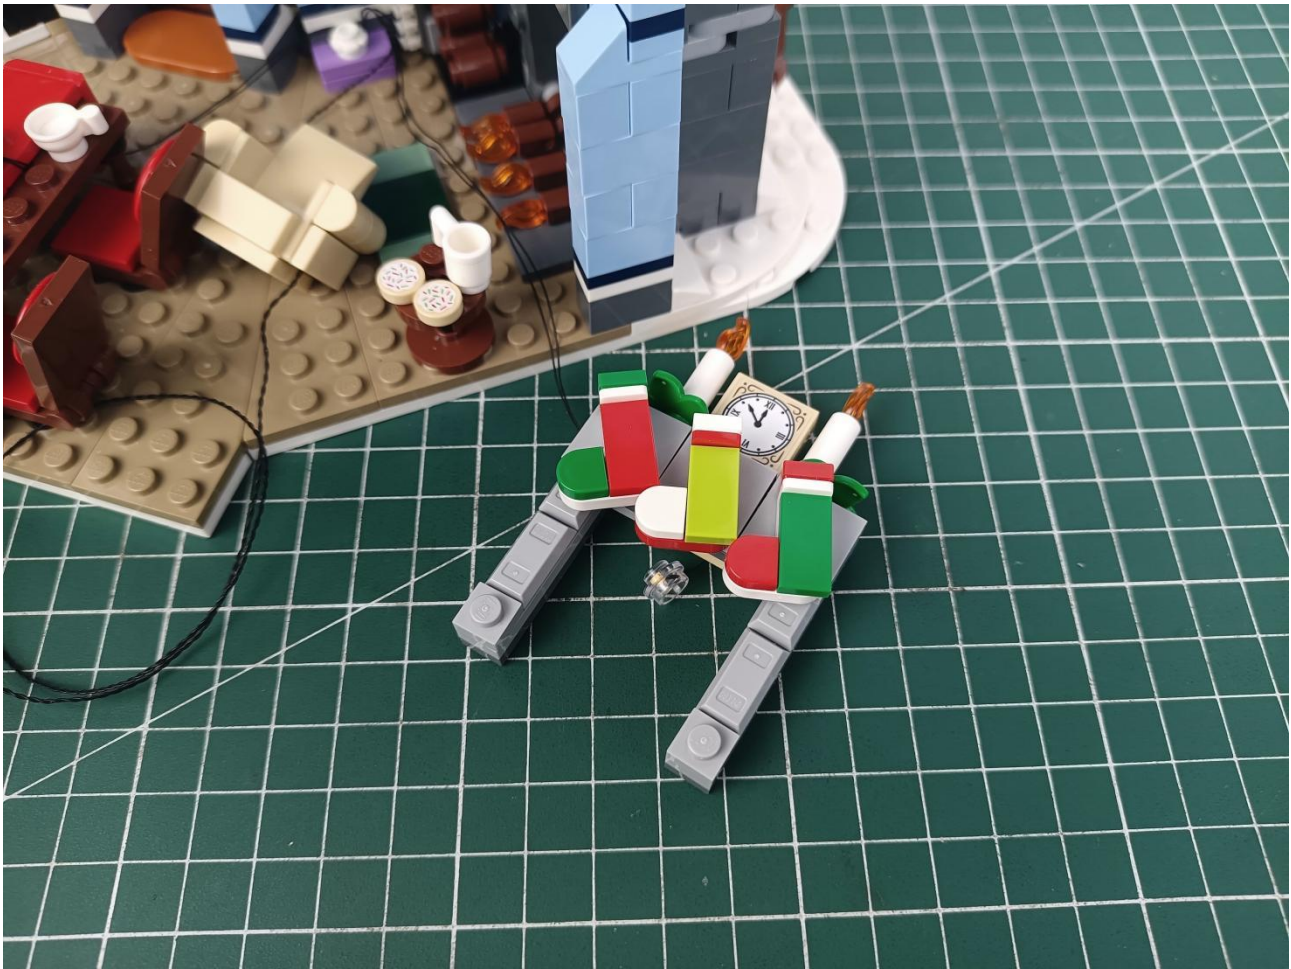







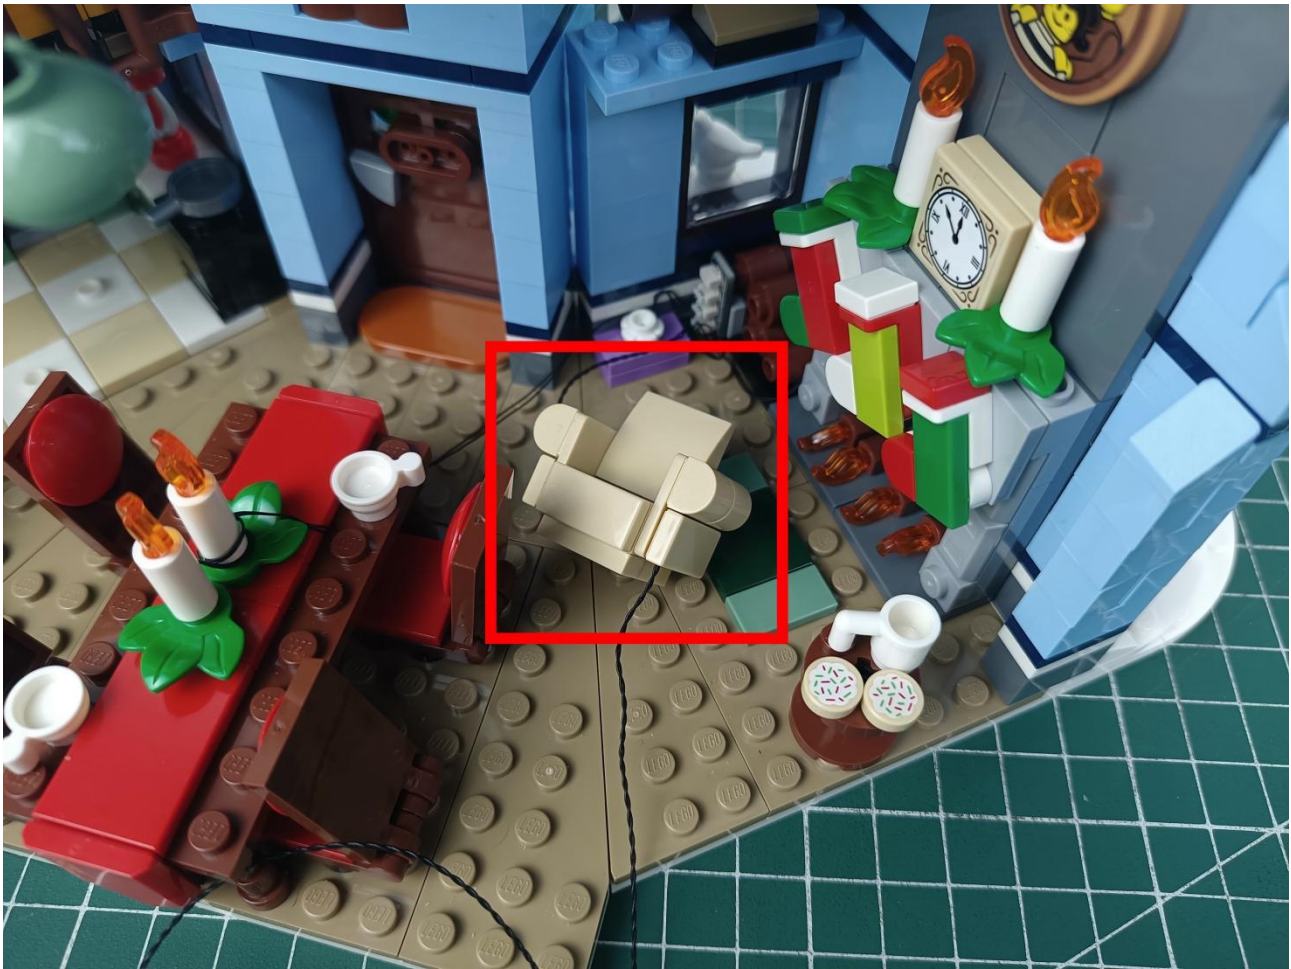


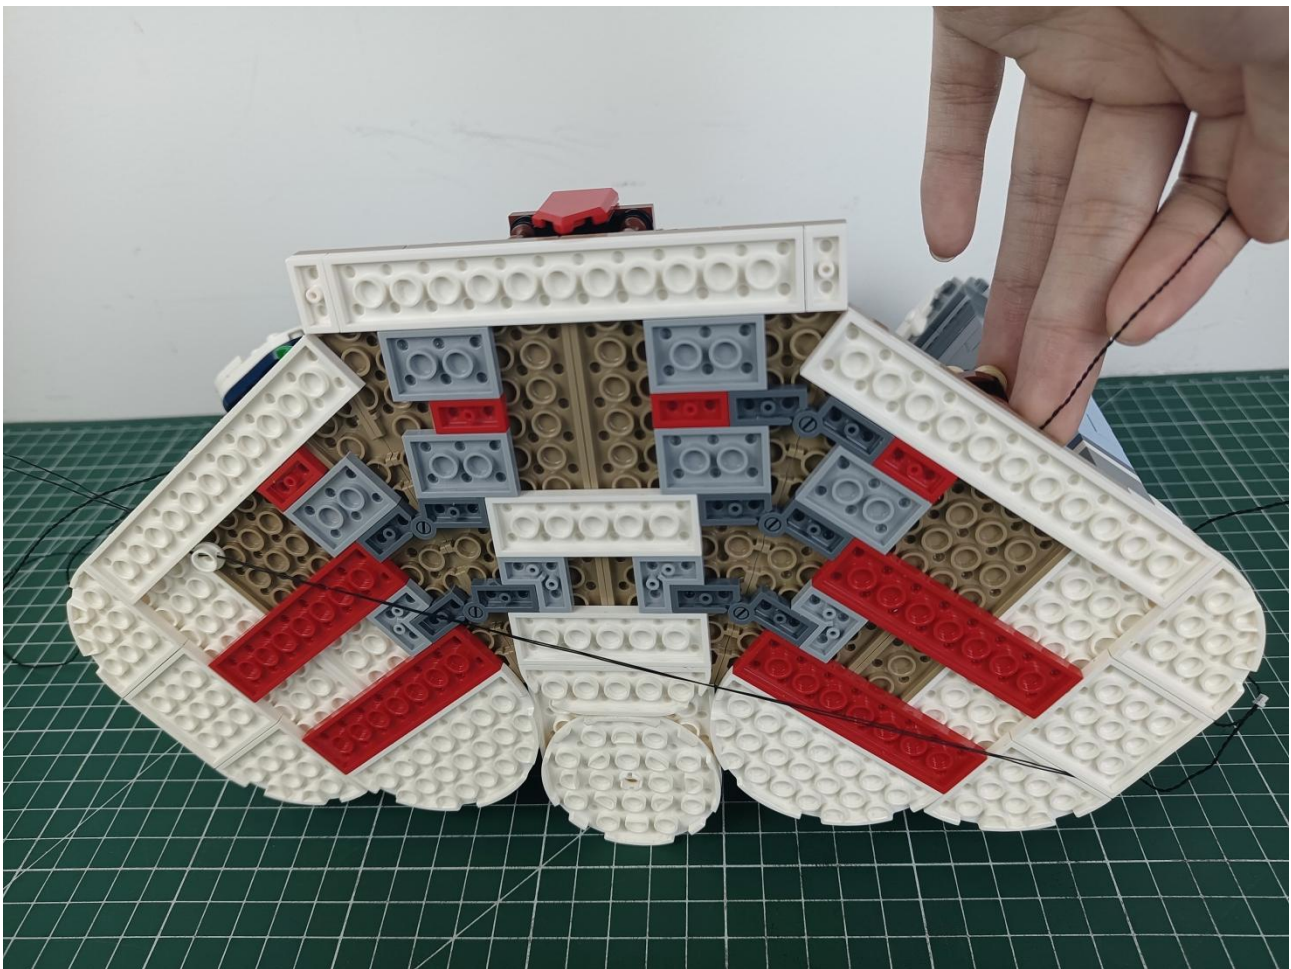


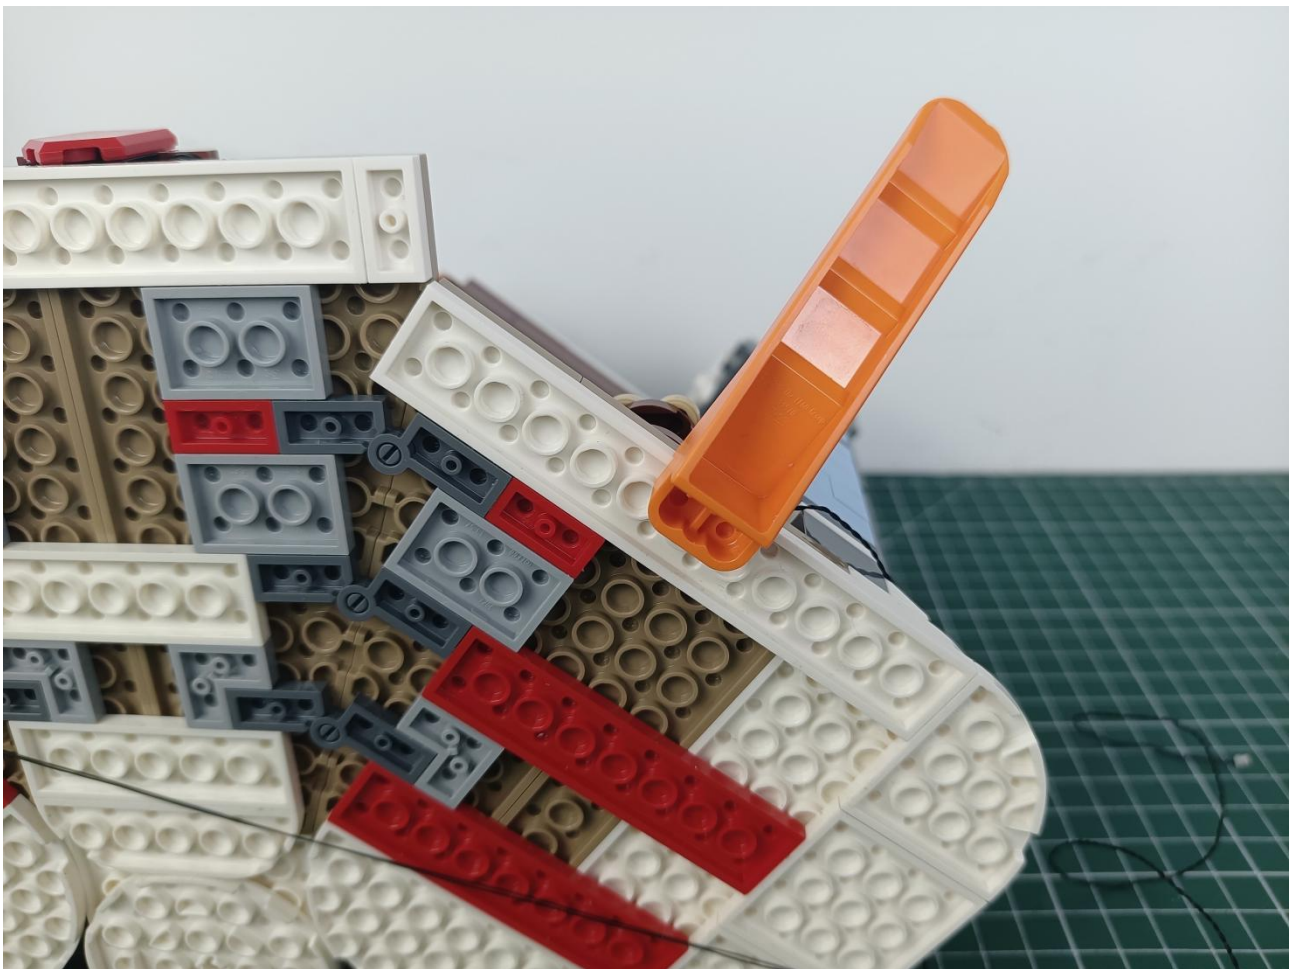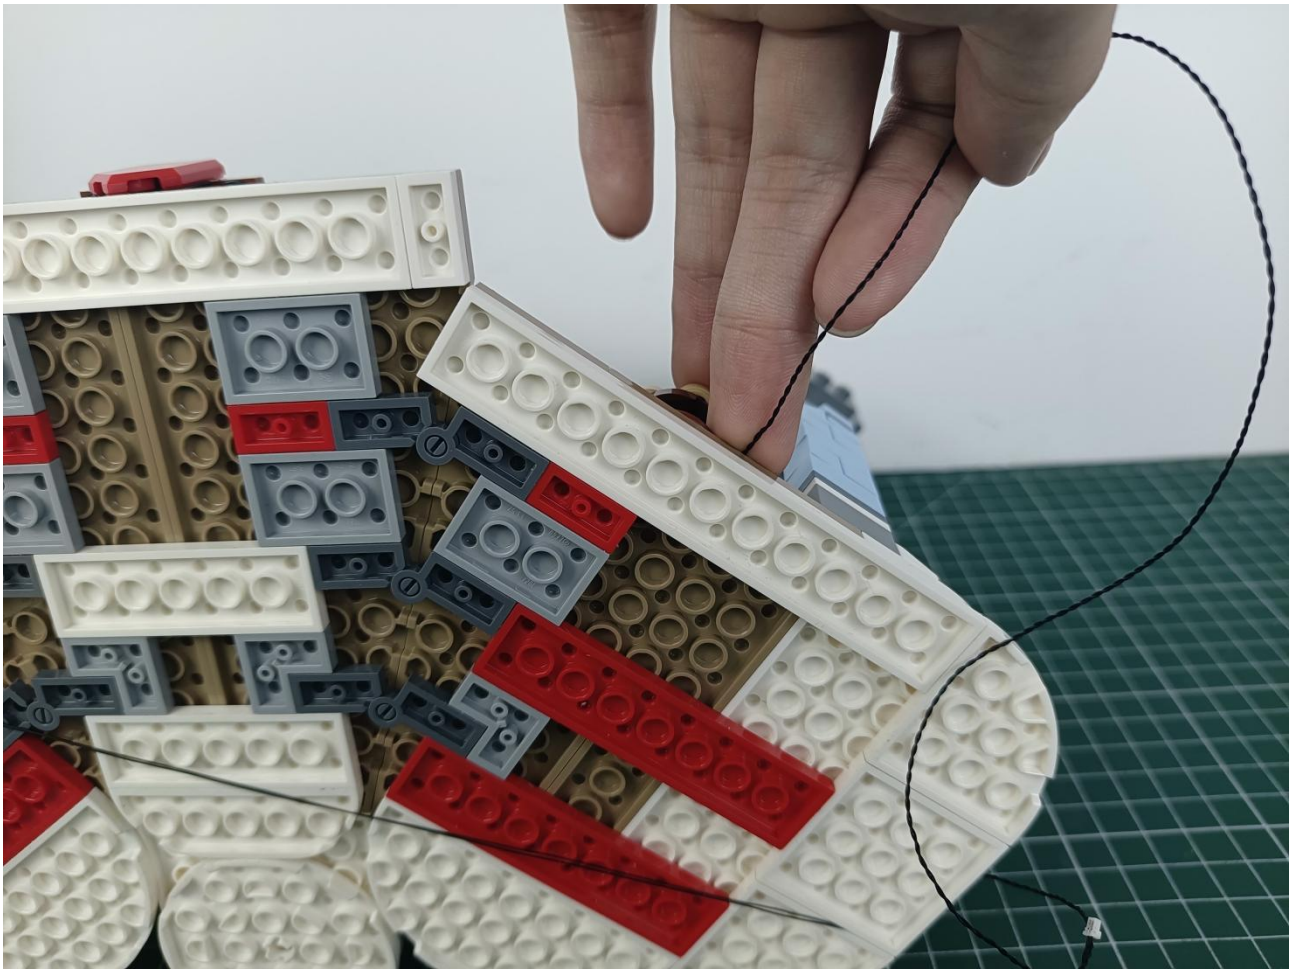

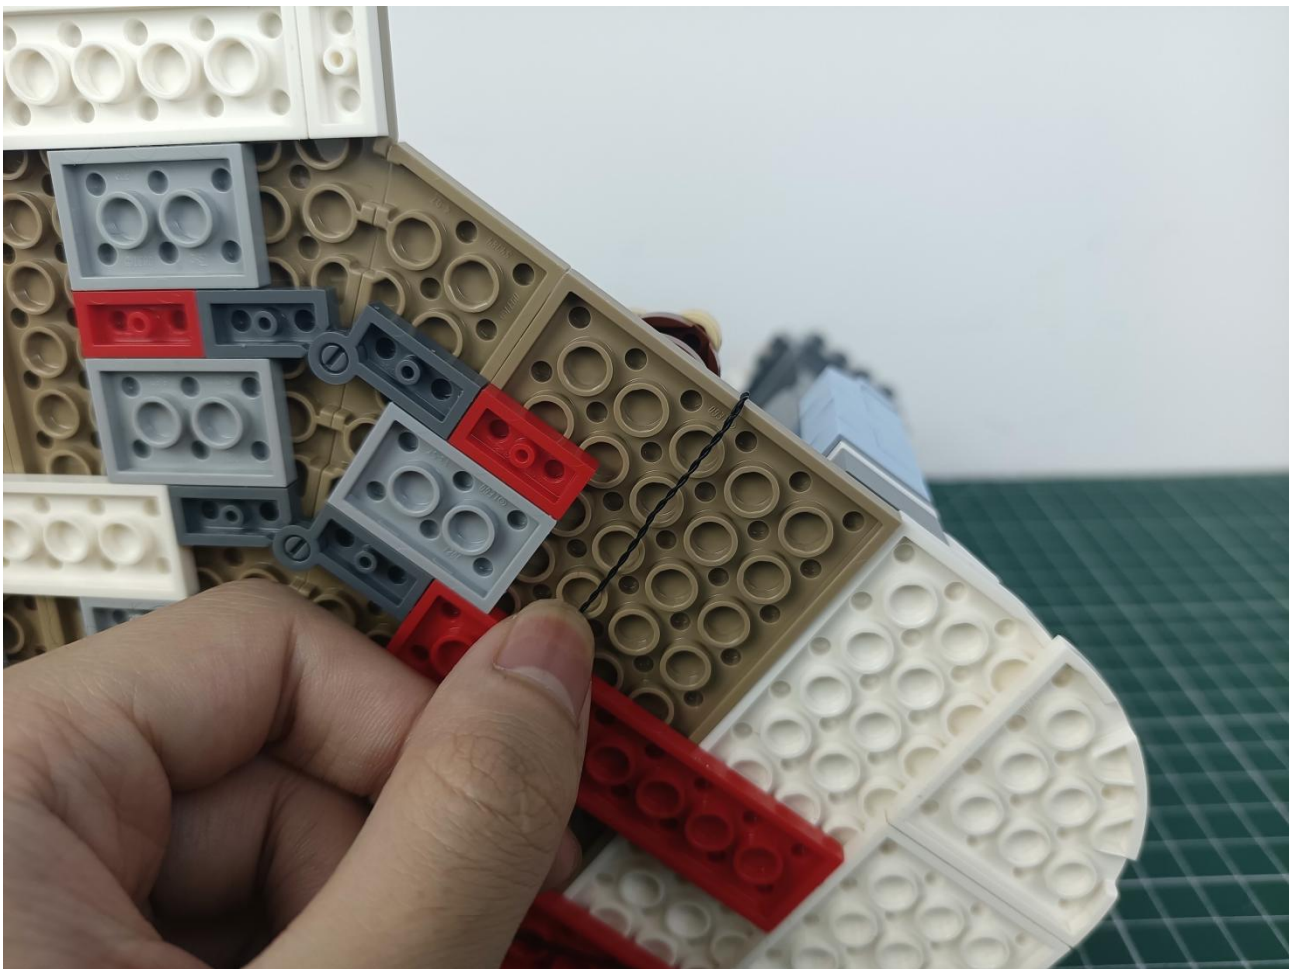
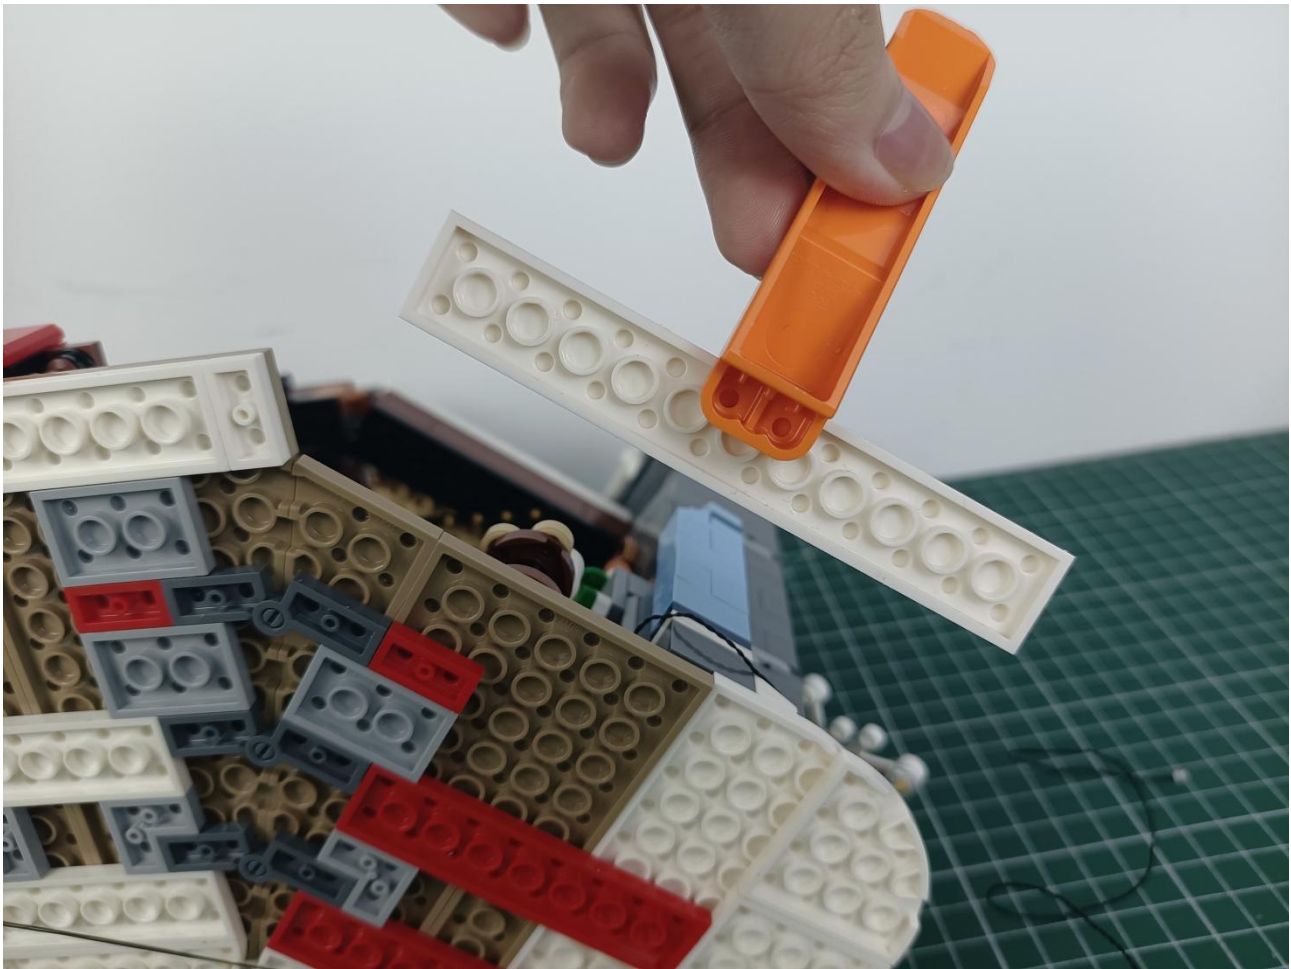


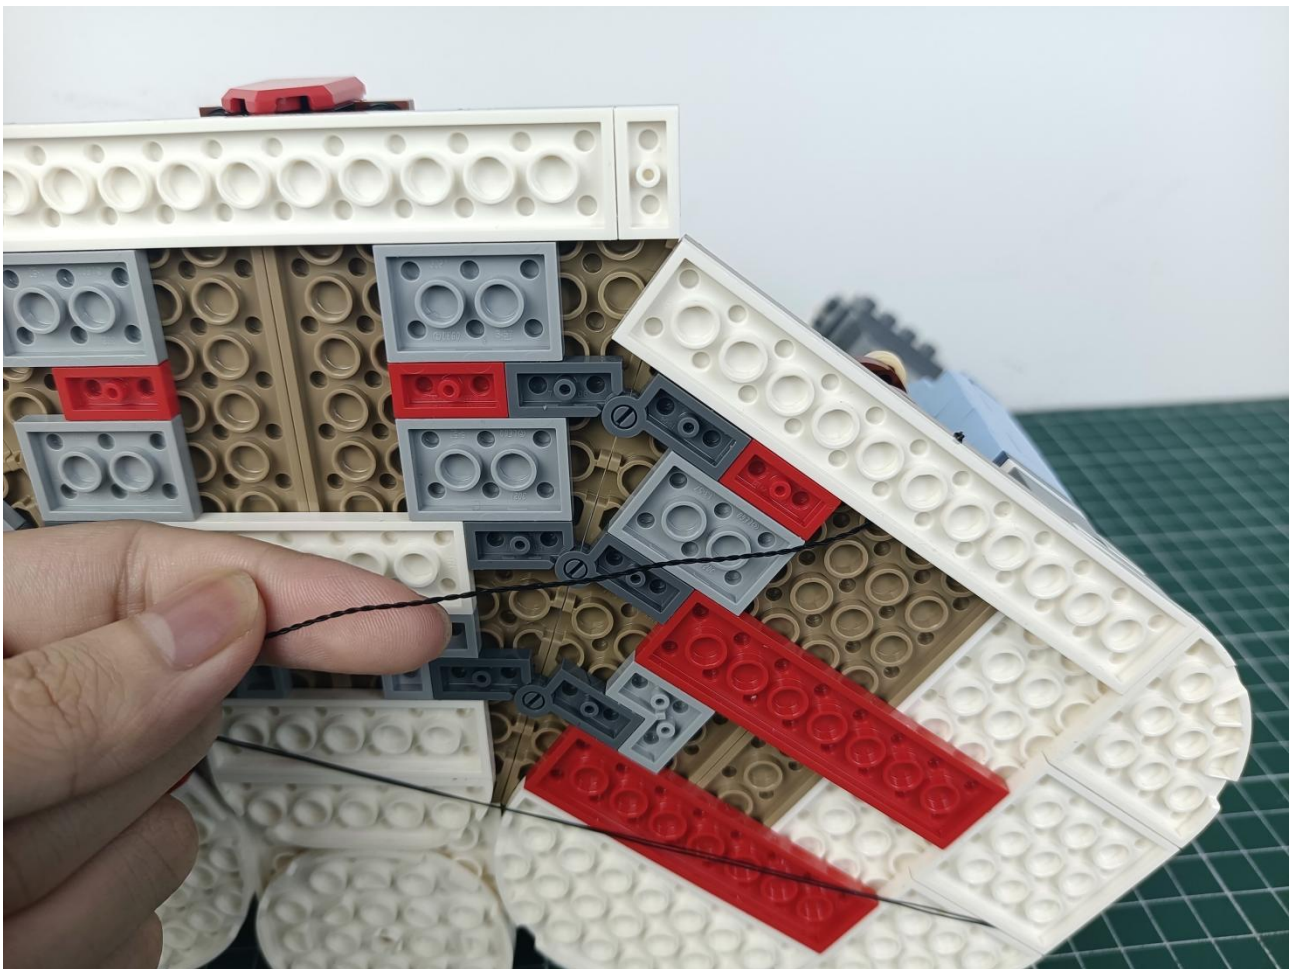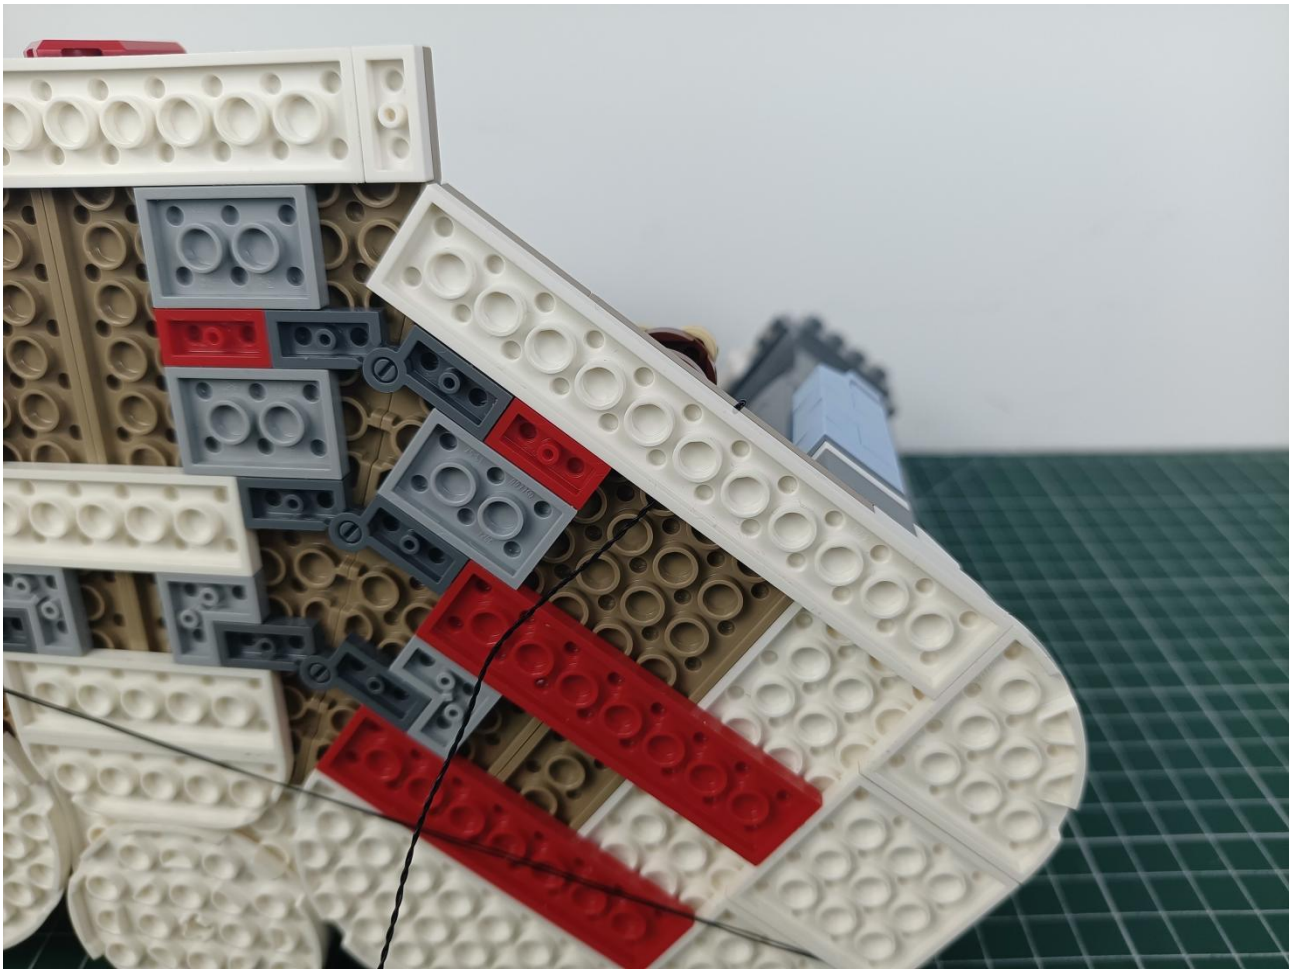


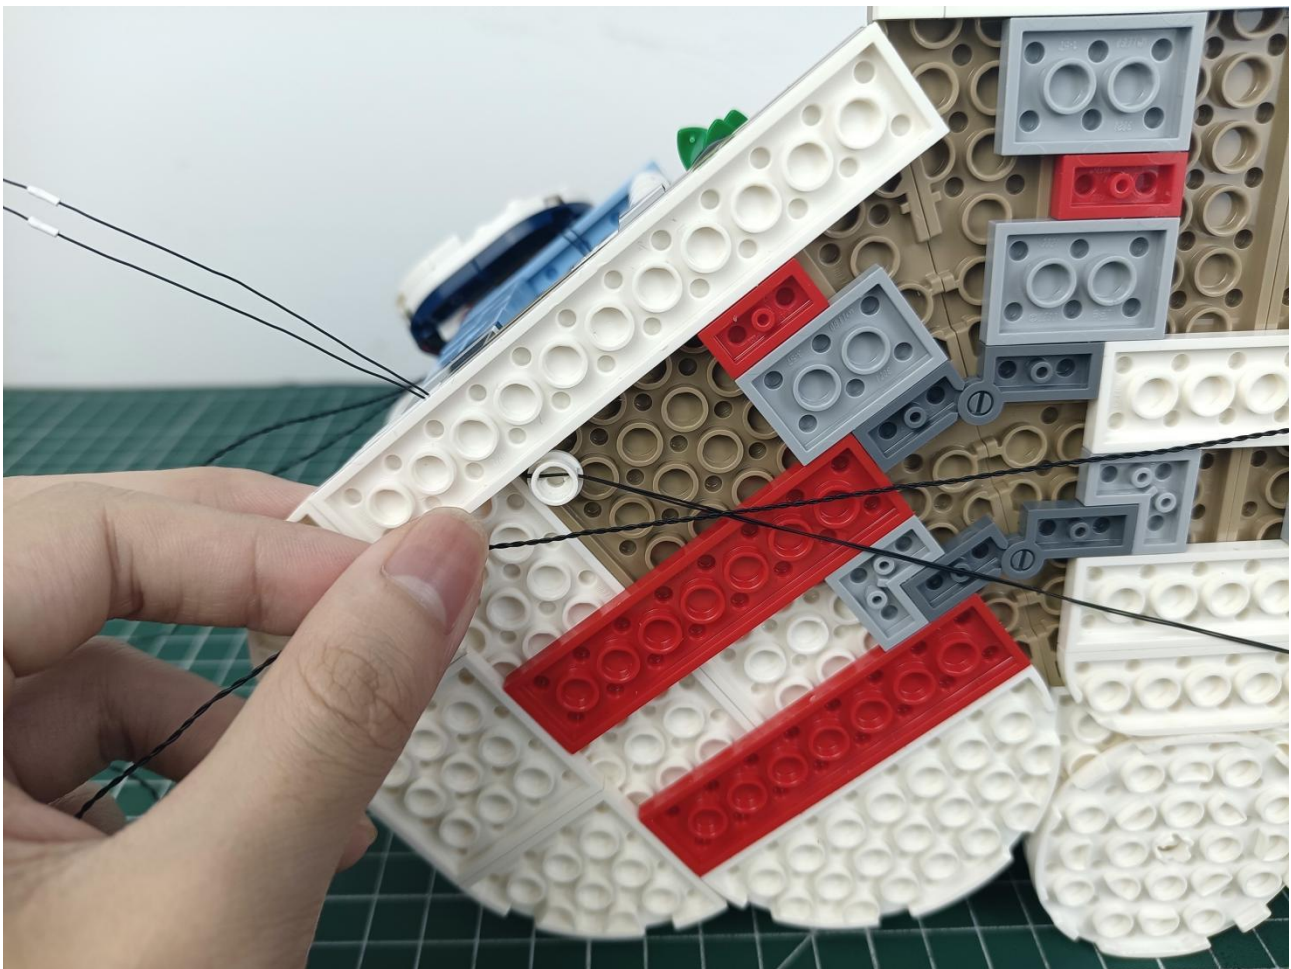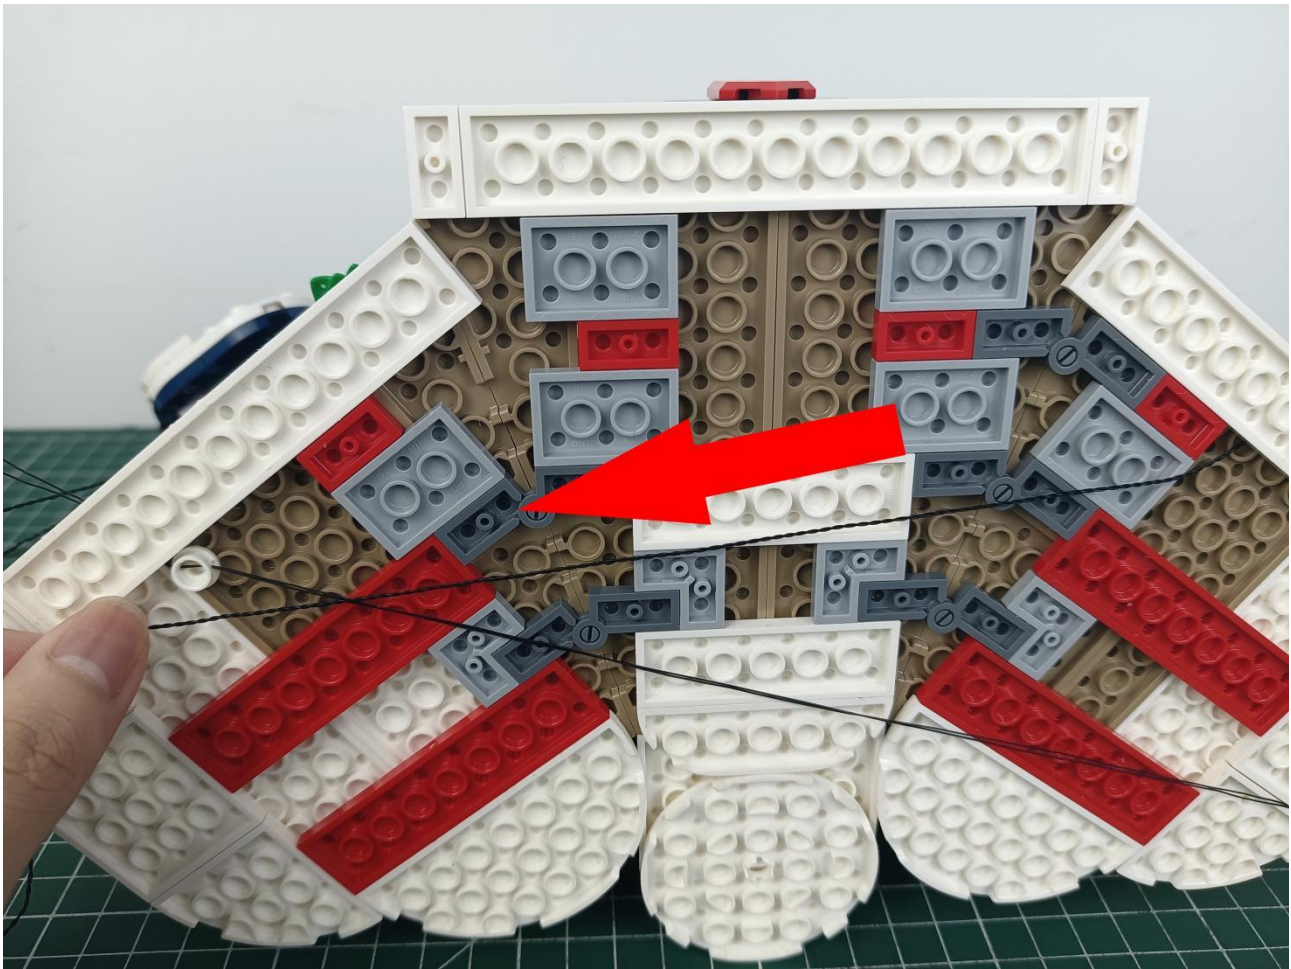


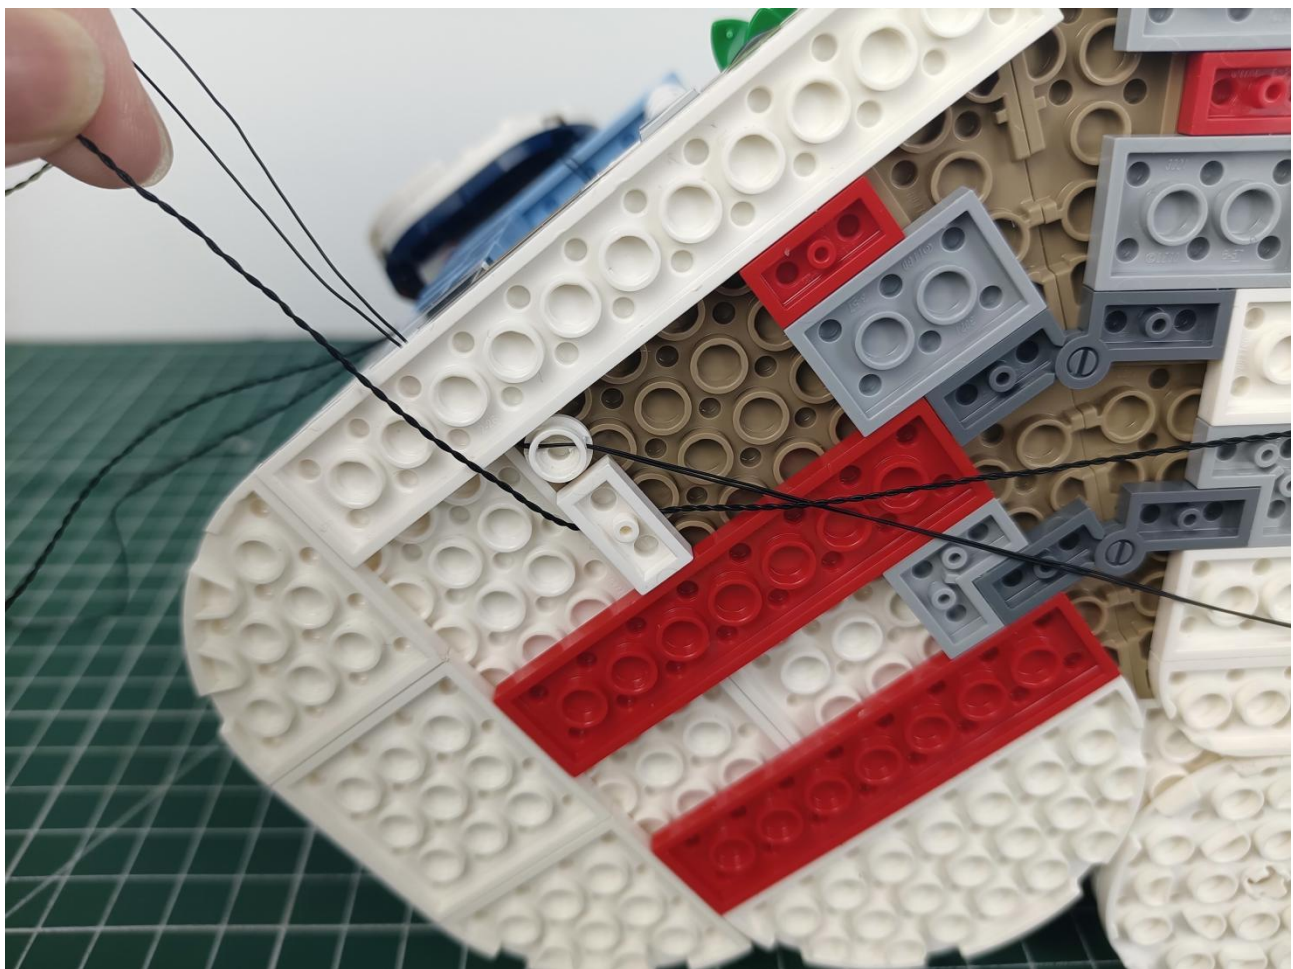





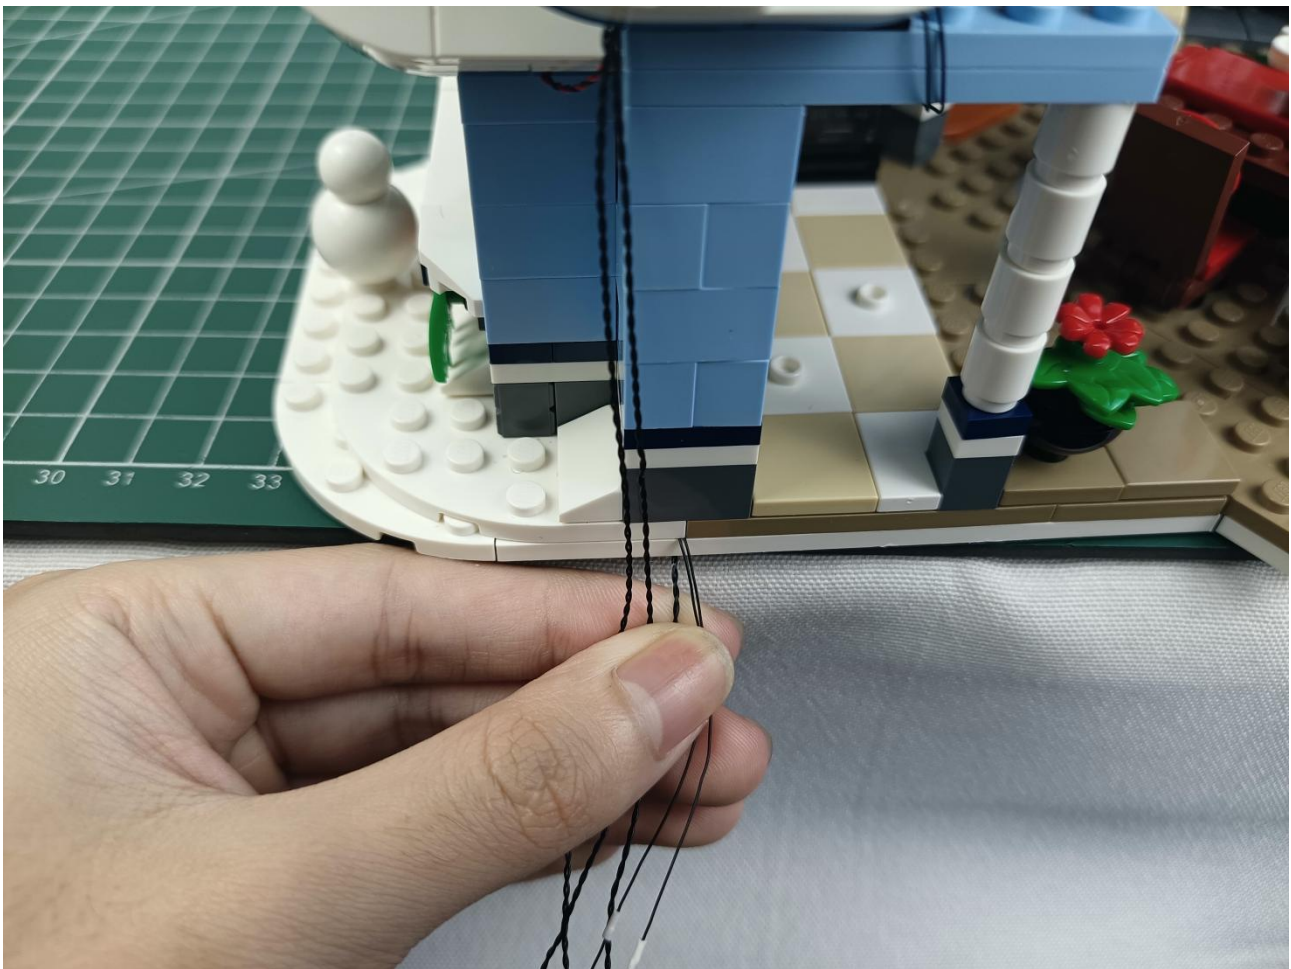
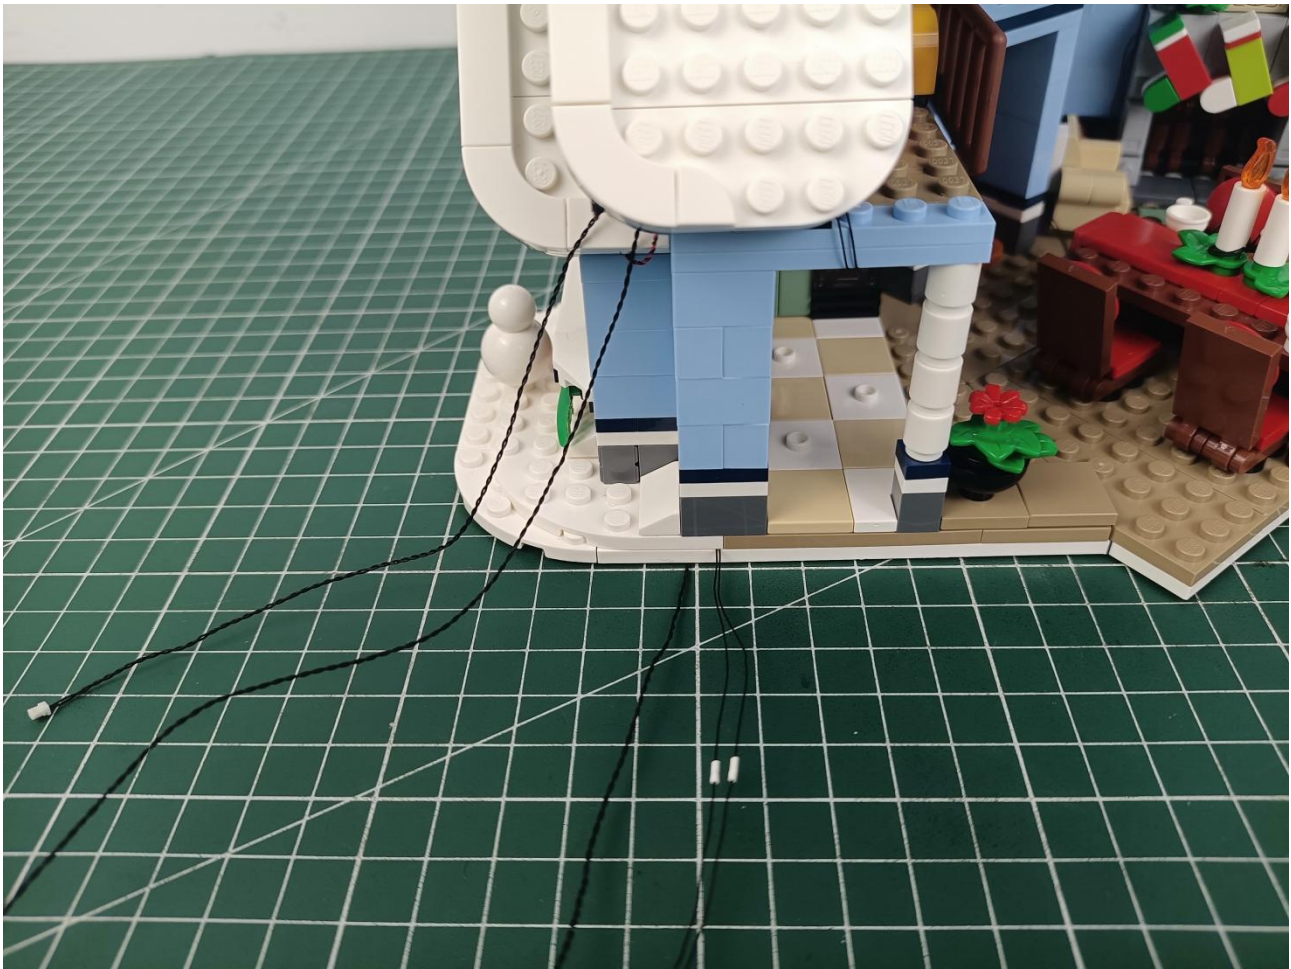



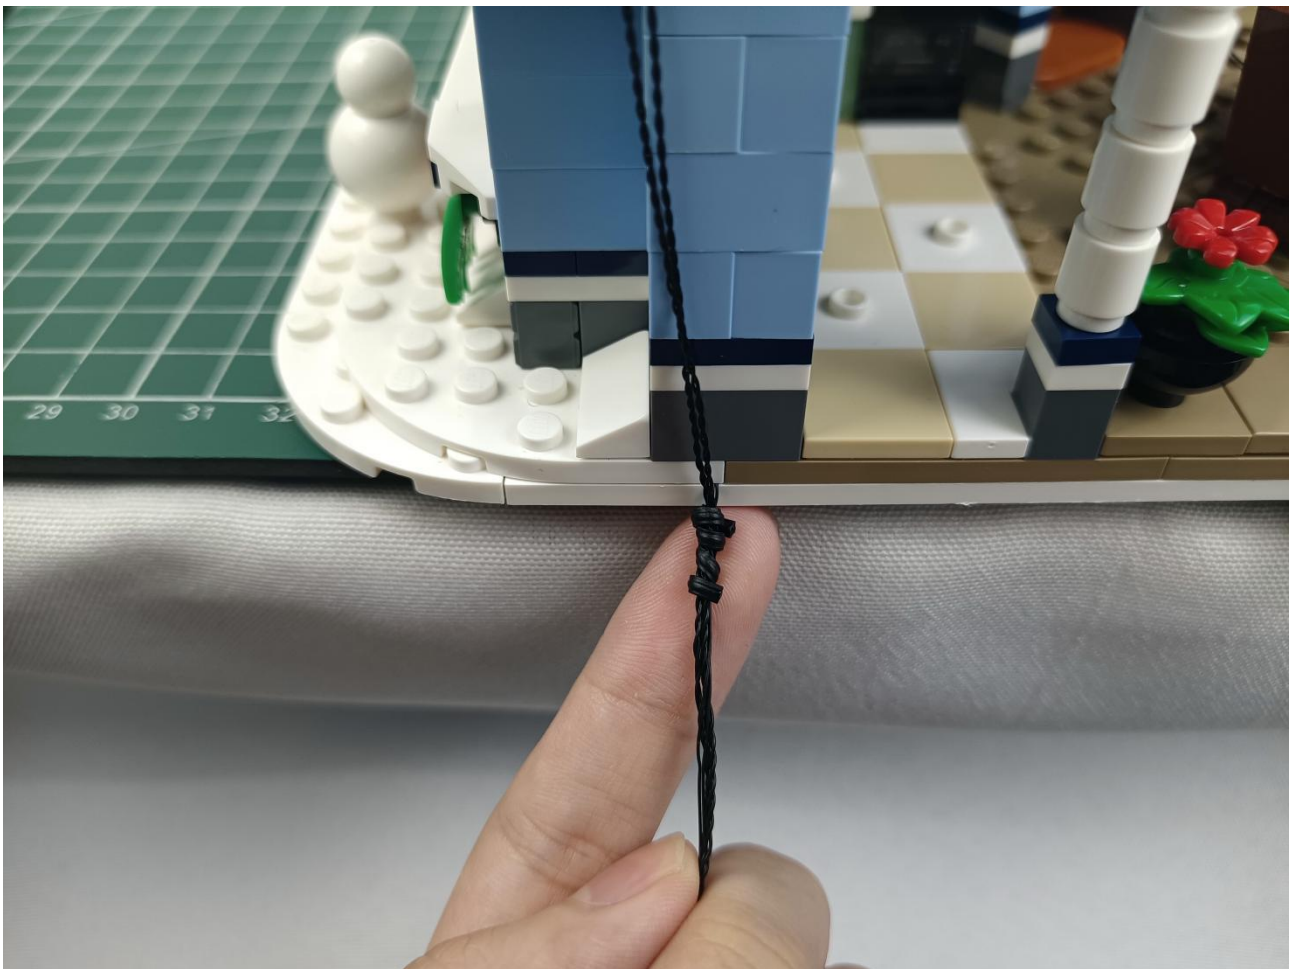



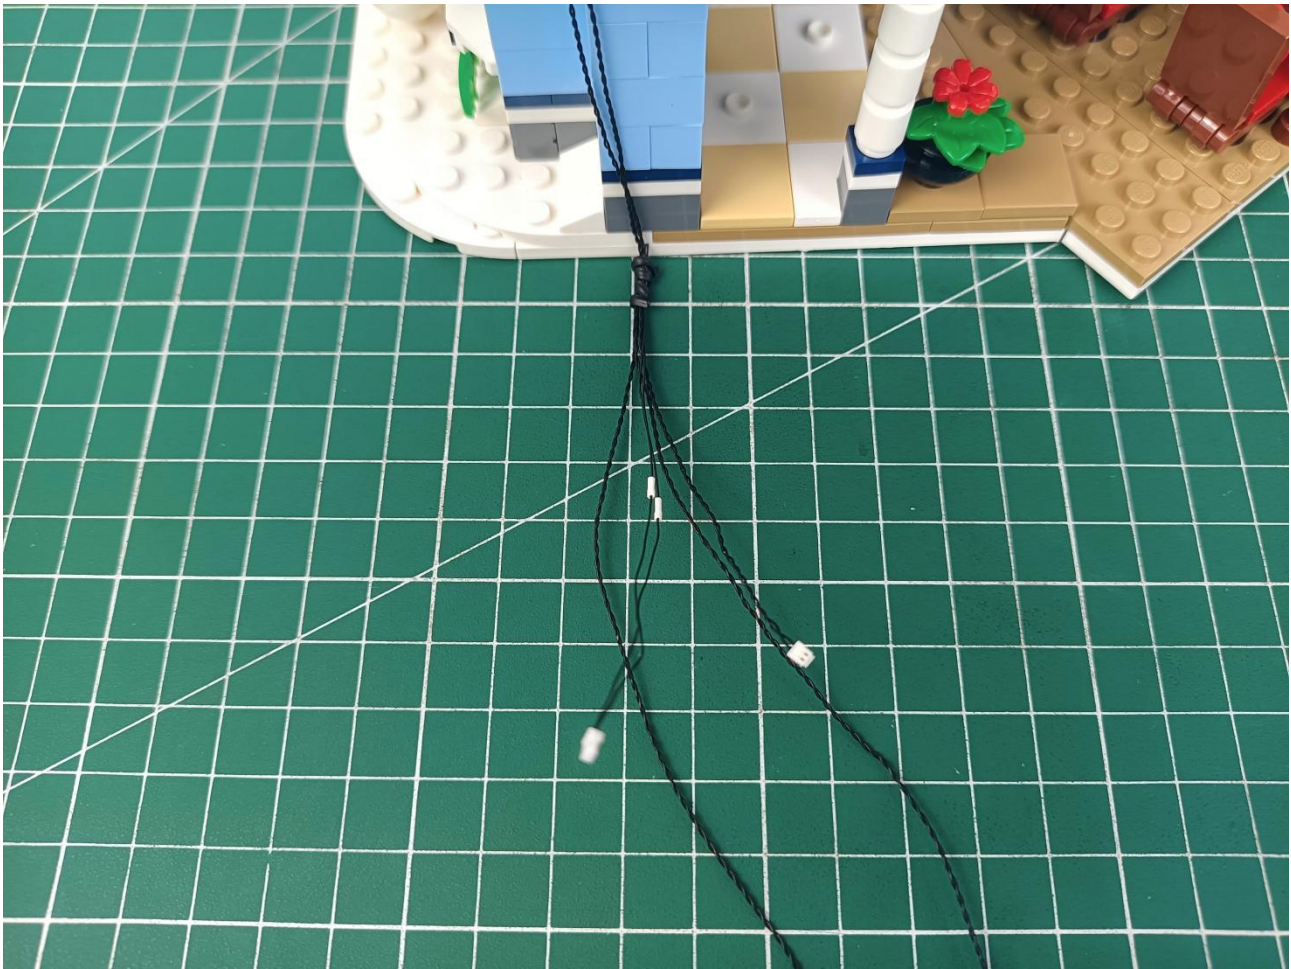



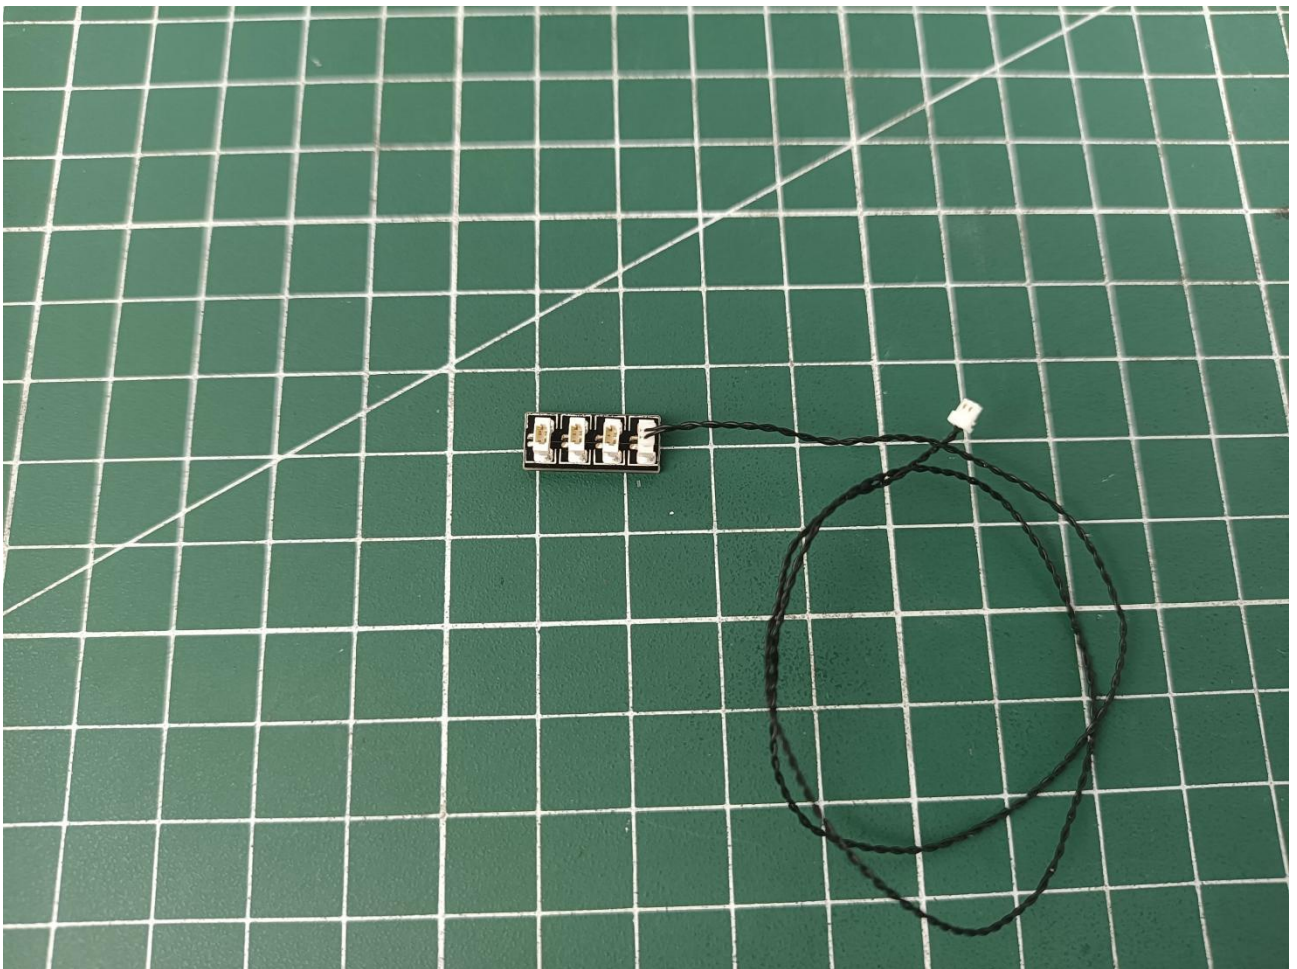



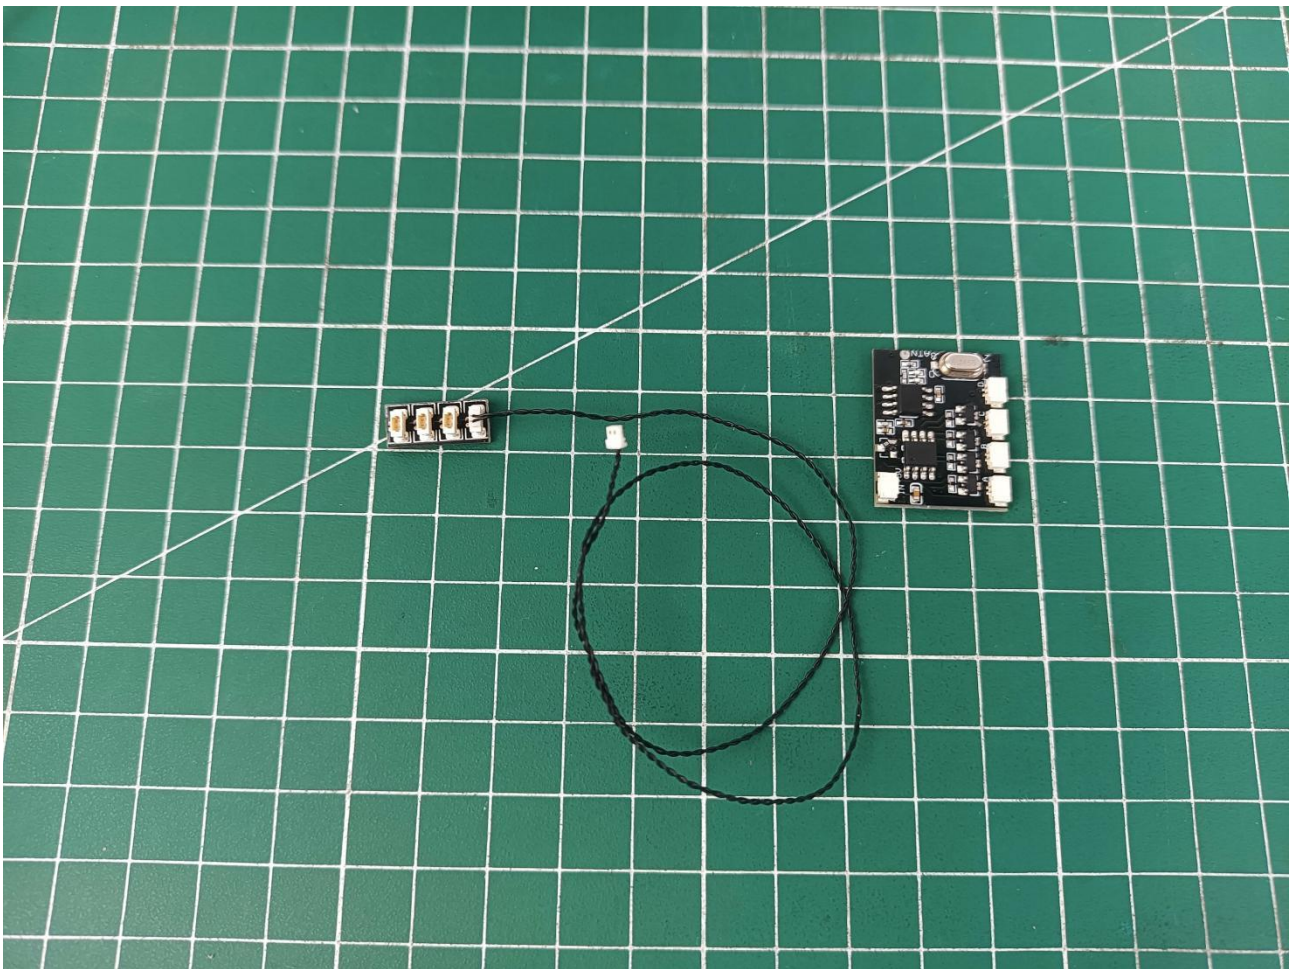


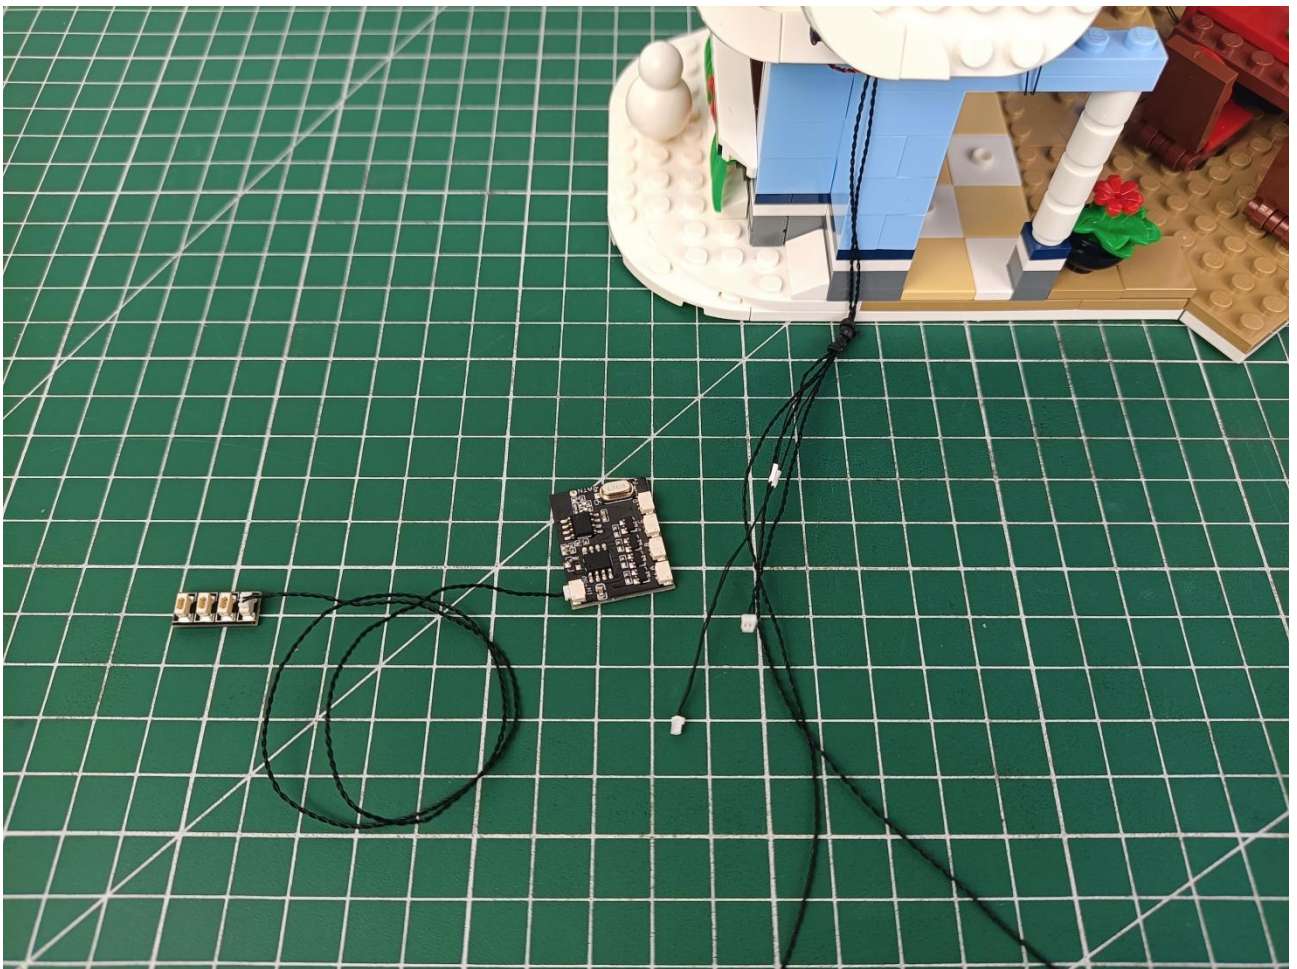
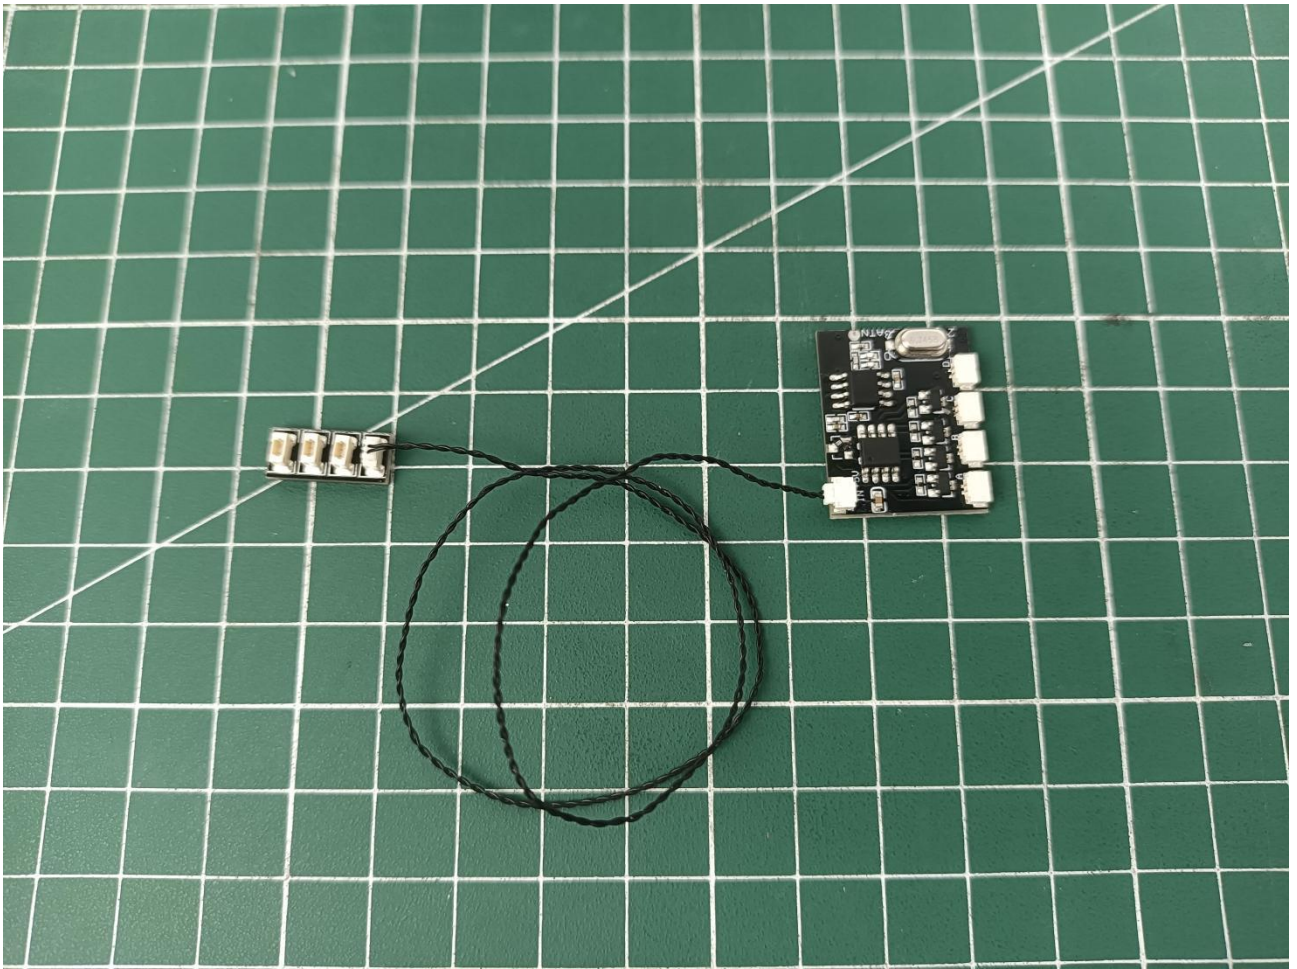


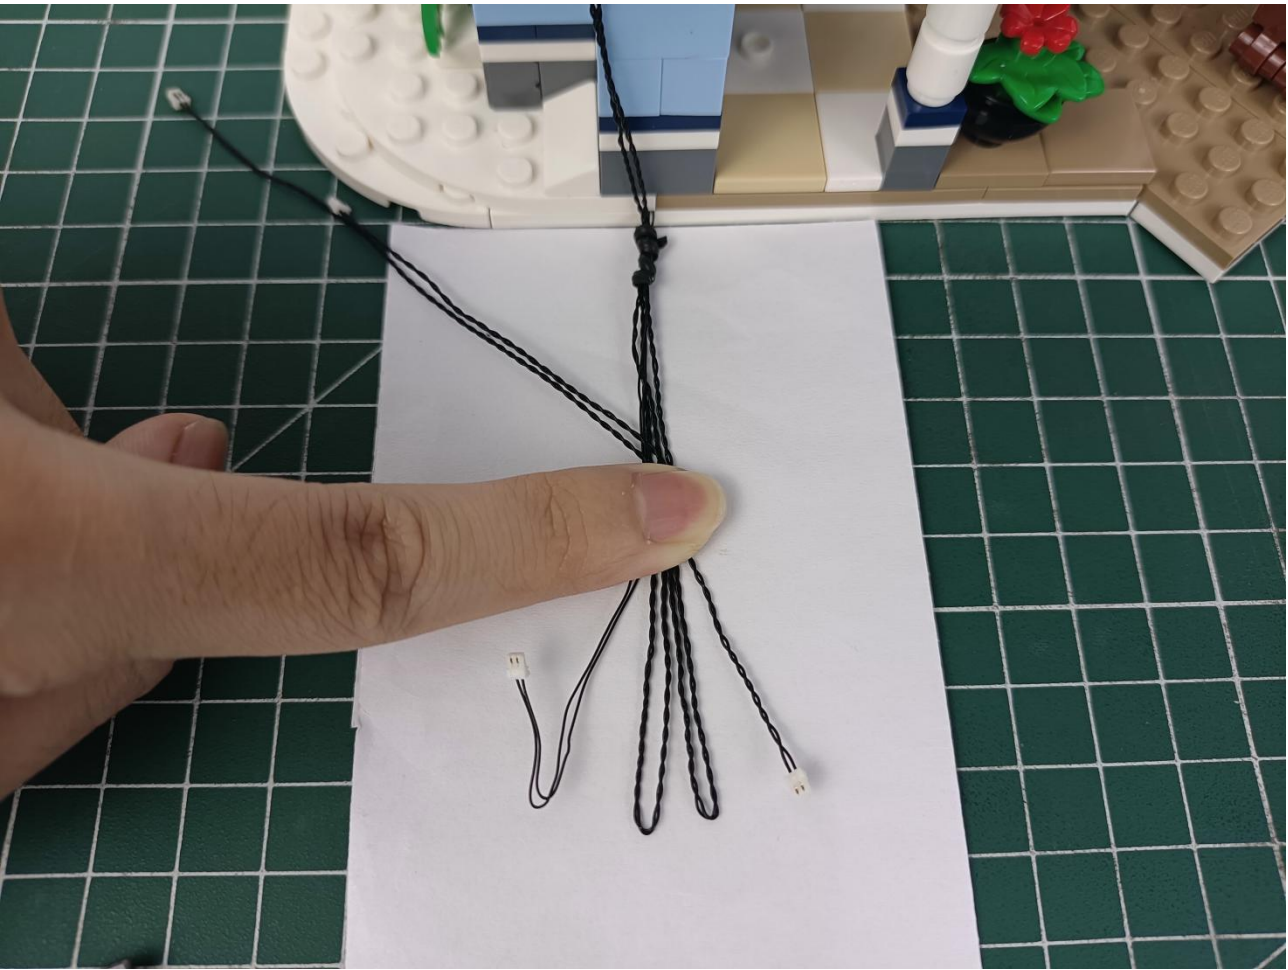
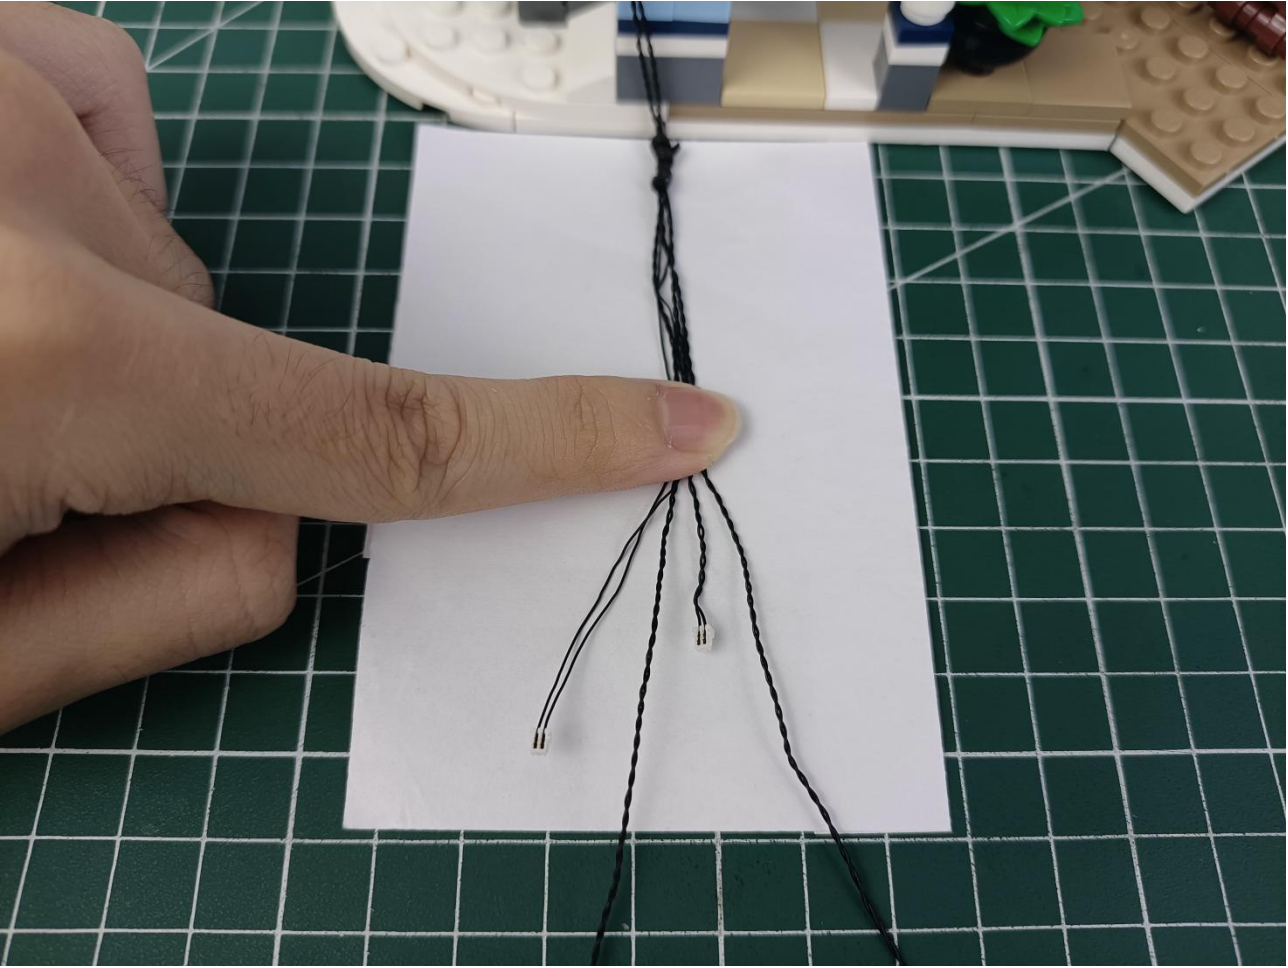


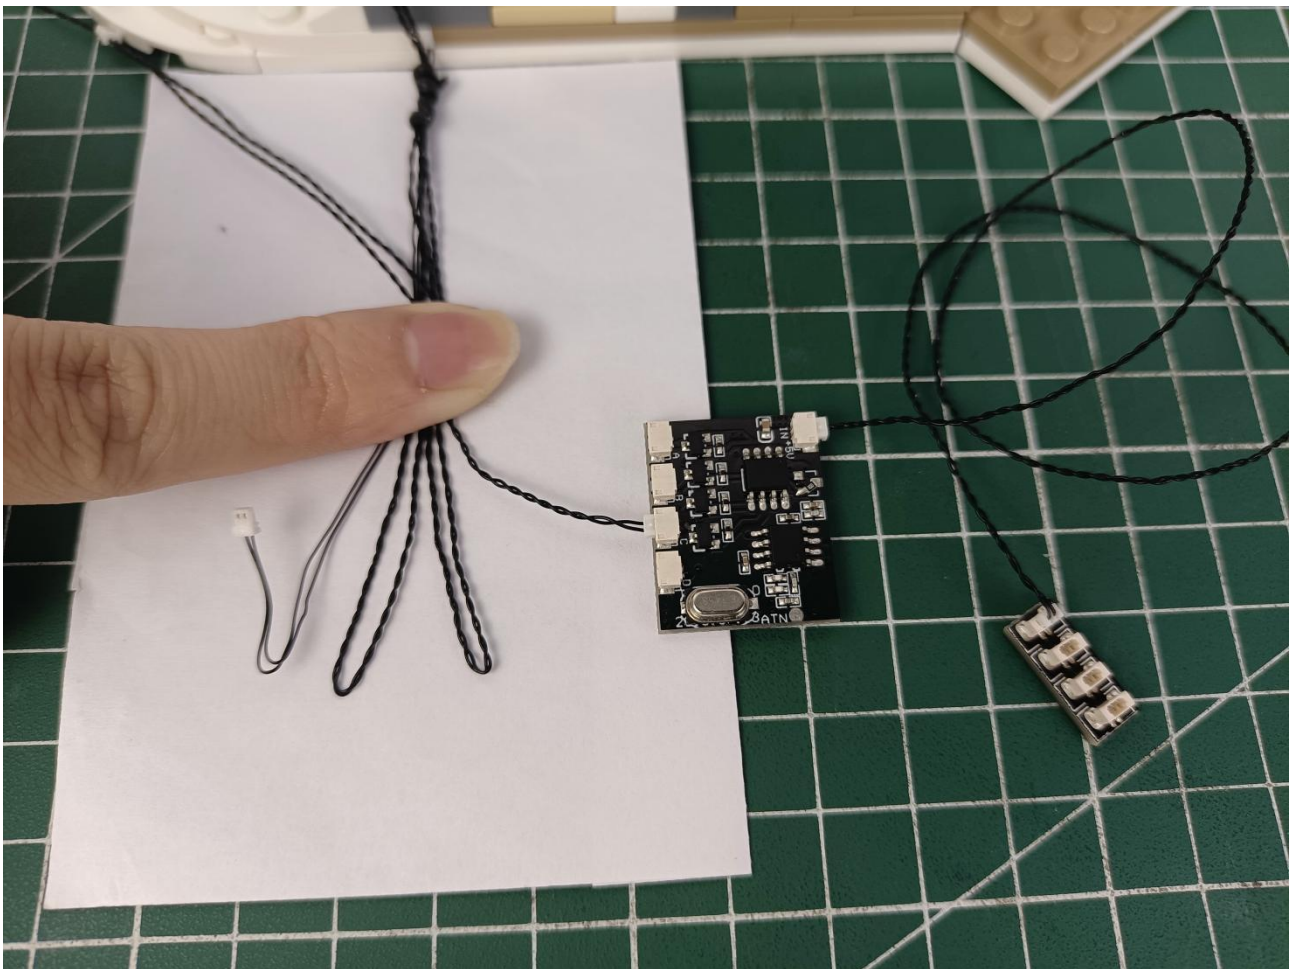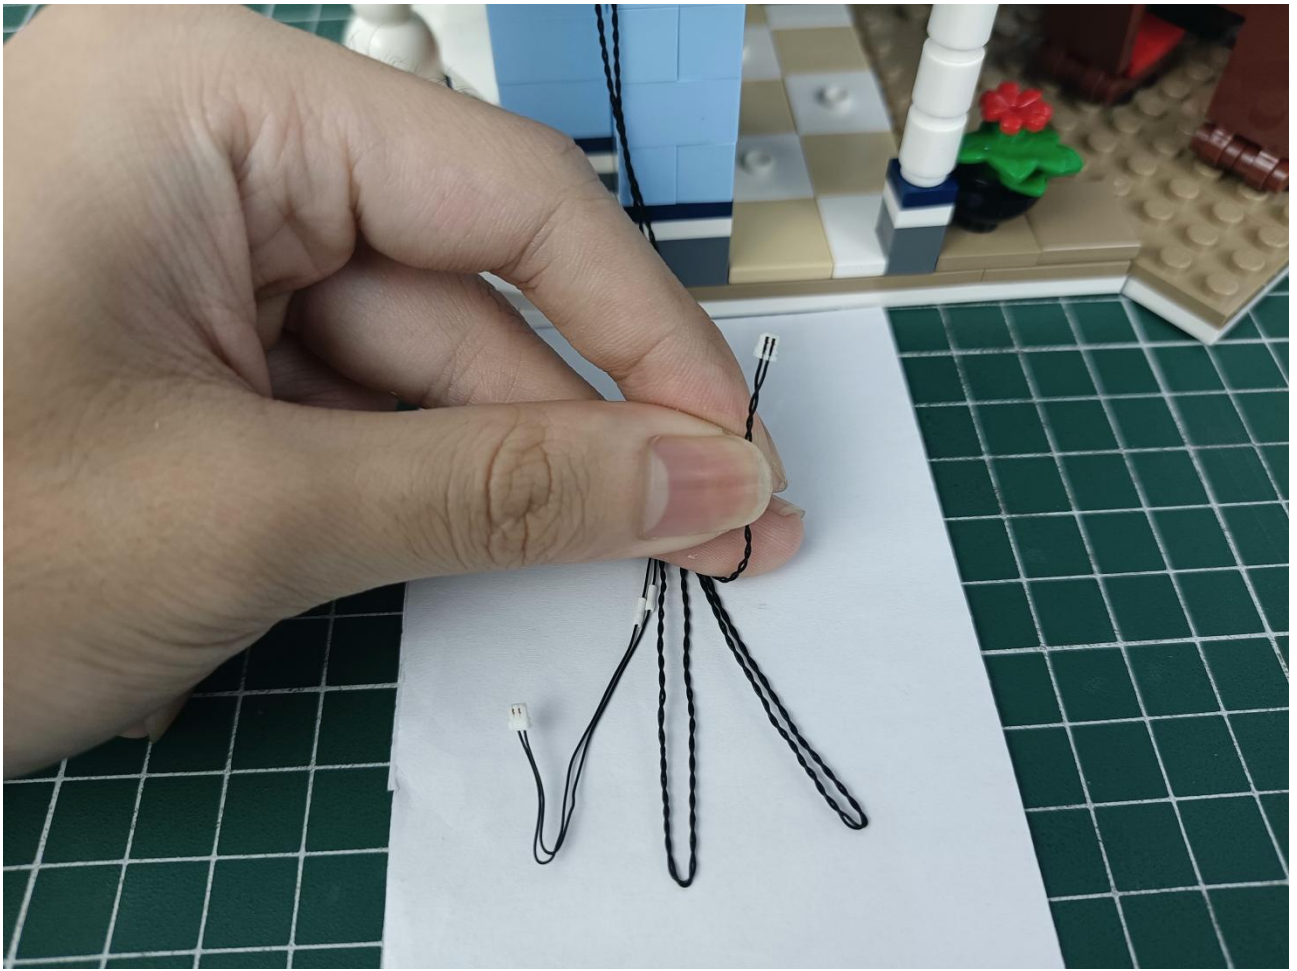


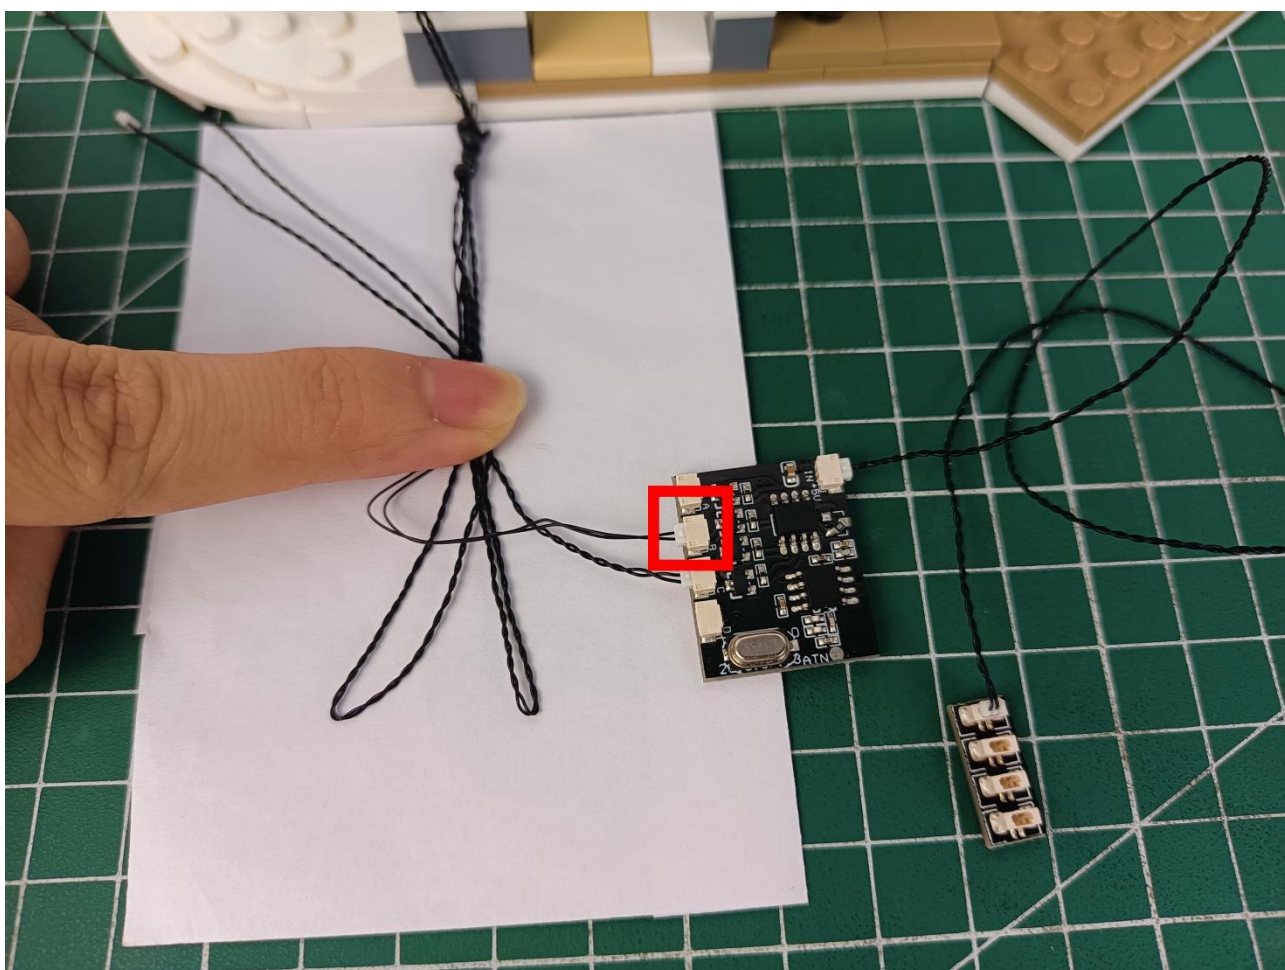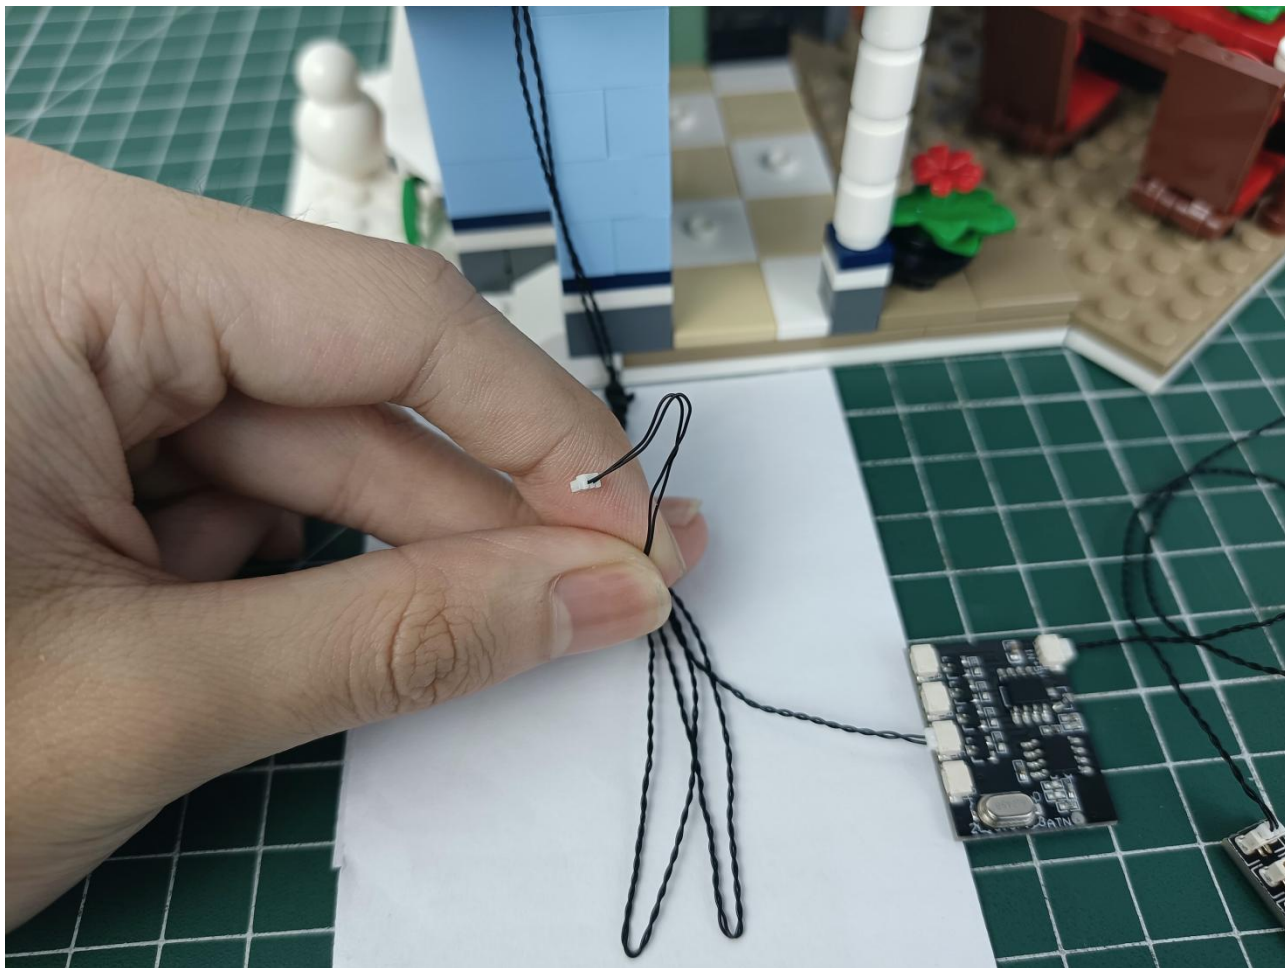


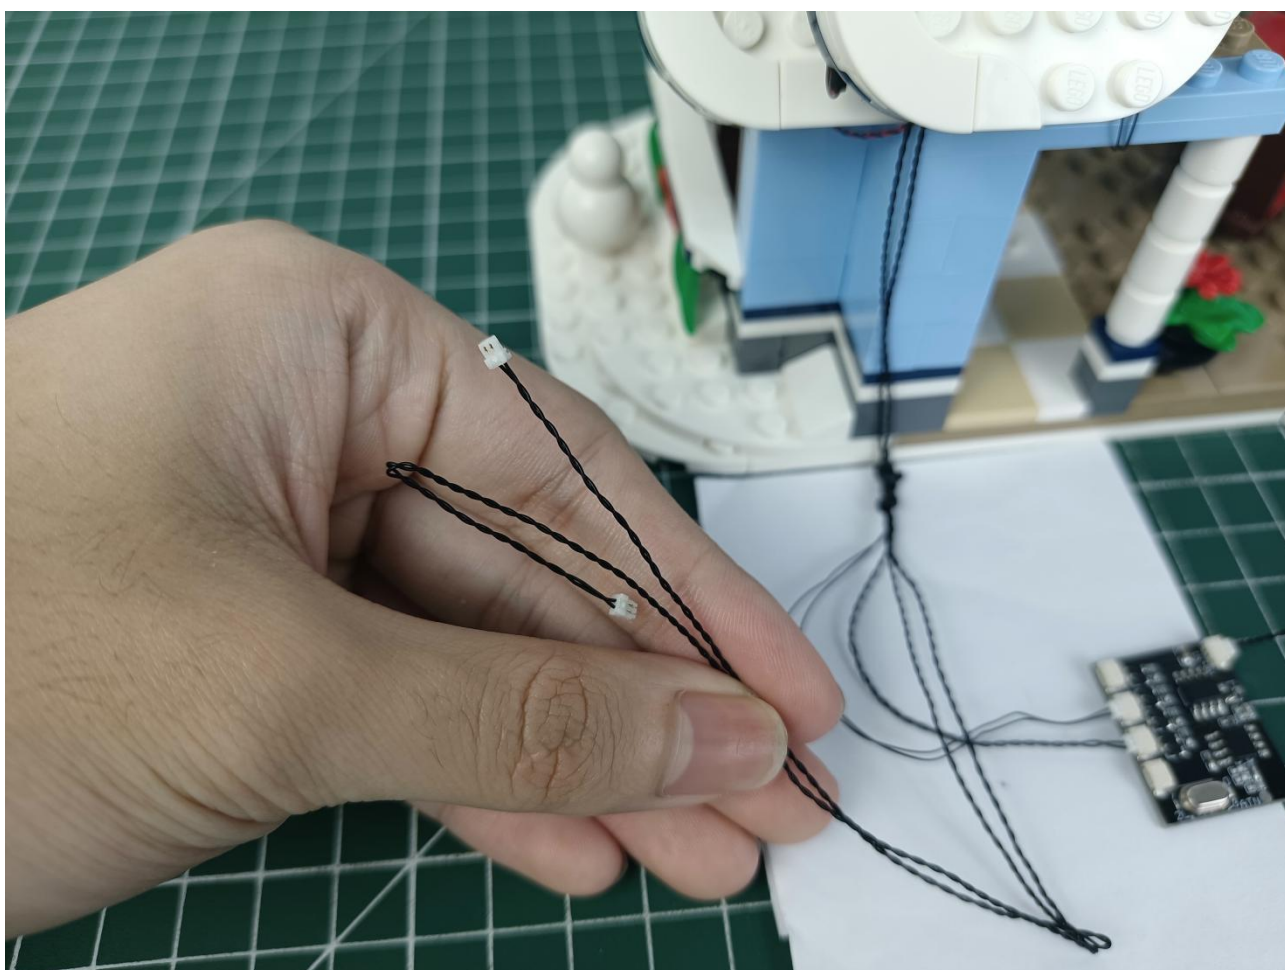
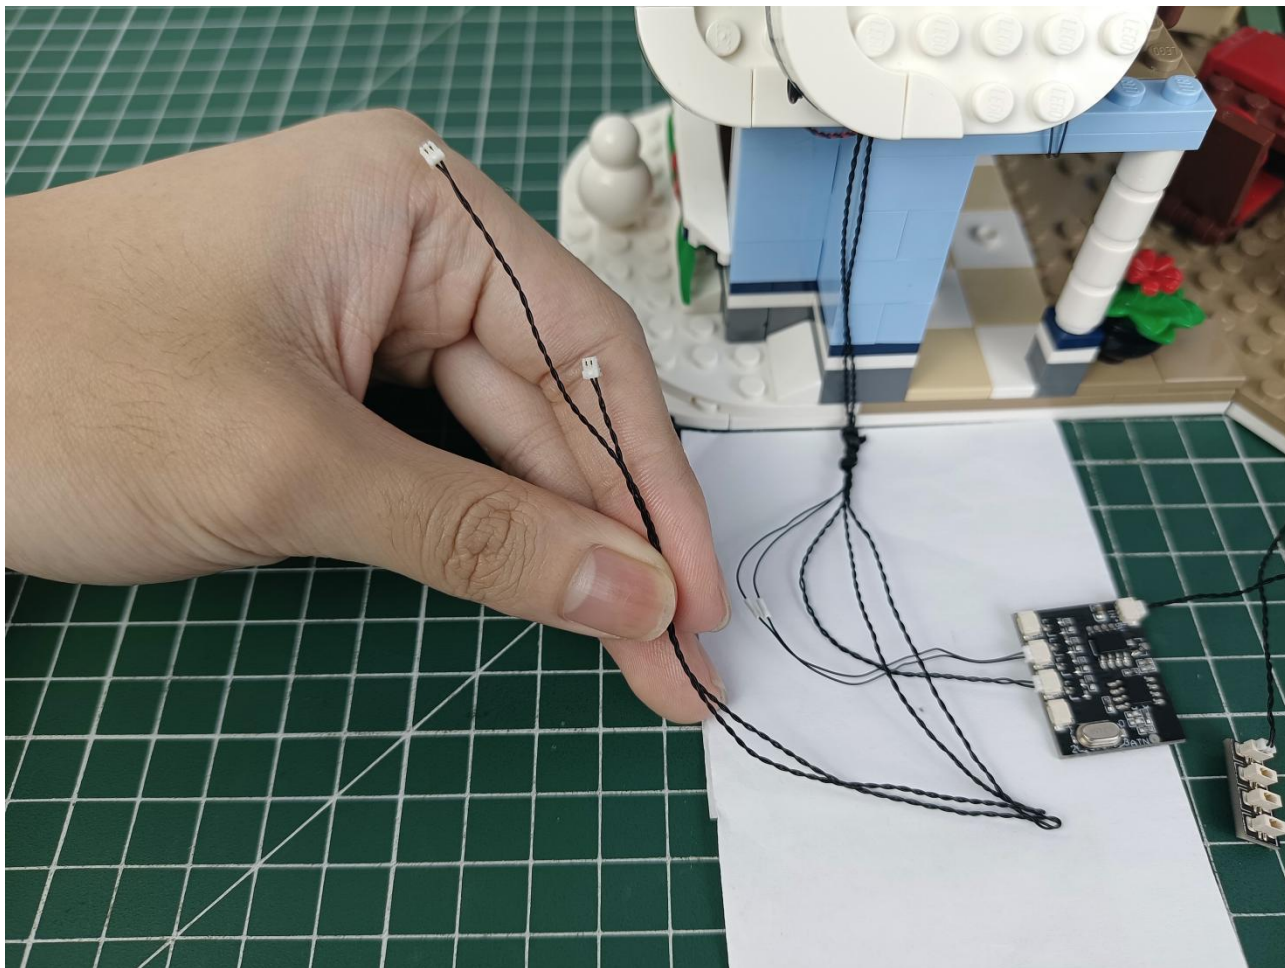


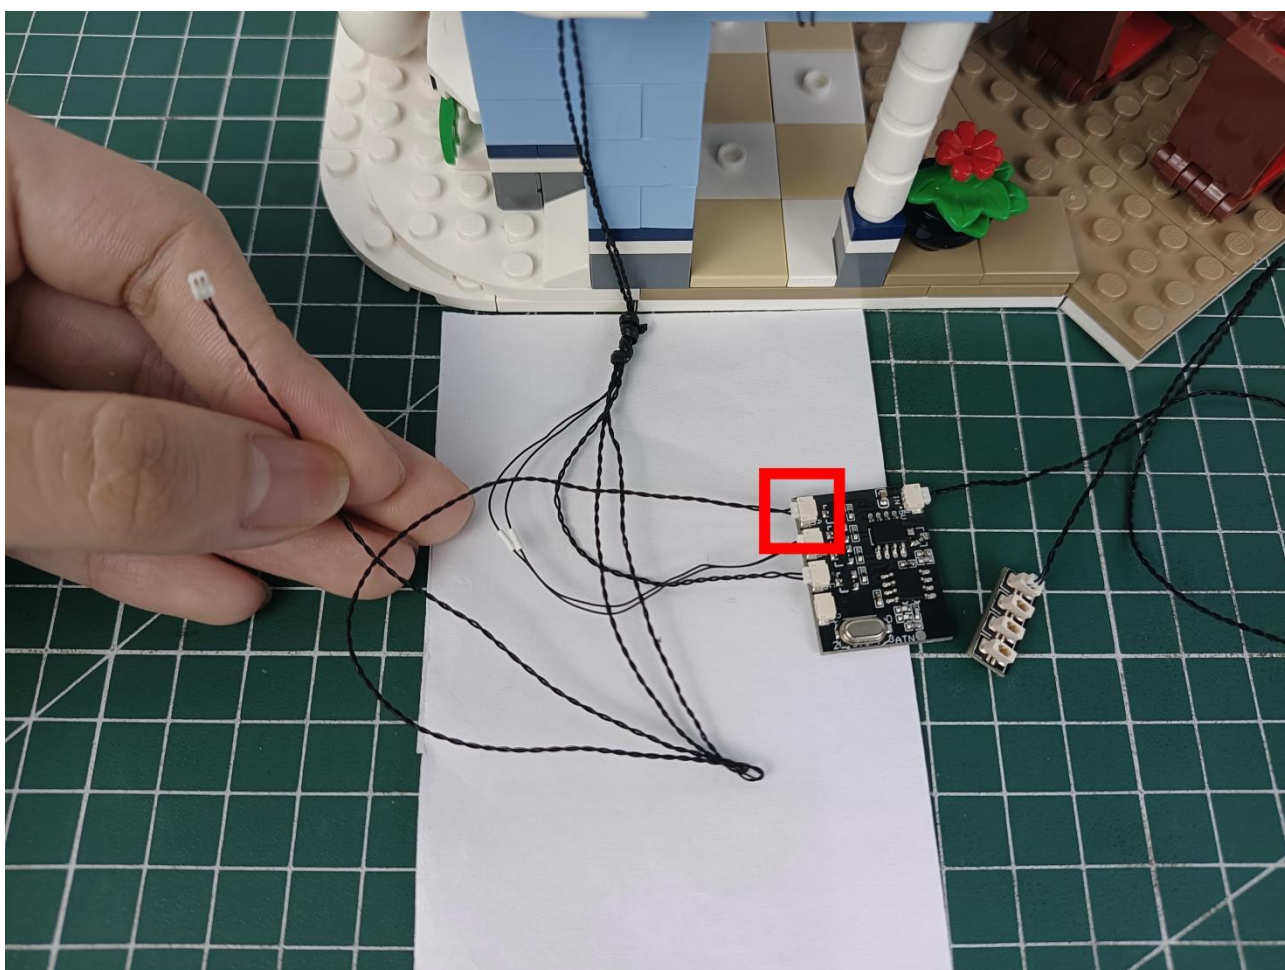
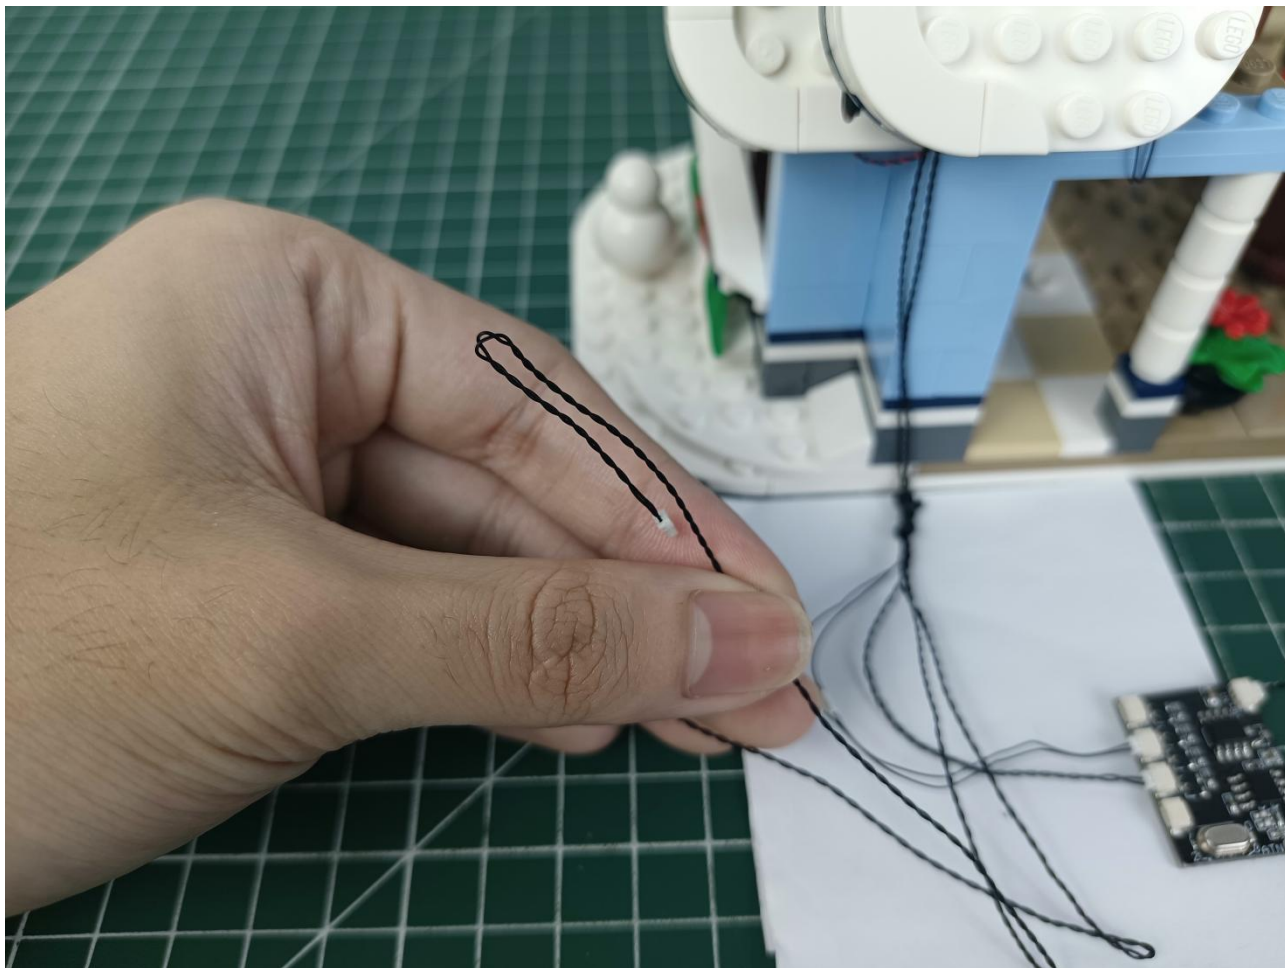


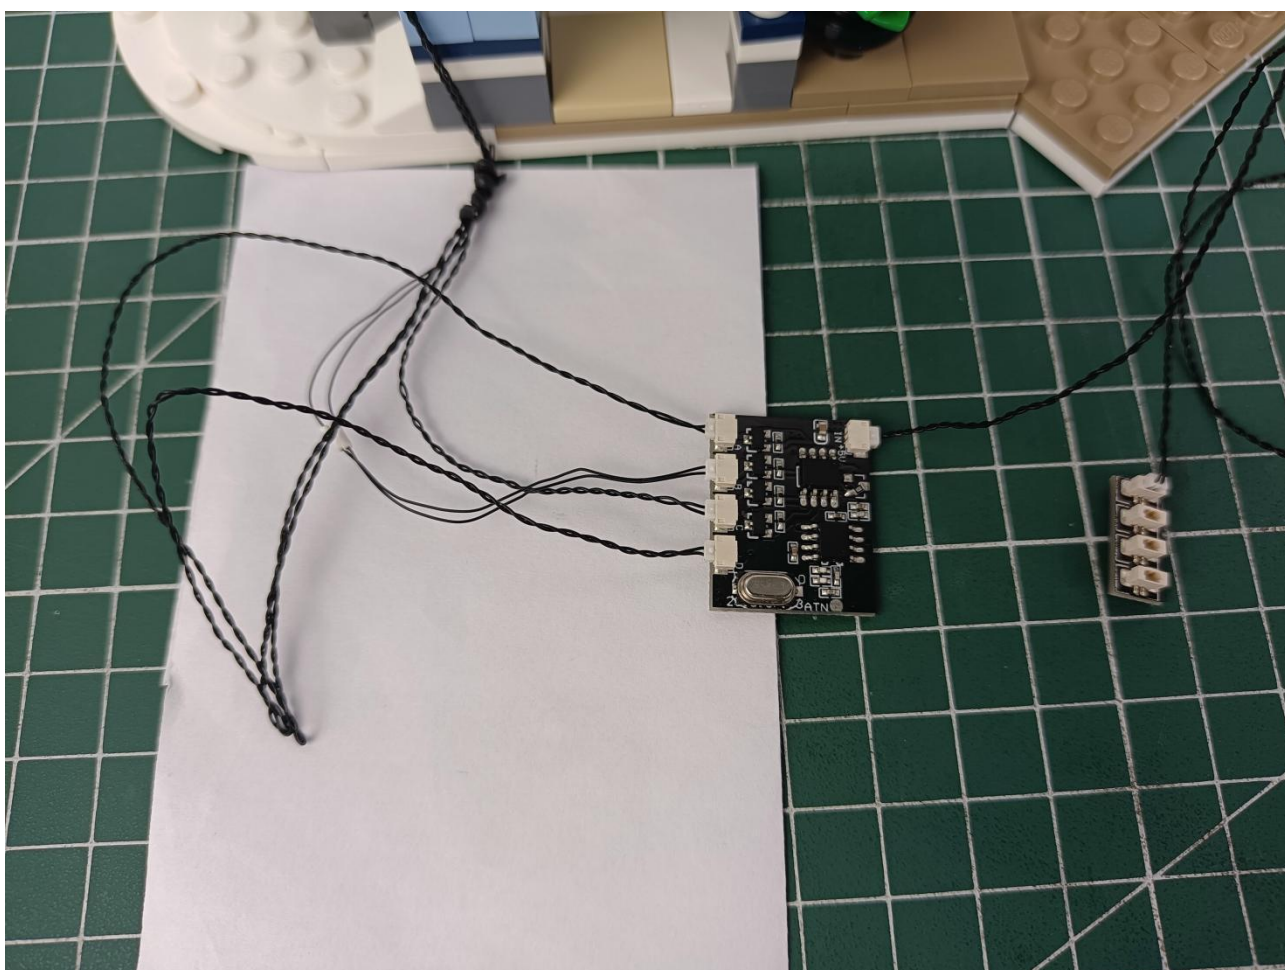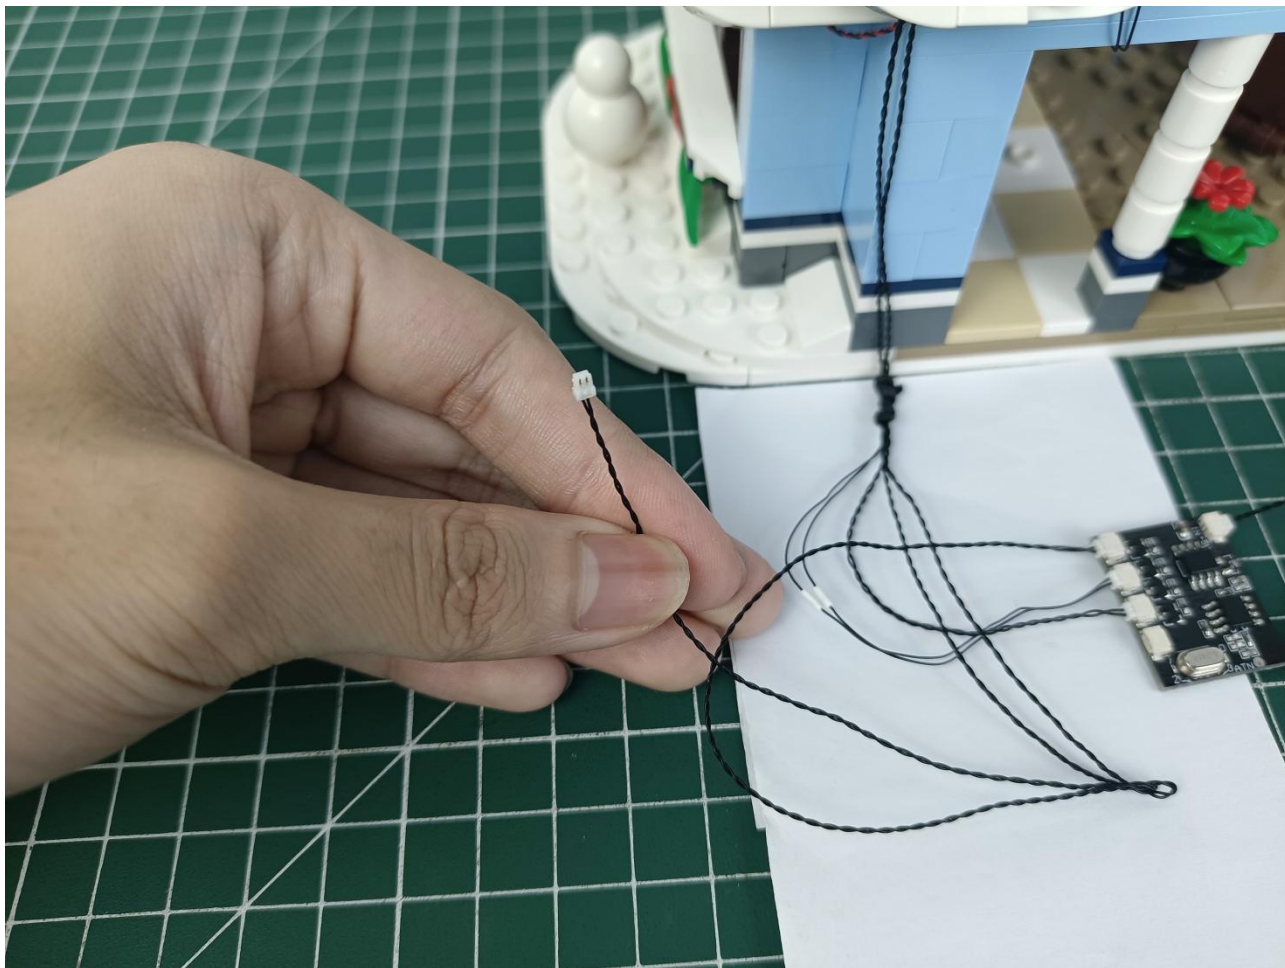



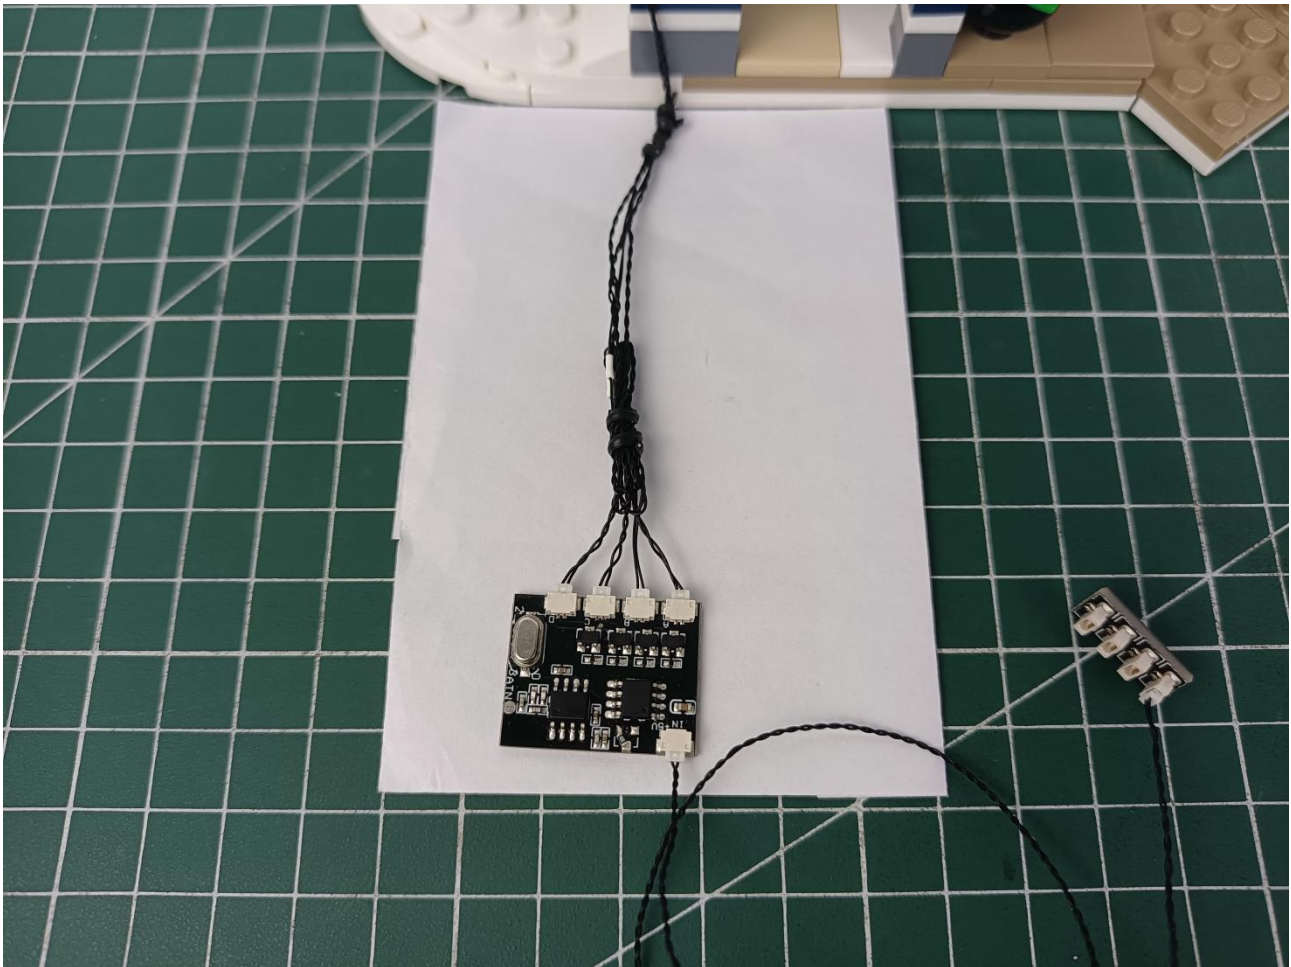



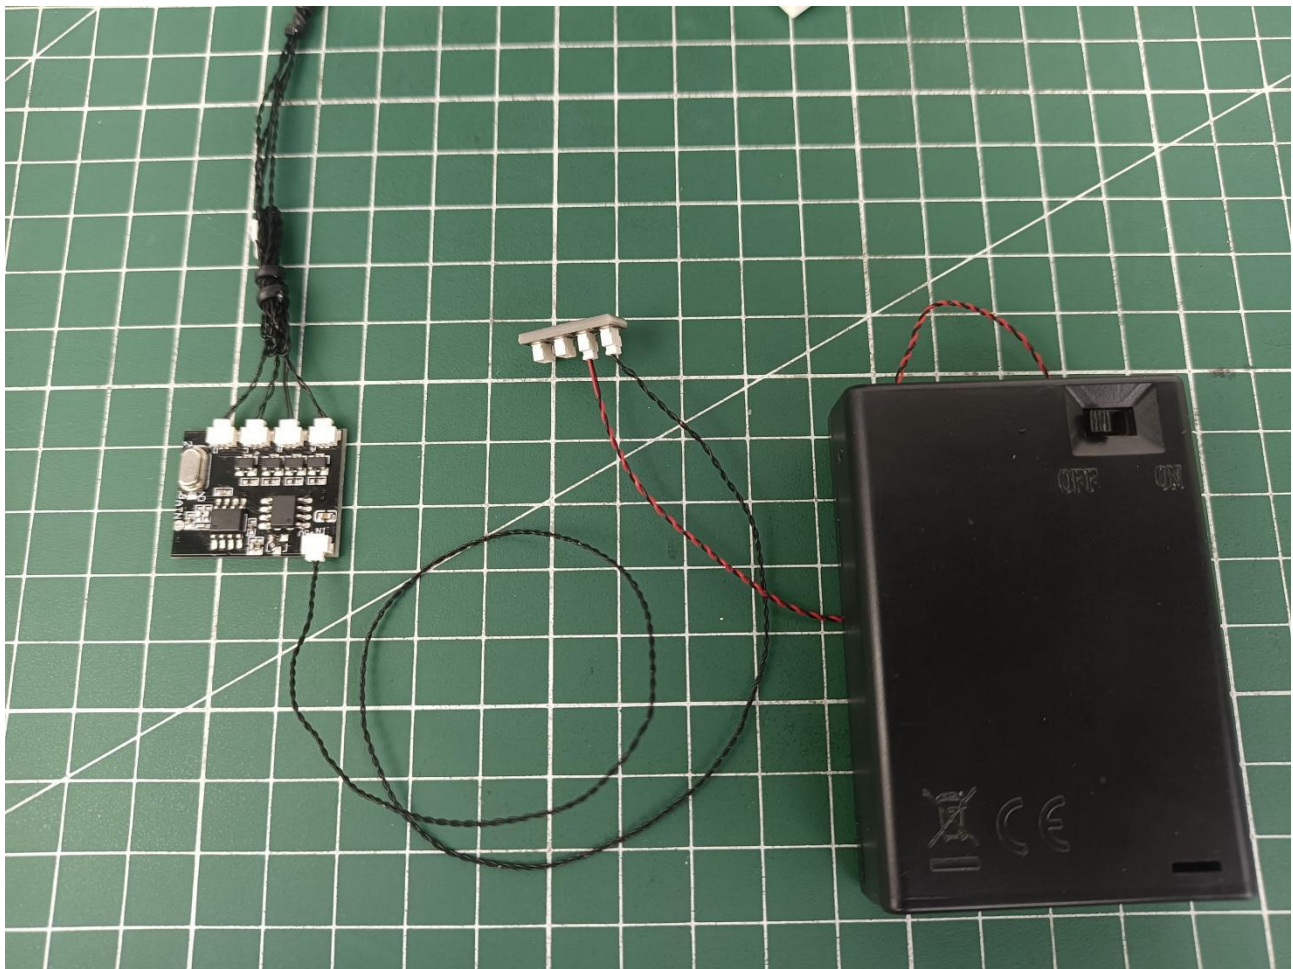


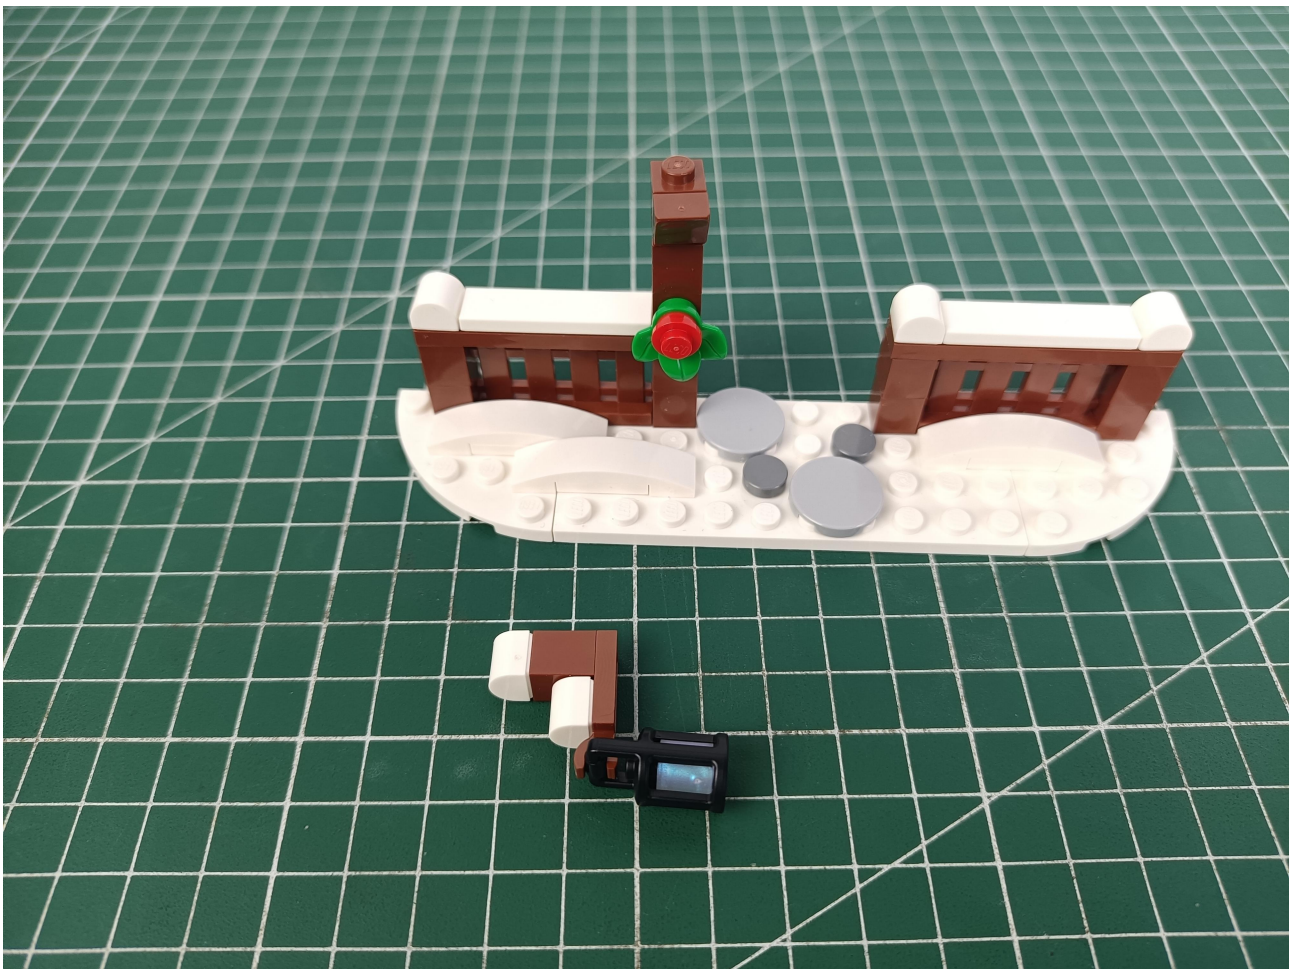
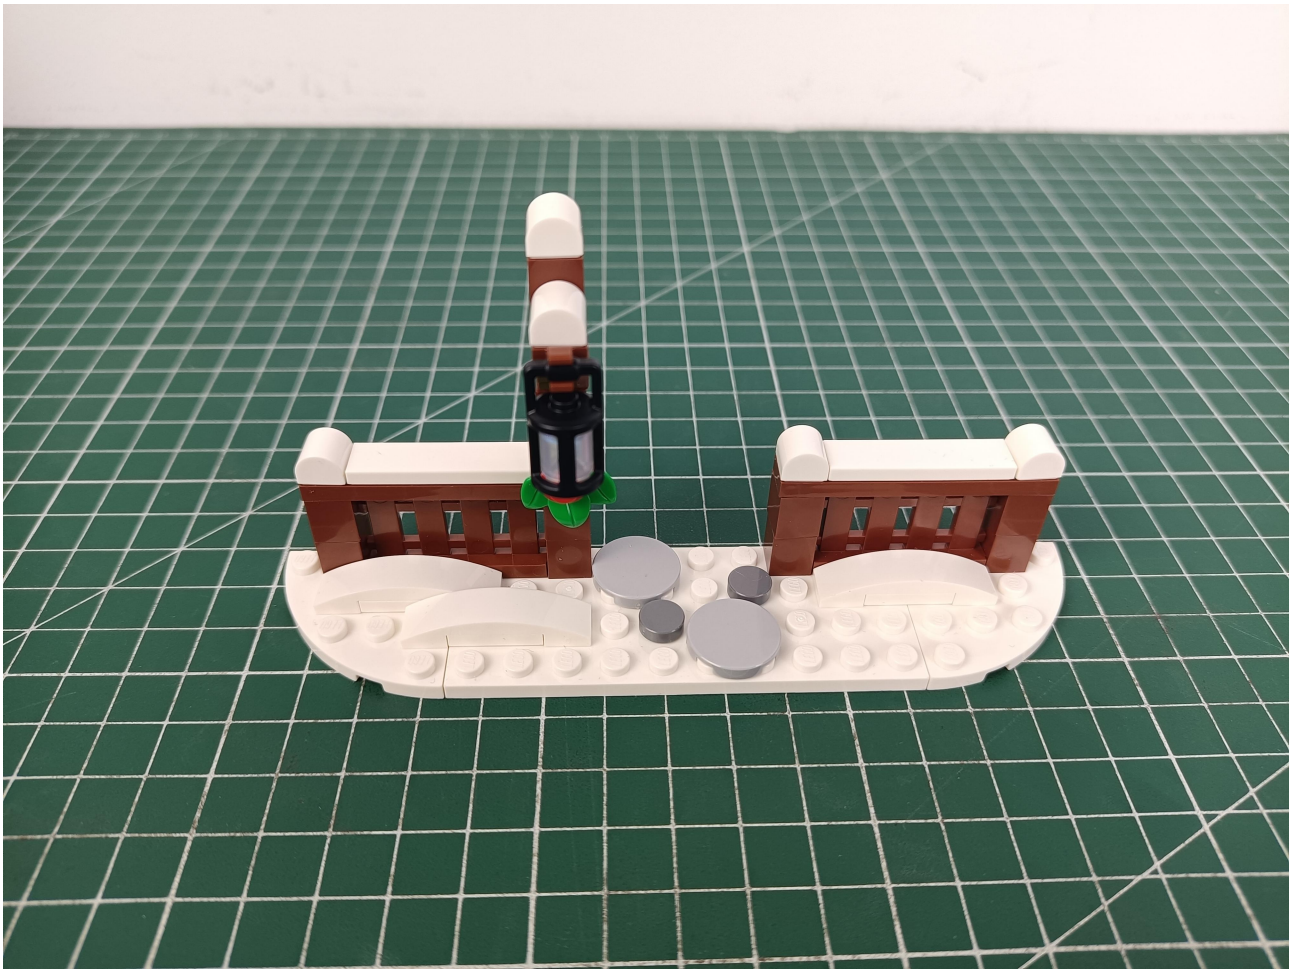


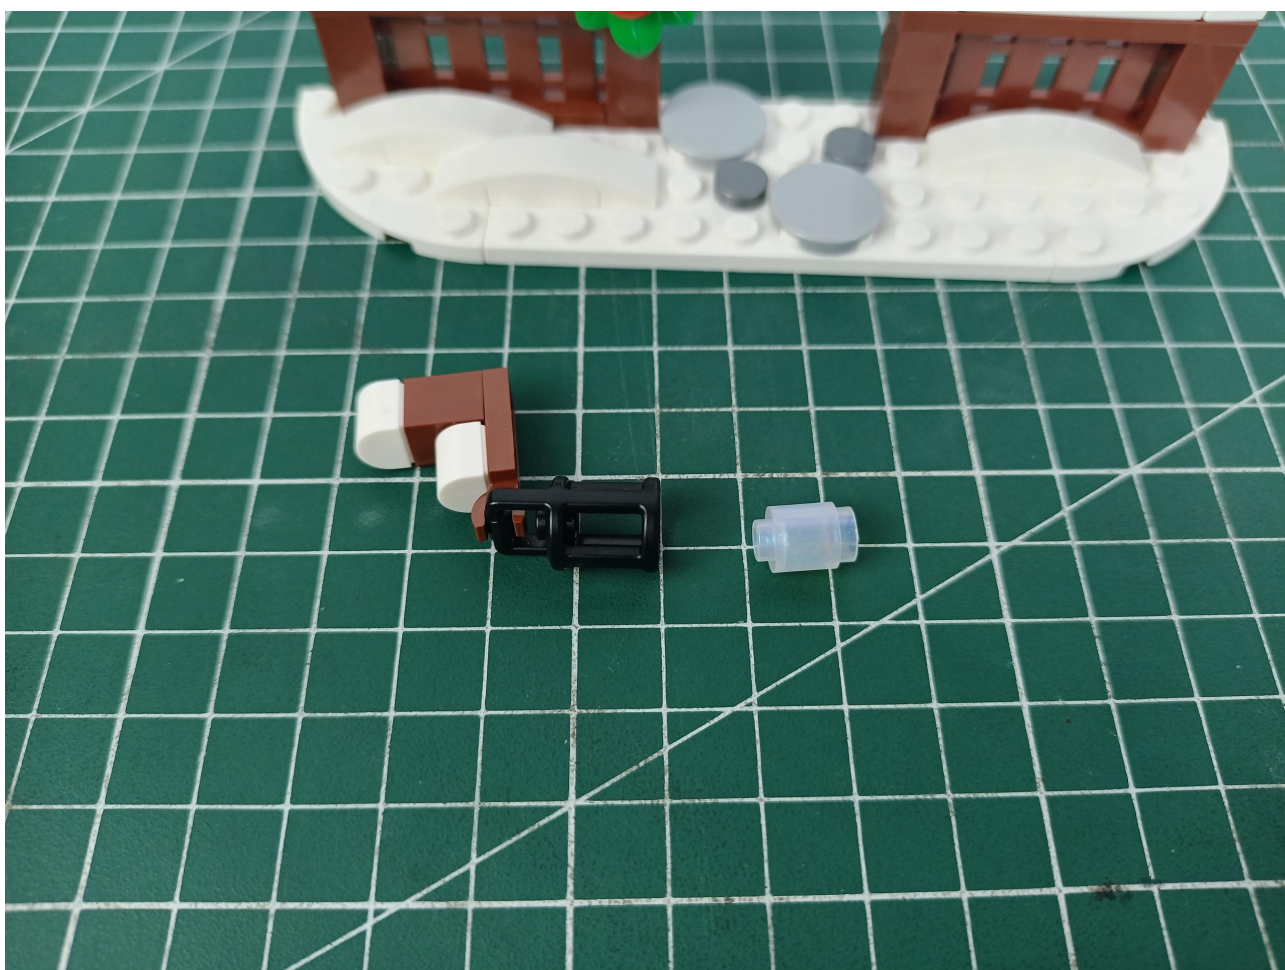
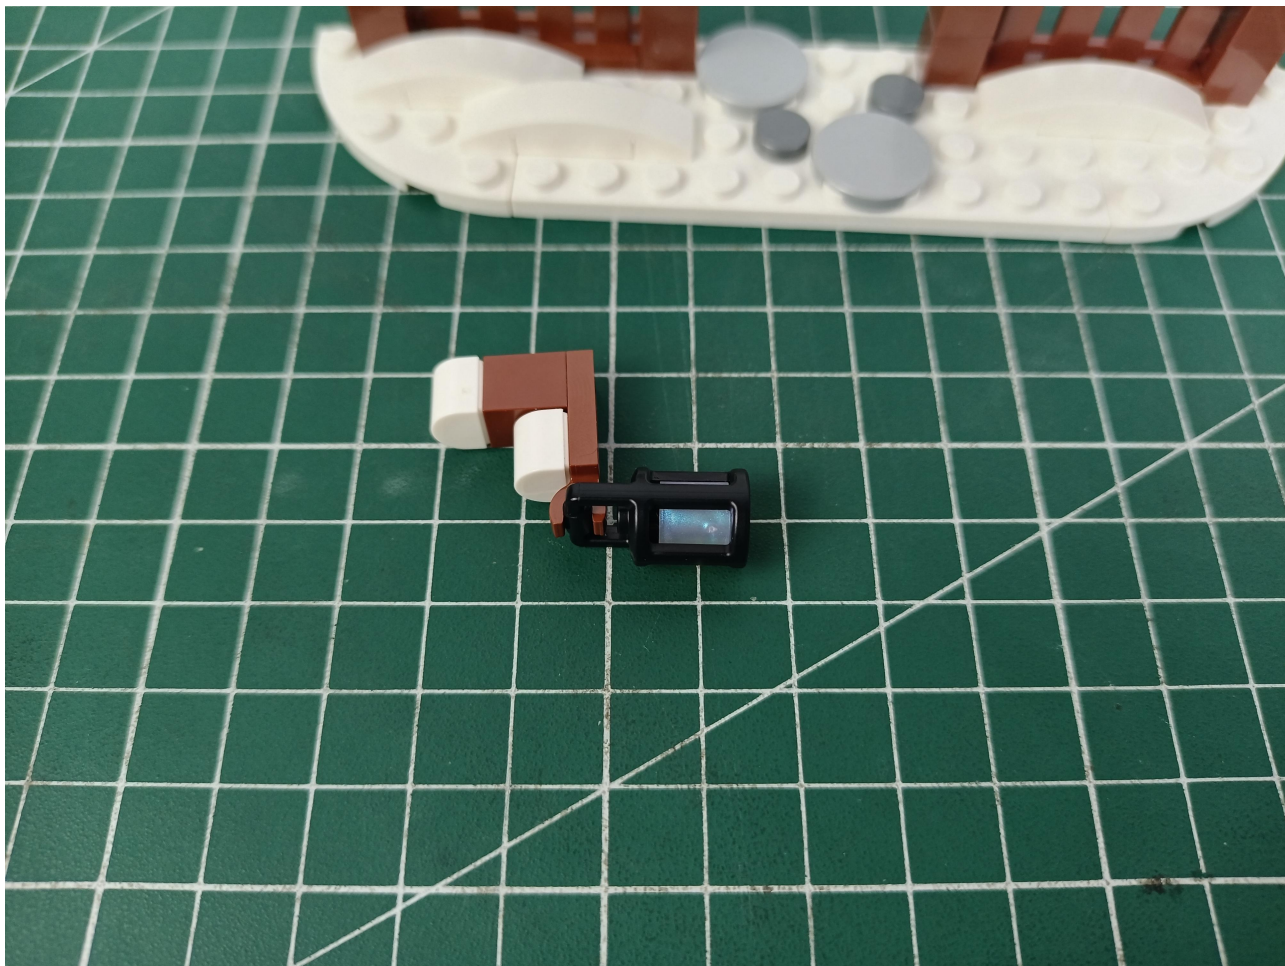



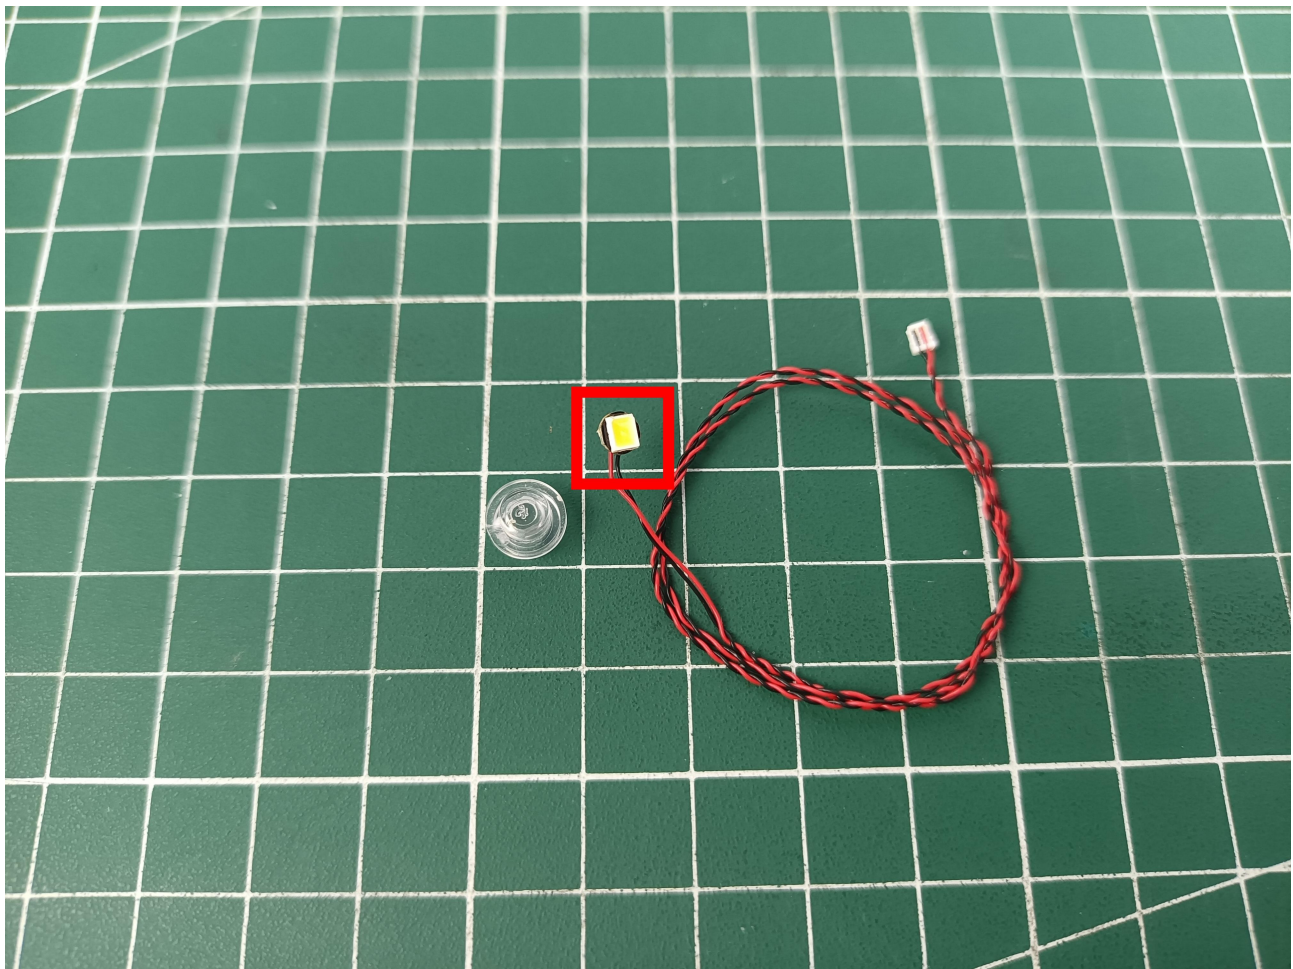


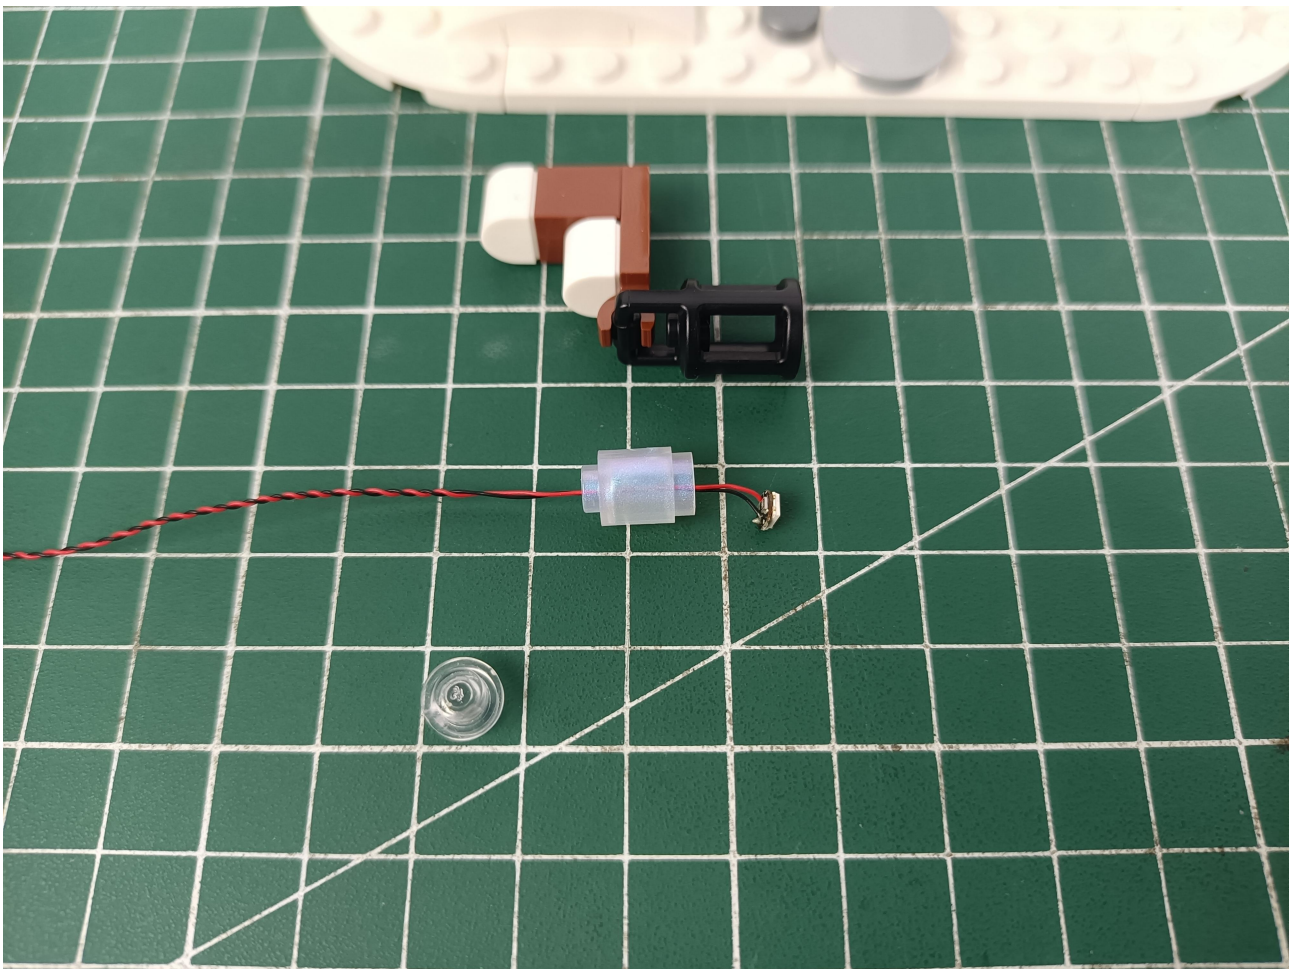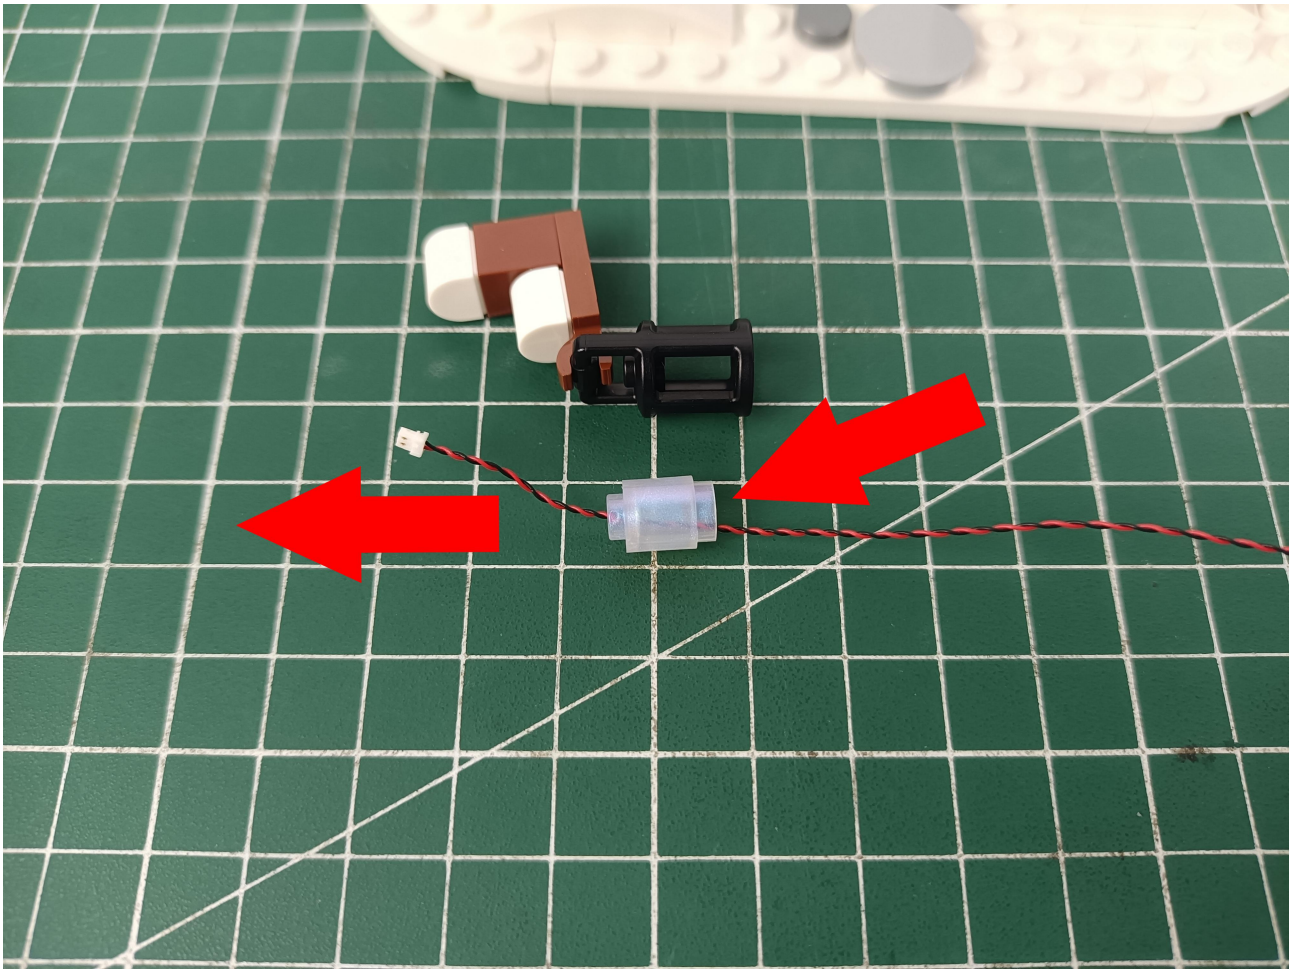


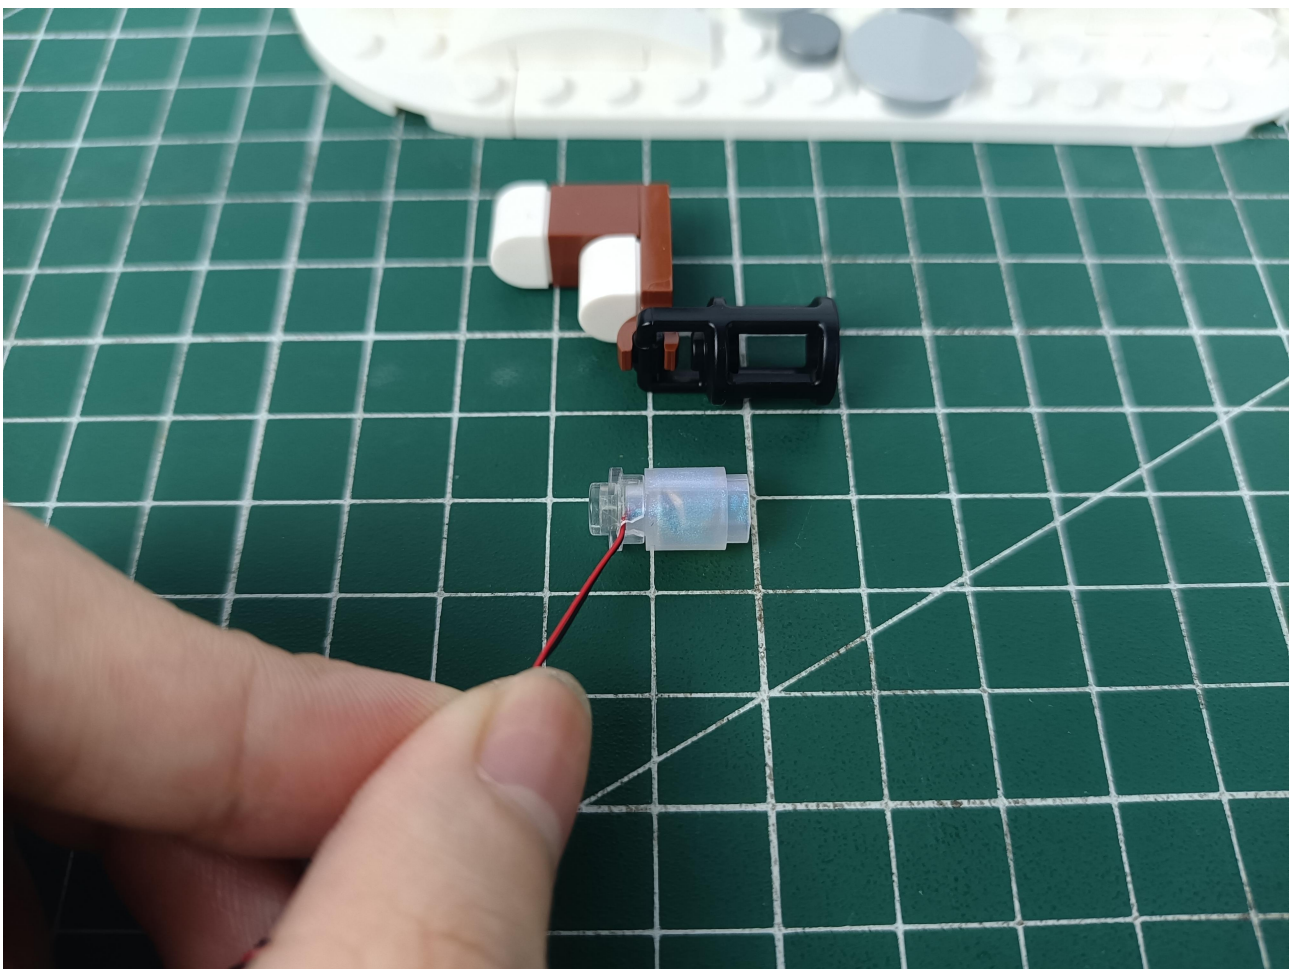
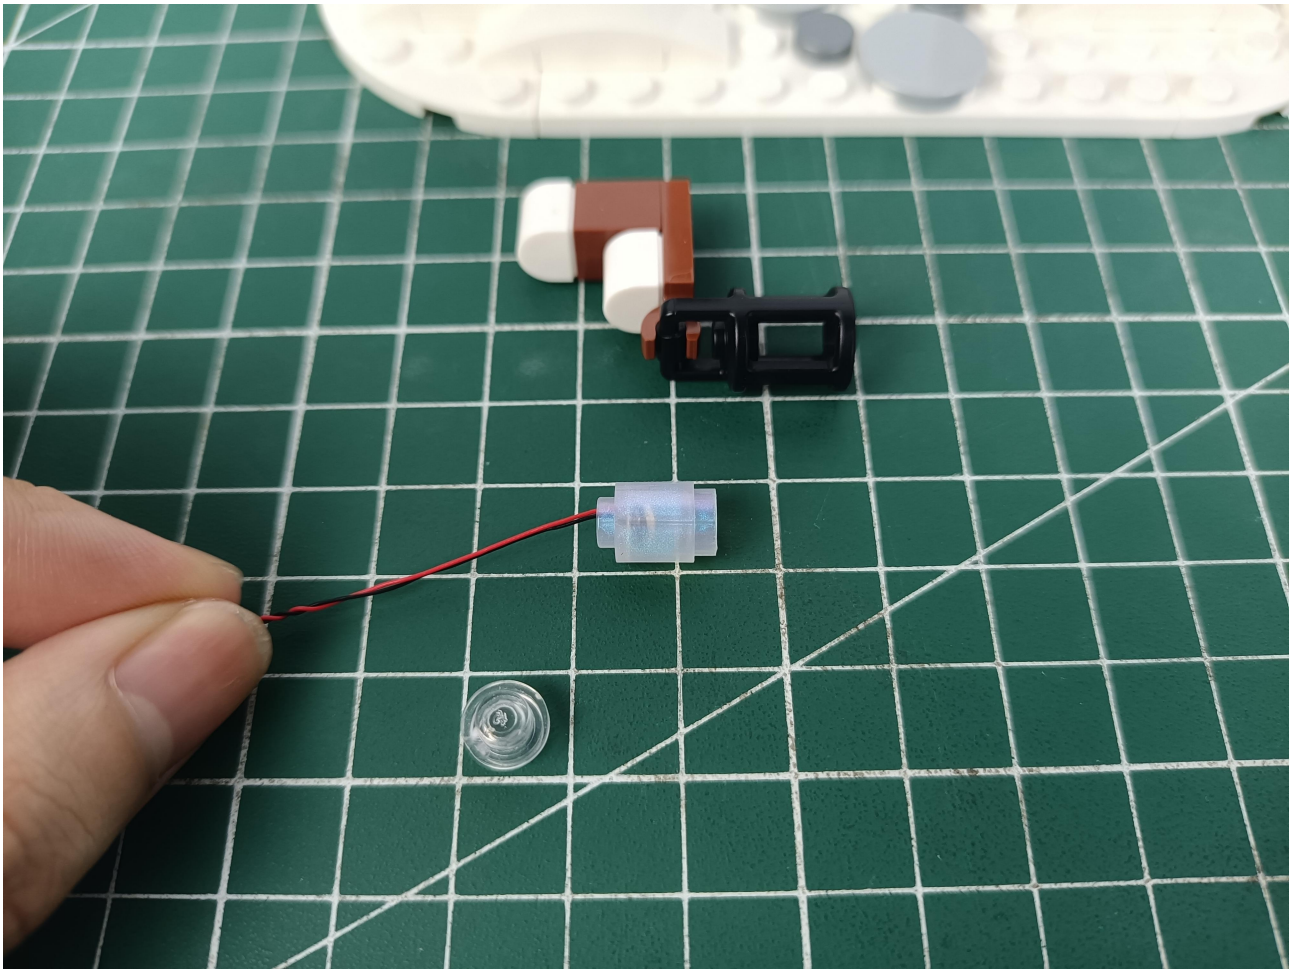


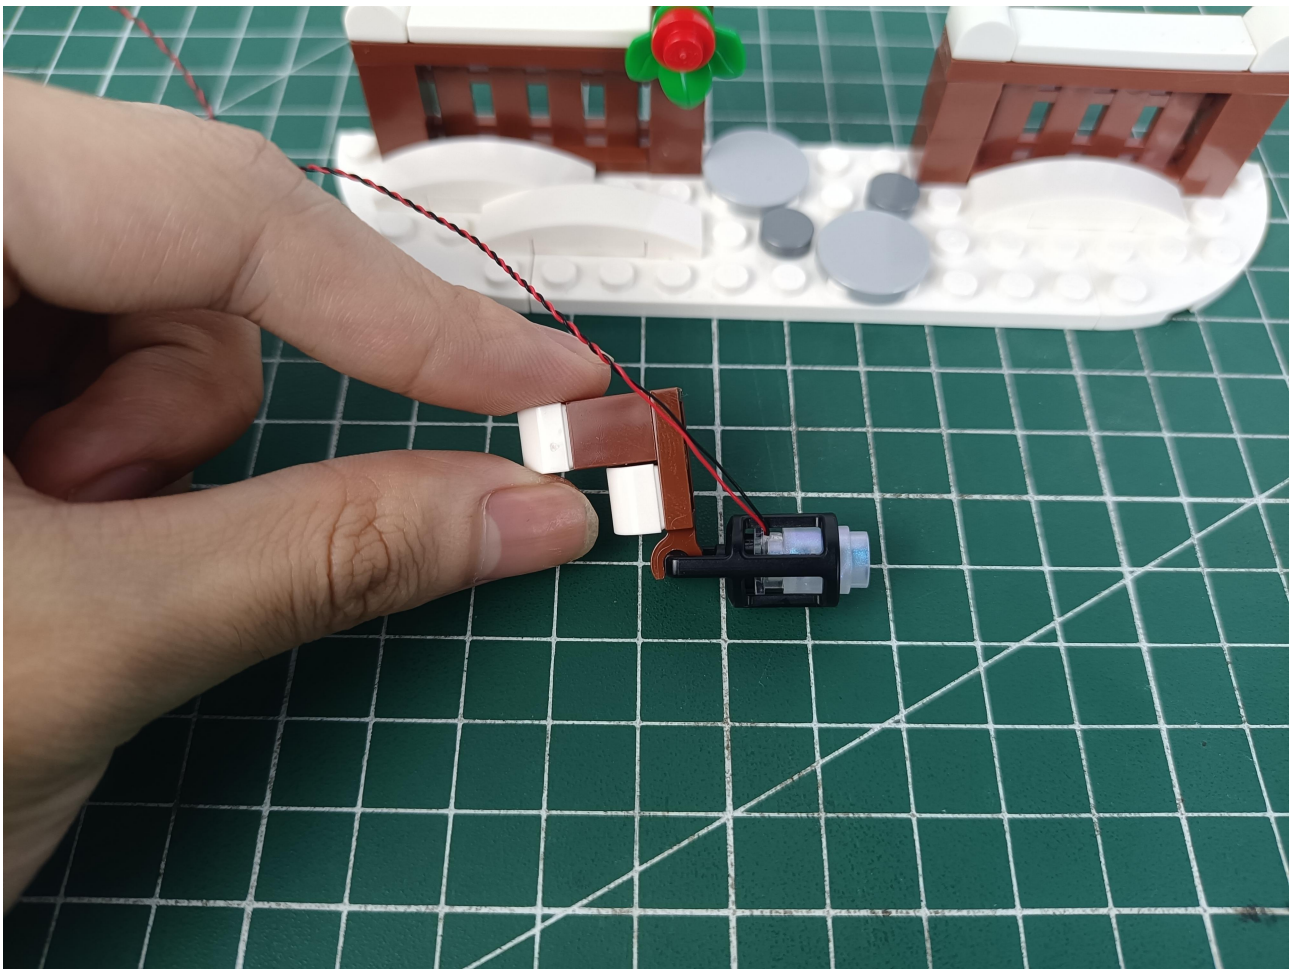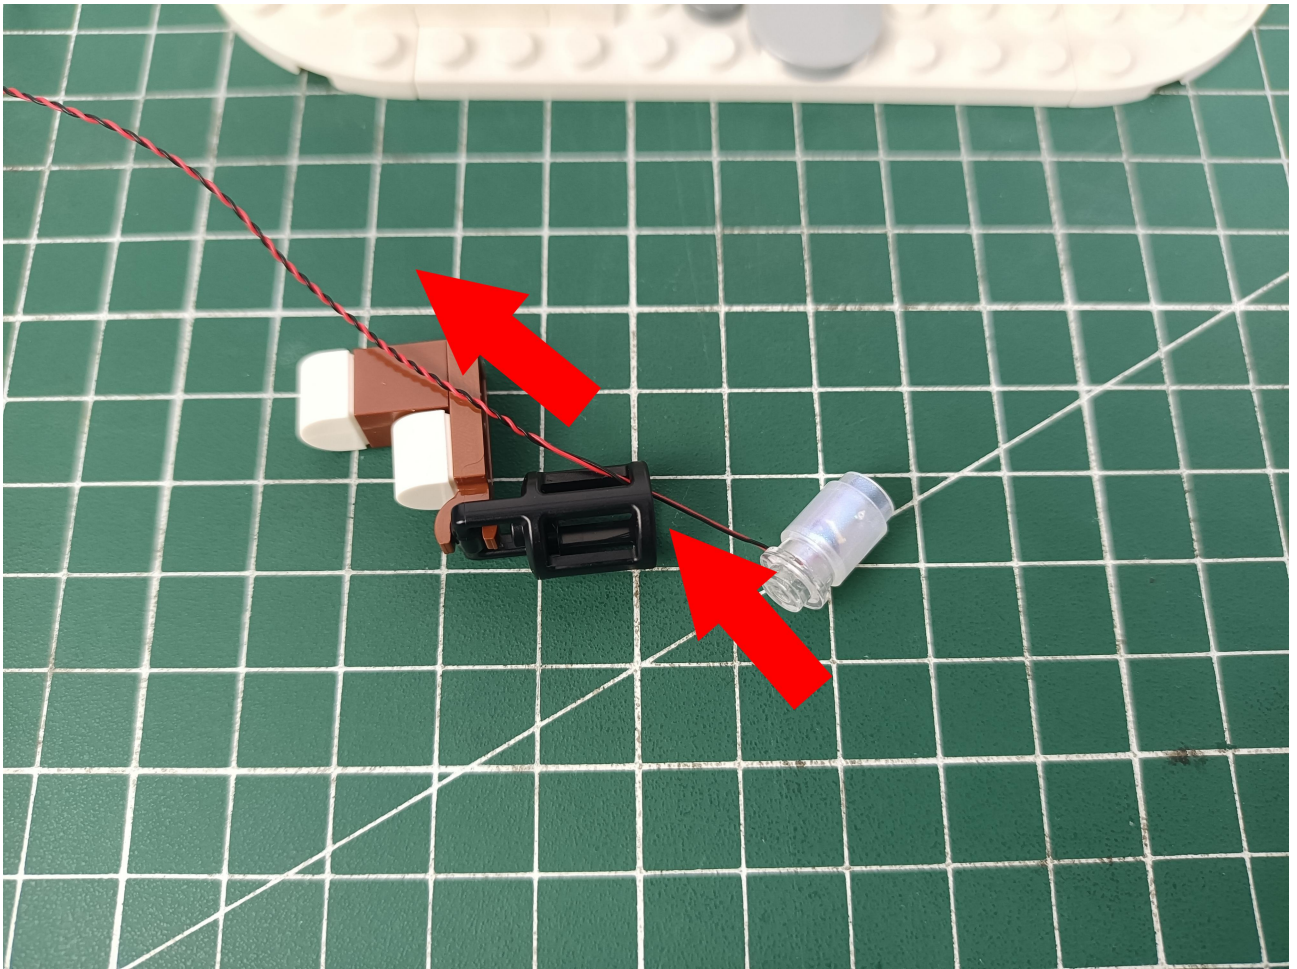

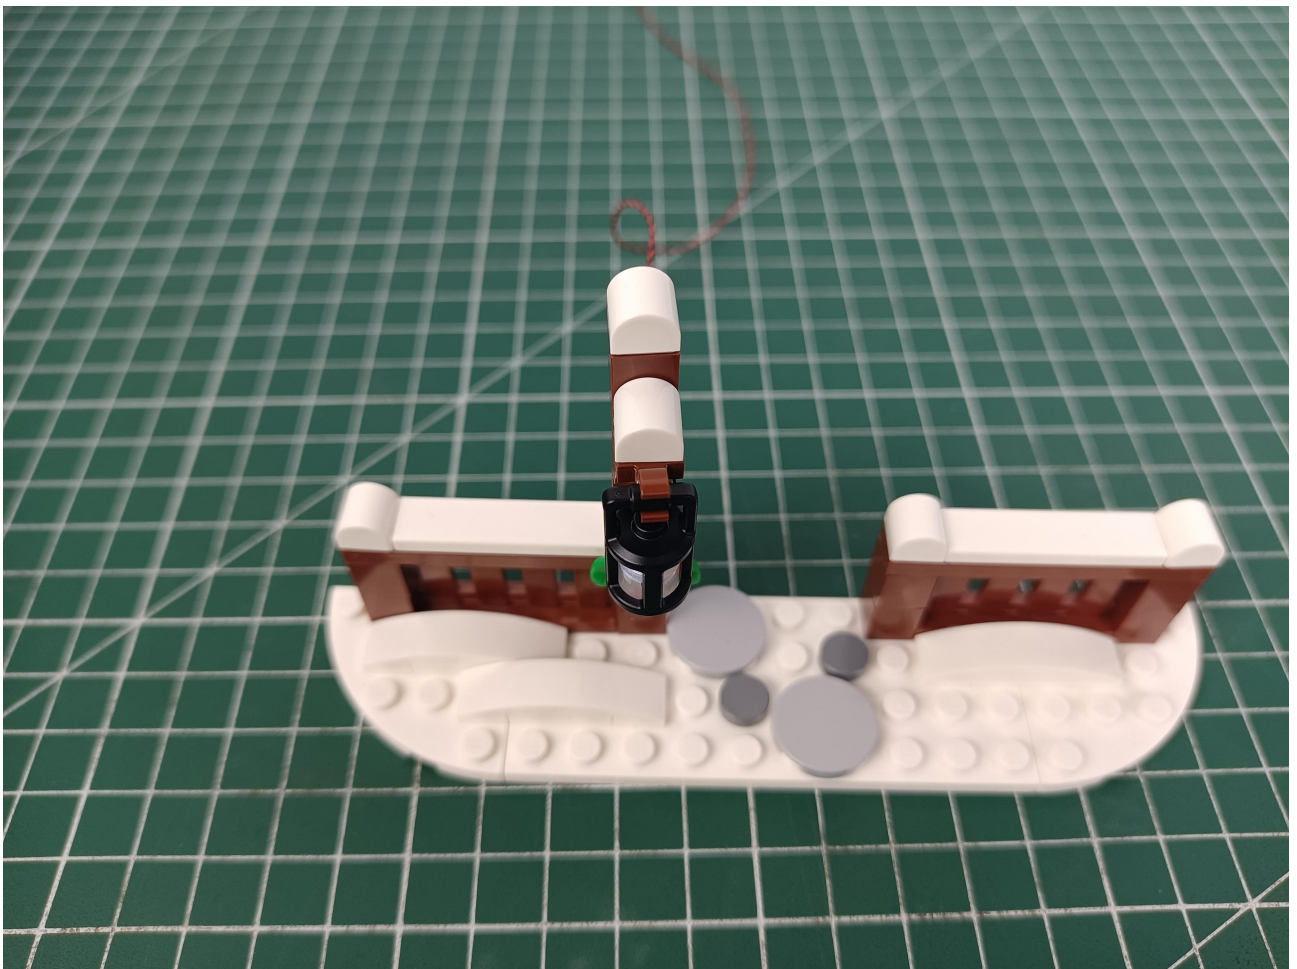
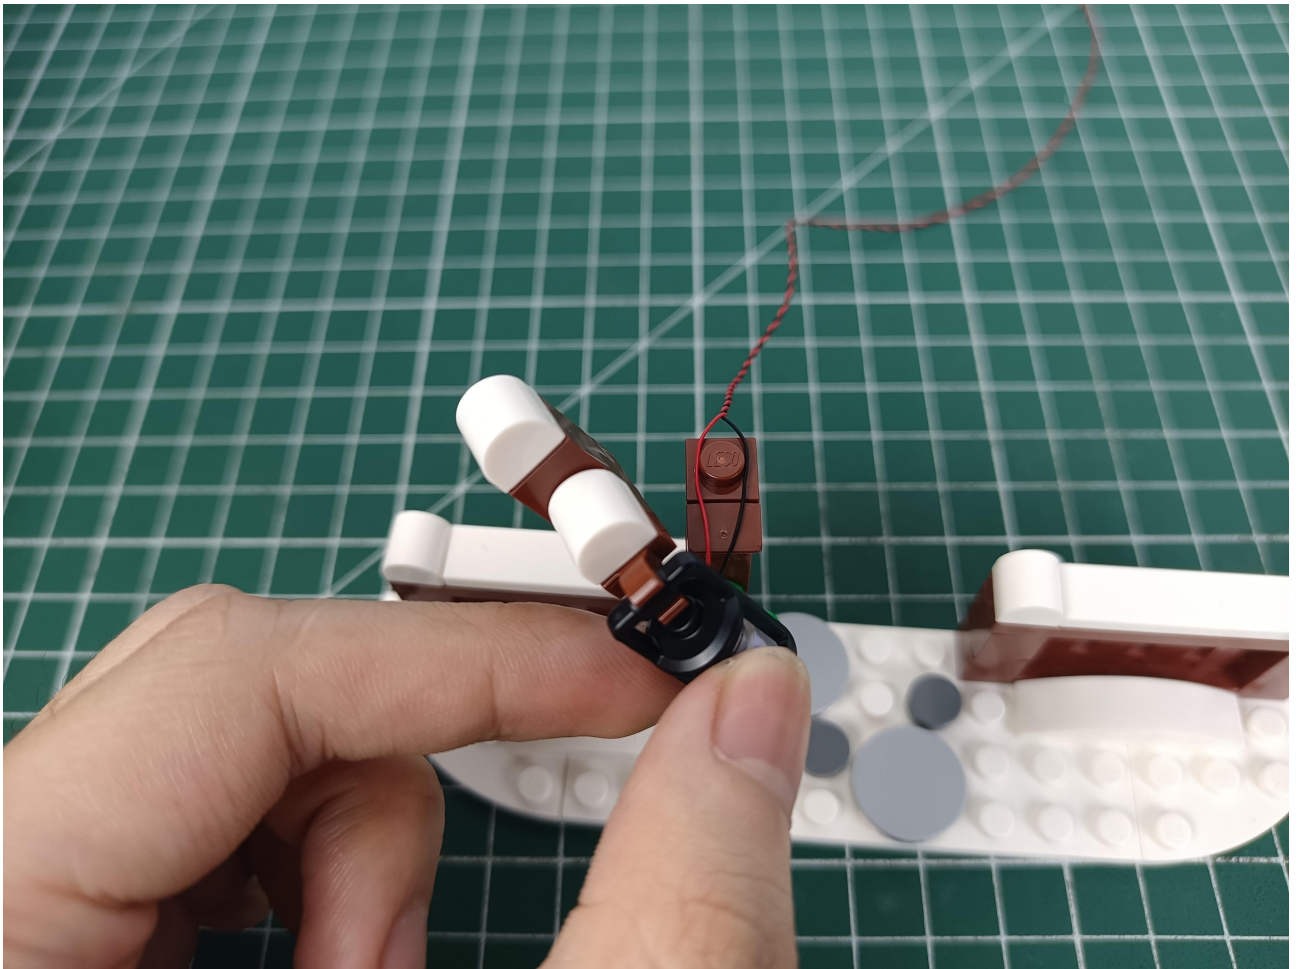


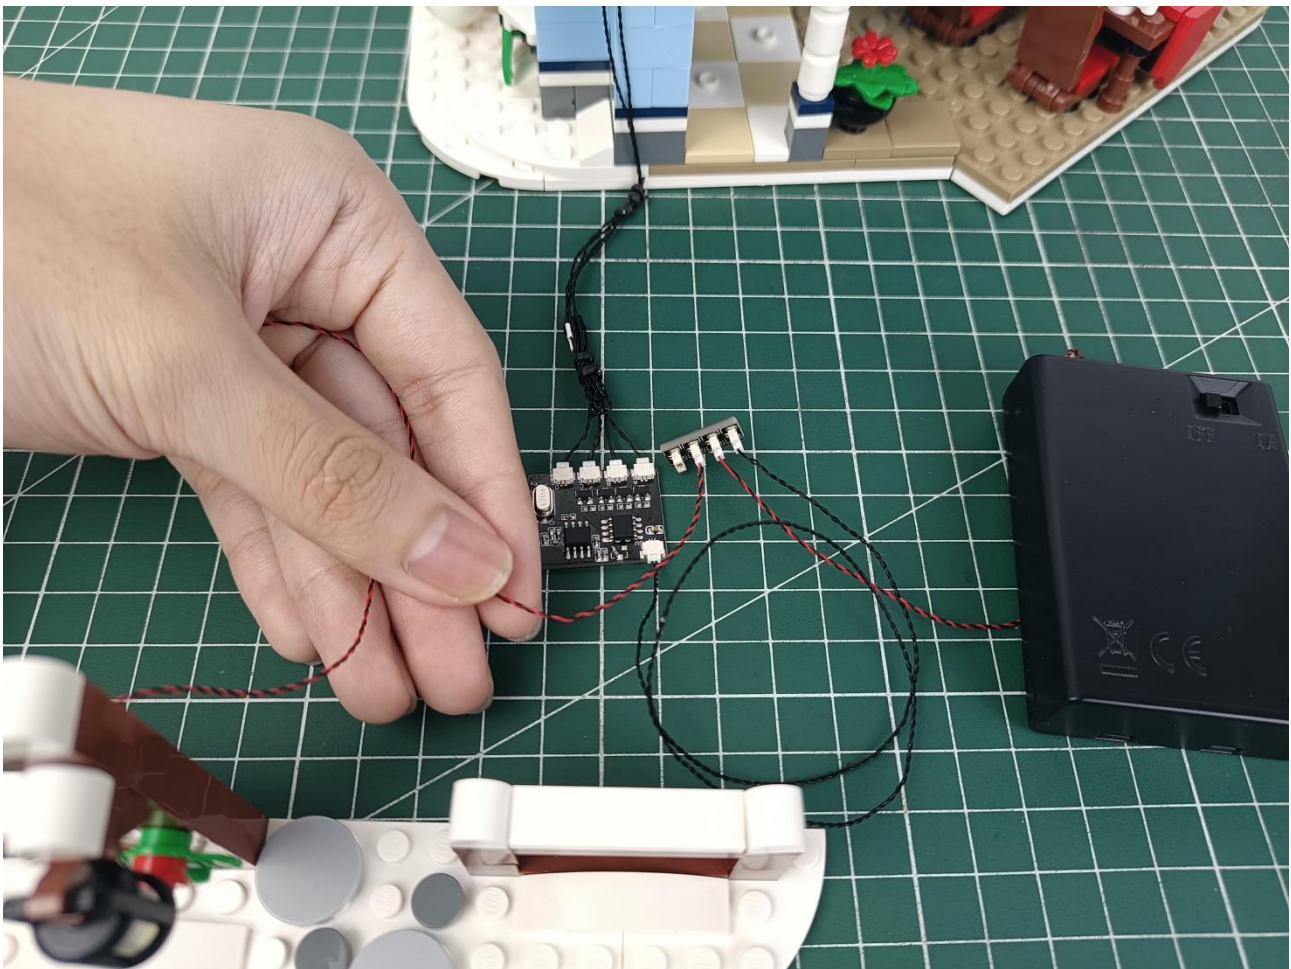
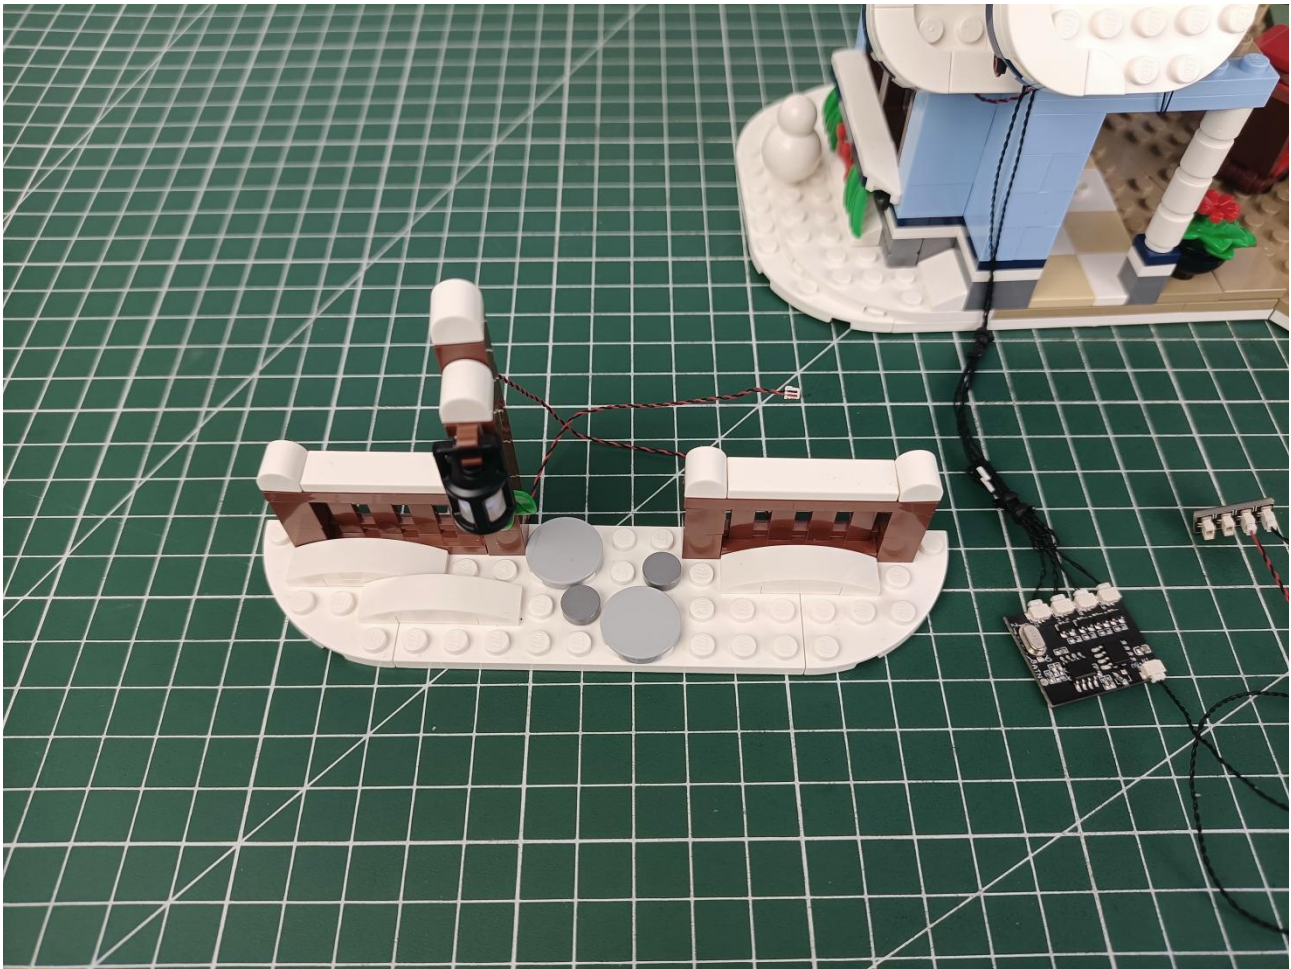



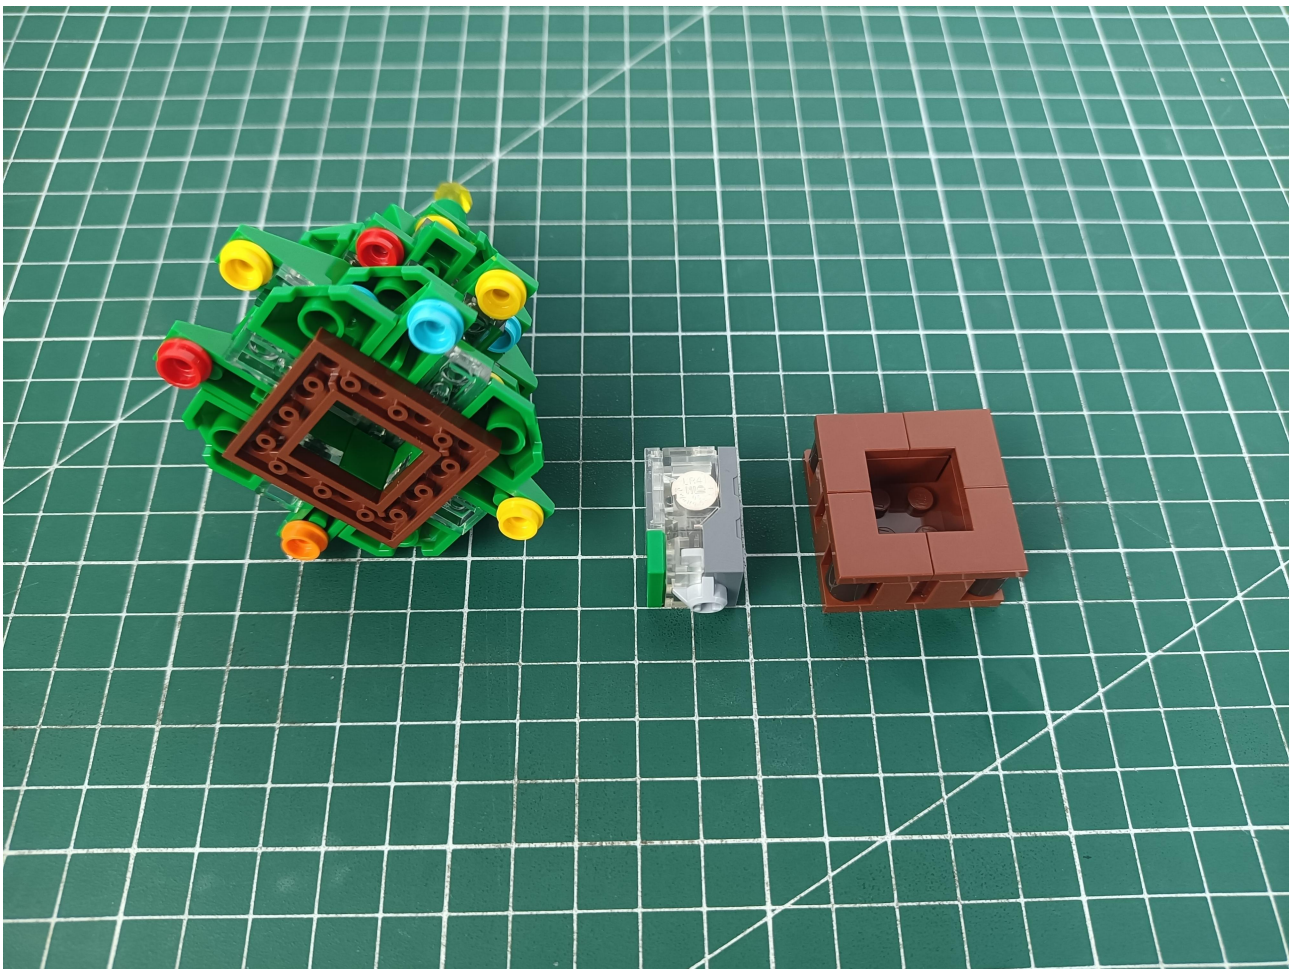


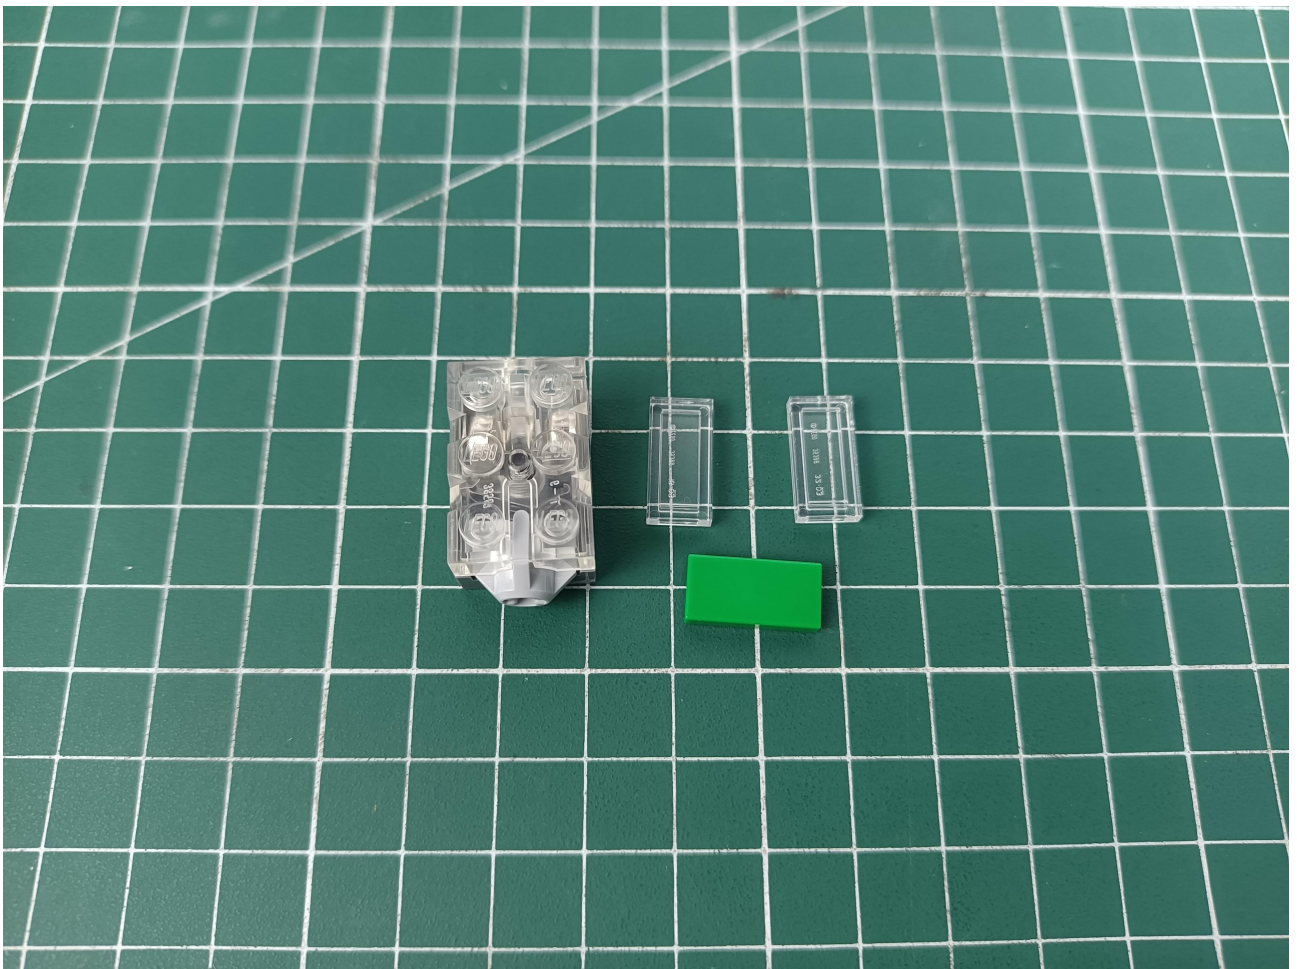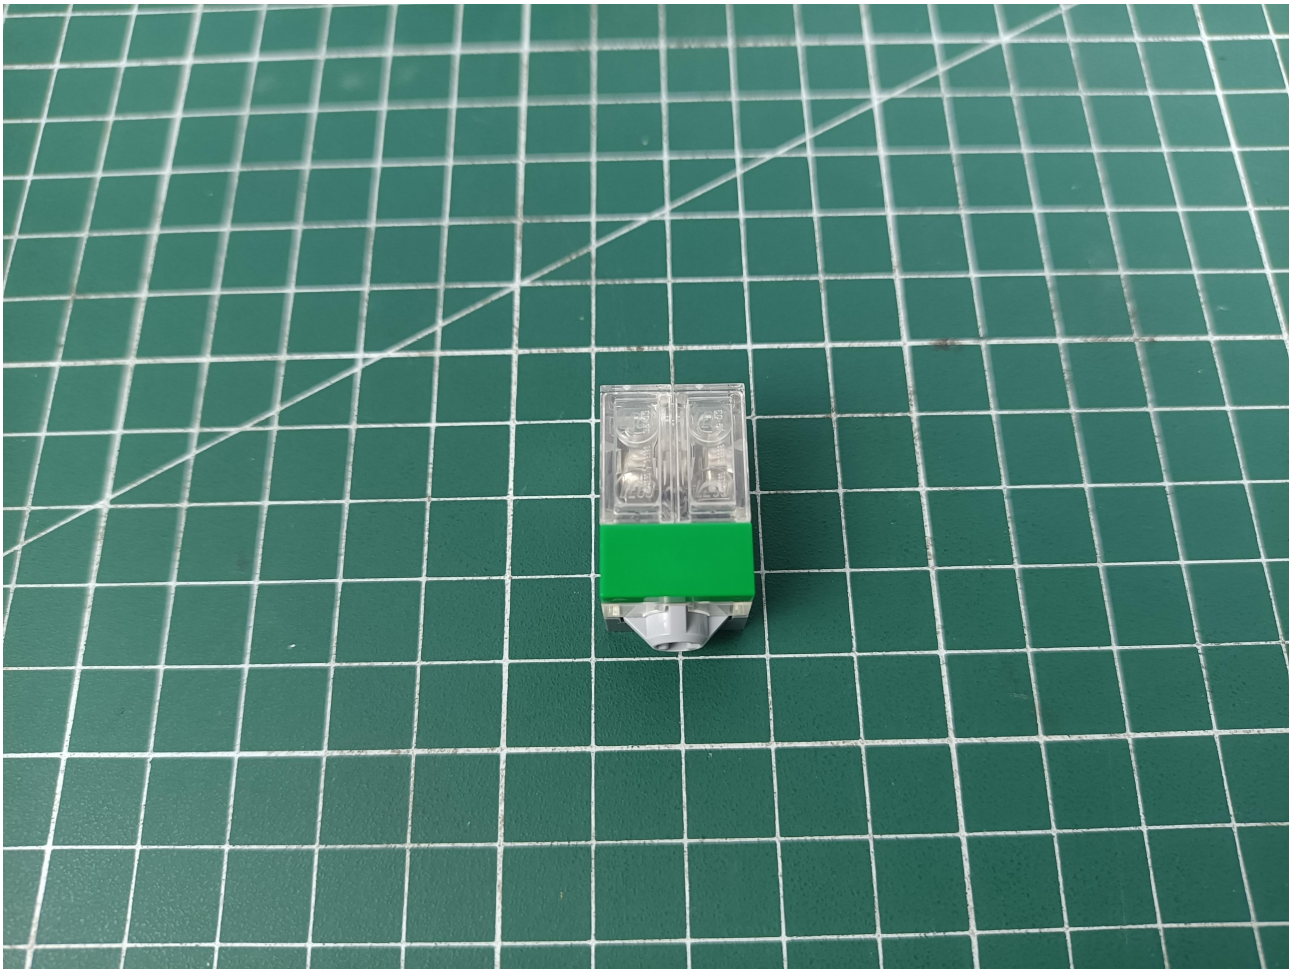





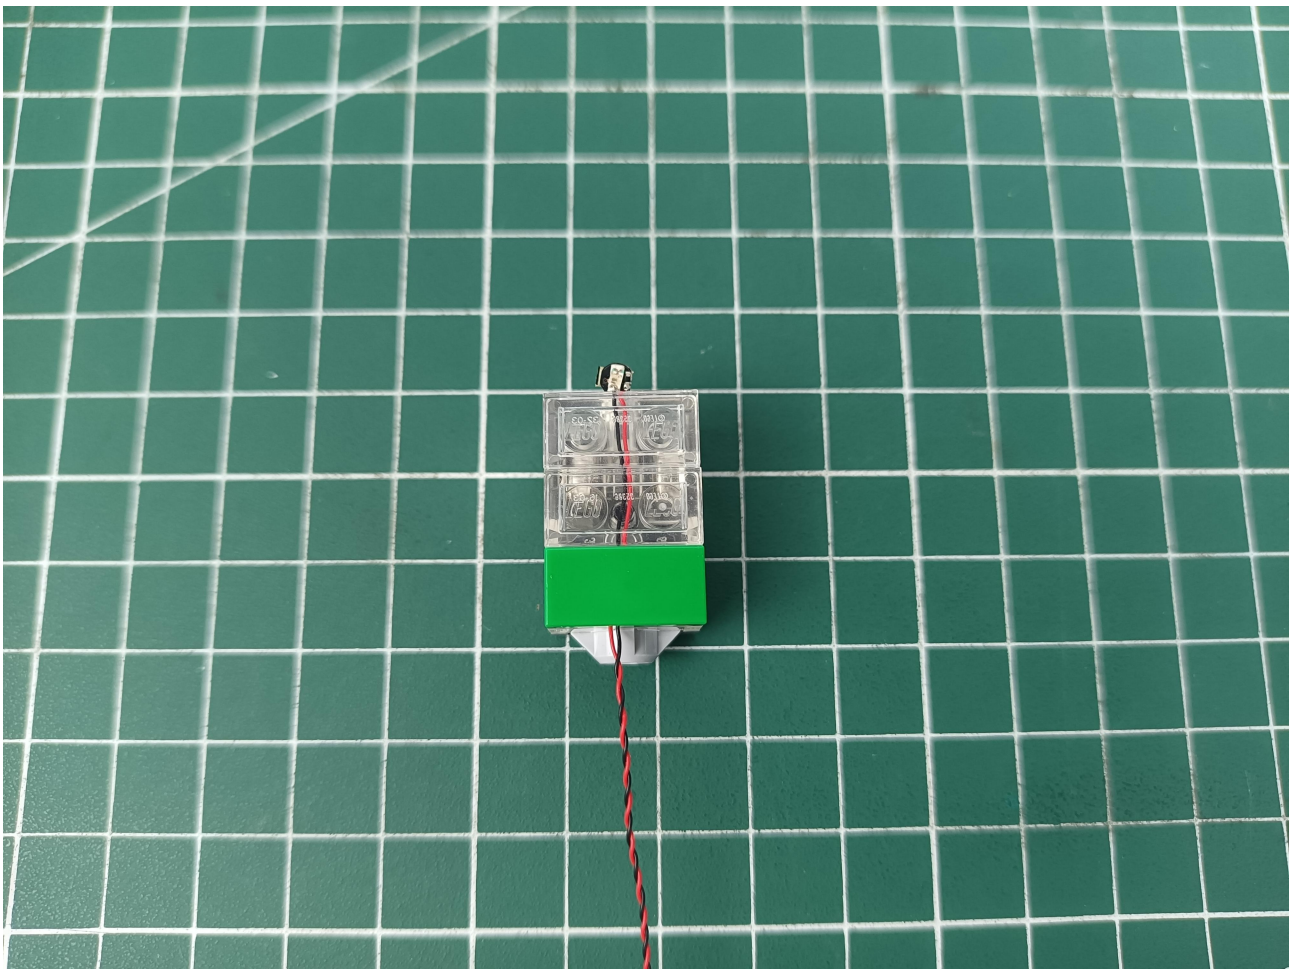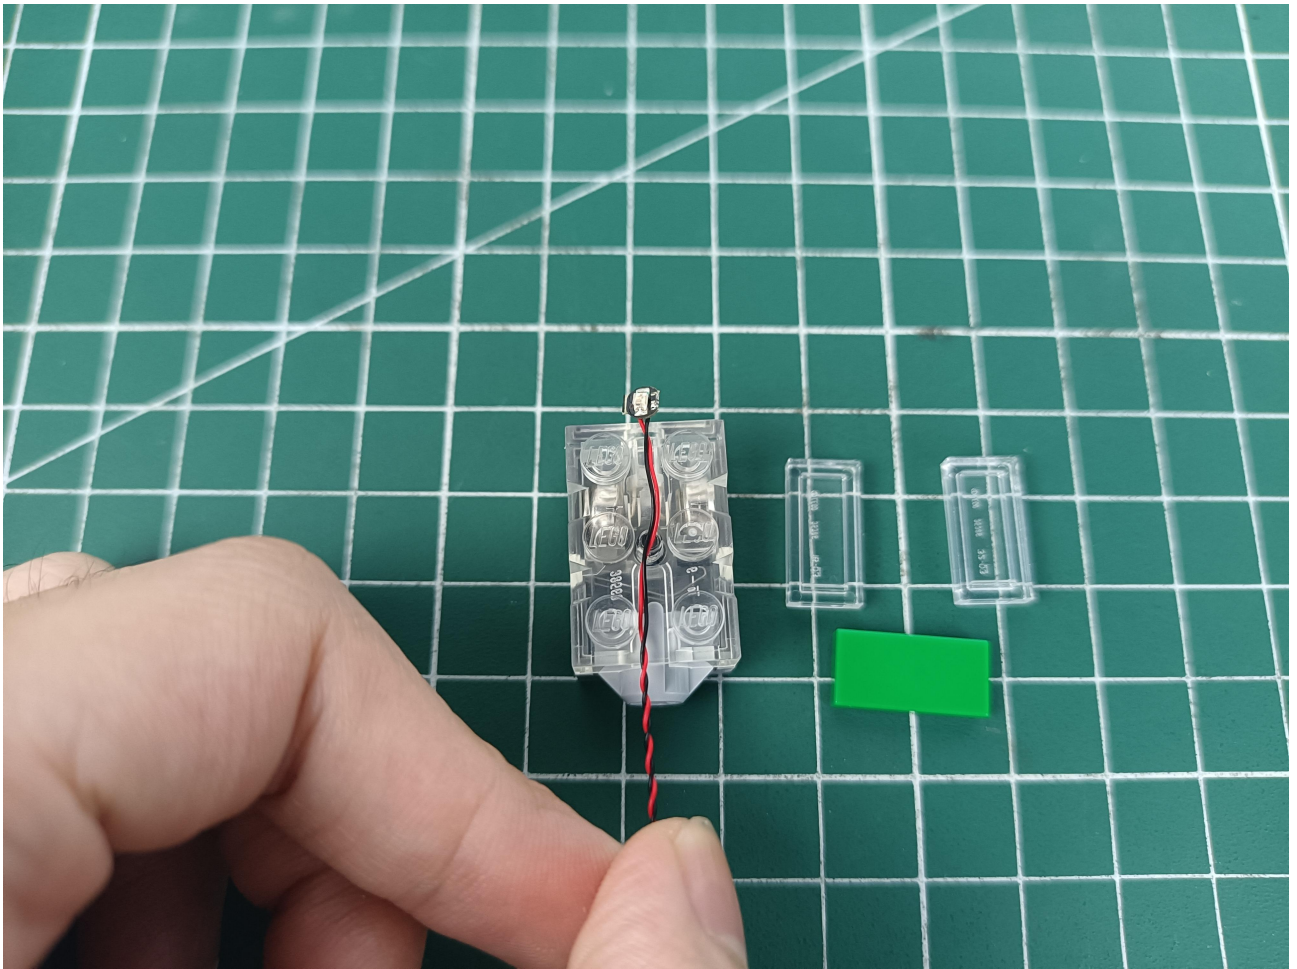


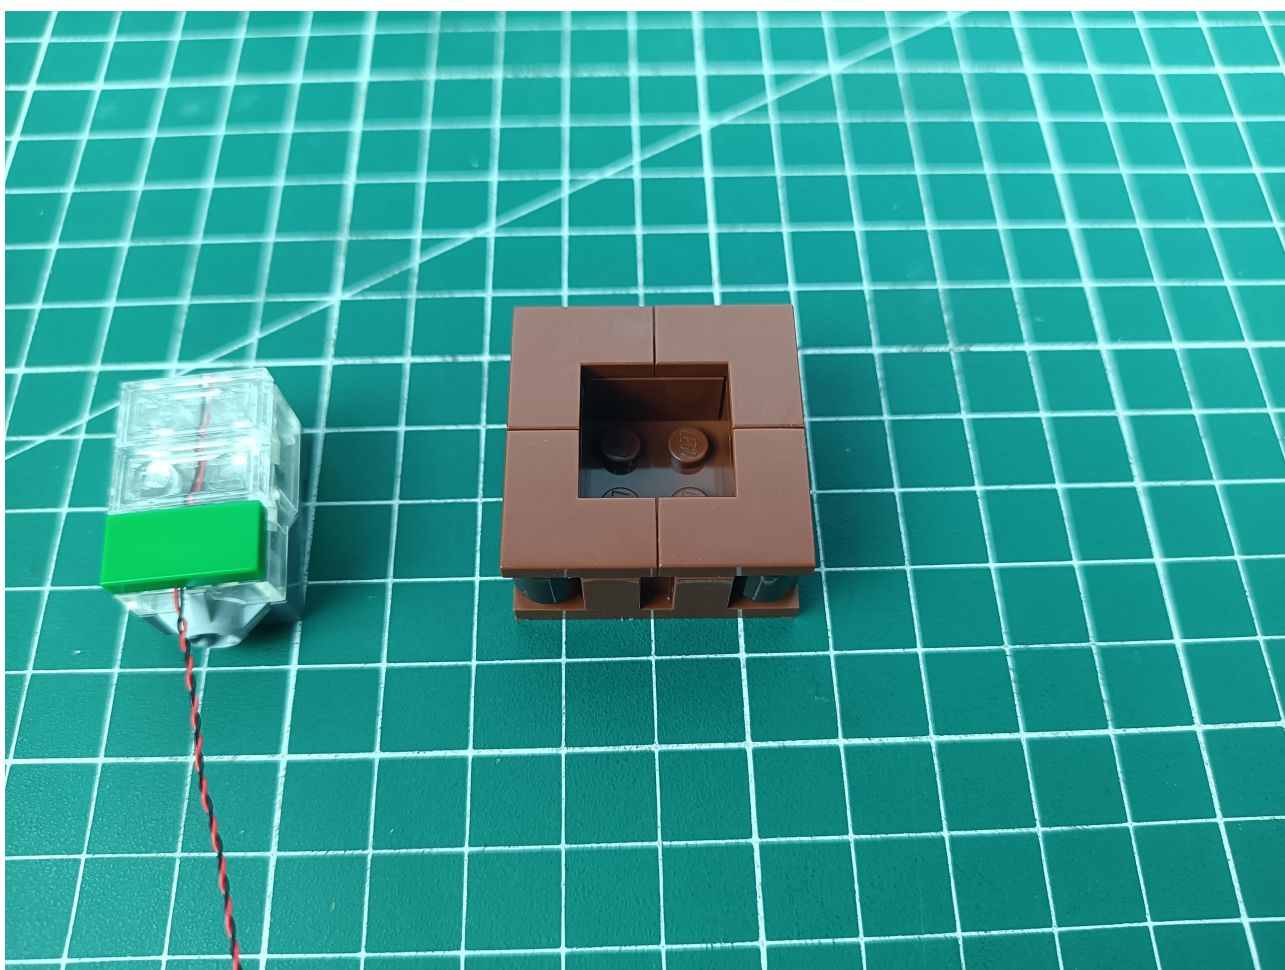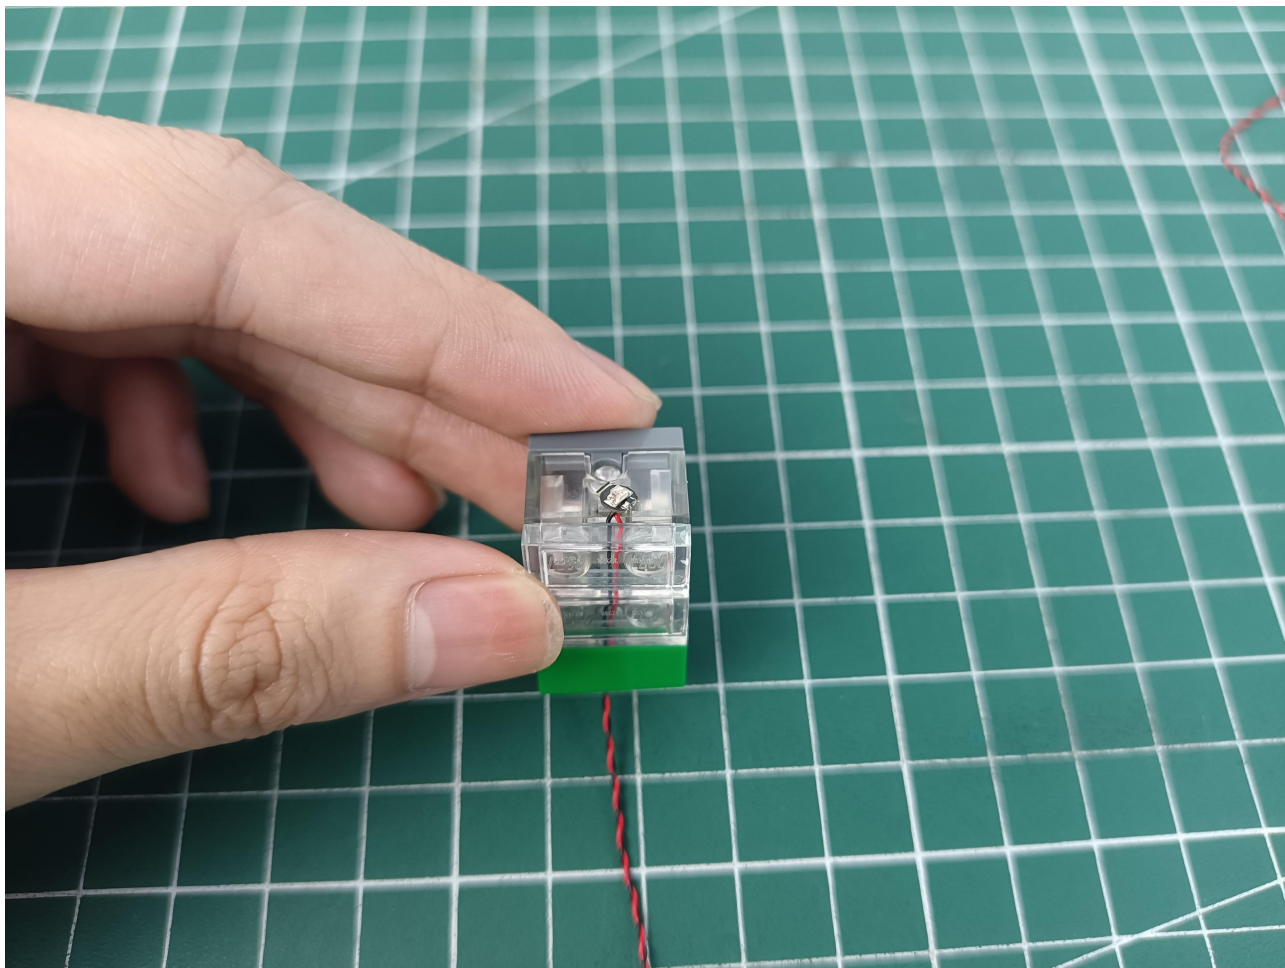

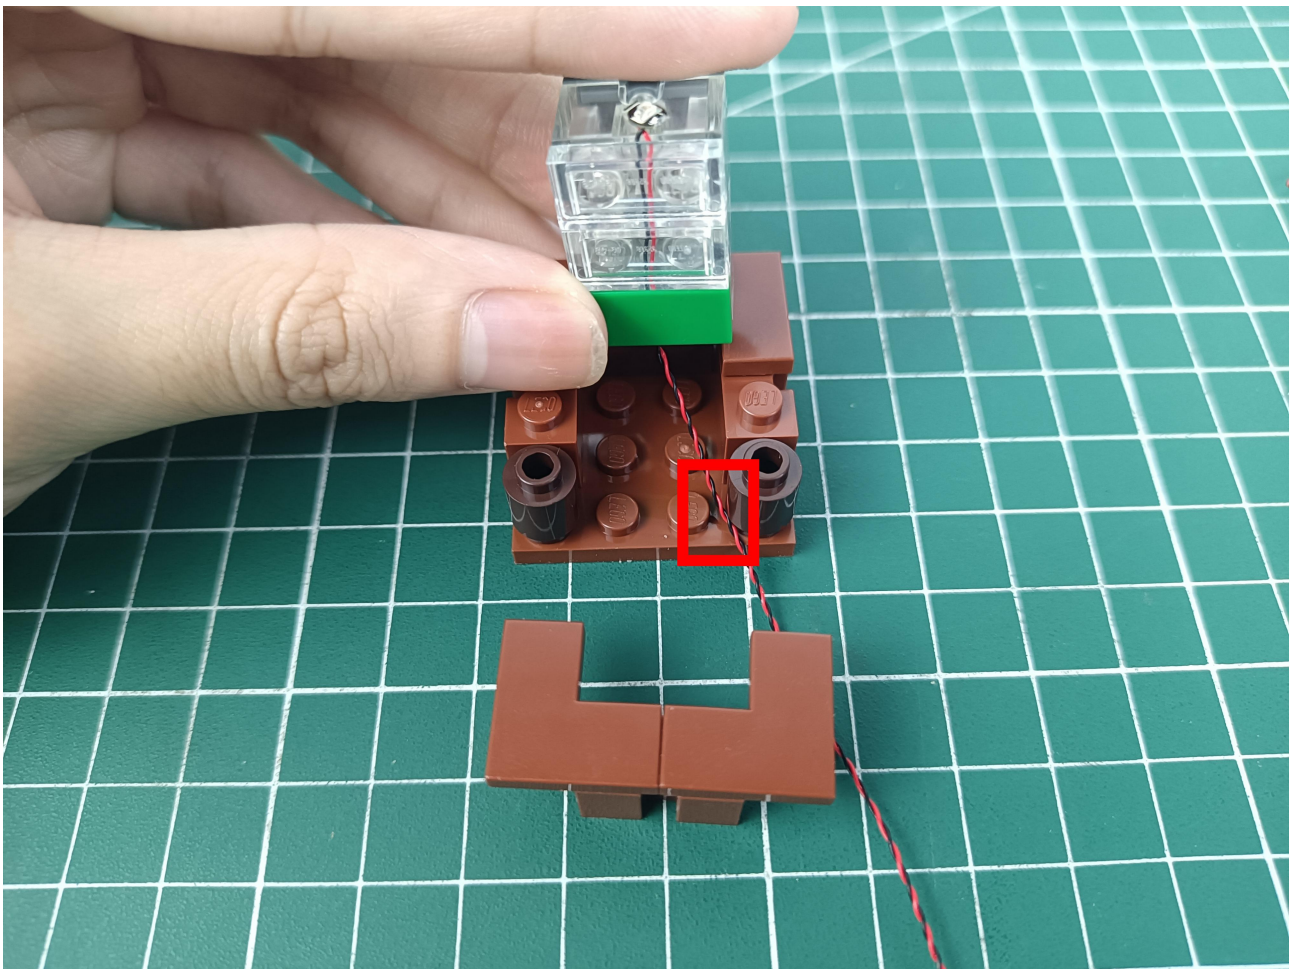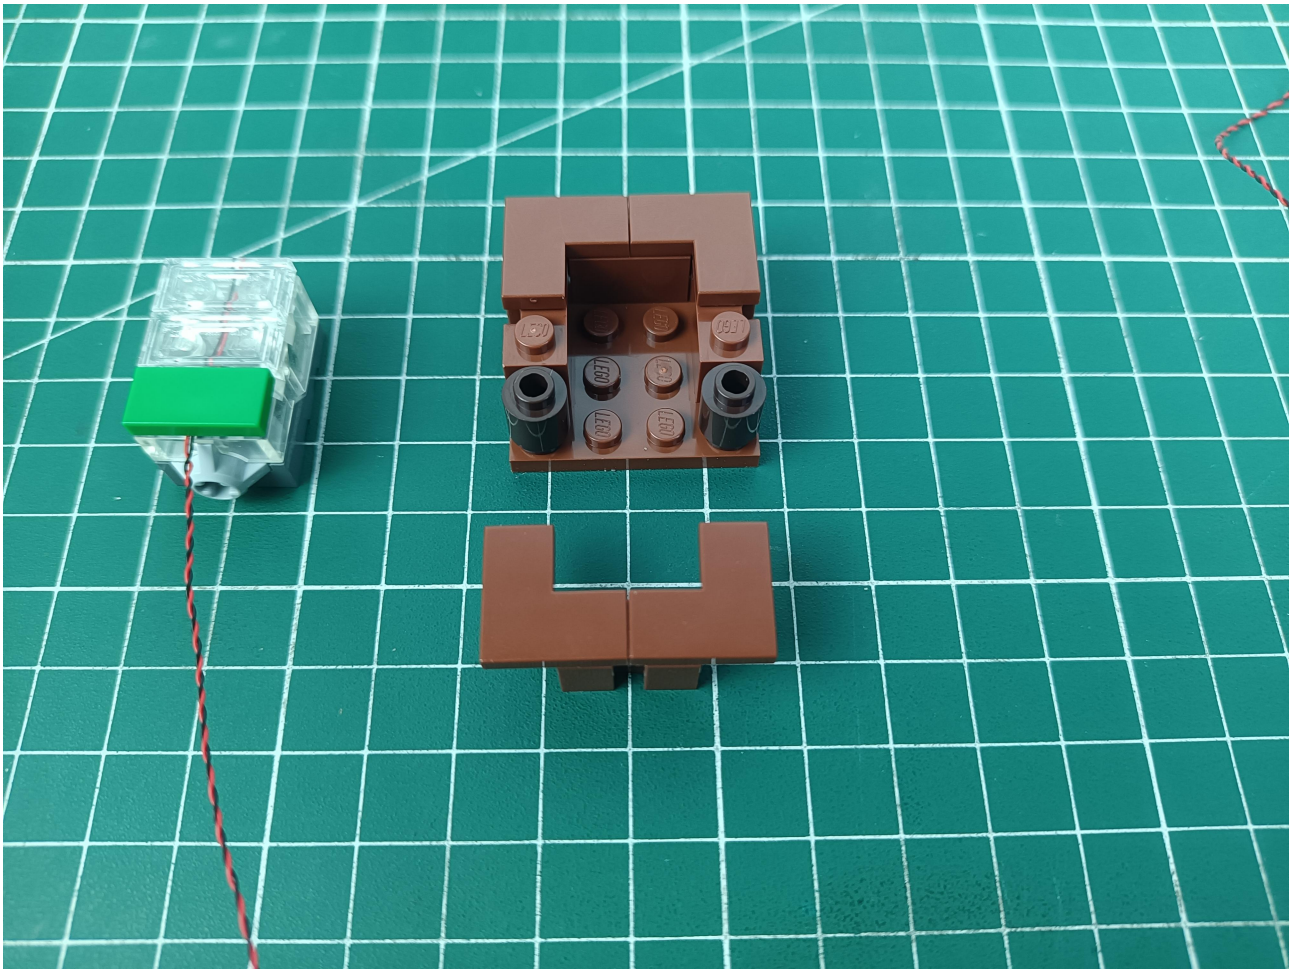

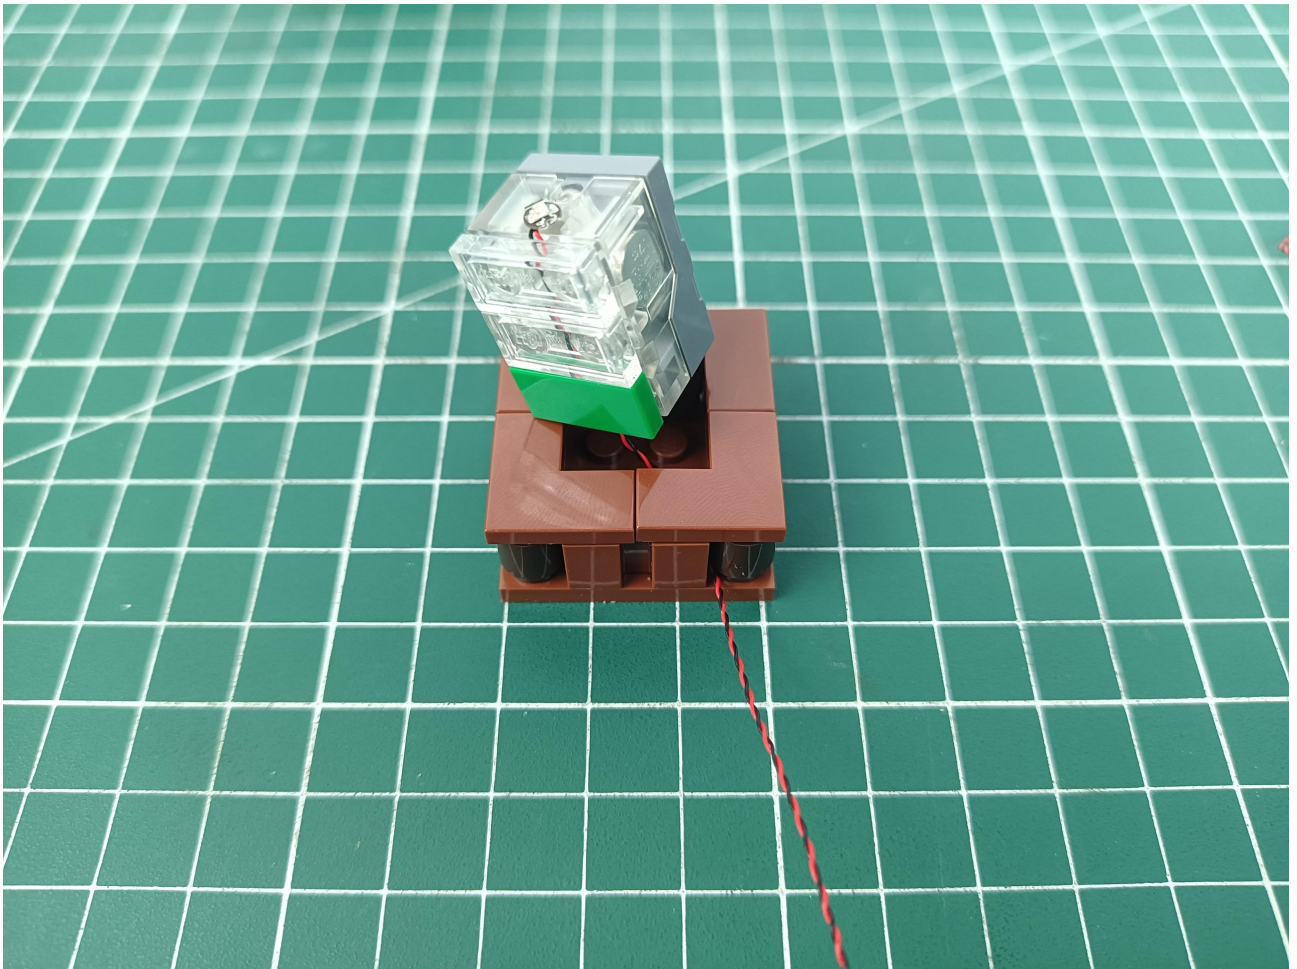

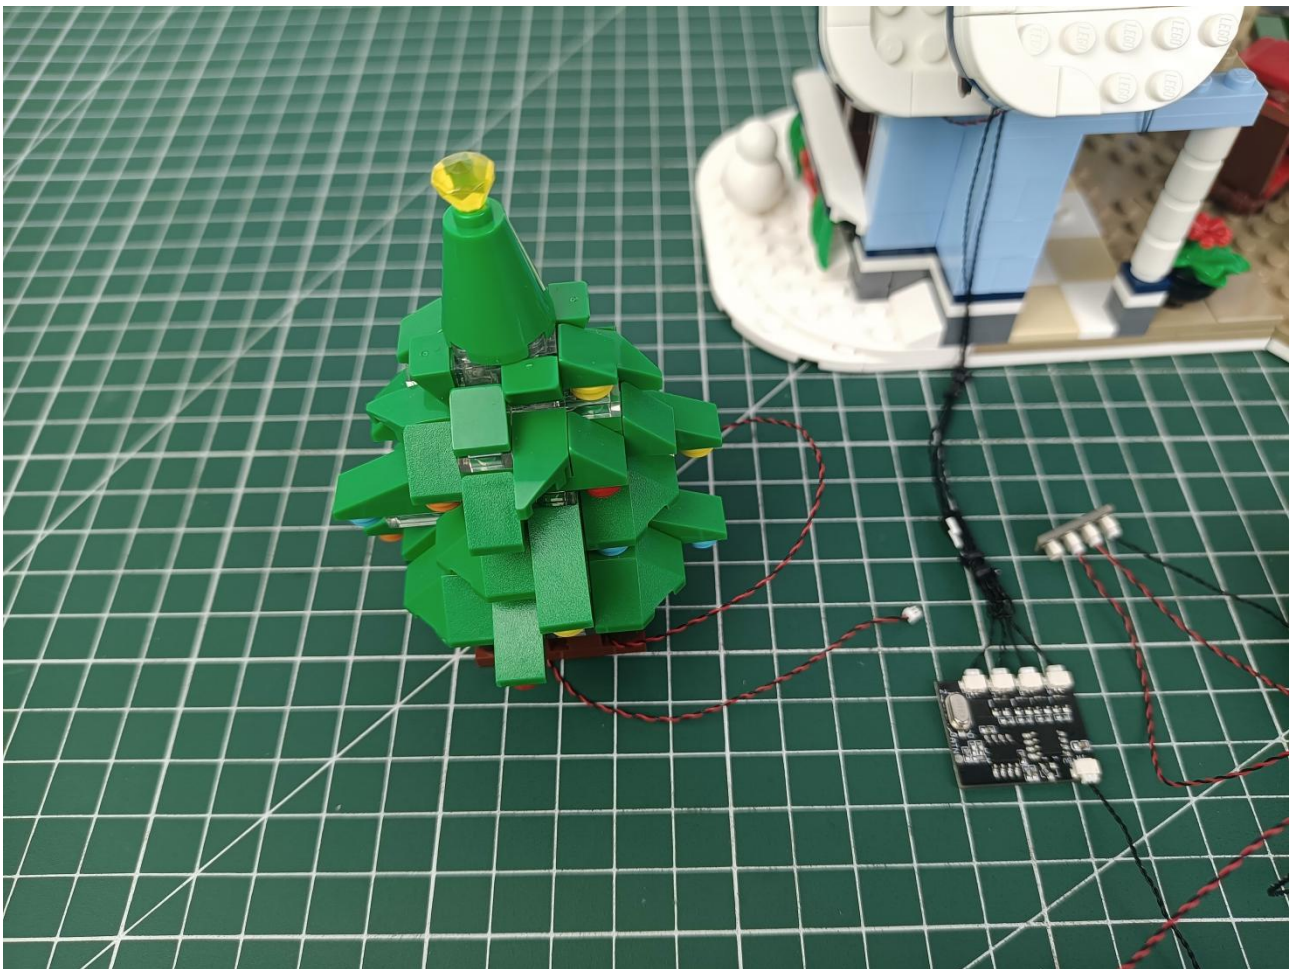

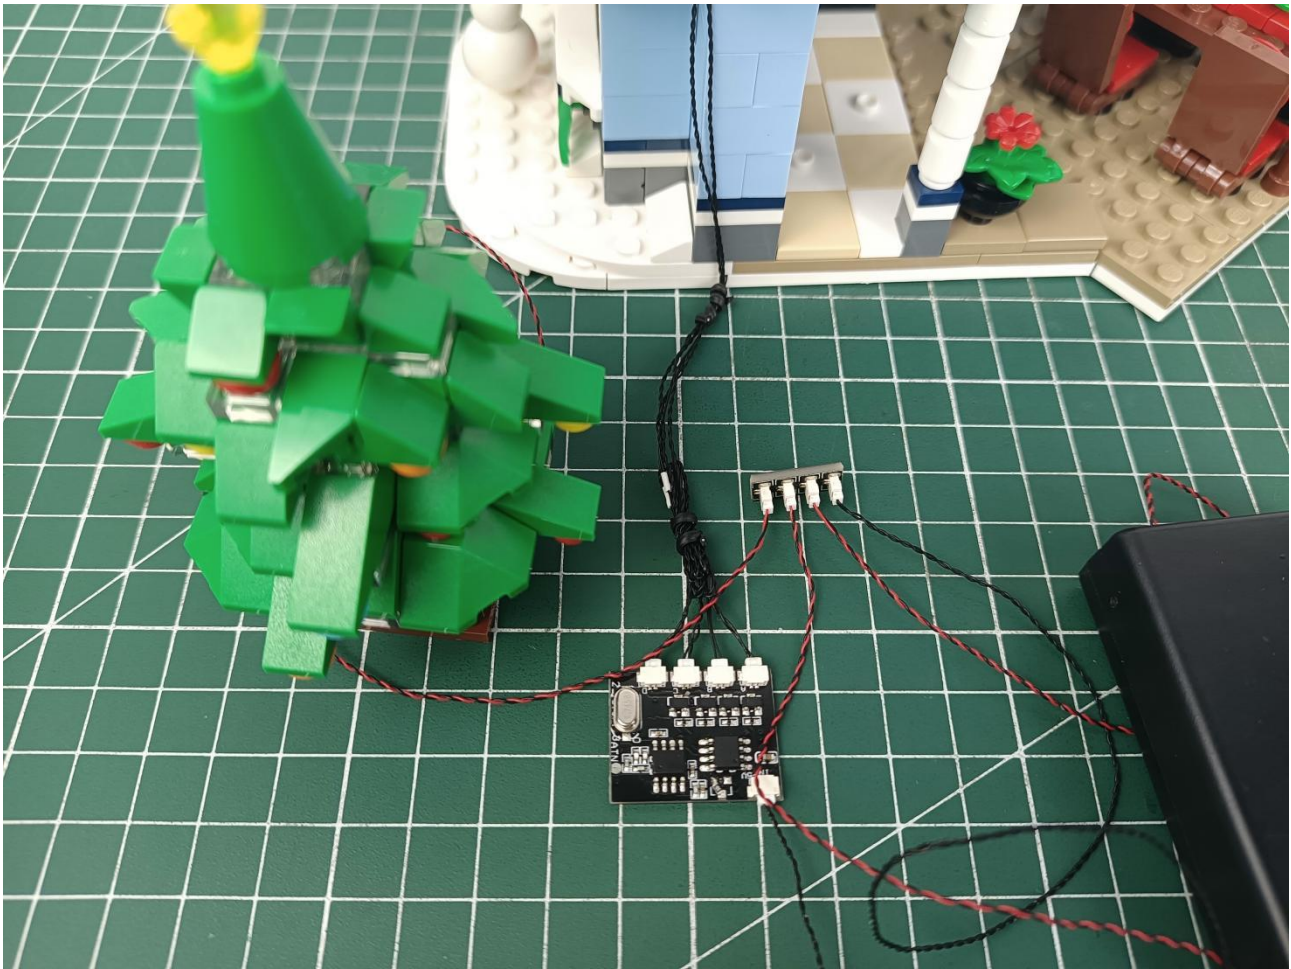

The installation is complete.



The above are ideas and instructions provided by our designers. Please move on:

- 1: Do you have any suggestions about the material and quality of our products?
- 2: Do you have any suggestions on the installation instructions and the degree of difficulty of the installation?
- 3: If you have better installation method and ideas, please contact us in time.