

76178 Daily Bugle P24703

- P24703 is the unique code of lighting set, we use this to accurately identify the product you purchased and the corresponding manuals and services you need to obtain. Please make sure your product code is the same as the label on the back of the box shown “76178 P24703”.
- Installation requires a lot of patience and great observation that your LEGO bricks will come alive when you get this finished. The bricks with lighting as below, so make sure you're ready and let's get started.



Strategies for the Installation

This instruction divides three sections to complete the installation of the lighting set.

Section A: Check the type and quantity of components.

The quantity and type of components of each products are different and it needs to be carefully checked to make sure there do have enough material.

The type of components is indicated by the label on the bag.

Section B: Test that each components is working properly.

Each components is made individually so it is necessary to test that each components is working properly to avoid the situation that the lighting does not work .

Section C: laying out components following the instruction.

Our material is very small but not fragile, just be reminded that don't to pull the wires too hard. For different people, there may be some installation steps that you can't understand. Please look at the previous and later installation step

Section A: Check the type and quantity of components.

There are 27 bags in this set. The name and quantities of specific components are as shown , please check carefully.

Label	Content	Quantity
Bit Lights-15CM-Warm White	Bit Lights-15CM-Warm White	1
Bit Lights-15CM-White	Bit Lights-15CM-White	2
Bit Lights-15CM-Red	Bit Lights-15CM-Red	5
Bit Lights-30CM-Red	Bit Lights-30CM-Red	2
Bit Lights-30CM-Warm White	Bit Lights-30CM-Warm White	2
Multi-Colour Lights 15CM	Multi-Colour Lights 15CM	1
Multi-Colour Lights 30CM	Multi-Colour Lights 30CM	1
Headlights-30CM-Warm White	Headlights-30CM-Warm White	2
Headlights-15CM-Warm White	Headlights-15CM-Warm White	7
LED Strip Lights-Blue	LED Strip Lights-Blue	1
LED Strip Lights-White	LED Strip Lights-White	4
LED Strip Lights-Warm White	LED Strip Lights-Warm White	1
Expansion Board	6 Socket Expansion Board	4
	8 Socket Expansion Board	2
	4 Socket Expansion Board	2
AA Battery Box	AA Battery Box	1
Flat Battery Pack	Flat Battery Pack	1
USB Power Cable	USB Power Cable-50CM	1
Connecting Cables-30CM	Connecting Cables-30CM	4
Connecting Cables-50CM	Connecting Cables-50CM	1
Connecting Cables-10CM	Connecting Cables-10CM	5
Connecting Cables-20CM	Connecting Cables-20CM	3
Flashing Bit Lights-30CM-Red	Flashing Bit Lights-30CM-Red	1
Flashing Bit Lights-15CM-Red	Flashing Bit Lights-15CM-Red	3
Multi-Colour Light String	Multi-Colour Light String	1
Light Strips-White-28	Light Strips-White-28	3
Light Strips-Red-28	Light Strips-Red-28	2
Voice Control Module	Voice Control Module	1
Parts package		

Please contact us immediately if there have any missing components.

Section B: Test that each components is working properly.

We need a structure to test all lights, so take out the bag with label “USB Power Cord”and “Expansion Boards”as follows.




It is worth reminding that our products are all customized. They have a unique way of connecting. The white plug on wire and the socket of the expansion board need to be connected together to transmit power.

Note that on one side of the white plug you can see two very small golden wires that should be connected to the two golden needles in socket of the expansion board.shown as blow.




All our connections between plug and socket are all the same as shown above. So for any such structure with plug and socket, please pay attention to the golden wire of the plug and the golden needle of the socket, they must be touched together.

The connection method between the USB Power Cord and Expansion Boards is as follows:

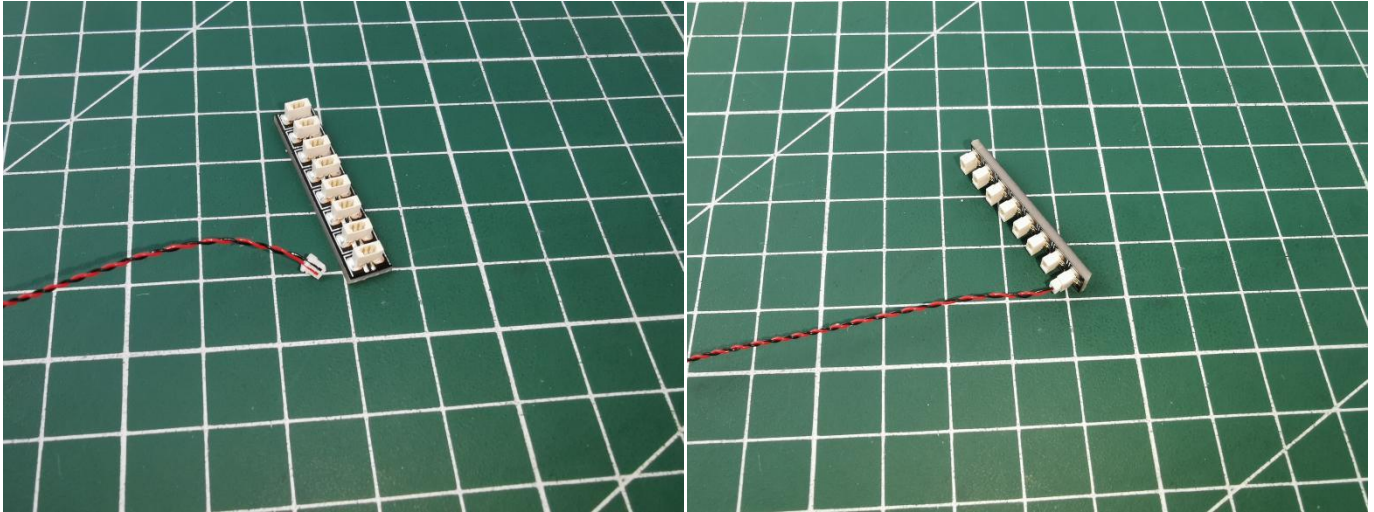

The USB Power Cord can be powered by phone chargers, power banks, etc.


USB connectors to connect devices

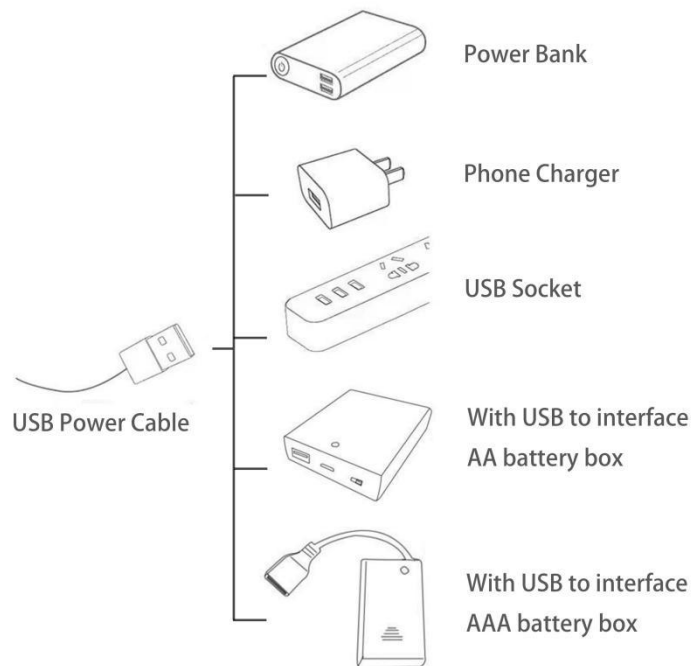

This instruction will use the power bank as power supply . The test structure is shown as follow. All lamp in this set will be tested by this structure.



when we test "Bit Lights-15CM-Warm White" particles,Take out the bag labelled "Bit Lights-15CM-Warm White".Take out one of the light and connect it to the socket. Turn on the power bank, the light will turn on normally as shown below.

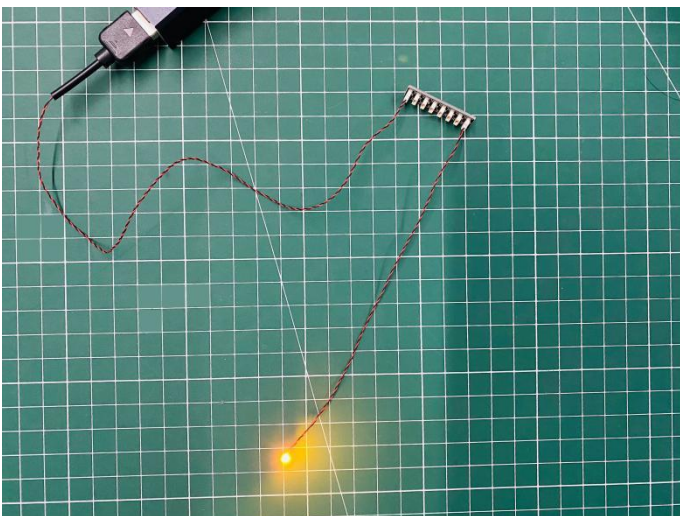


Test each lamp according to this method. It should be noted that after the test, the lamp must be returned to the corresponding bag to avoid confusion of types.



The components needs to be tested in this set is 2*Bit Lights-15CM-White,5*Bit Lights-15CM-Red,2*Bit Lights-30CM-Red,2*Bit Lights-30CM-Warm White,1*Multi-Colour Lights 15CM,1*Multi-Colour Lights 30CM,2*Headlights-30CM-Warm White,7*Headlights-15CM-Warm White,1*LED Strip Lights-Blue,4*LED Strip Lights-White,1*LED Strip Lights-Warm White,1*Flashing Bit Lights-30CM-Red,3*Flashing Bit Lights-15CM-Red,1*Multi-Colour Light String,3*Light Strips-White-28,2*Light Strips-Red-28. Please contact us immediately if any components don't work.

Section C: laying out components following the instruction.

1

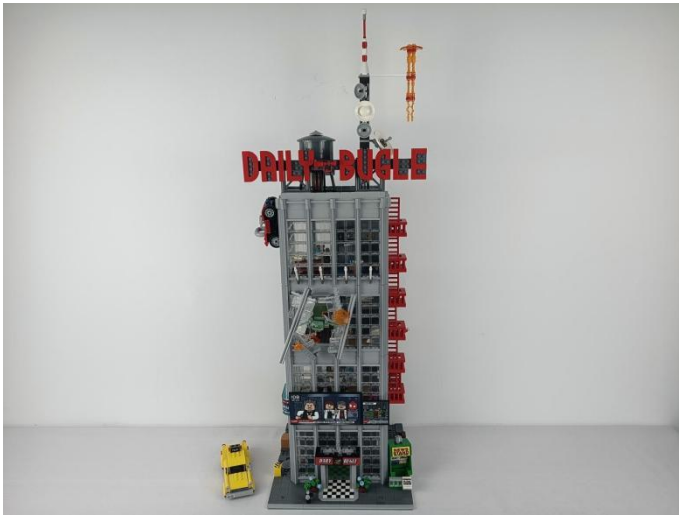


2



3




4

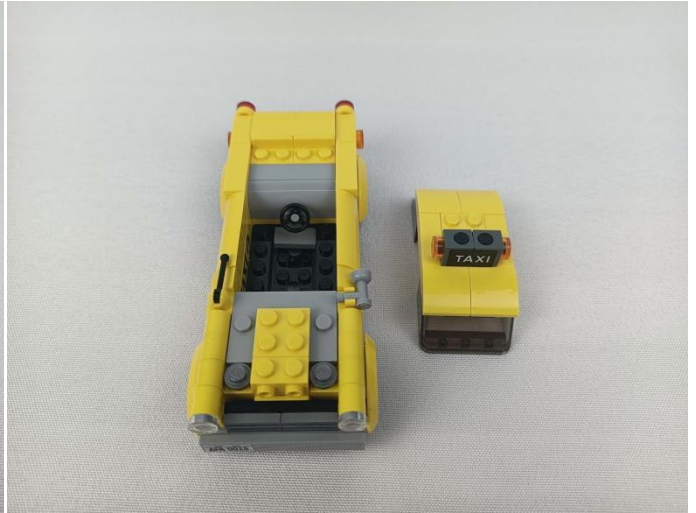

5



6

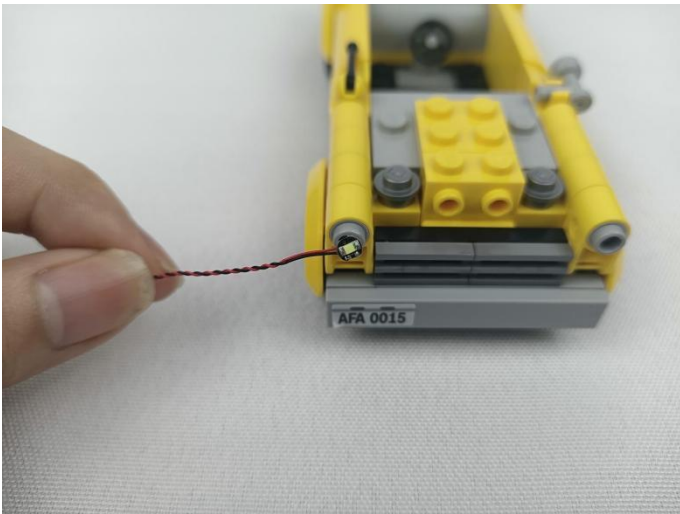

Tips

The plate without slit:

The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work.



The plate with slit:



The plate with slit:

The wire has enough space to avoid being squeezed and is endowed with longer service life and more stable effect.





The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormalheat during installation.



7

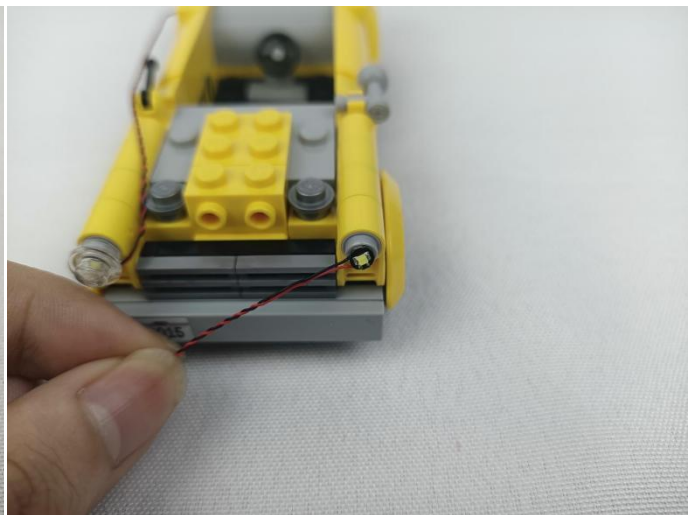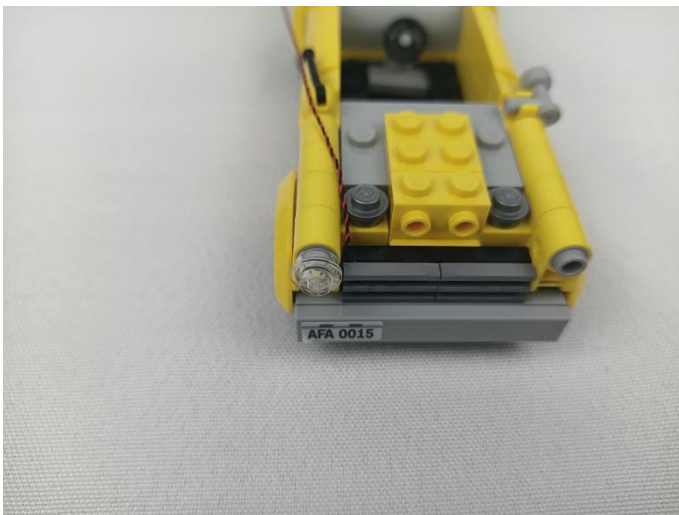



8

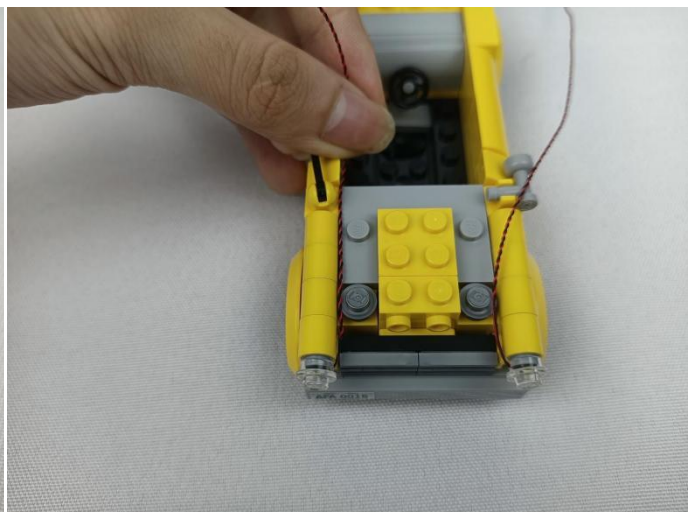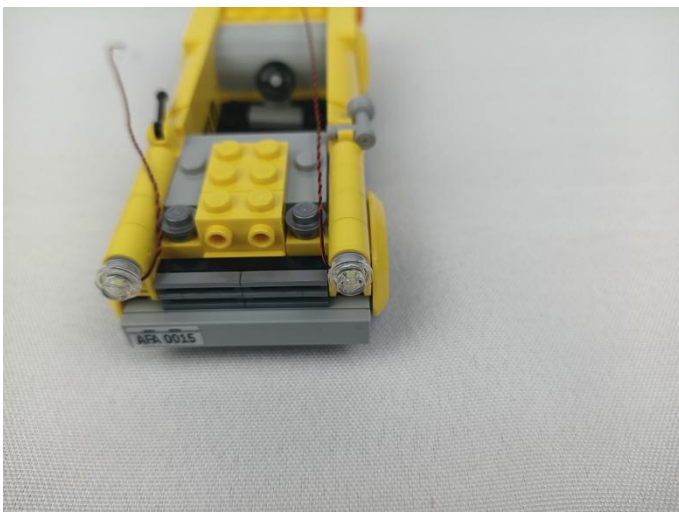



9

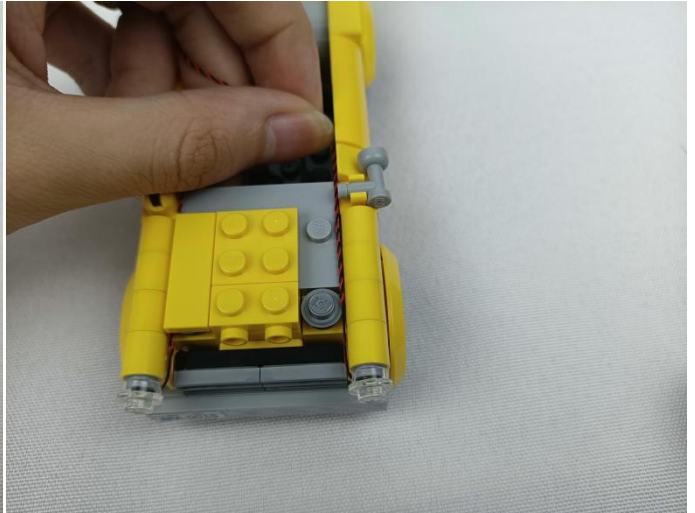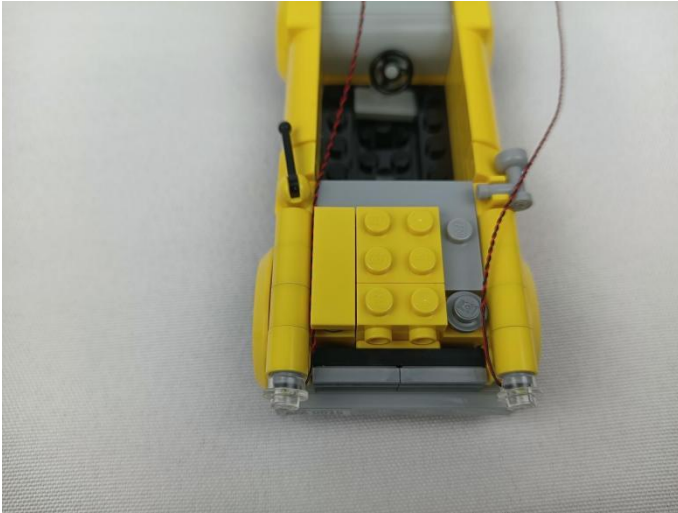


10

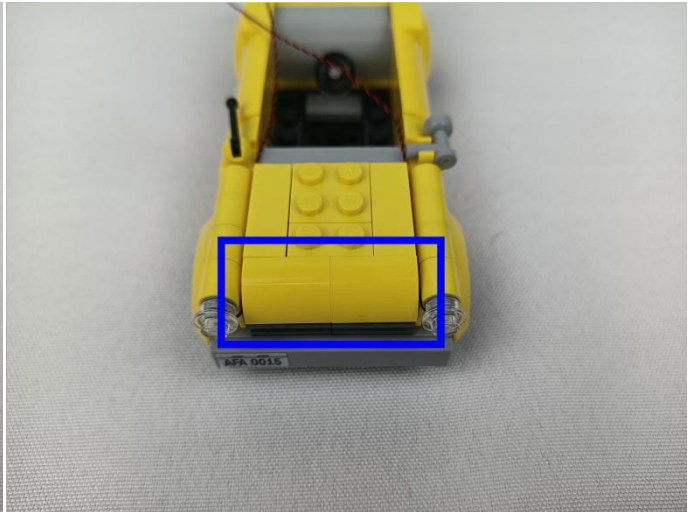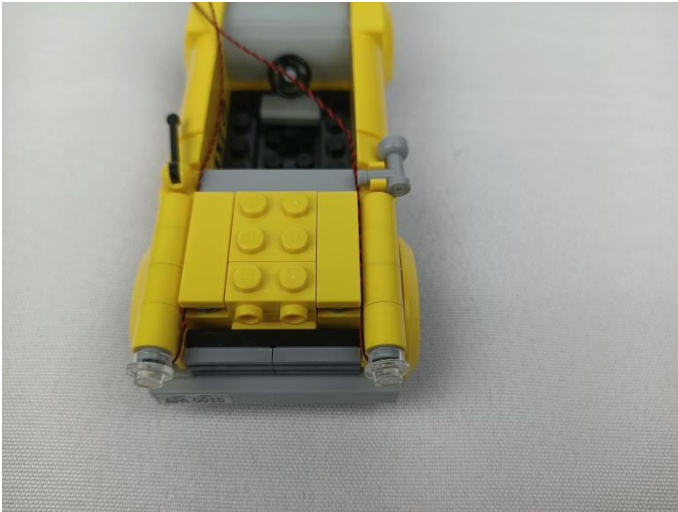



11

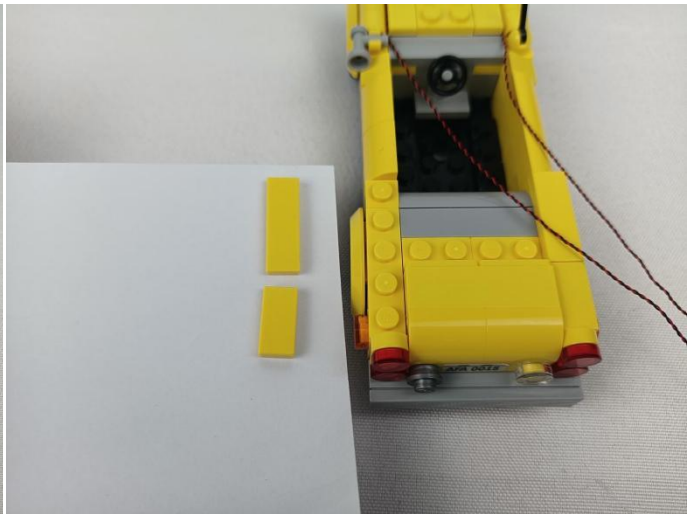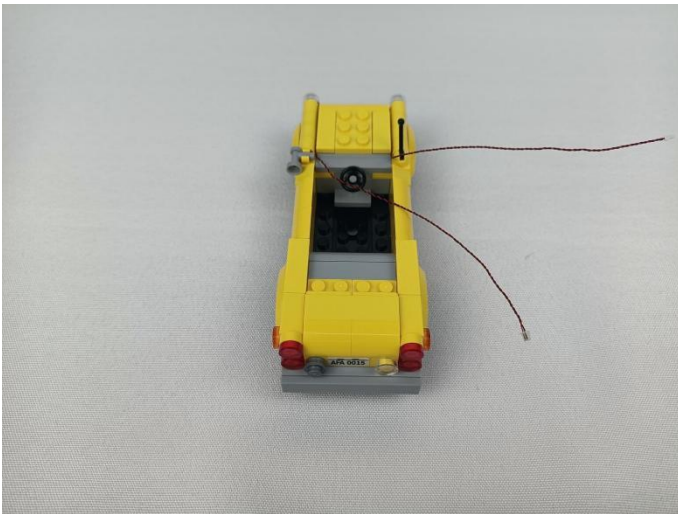


12

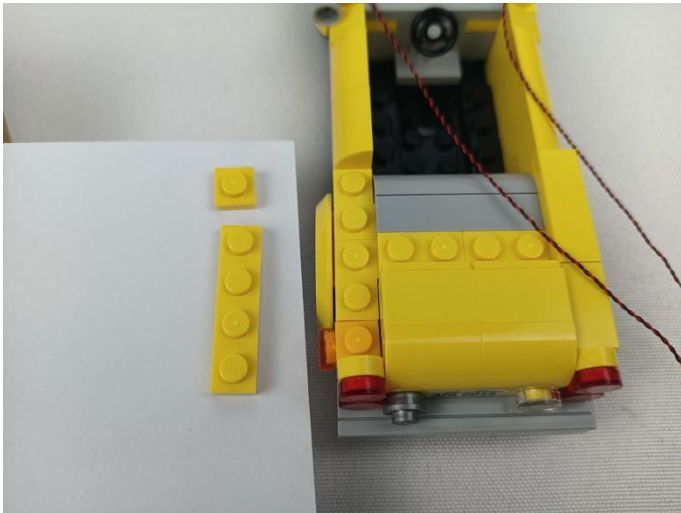


13

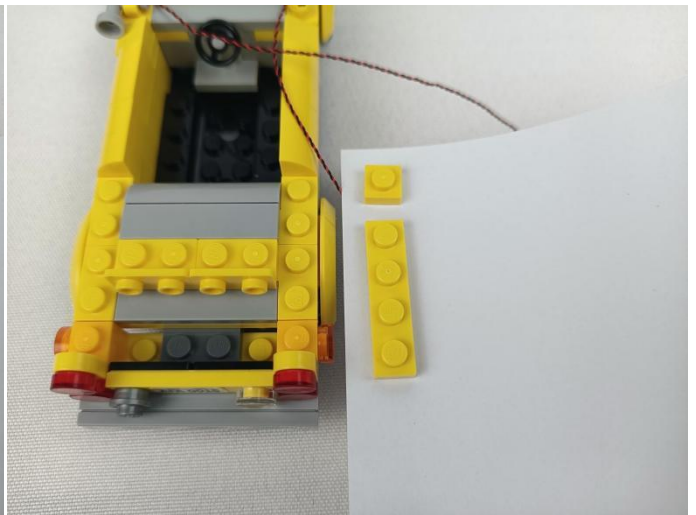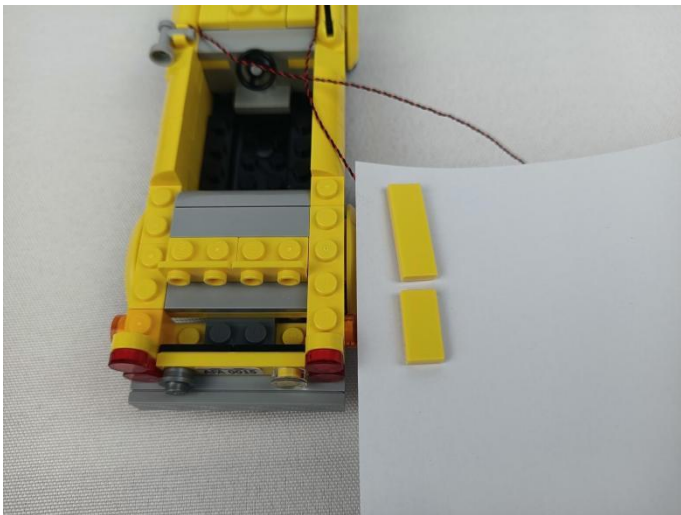



14

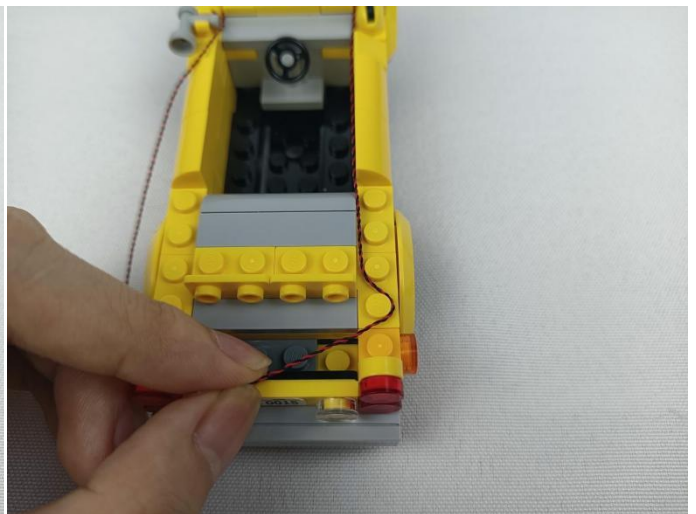



15

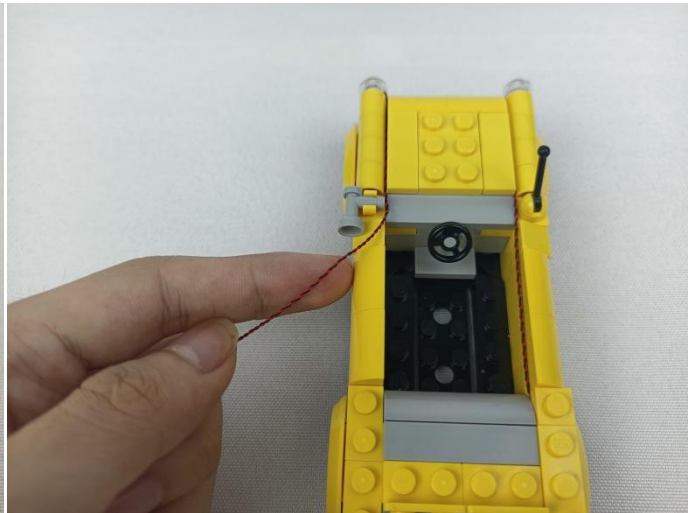


16

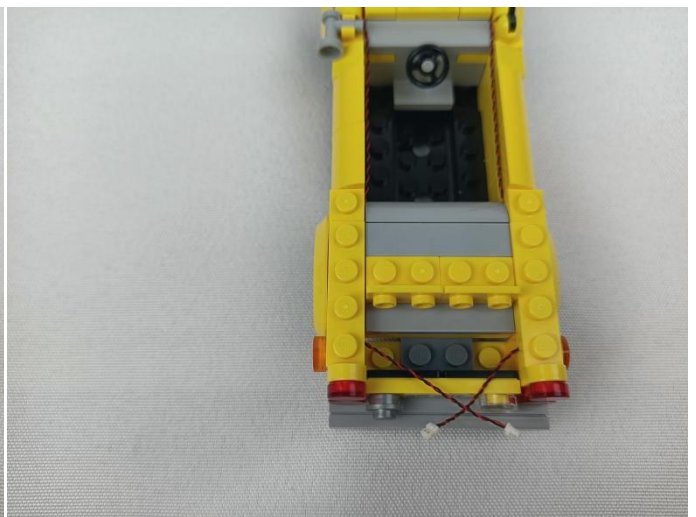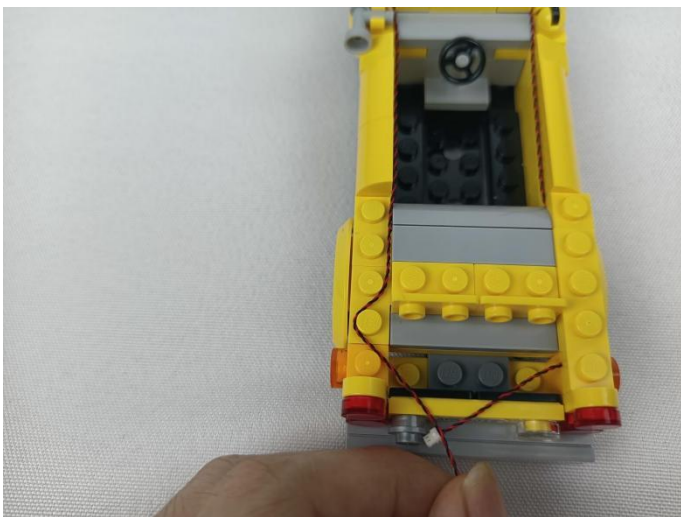


17

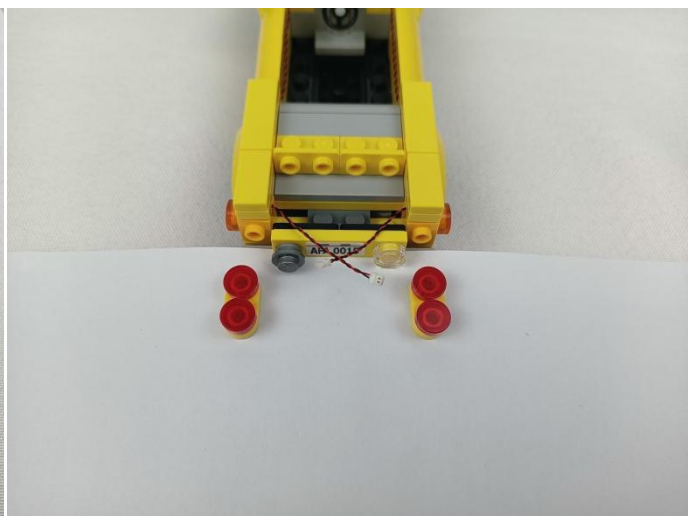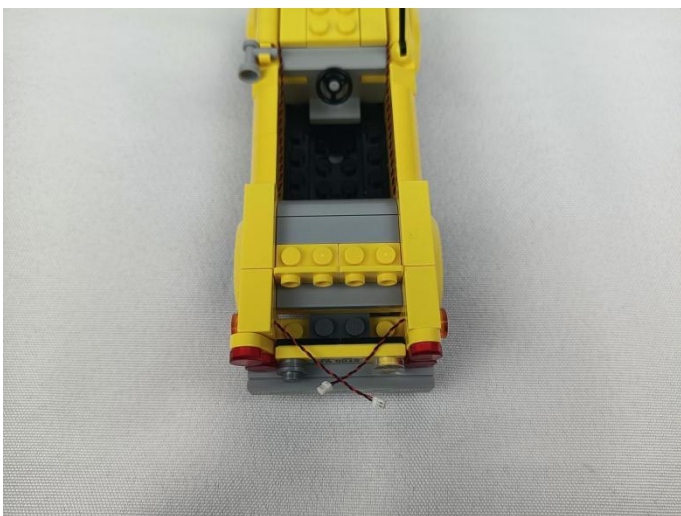


18

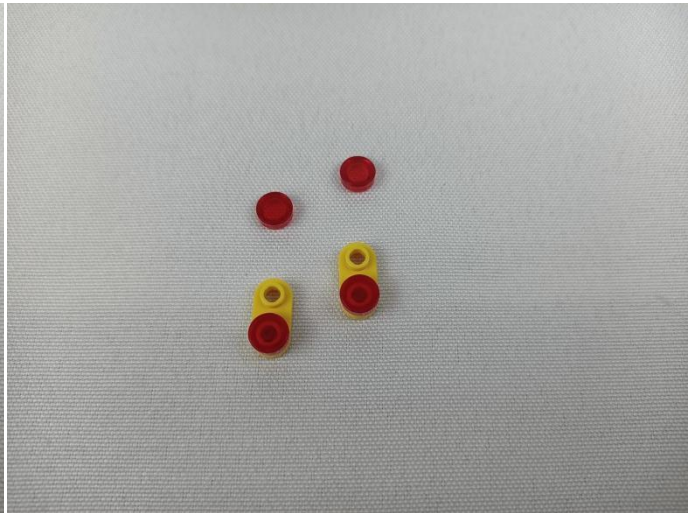

19

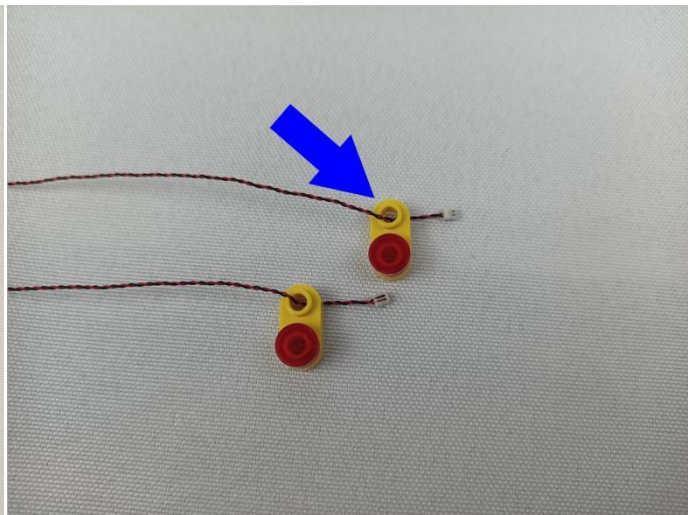

20

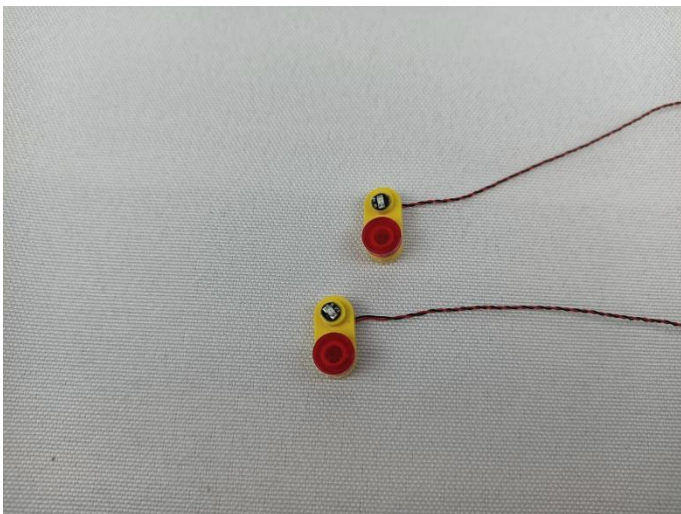


Tips

The plate without slit:

The plate without slit:


The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot wire is crushed, the wire to be disconnected and don't work.



The plate with slit:


The plate with slit:

The wire has enough space to avoid being squeezed and has longer service life and more stable effect.




The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormal heat during installation.

21

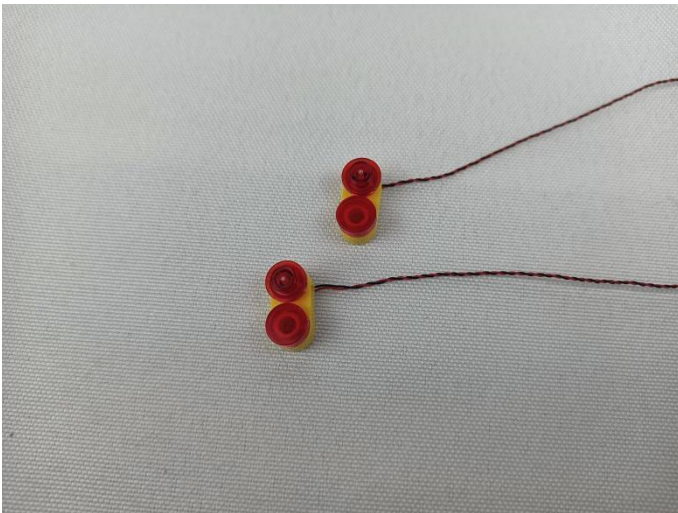


22

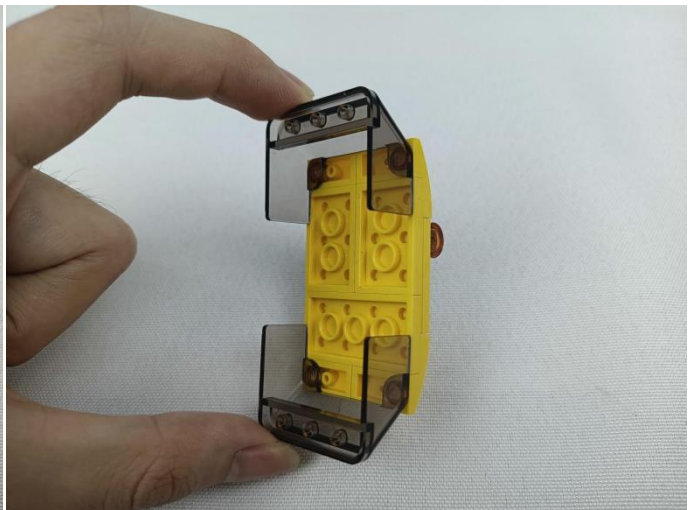



23





24

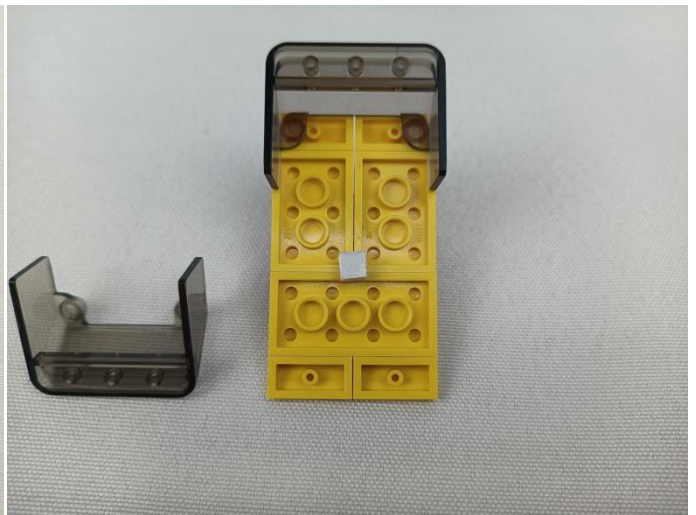

25

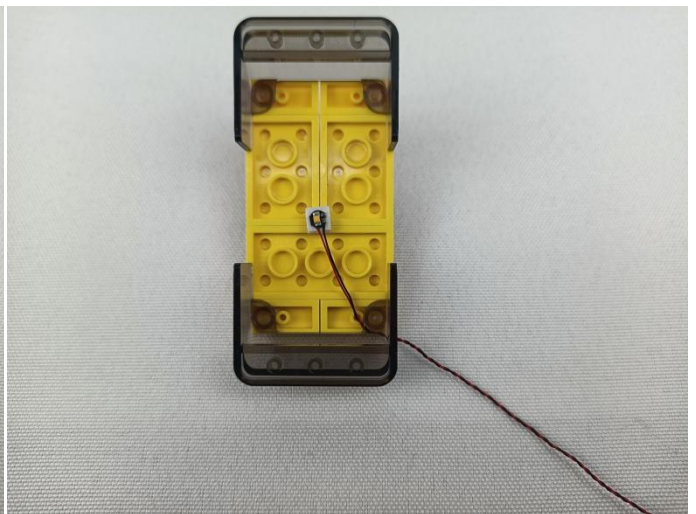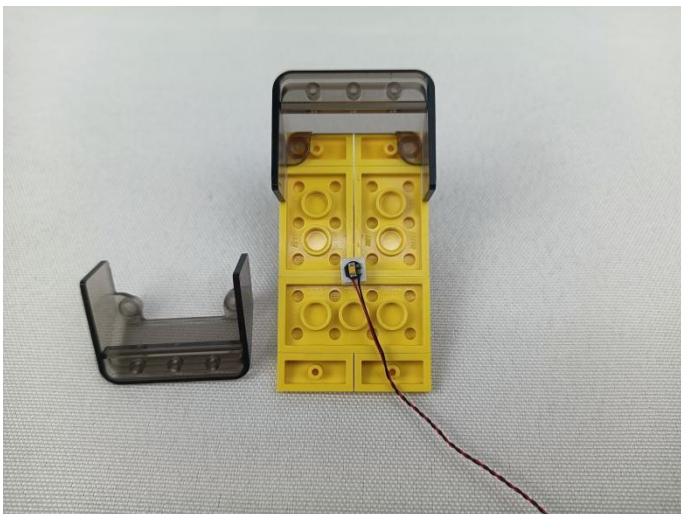



26

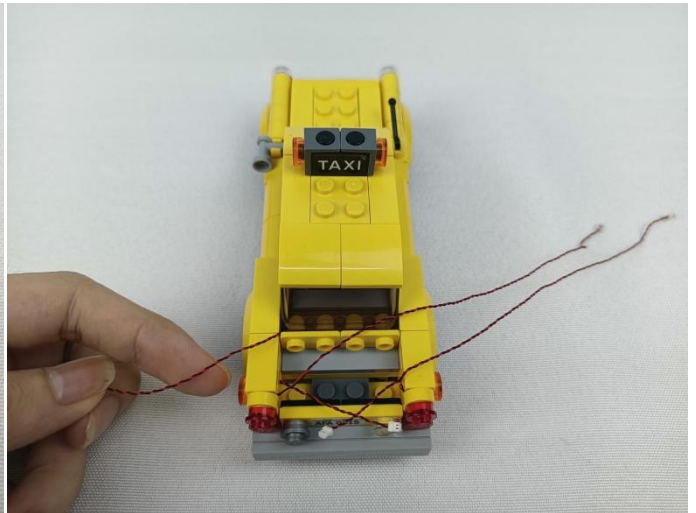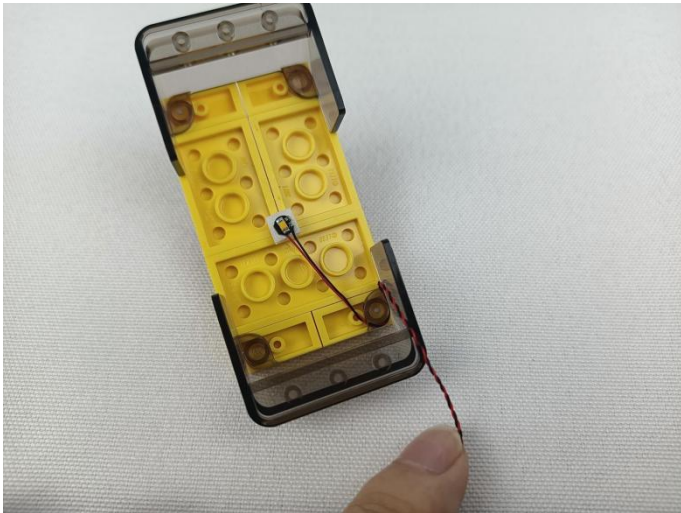

27



28

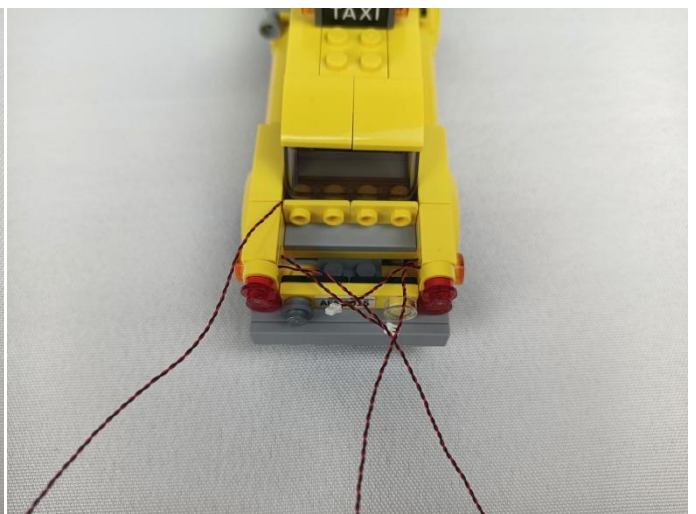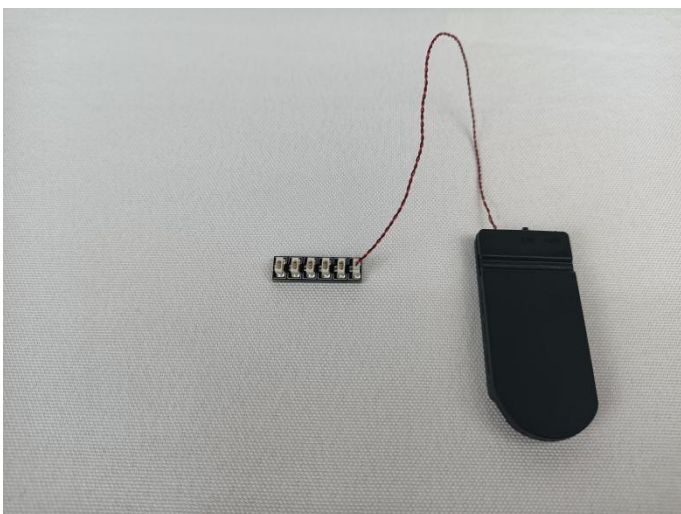

29





30




31



32

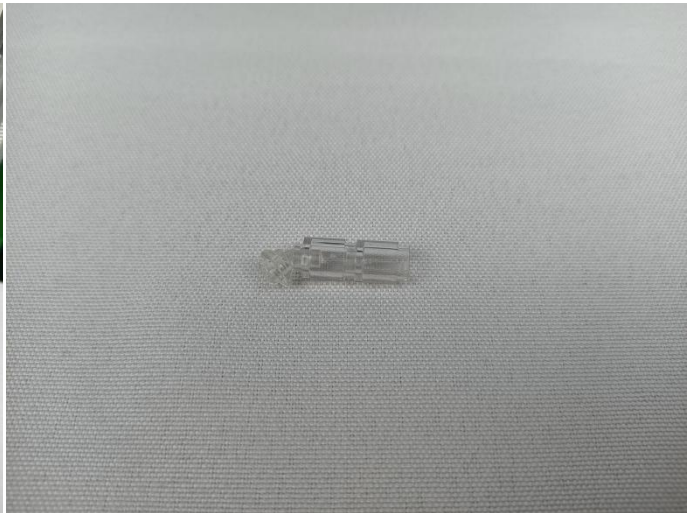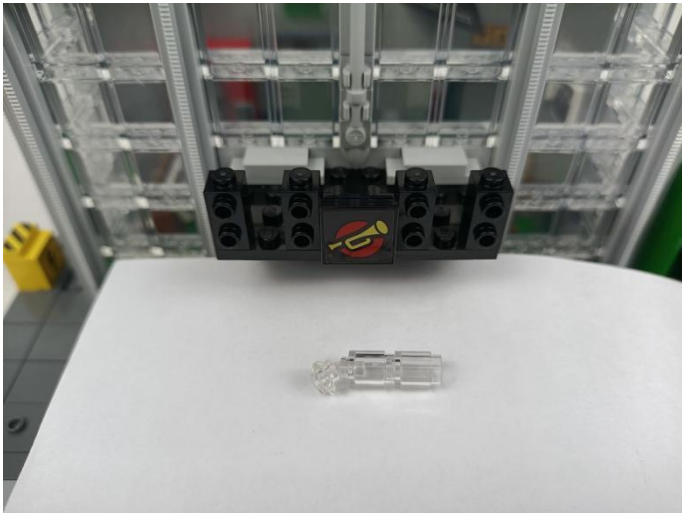



33

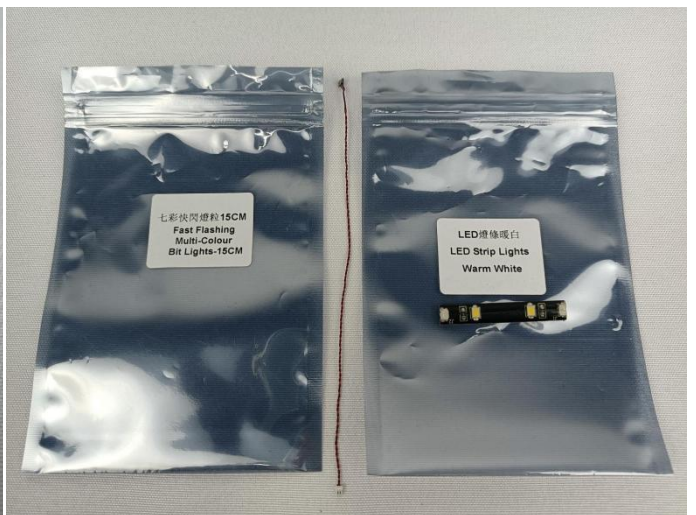


34





35

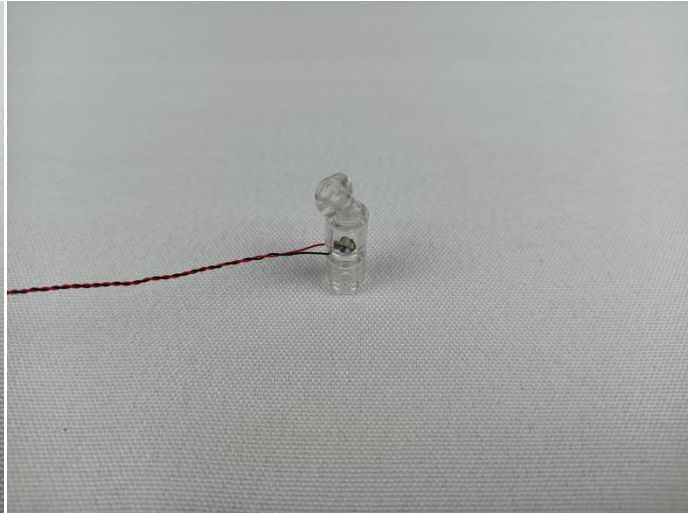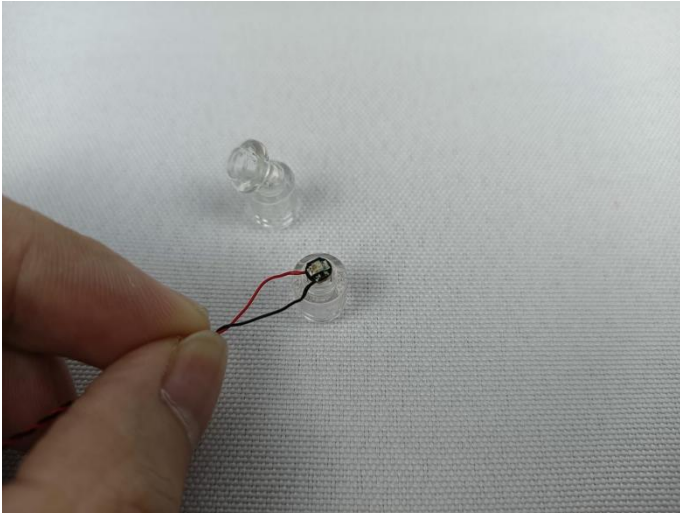



36

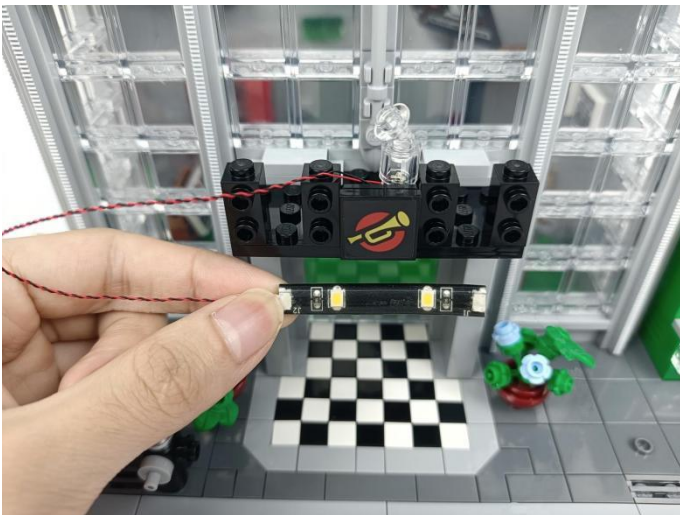


37

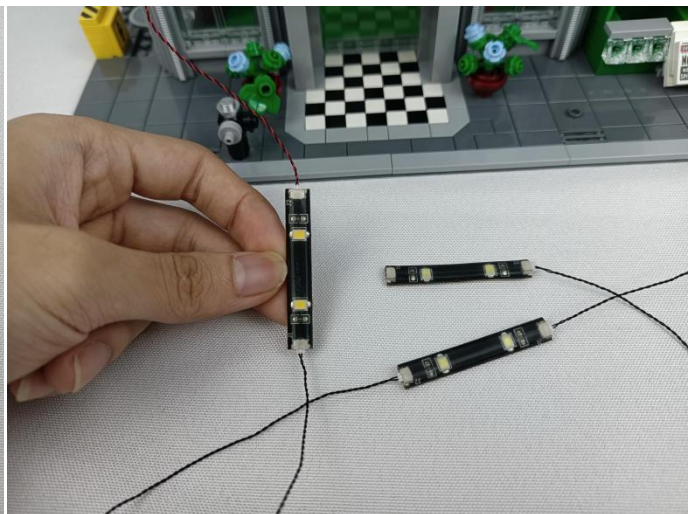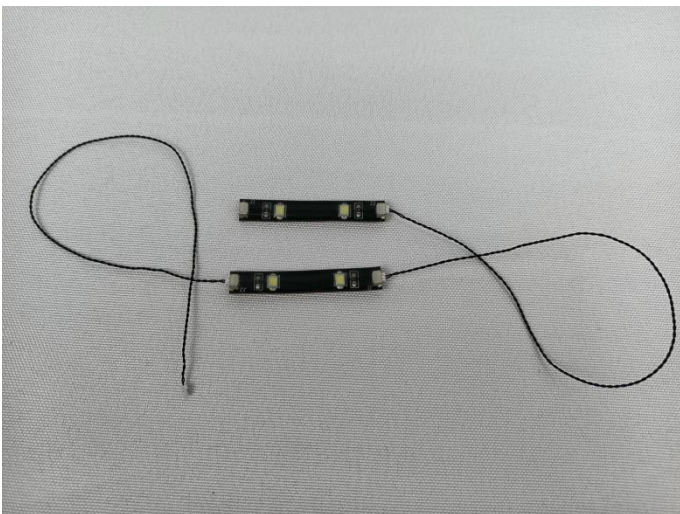

38

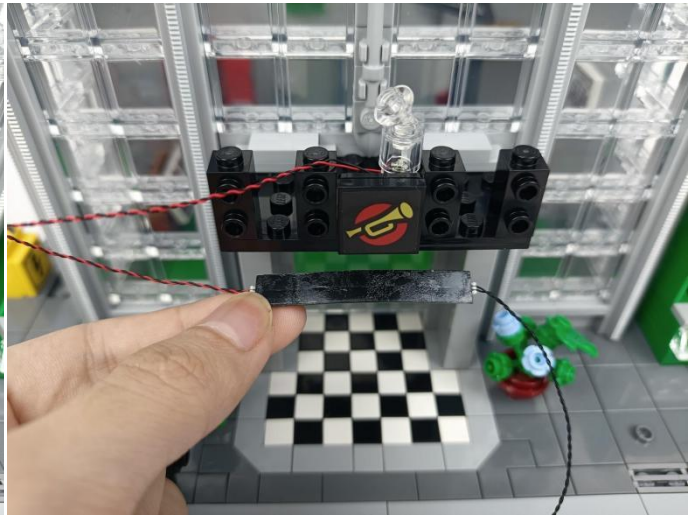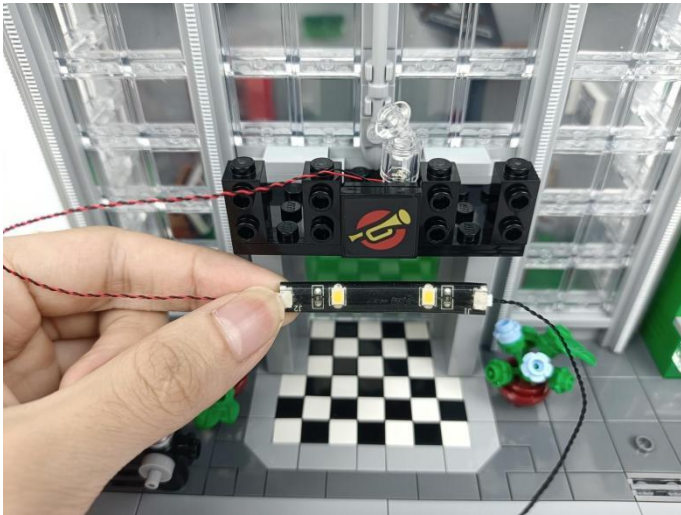


39

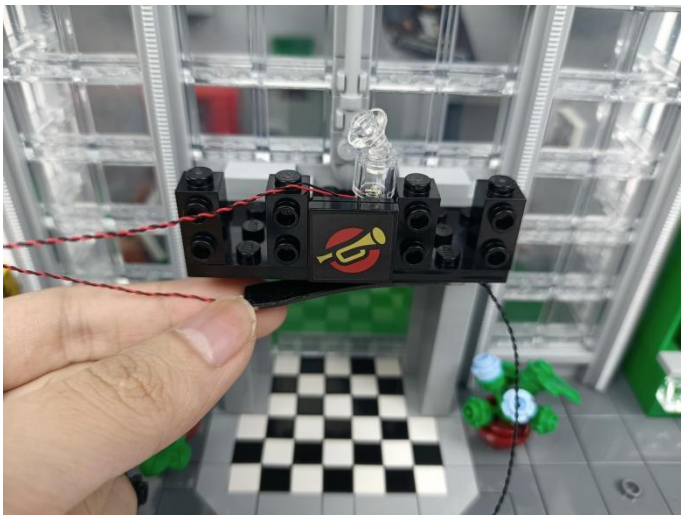



40



41

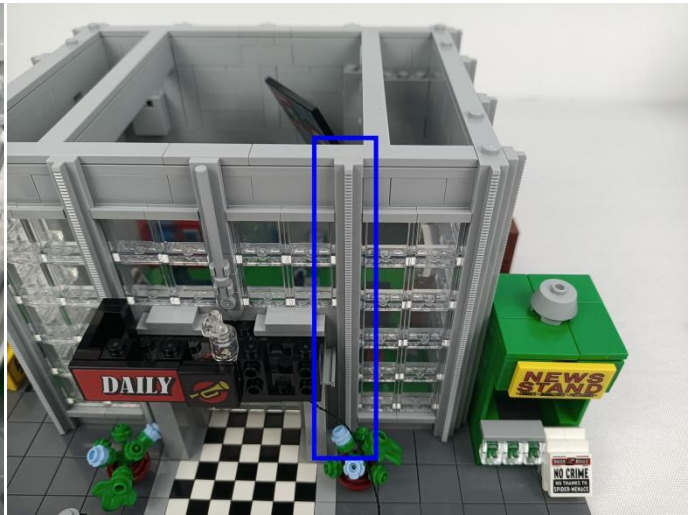

42

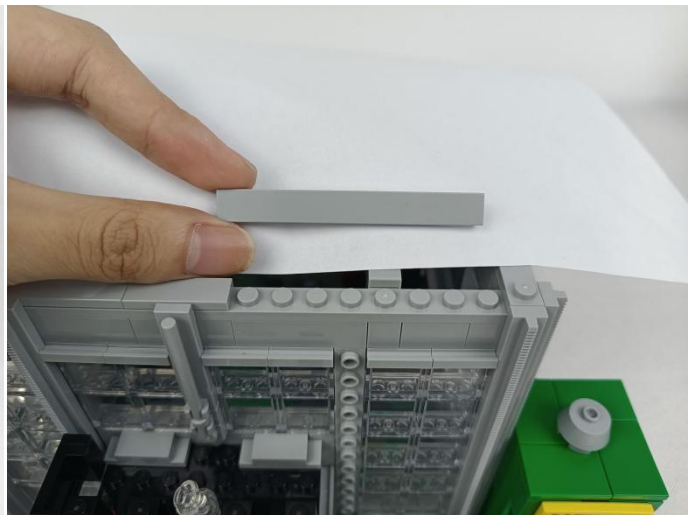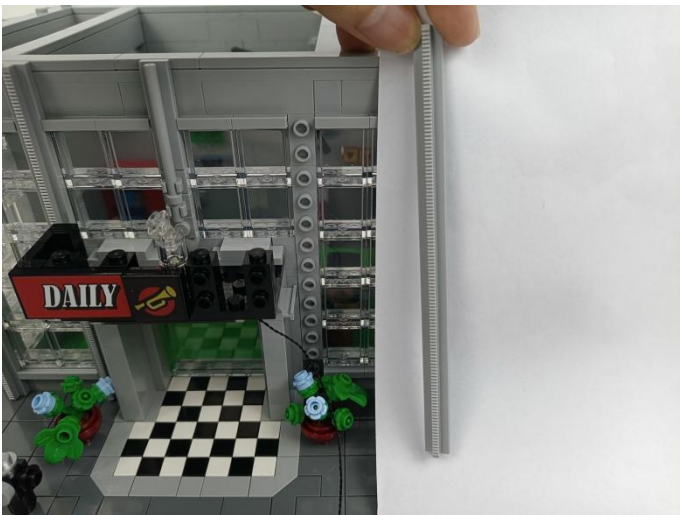


43





44




45

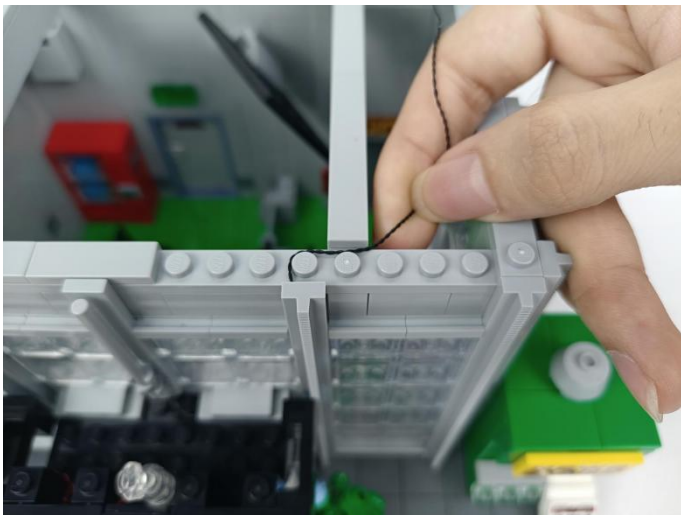


46

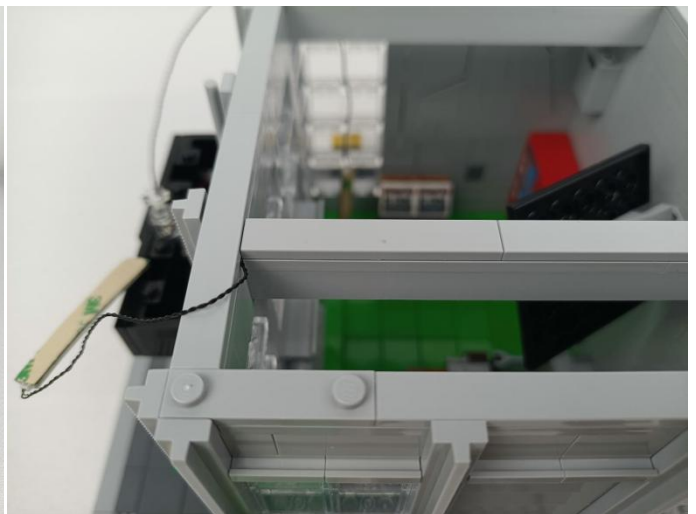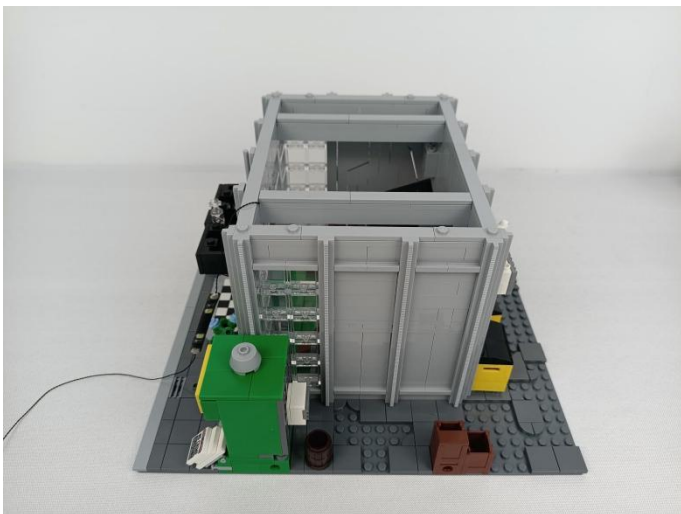



47

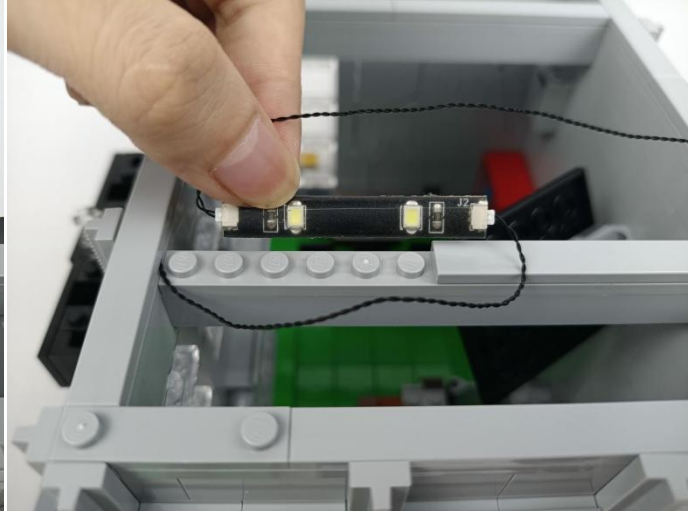



48

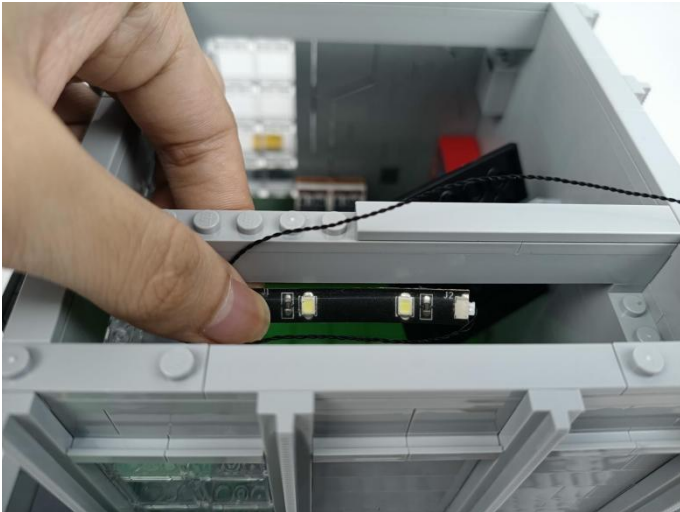



49

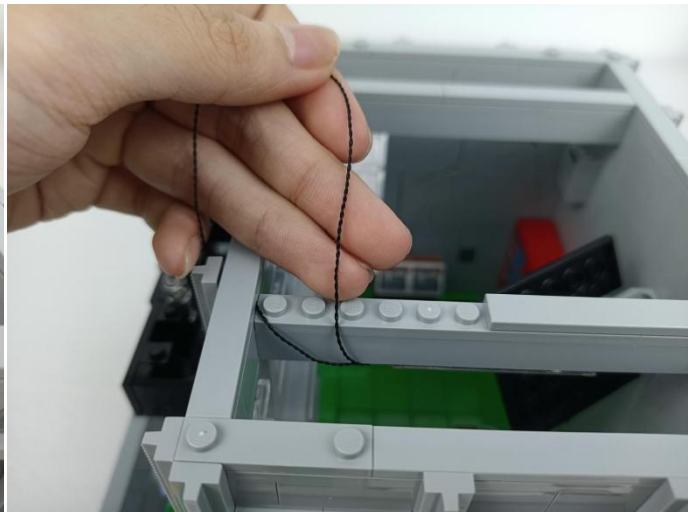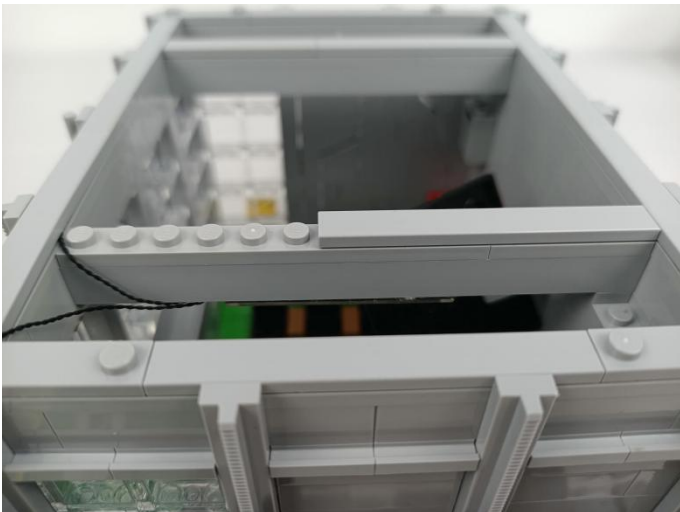



50

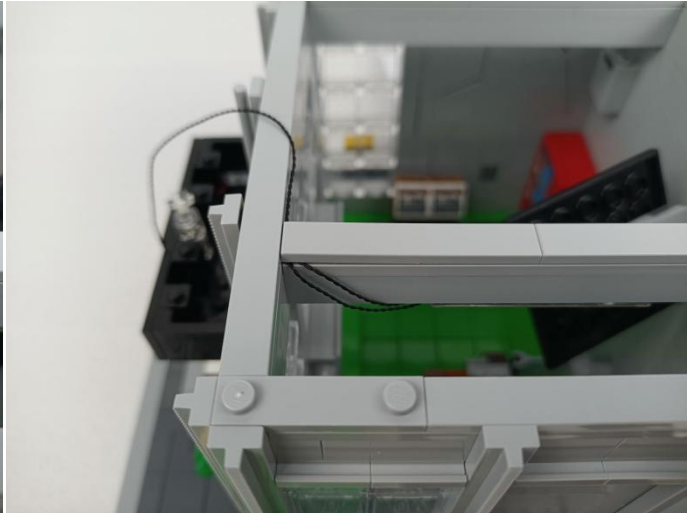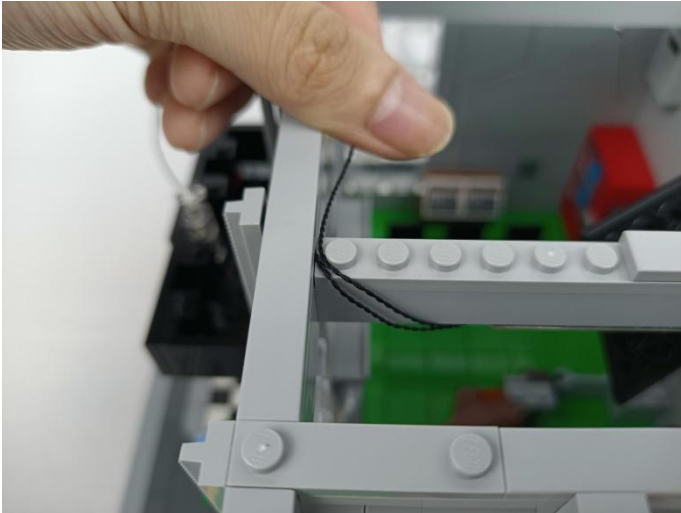

51

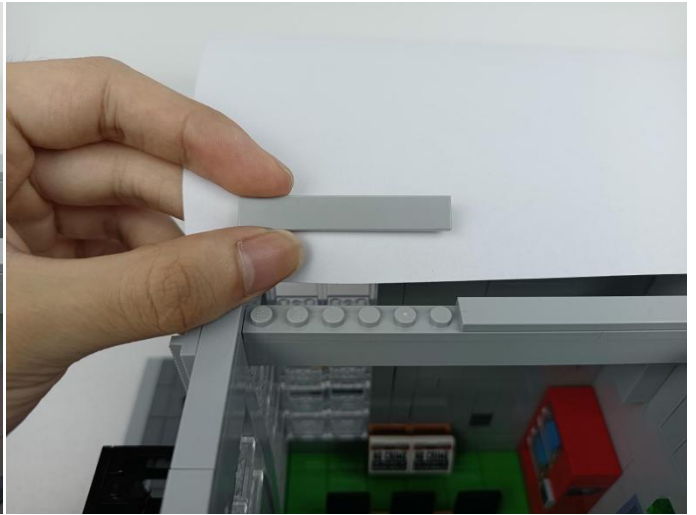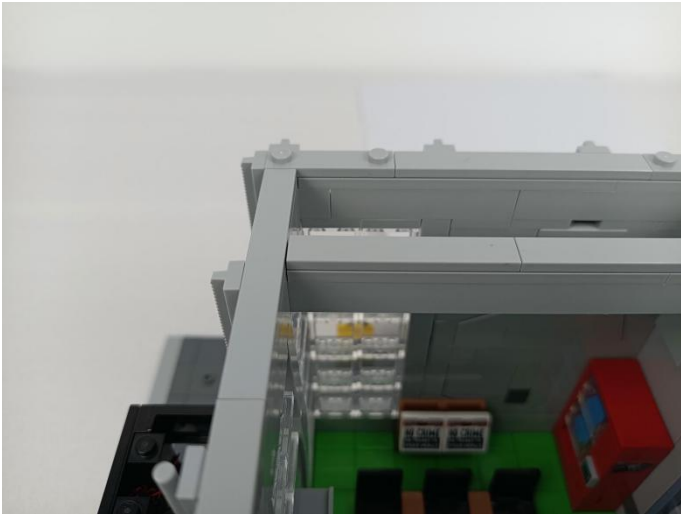



52

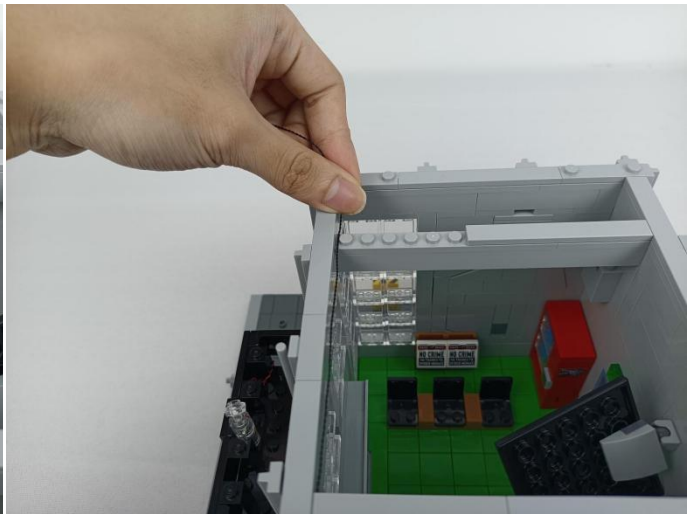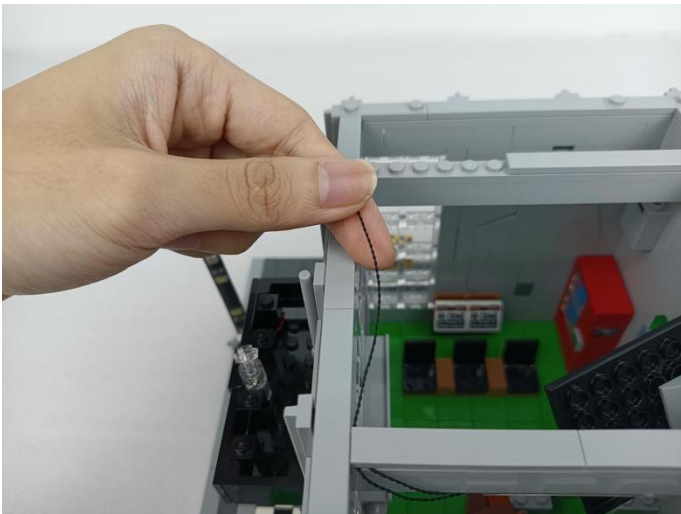

53




54

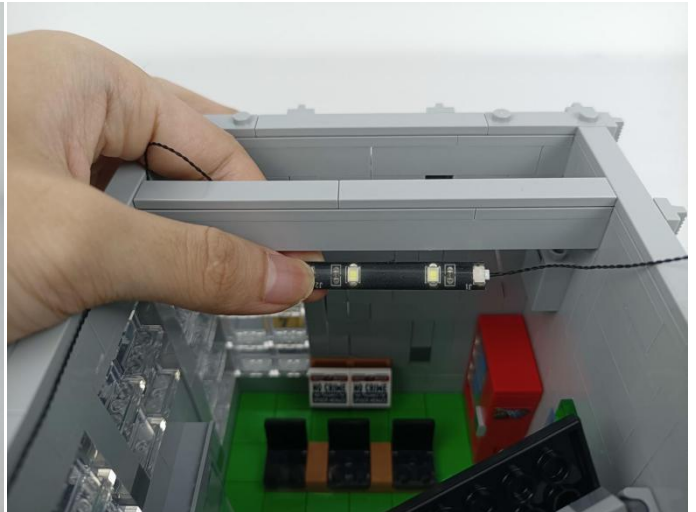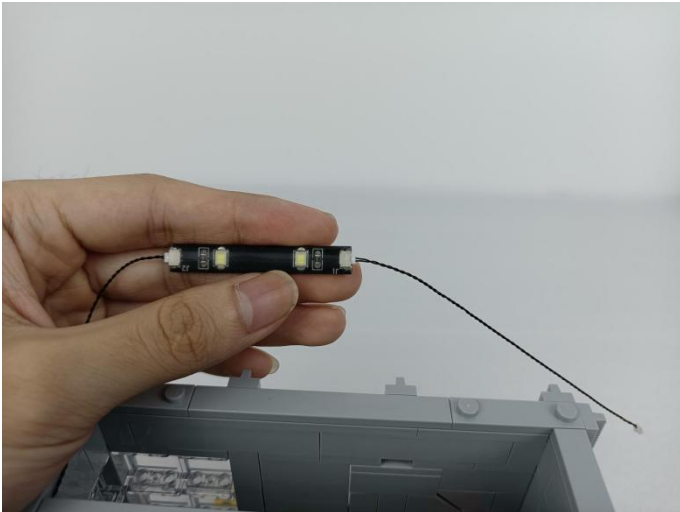



55




56

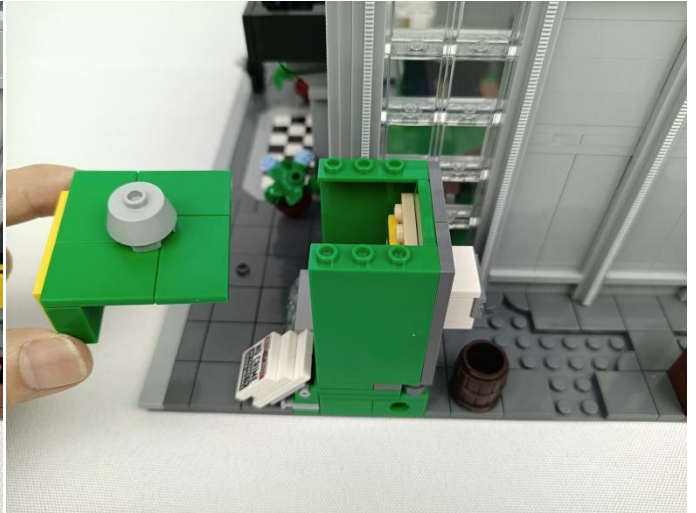



57

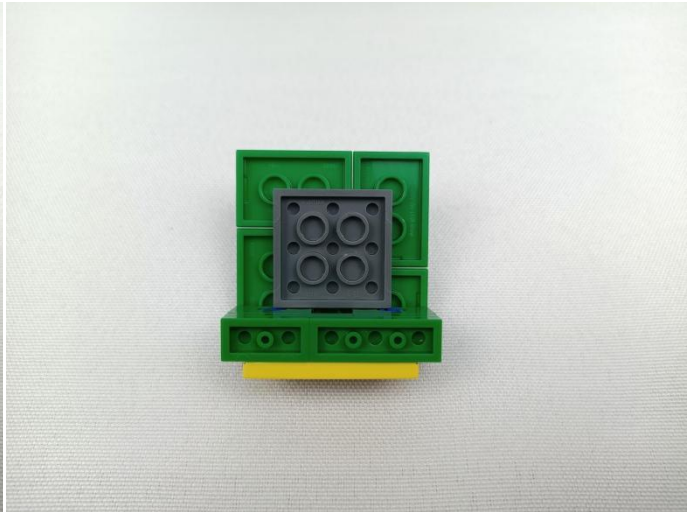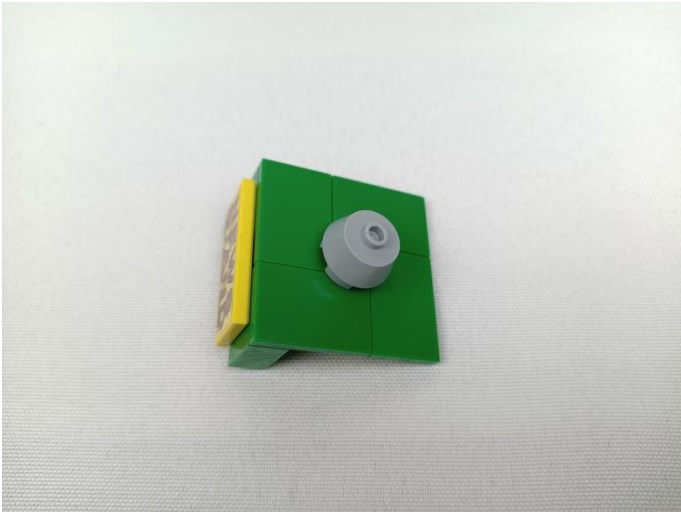



58

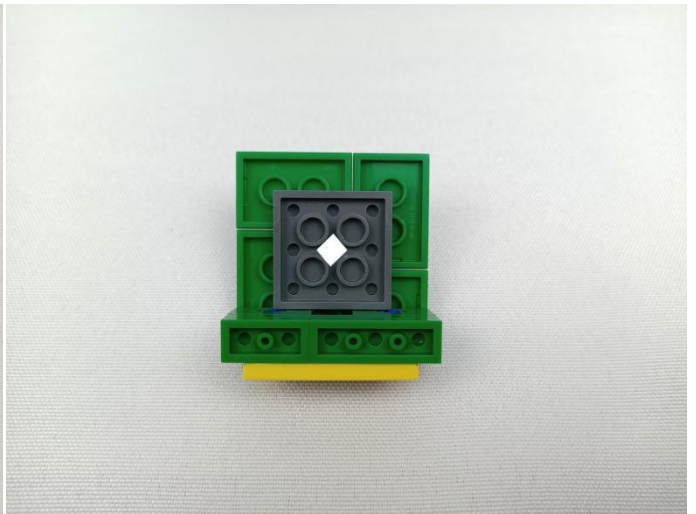



59

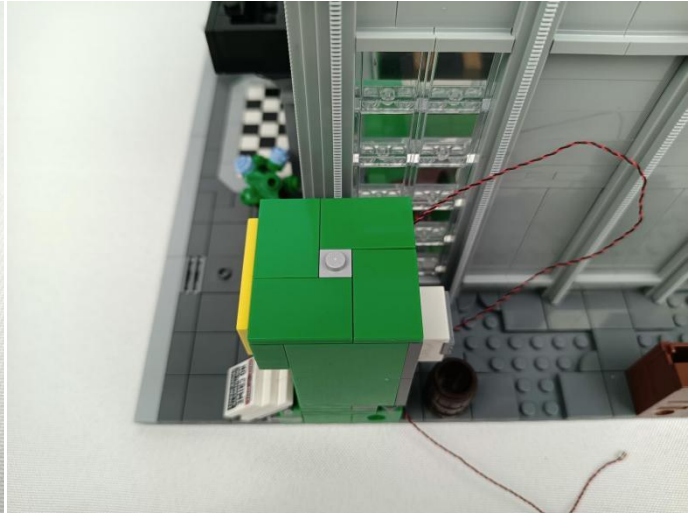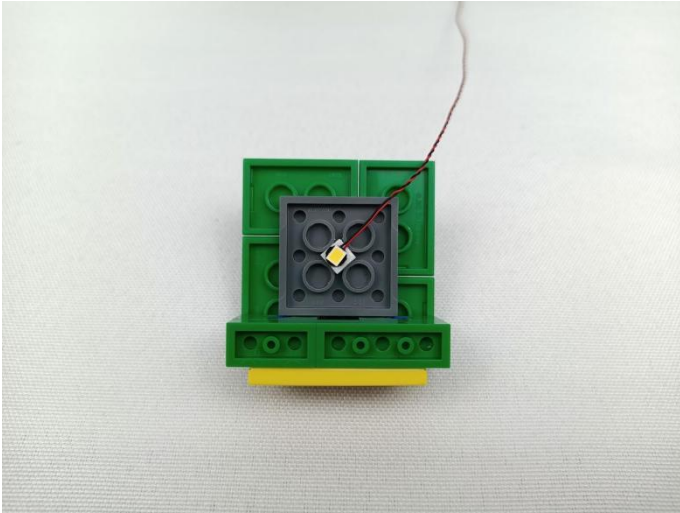



60

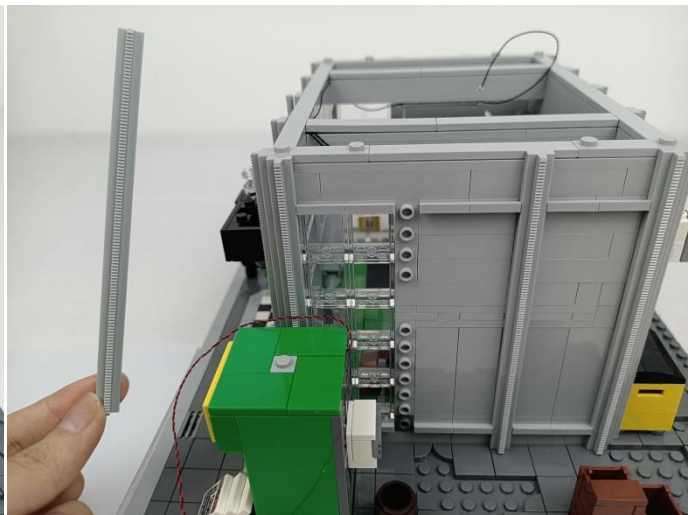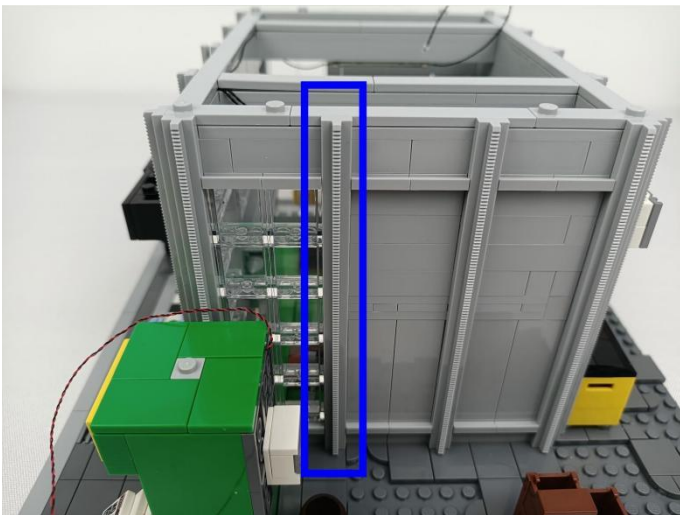

61

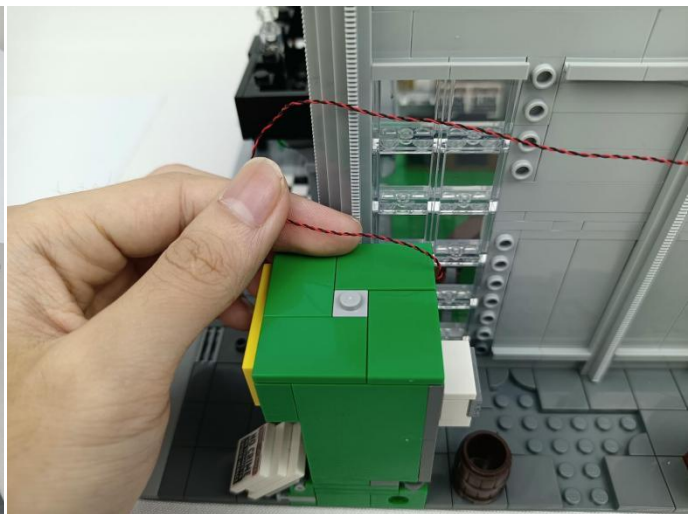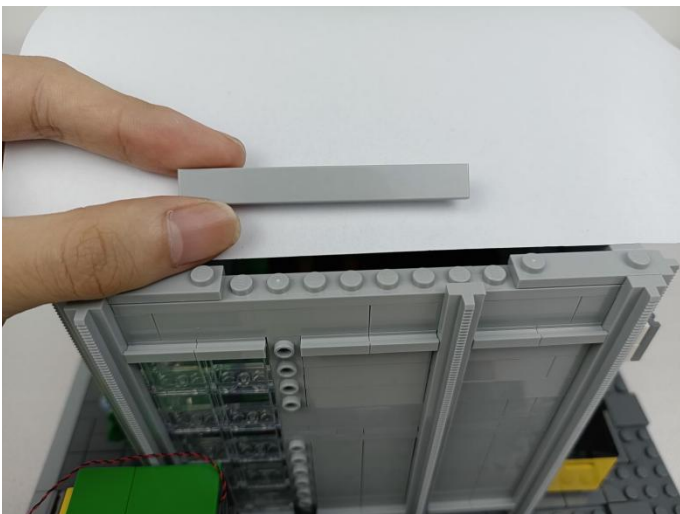



62

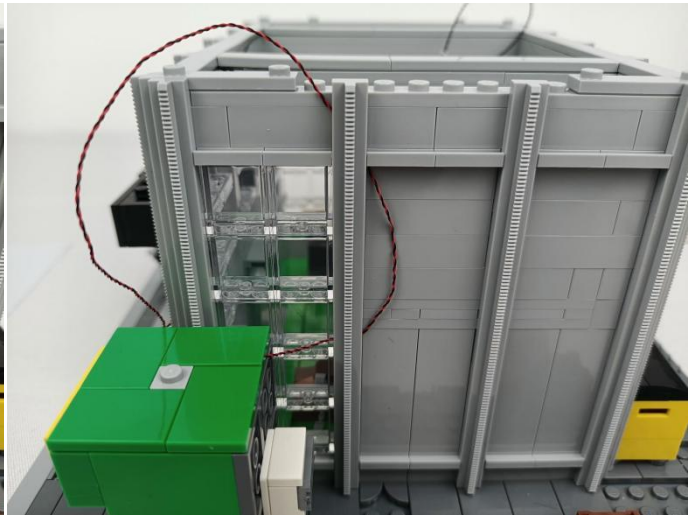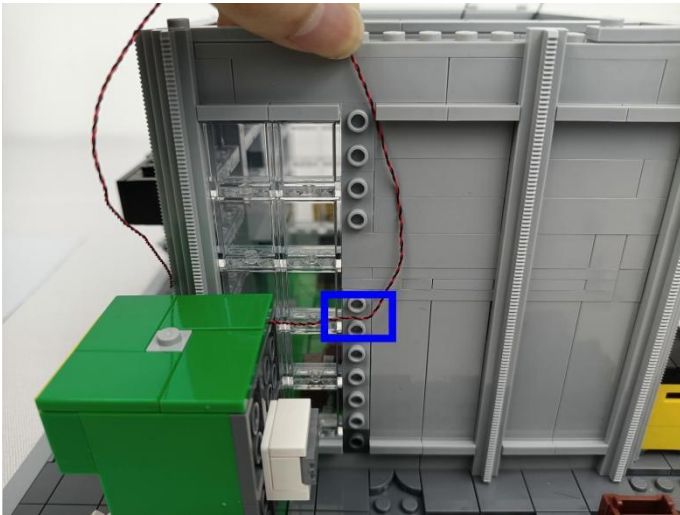

63



64

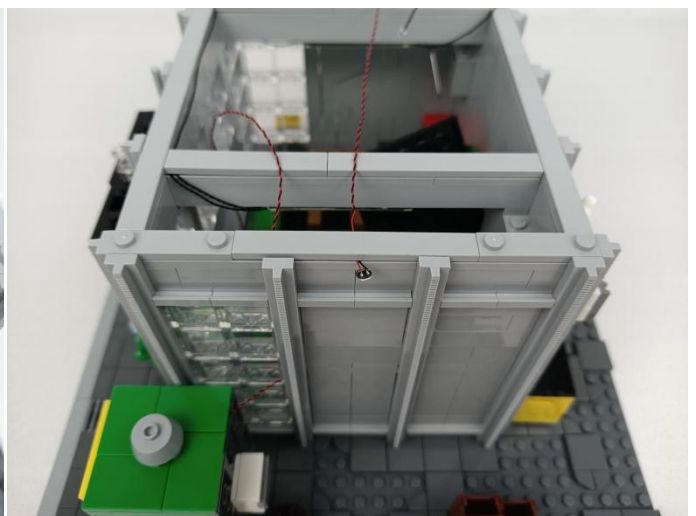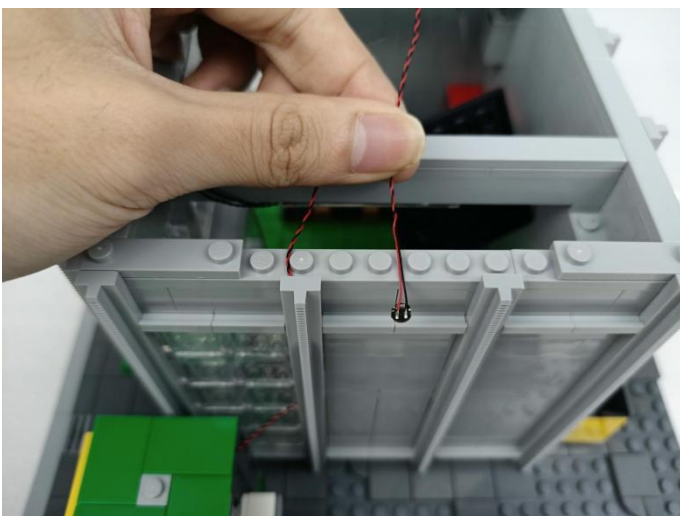


65





66



67

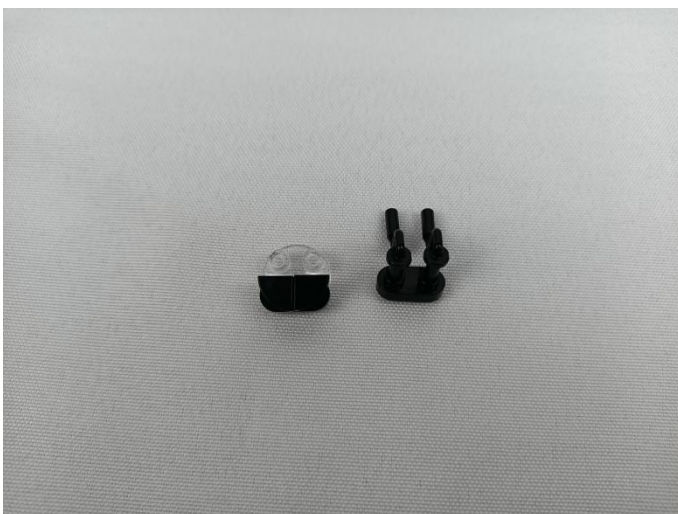



68

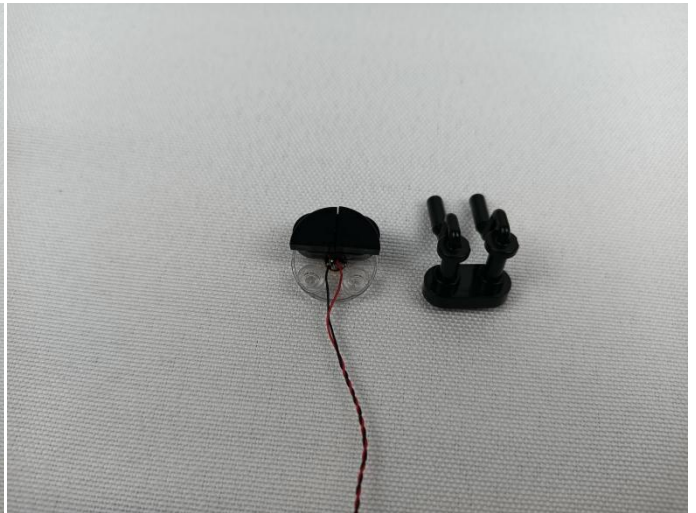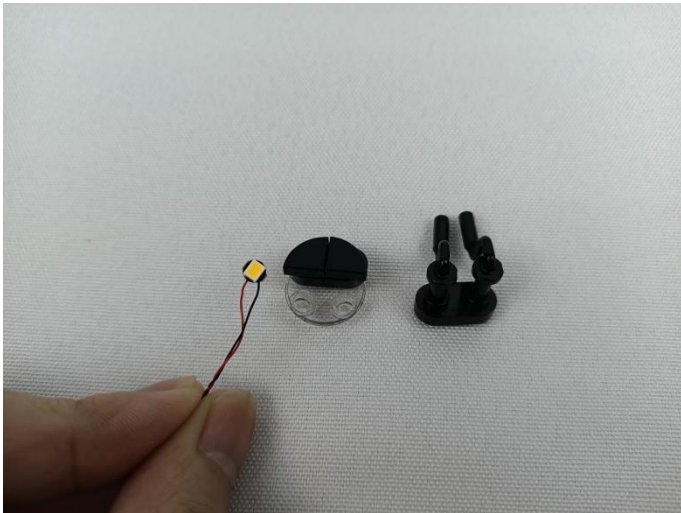


69





70

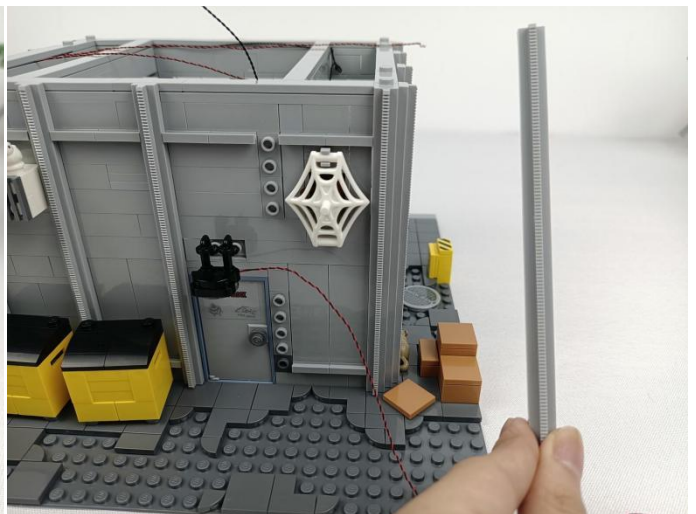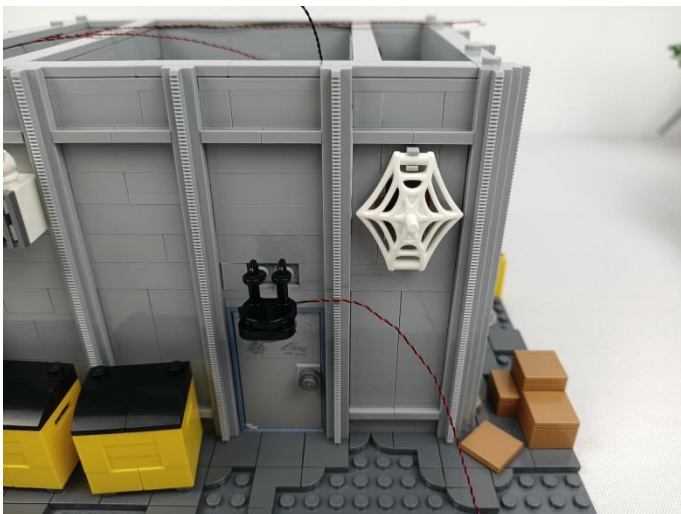



71

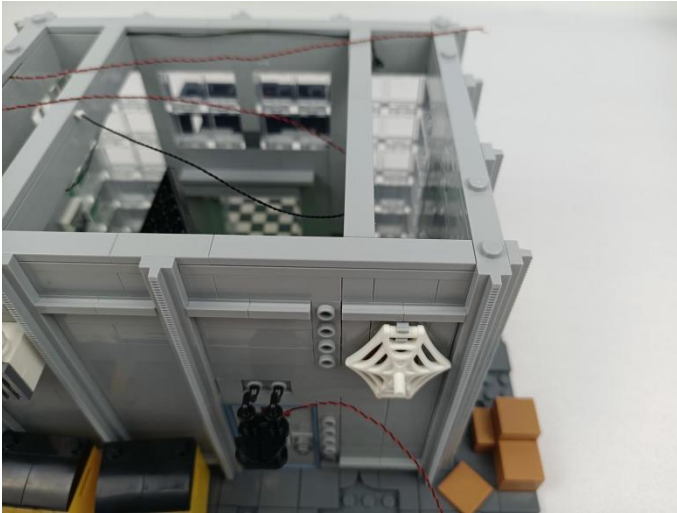


72

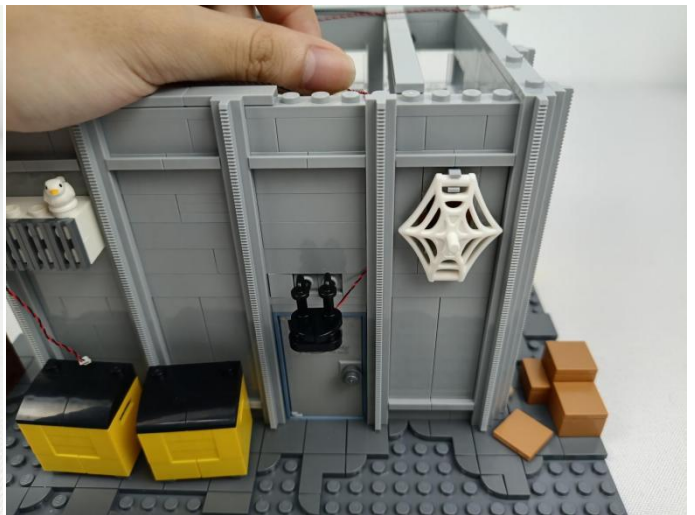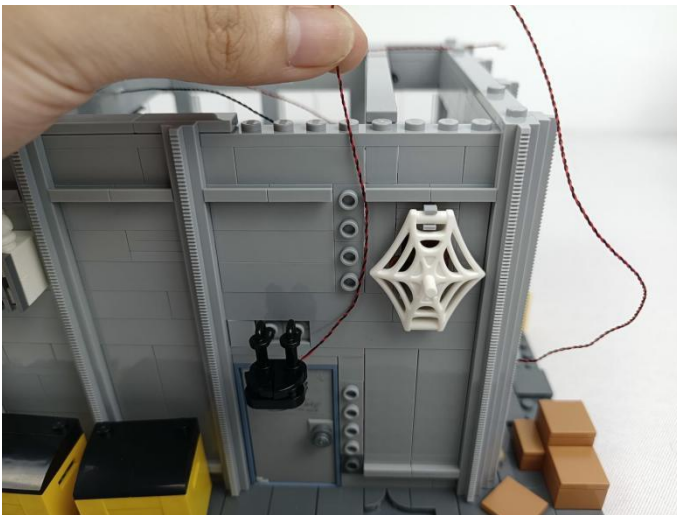

73

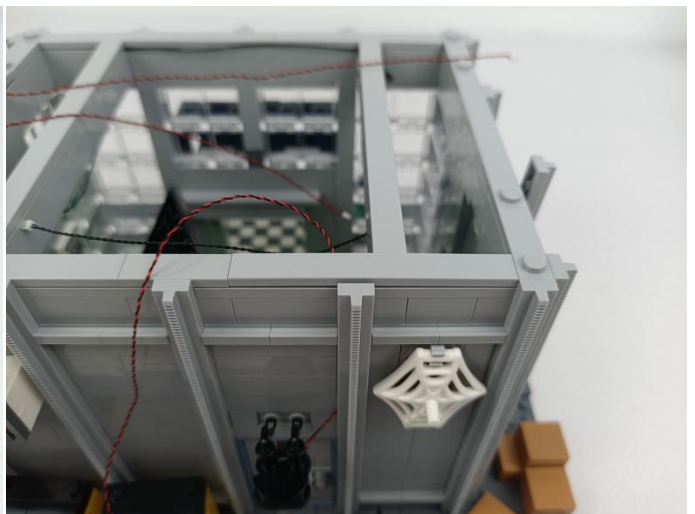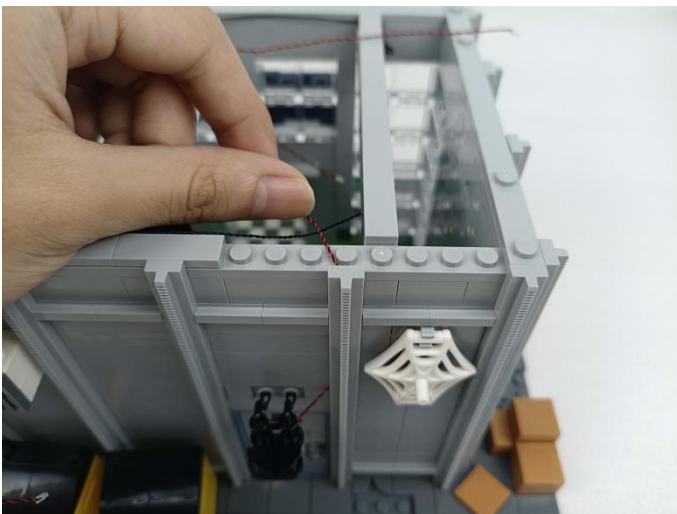


74

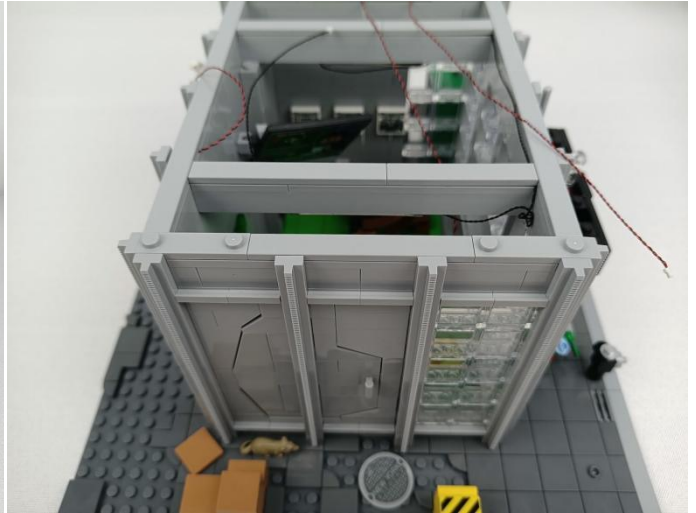


75





76

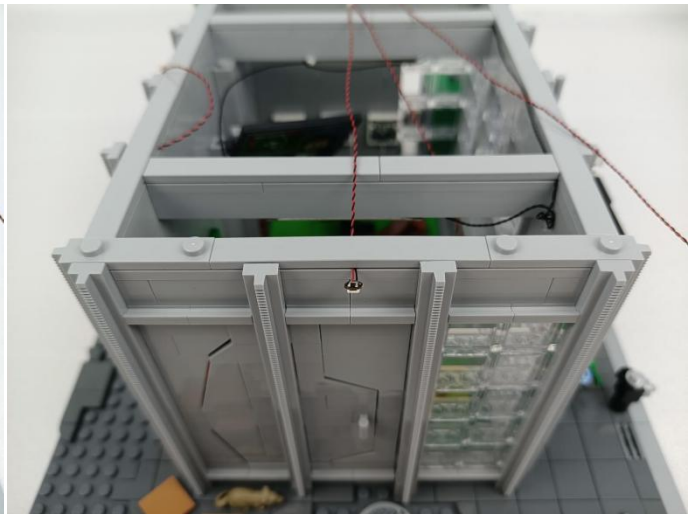



77

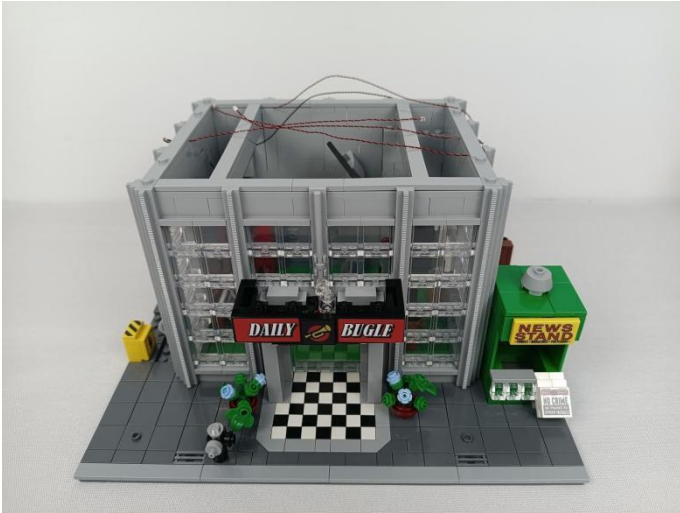



78

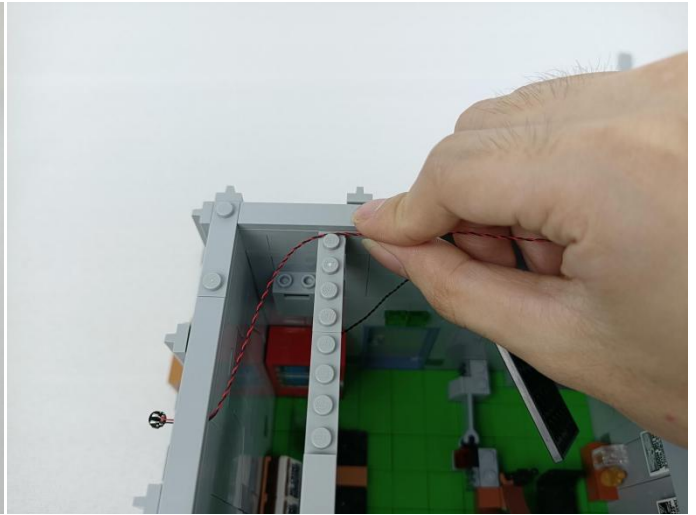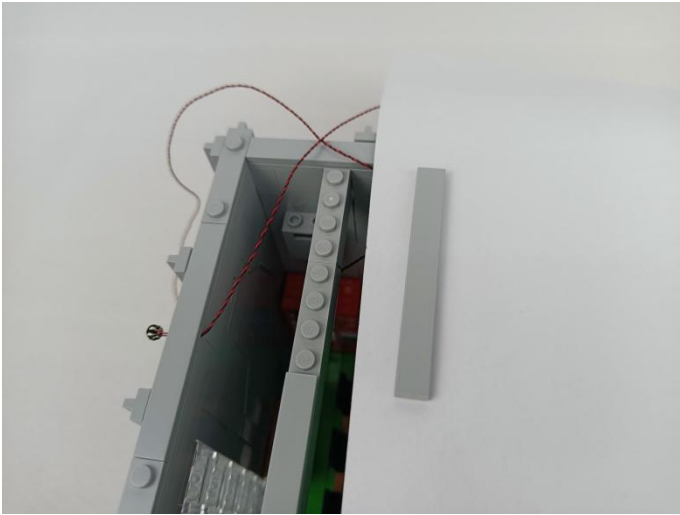



79

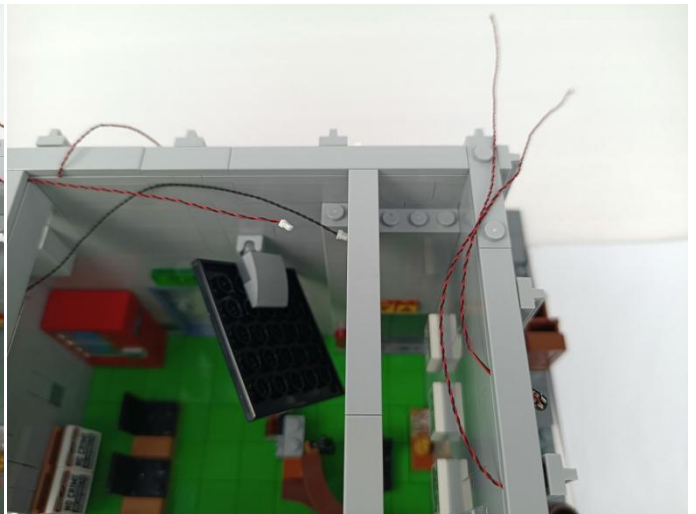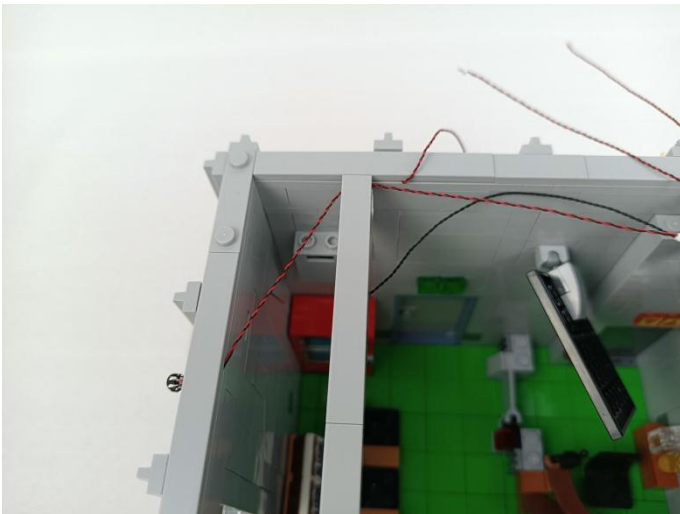


80

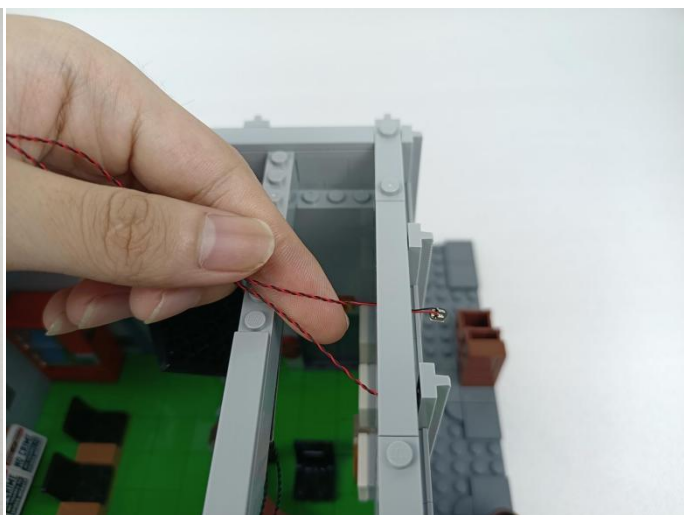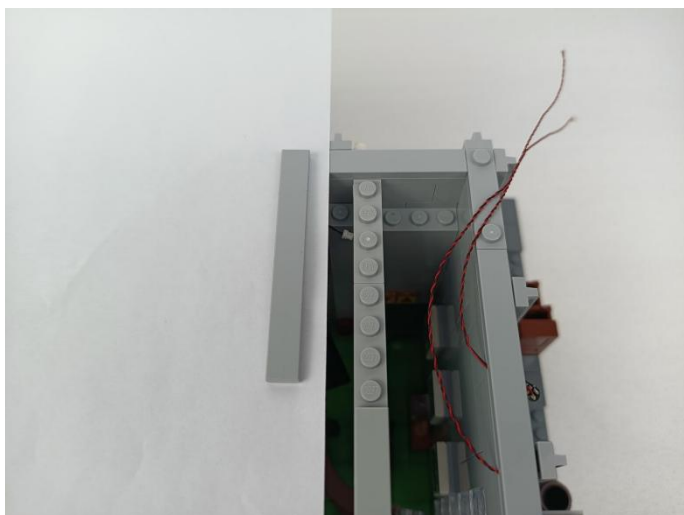


81

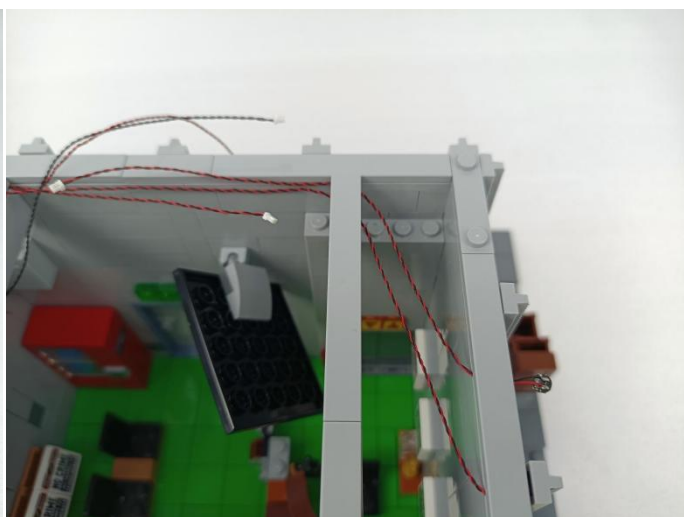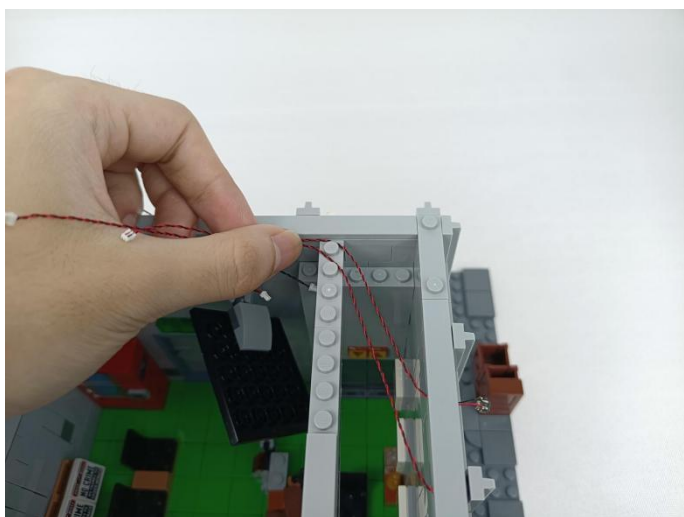


82

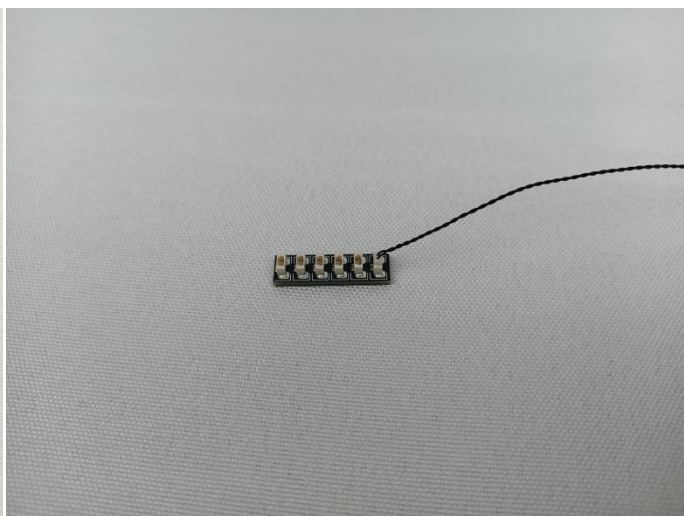



83

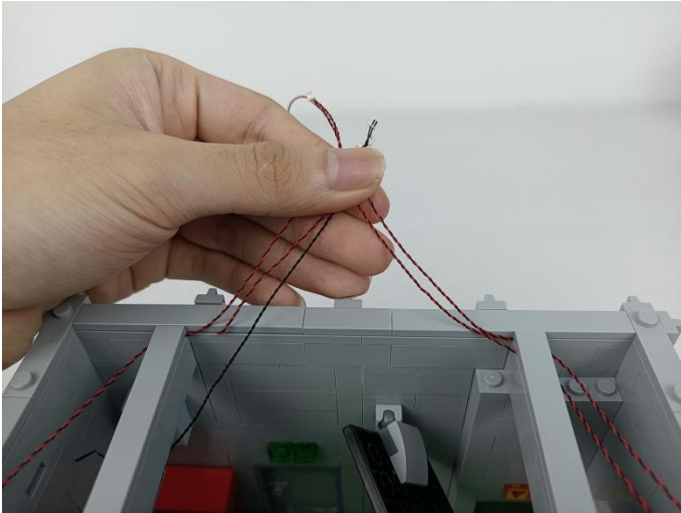



84

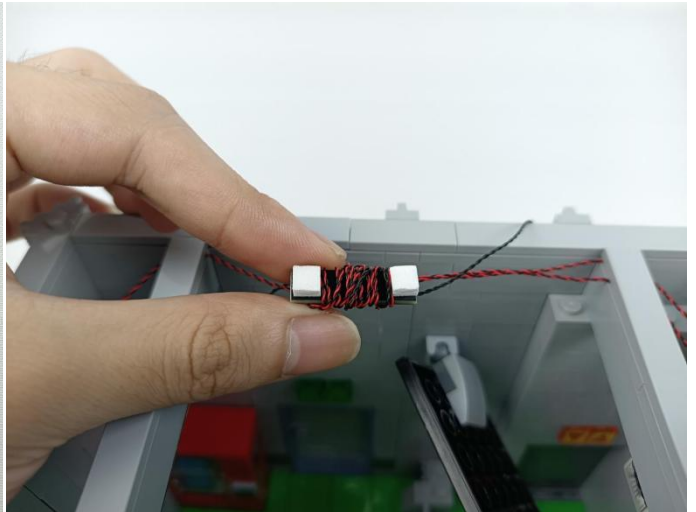

85

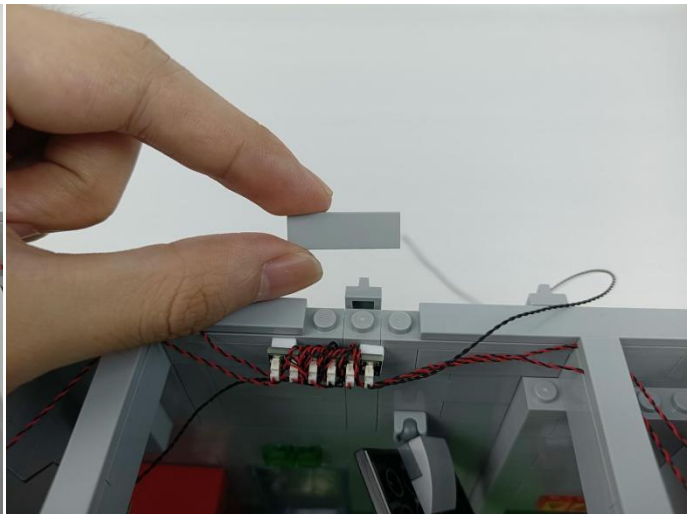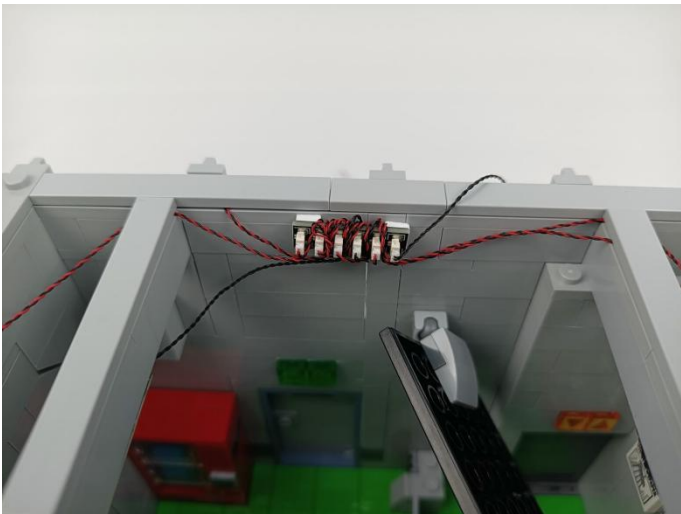

86

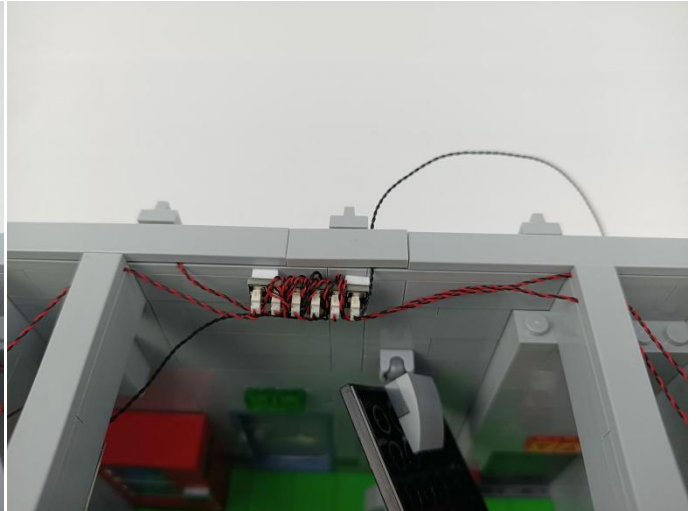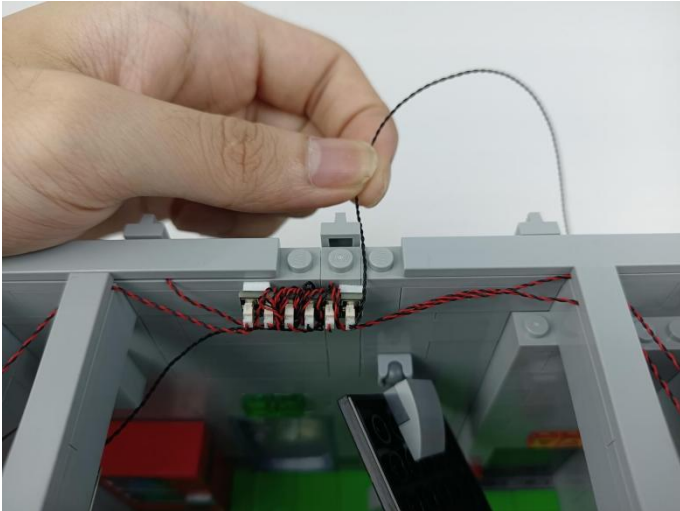


87




88




89

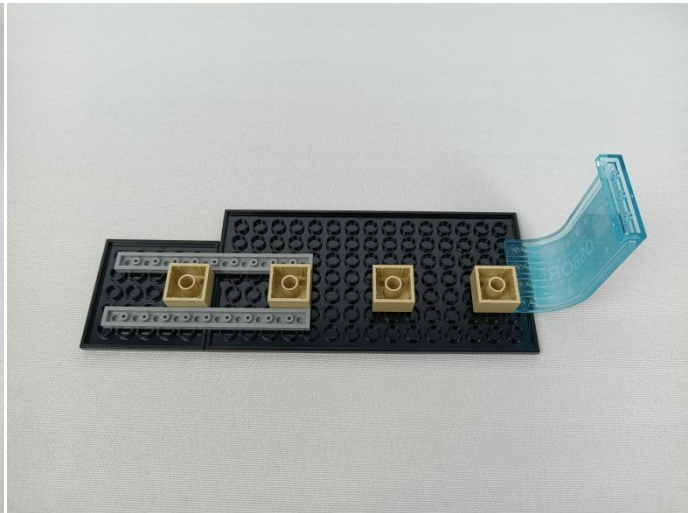

90

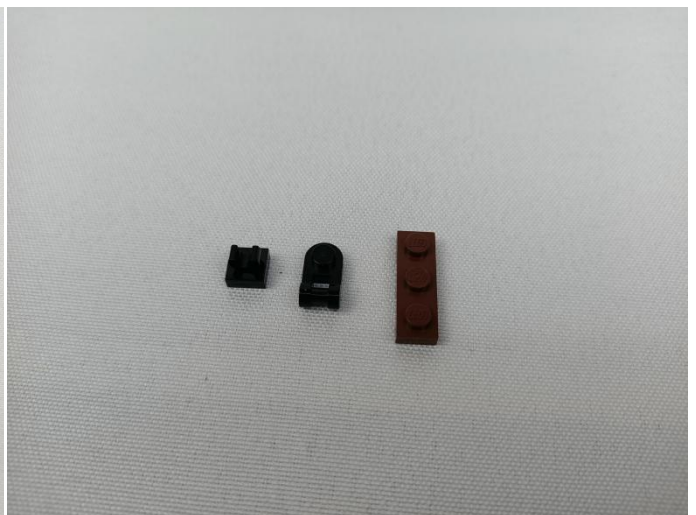


91

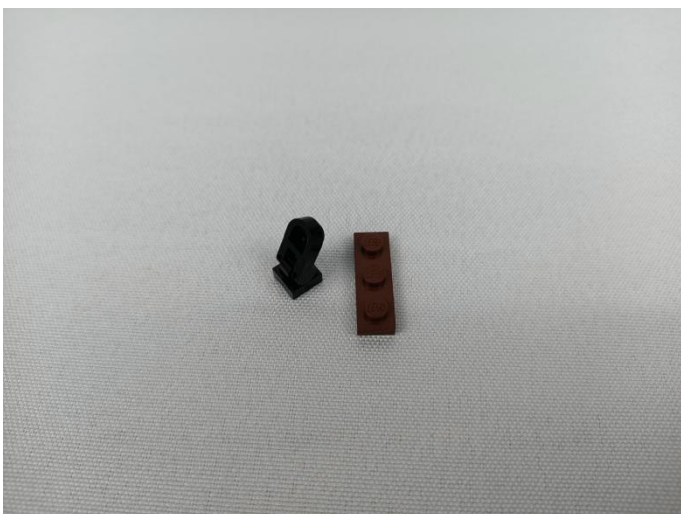



92





93

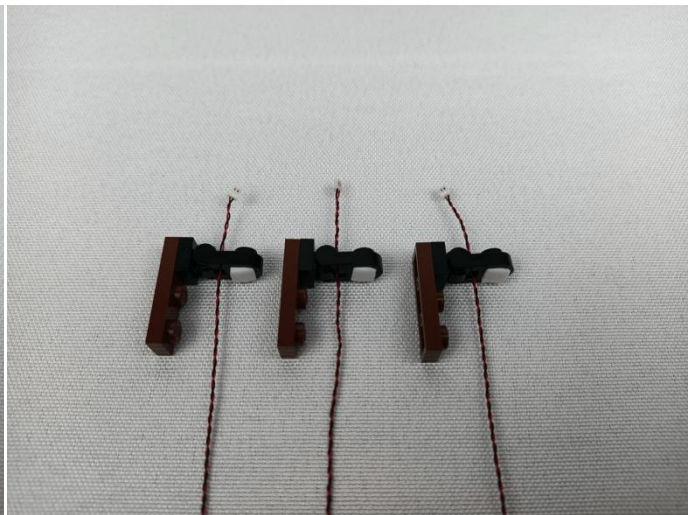



94

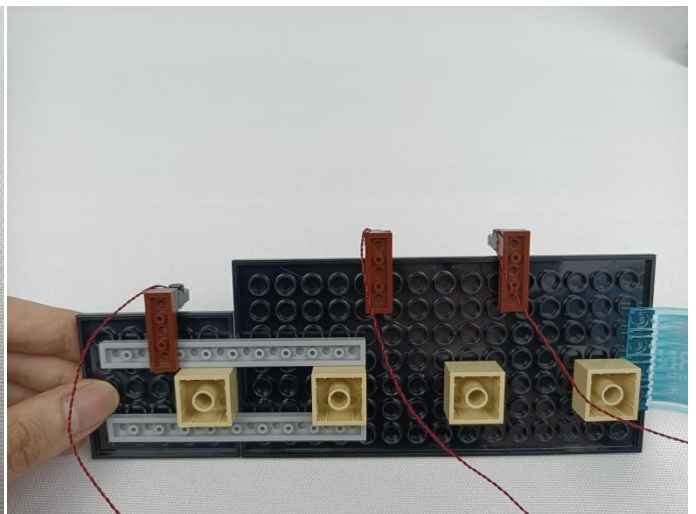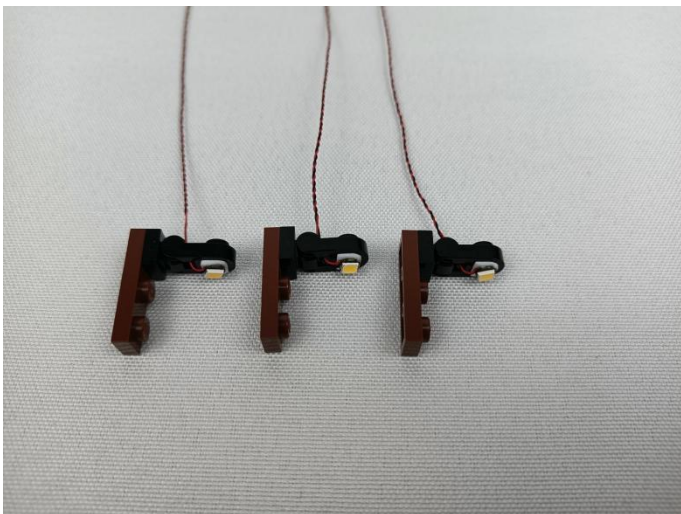


95

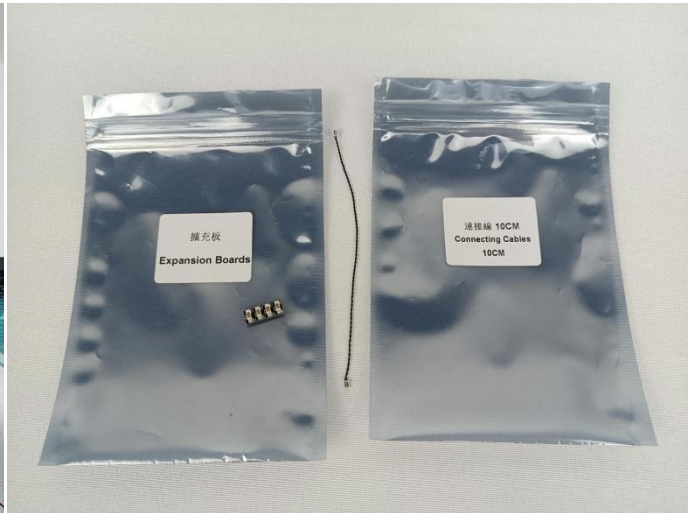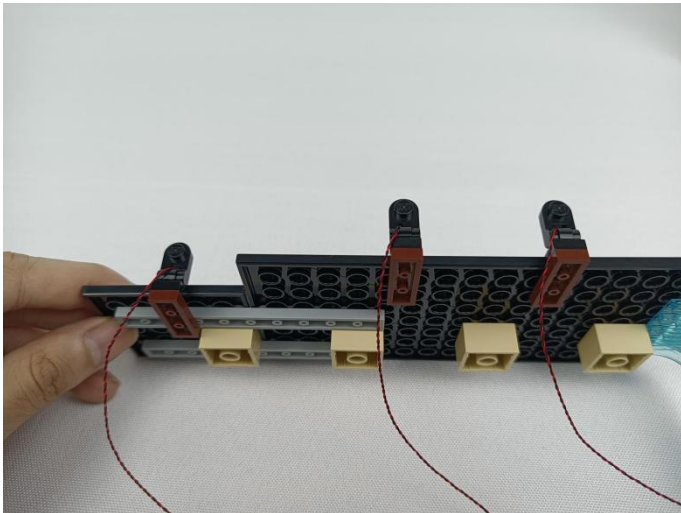


96

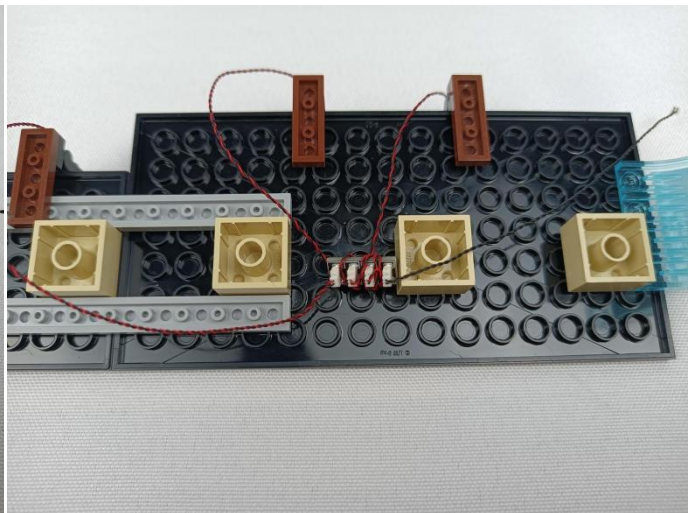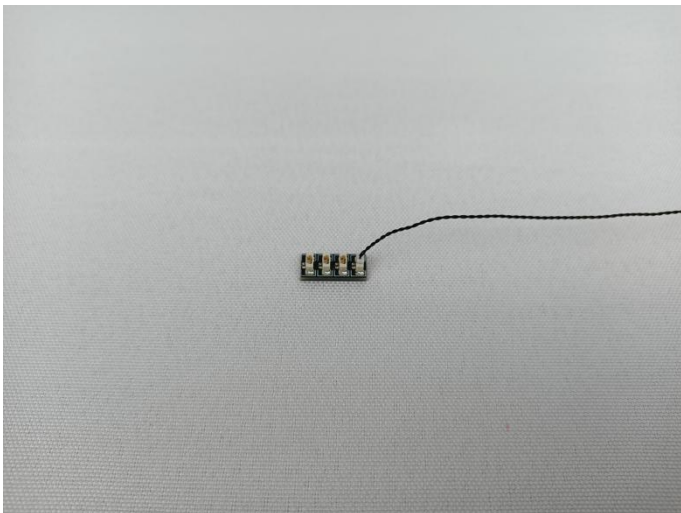


97

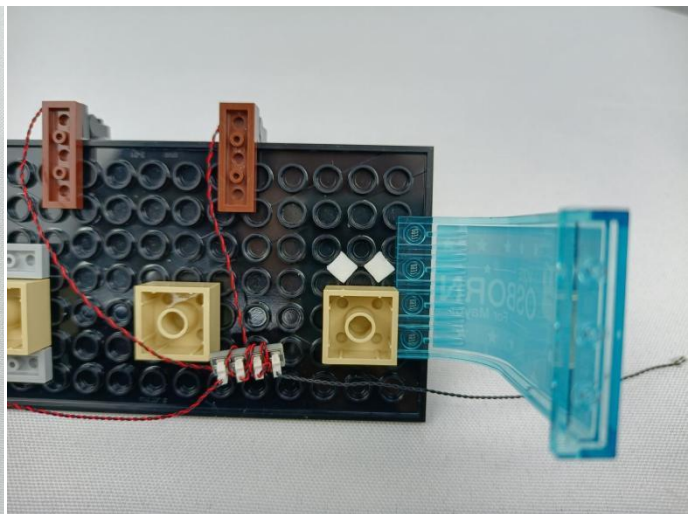



98

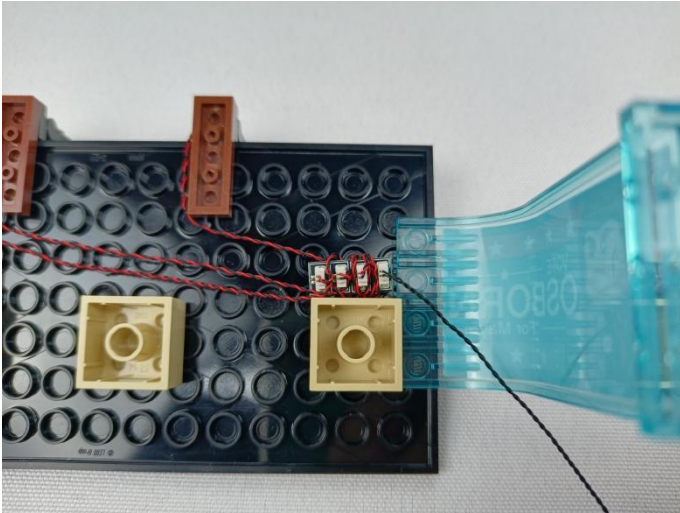



99

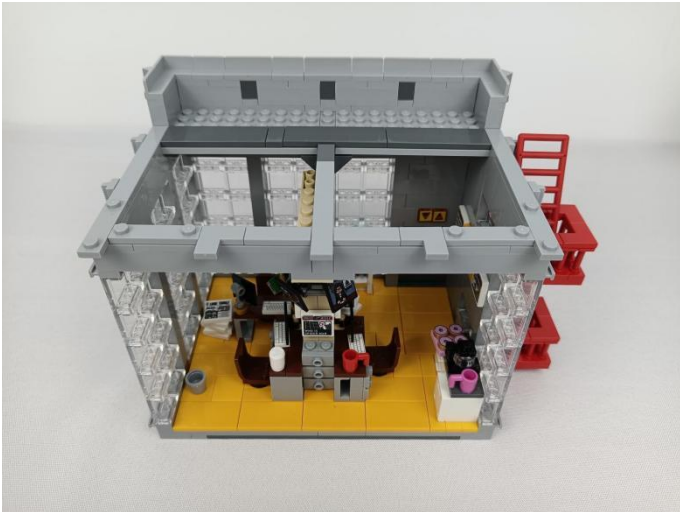



100

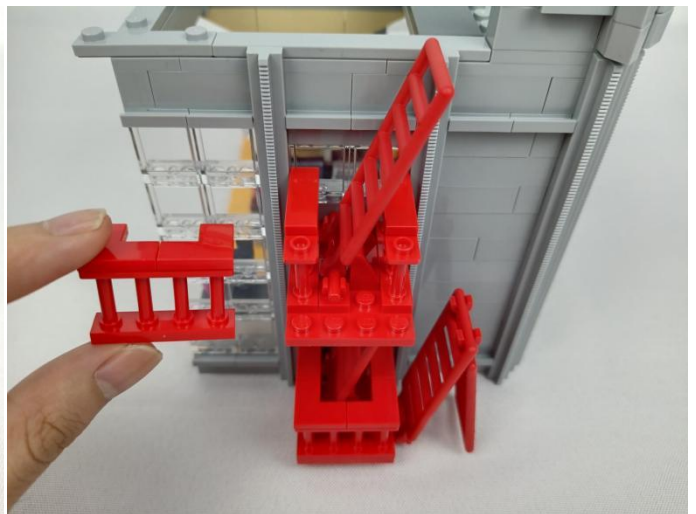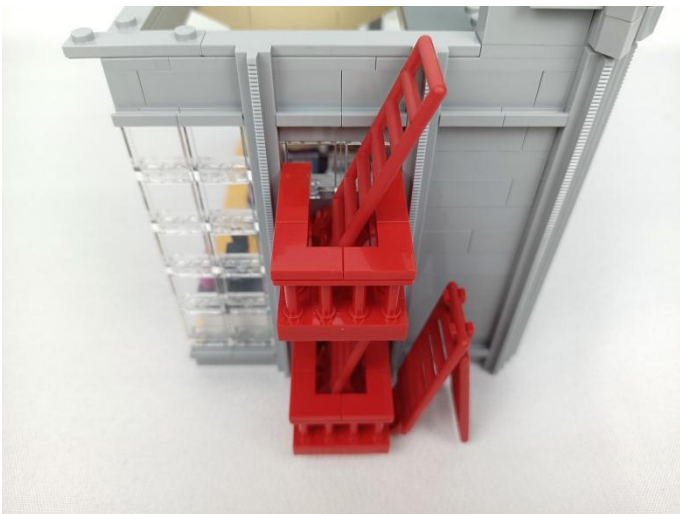


101

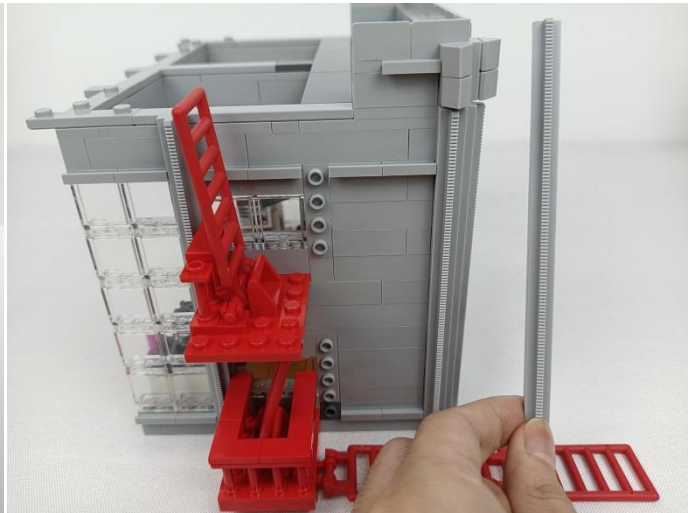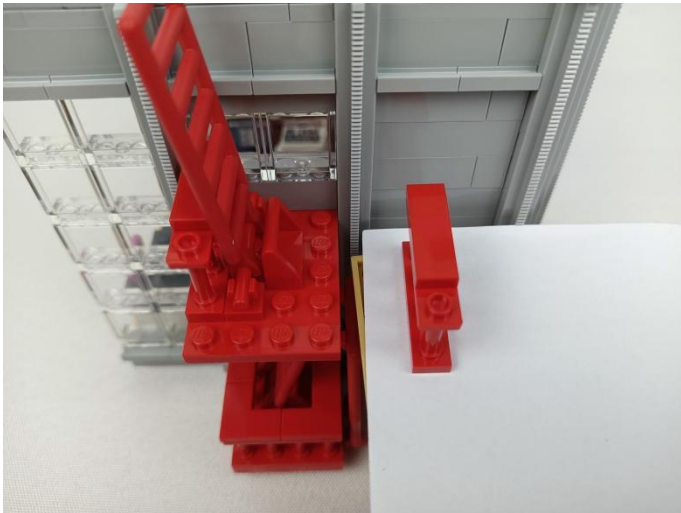



102

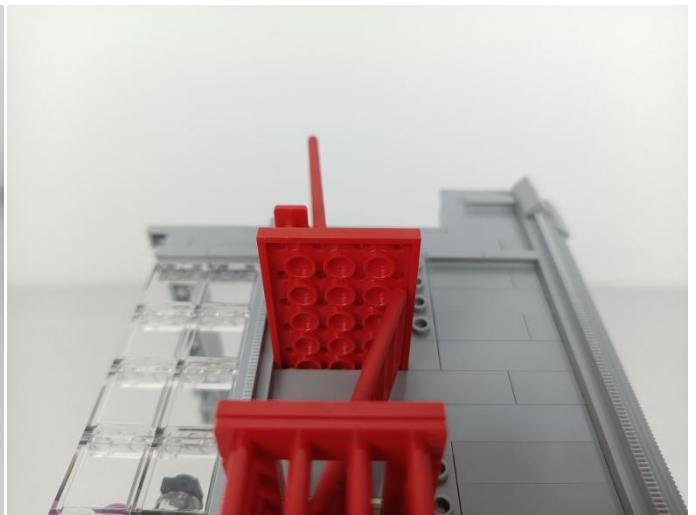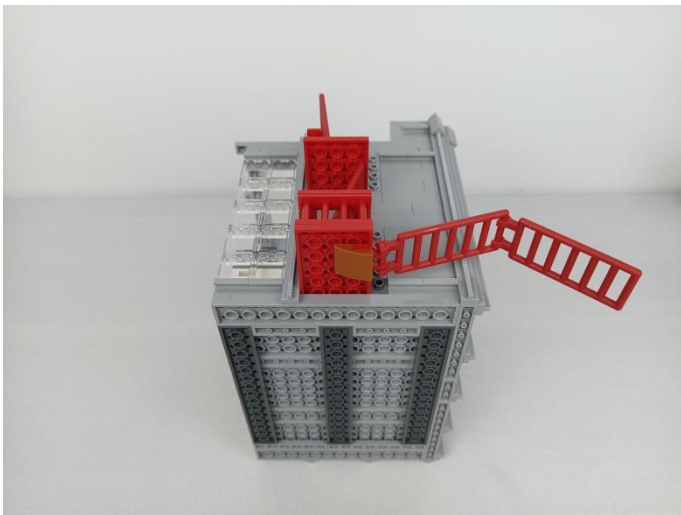



103

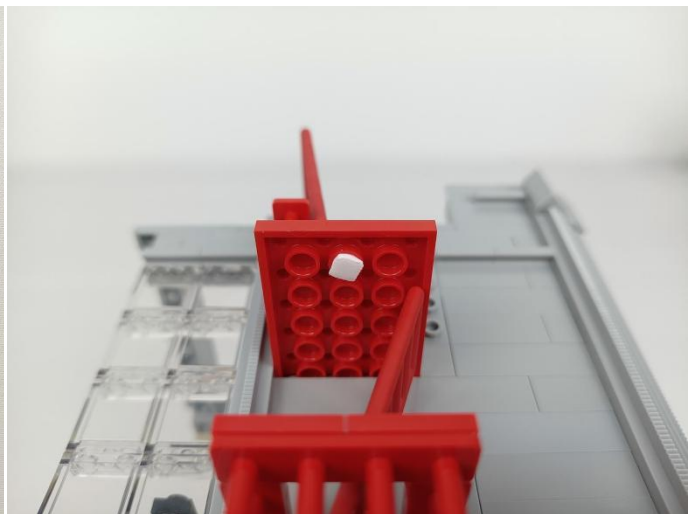



104

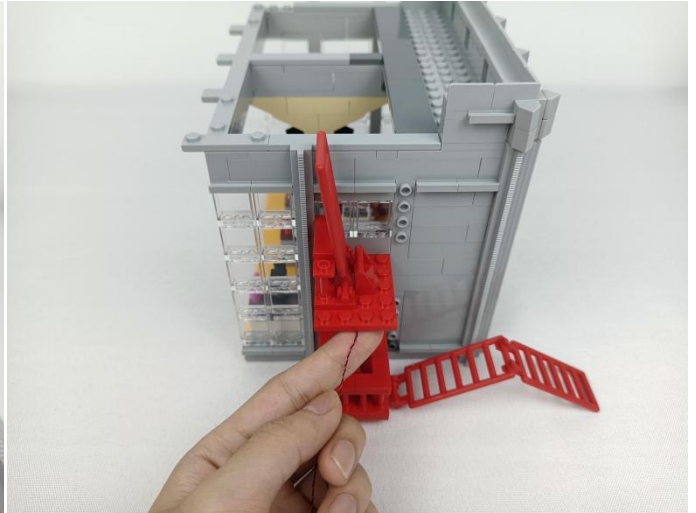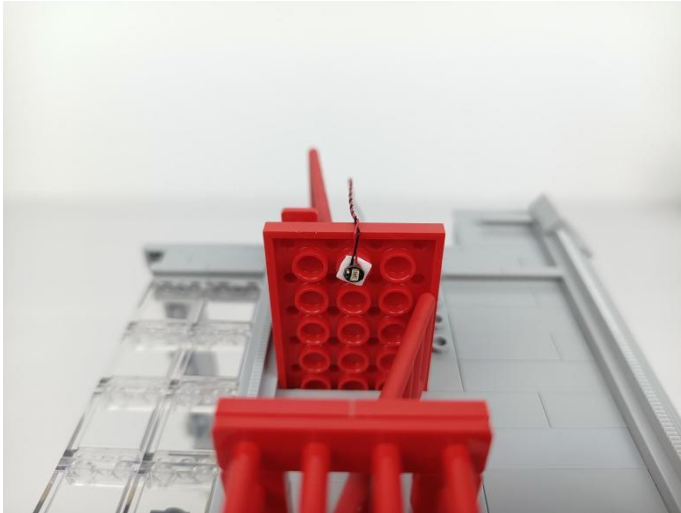



105

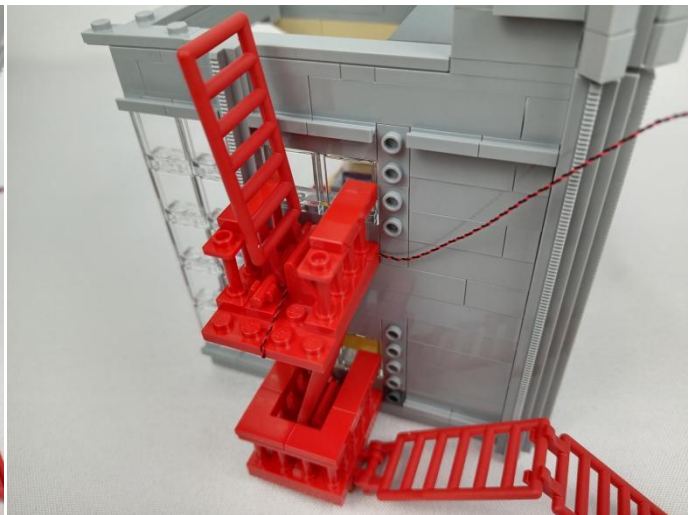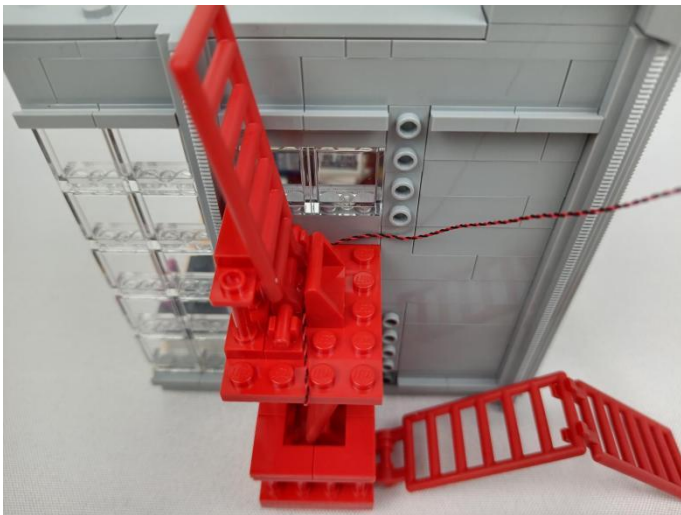


106

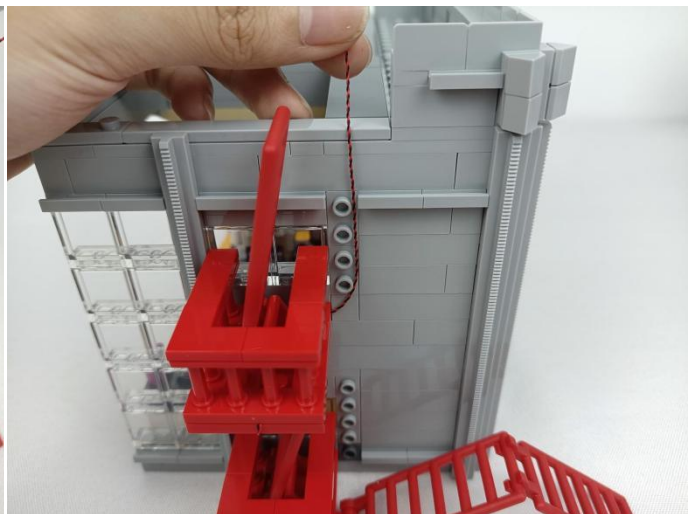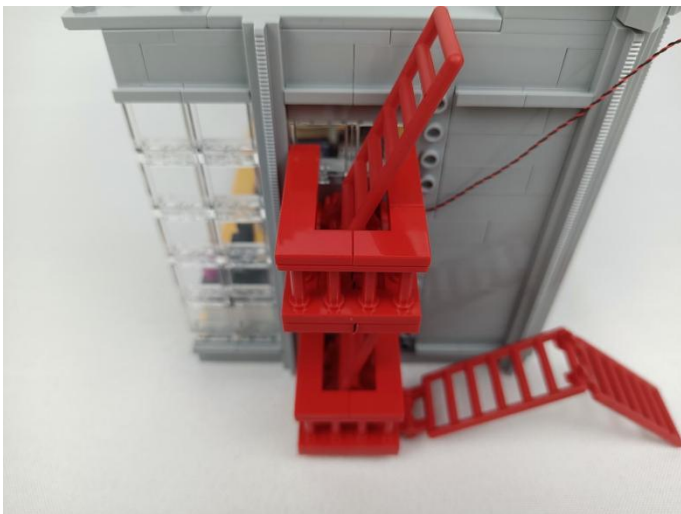



107

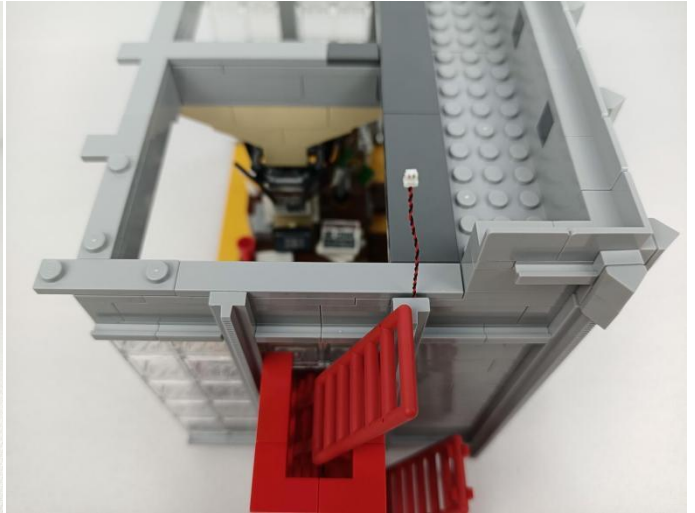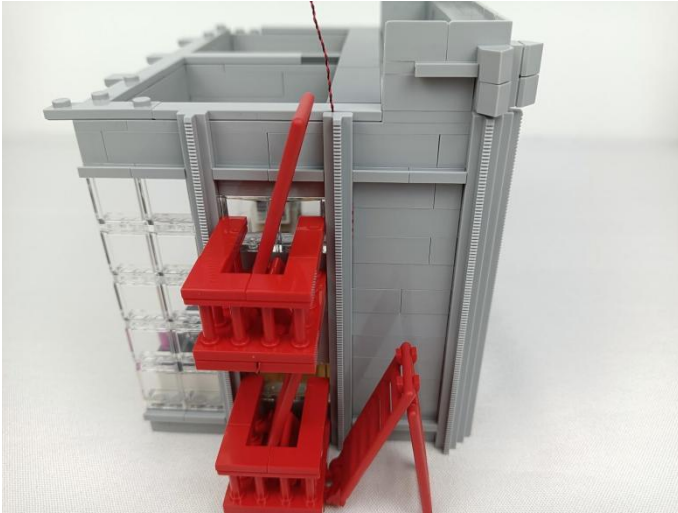


108

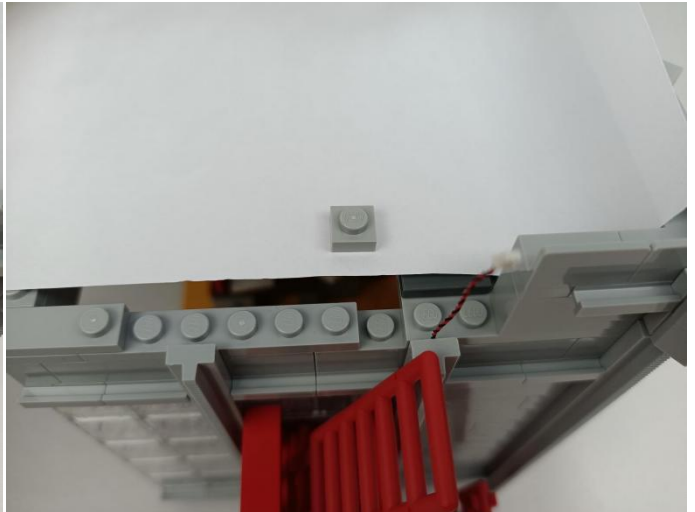

109

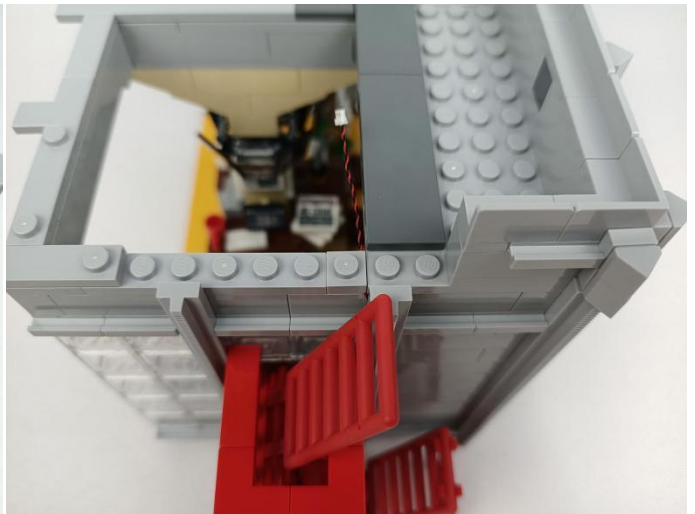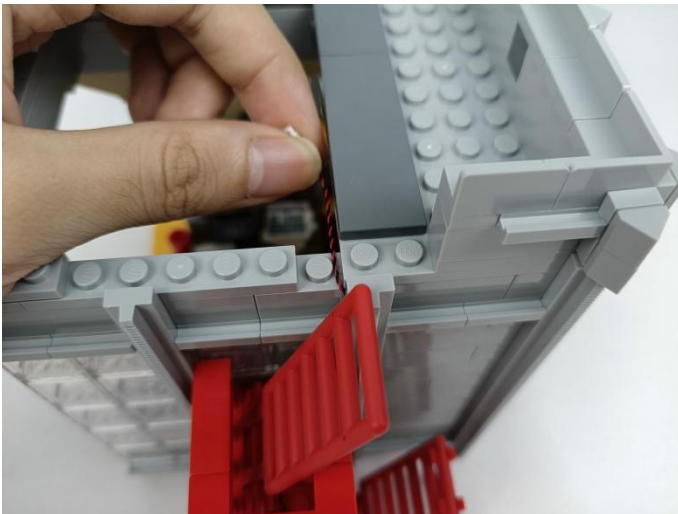


110

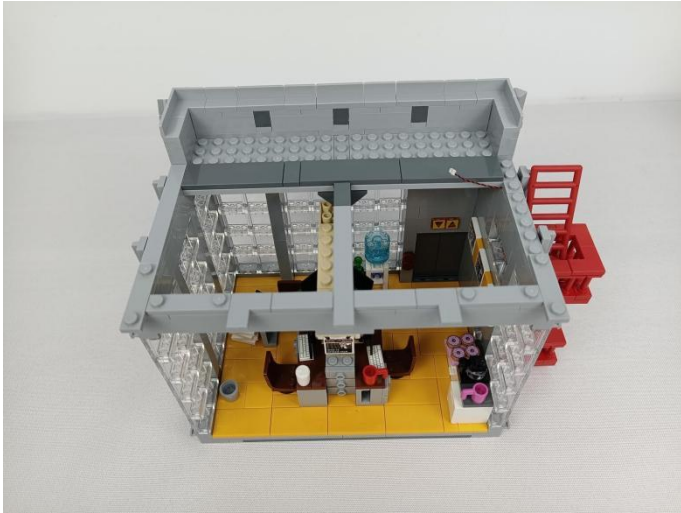



111




112

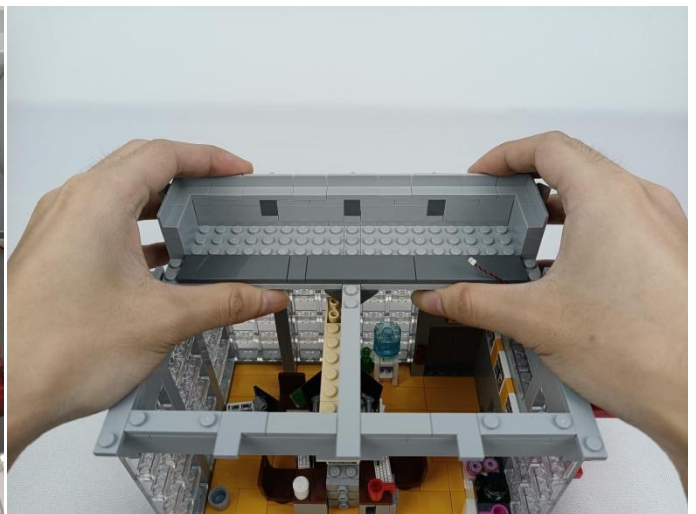



113

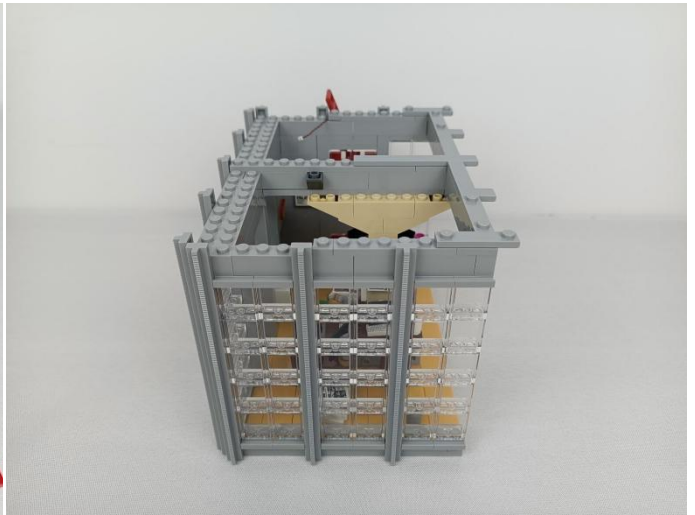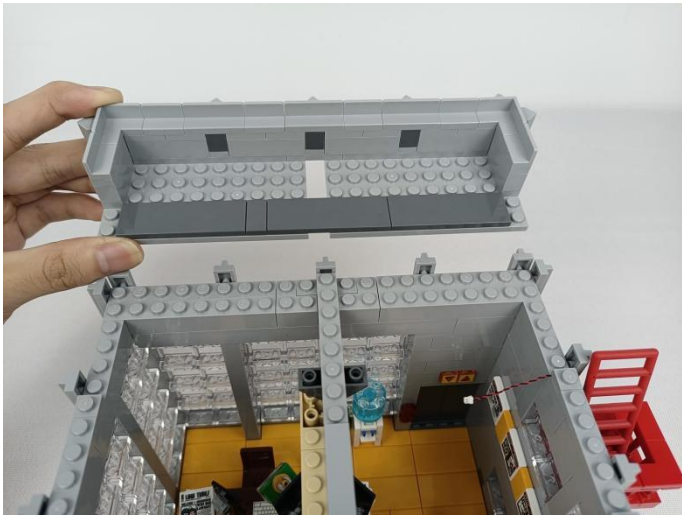



114

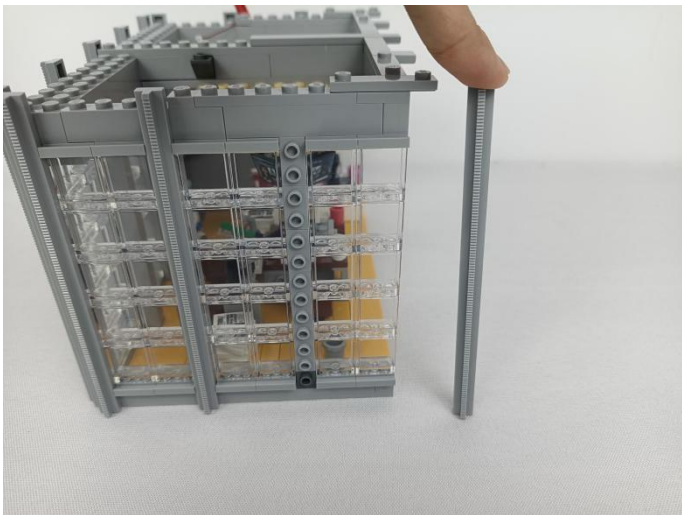


115

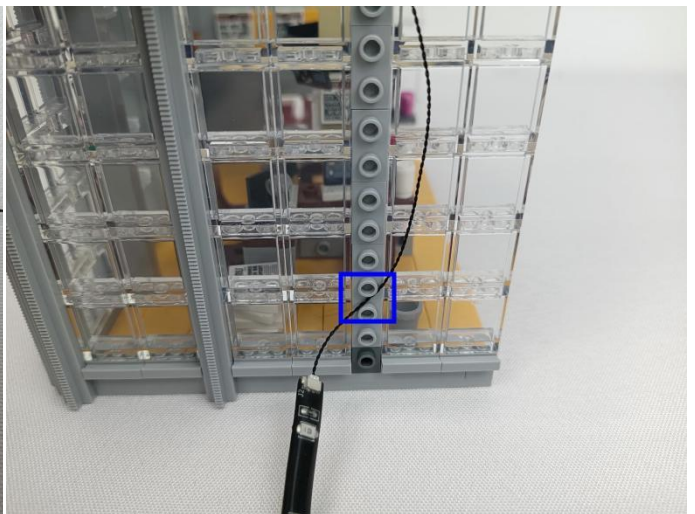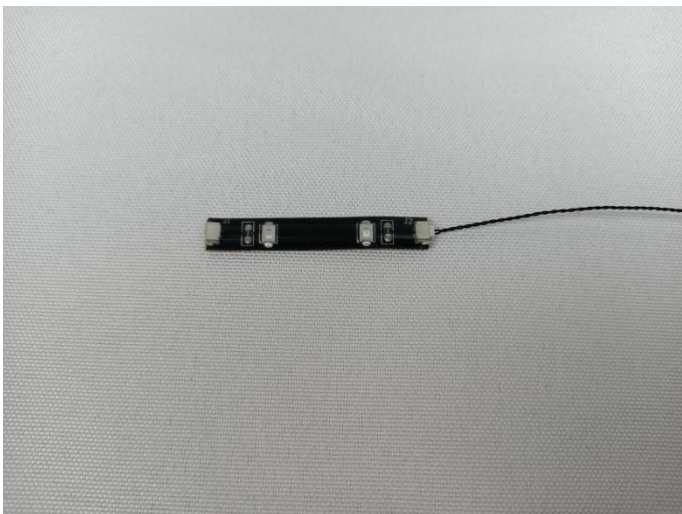



116

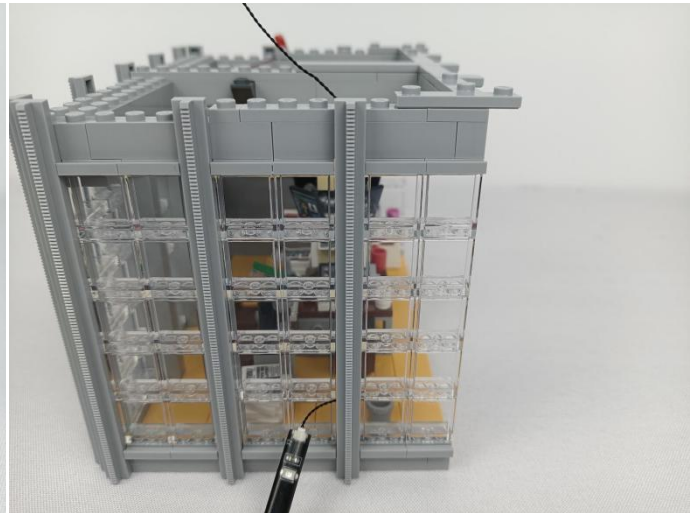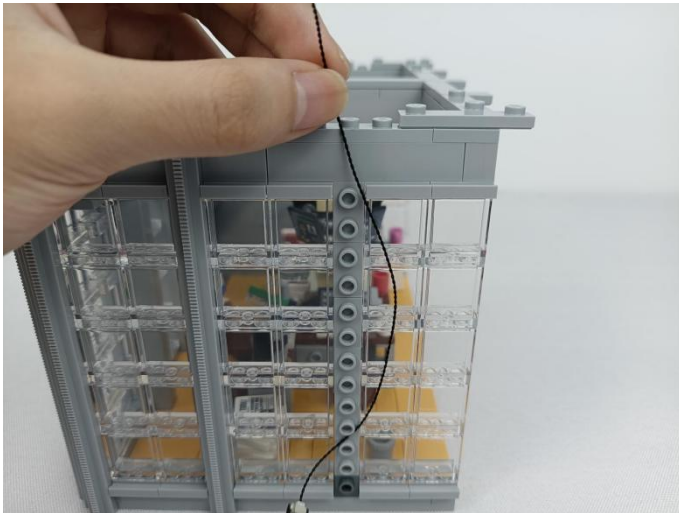


117

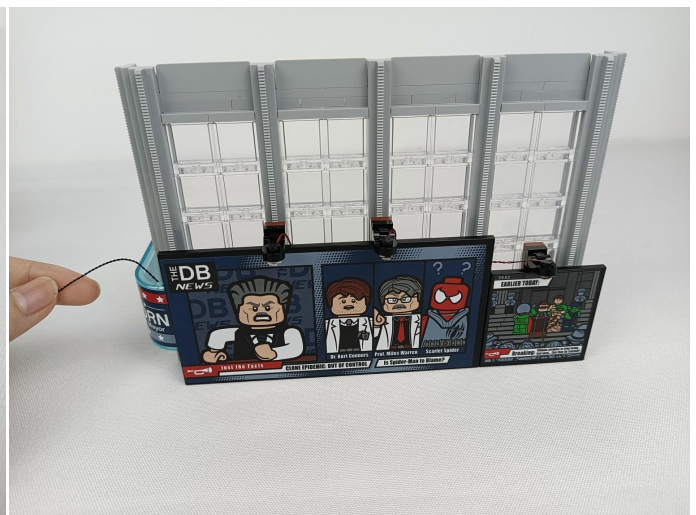



118

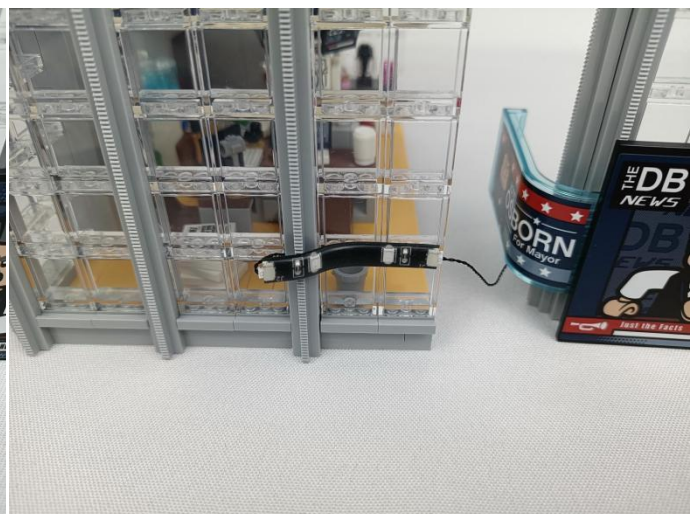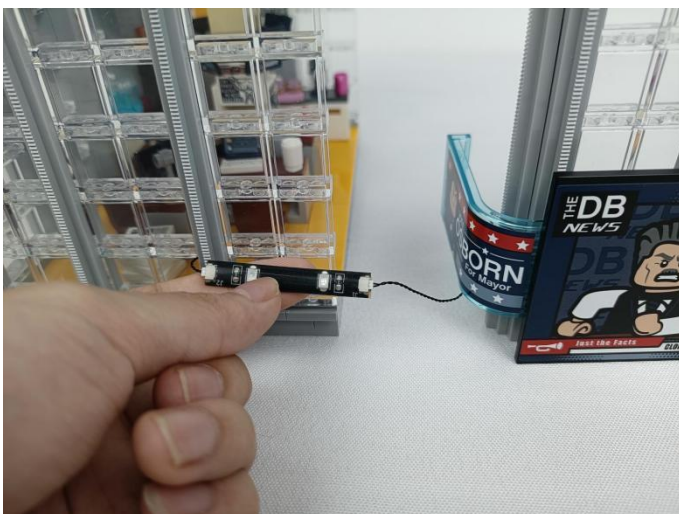


119

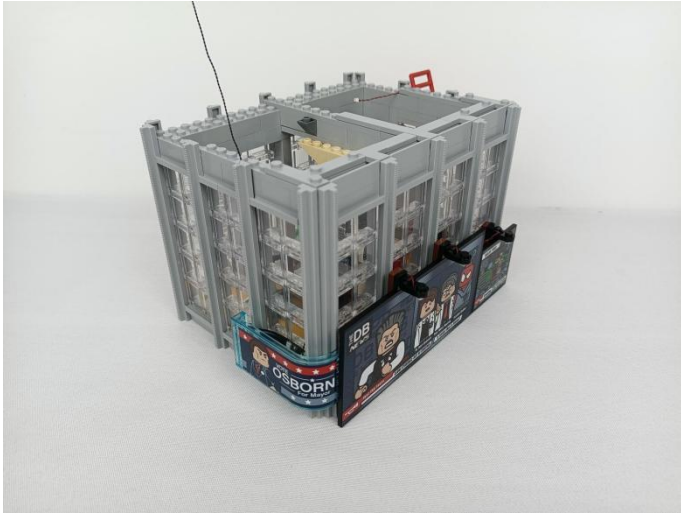



120

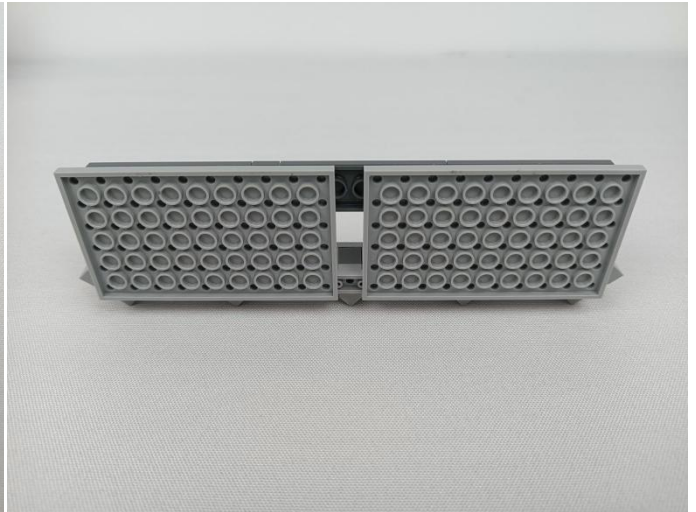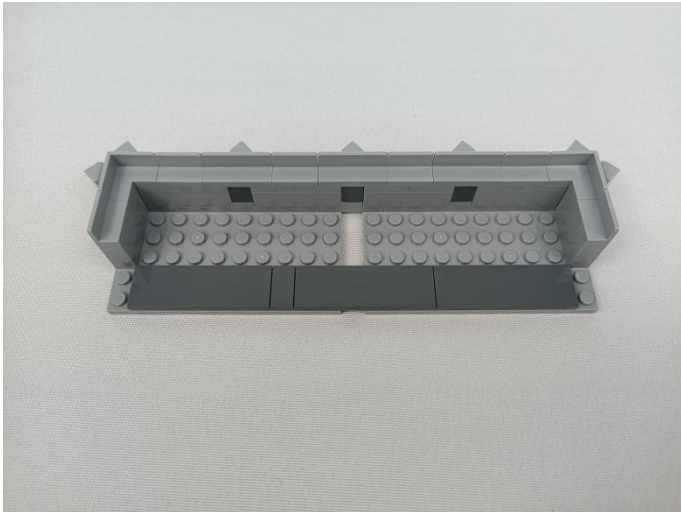


121

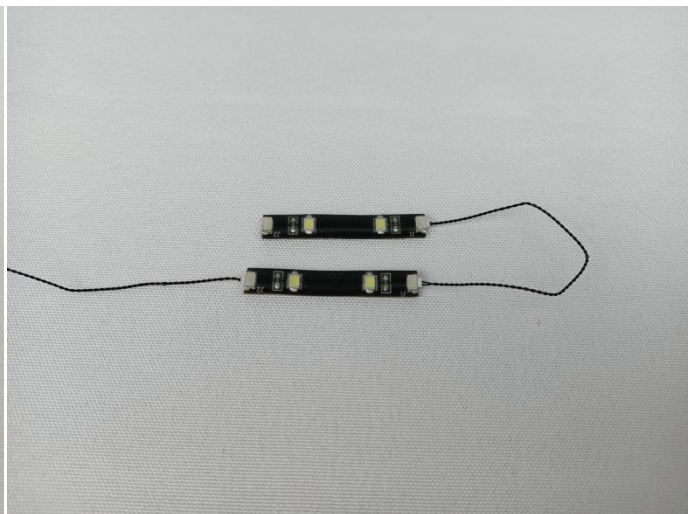



122

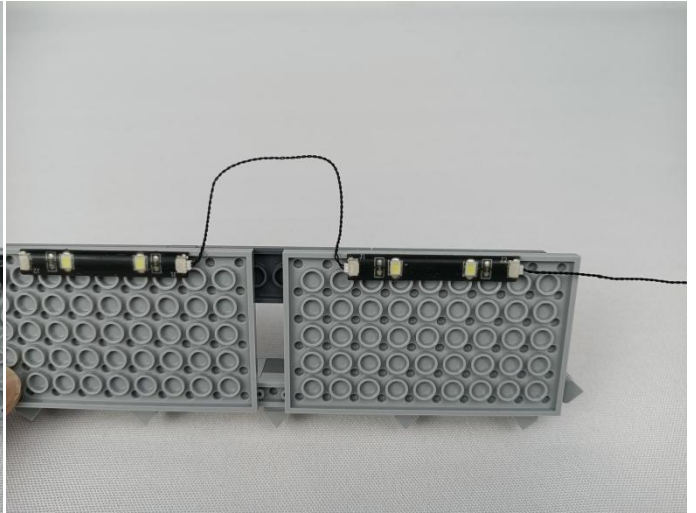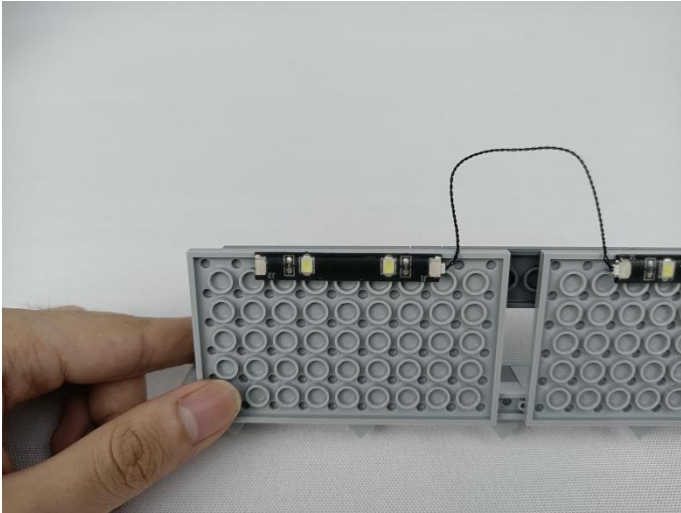



123

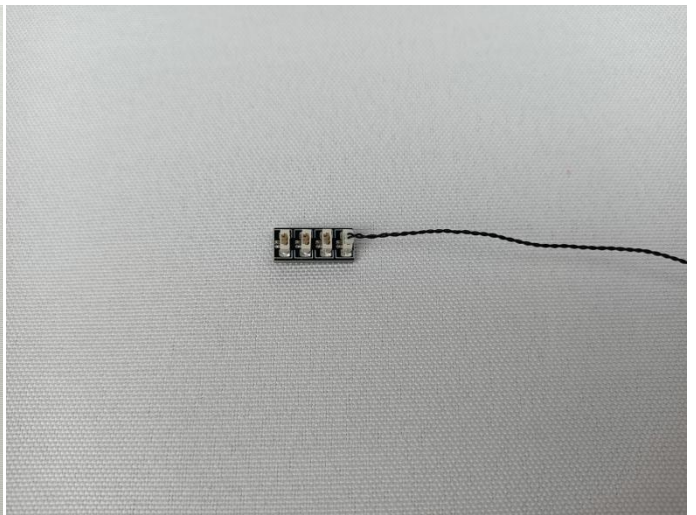


124

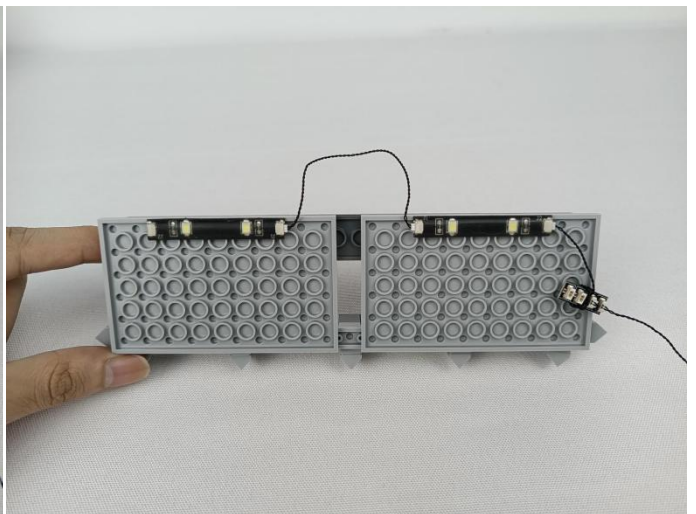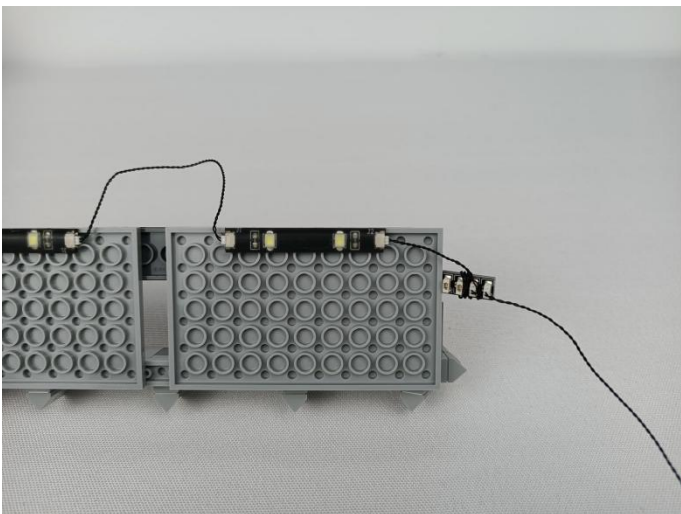


125

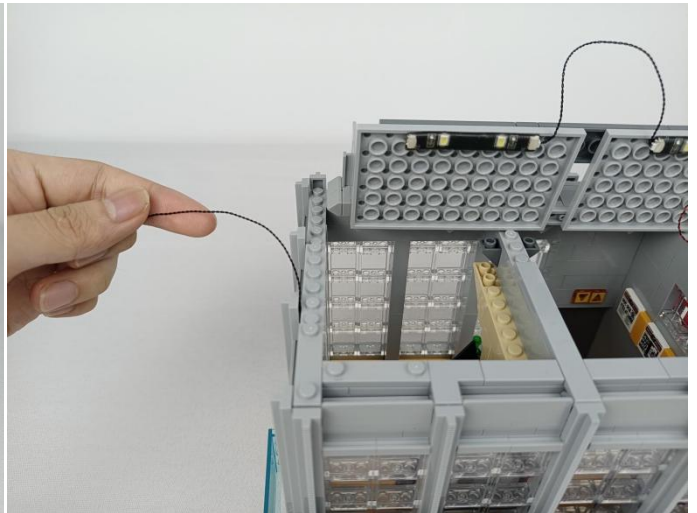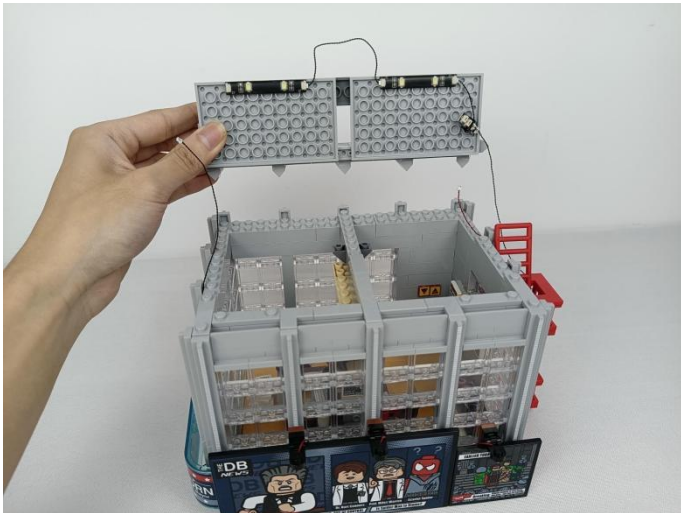


126

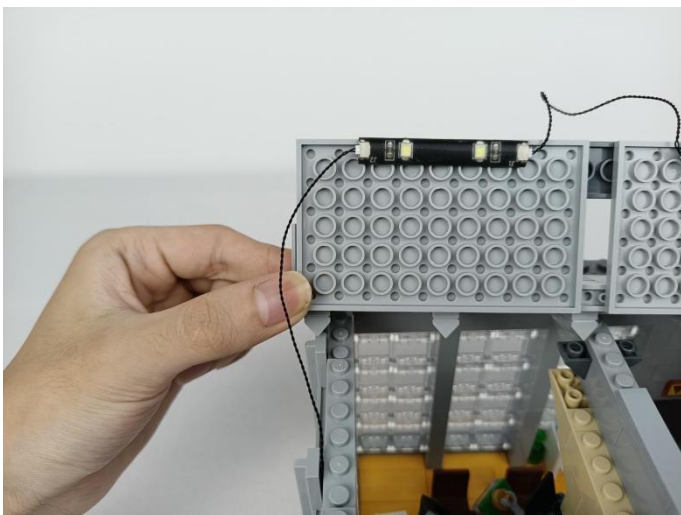


127

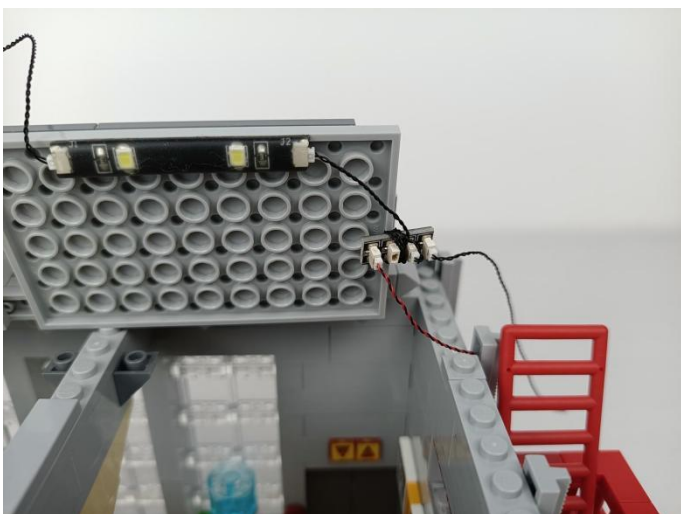


128

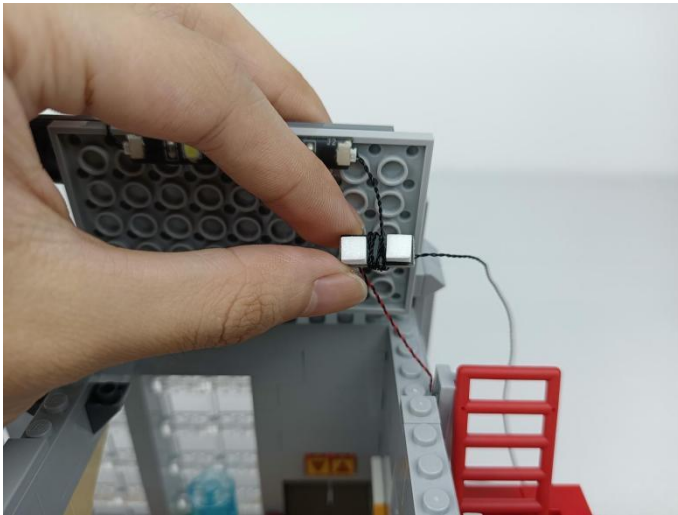

129

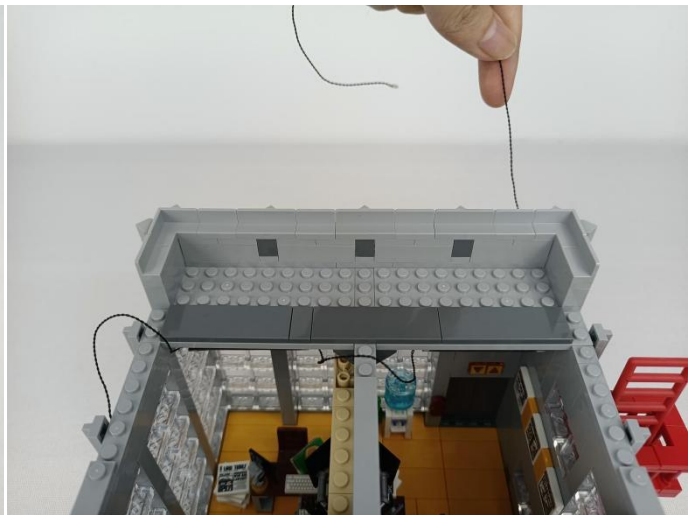


130

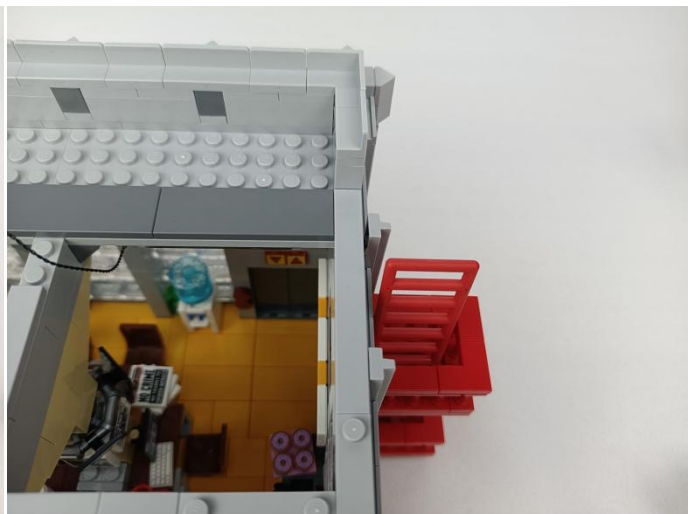


131




132

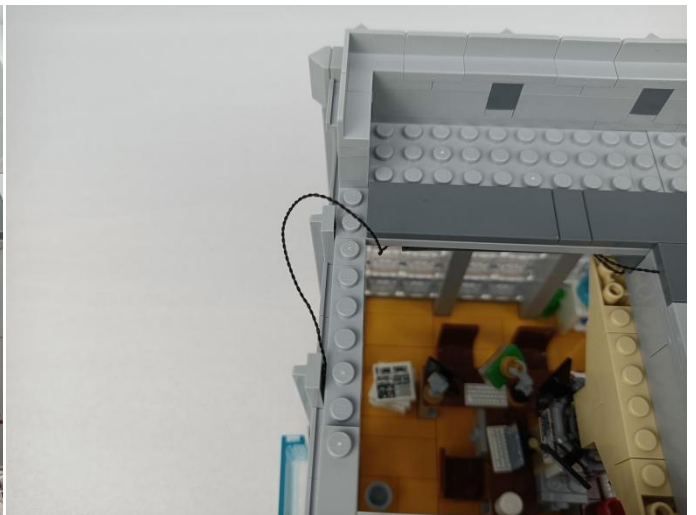



133

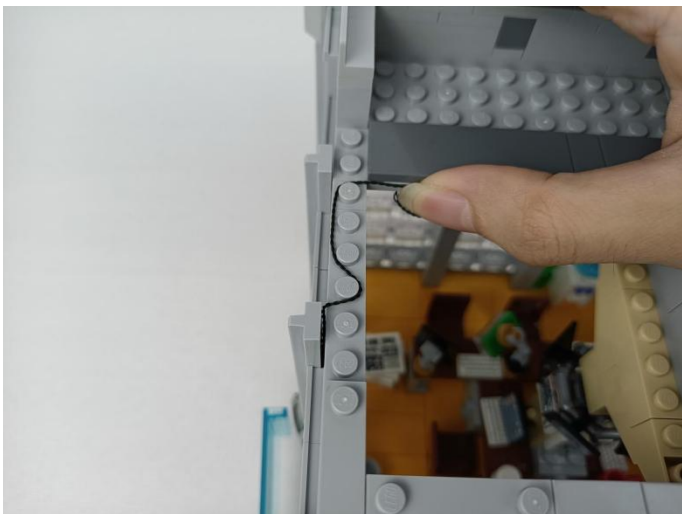


134

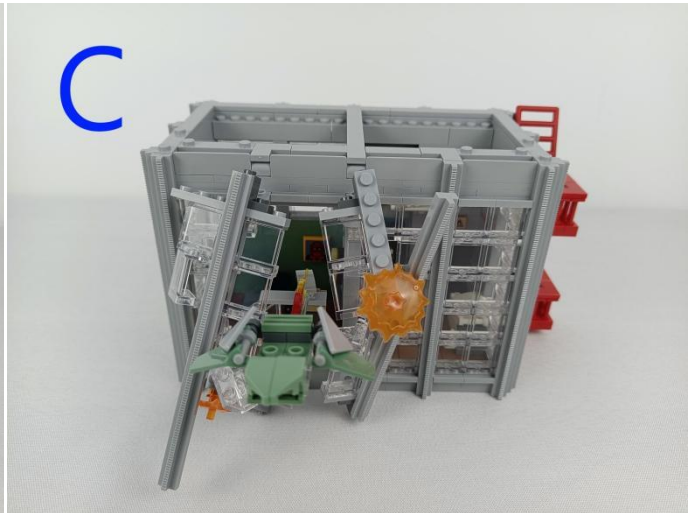


135

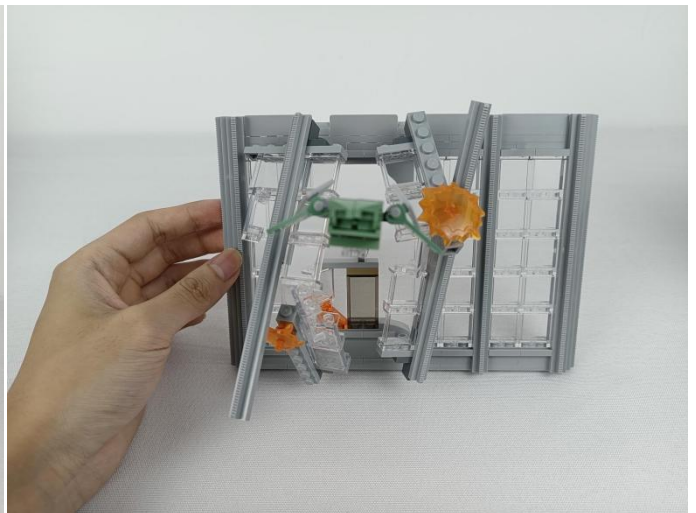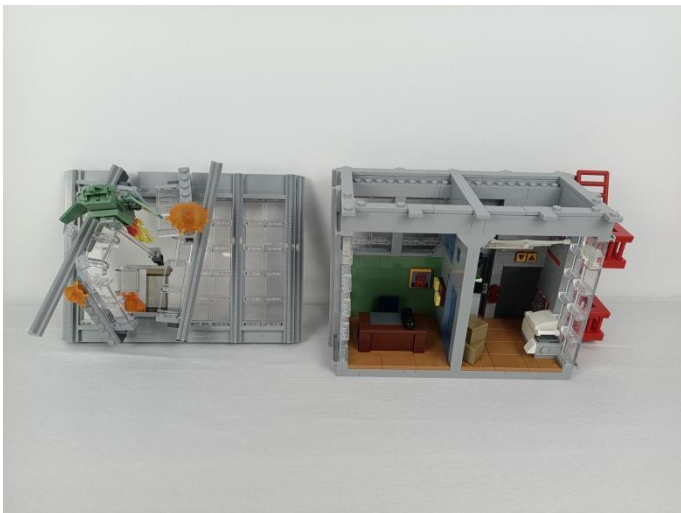

136

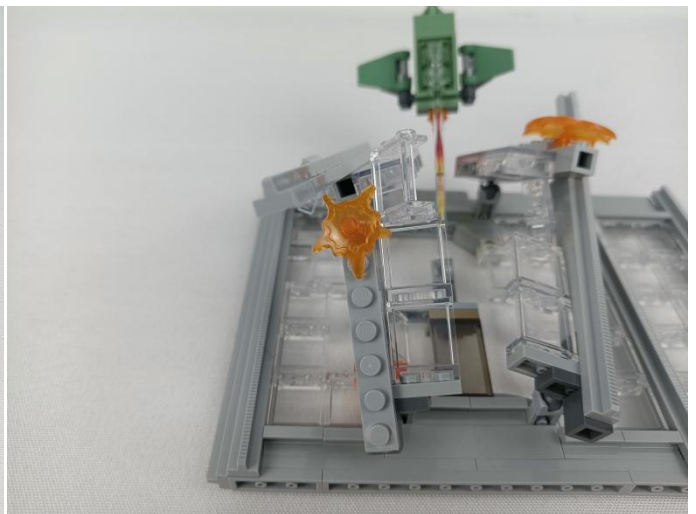



137

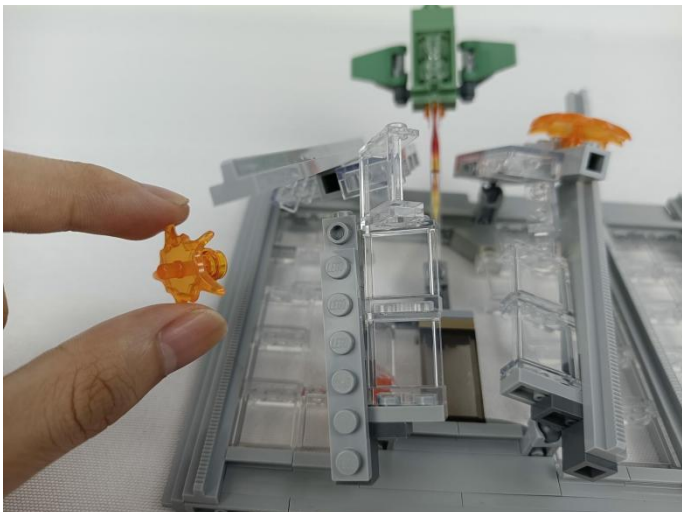



138





139

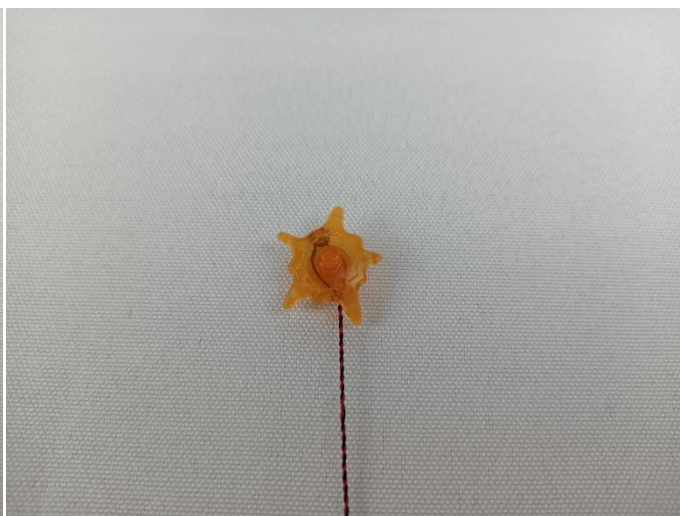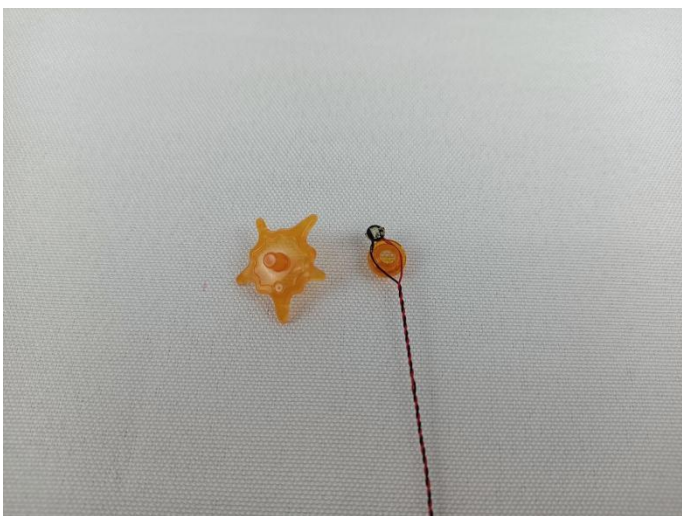


140

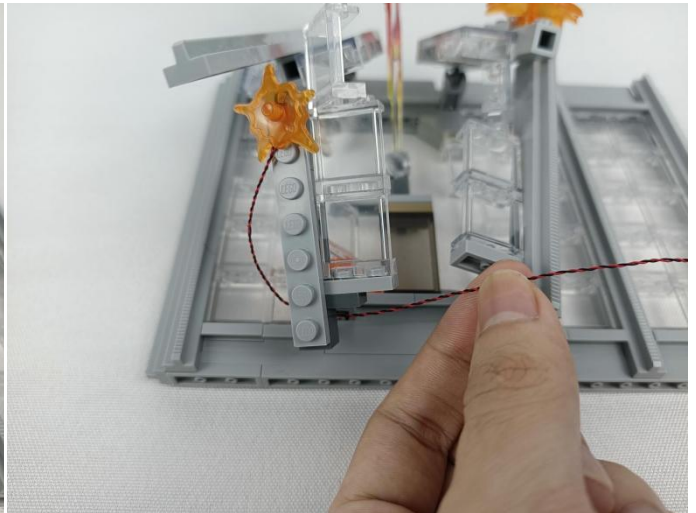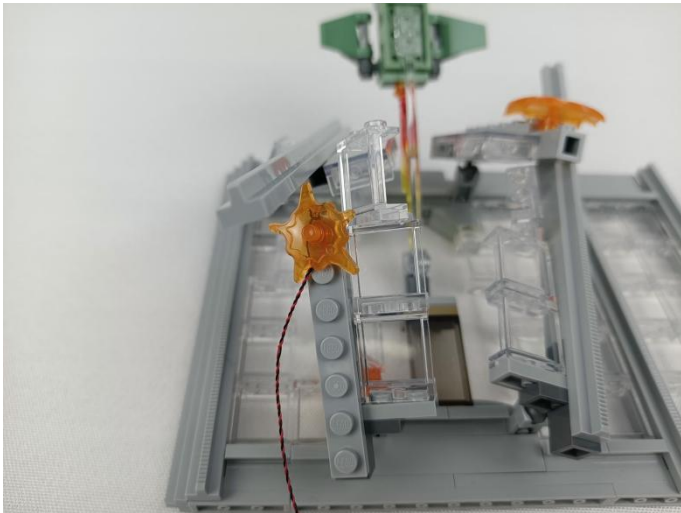



141

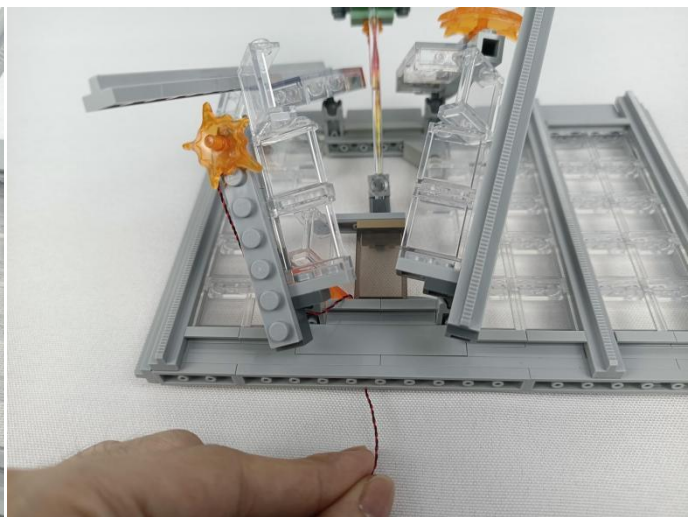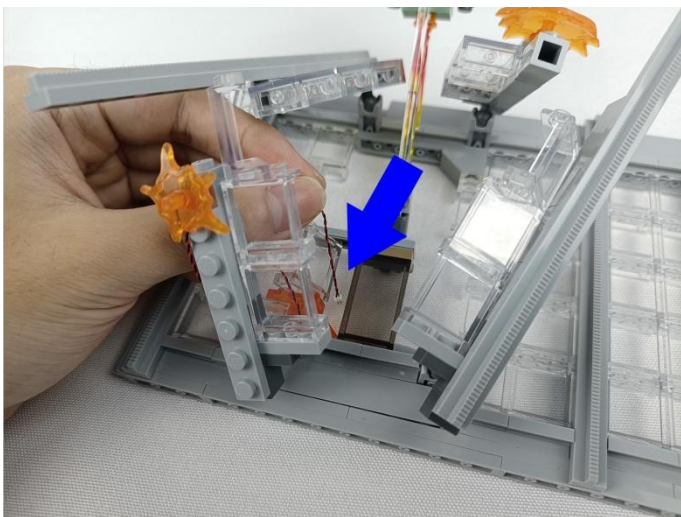

142

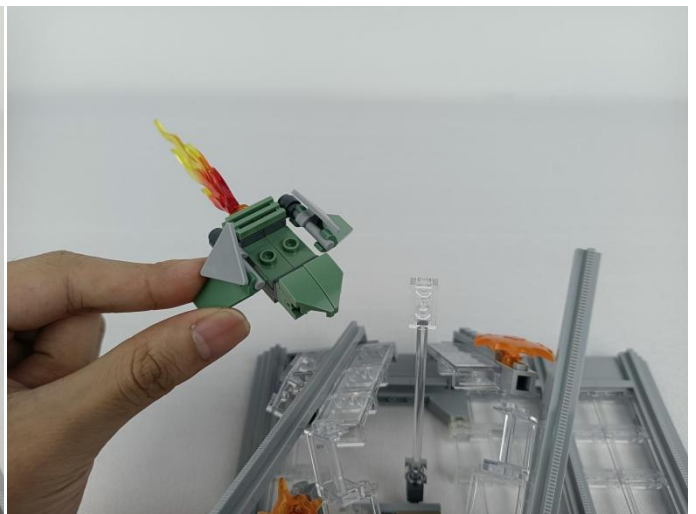

143

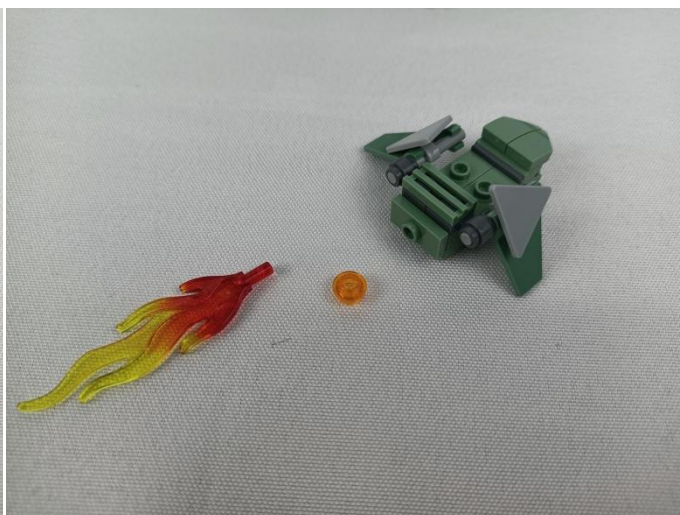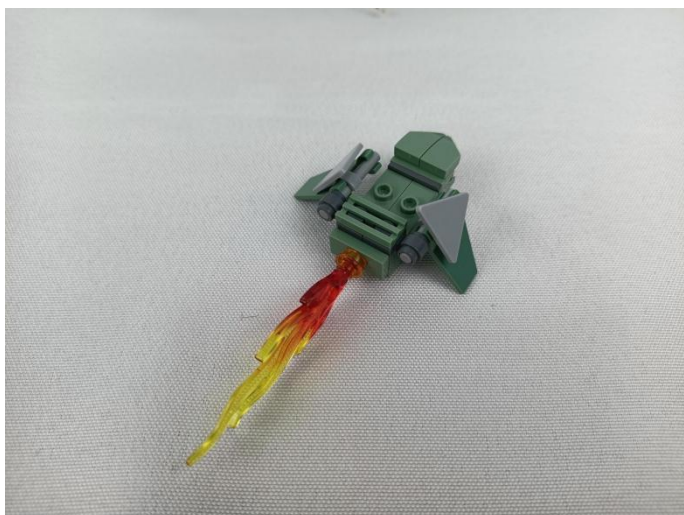

144



Tips

The plate without slit:

The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work.



The plate with slit:

The plate with slit:

The wire has enough space to avoid being squeezed and has longer service life and more stable effect.




The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormal heat during installation.



145




146

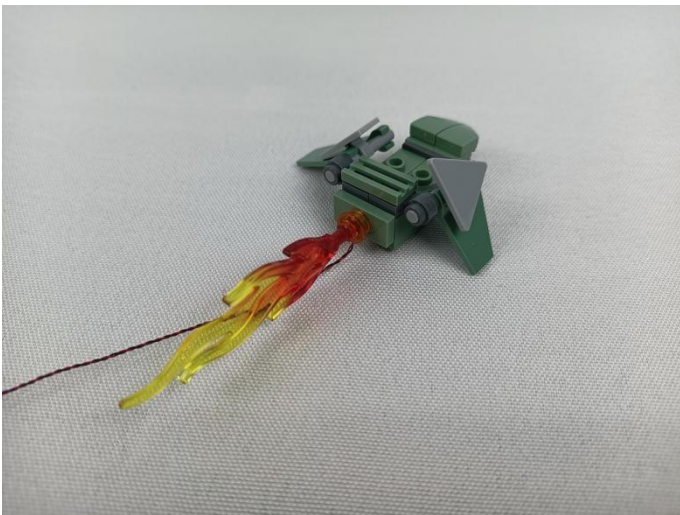

147

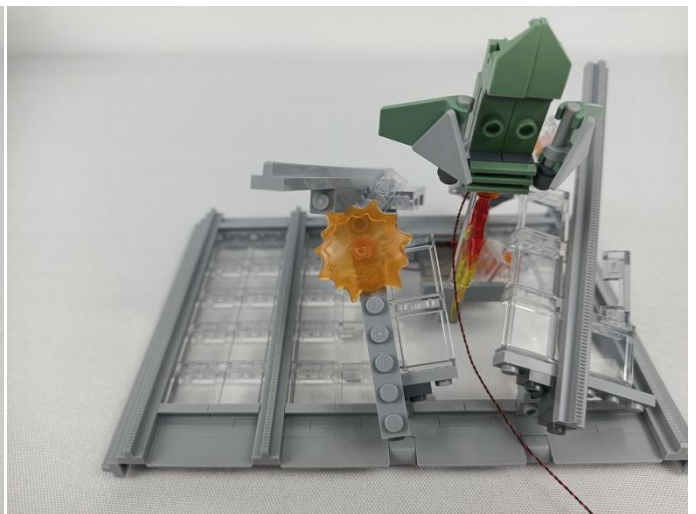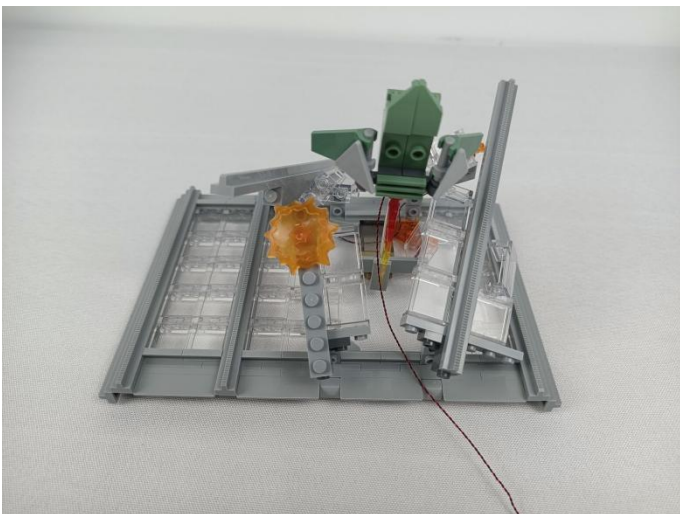


148

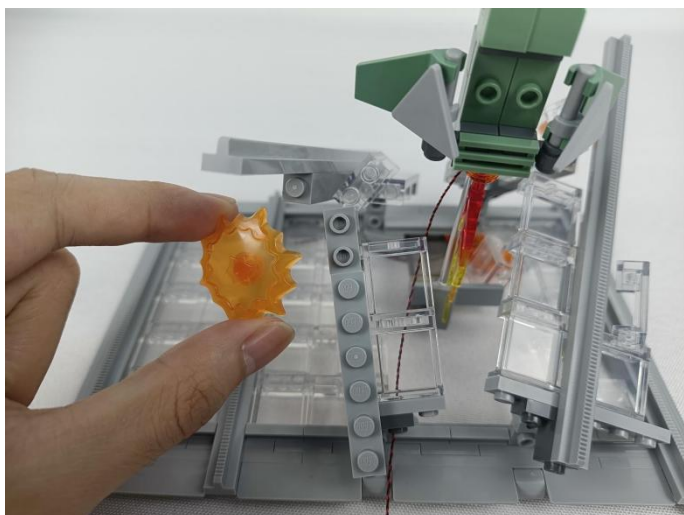



149




150

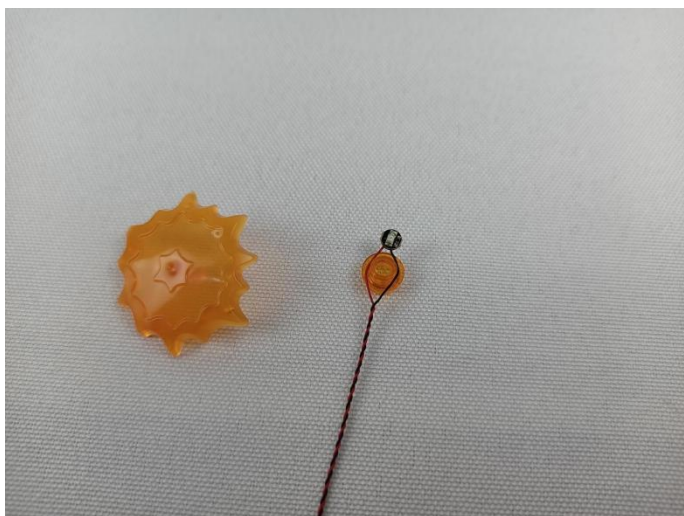



151

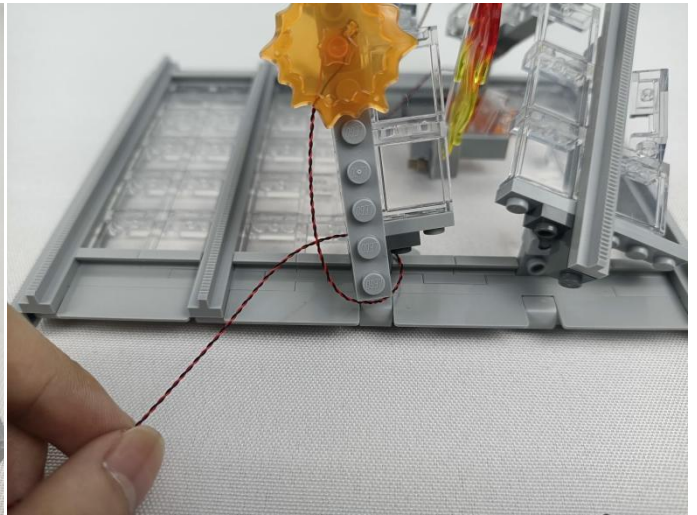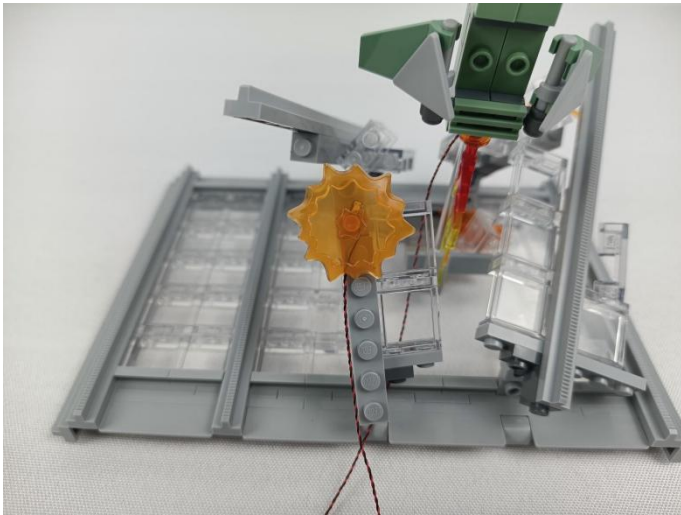



152

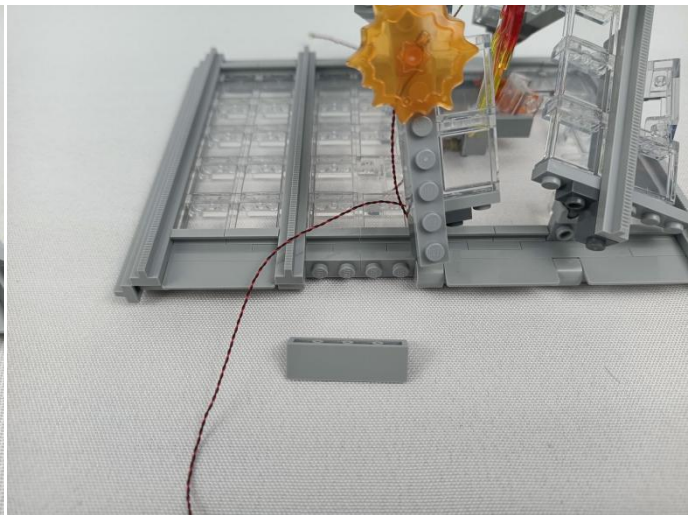



153

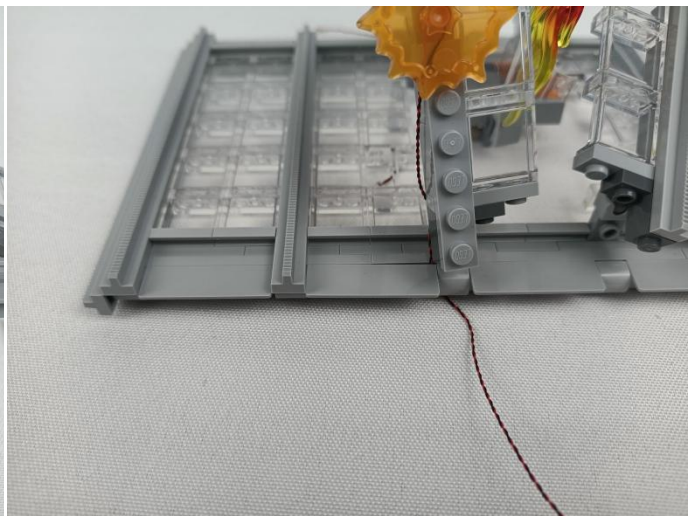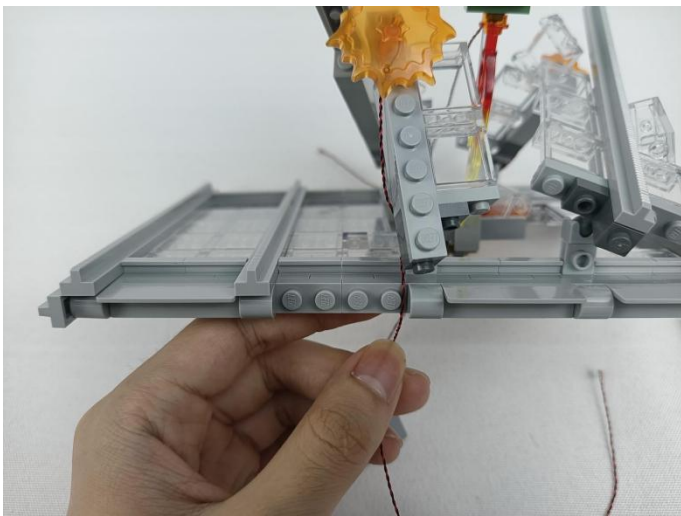


154

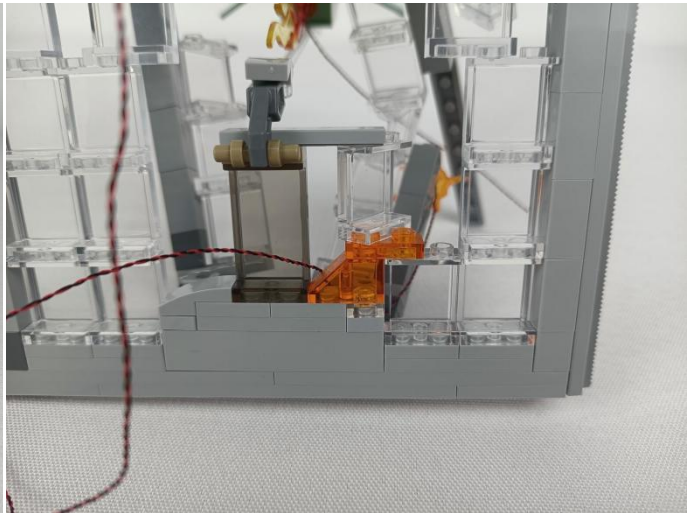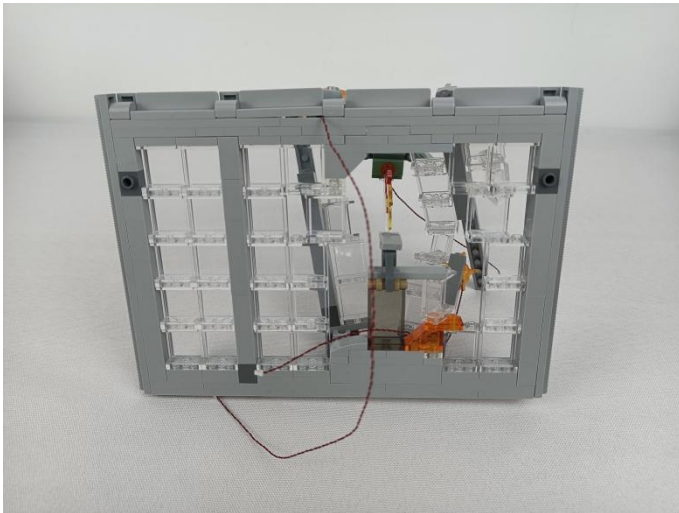



155

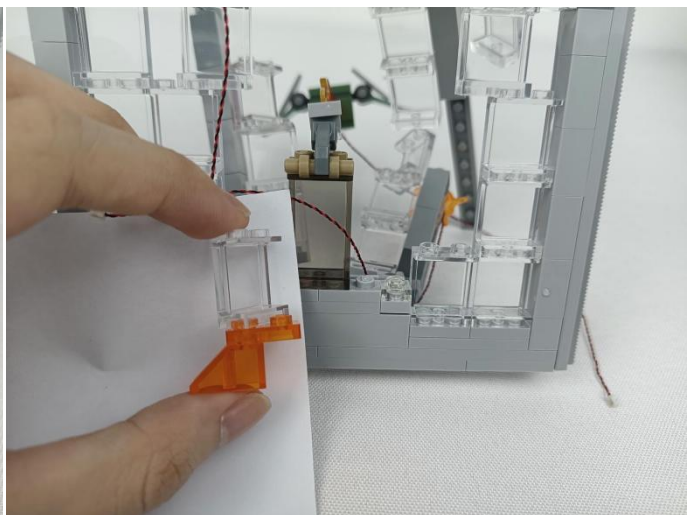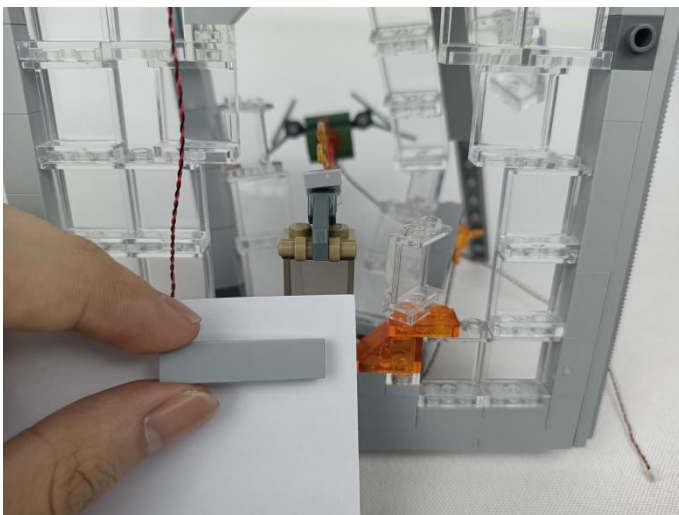



156

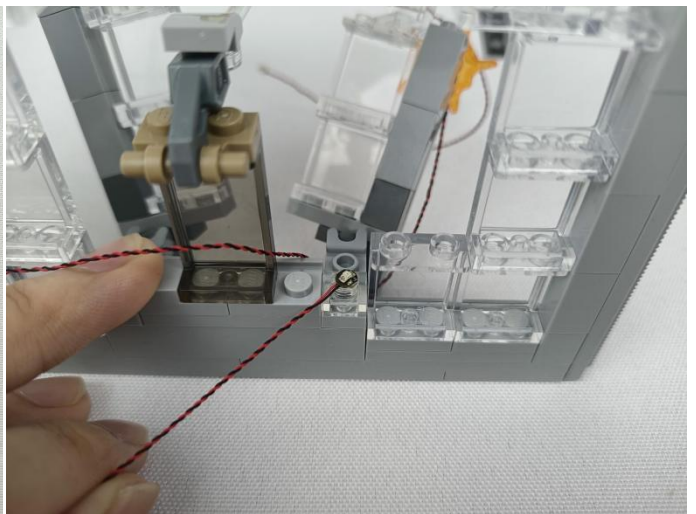


157

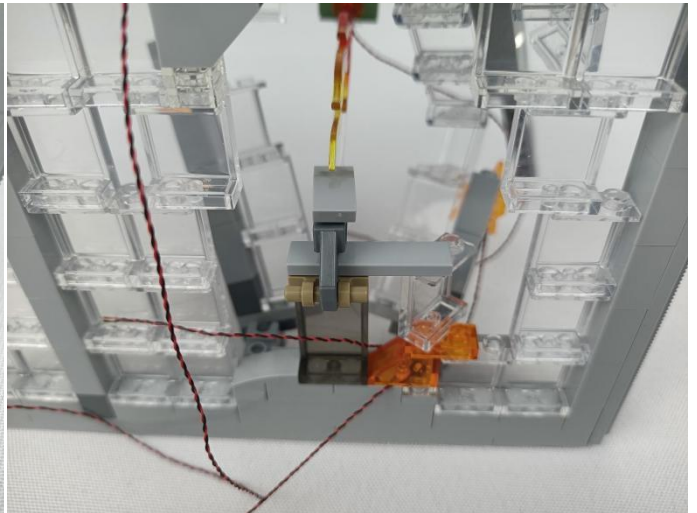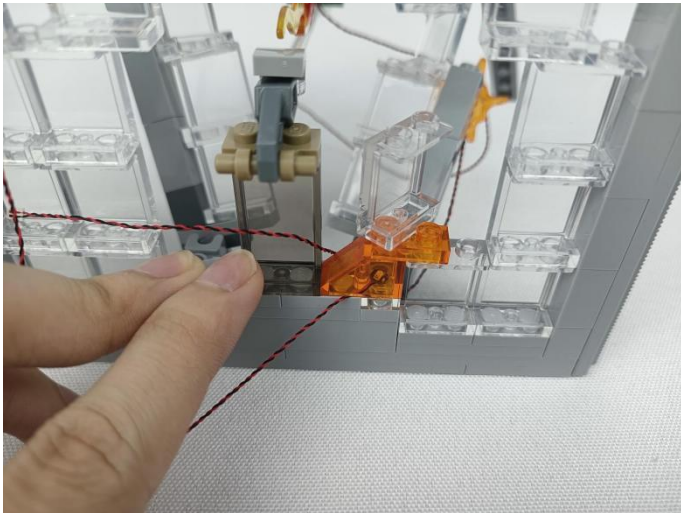


158

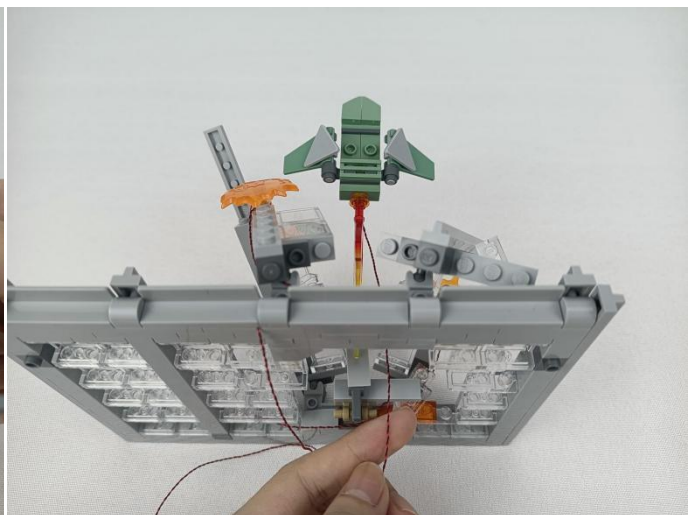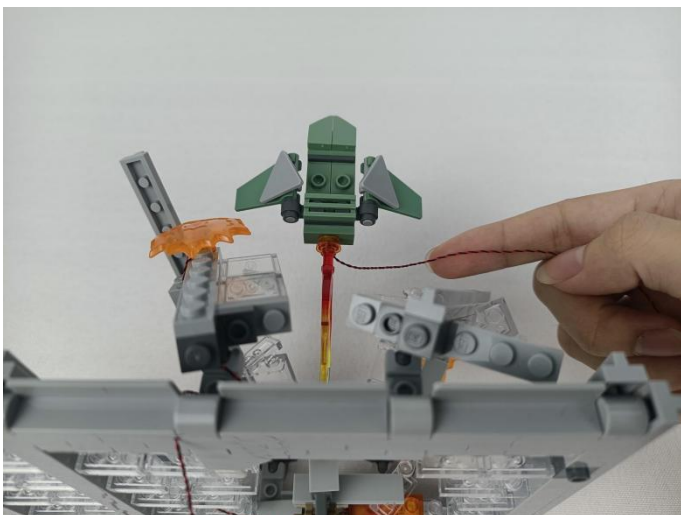



159

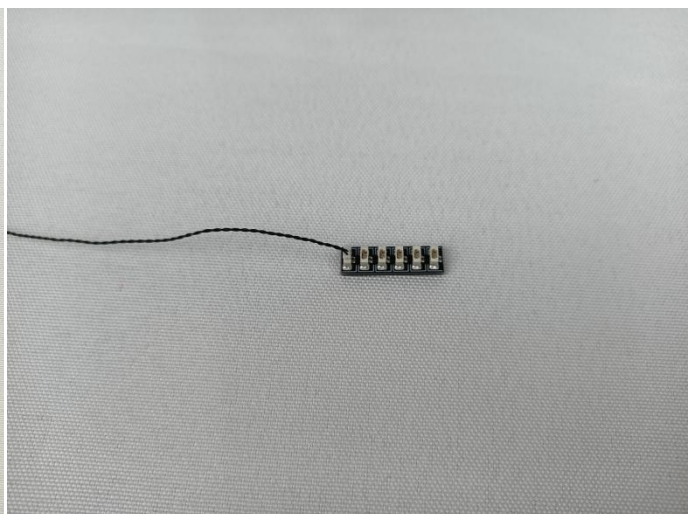

160

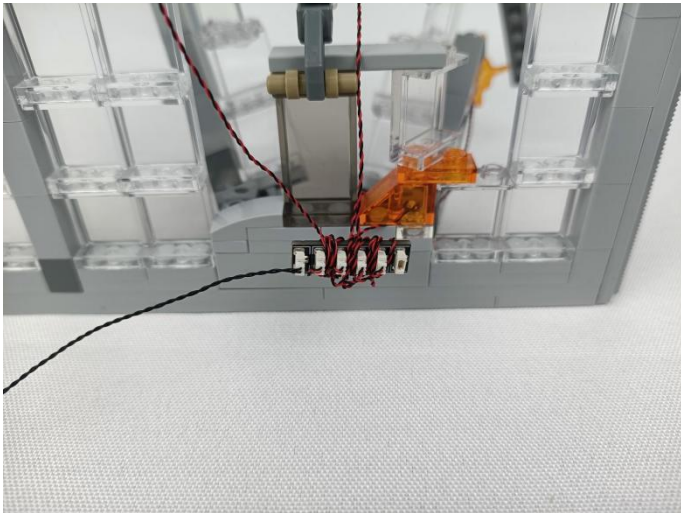



161

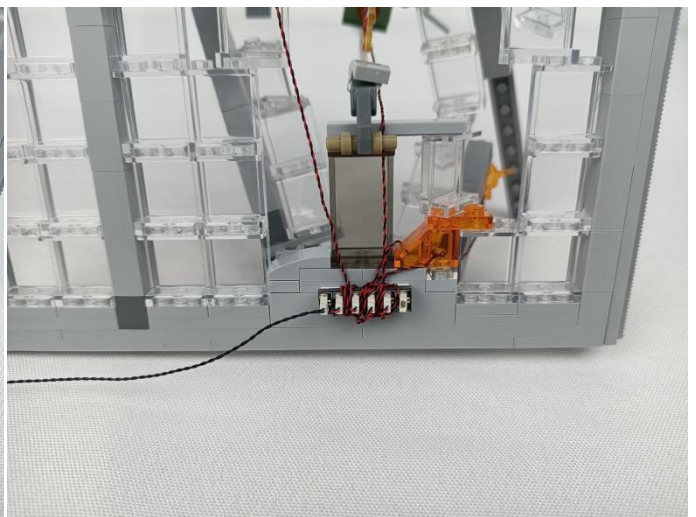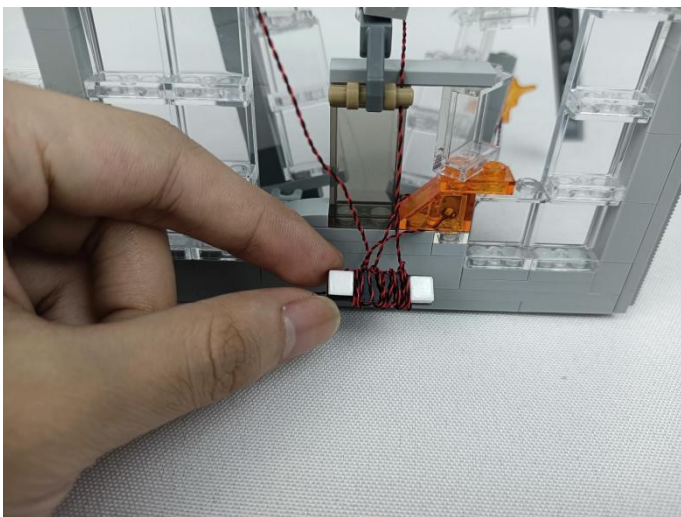



162





163

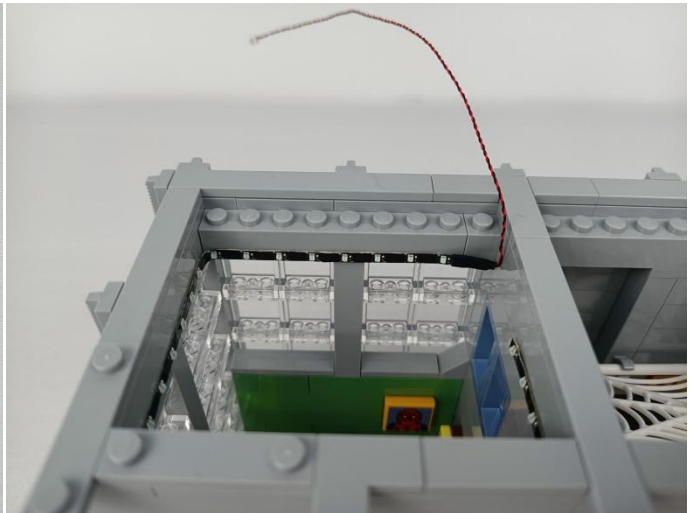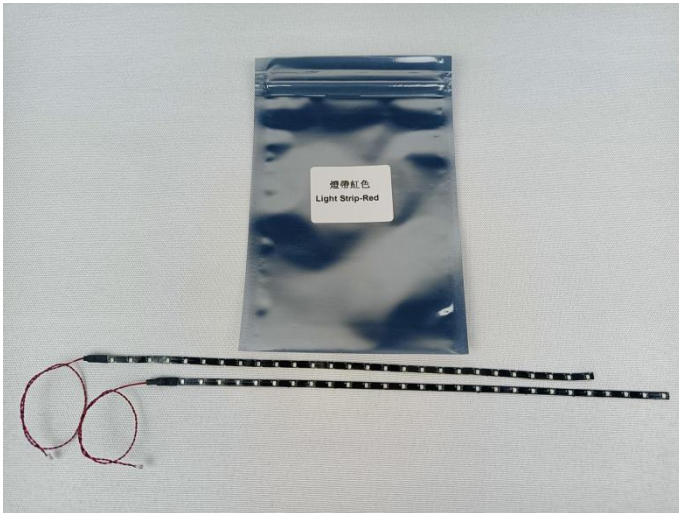



164

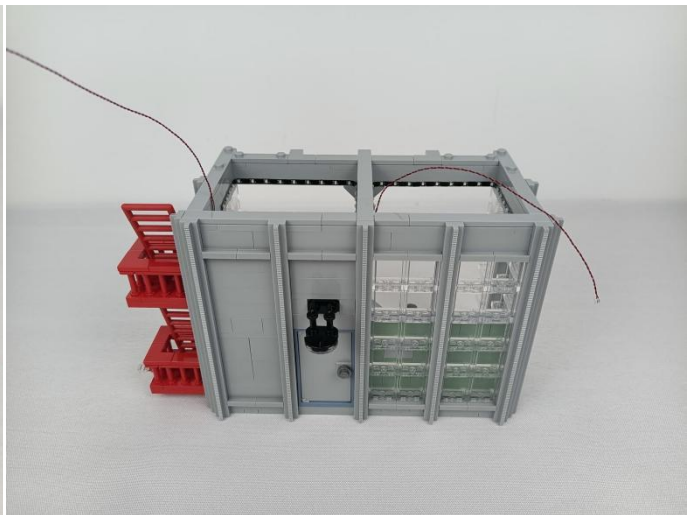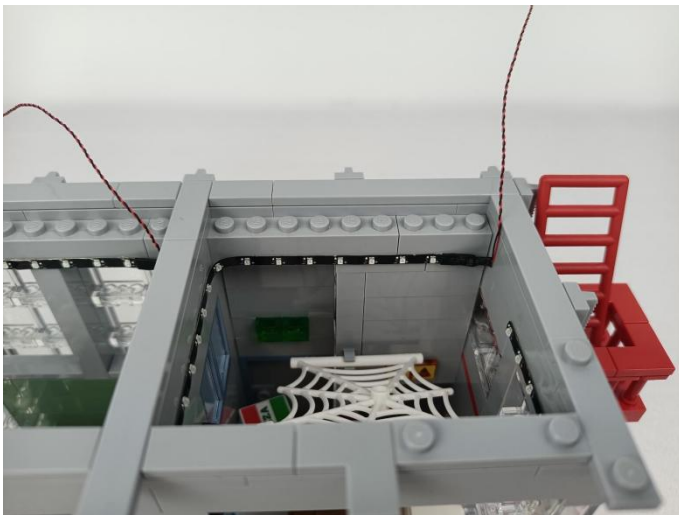

165

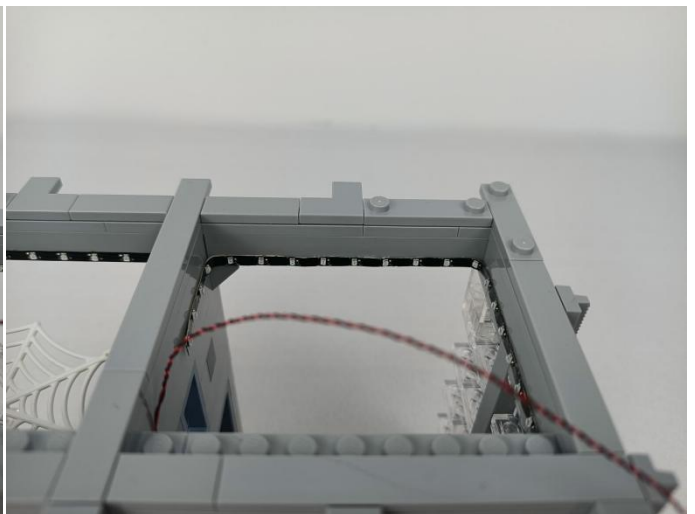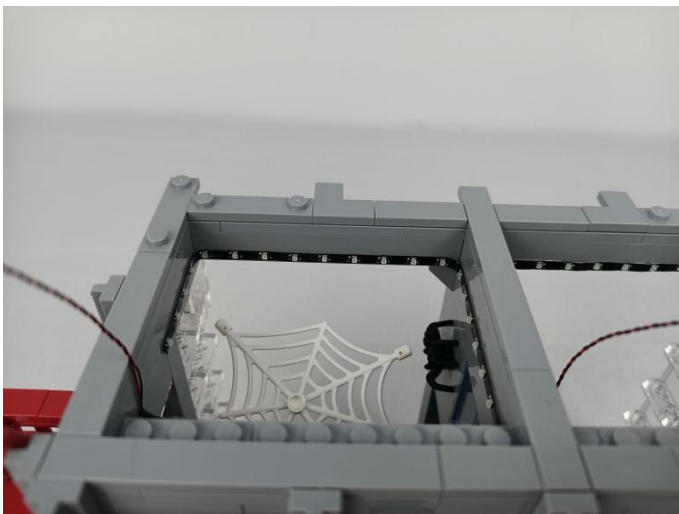


166

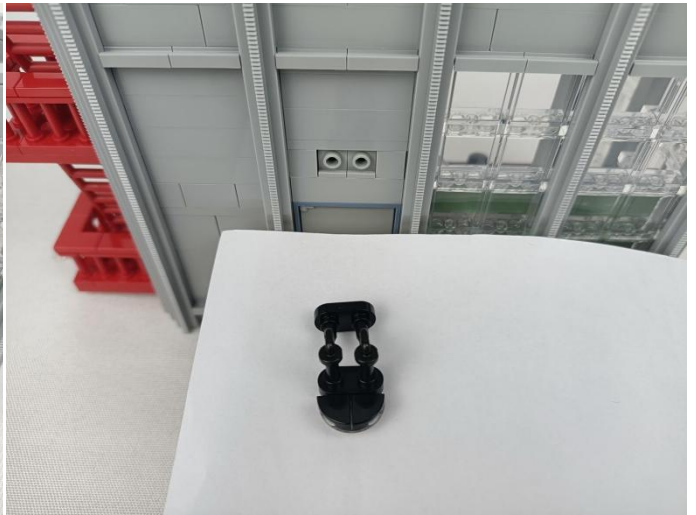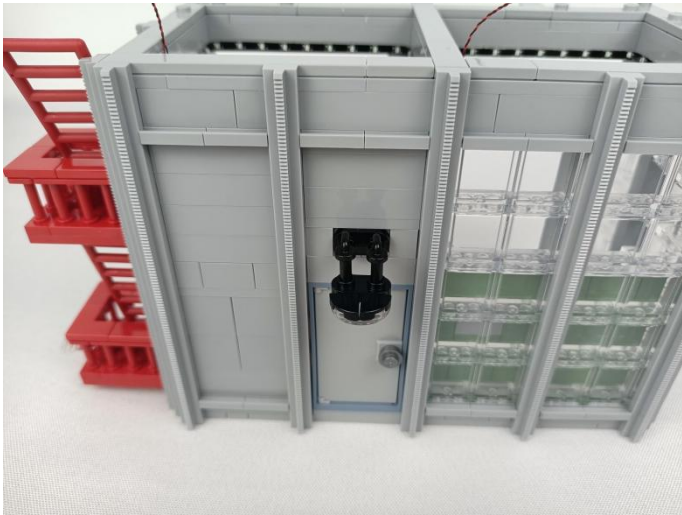



167





168

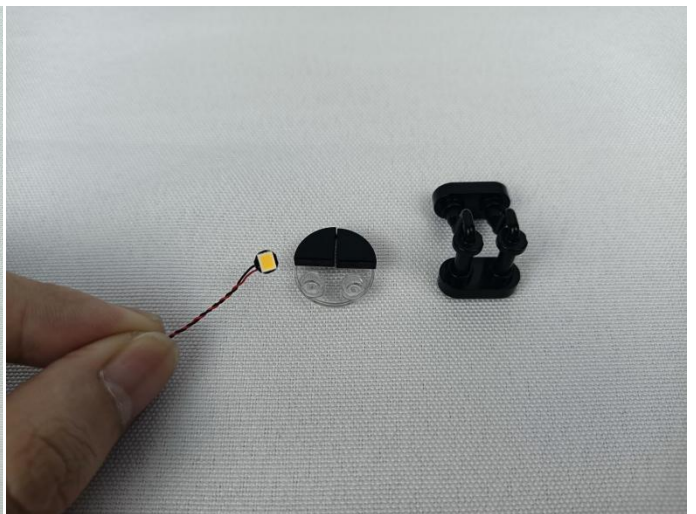



169

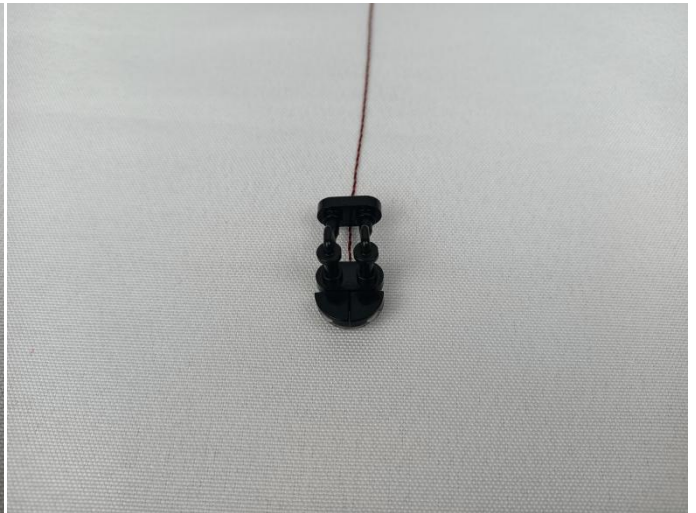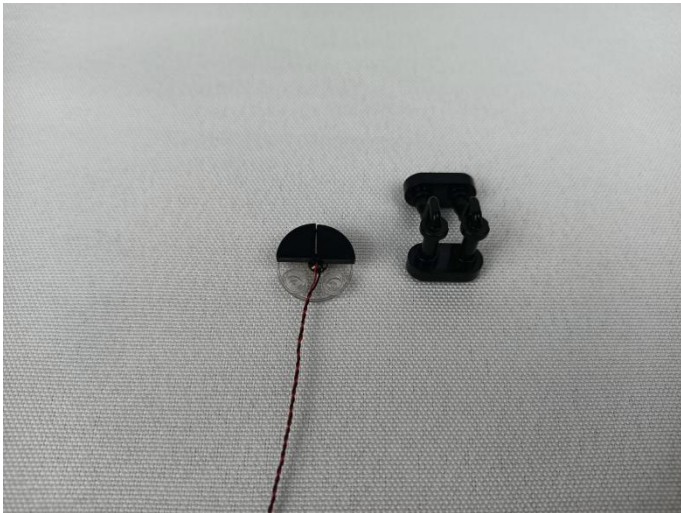



170

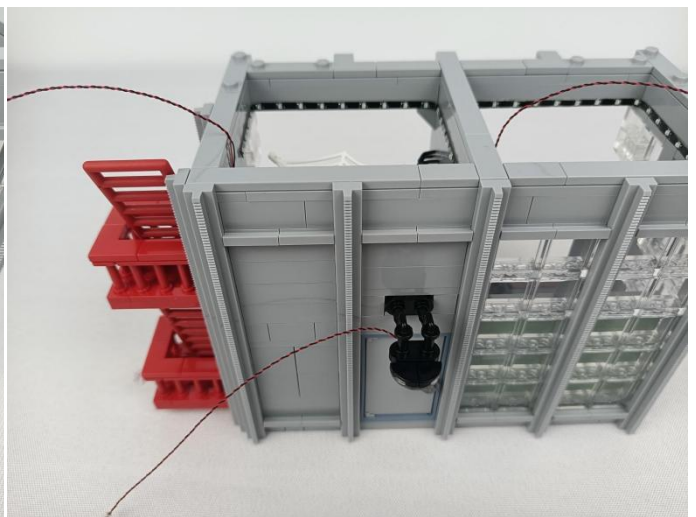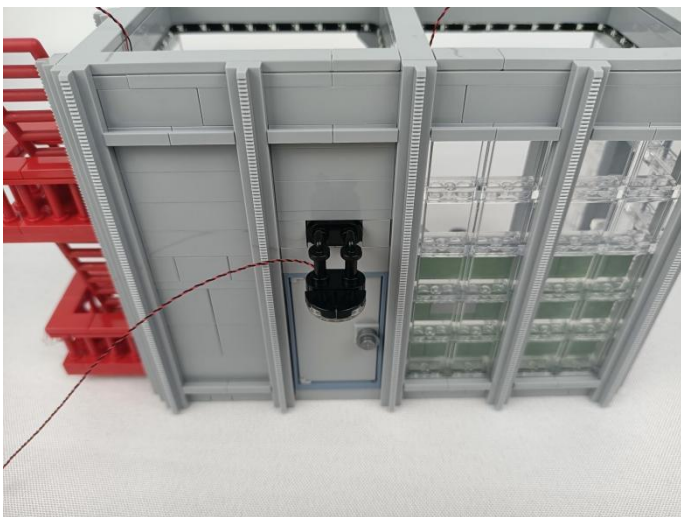



171

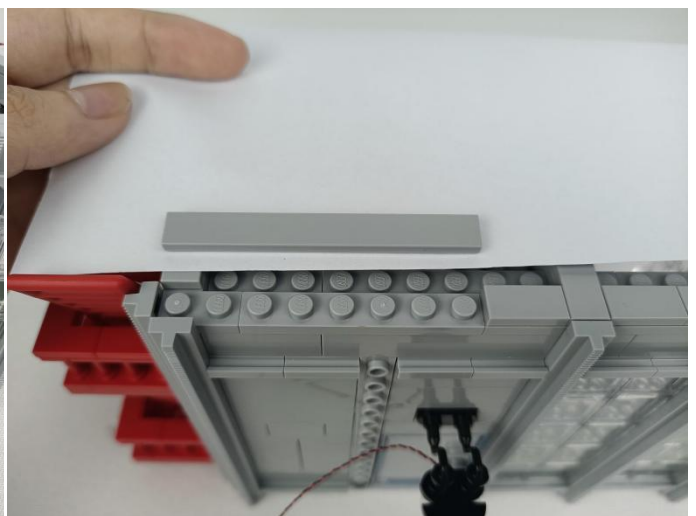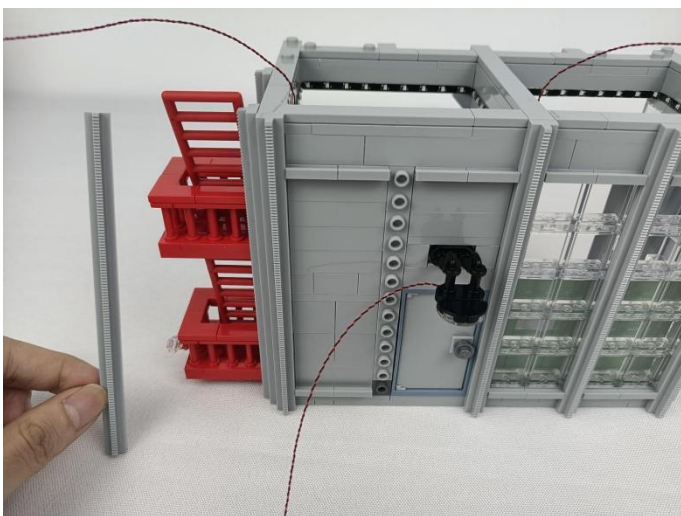



172

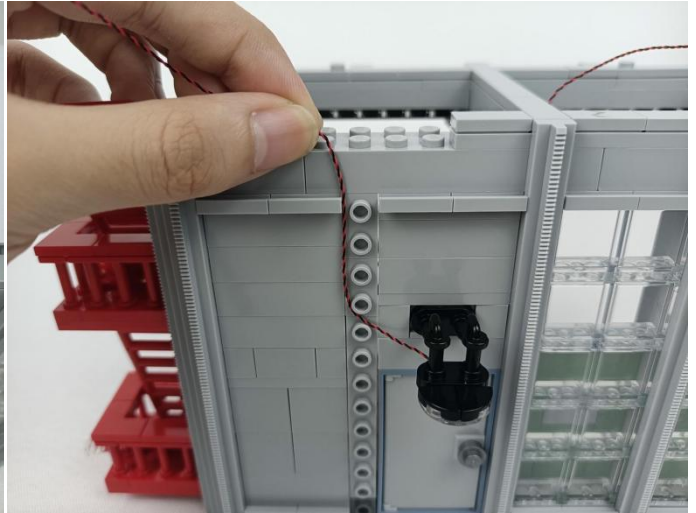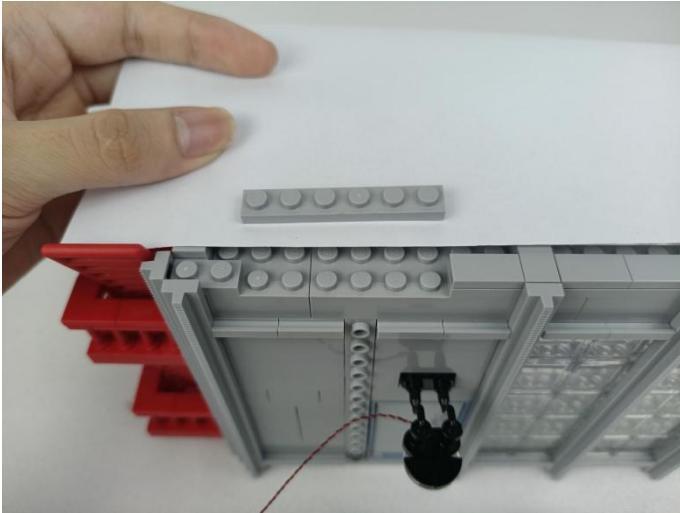



173

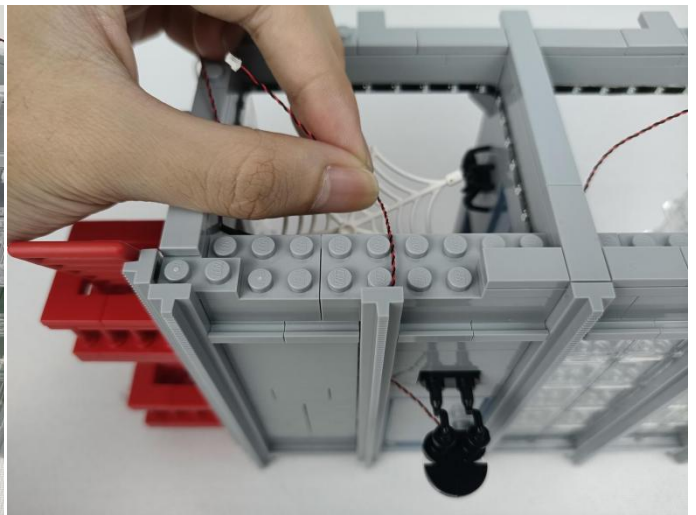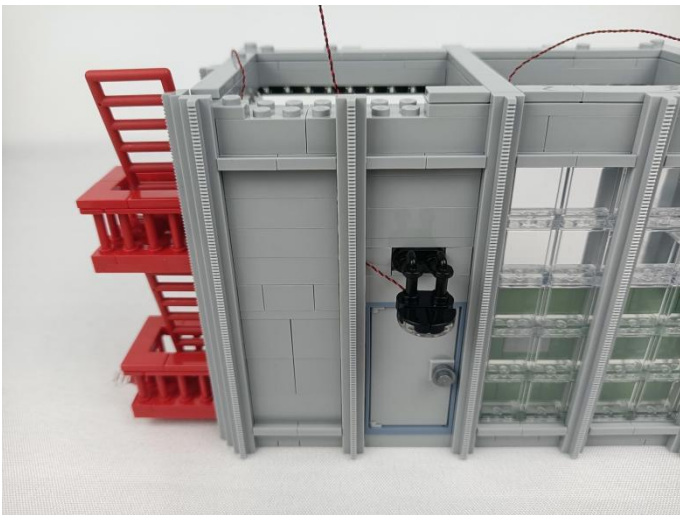



174

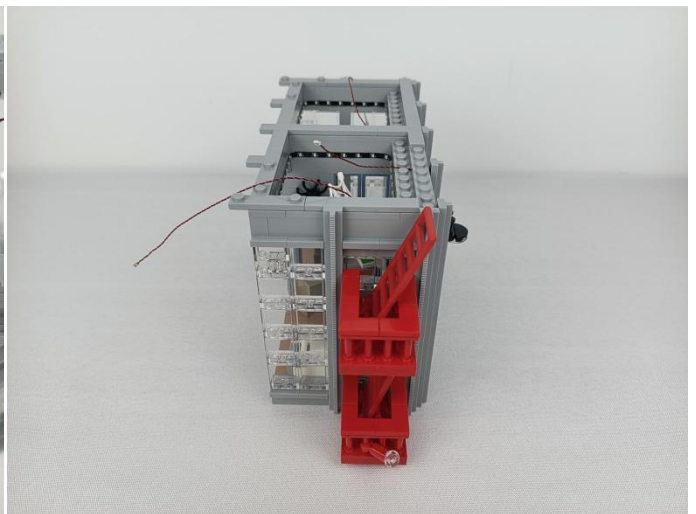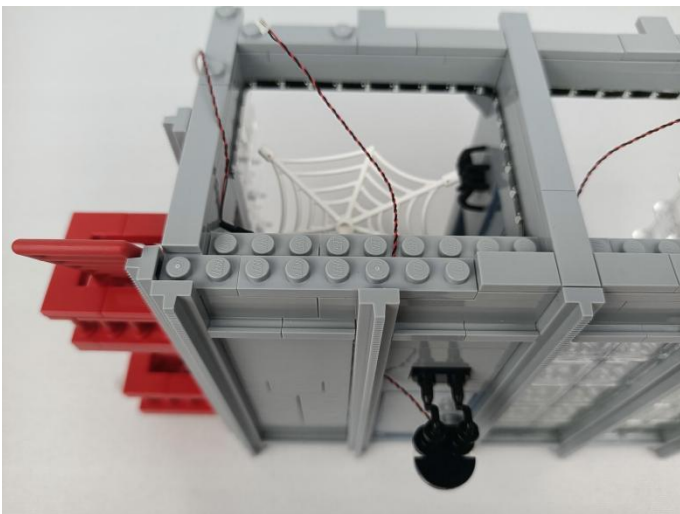



175

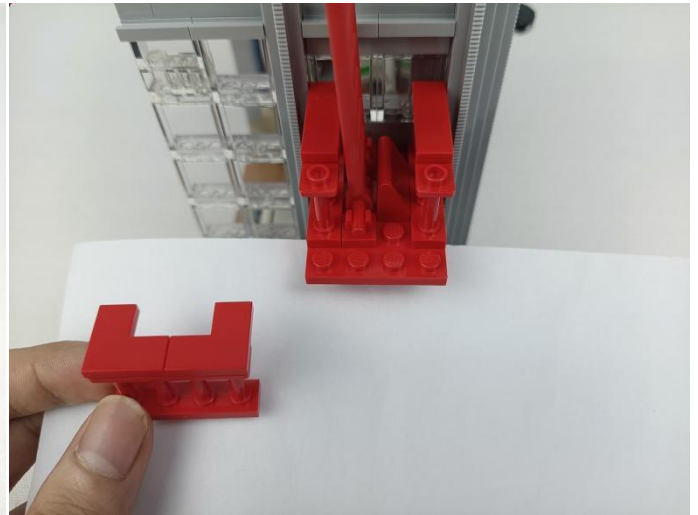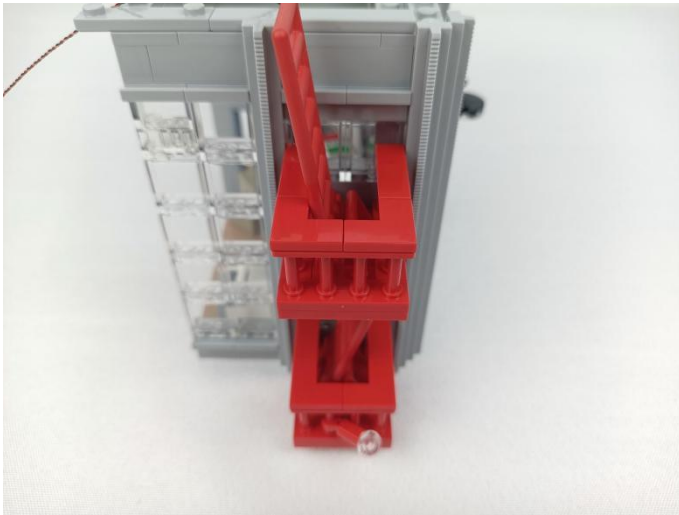



176

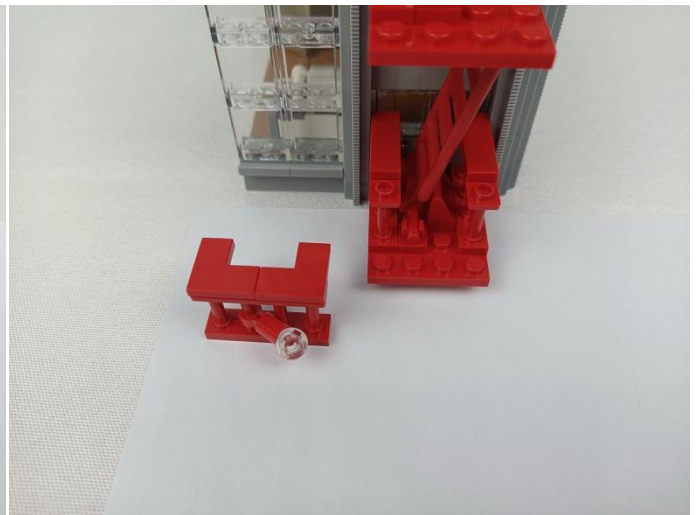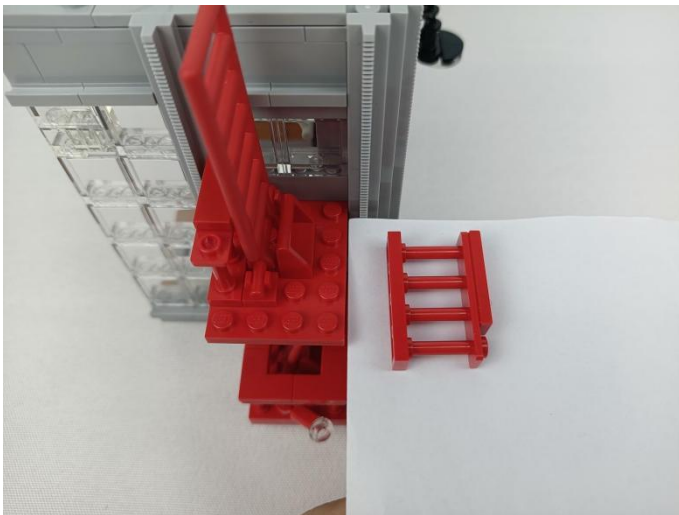


177

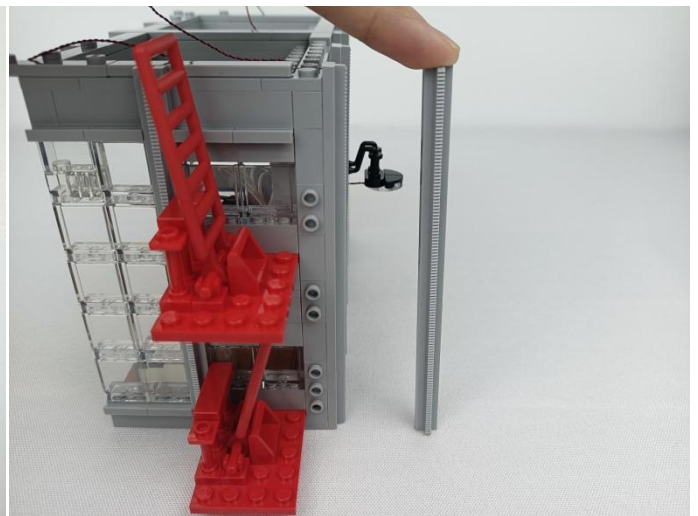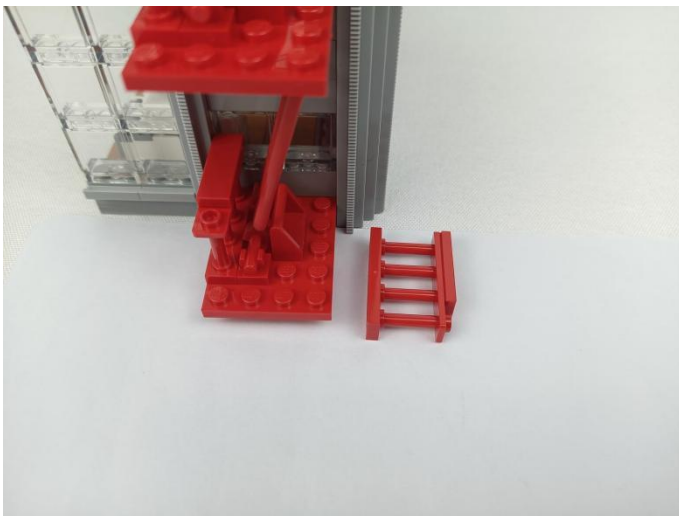



178

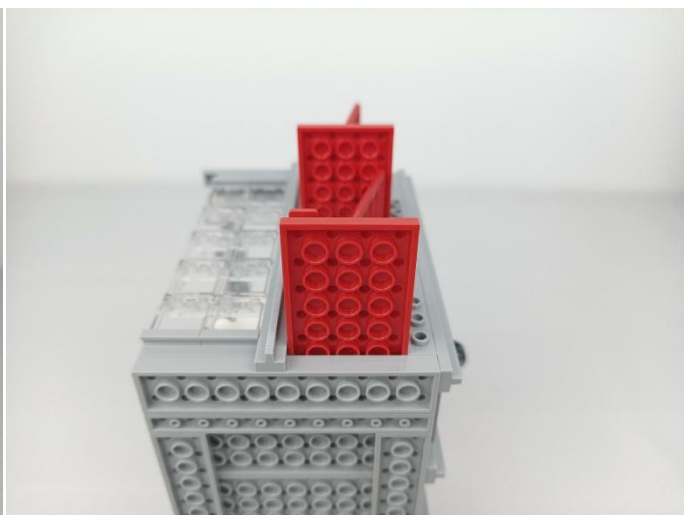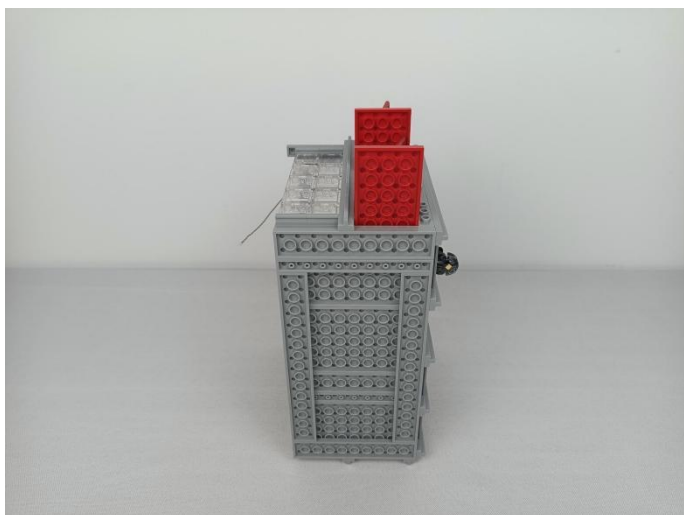


179

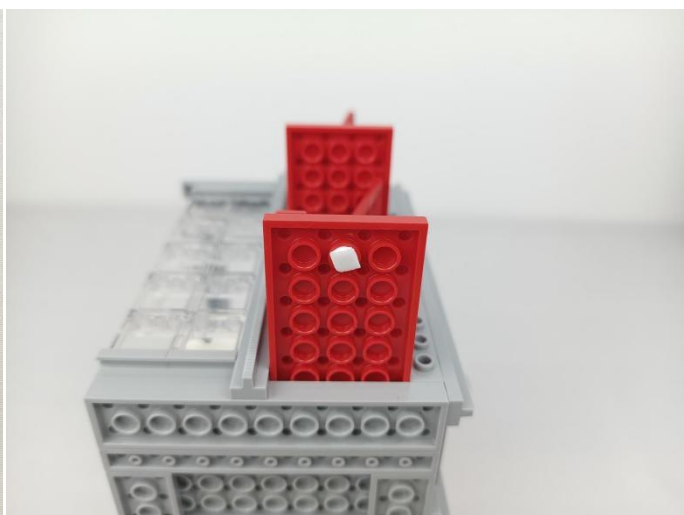



180

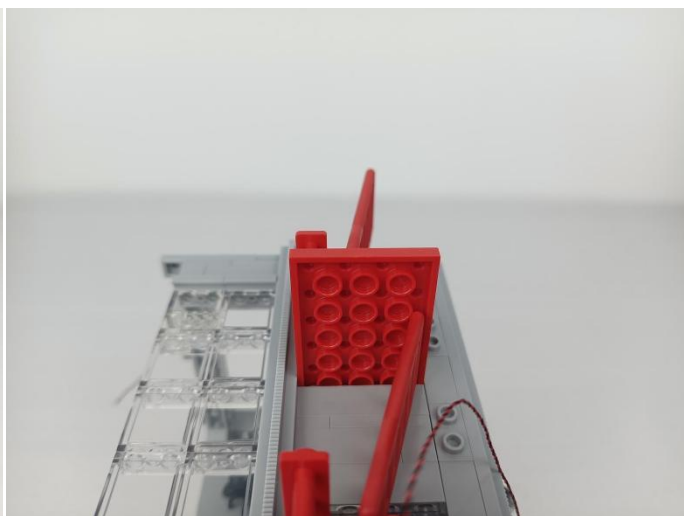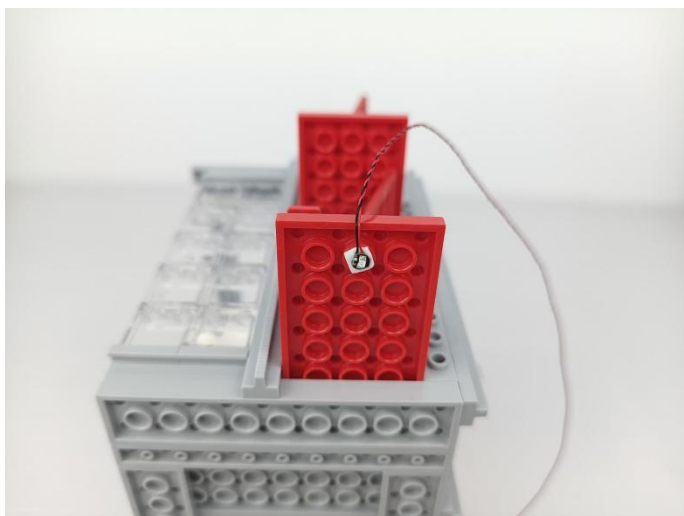



181

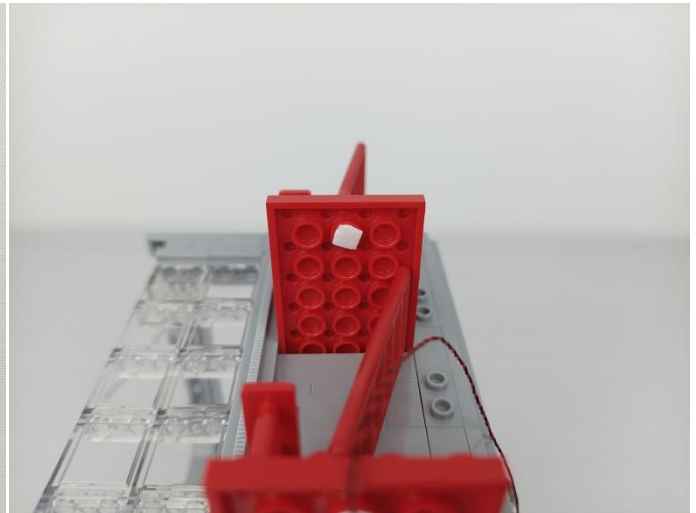



182

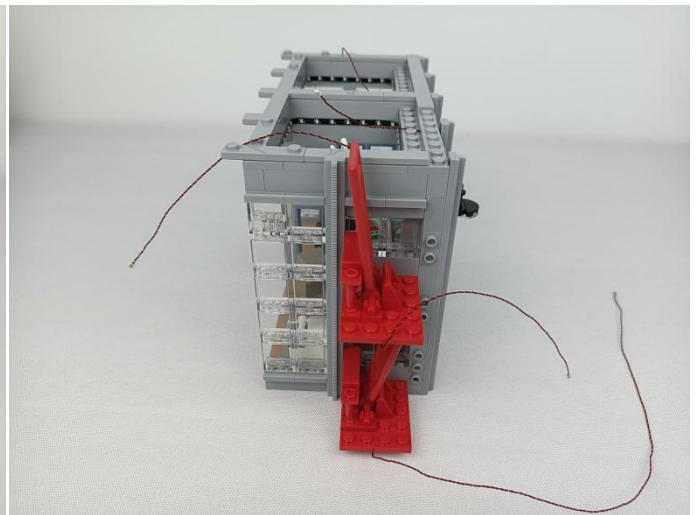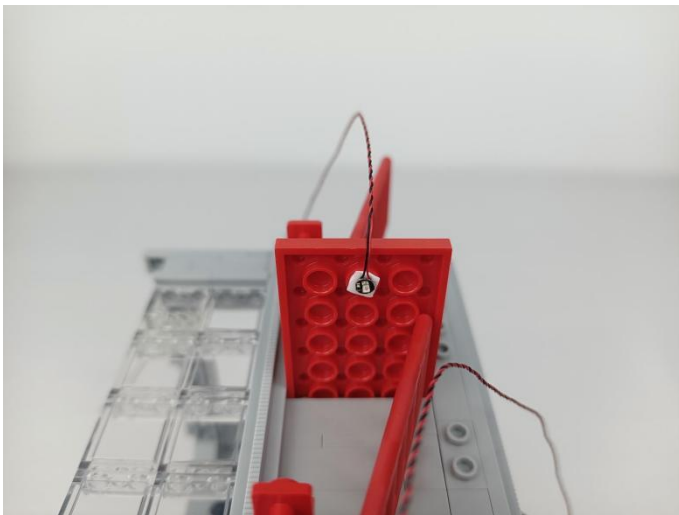



183

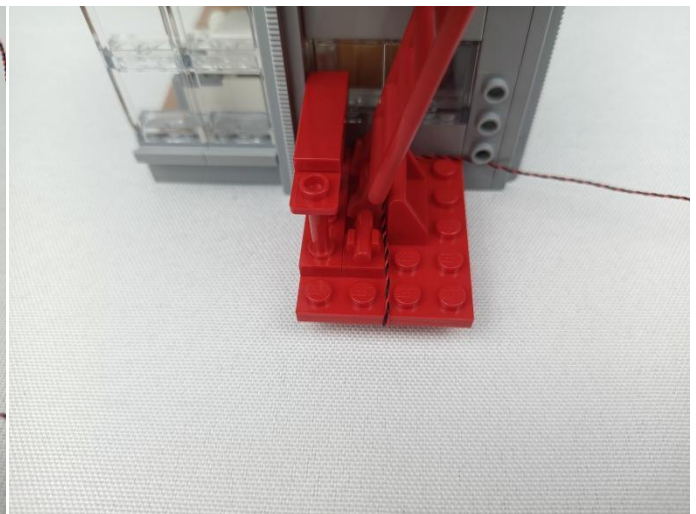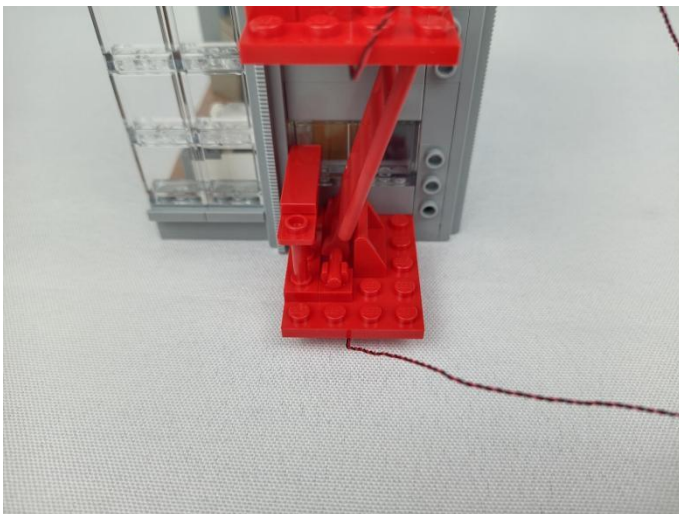



184

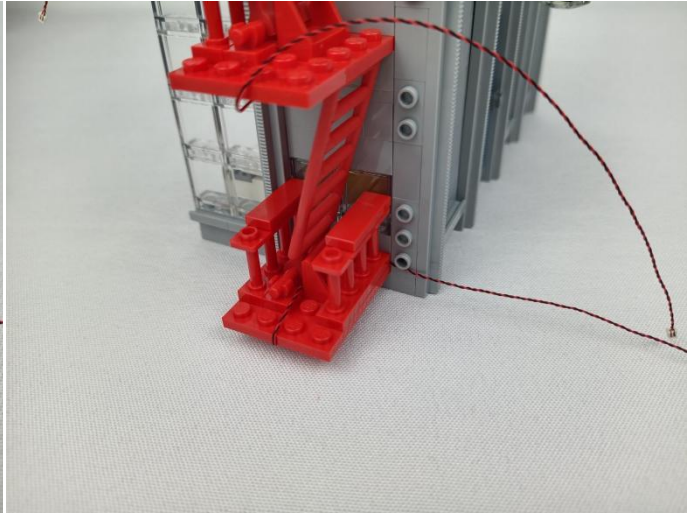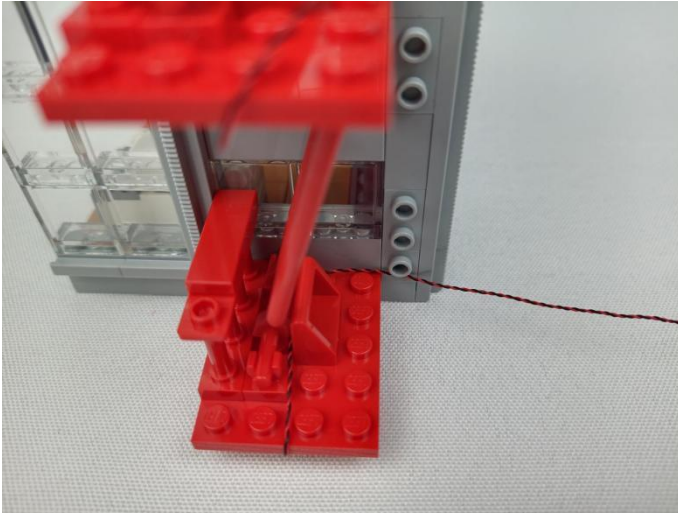



185

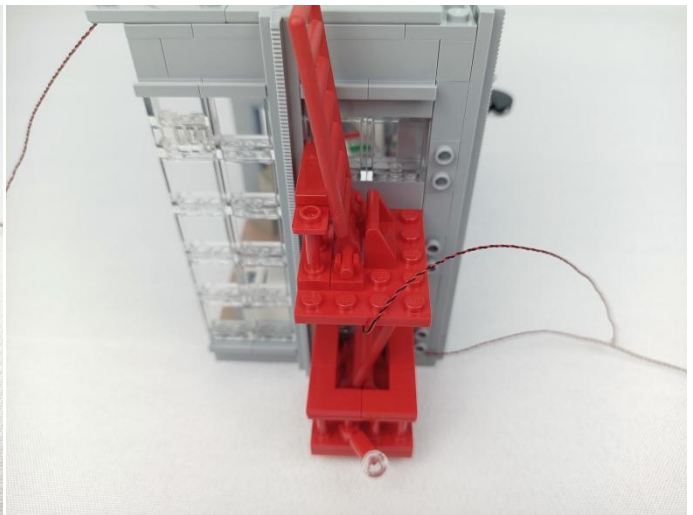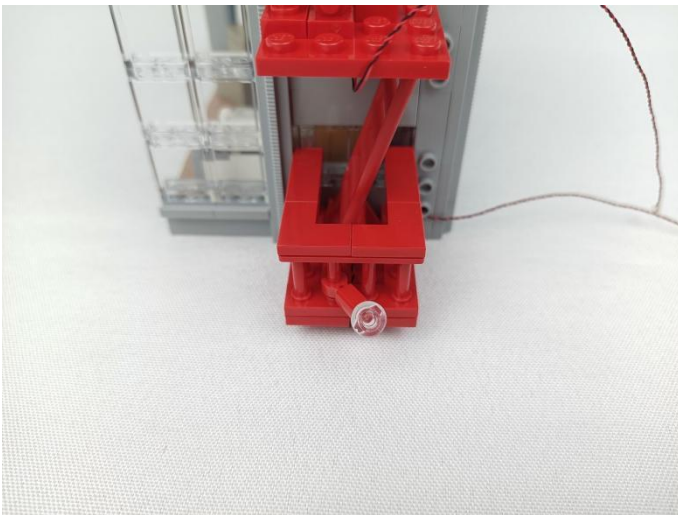



186

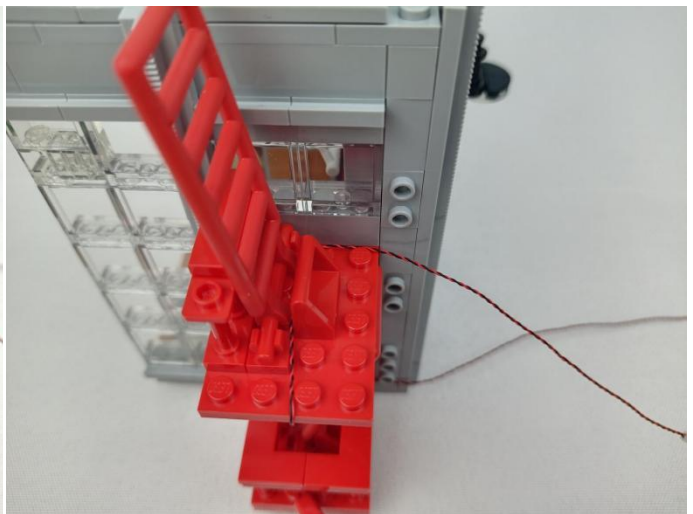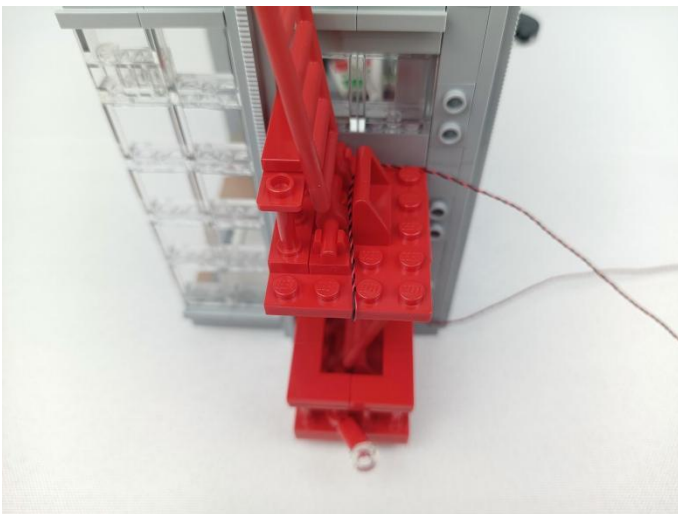



187

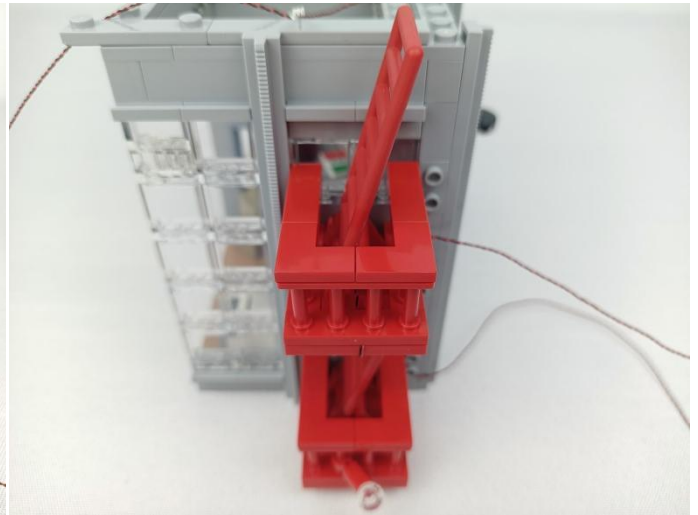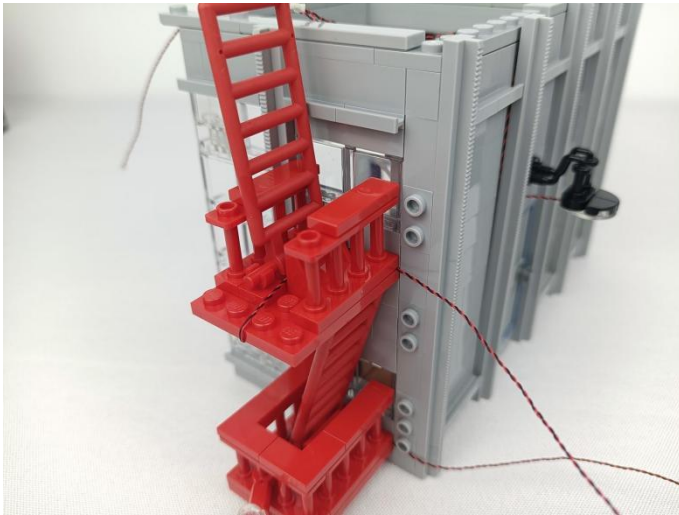



188

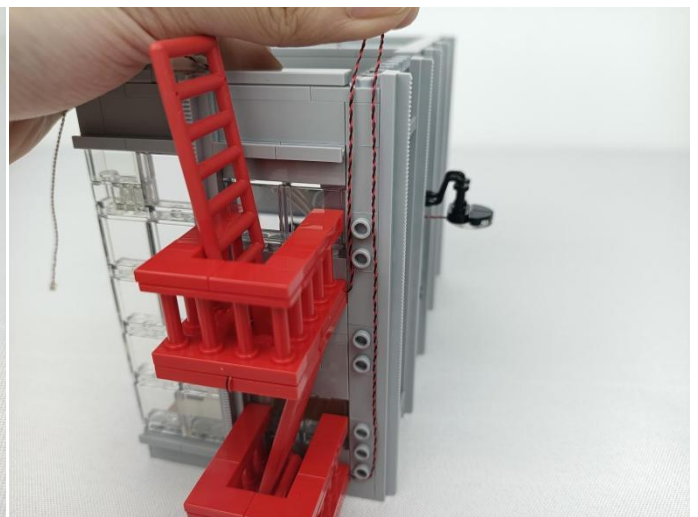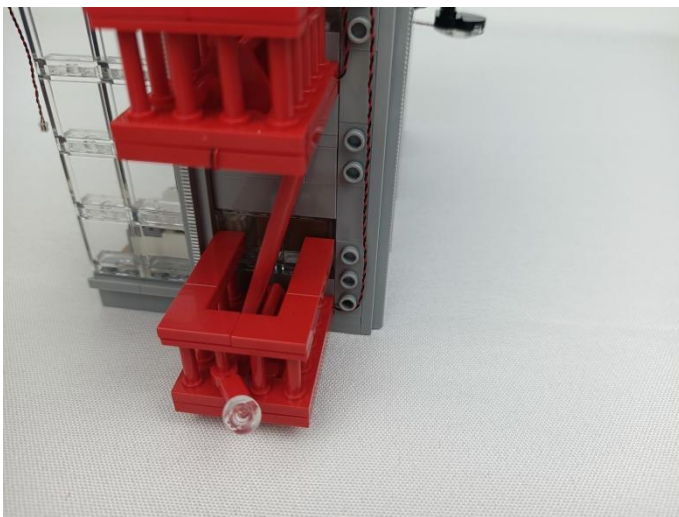



189

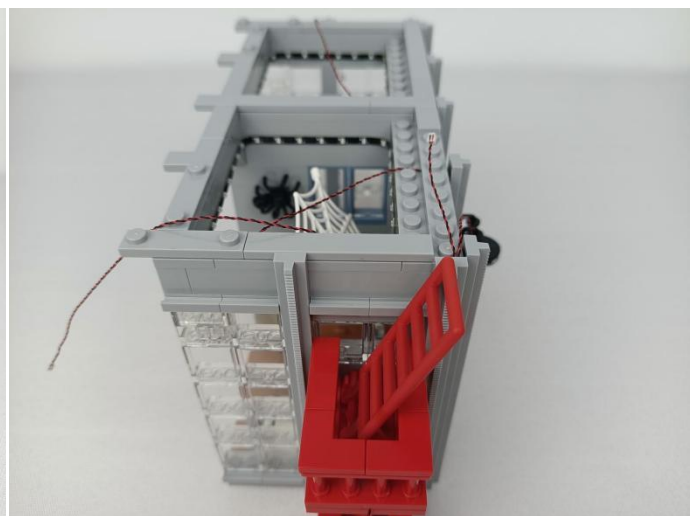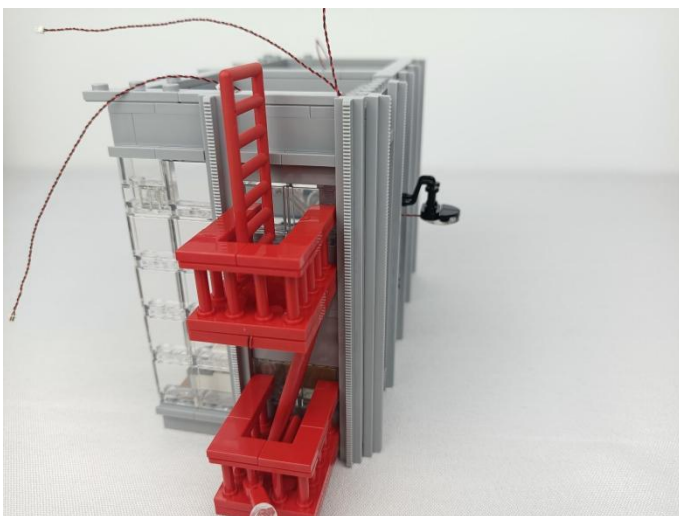



190

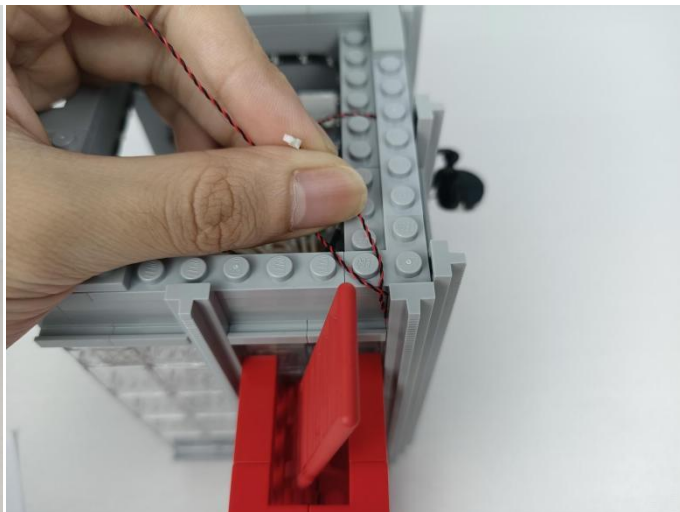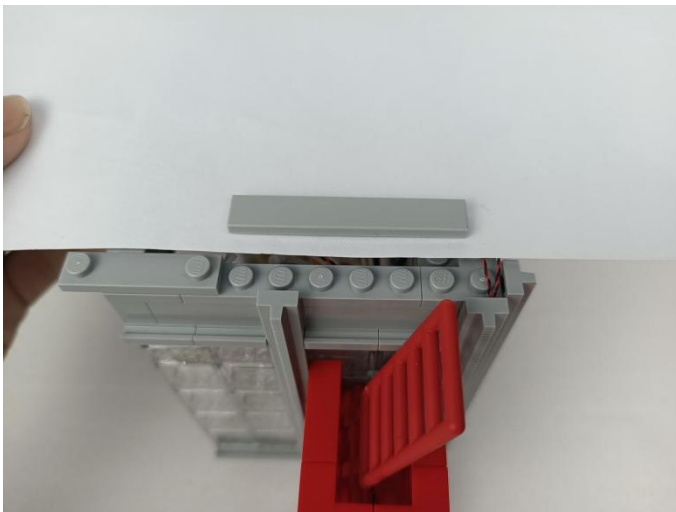



191

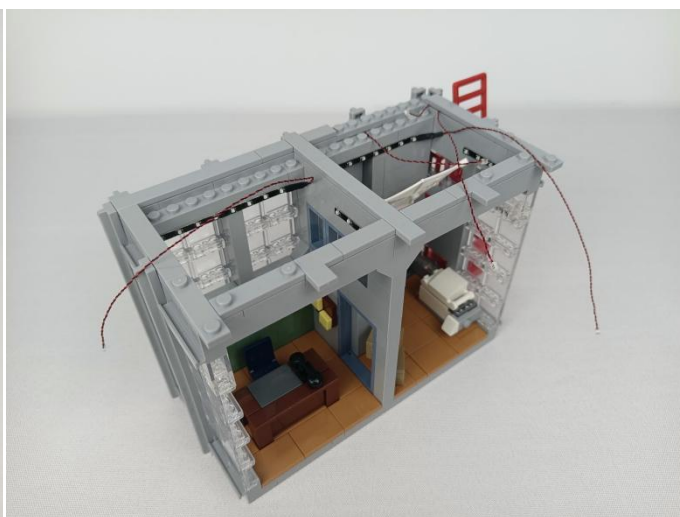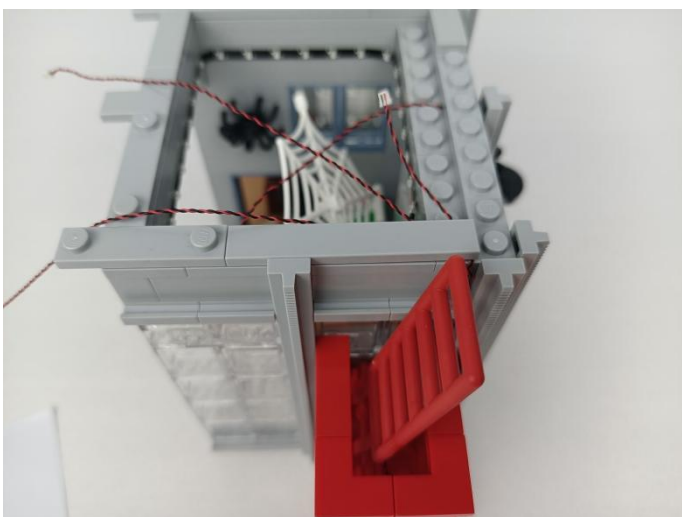



192

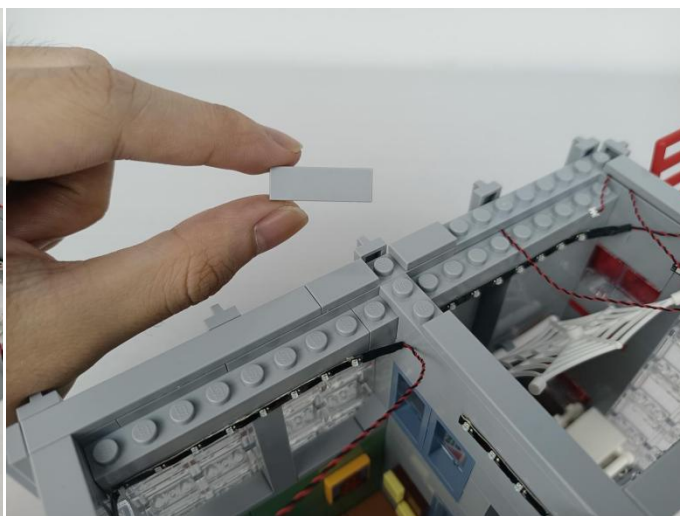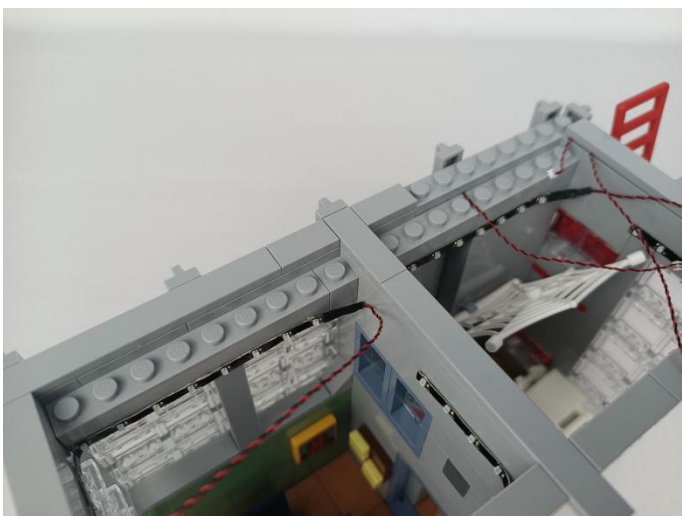



193

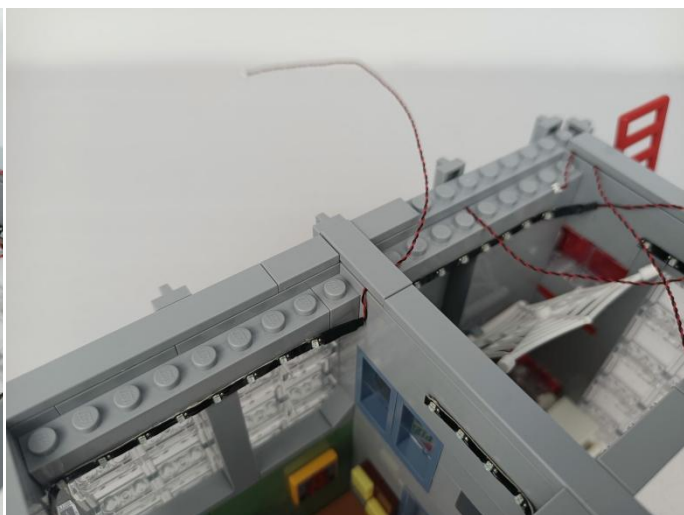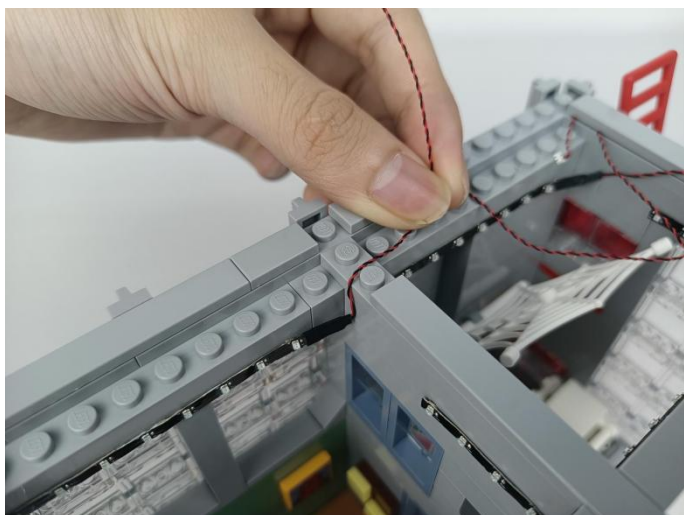



194

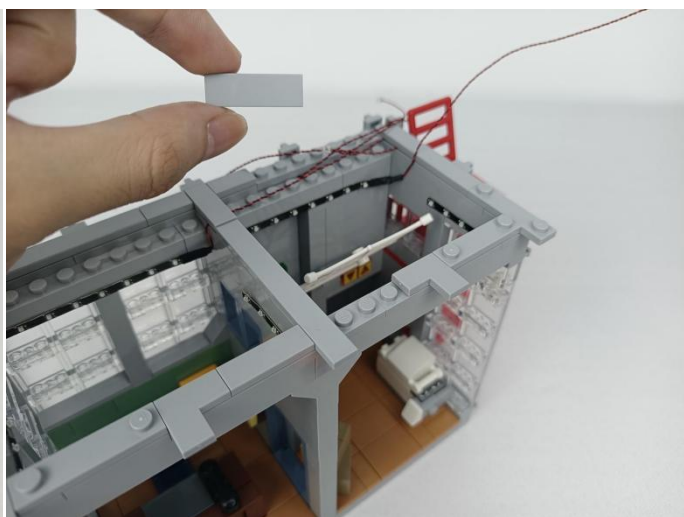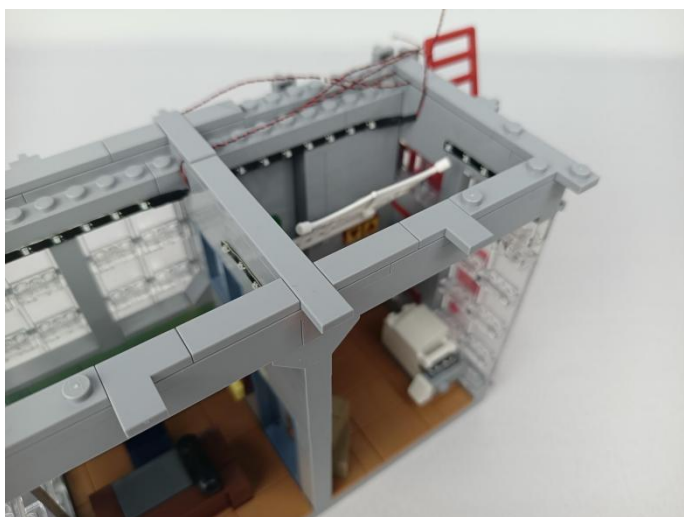


195

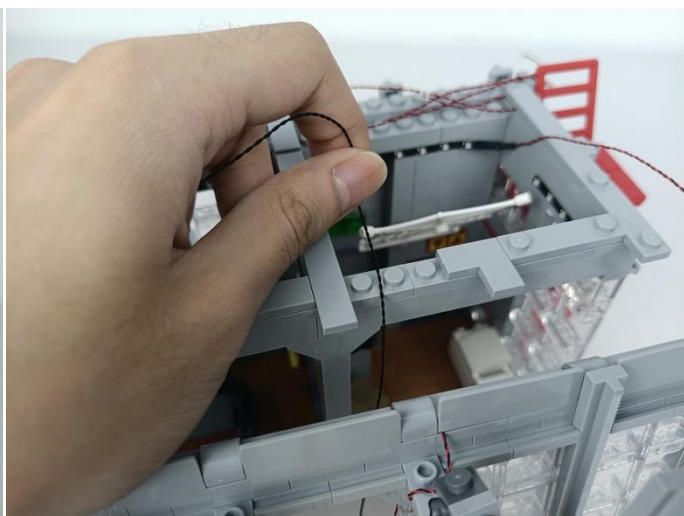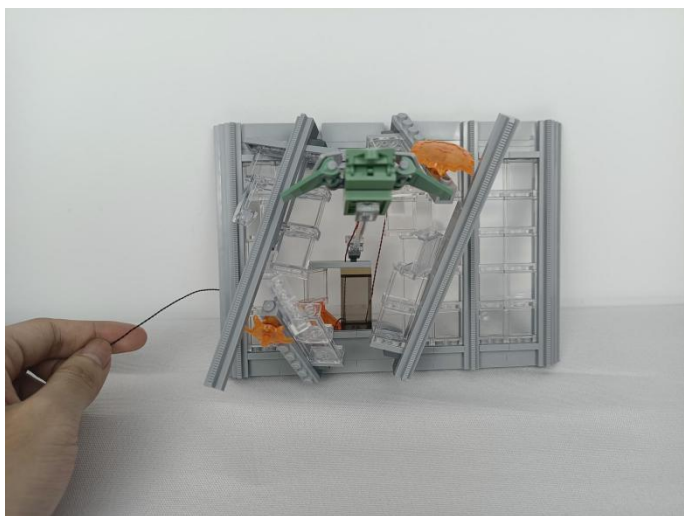



196

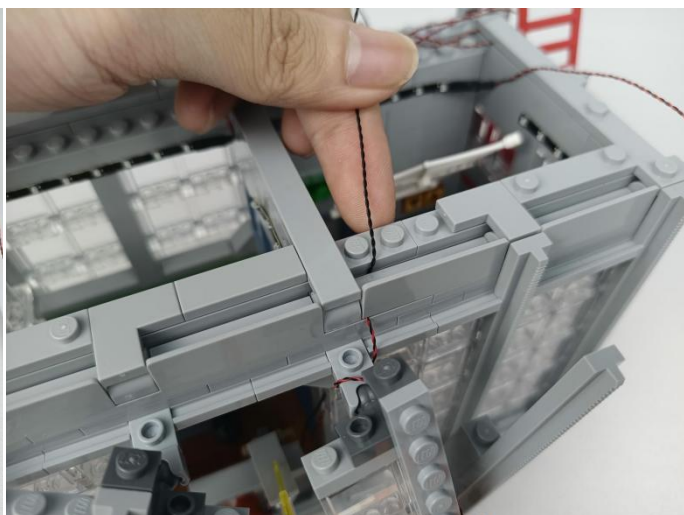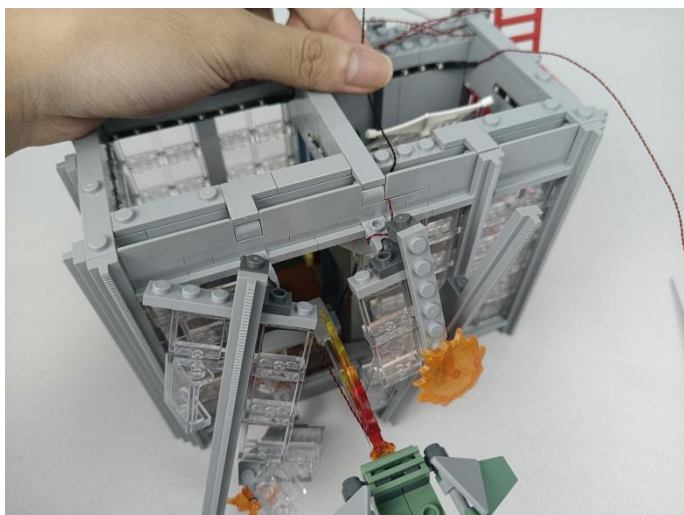

197

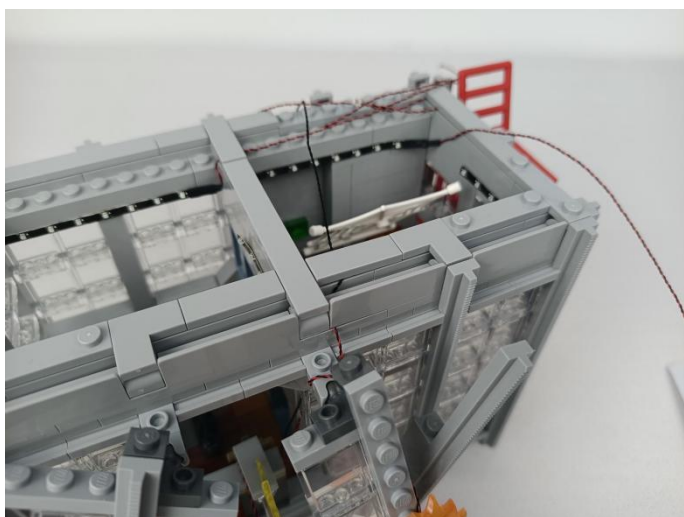


198

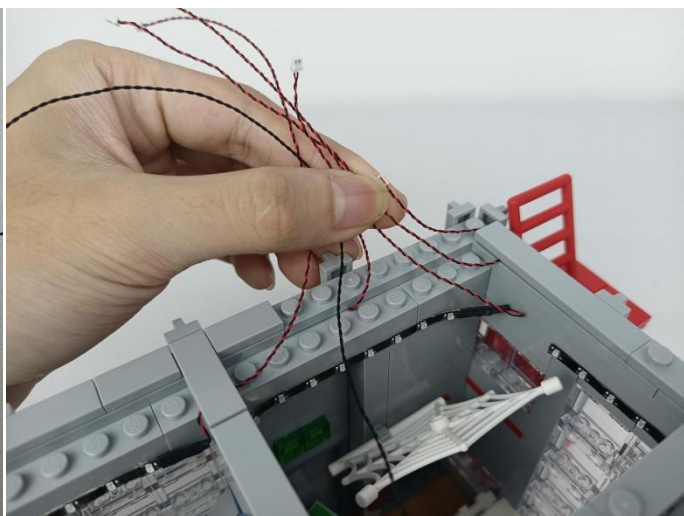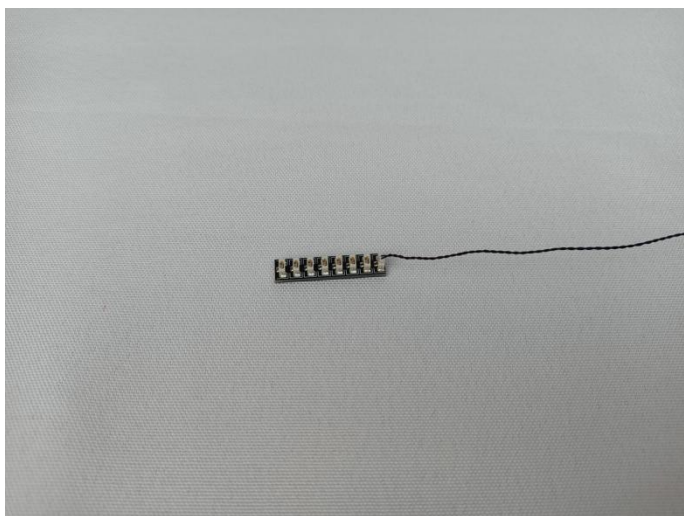


199





200

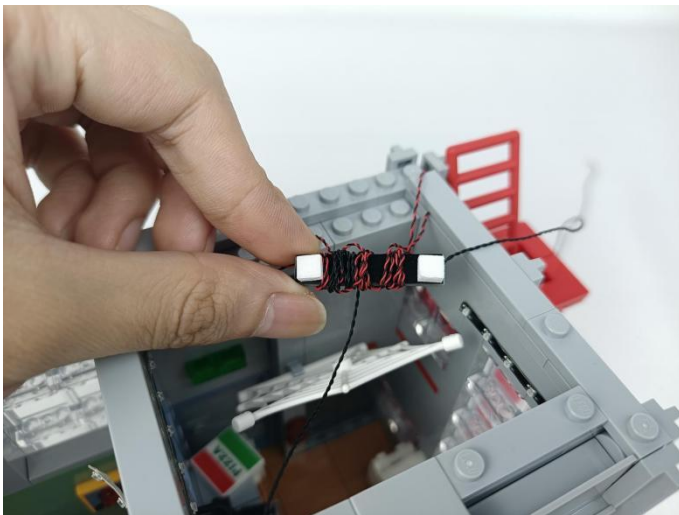



201

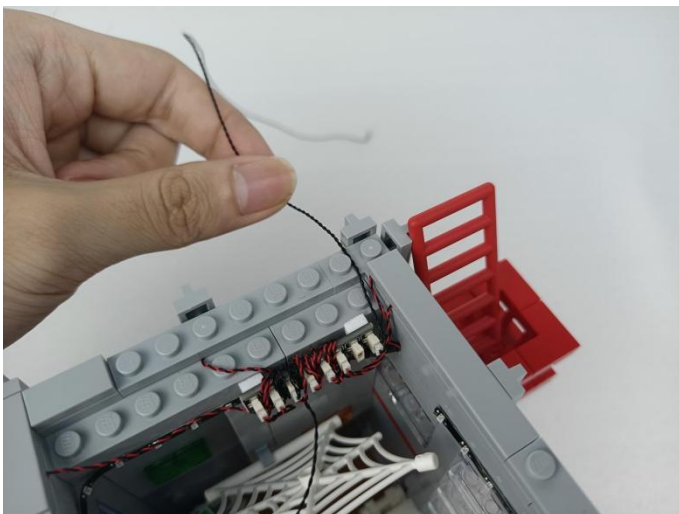



202

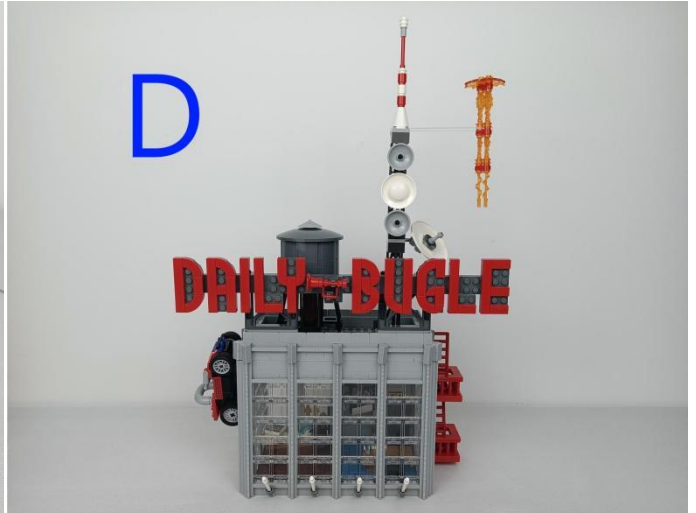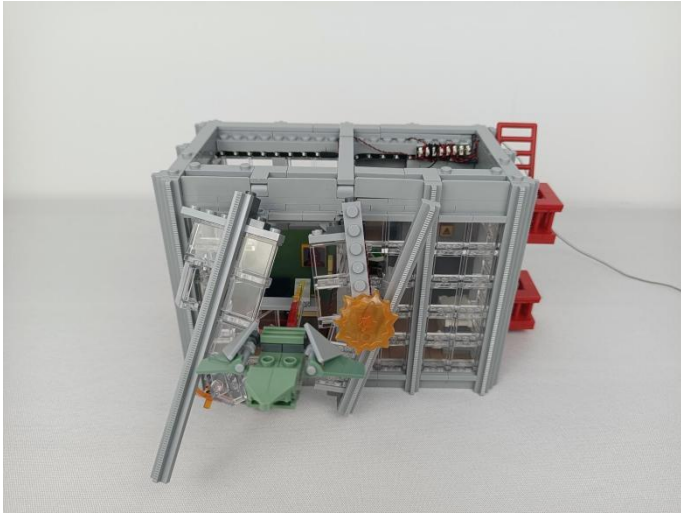



203

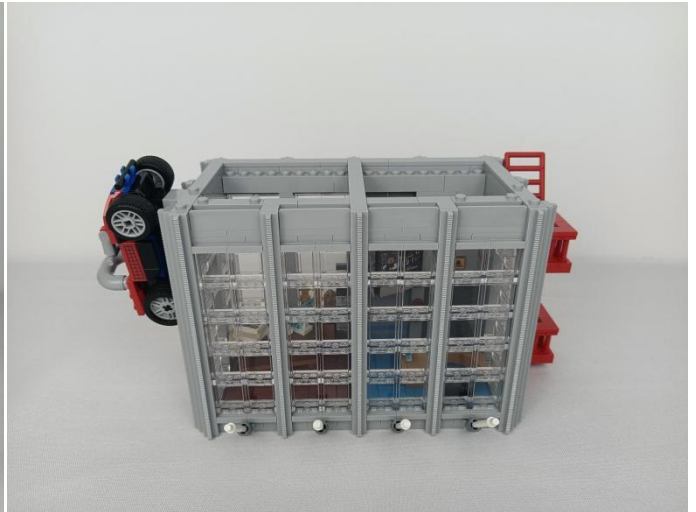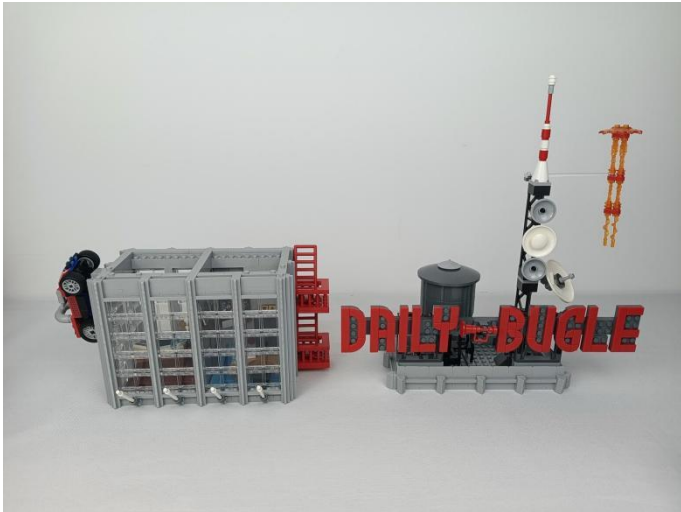


204

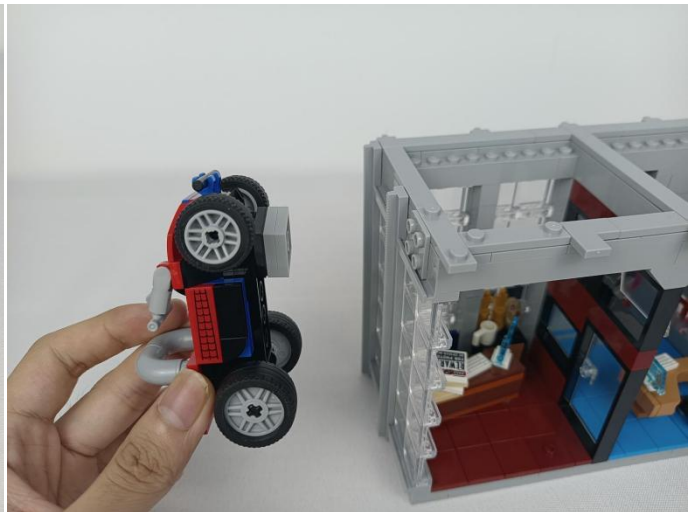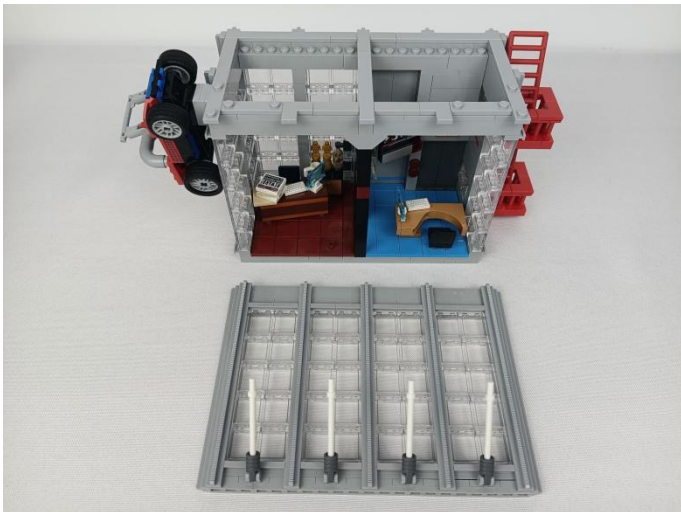



205

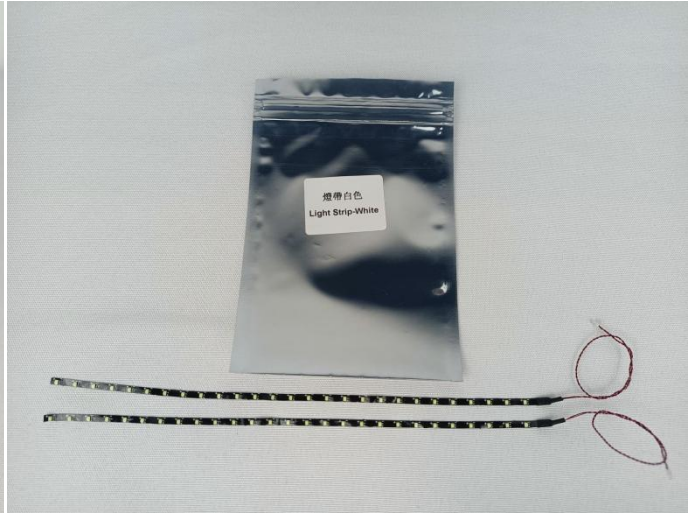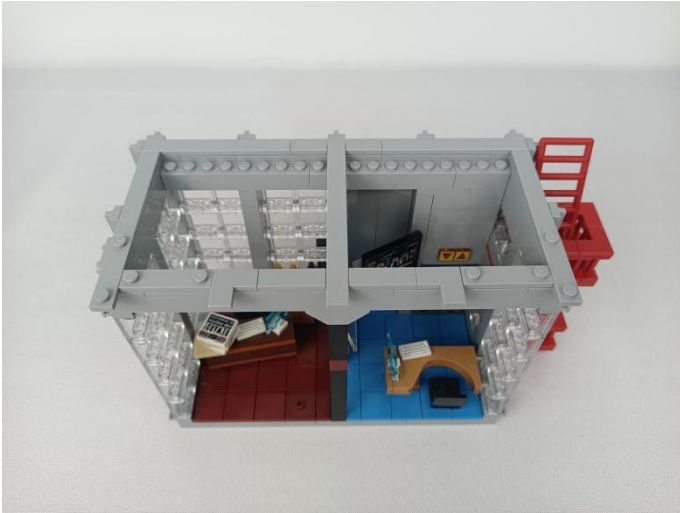


206

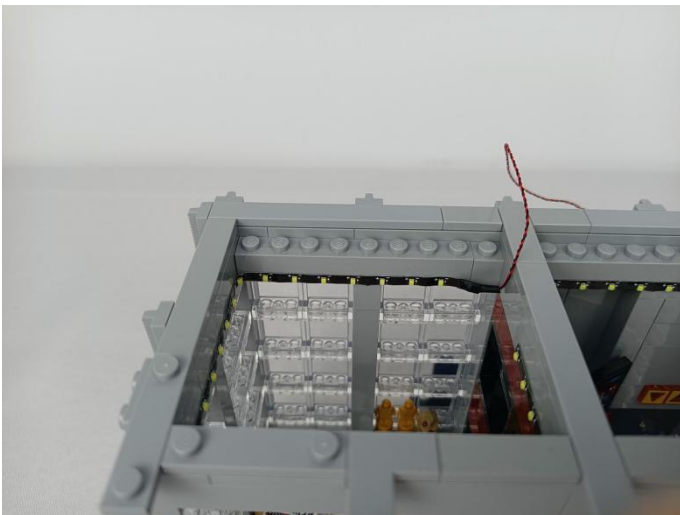


207

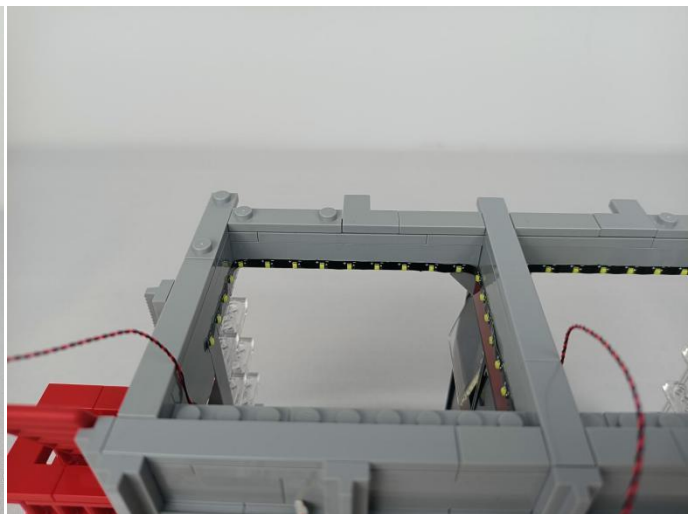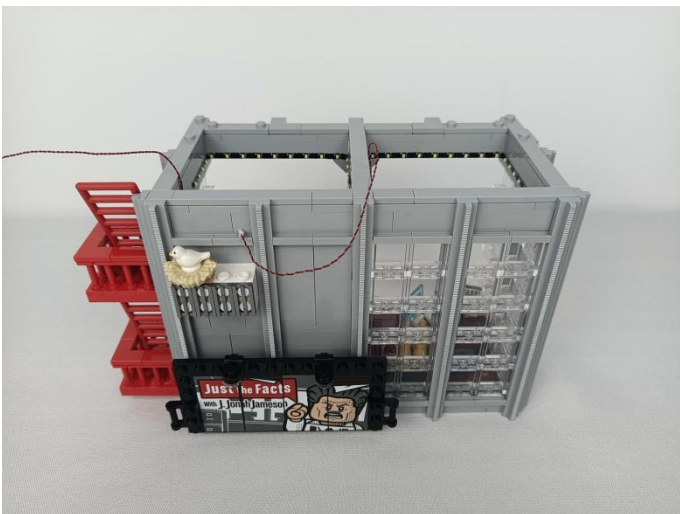

208

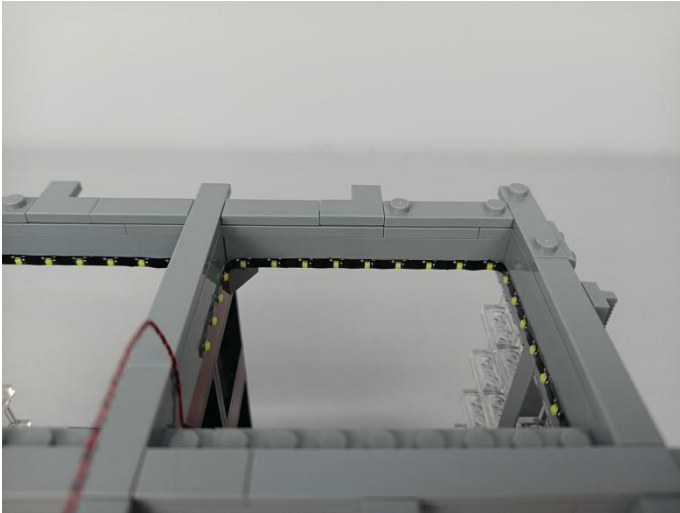


209

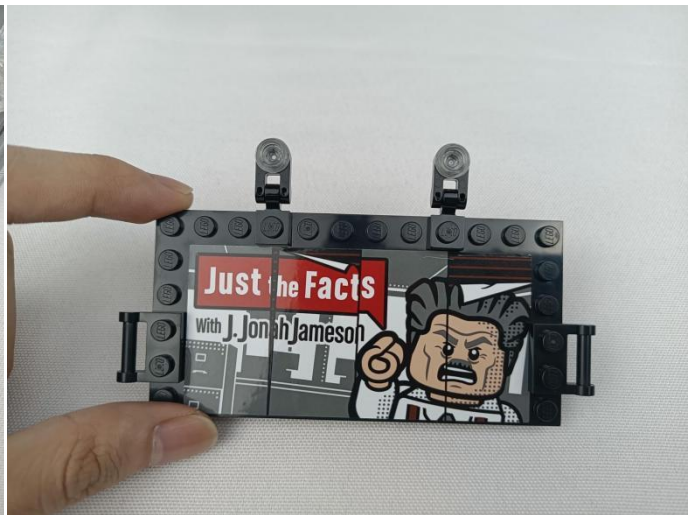



210





211

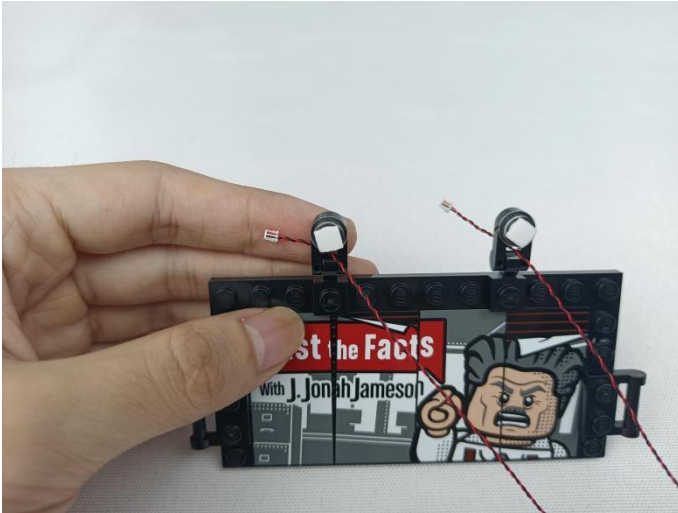



212

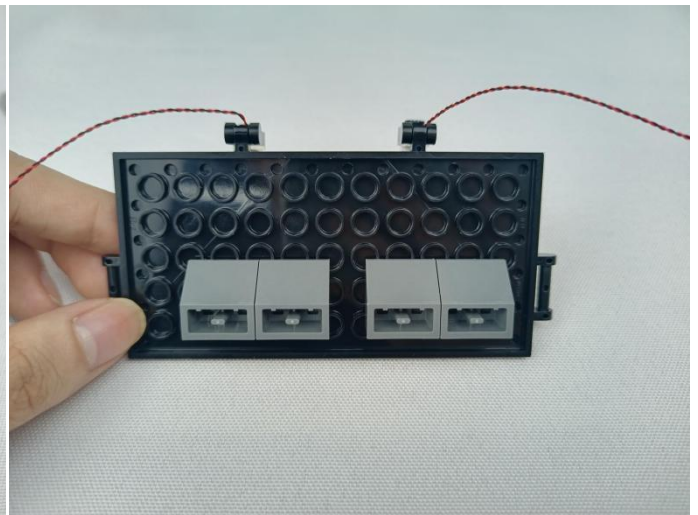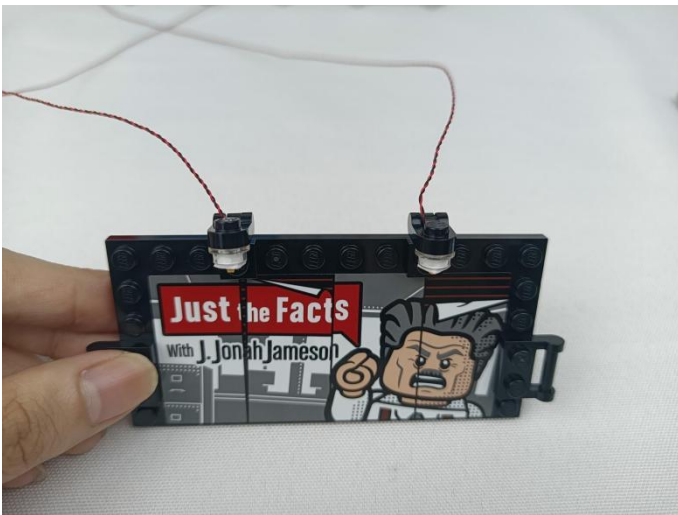



213

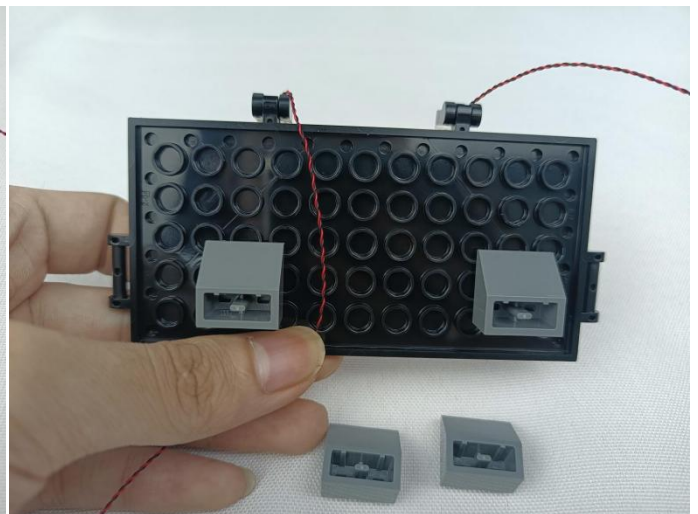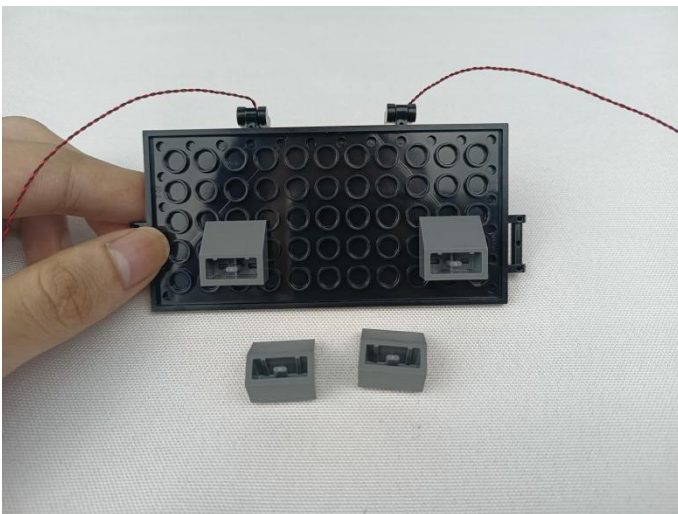


214

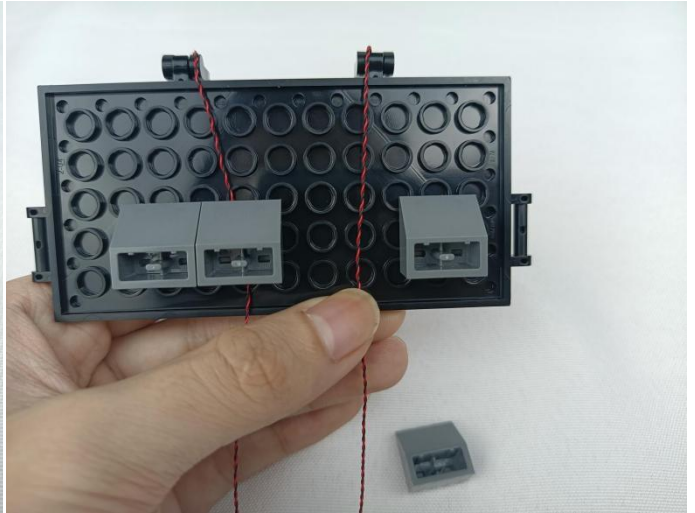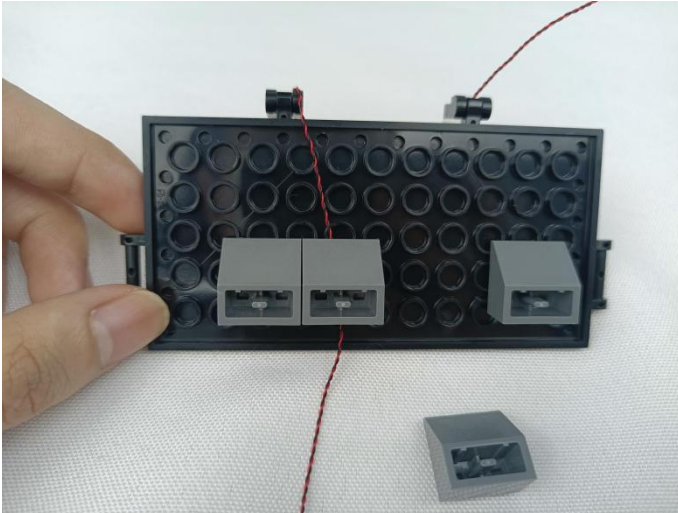



215

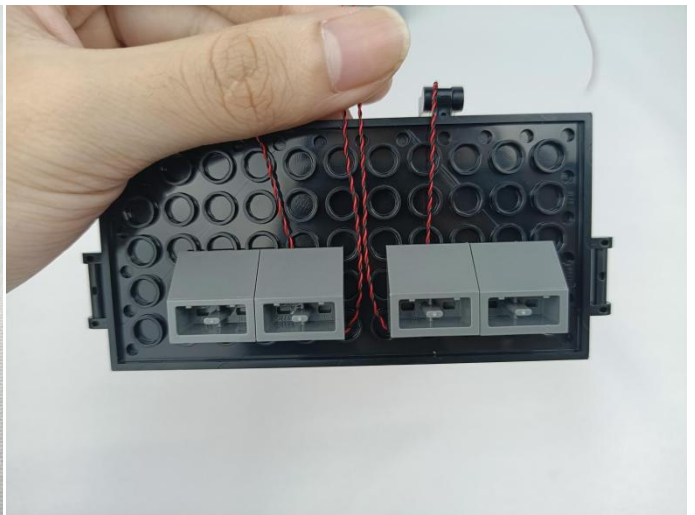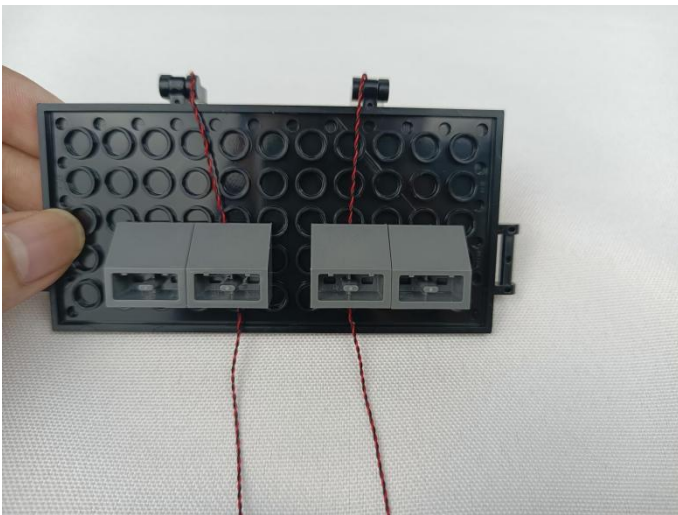



216

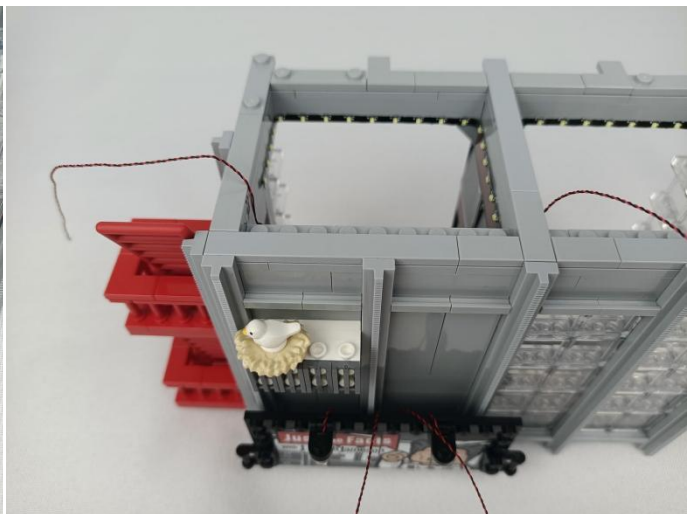



217

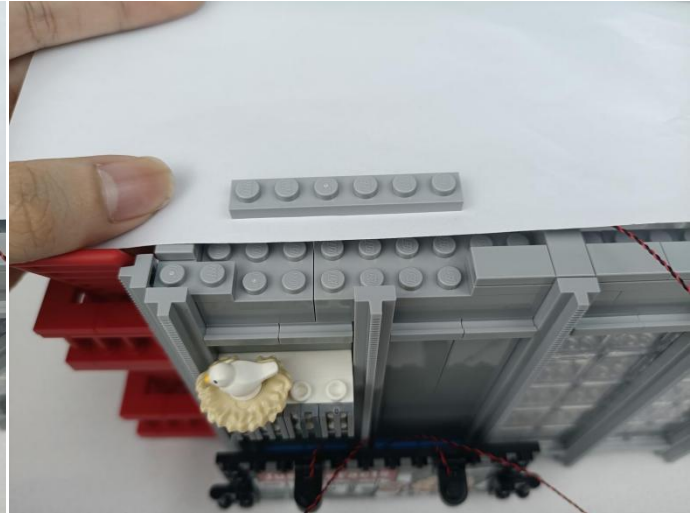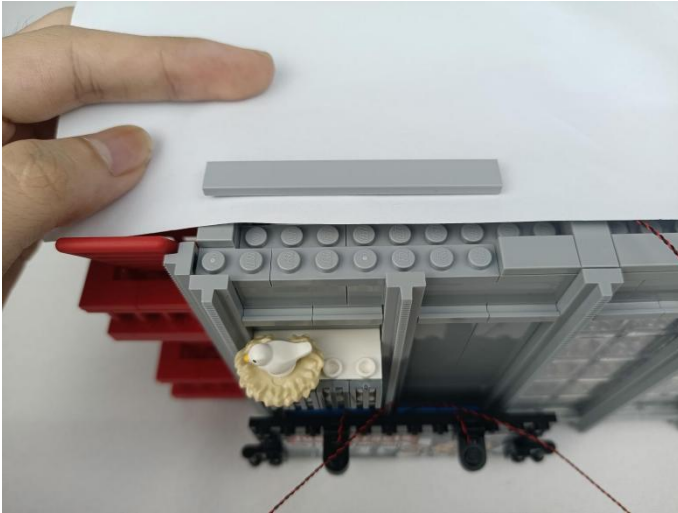



218

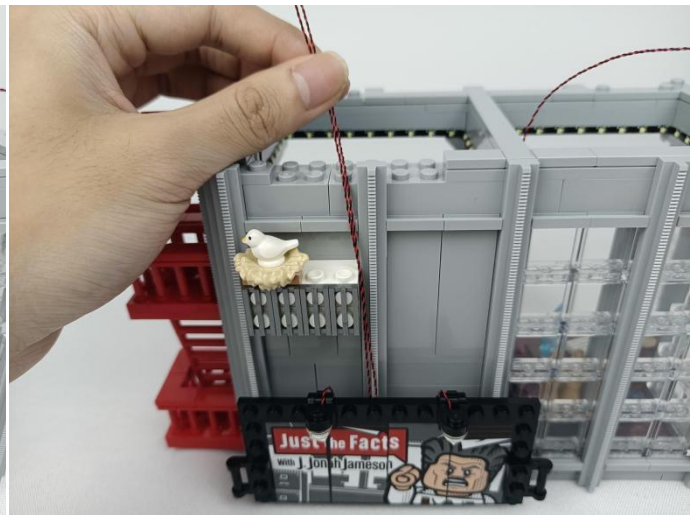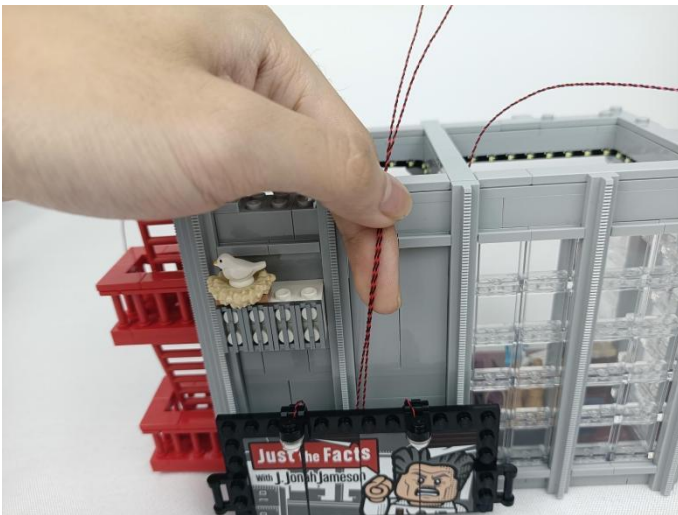



219

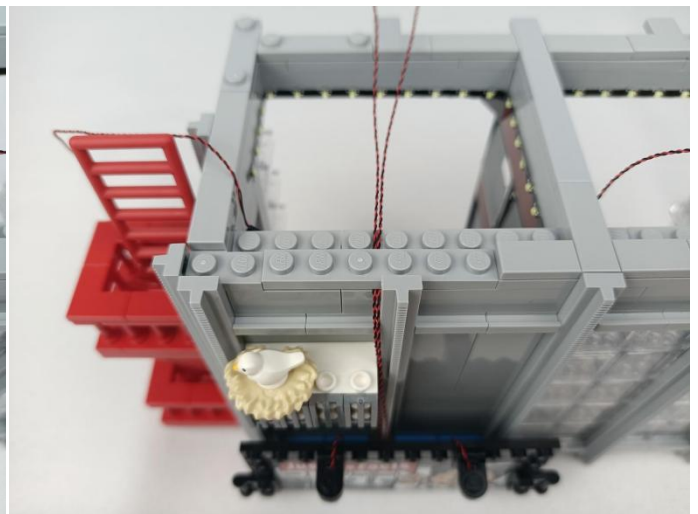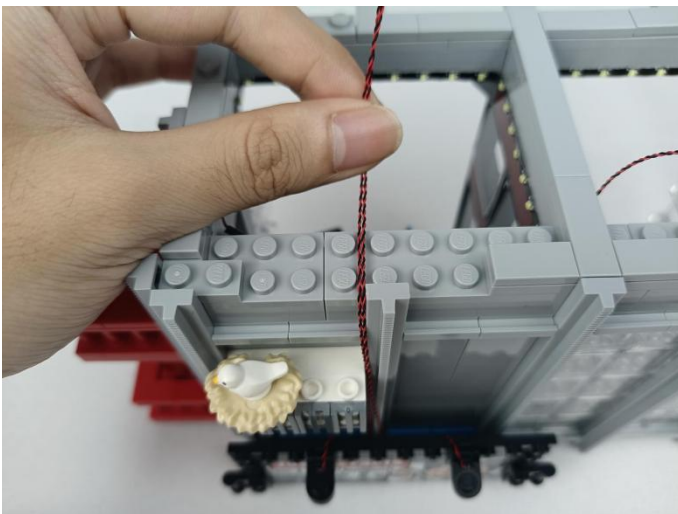



220

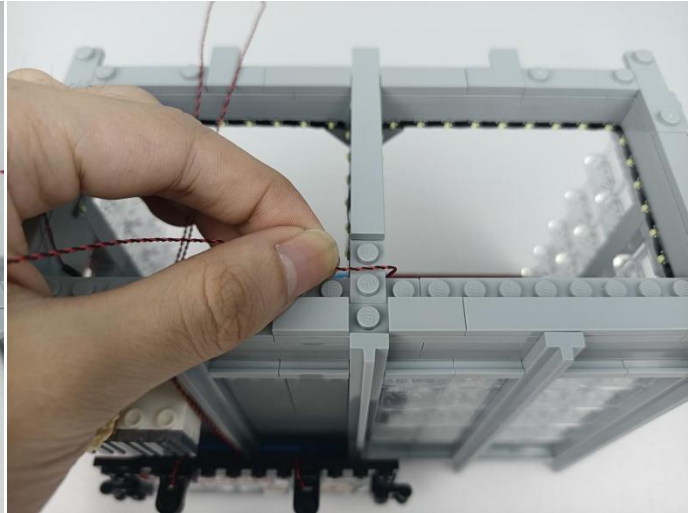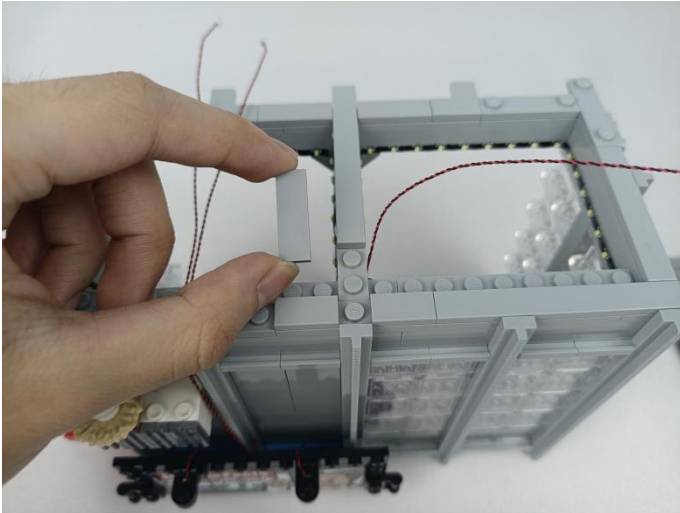



221

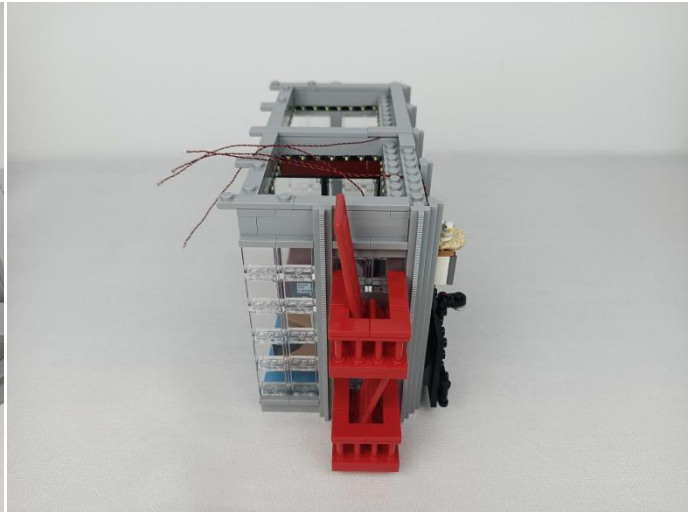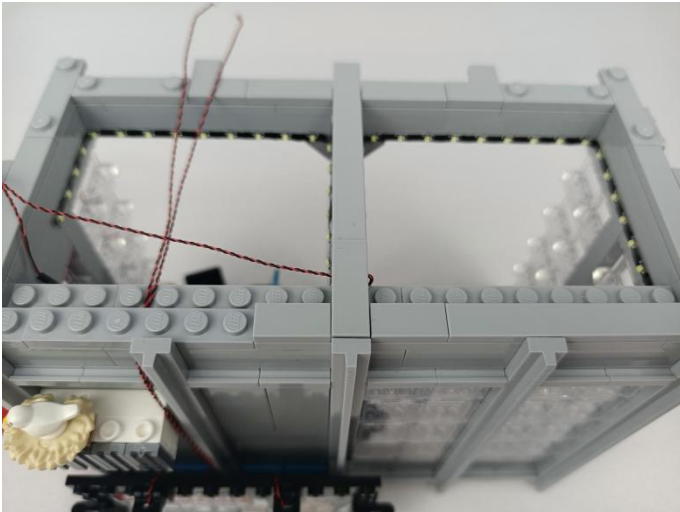


222

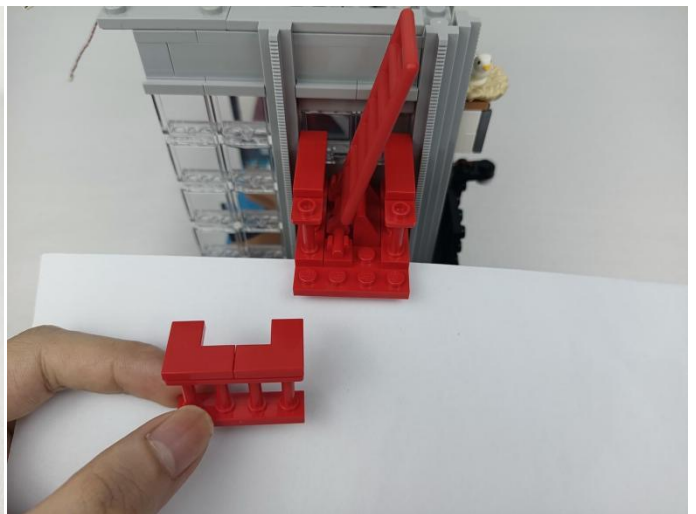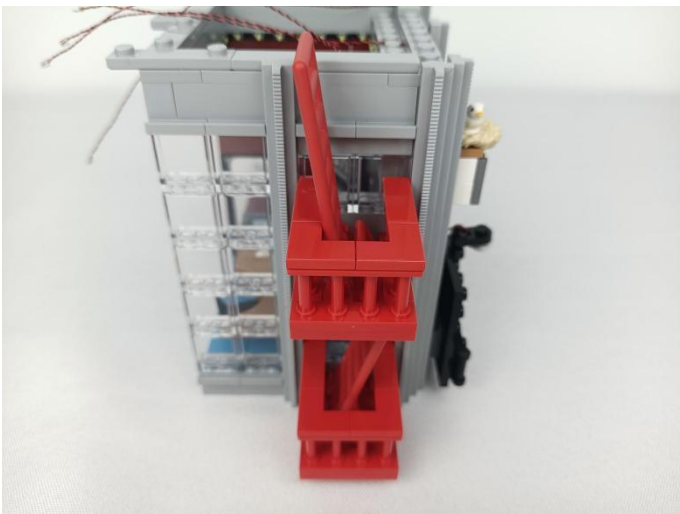


223

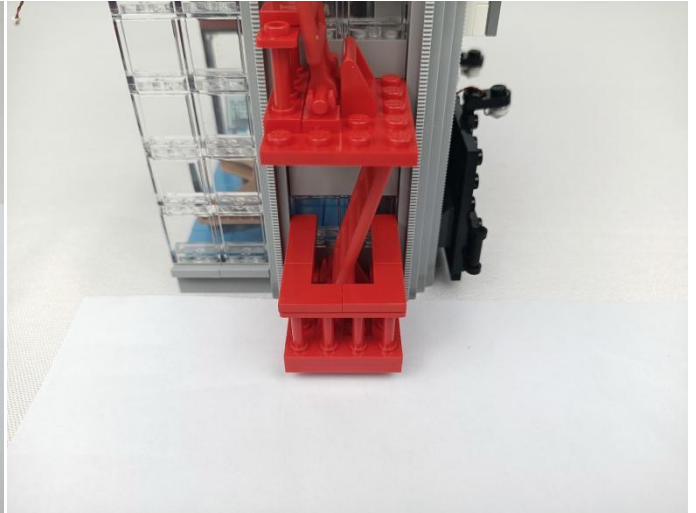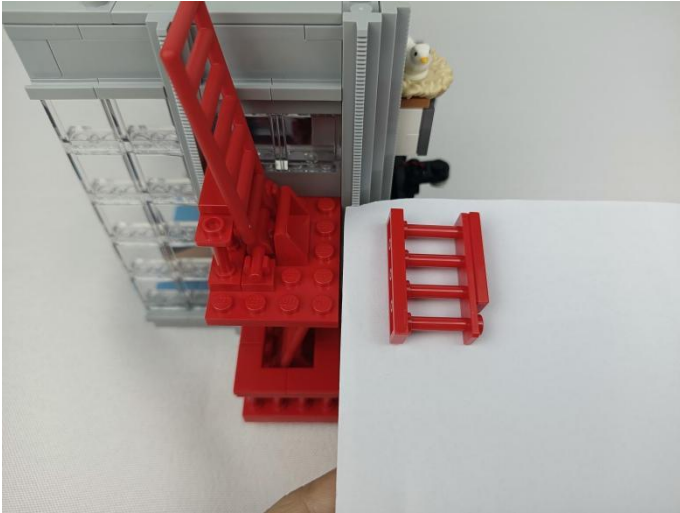


224

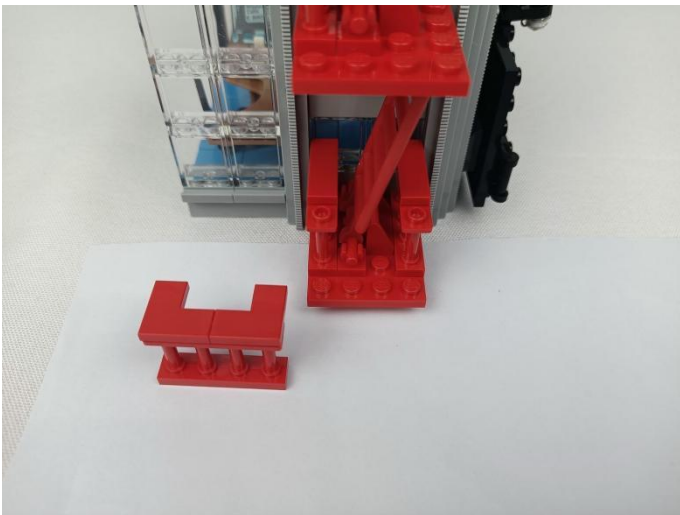



225

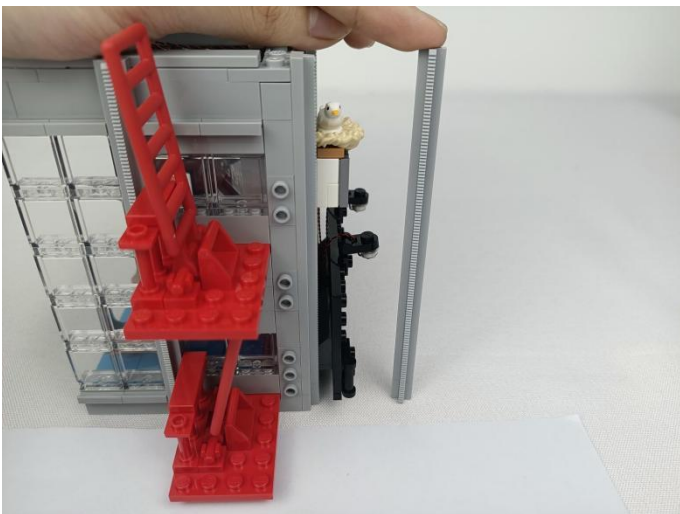


226

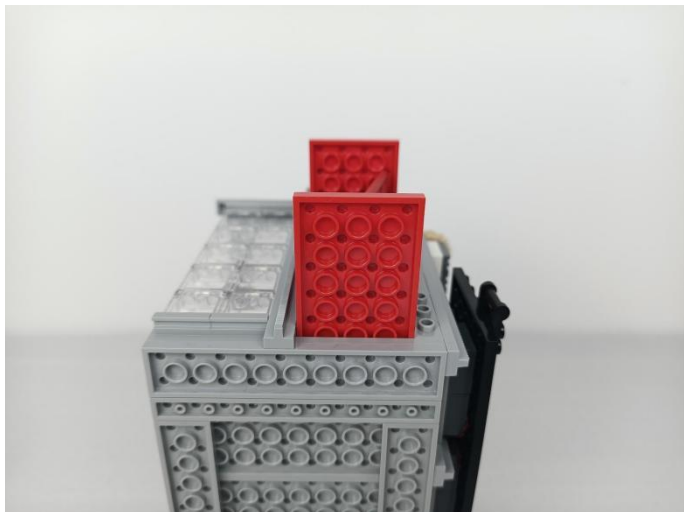



227

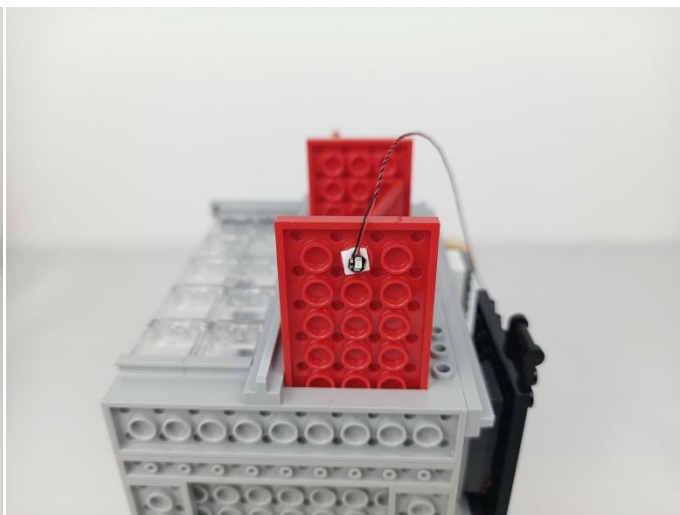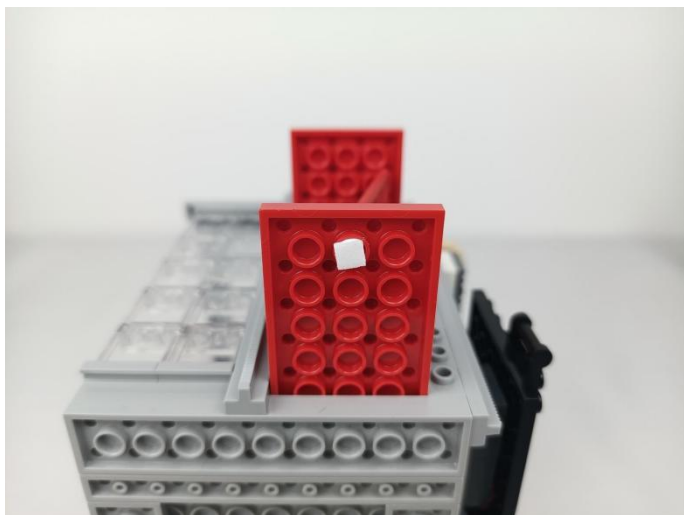



228

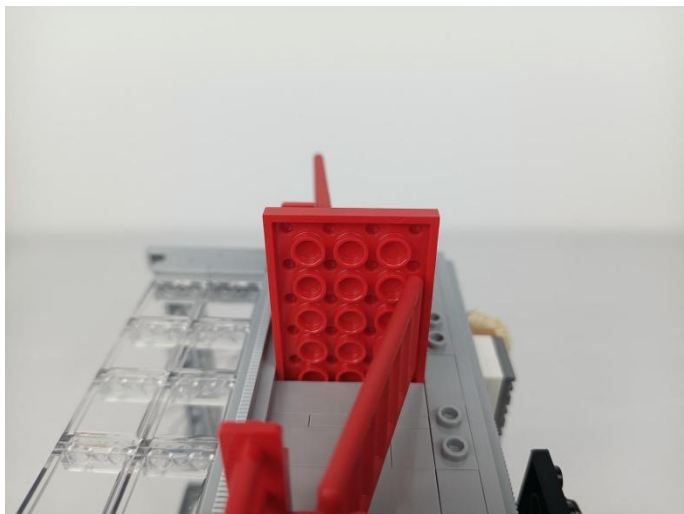



229

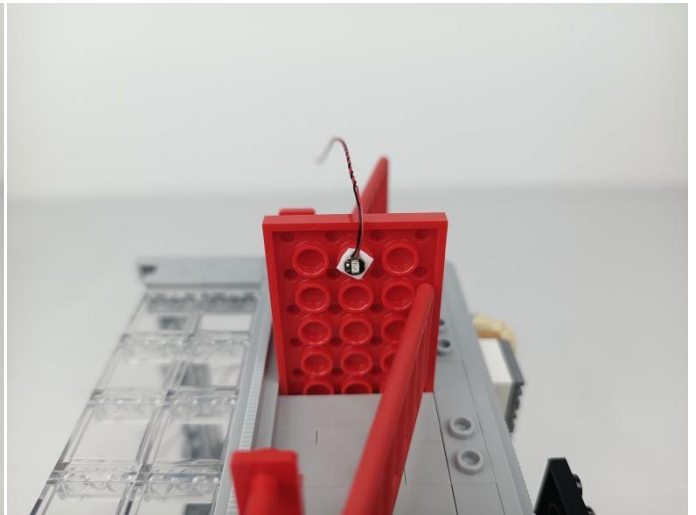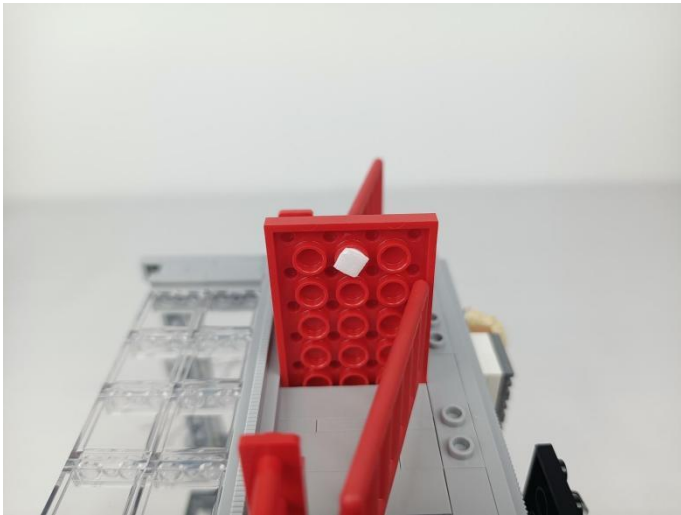



230

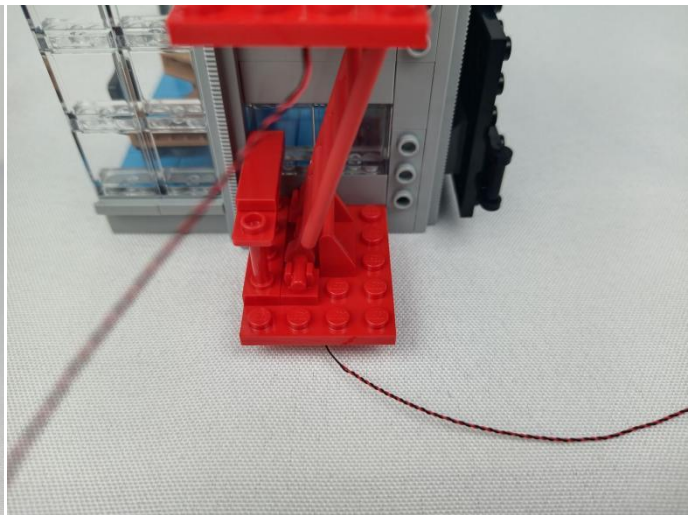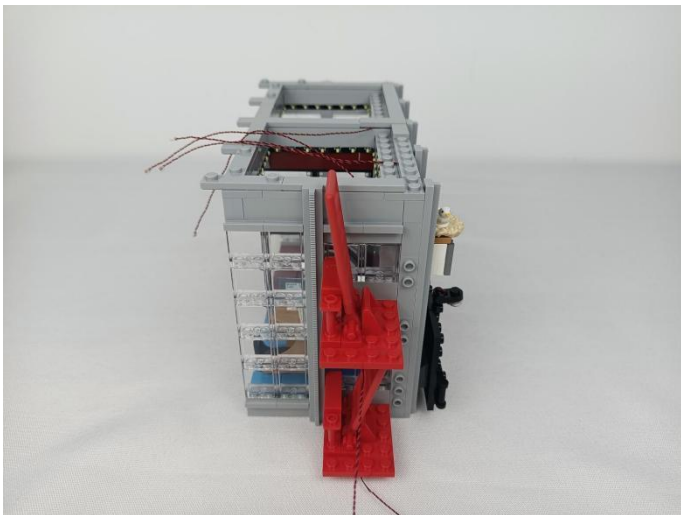



231

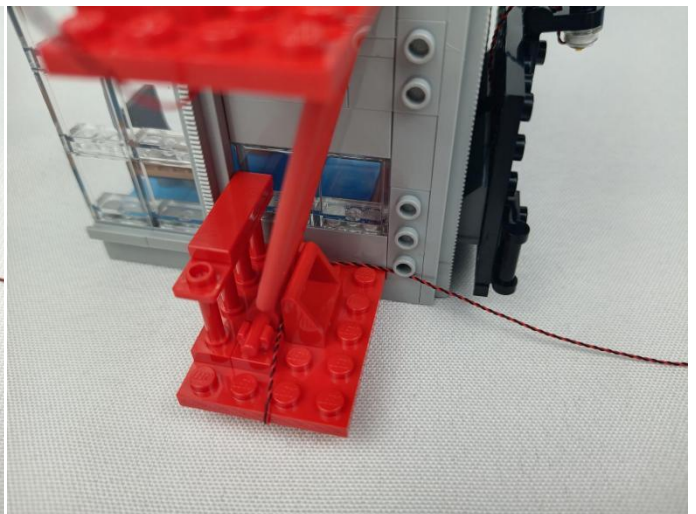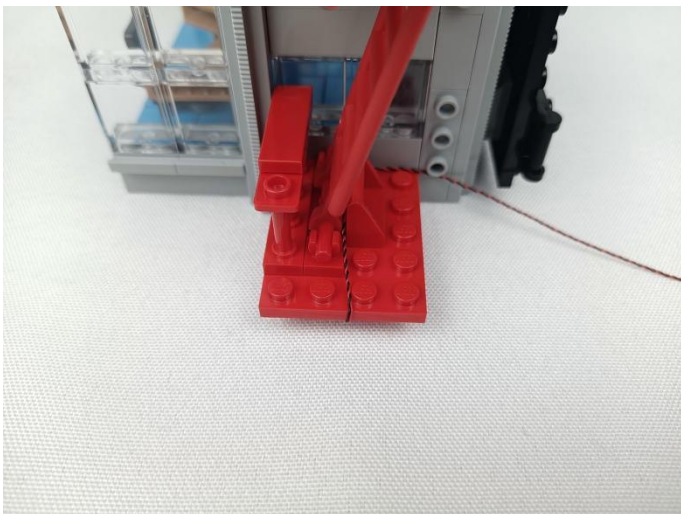



232

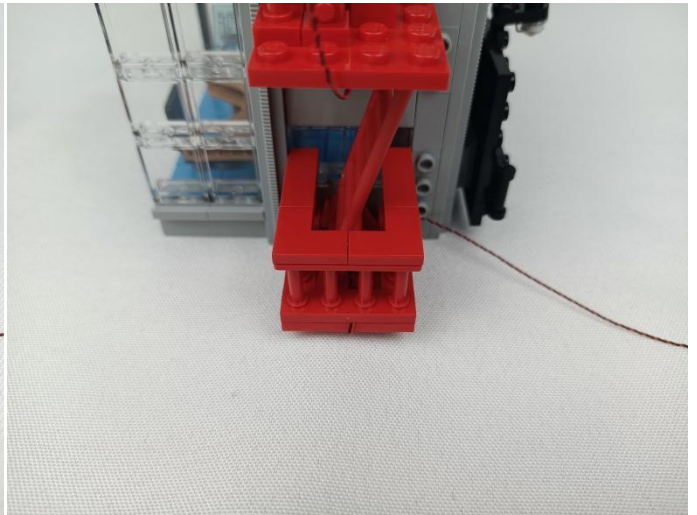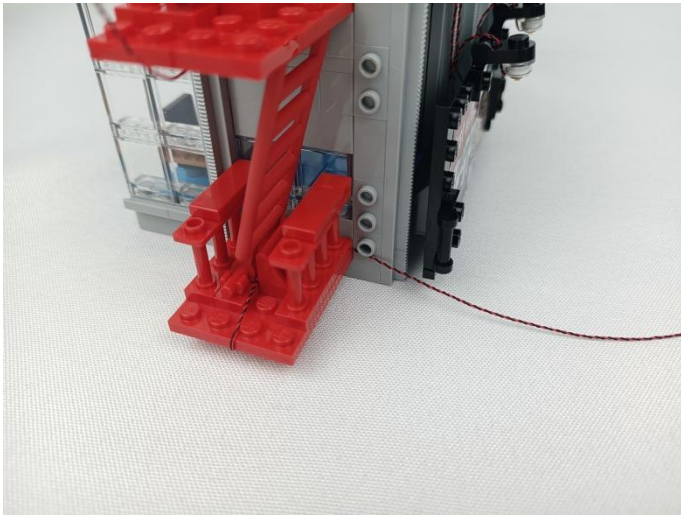



233

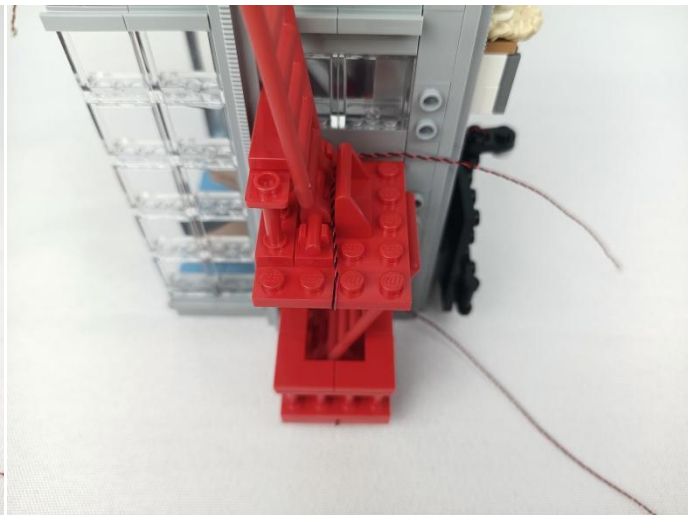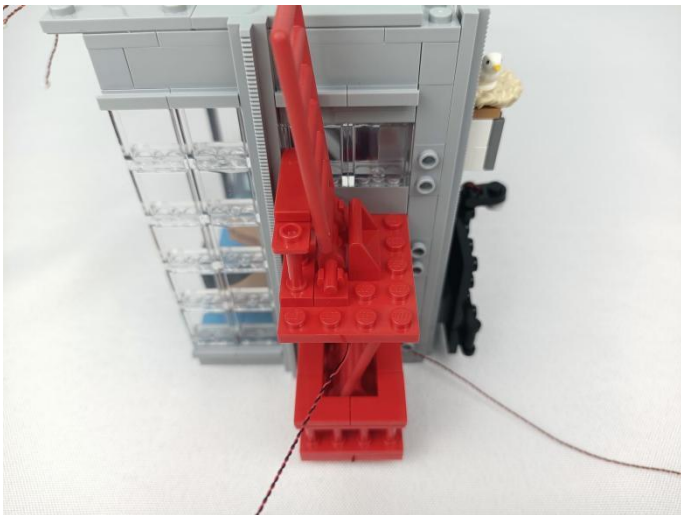



234

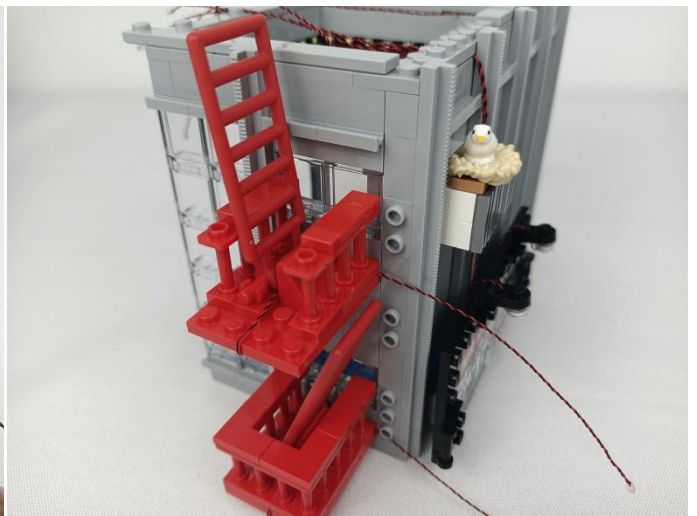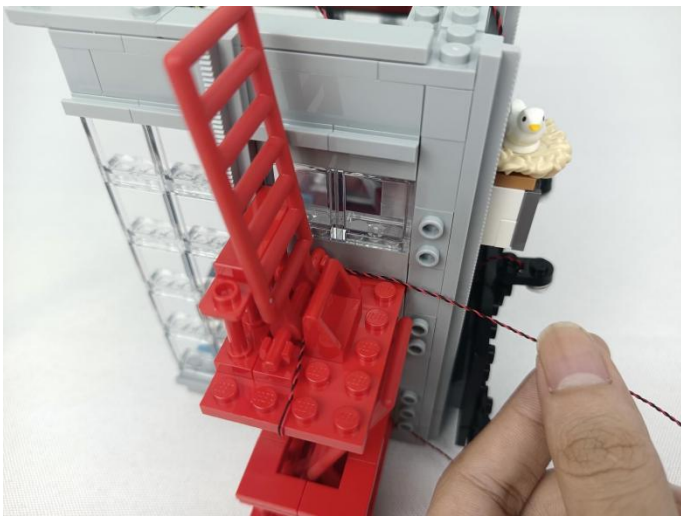



235

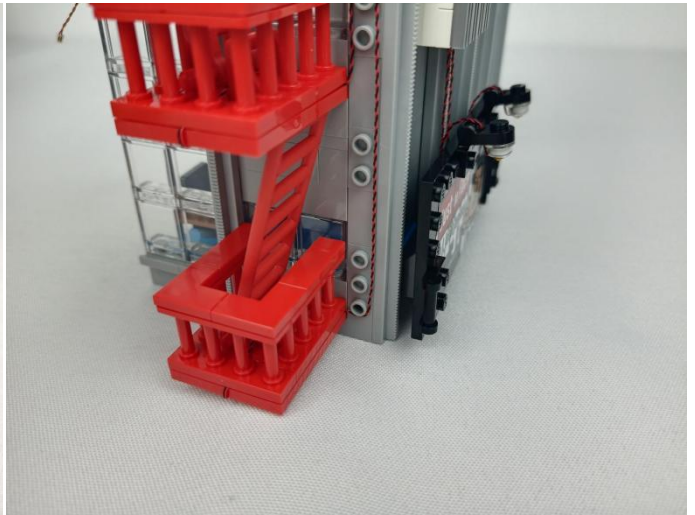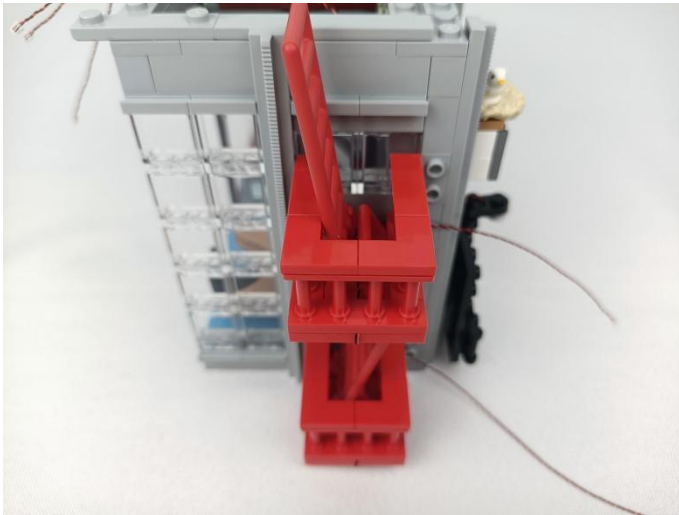


236

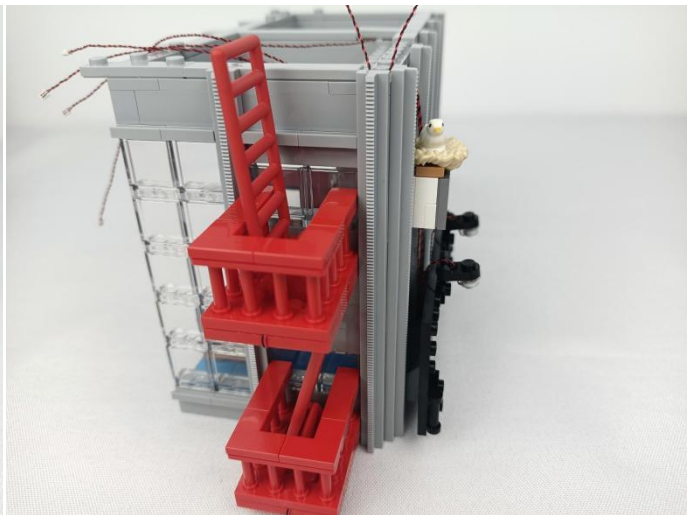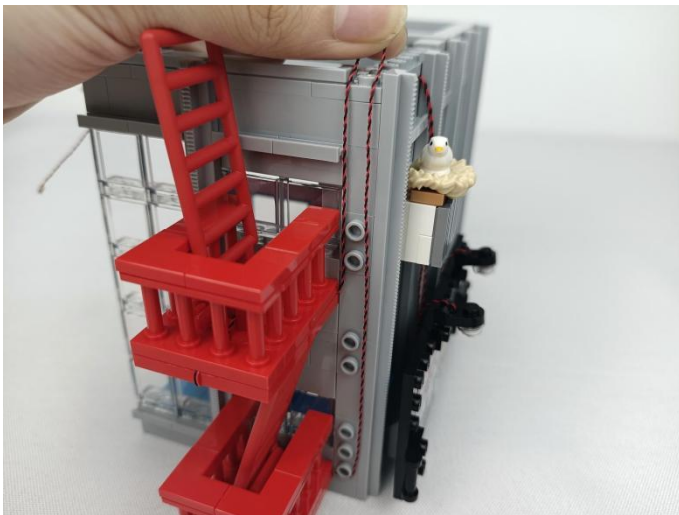



237

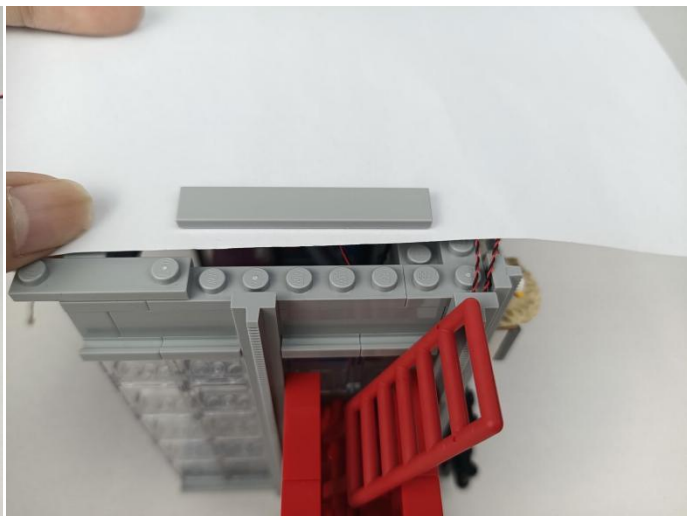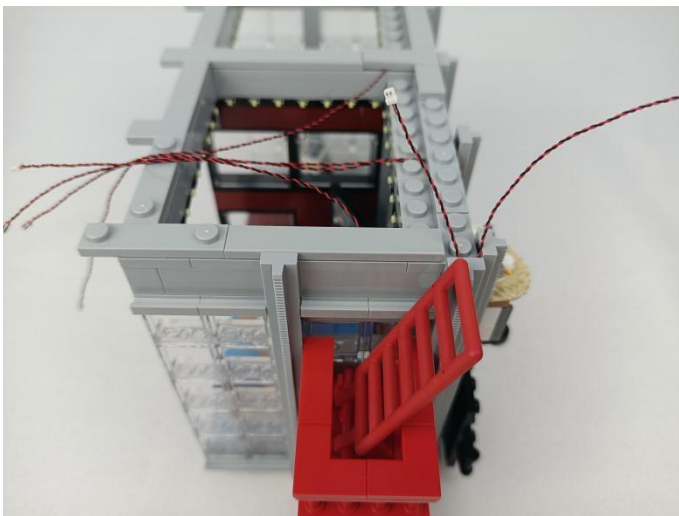


238

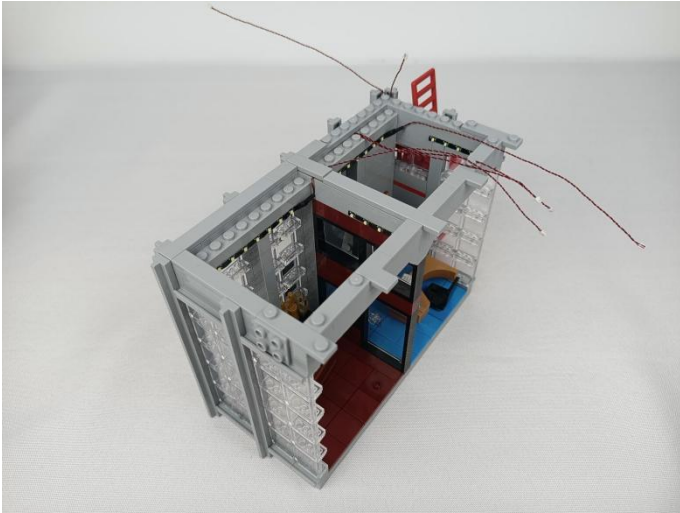


239

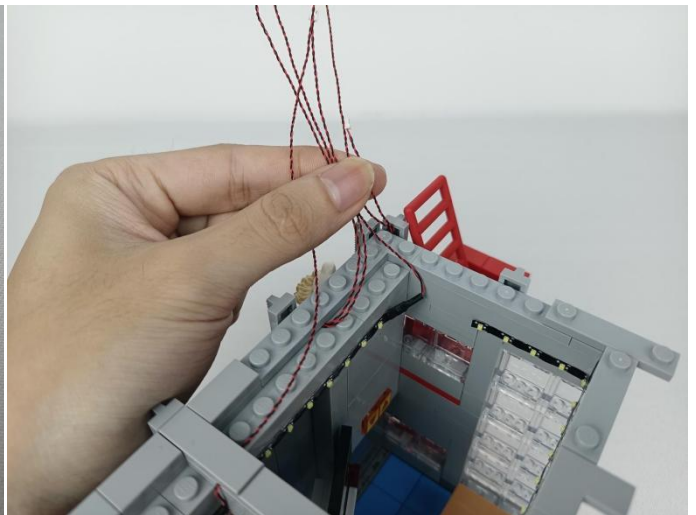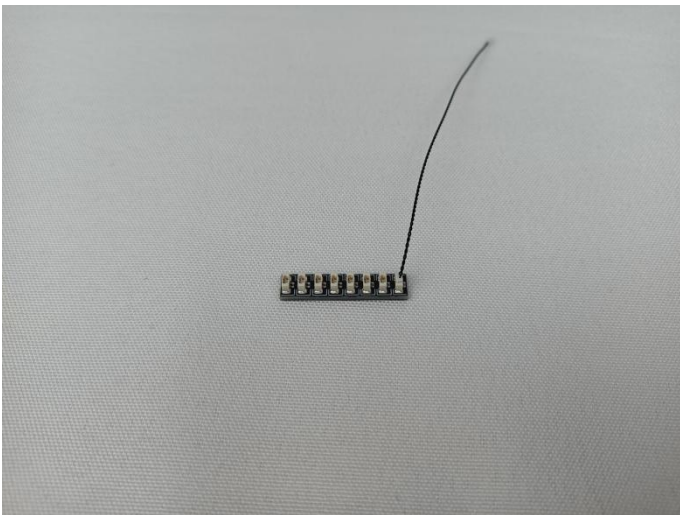



240

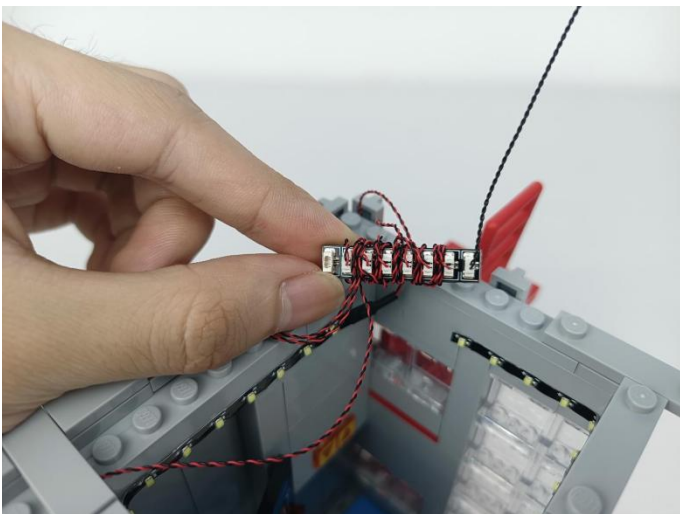


241

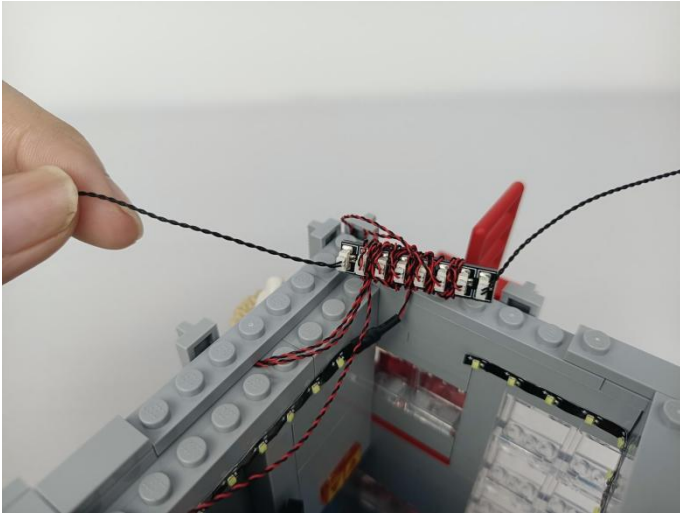



242

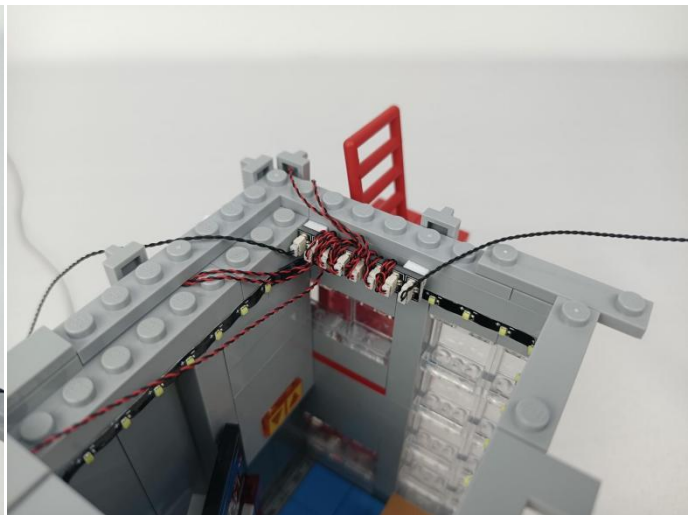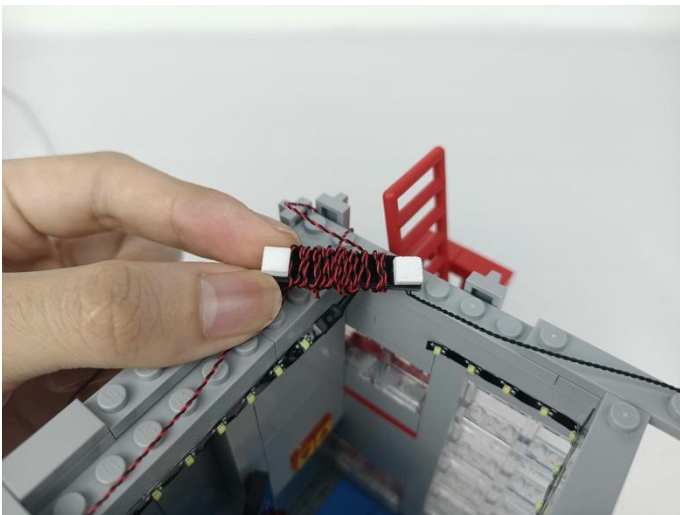


243

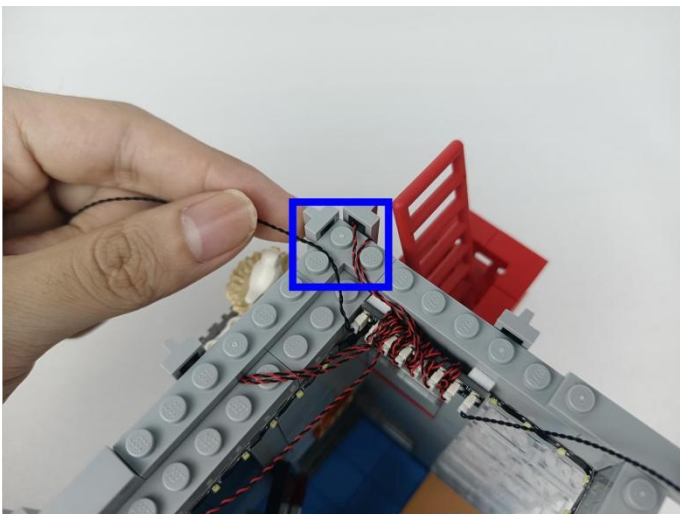


244

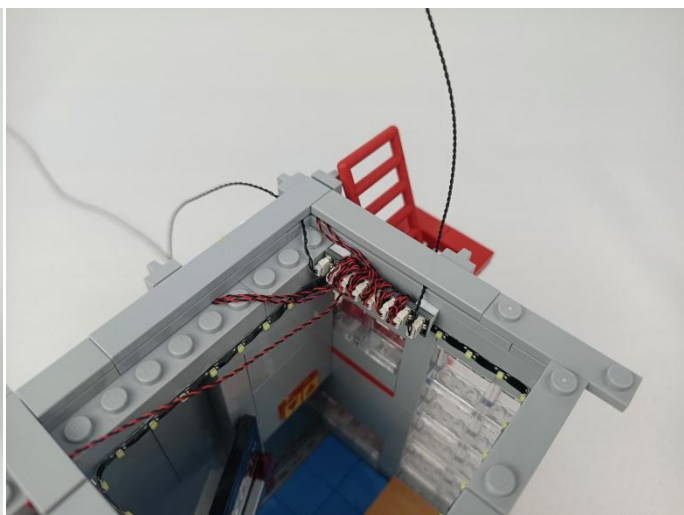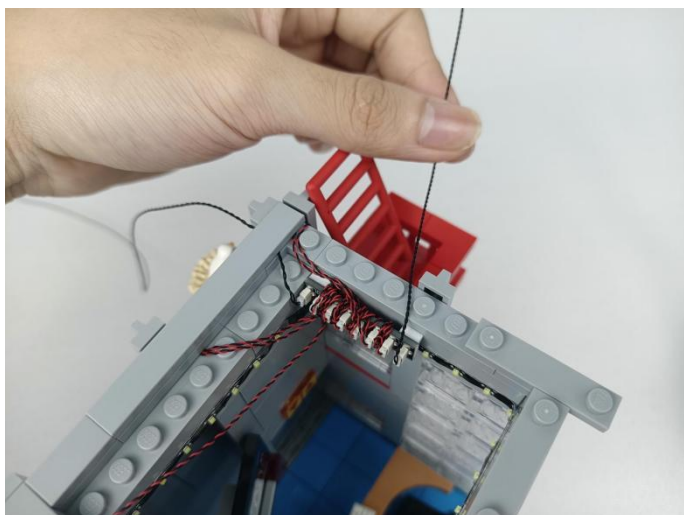



245

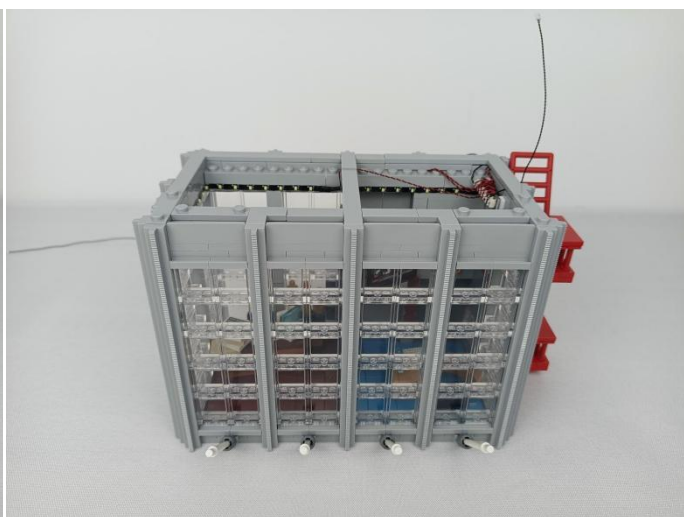


246

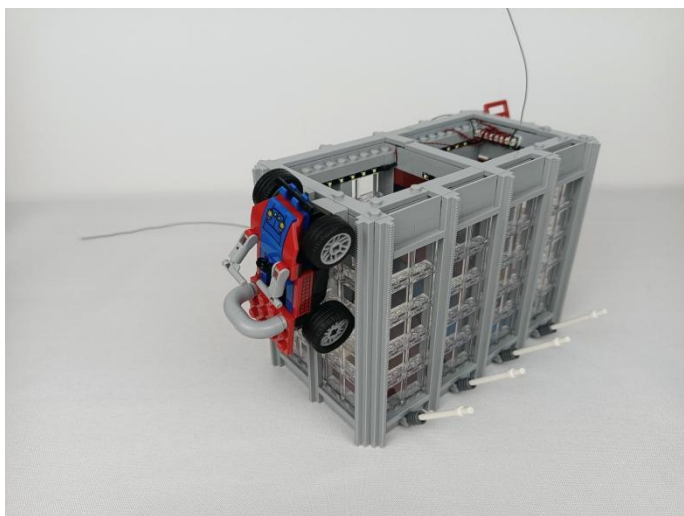


247

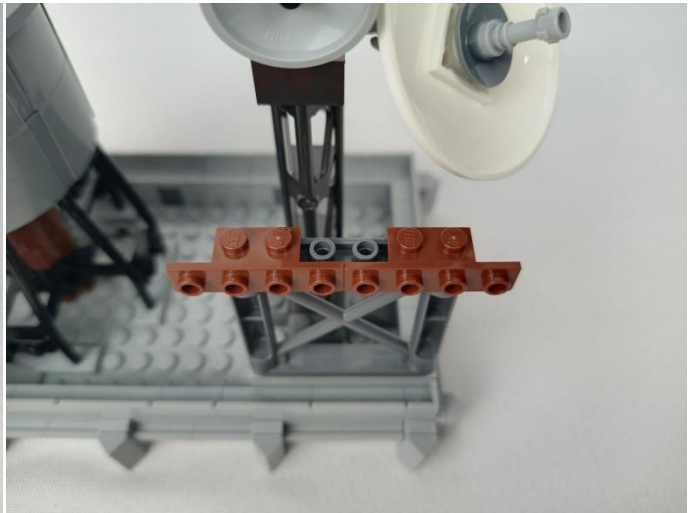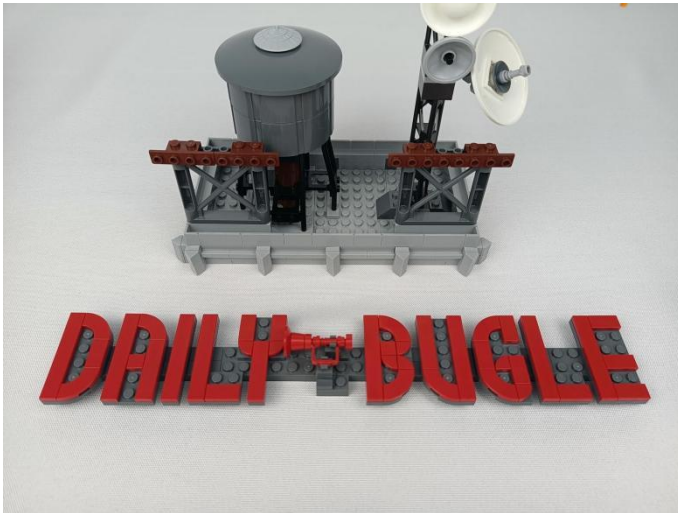



248

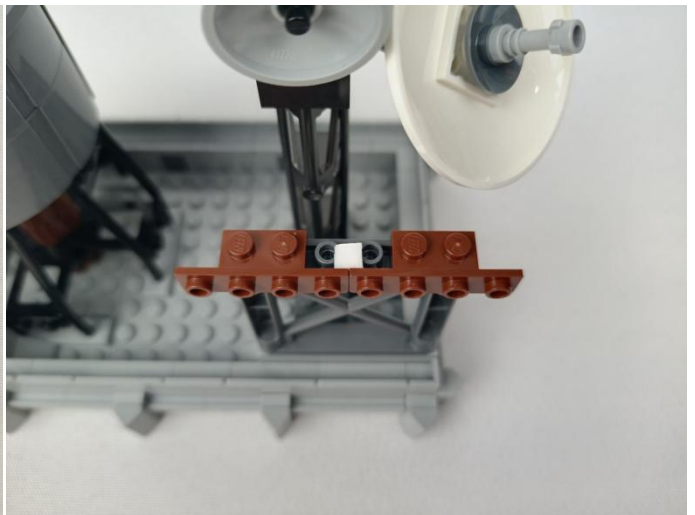


249

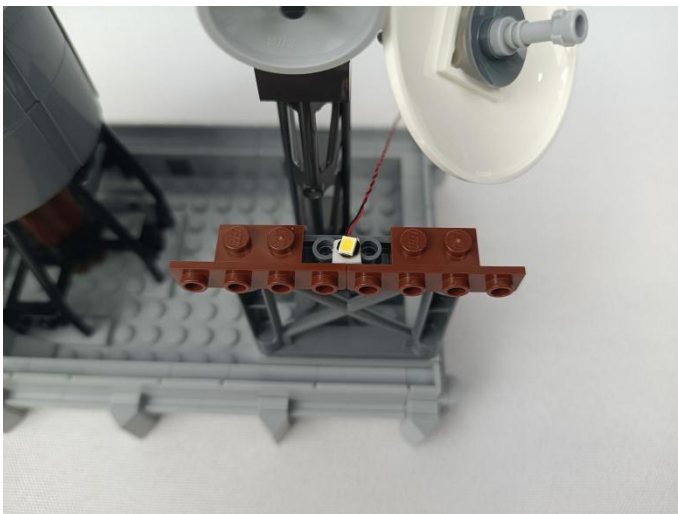


250

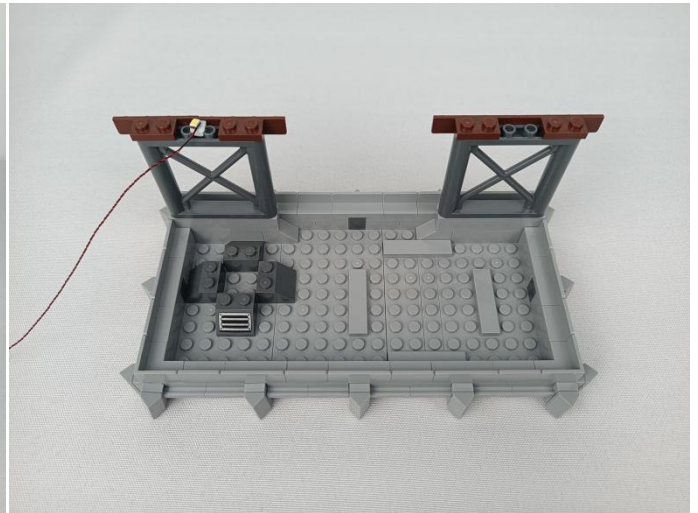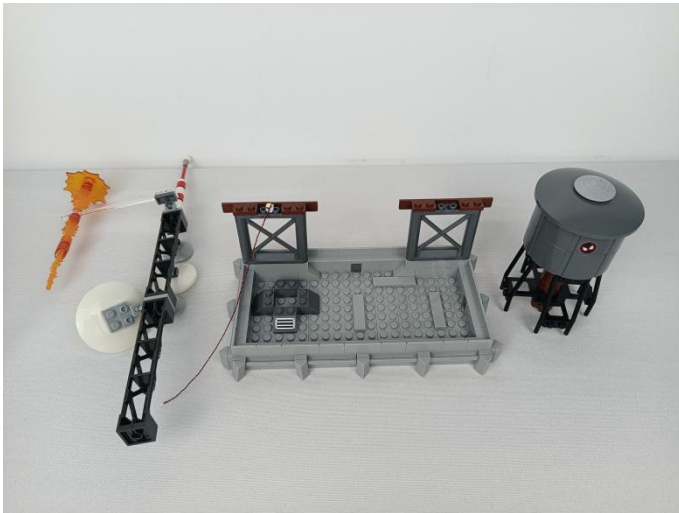



251

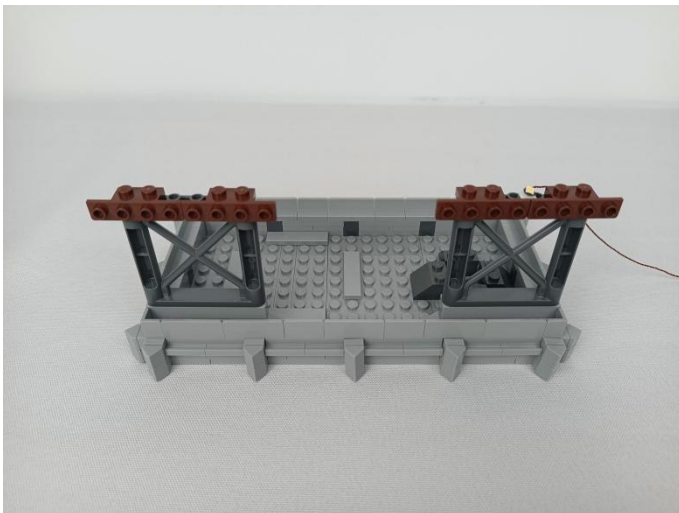


252

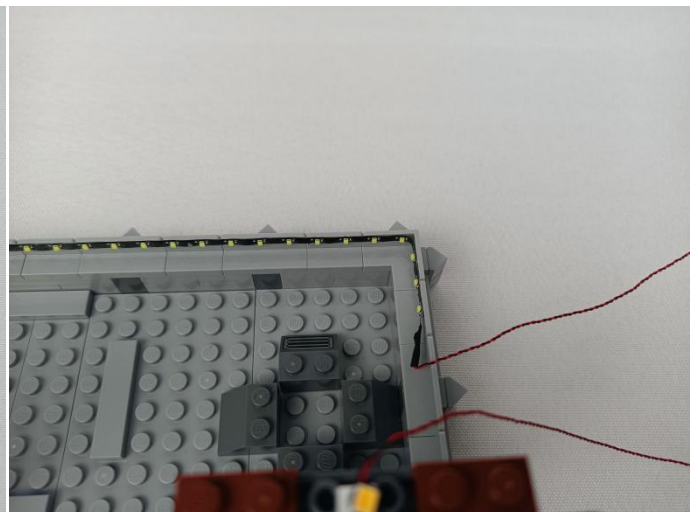

253

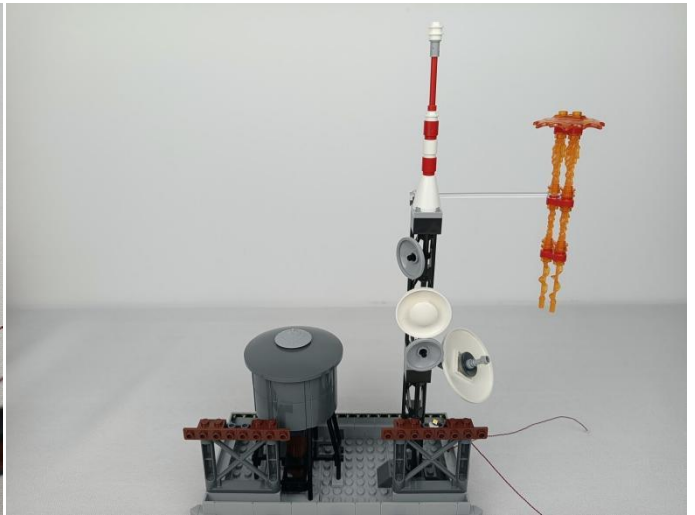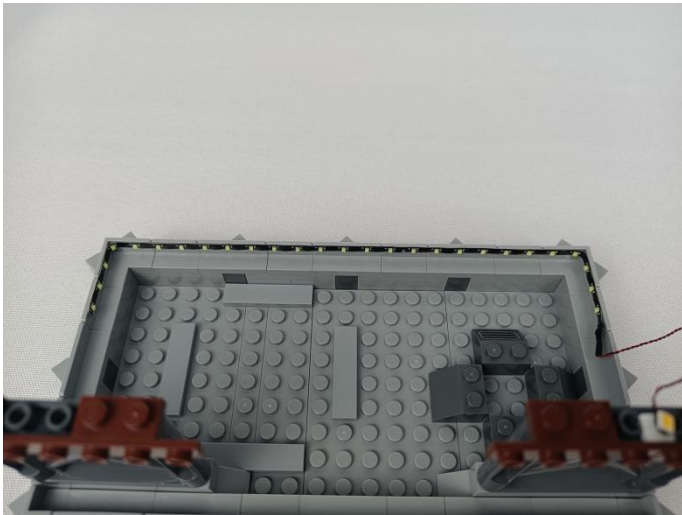


254

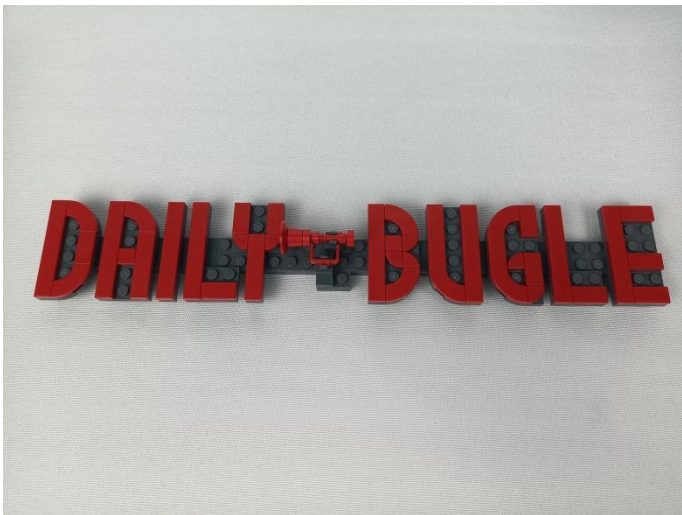


255





256

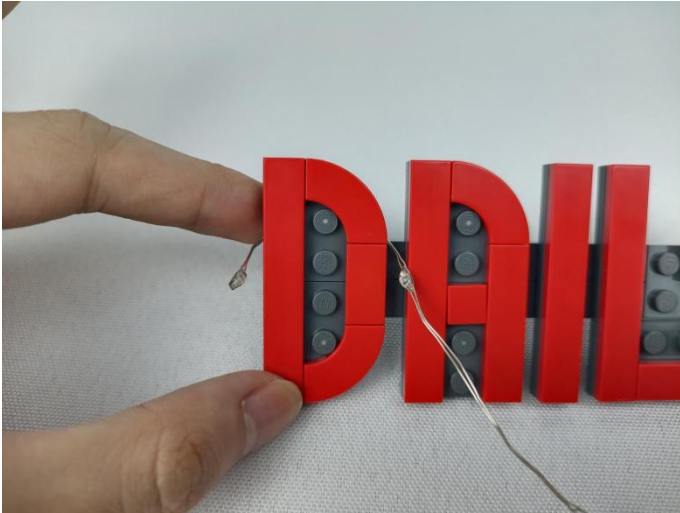



257

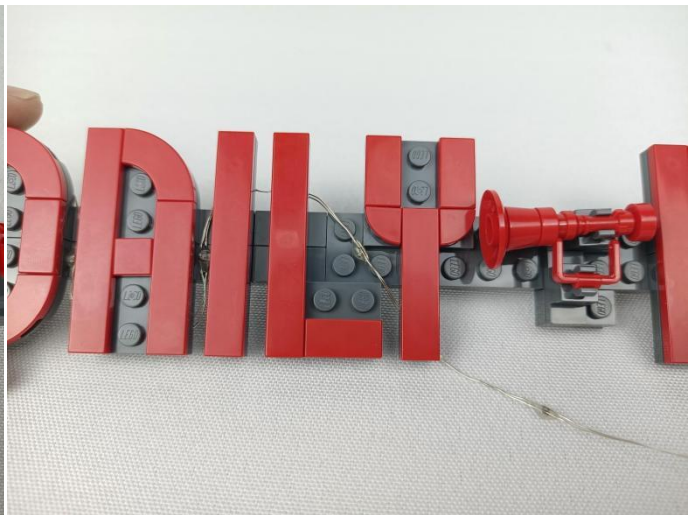


258

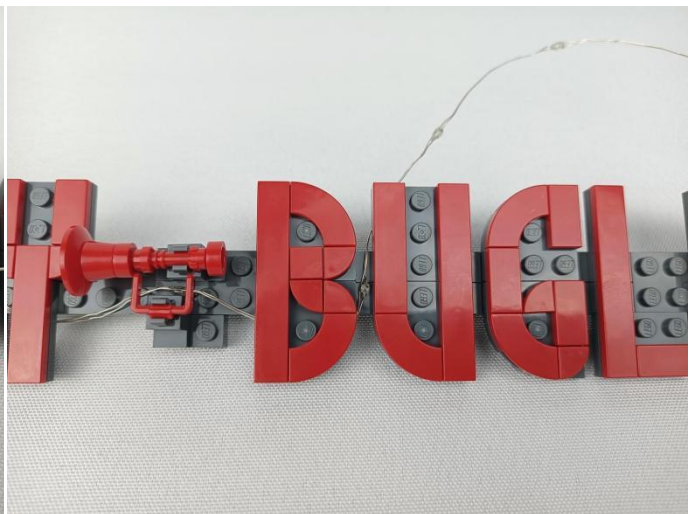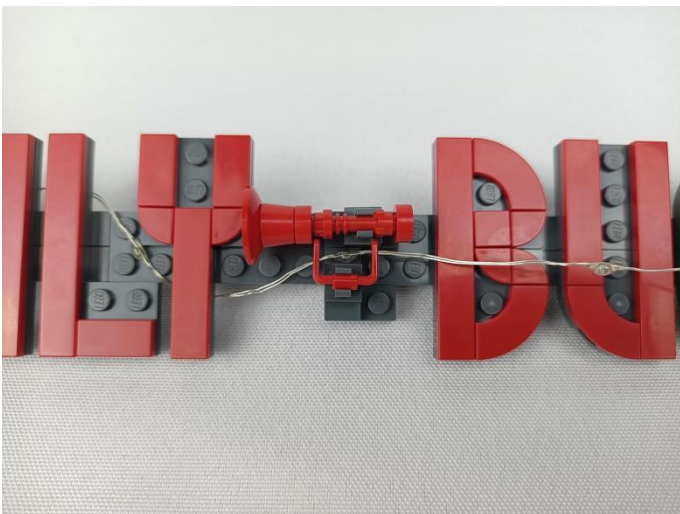



259

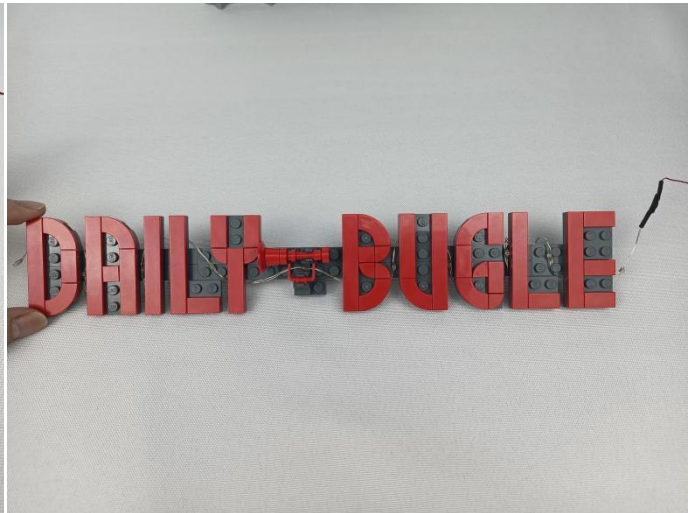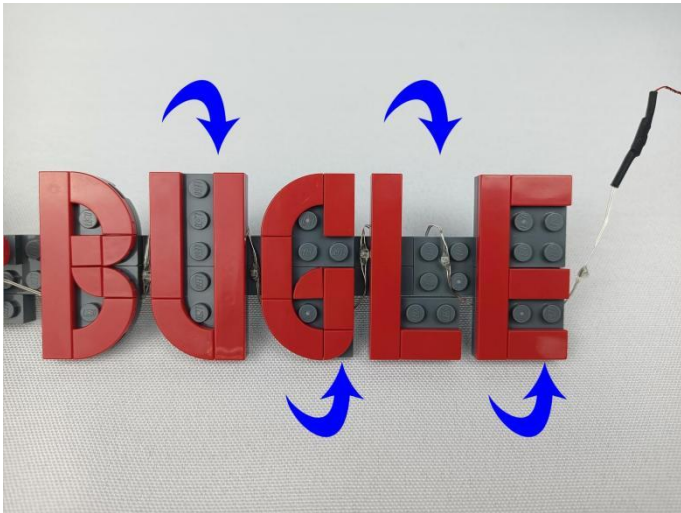



260

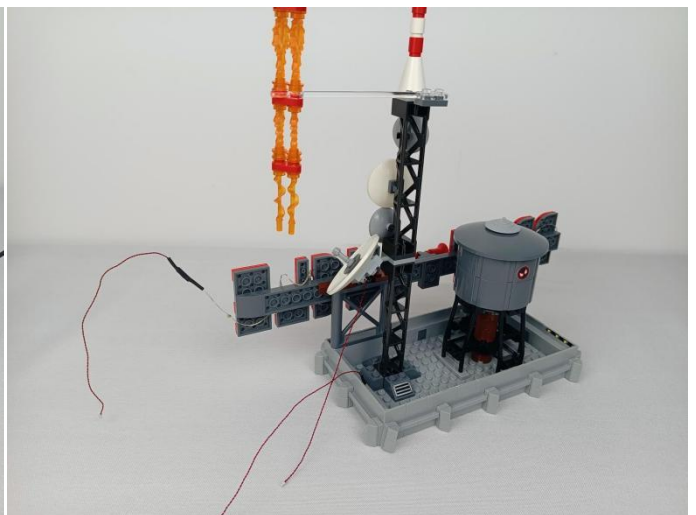

261

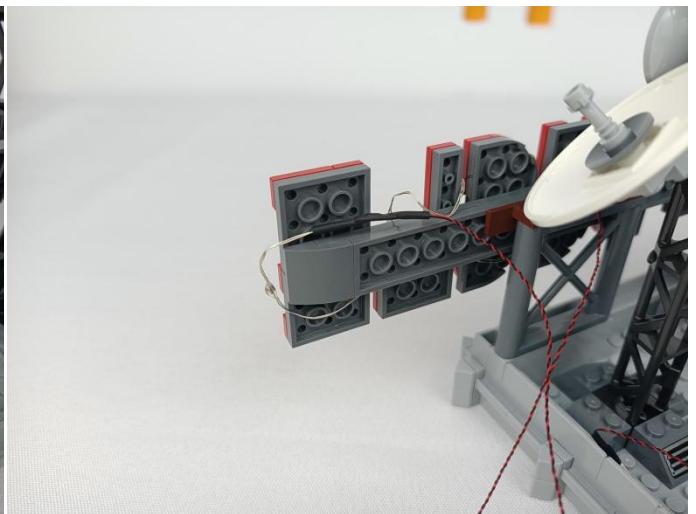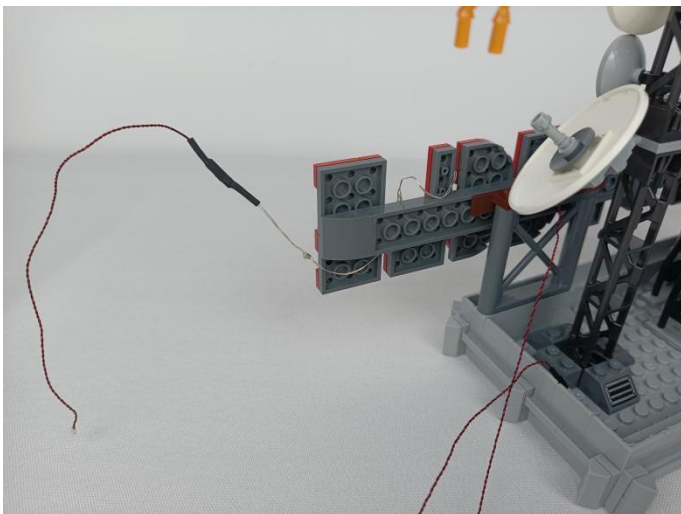

262

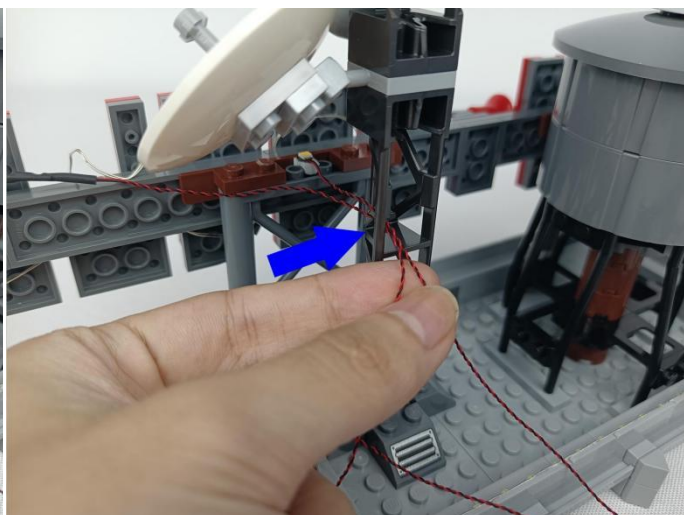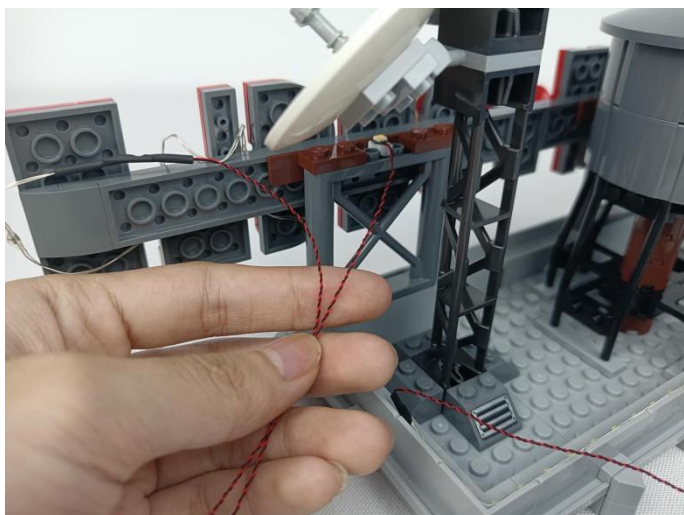

263



264



Tips

The plate without slit:

The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot wire is crushed, the wire to be disconnected and don't work.



The plate with slit:


The plate with slit:

The wire has enough space to avoid being squeezed and is endowed with longer service life and more stable effect.



The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormal heat during installation.



265

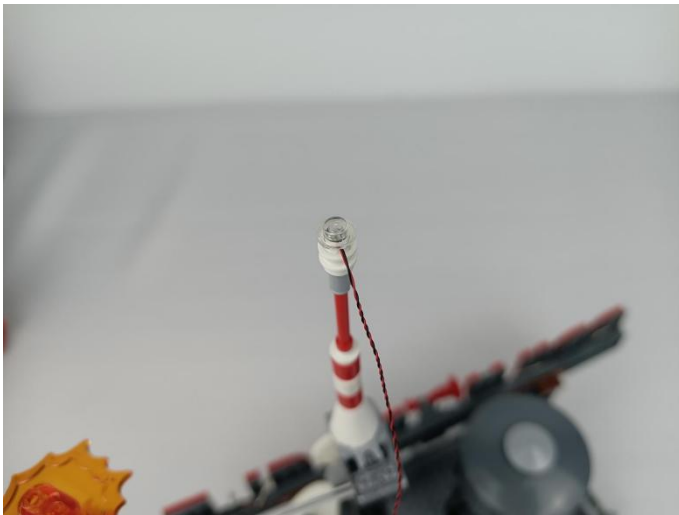


266





267

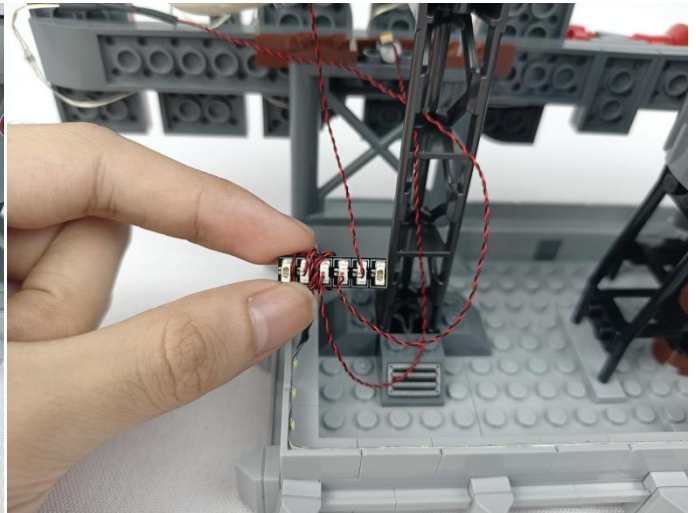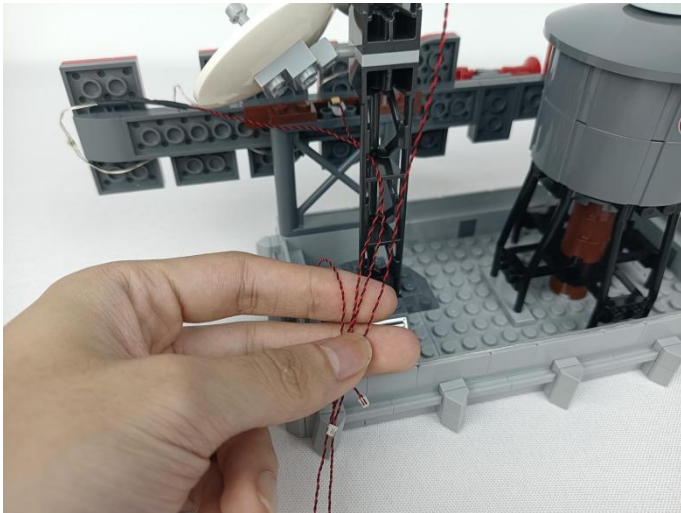



268

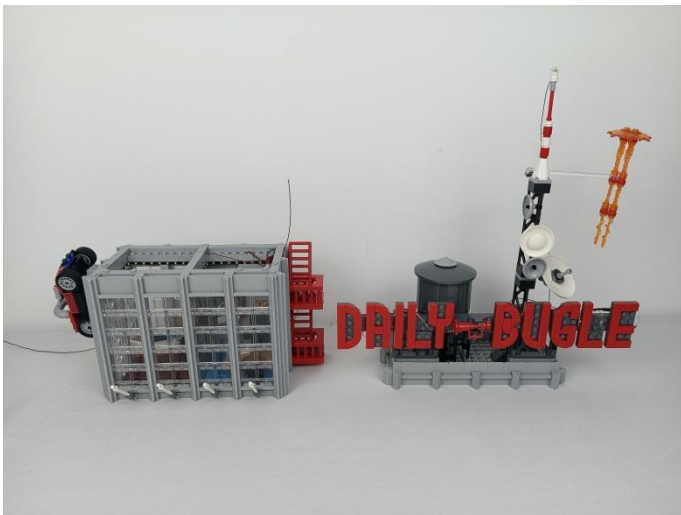


269

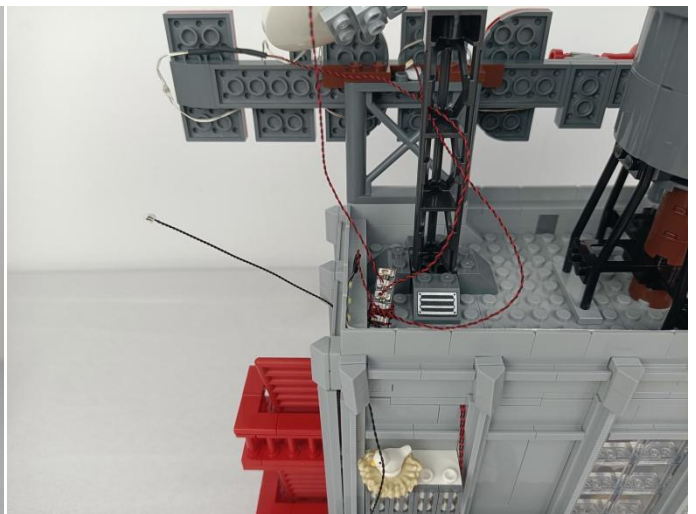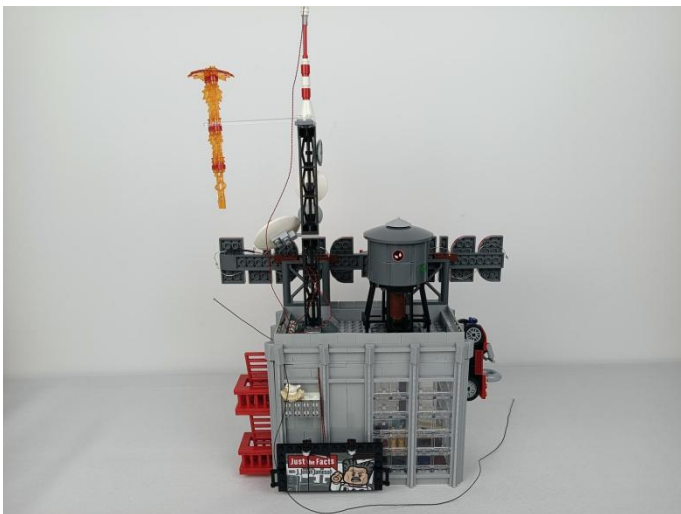


270

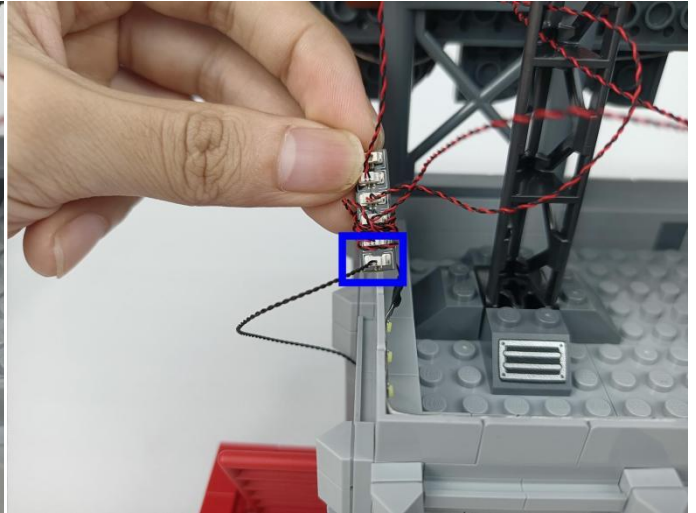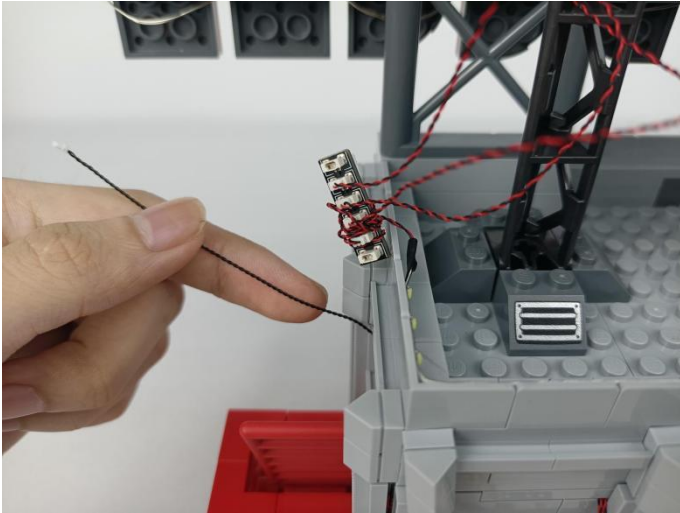

271

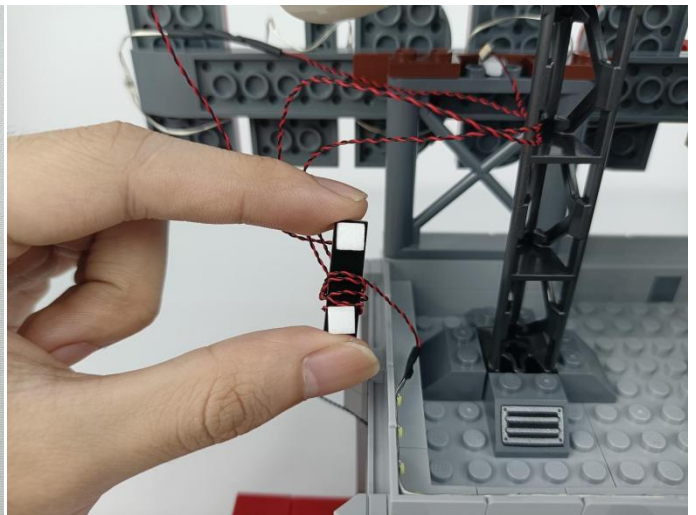


272

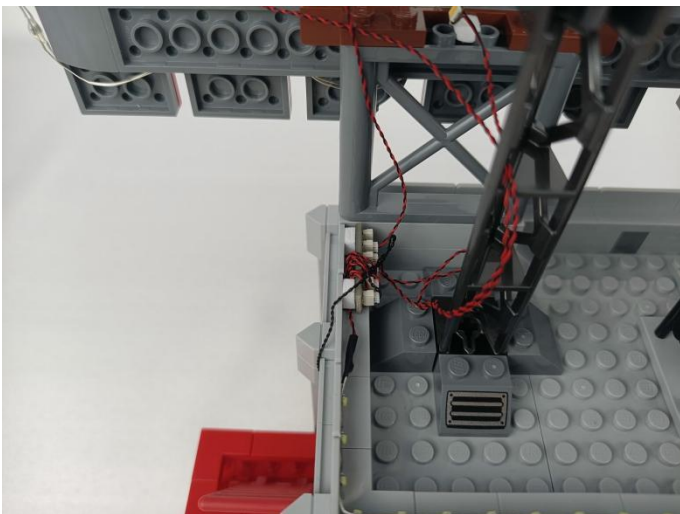



273





274

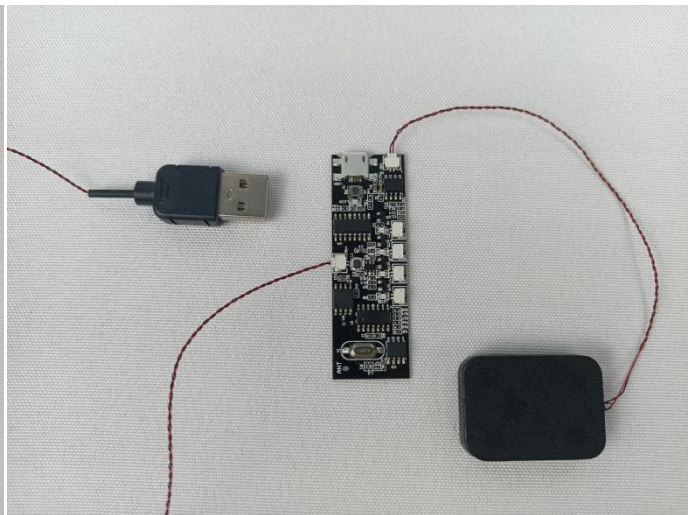



275

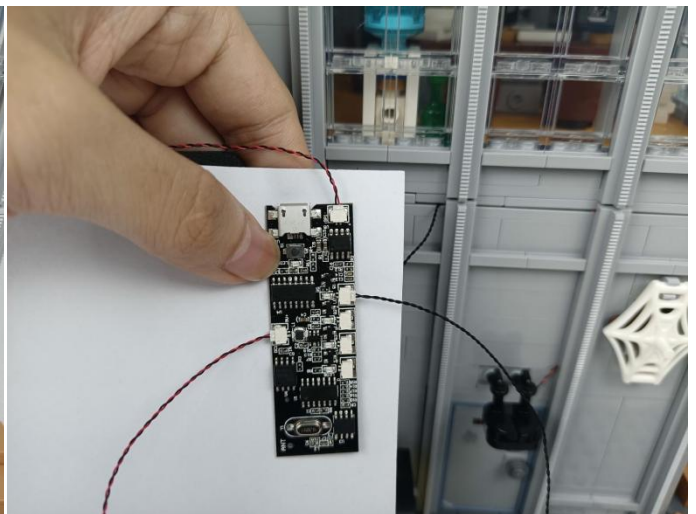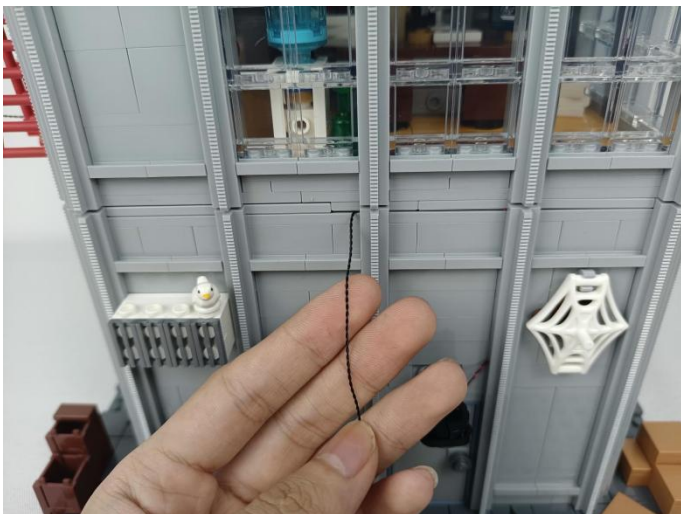



276

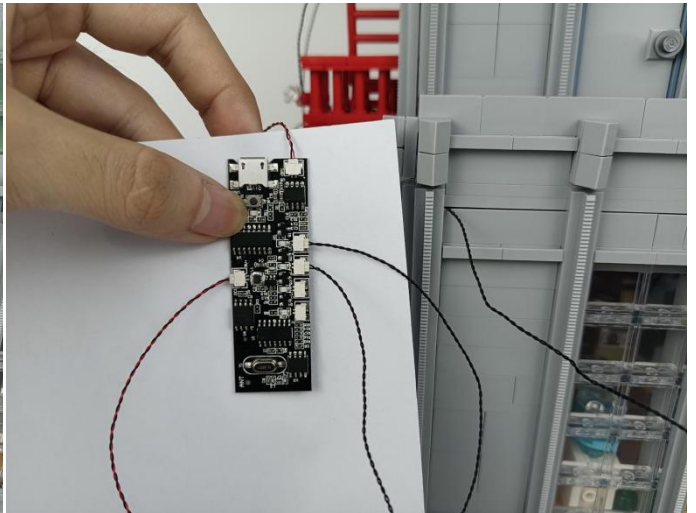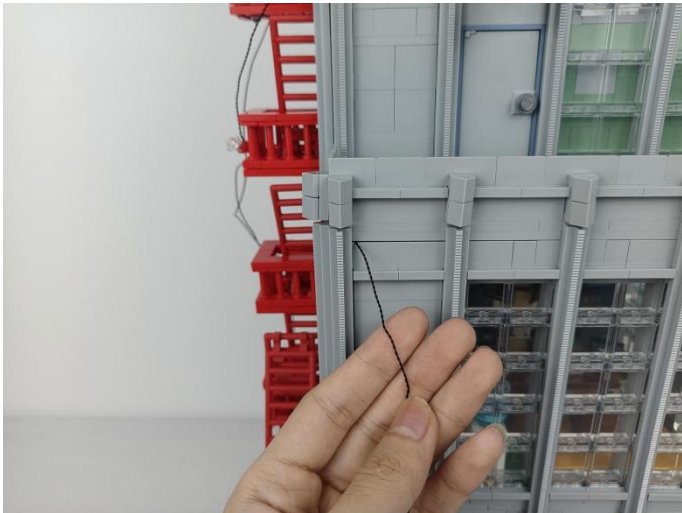


277

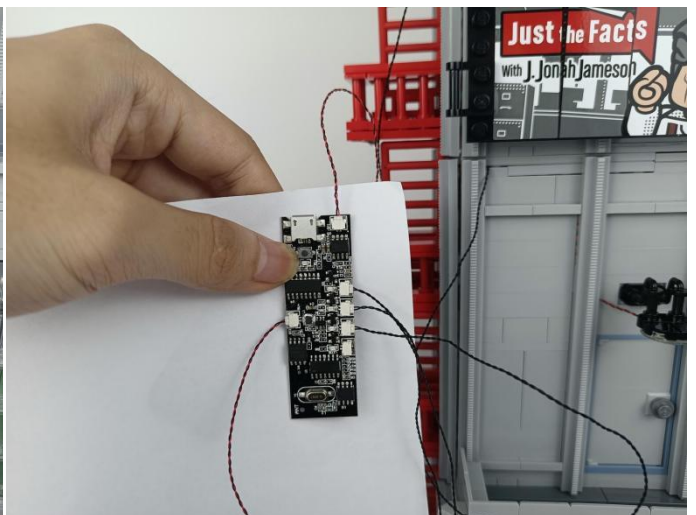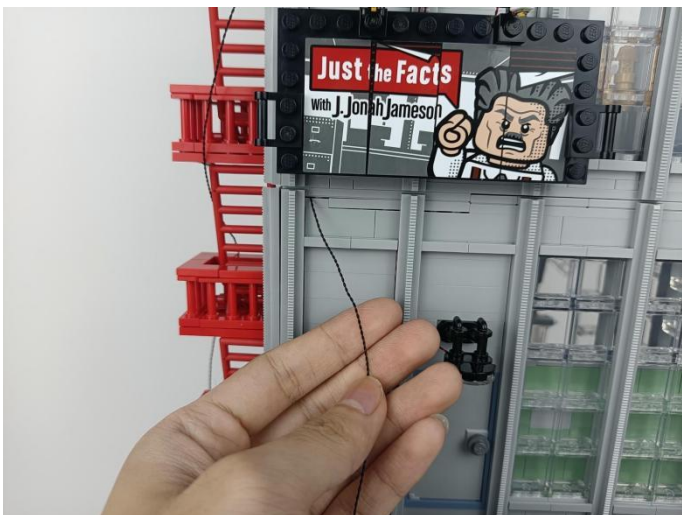



278

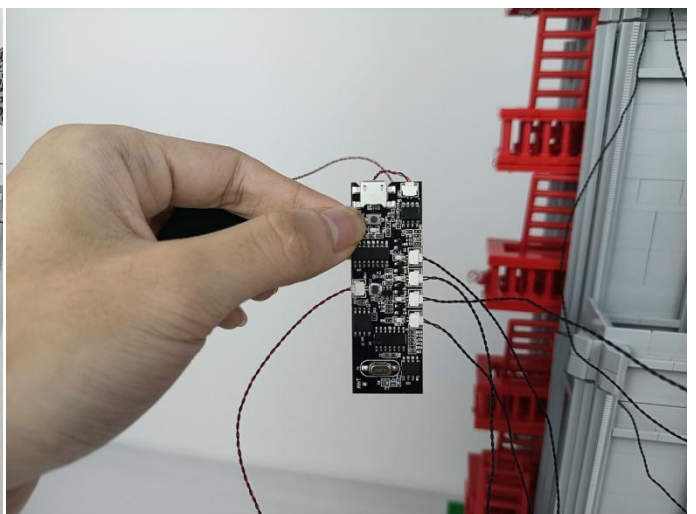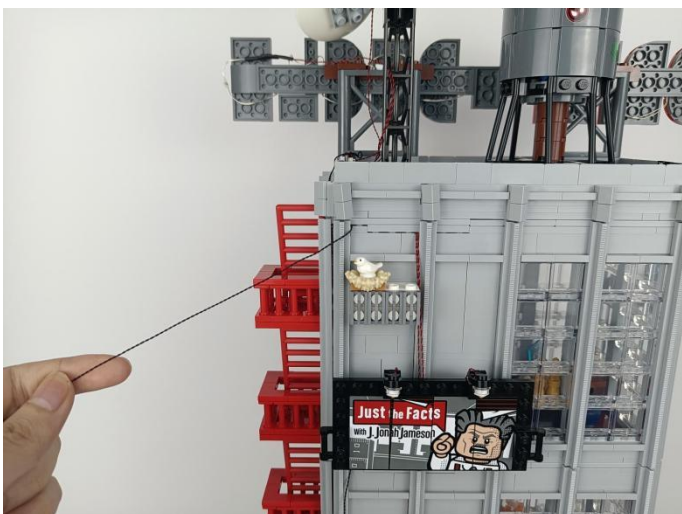

279

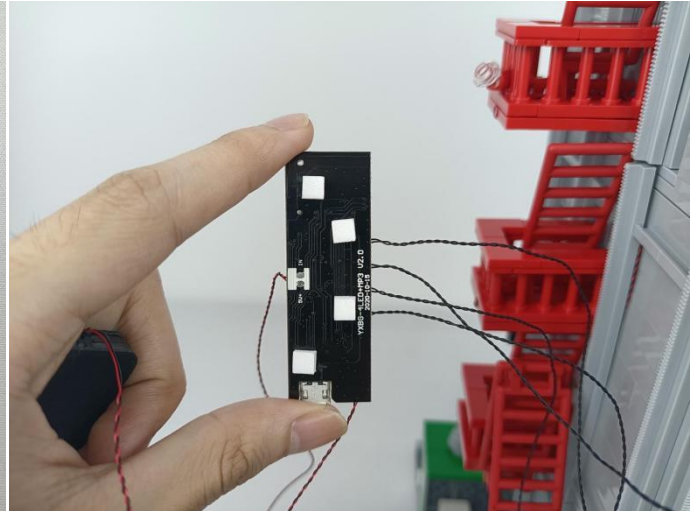

280

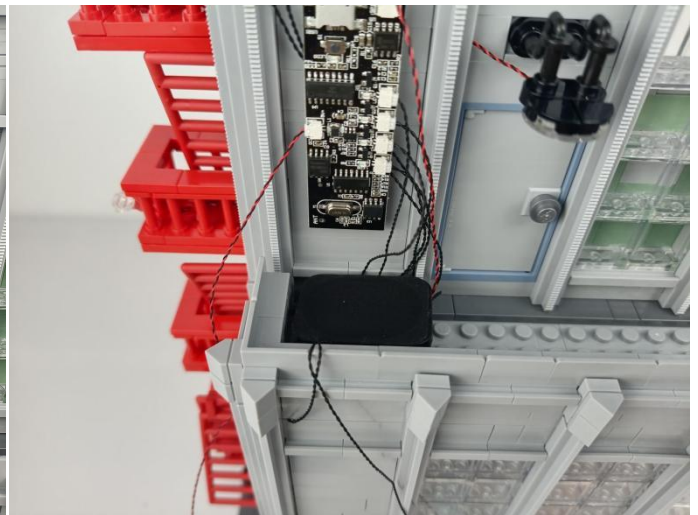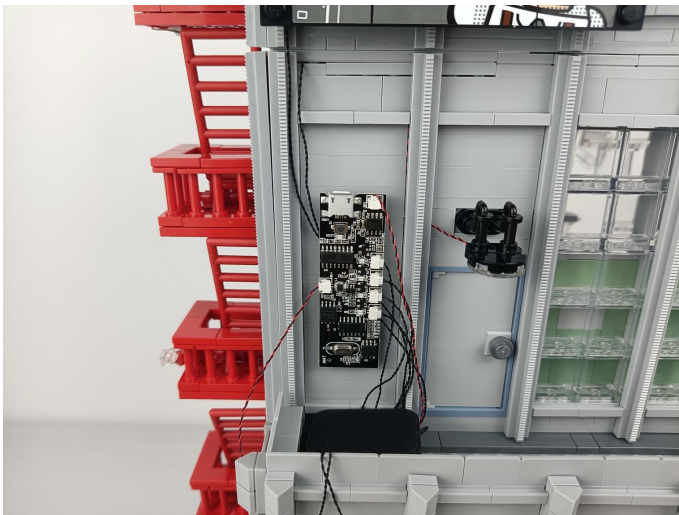

Good job, you've done all the installation steps, power it up and enjoy your work.

