

76389 Chamber of Secrets P25803

- **P25803 is the unique code of lighting set, we use this to accurately identify the product you purchased and the corresponding manuals and services you need to obtain. Please make sure your product code is the same as the label on the back of the box shown “76389 P25803”.**
- **Installation requires a lot of patience and great observation that your LEGO bricks will come alive when you get this finished. The bricks with lighting as below, so make sure you're ready and let's get started.**



Strategies for the Installation

This instruction divides three sections to complete the installation of the lighting set.

Section A: Check the type and quantity of components.

The quantity and type of components of each products are different and it needs to be carefully checked to make sure there do have enough material. The type of components is indicated by the label on the bag.

Section B: Test that each components is working properly.

Each components is made individually so it is necessary to test that each components is working properly to avoid the situation that the lighting does not work .

Section C: laying out components following the instruction.

Our material is very small but not fragile, just be reminded that don't to pull the wires too hard. For different people, there may be some installation steps that you can't understand. Please look at the previous and later installation step

Section A: Check the type and quantity of components.

There are 16 bags in this set. The name and quantities of specific components are as shown , please check carefully.

Label	Content	Quantity
Bit Lights-15CM-Warm White	Bit Lights-15CM-Warm White	11
Bit Lights-15CM-Red	Bit Lights-15CM-Red	1
Bit Lights-15CM-Green	Bit Lights-15CM-Green	5
Bit Lights-15CM-Blue	Bit Lights-15CM-Blue	1
Bit Lights-30CM-Green	Bit Lights-30CM-Green	2
Bit Lights-15CM-Pink	Bit Lights-15CM-Pink	1
Headlights-15CM-Warm White	Headlights-15CM-Warm White	4
Expansion Board	6 Socket Expansion Board	2
	8 Socket Expansion Board	1
	4 Socket Expansion Board	5
USB Power Cable	USB Power Cable-30CM	1
AA Battery Box	AA Battery Box	1
Connecting Cables-5CM	Connecting Cables-5CM	3
Connecting Cables-30CM	Connecting Cables-30CM	1
Connecting Cables-20CM	Connecting Cables-20CM	5
Flicker-Effects Board	Flicker-Effects Board	1
Remote Control Boards	Remote Control Boards	1
Parts package		

Please contact us immediately if there have any missing components.

Section B: Test that each components is working properly.

We need a structure to test all lights, so take out the bag with label “USB Power Cord”and “Expansion Boards”as follows.




It is worth reminding that our products are all customized. They have a unique way of connecting. The white plug on wire and the socket of the expansion board need to be connected together to transmit power.

Note that on one side of the white plug you can see two very small golden wires that should be connected to the two golden needles in socket of the expansion board.shown as blow.




All our connections between plug and socket are all the same as shown above. So for any such structure with plug and socket, please pay attention to the golden wire of the plug and the golden needle of the socket, they must be touched together.

The connection method between the USB Power Cord and Expansion Boards is as follows:

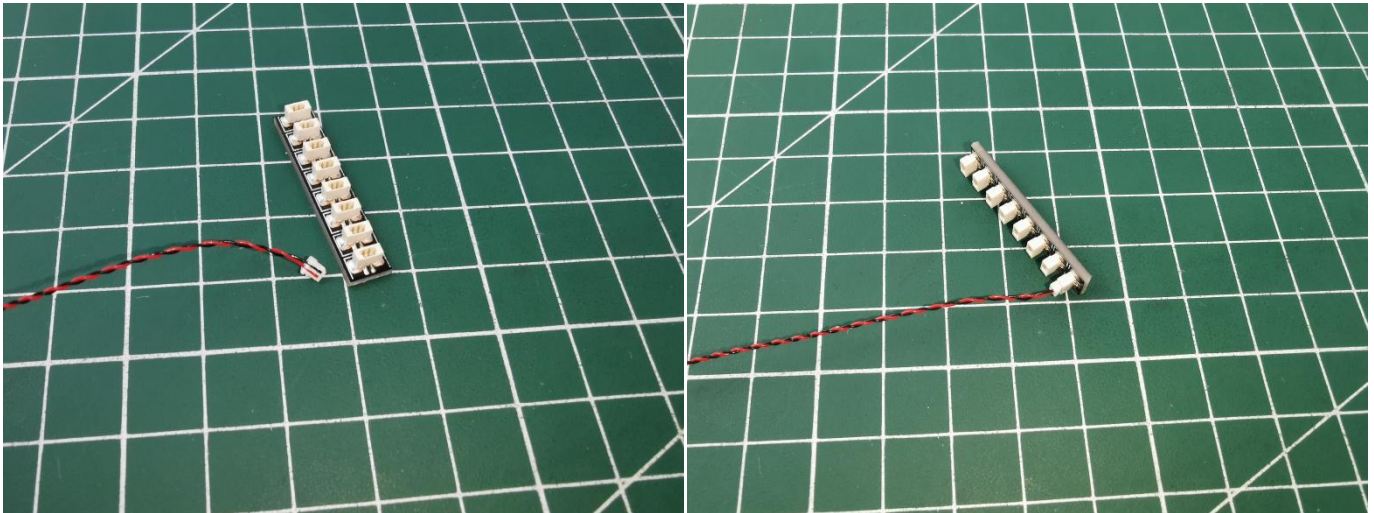

The USB Power Cord can be powered by phone chargers, power banks, etc.


USB connectors to connect devices

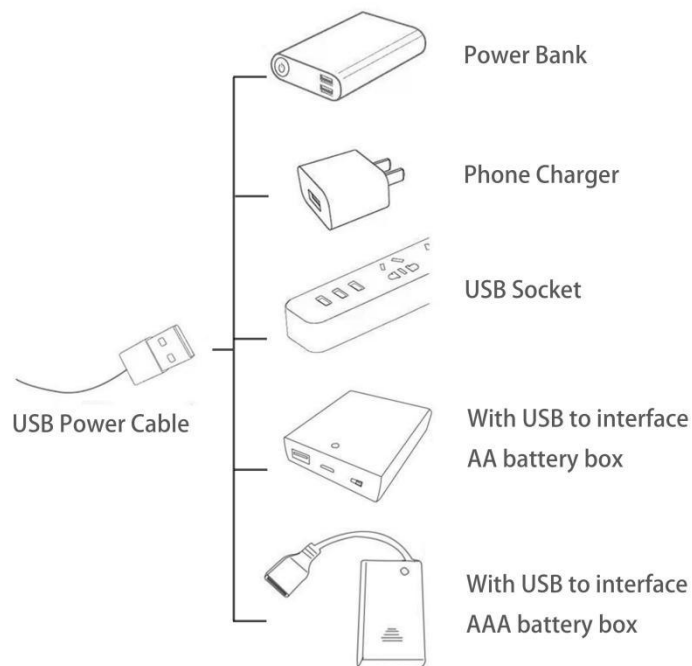

This instruction will use the power bank as power supply . The test structure is shown as follow. All lamp in this set will be tested by this structure.



when we test "Bit Lights-15CM-Red" particles,Take out the bag labelled "Bit Lights-15CM-Red".Take out one of the light and connect it to the socket. Turn on the power bank, the light will turn on normally as shown below.

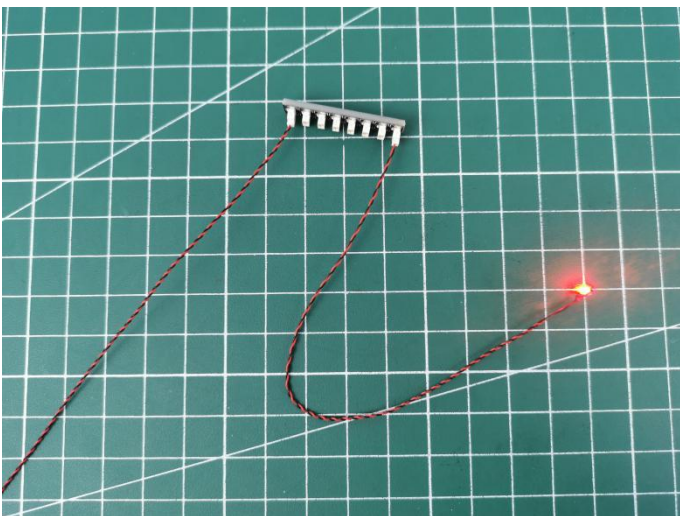

Test each lamp according to this method. It should be noted that after the test, the lamp must be returned to the corresponding bag to avoid confusion of types.



The components needs to be tested in this set is 11*Bit Lights-15CM-Warm White,5*Bit Lights-15CM-Green,1*Bit Lights-15CM-Blue,2*Bit Lights-30CM-Green,1*Bit Lights-15CM-Pink,4*Headlights-15CM-Warm White.

Please contact us immediately if any components don't work.

Section C: laying out components following the instruction.



1




2





3

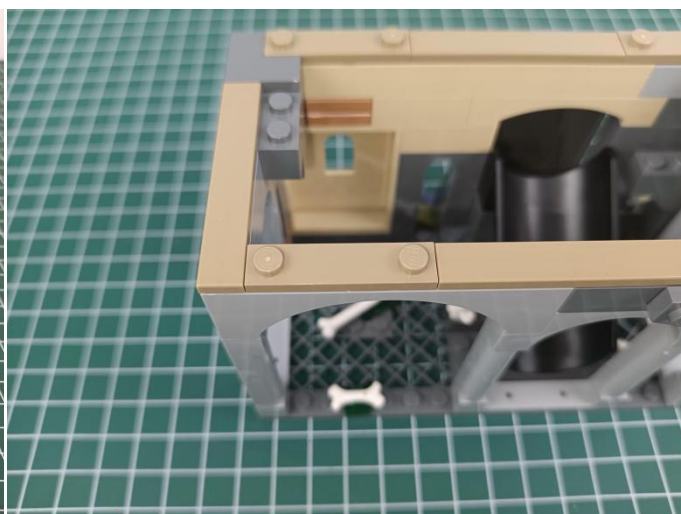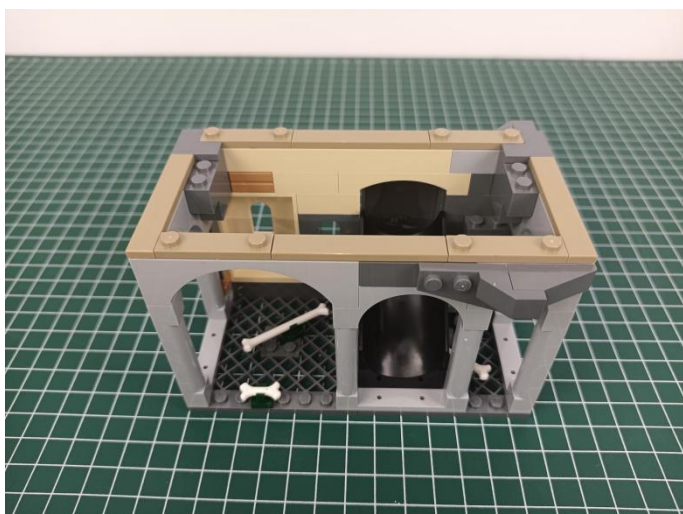


4

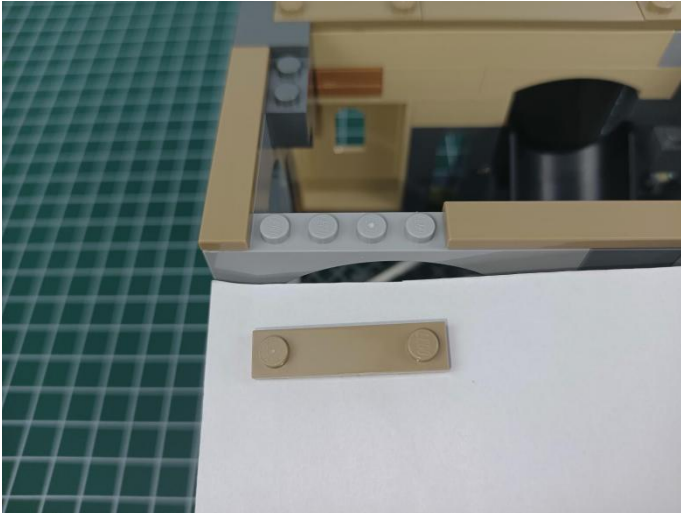


5

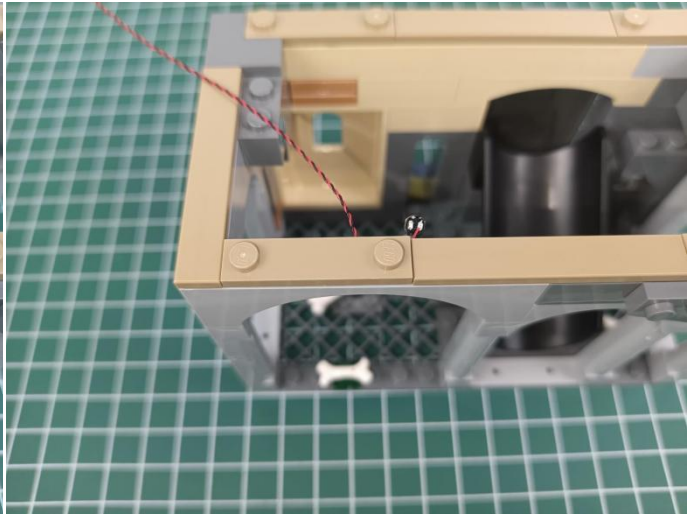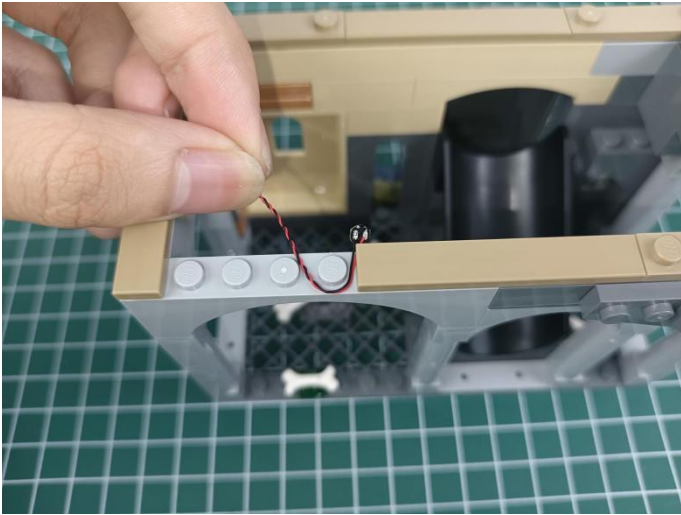


6

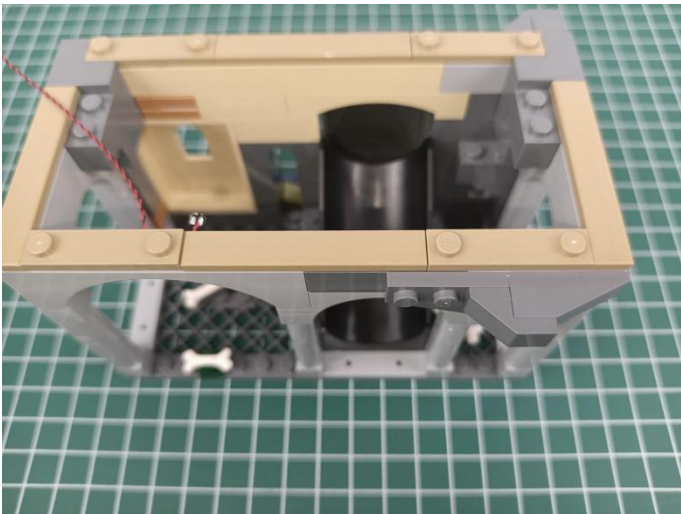


7

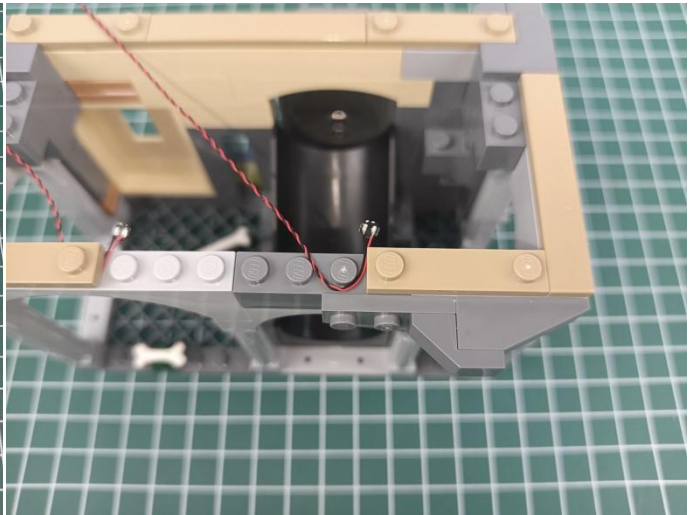


8

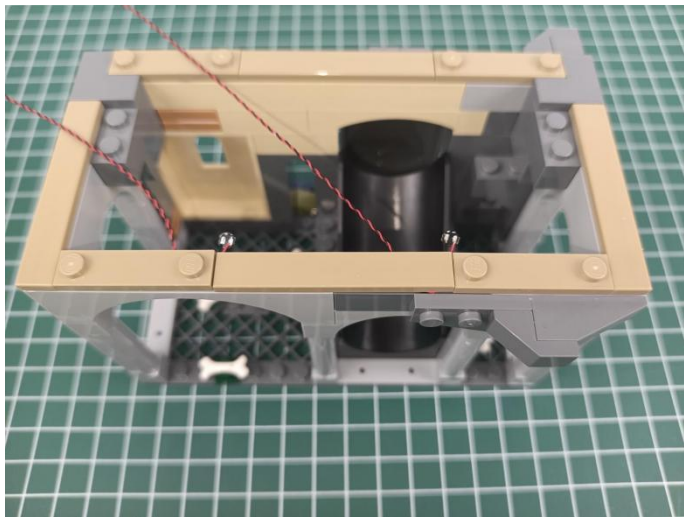



9

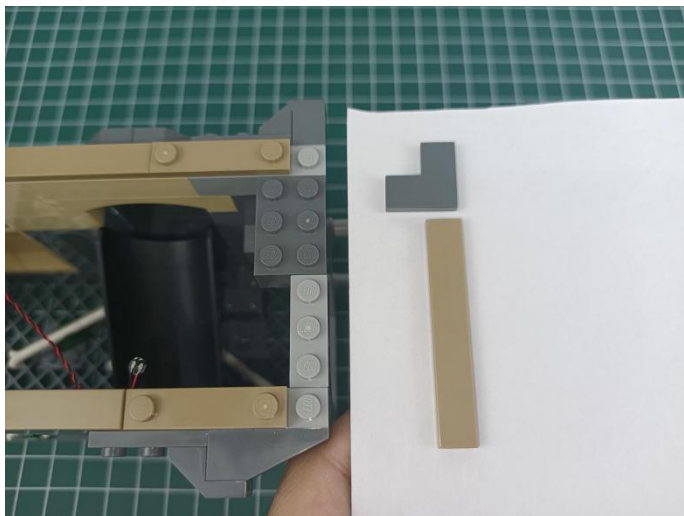


10

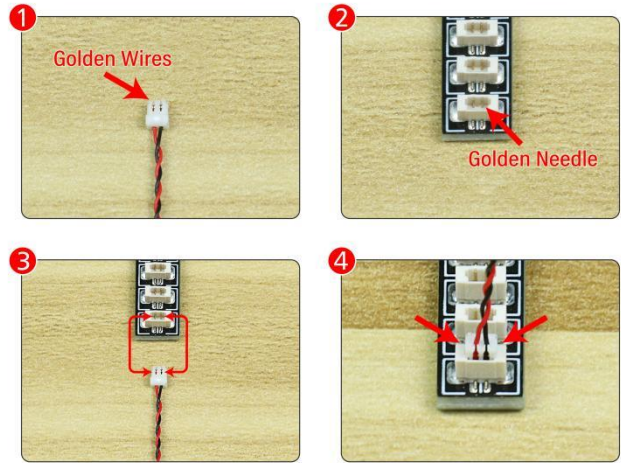


11

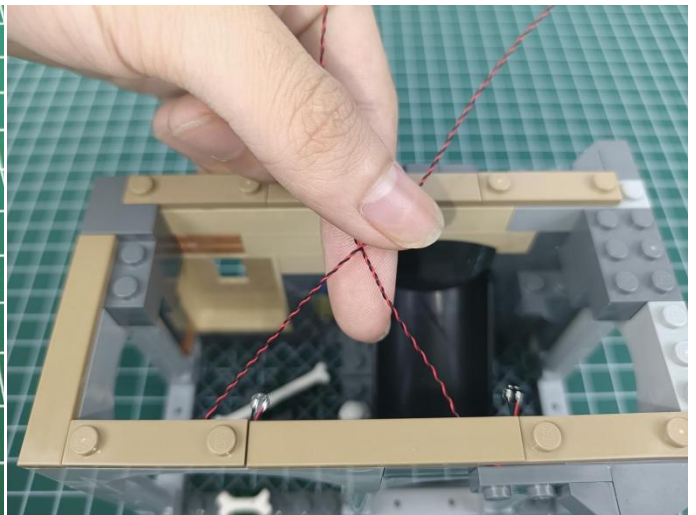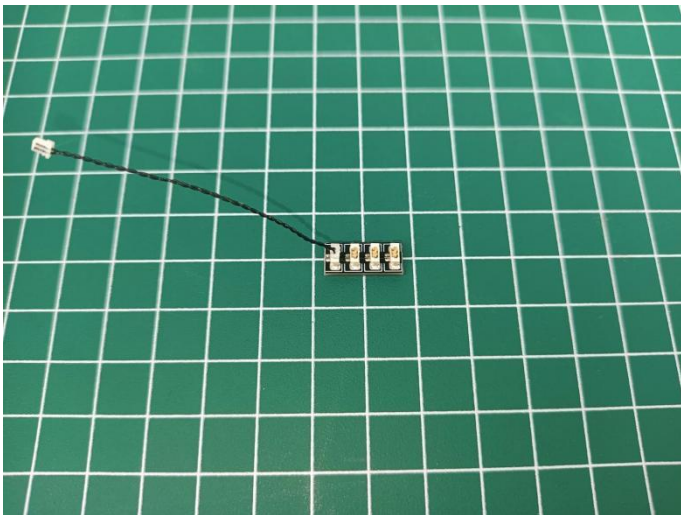



12

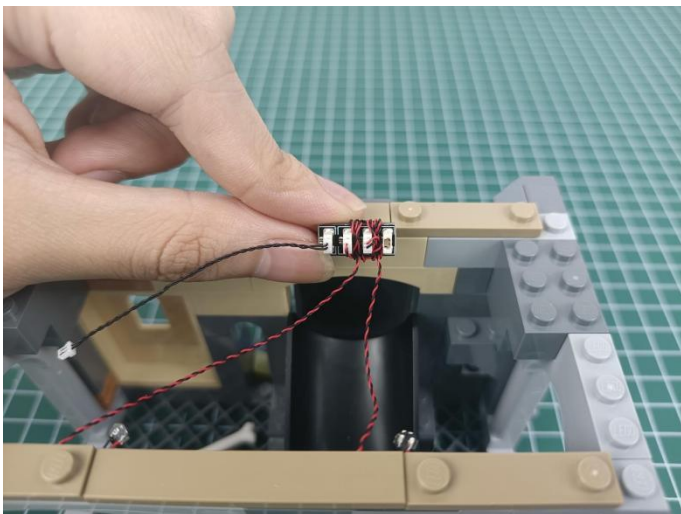


13

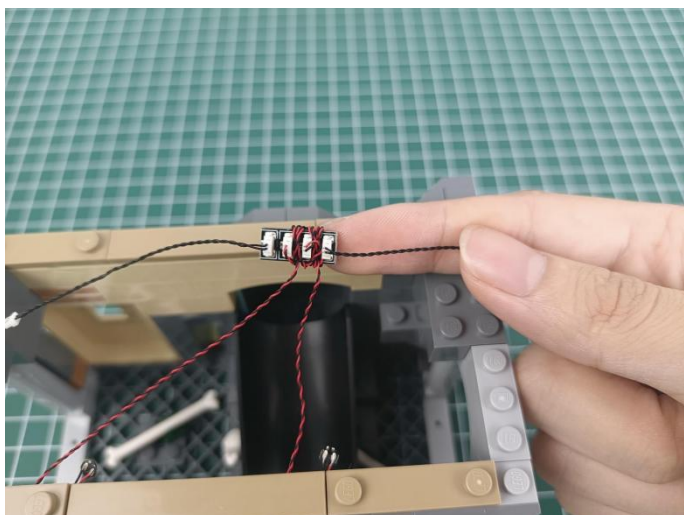



14

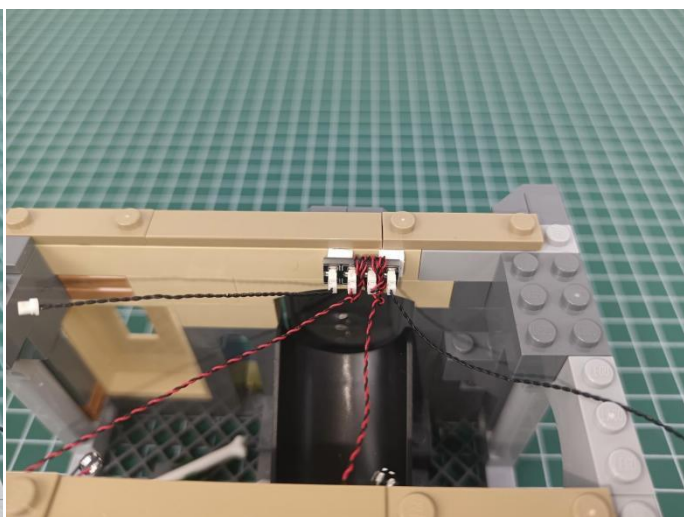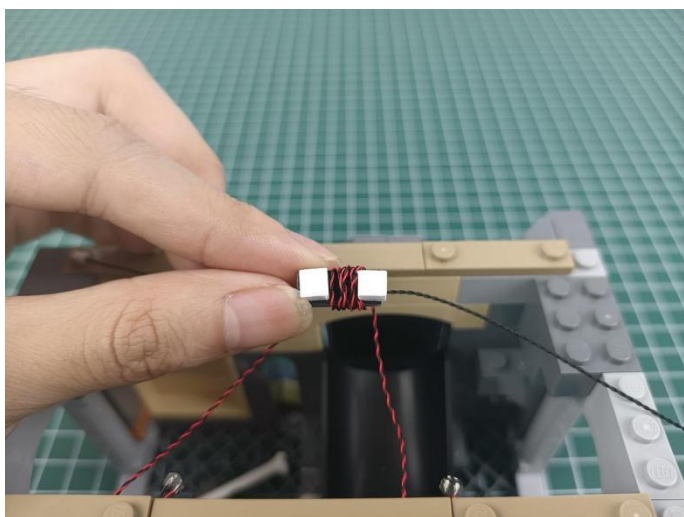


15

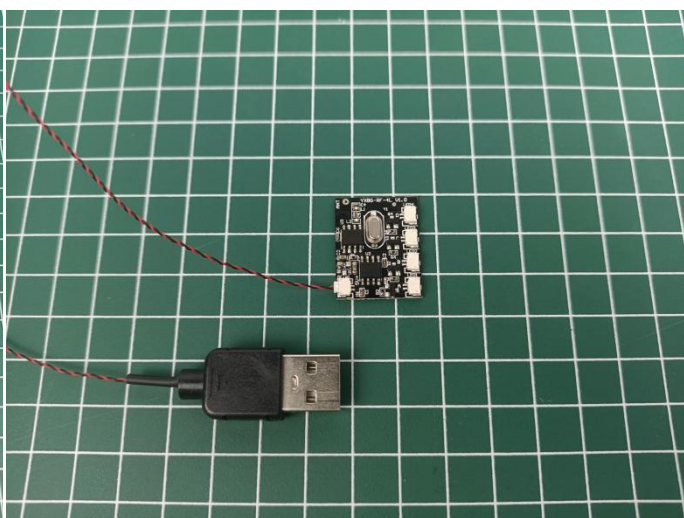


16

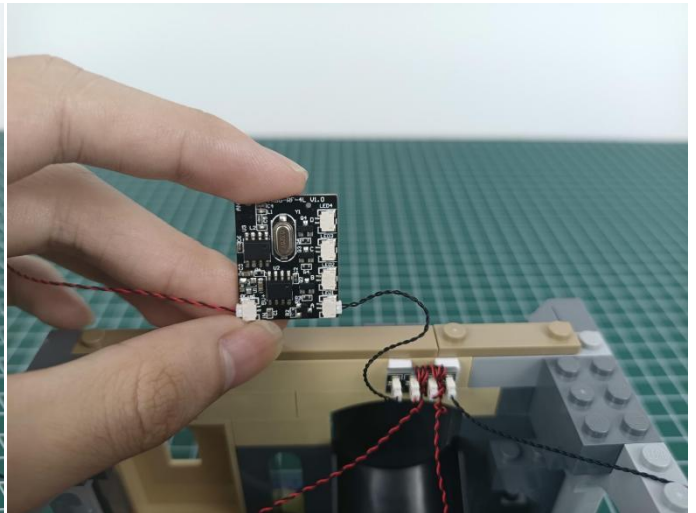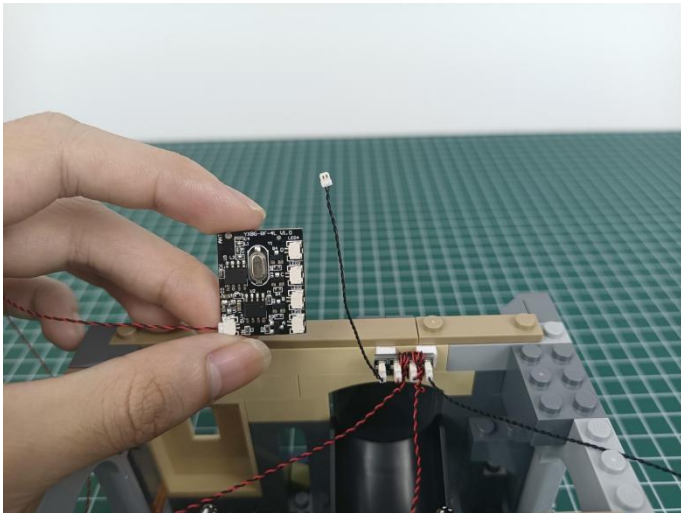


17

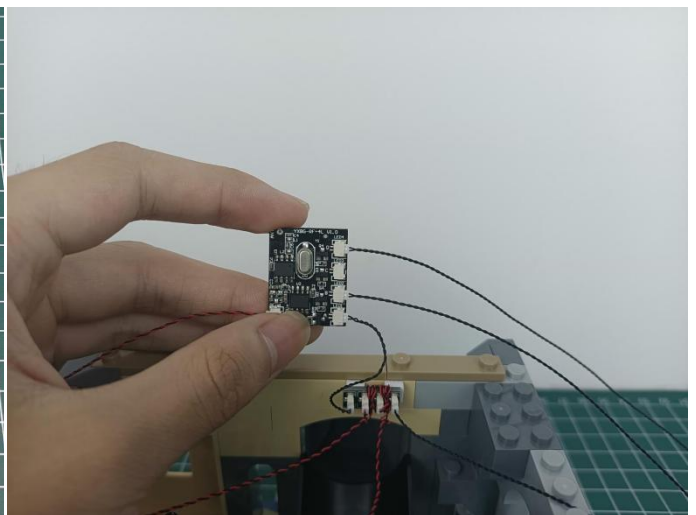



18

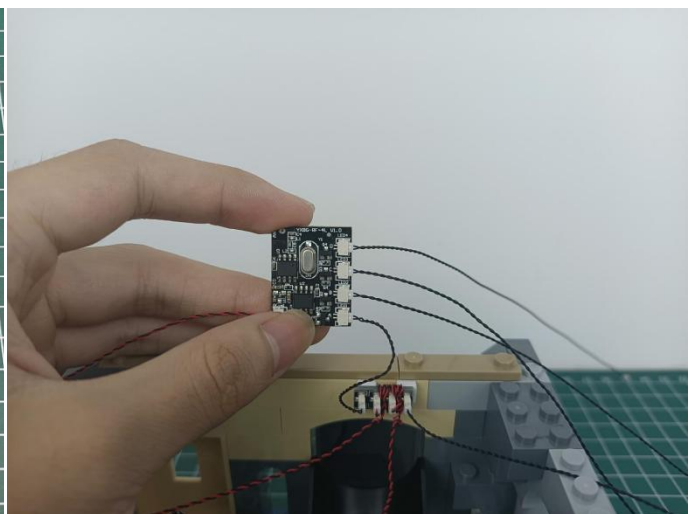



19

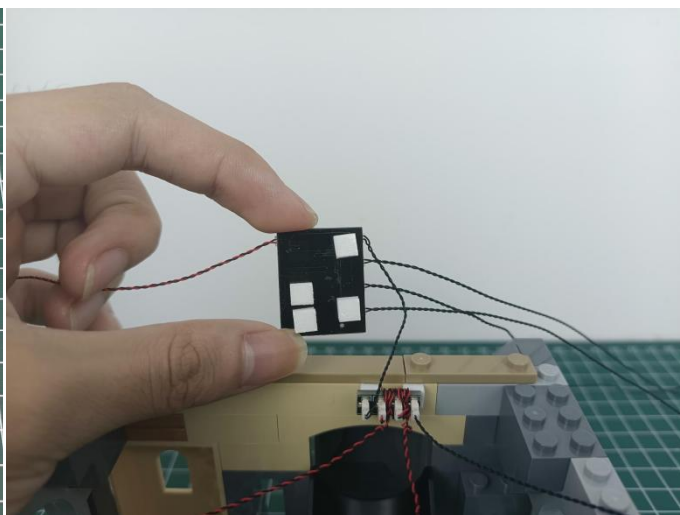



20

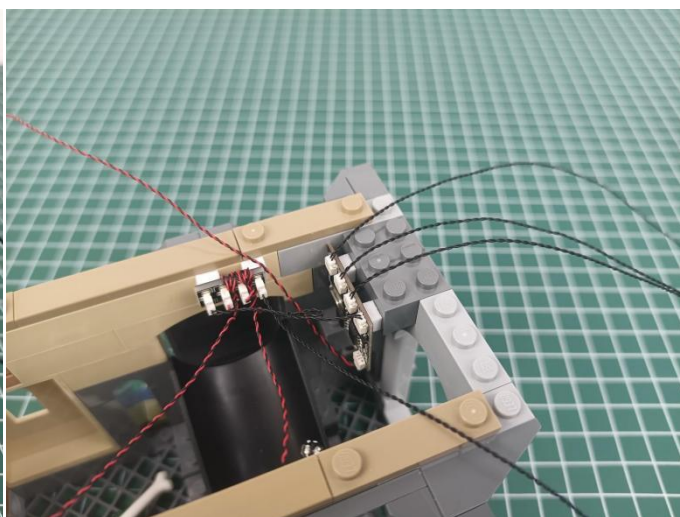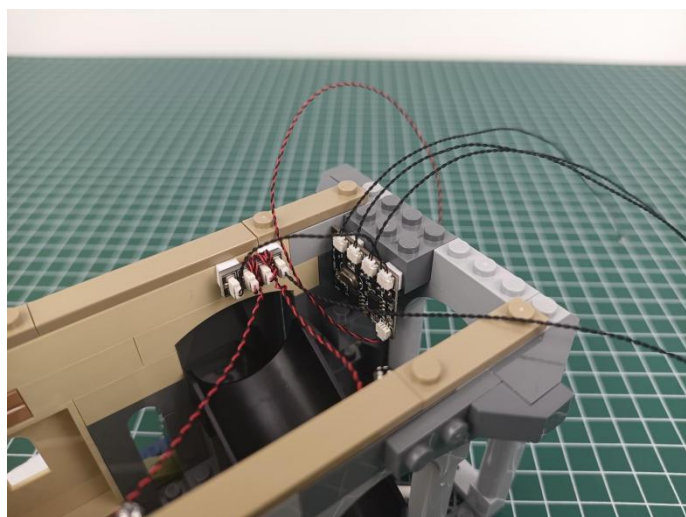



21

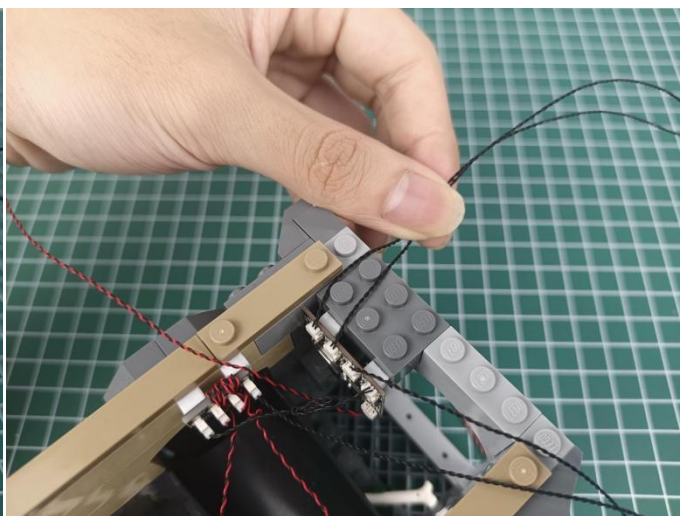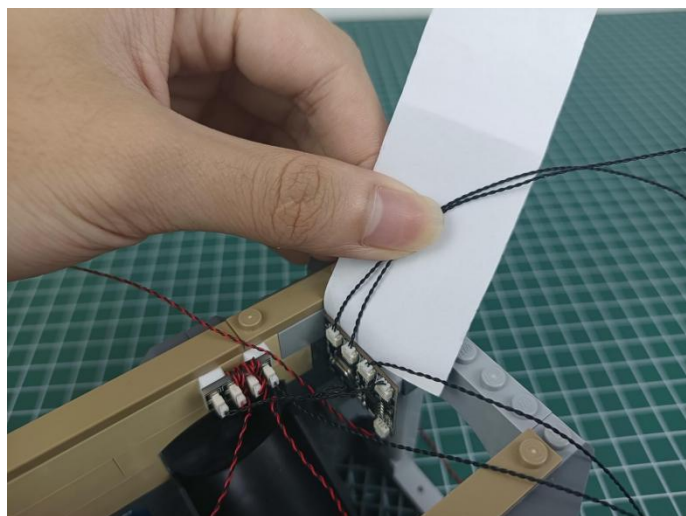



22

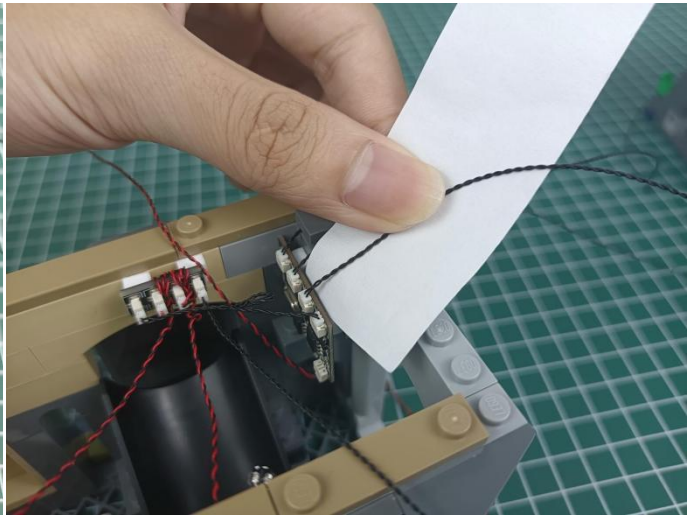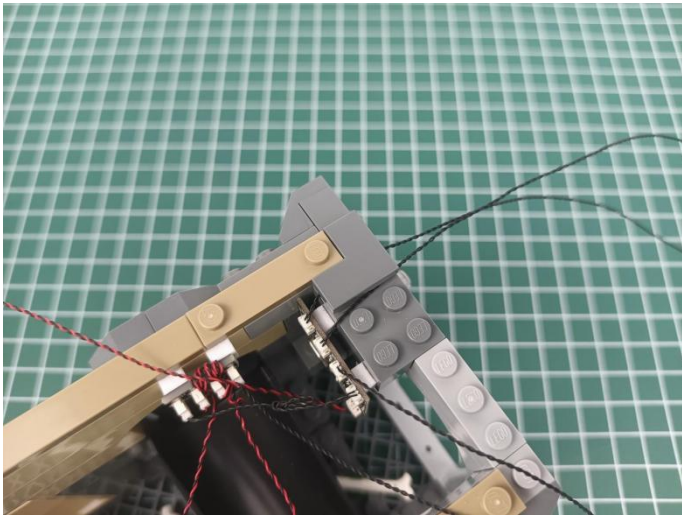



23

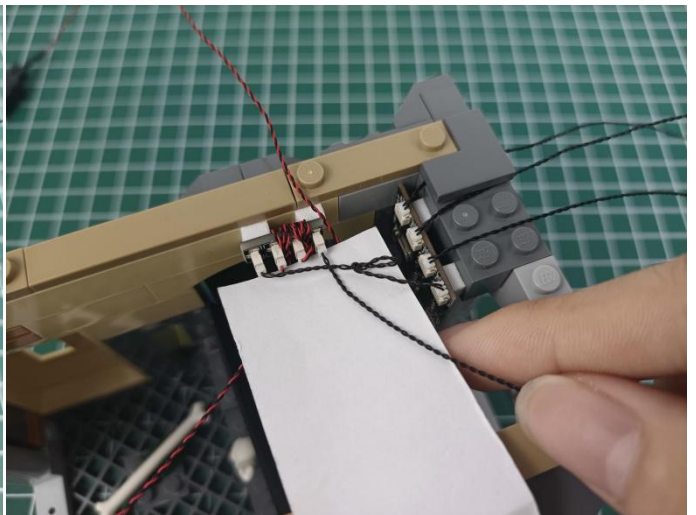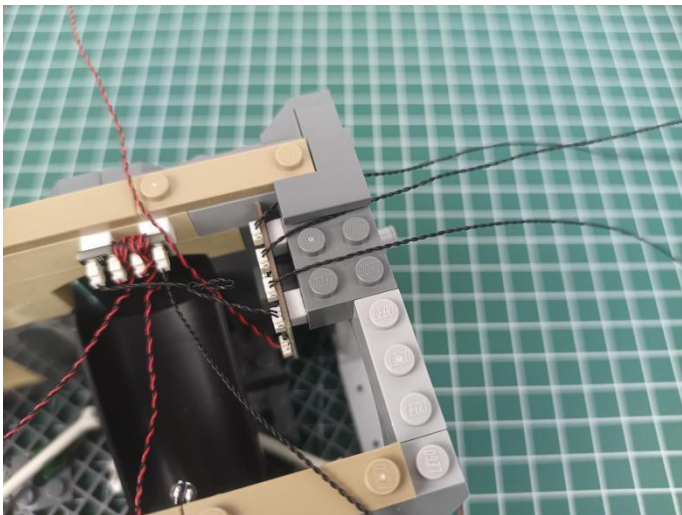



24

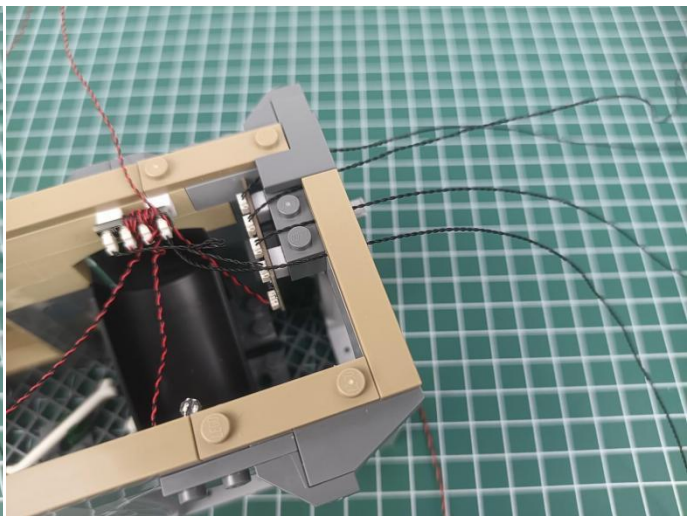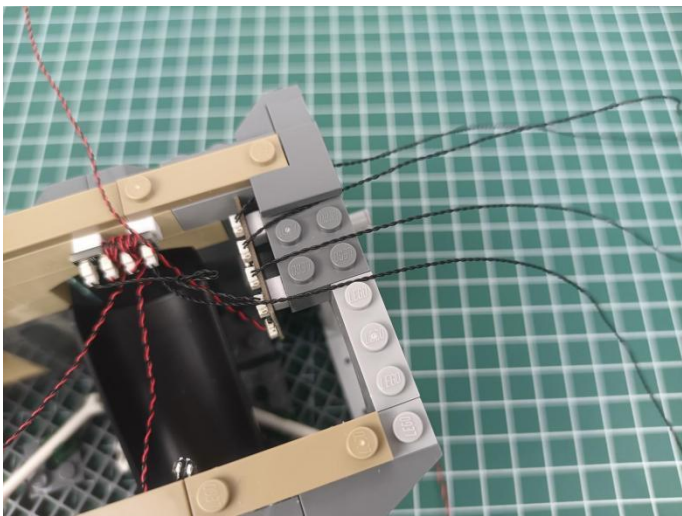



25

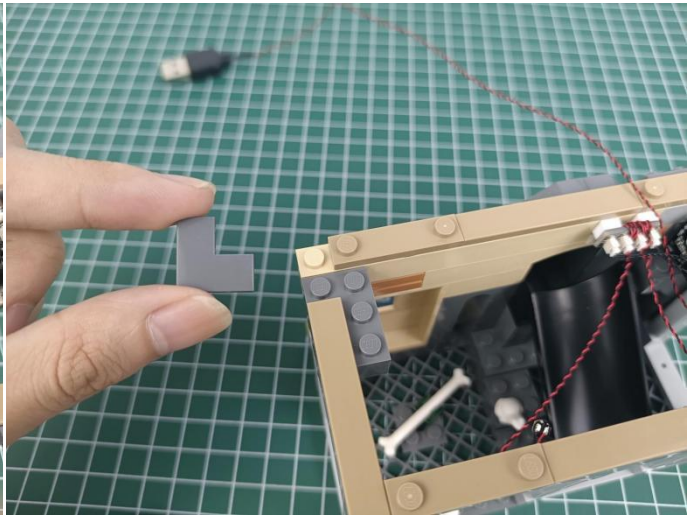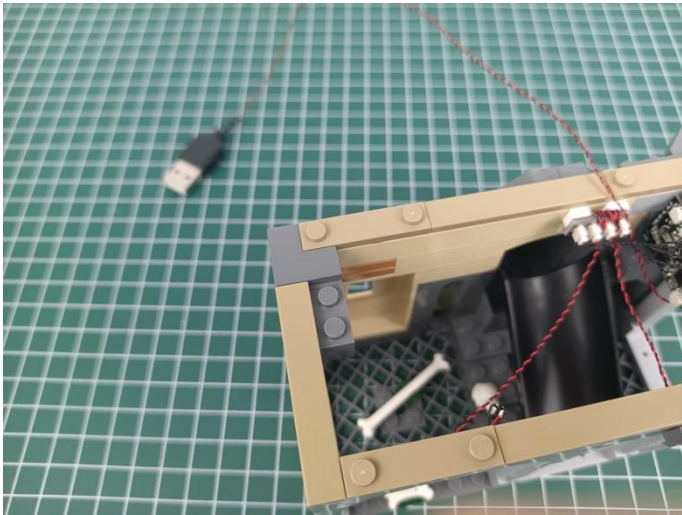


26

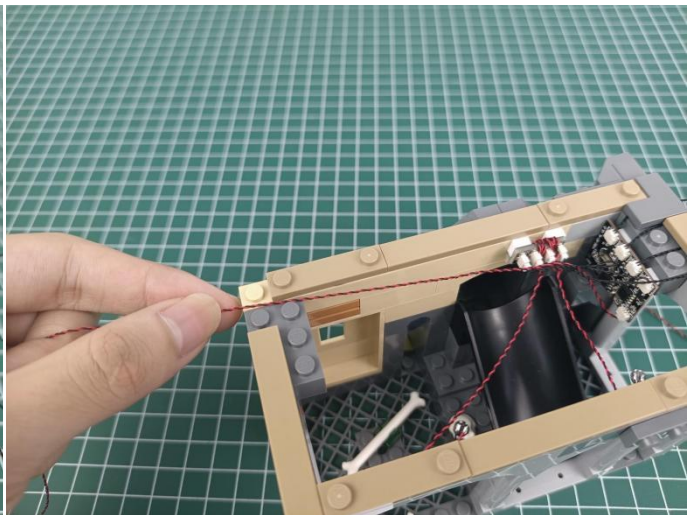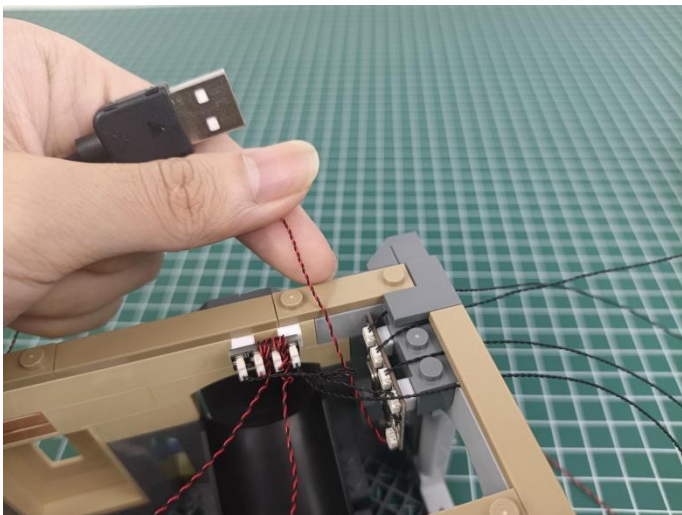

27

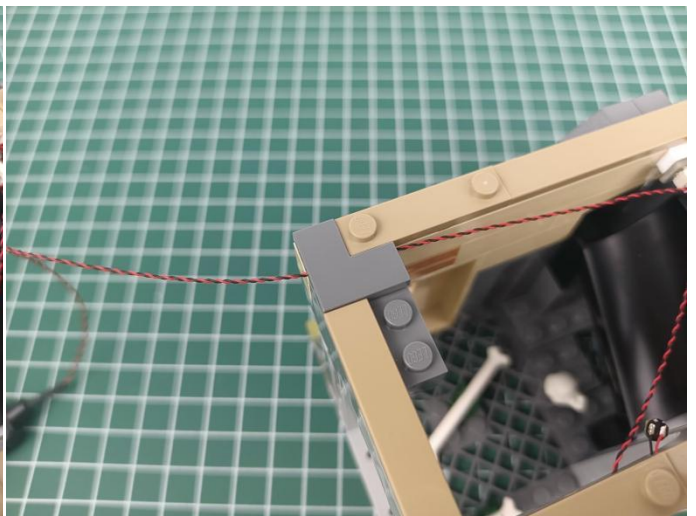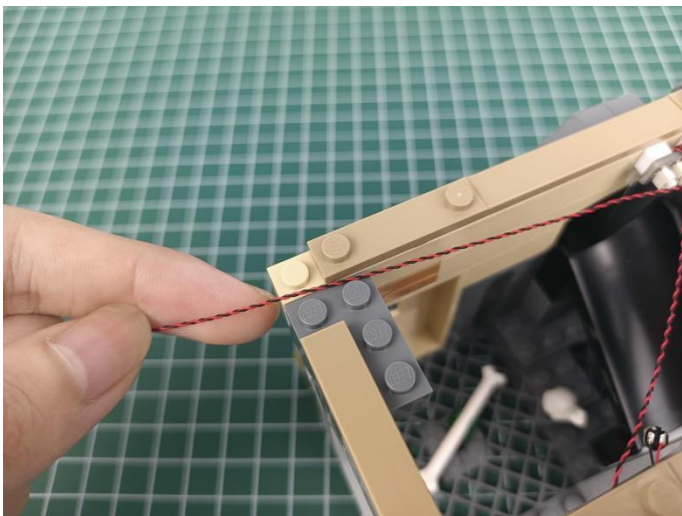

28

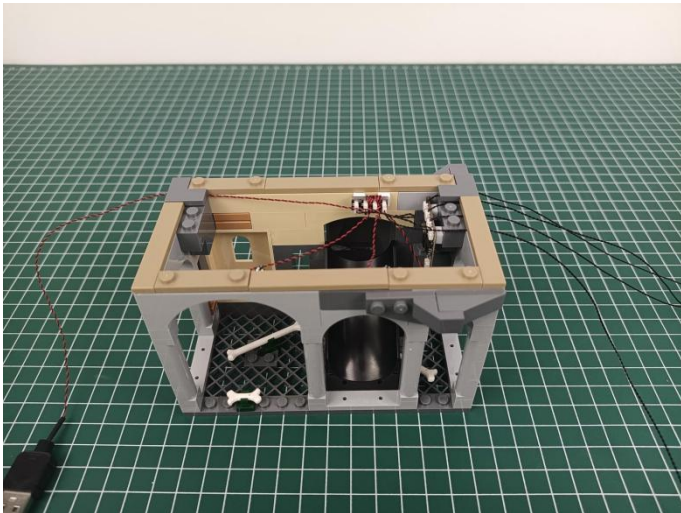

29




30



31



32

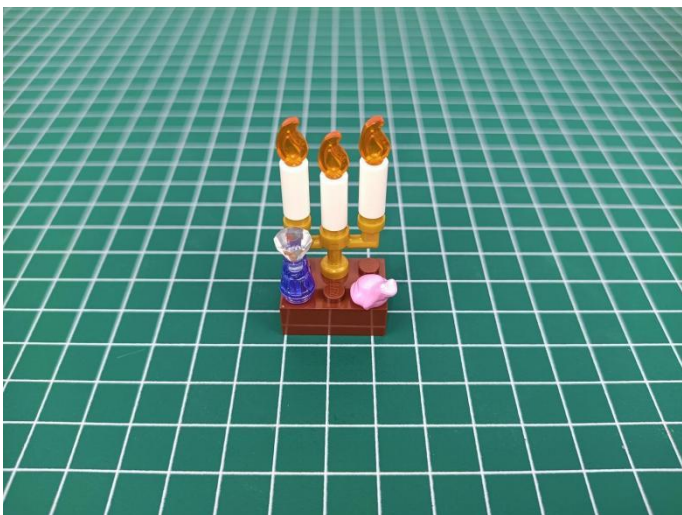

33



Tips

The plate without slit:

The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work.



The plate with slit:

The plate with slit:

The wire has enough space to avoid being squeezed endowed with longer service life and more stable effect.



The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormal heat during installation.


34





35



36

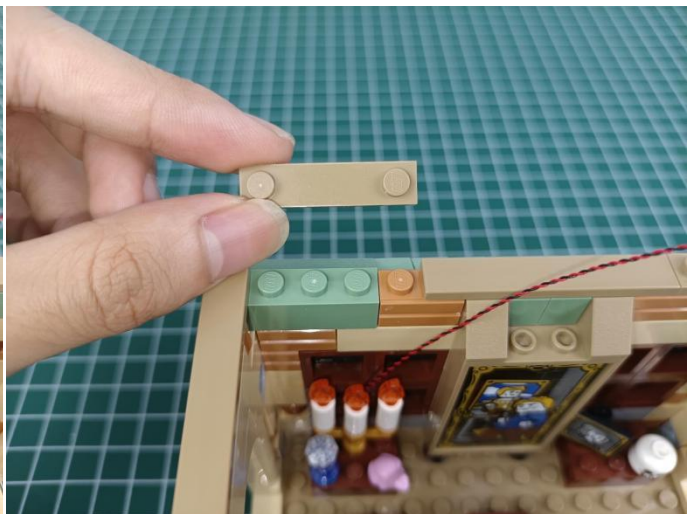


37

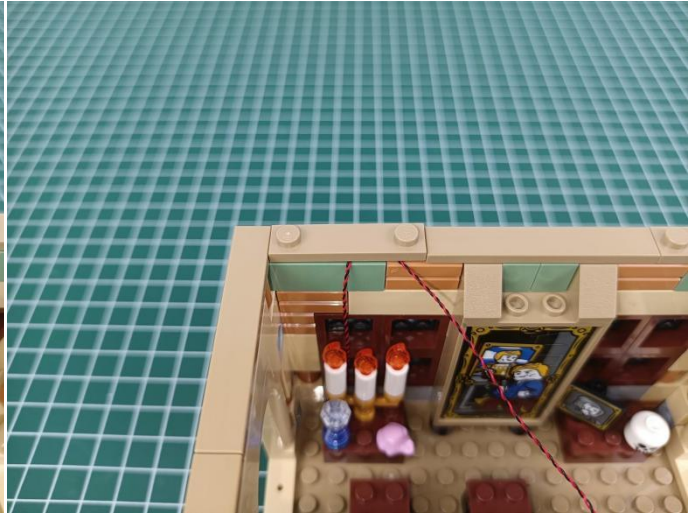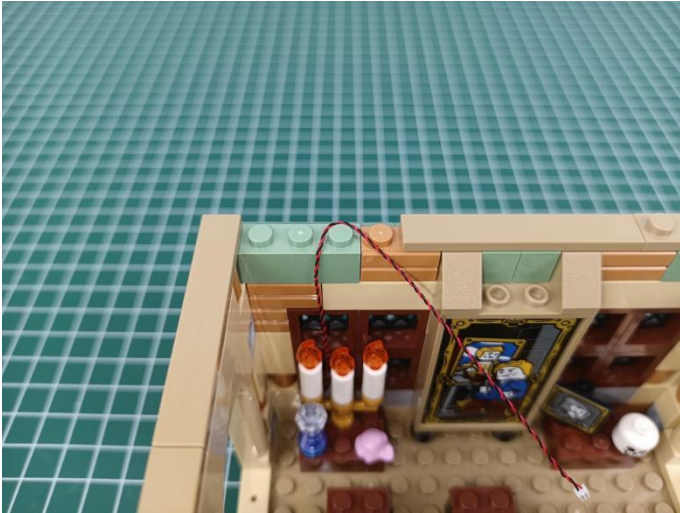


38




39

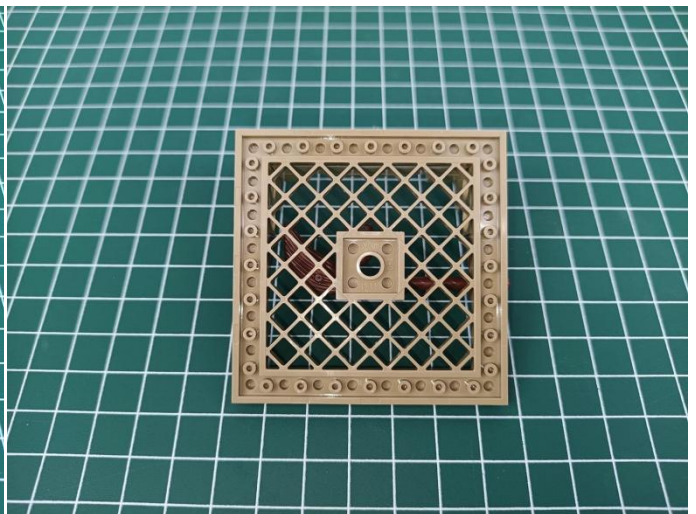


40

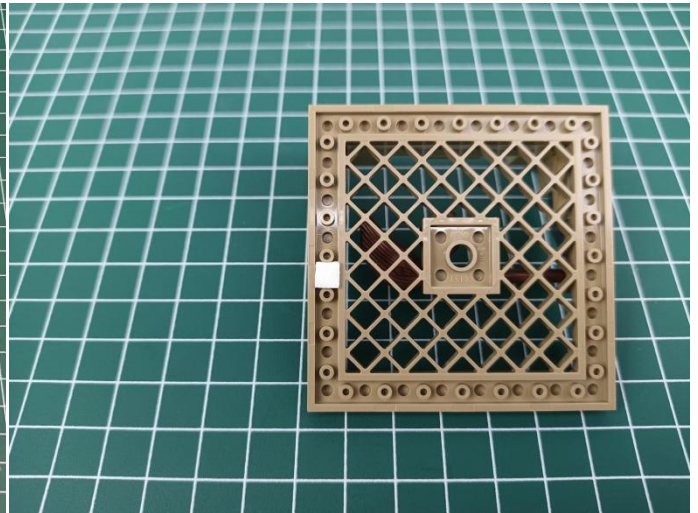



41

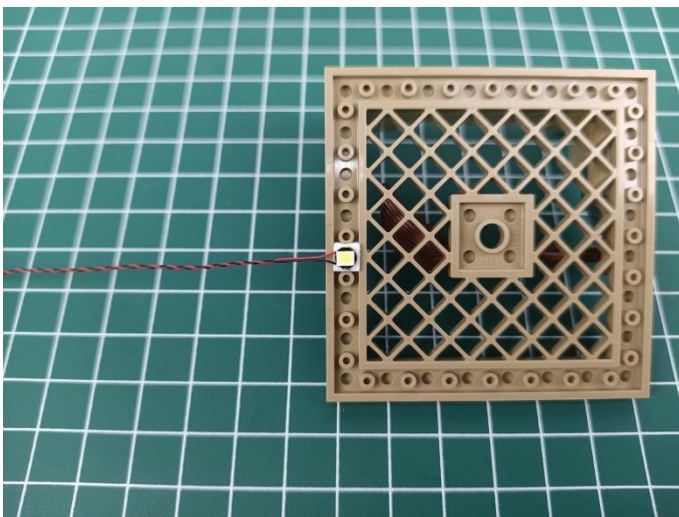


42

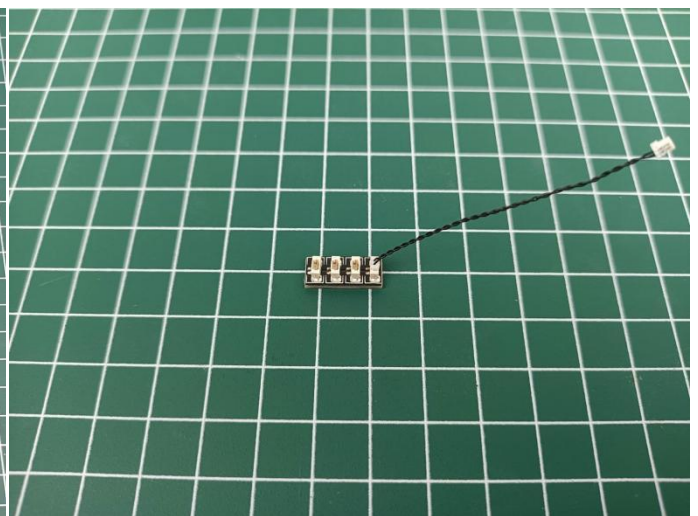



43

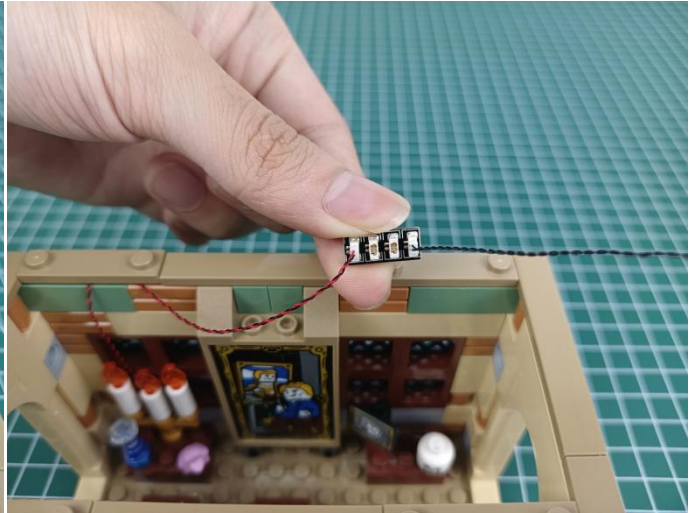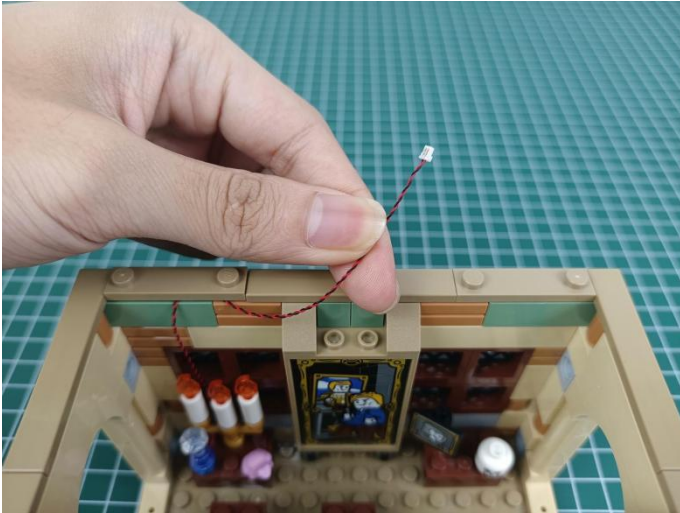


44

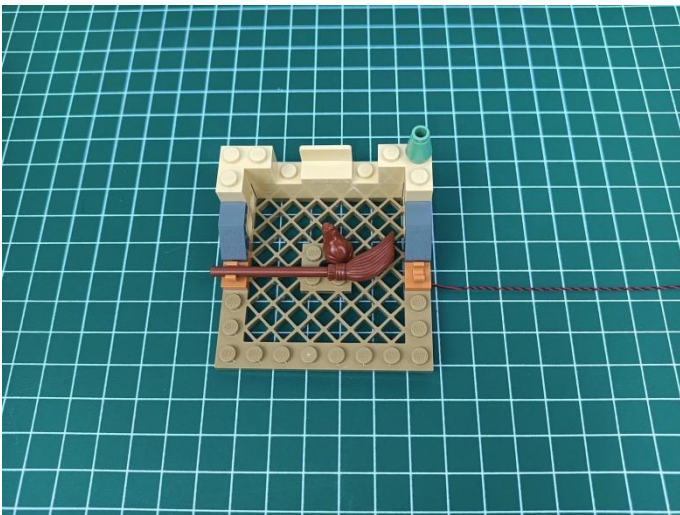



45

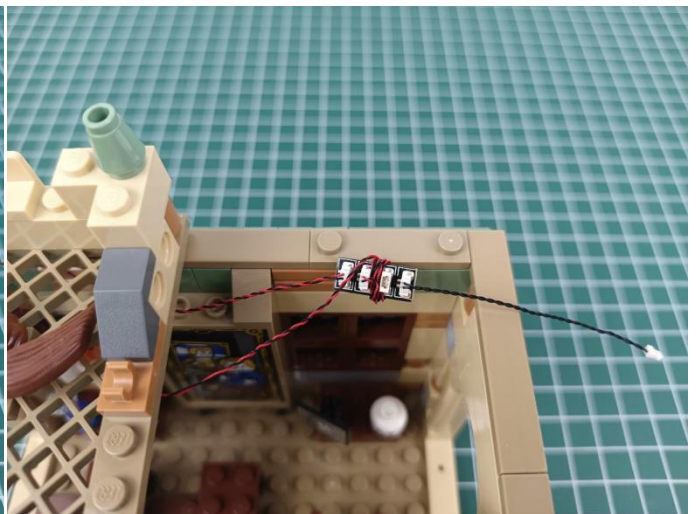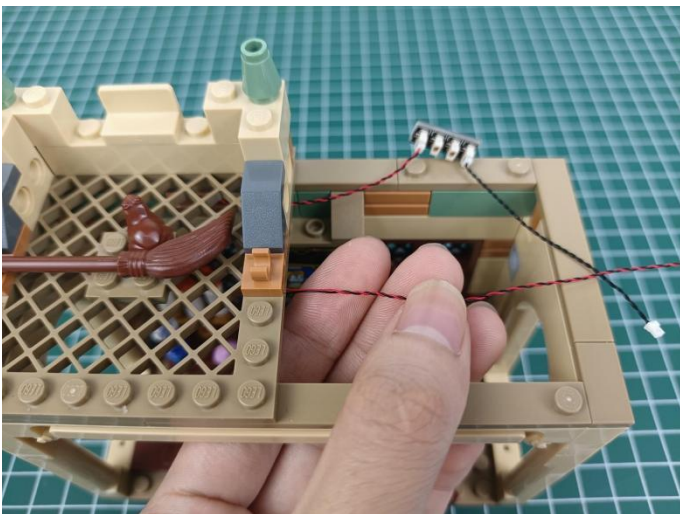



46

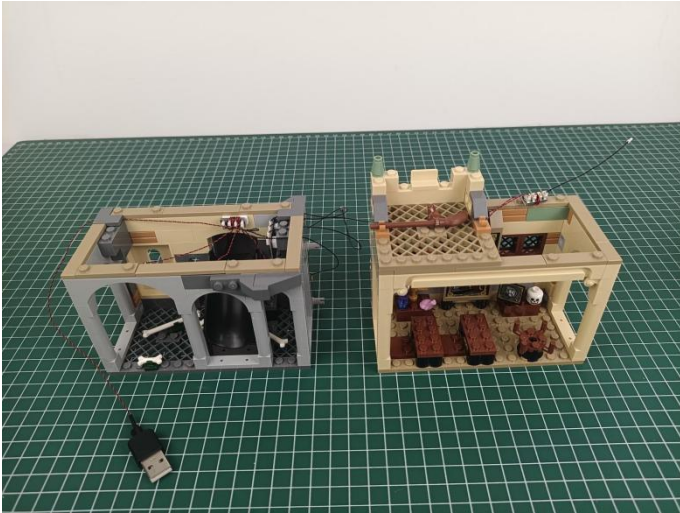



47

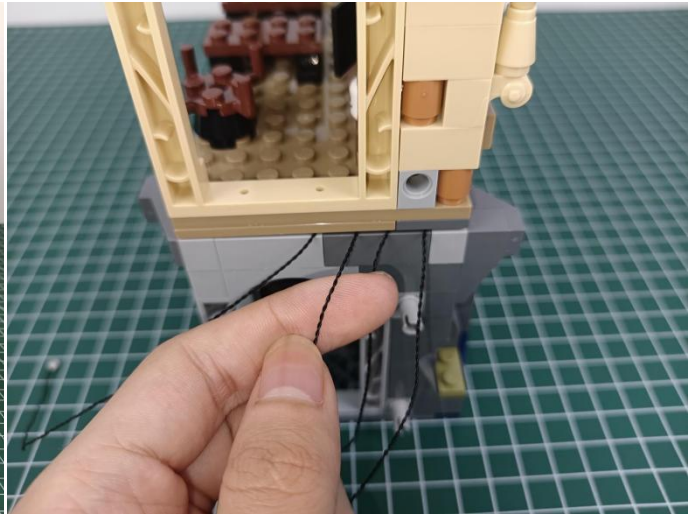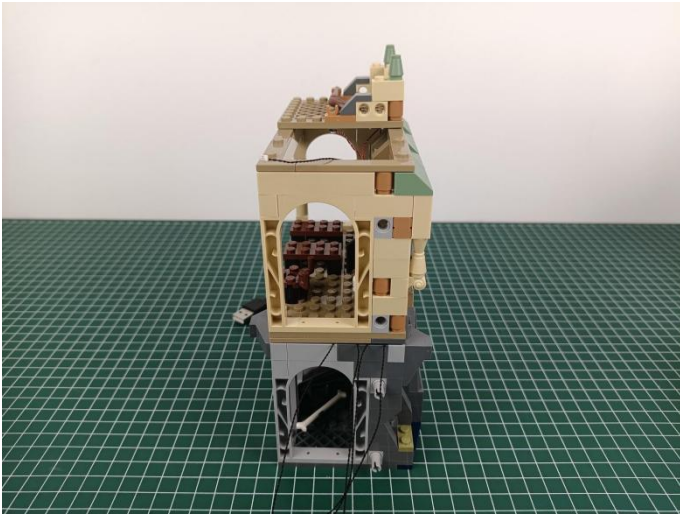


48

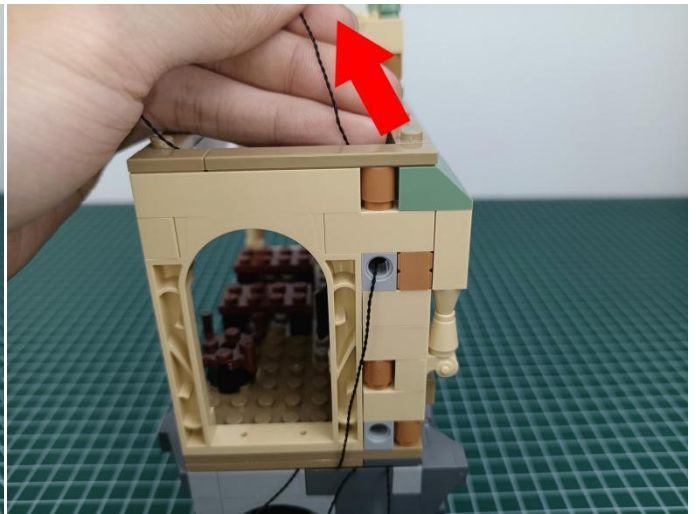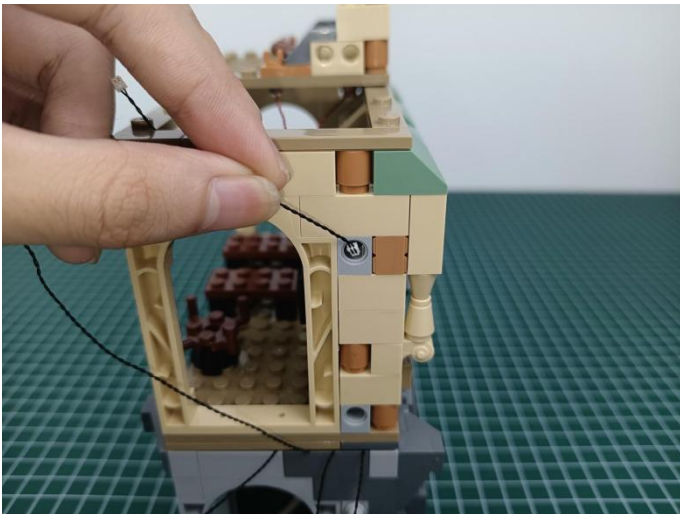


49

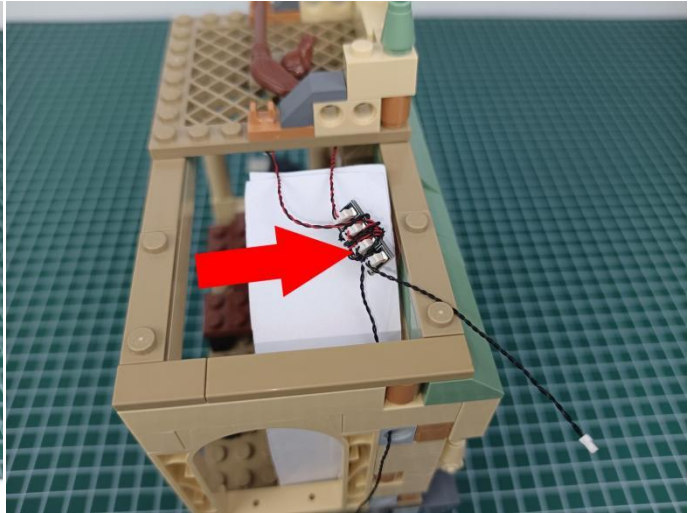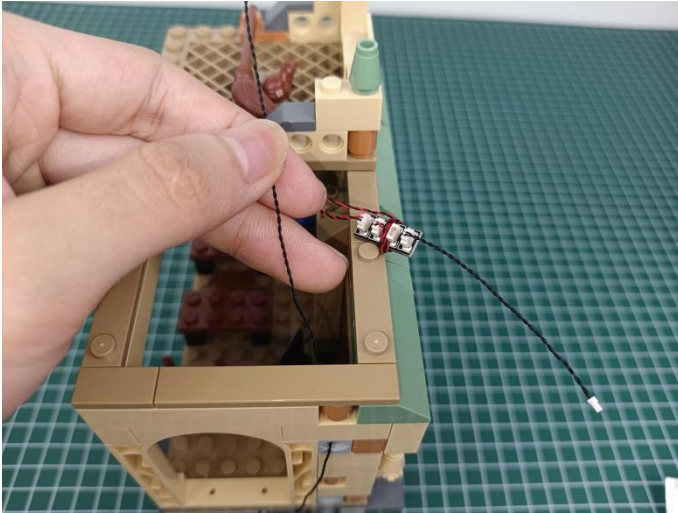

50

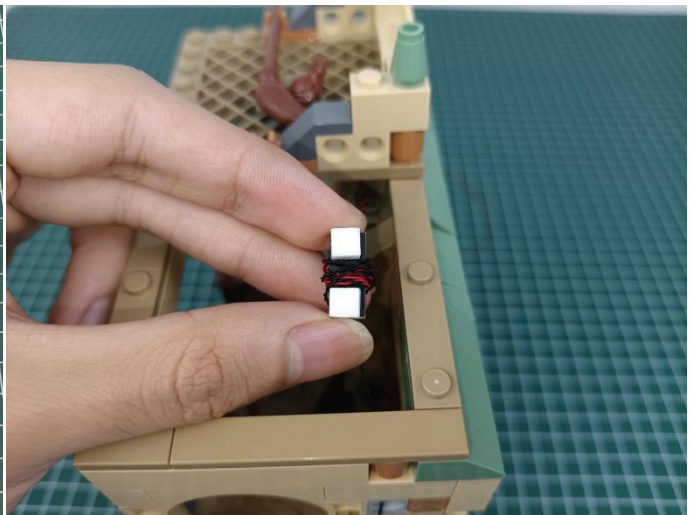


51

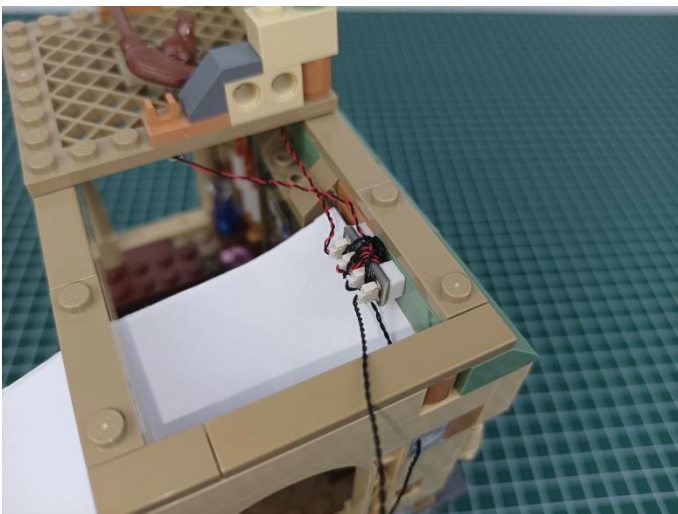



52



53

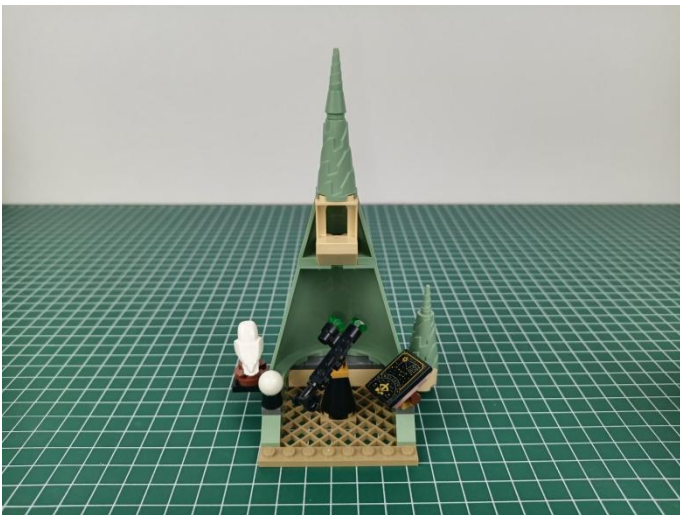


54

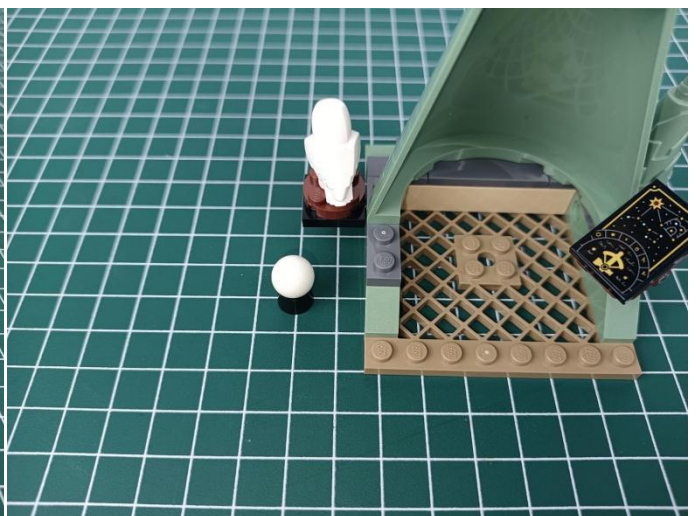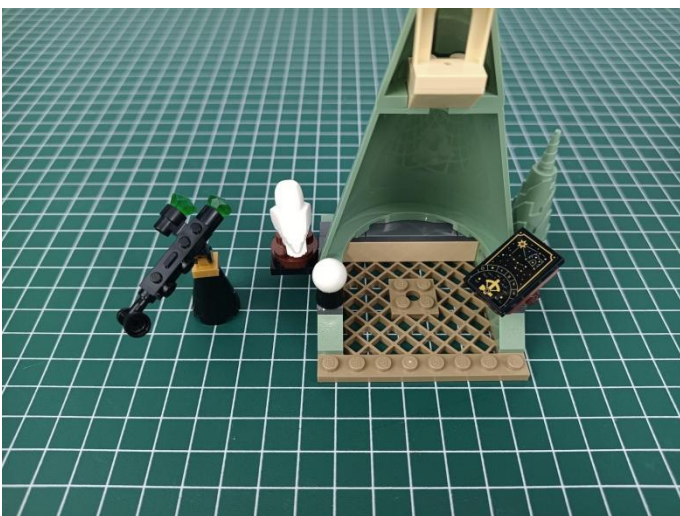


55




56

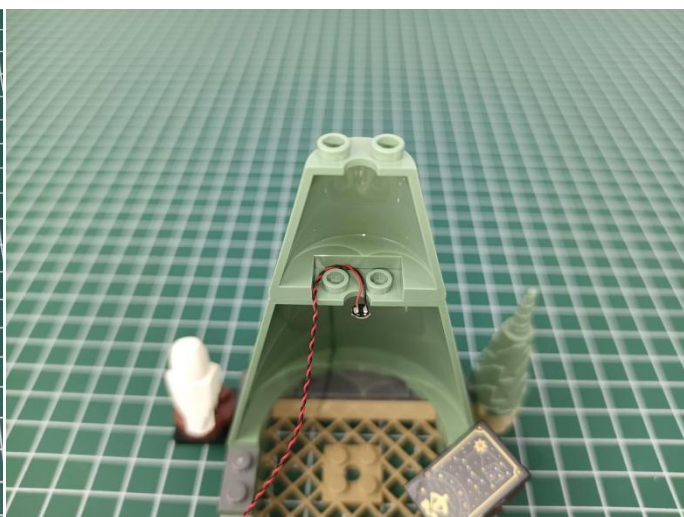



57

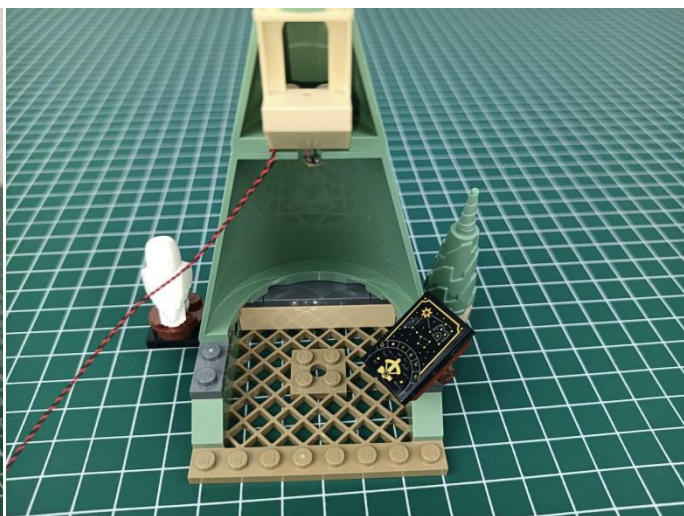



58

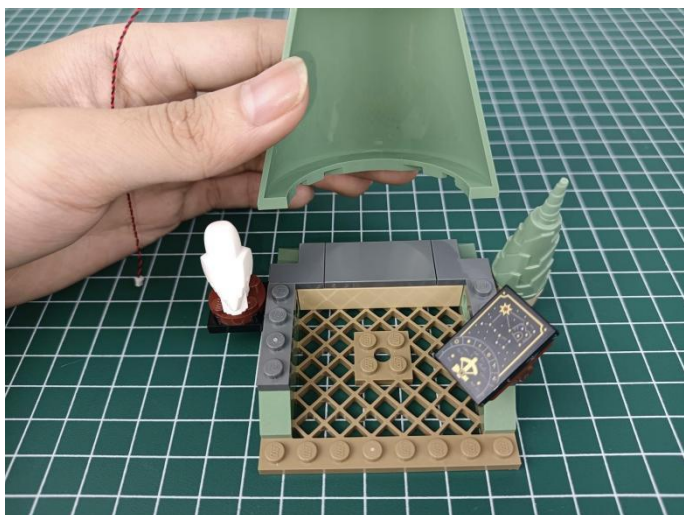



59

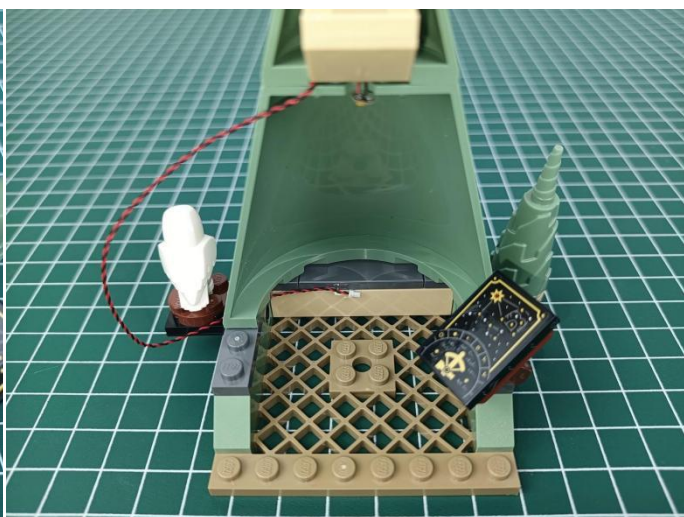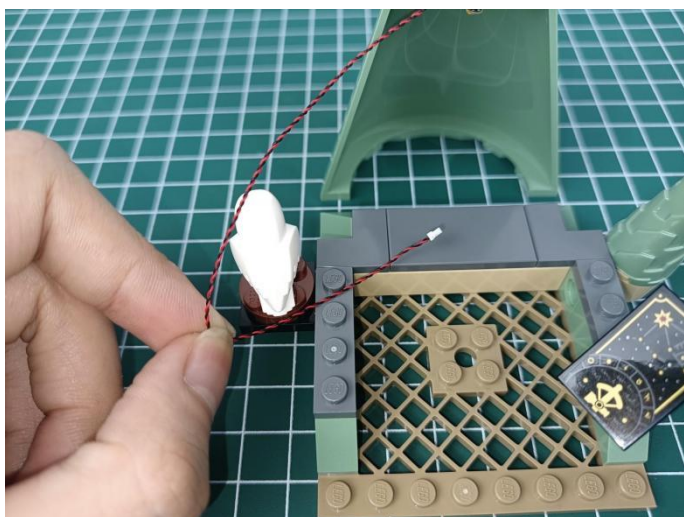


60

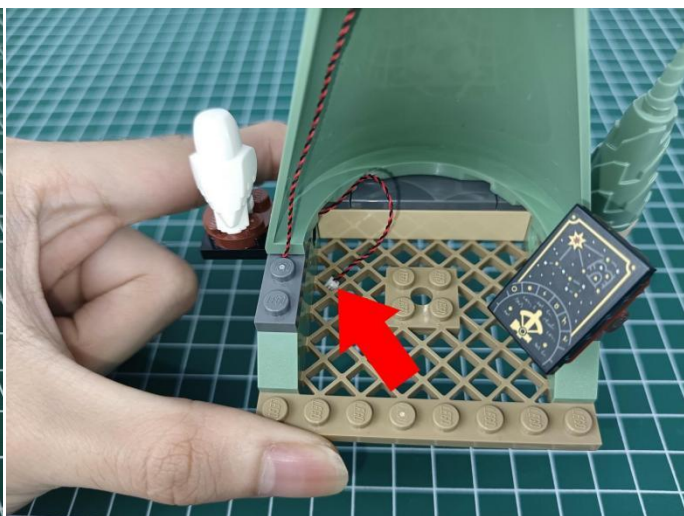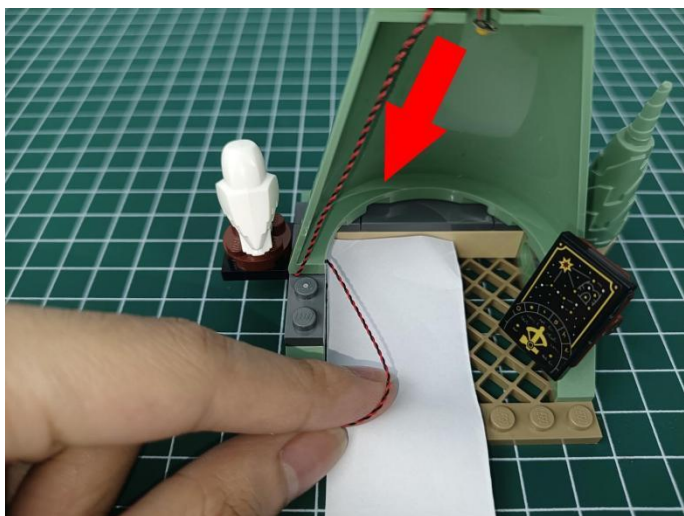


61

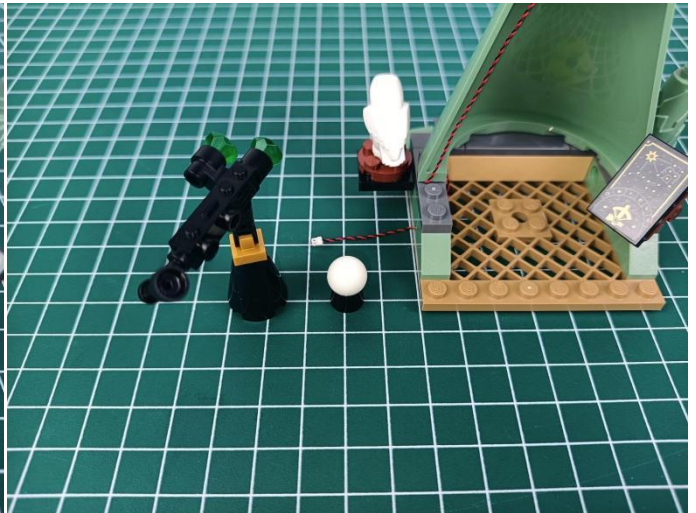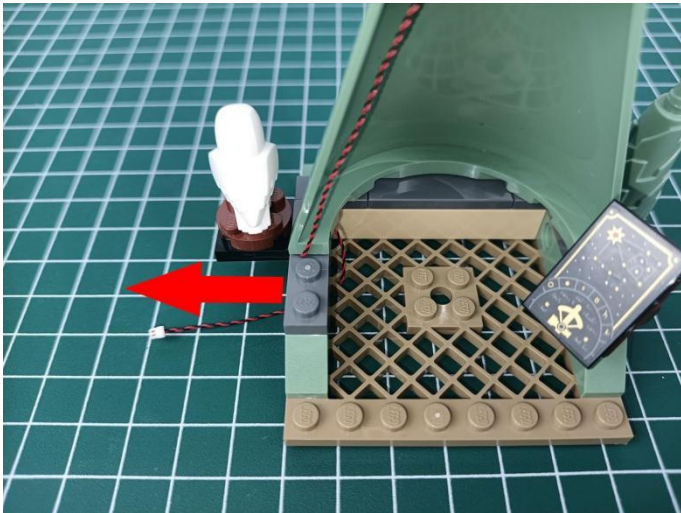

62

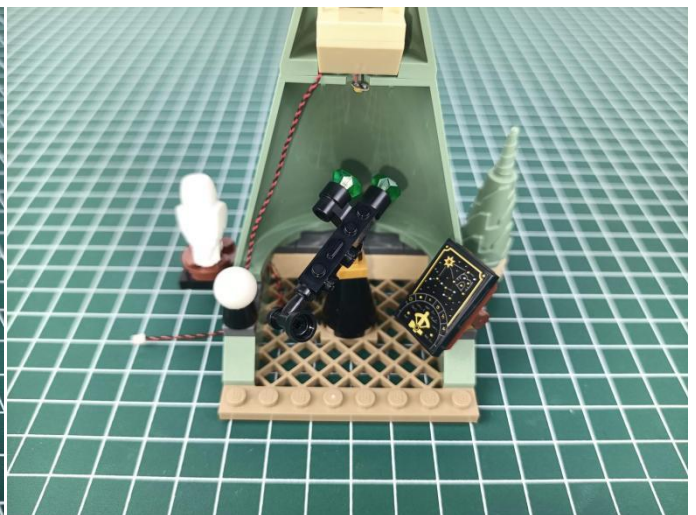



63

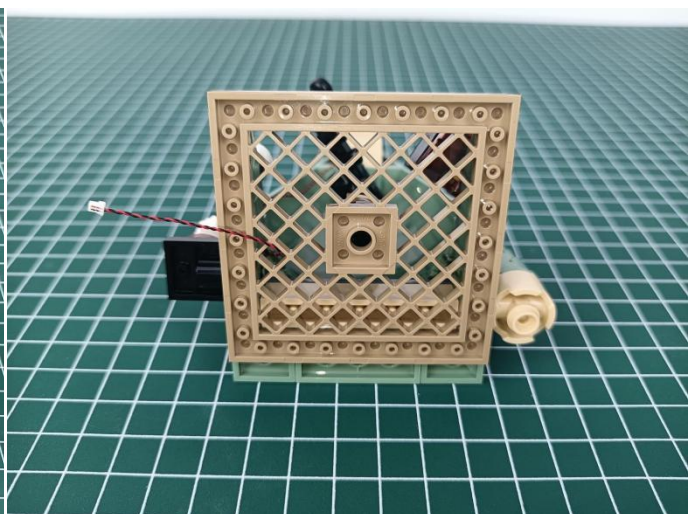


64





65

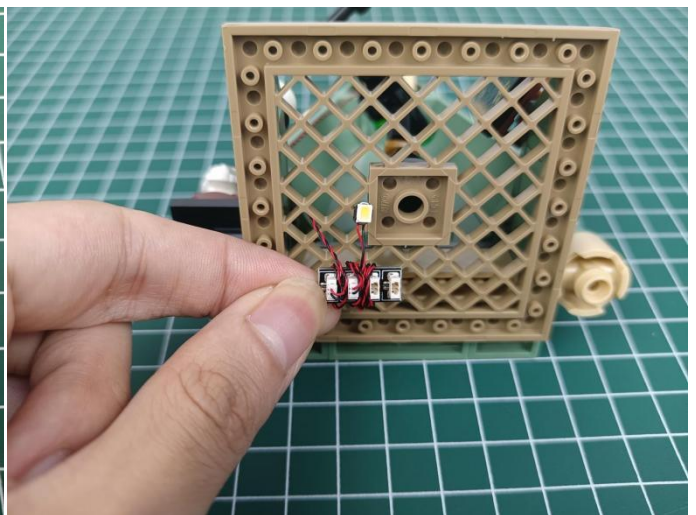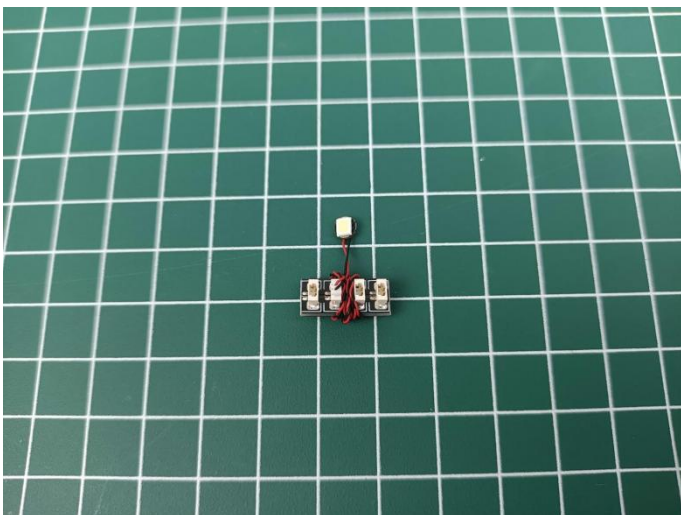


66

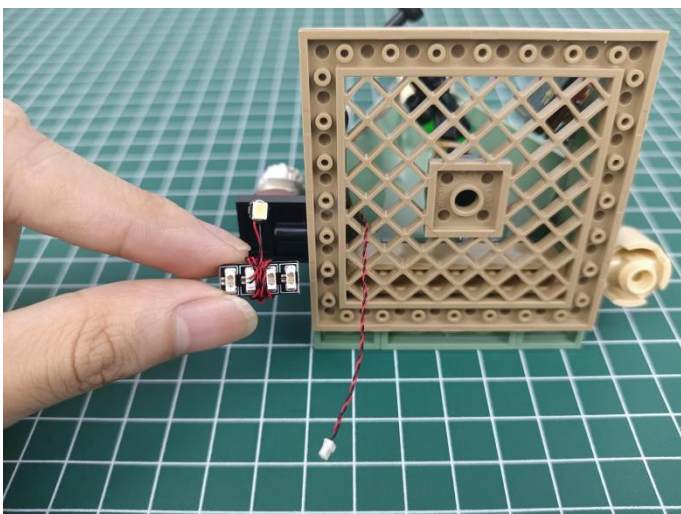



67

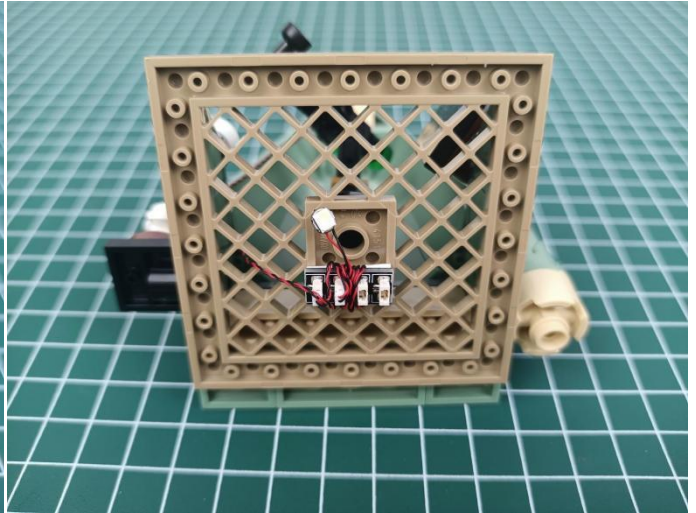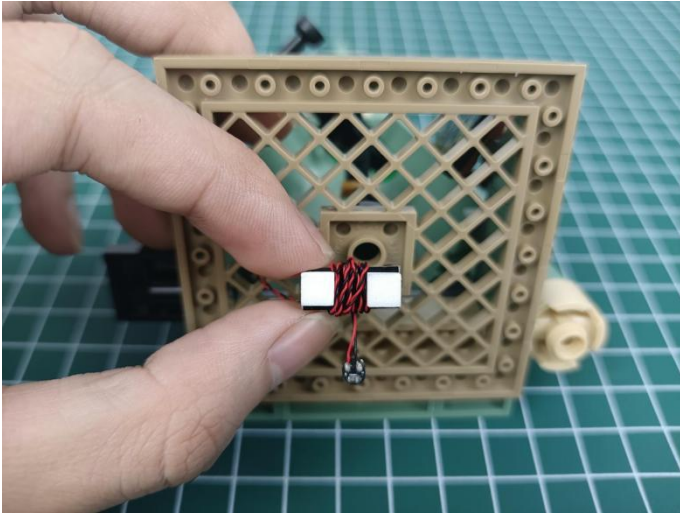



68

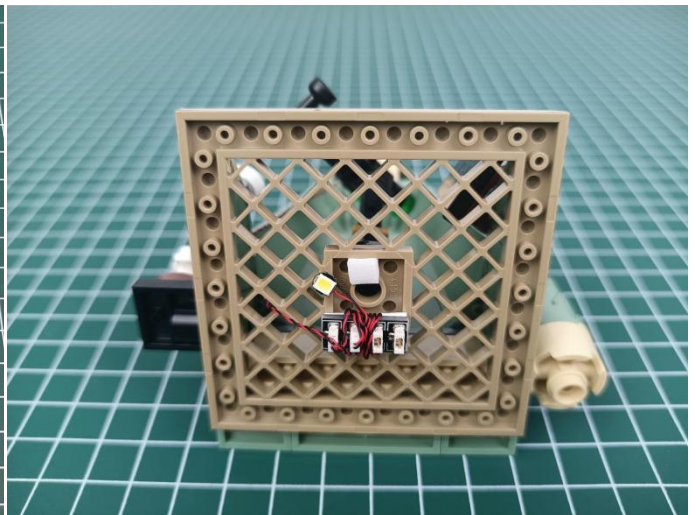



69

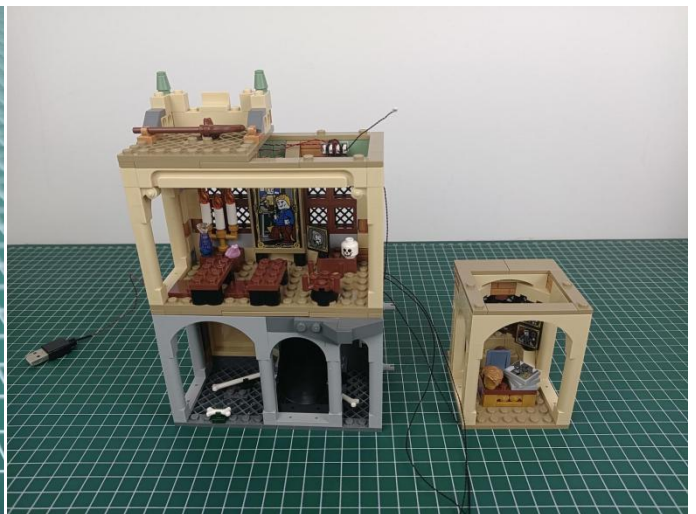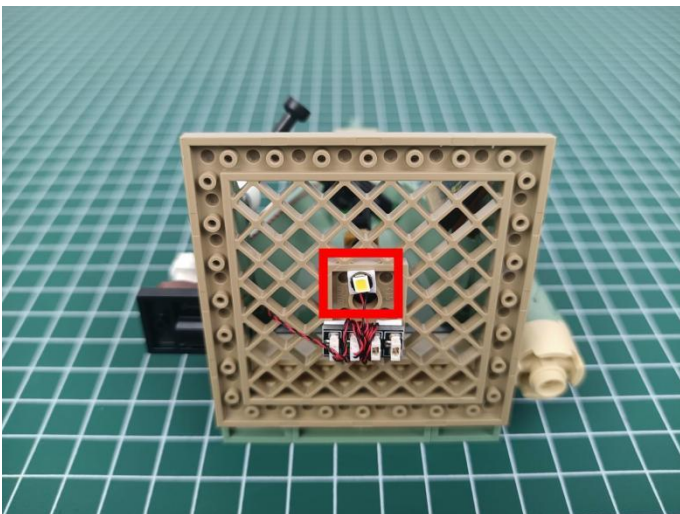


70

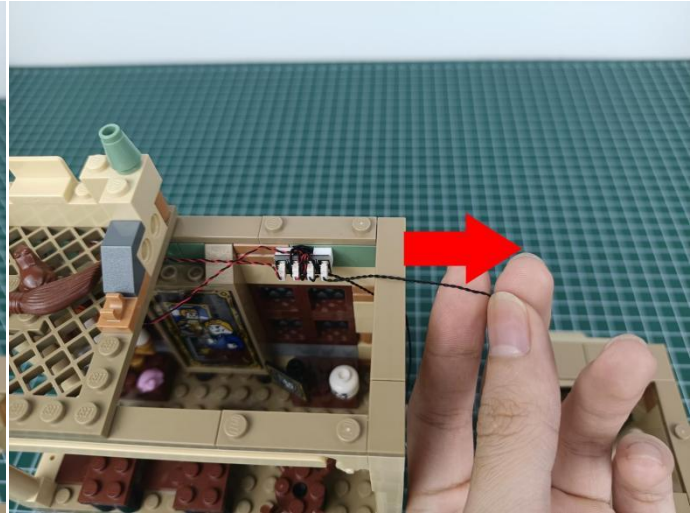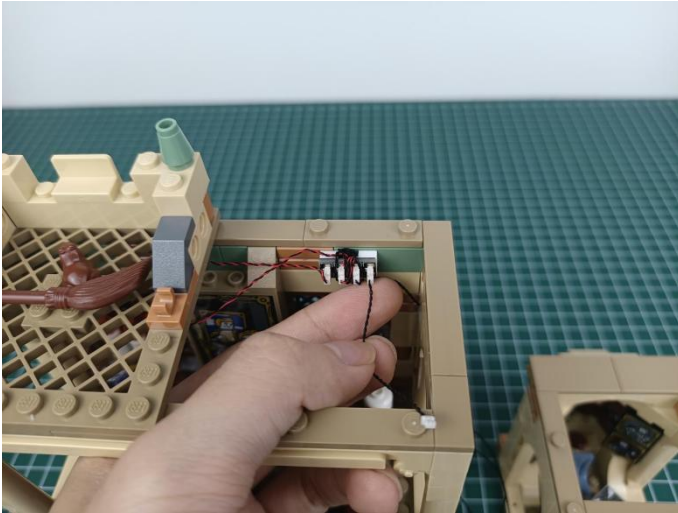



71

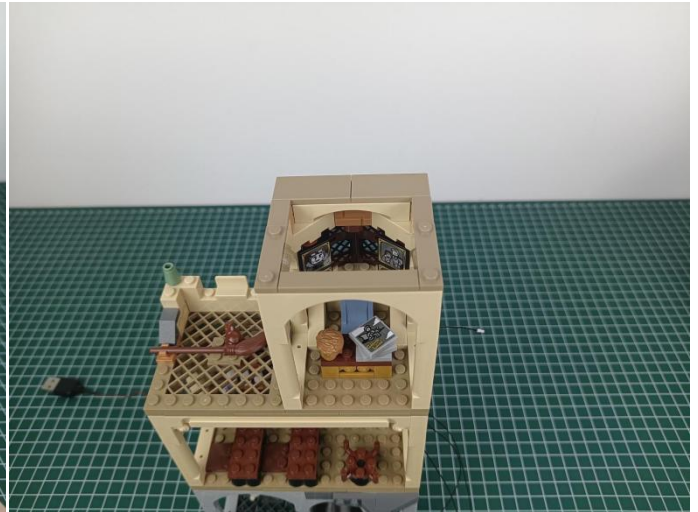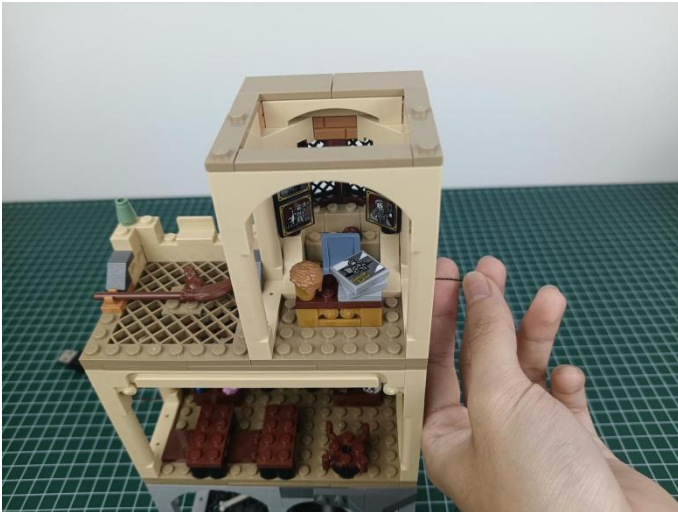



72

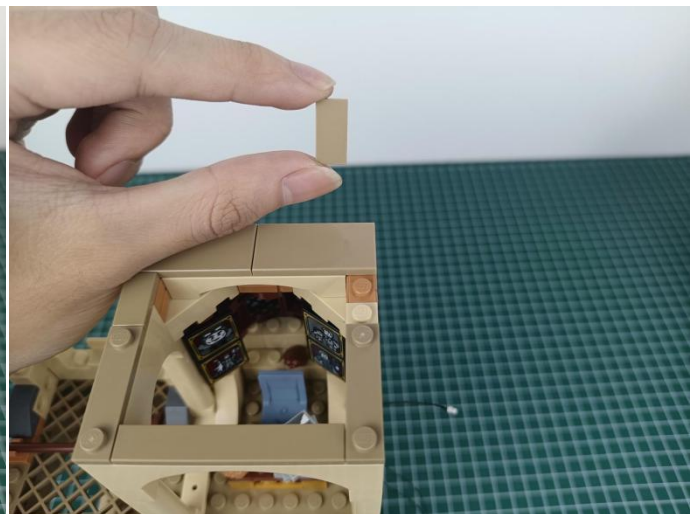


73

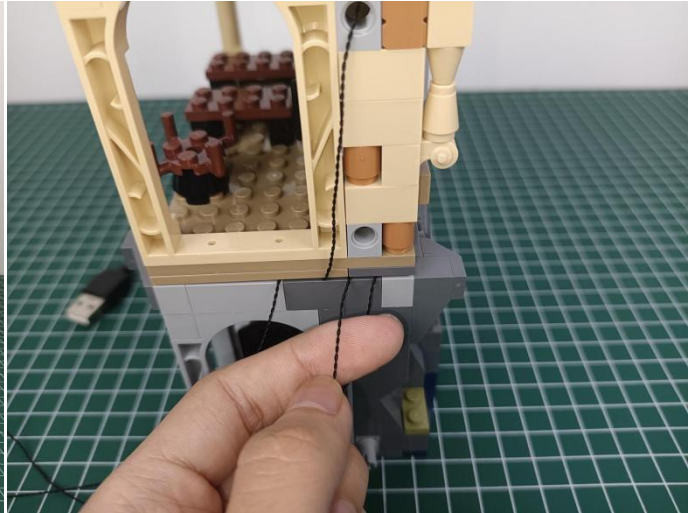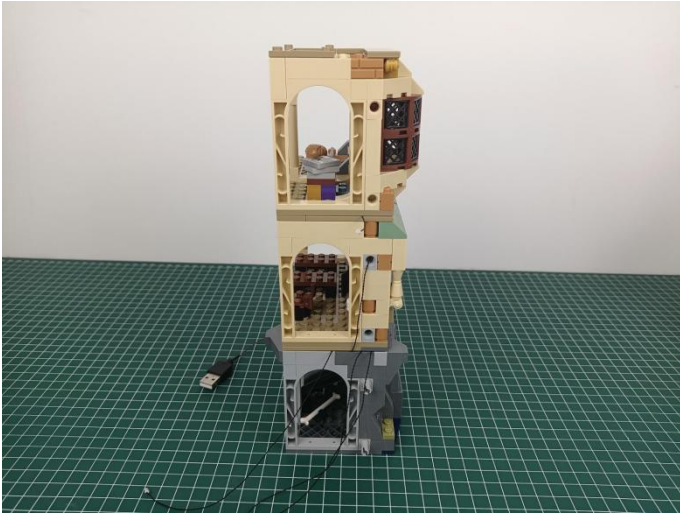



74

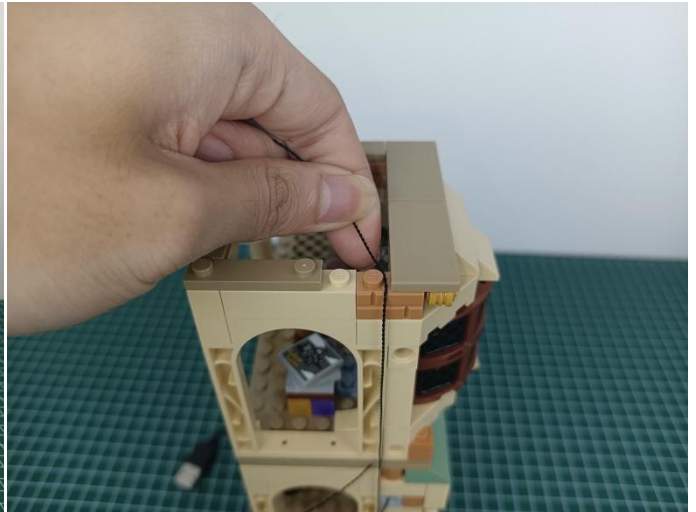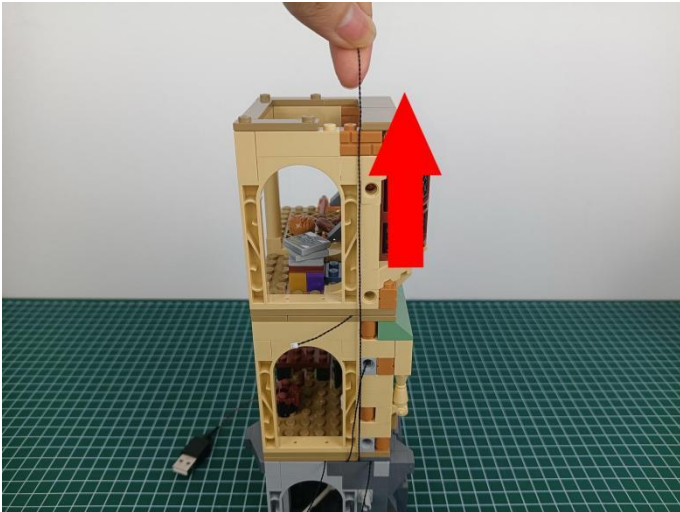


75

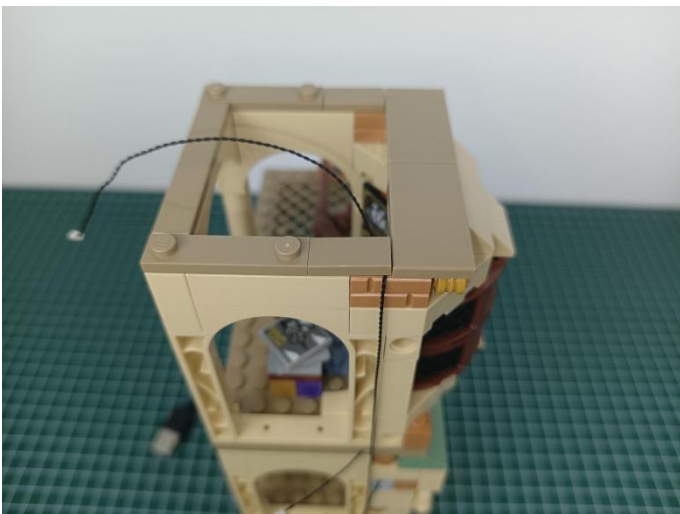

76

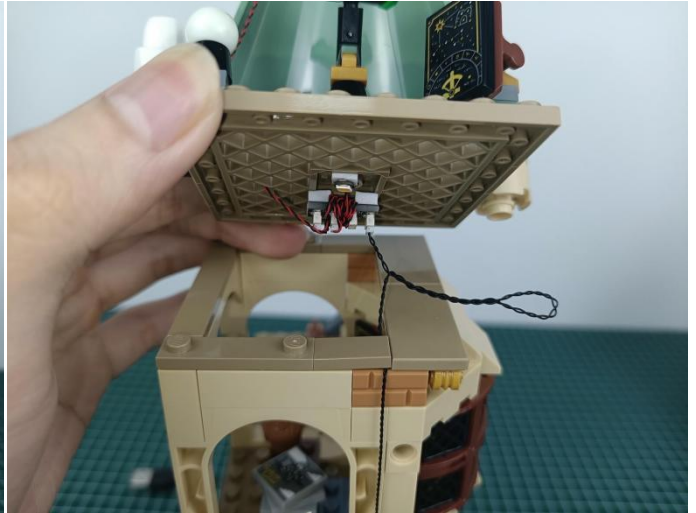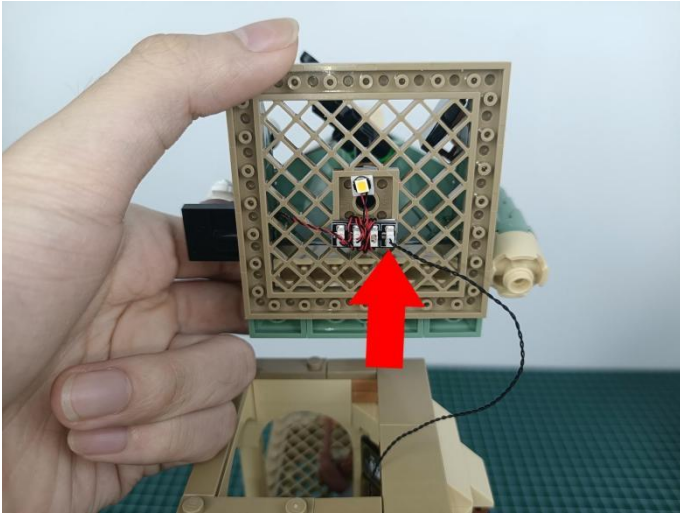


77

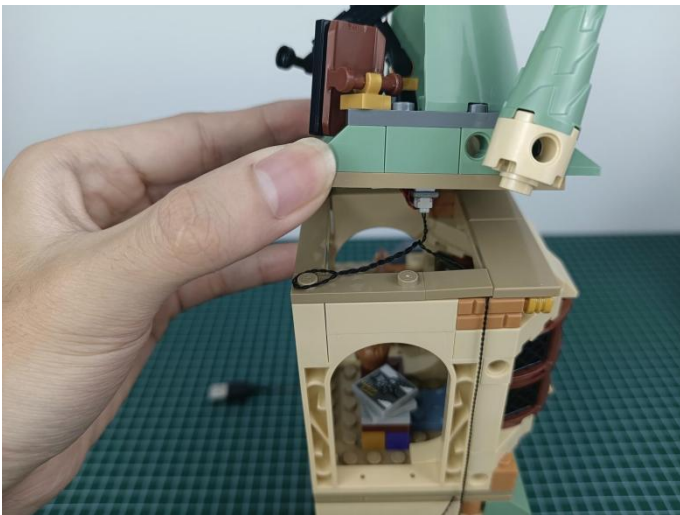


78





79

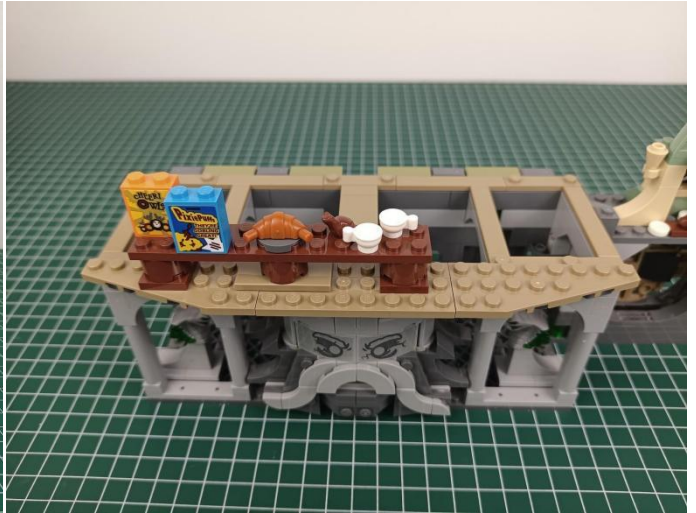



80

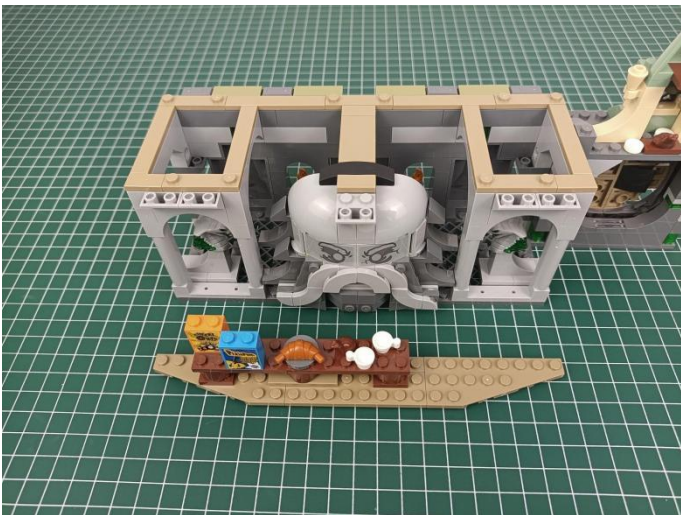


81

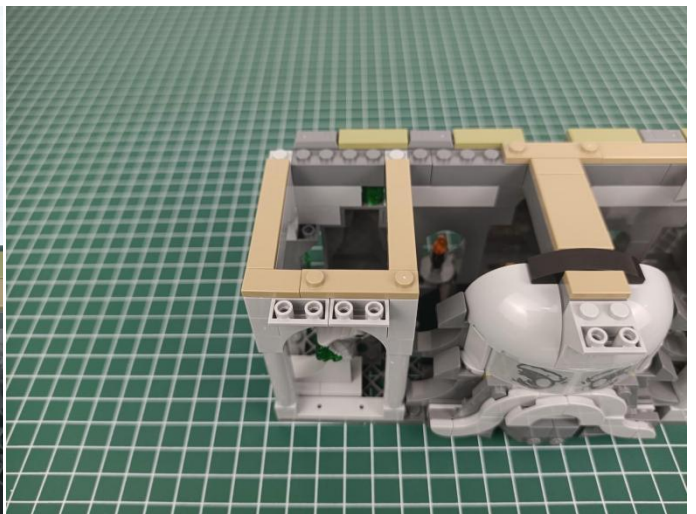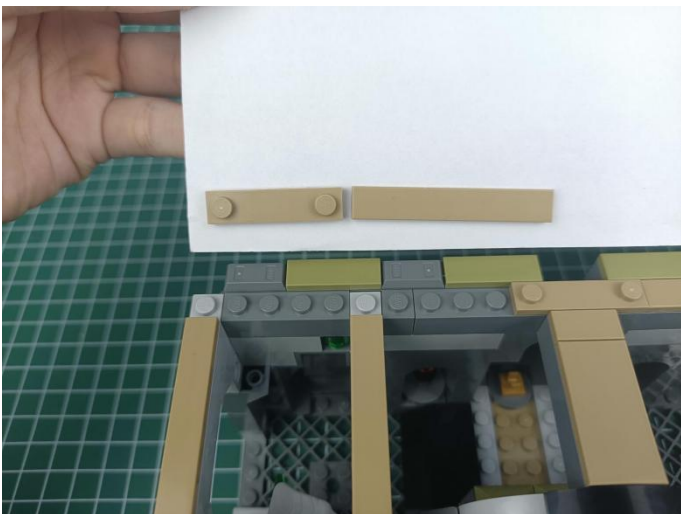



82

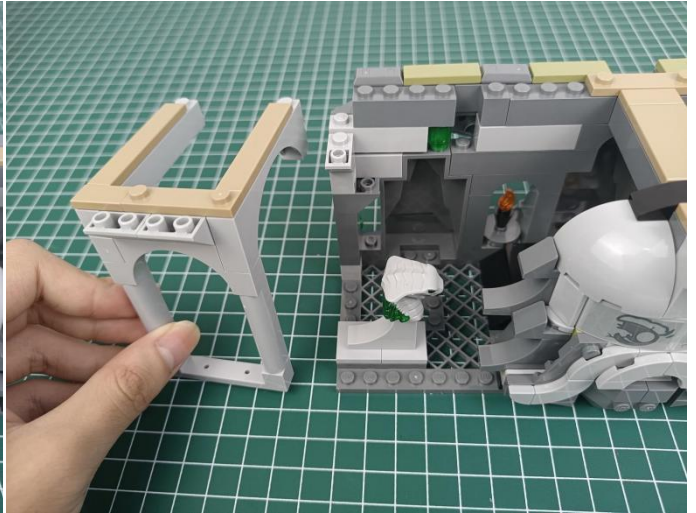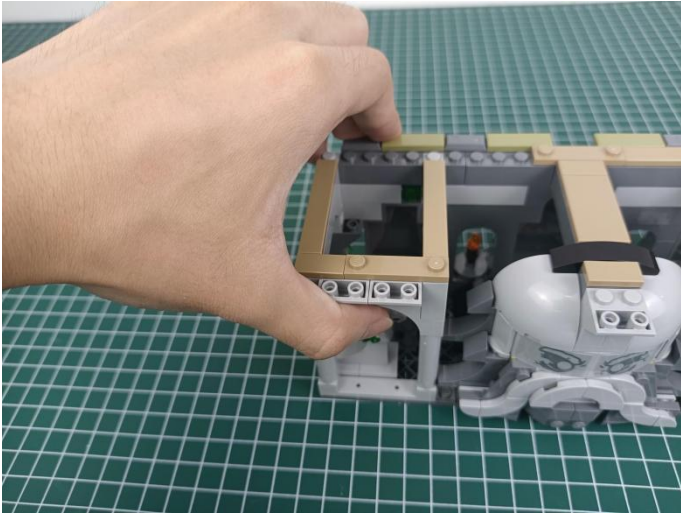



83

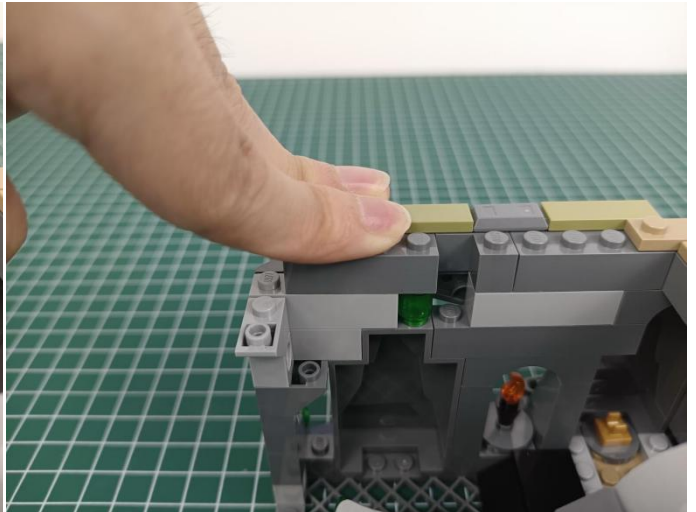


84

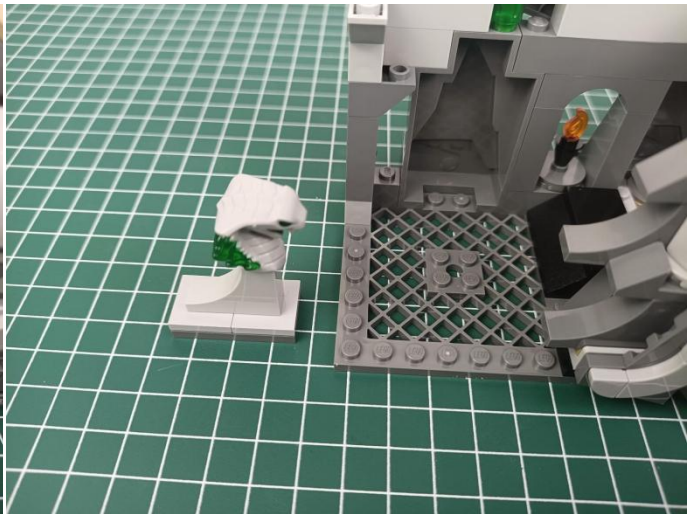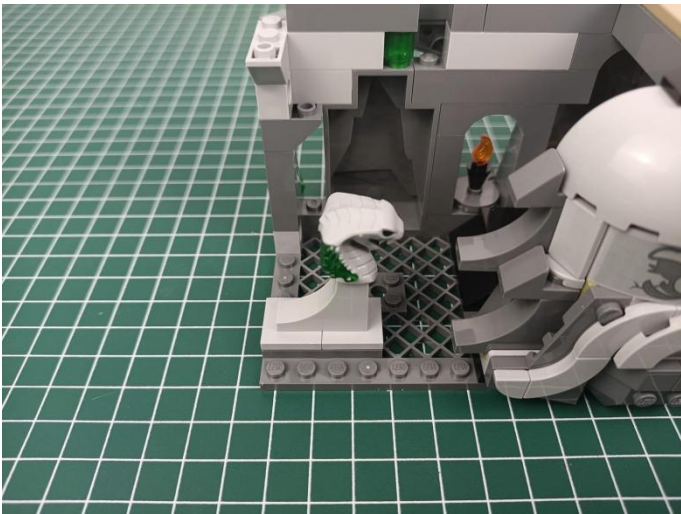


85

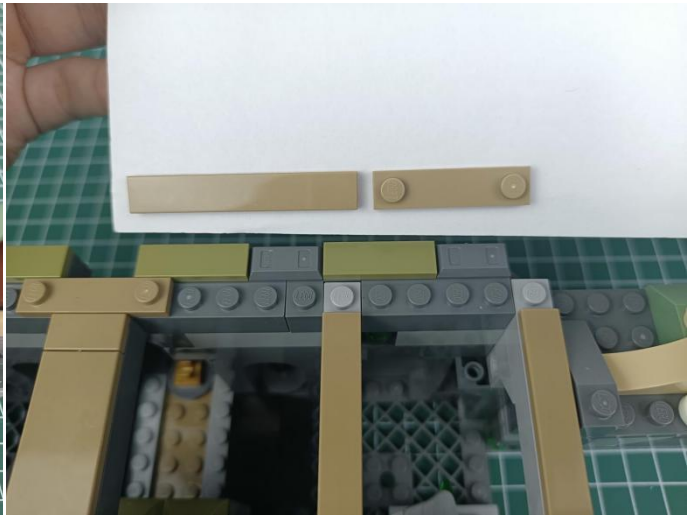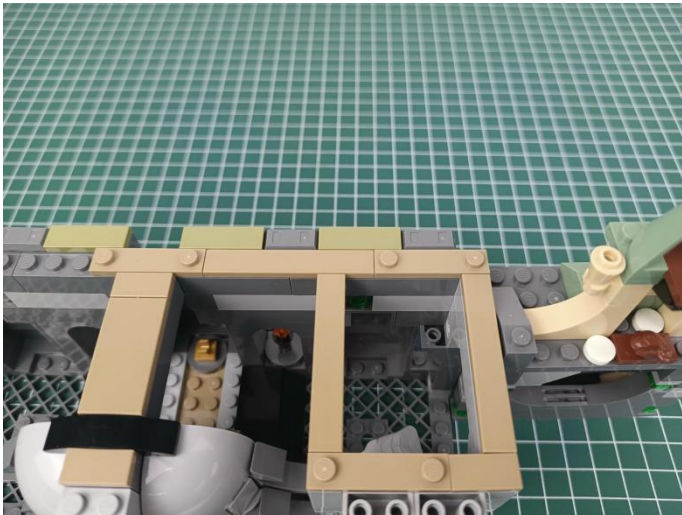



86

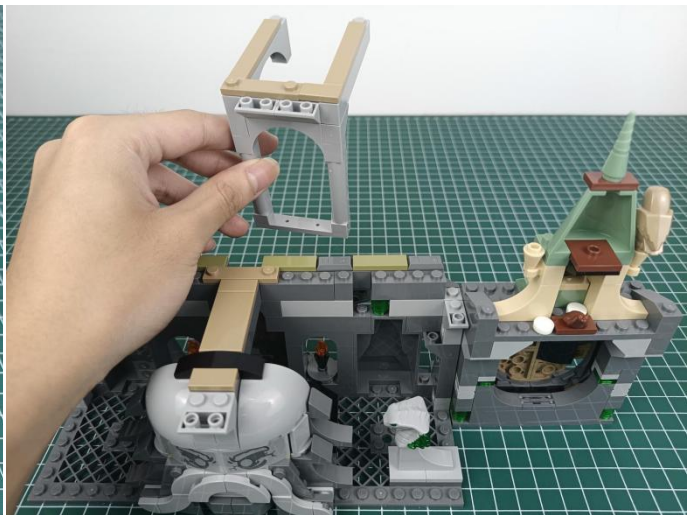


87

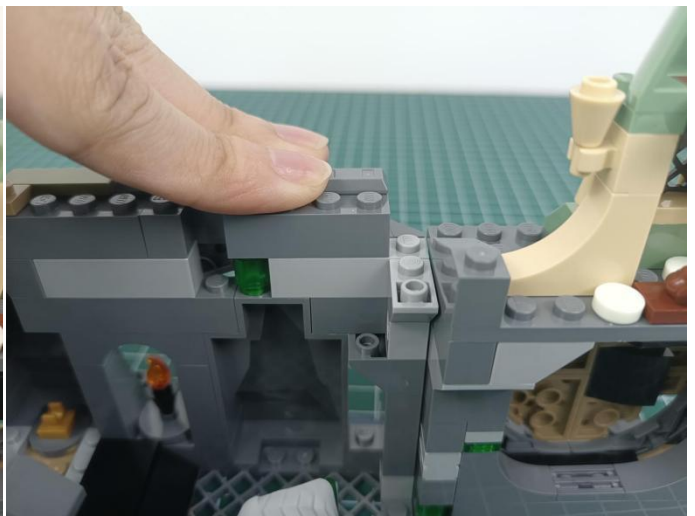



88

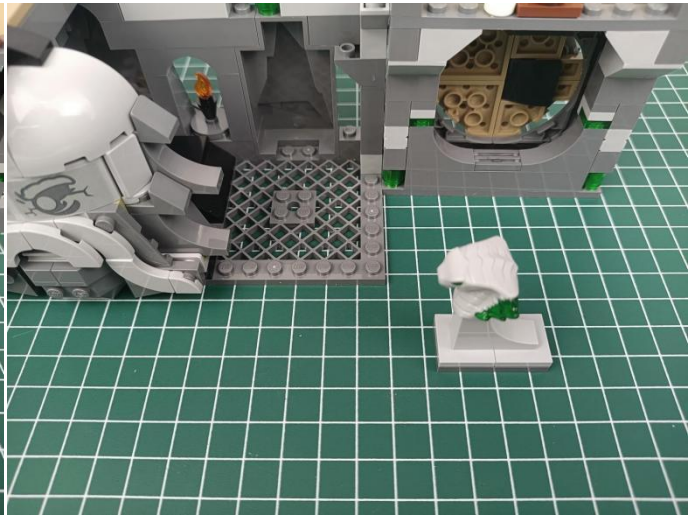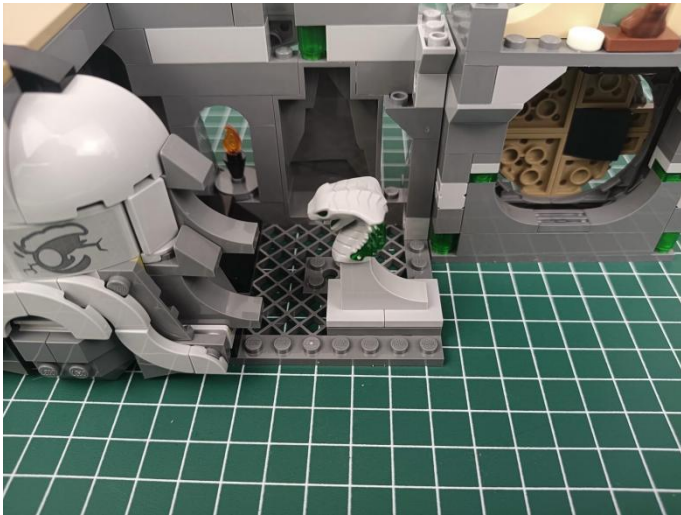



89

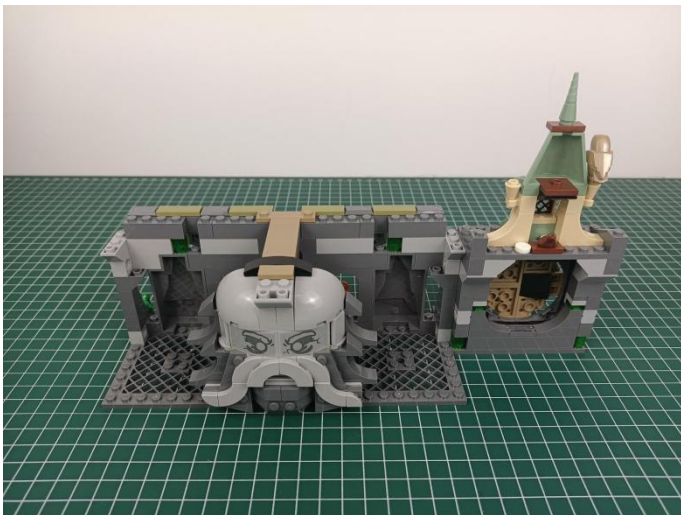


90

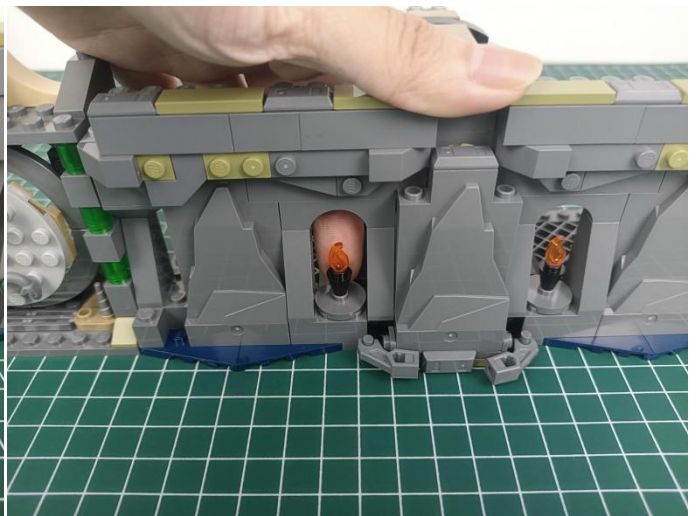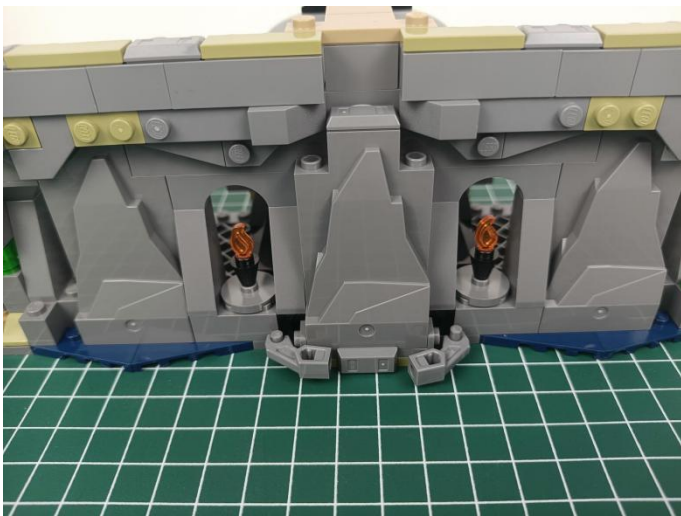

91

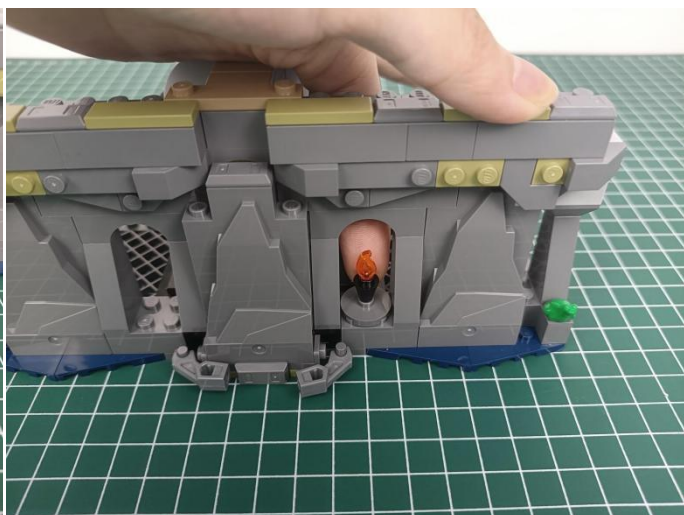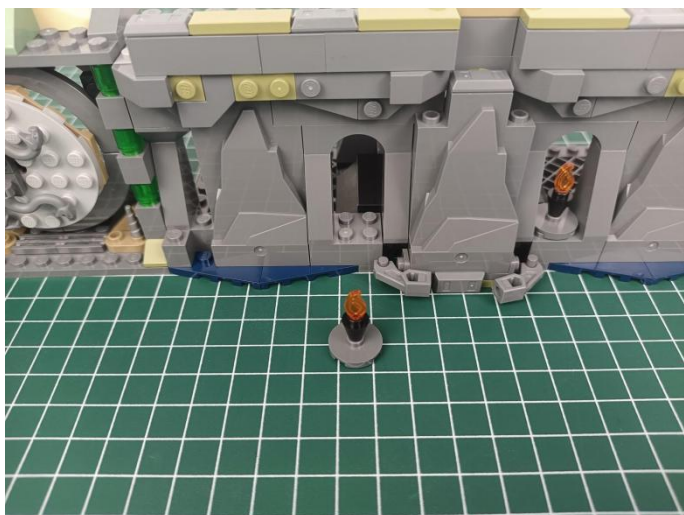


92

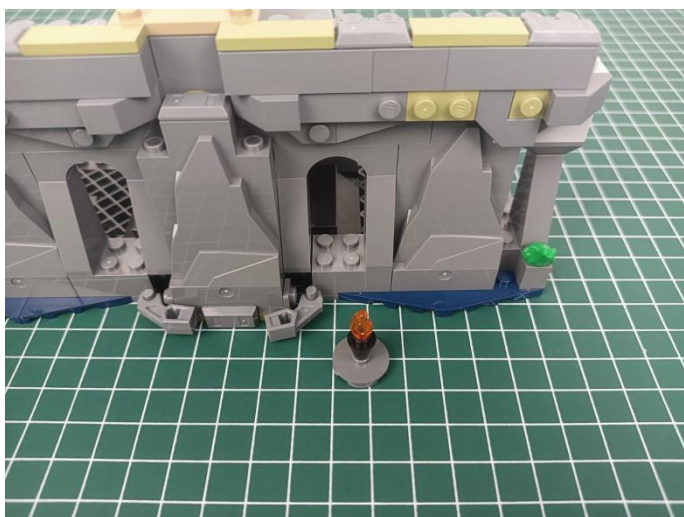

93




94

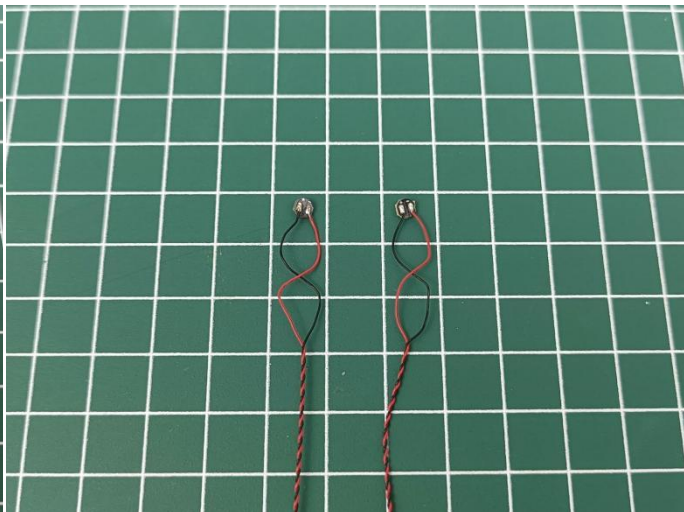


95




96

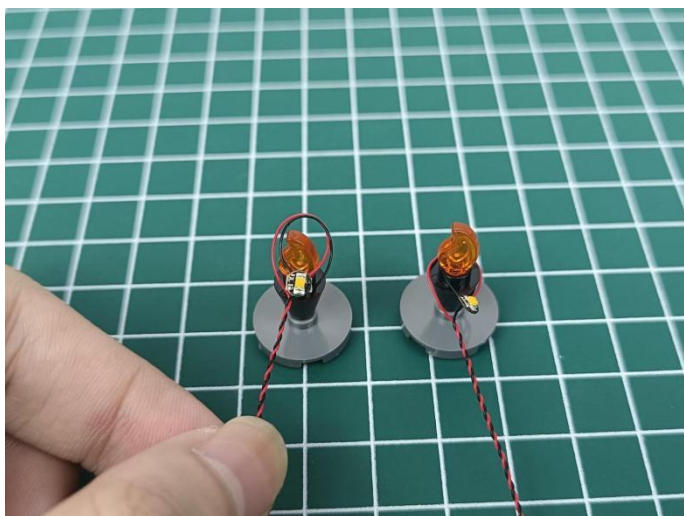



97

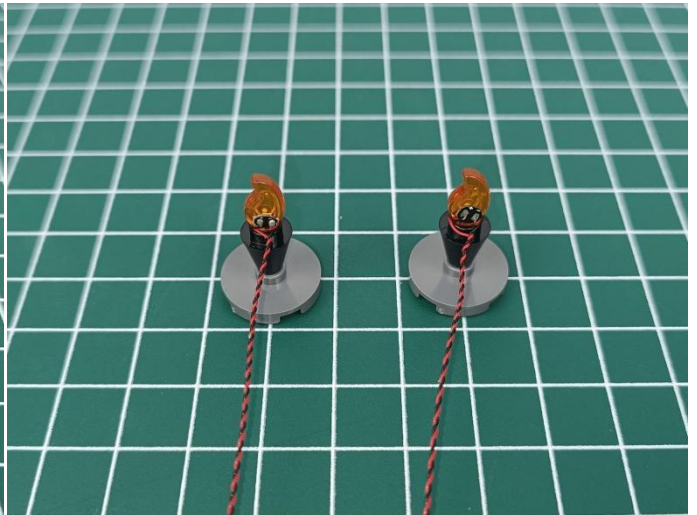



98

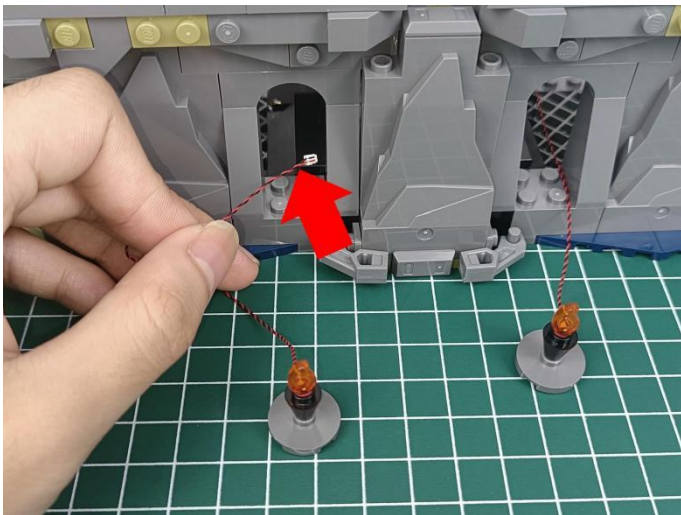



99

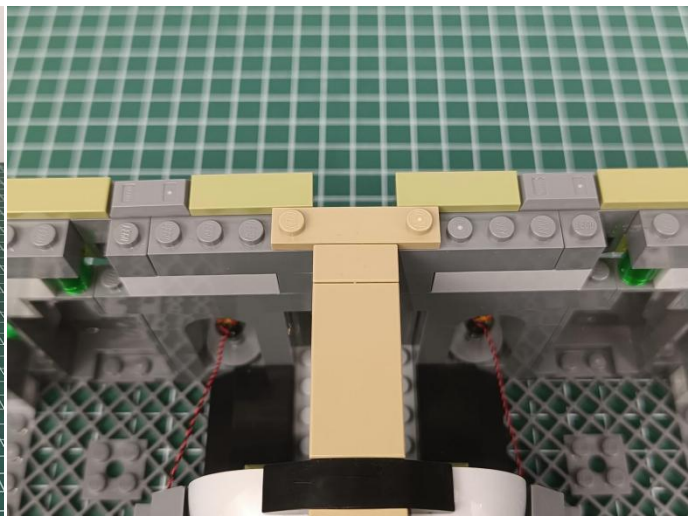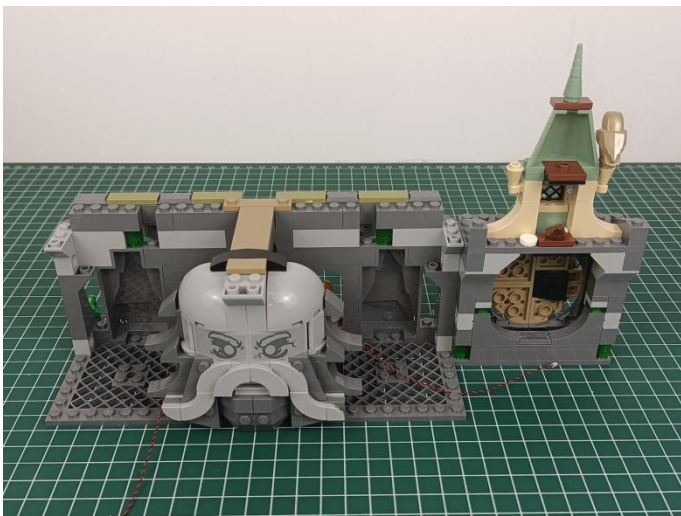



100

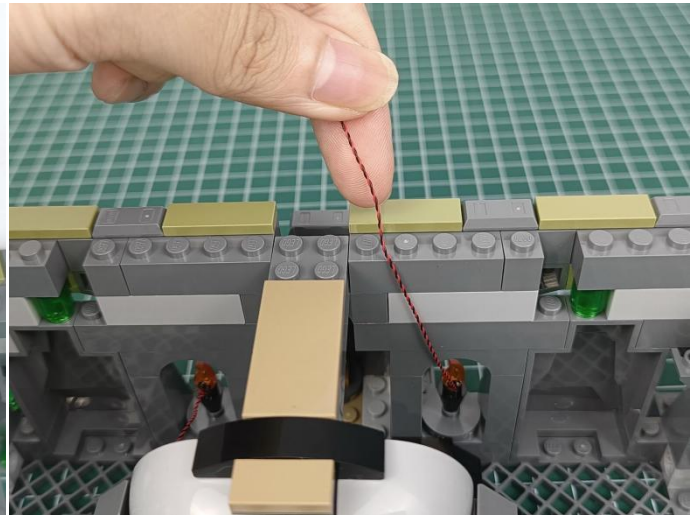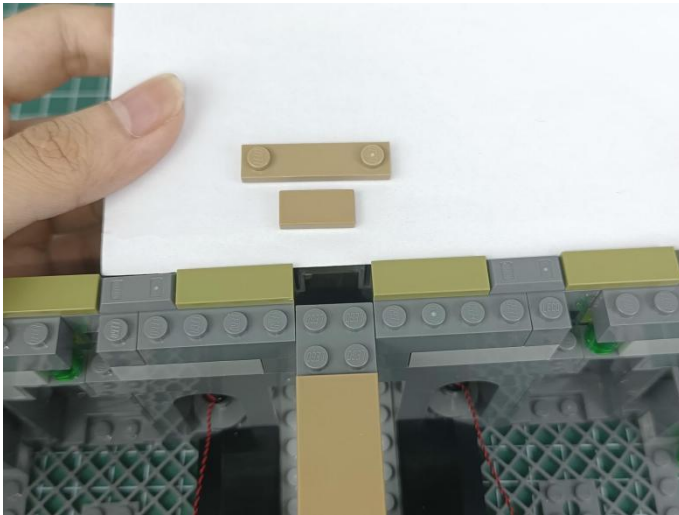



101

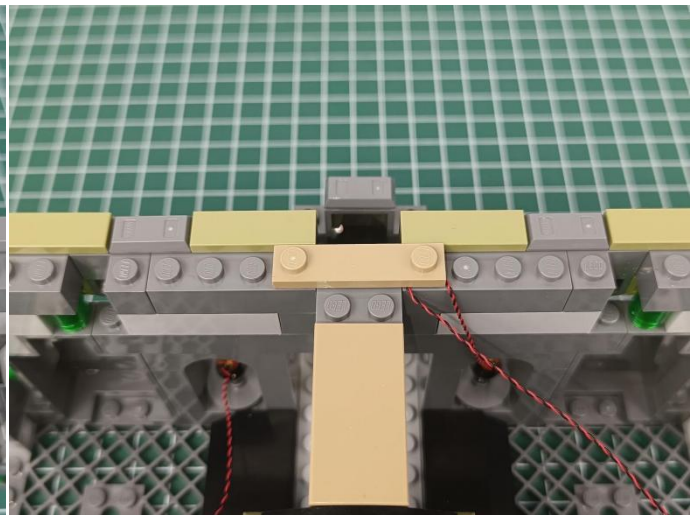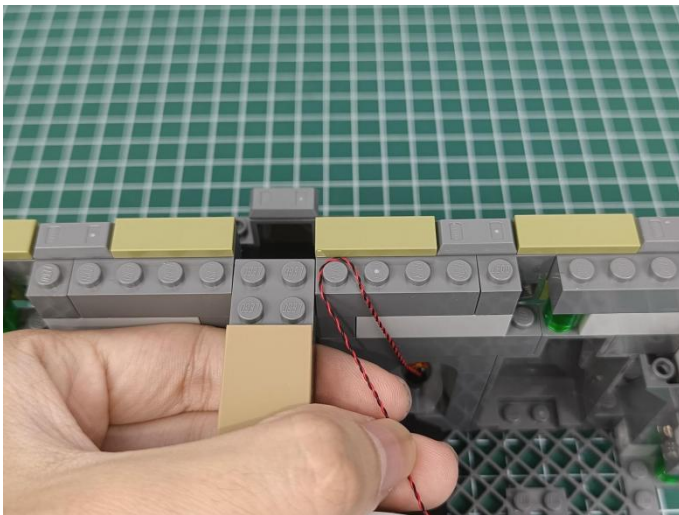

102

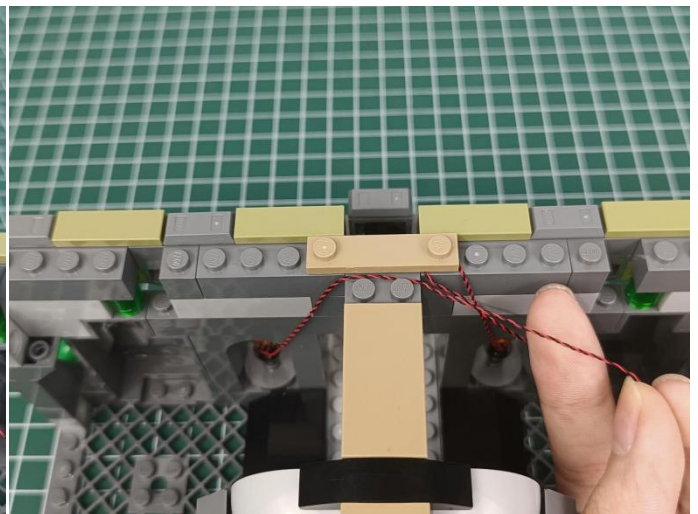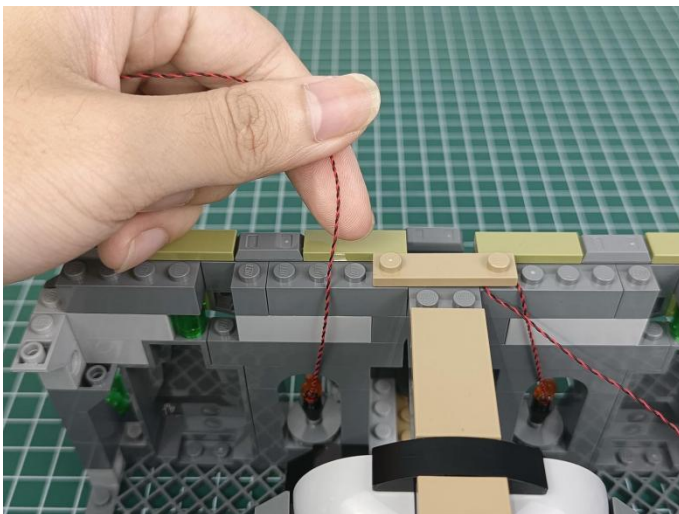



103

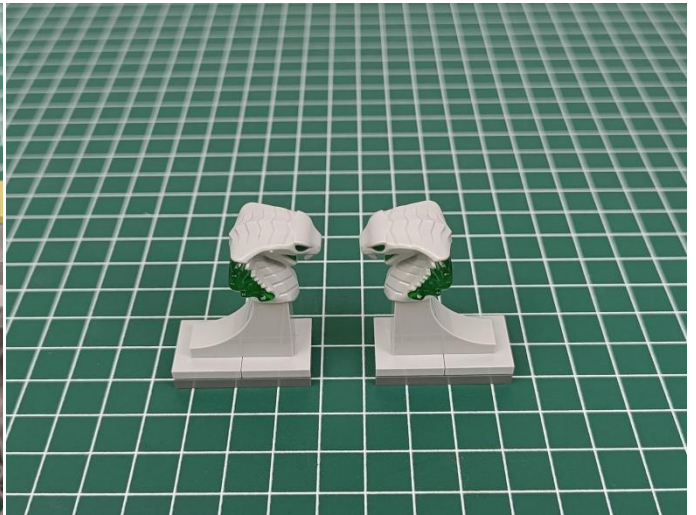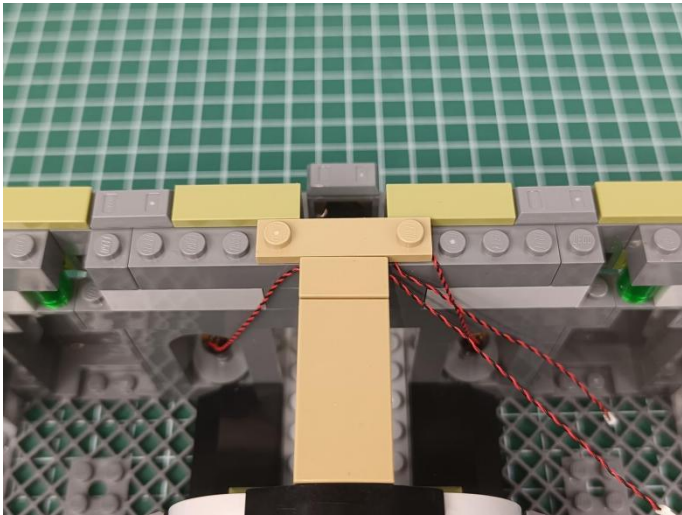

104



105

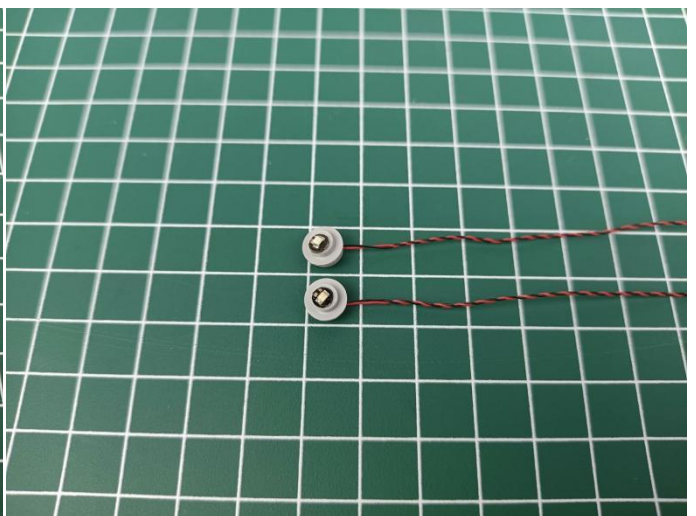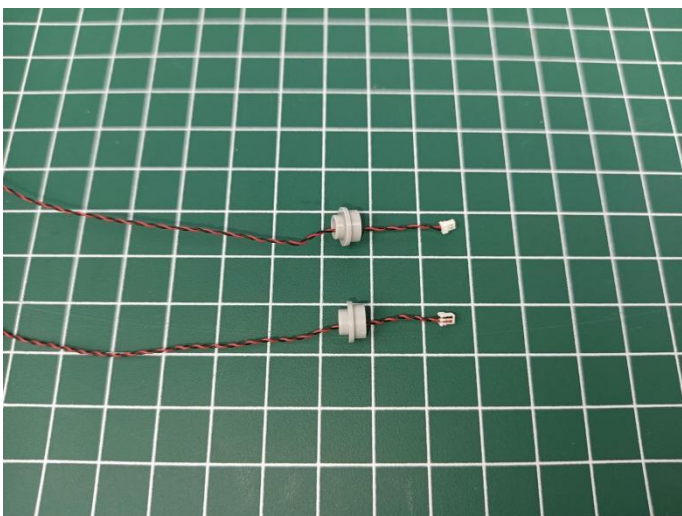

106

Tips

The plate without slit:

The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work.




The plate with slit:

The plate with slit:



The wire has enough space to avoid being squeezed and avoid with longer service life and more stable effect.





The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormal heat during installation.

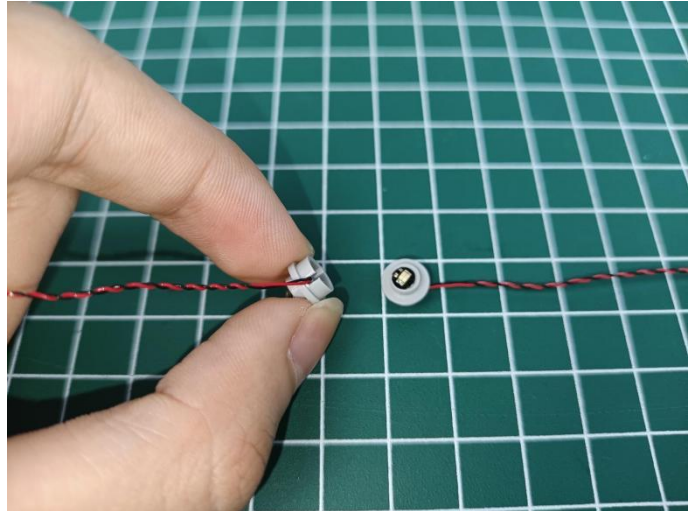



107

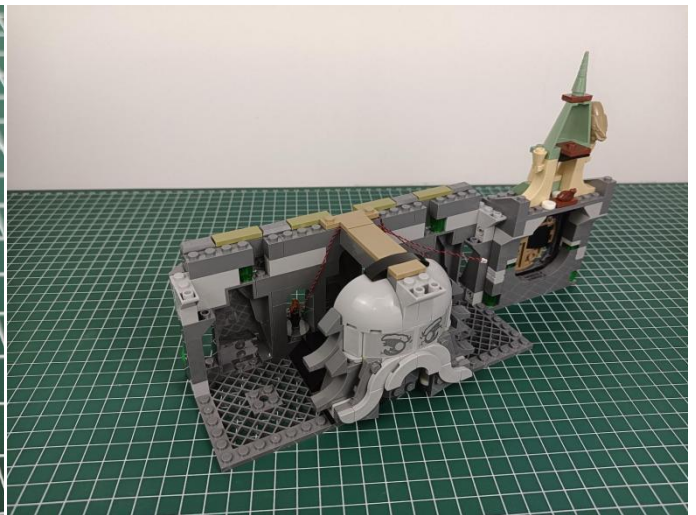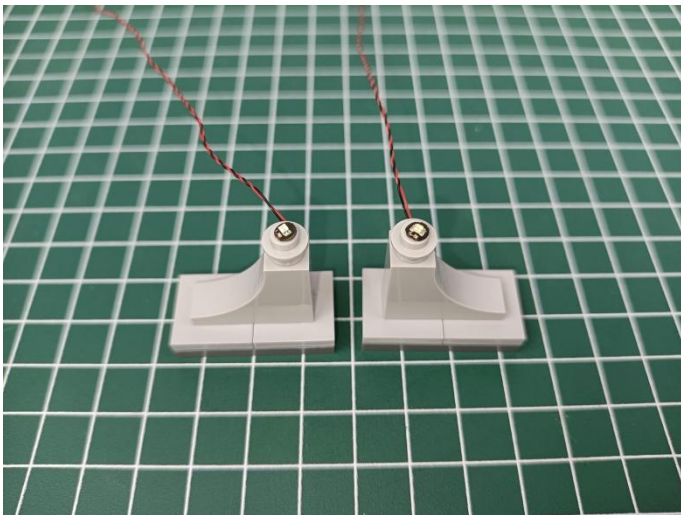



108

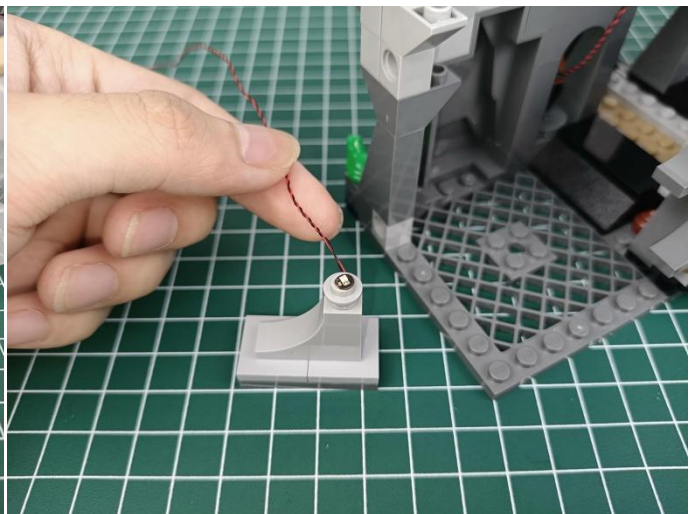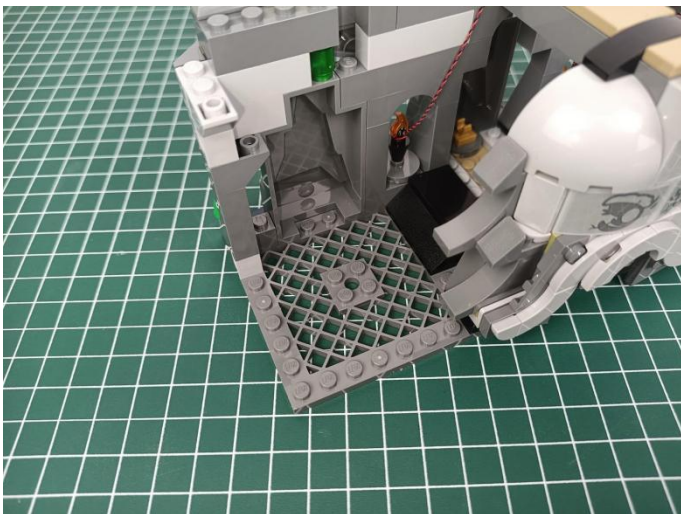



109

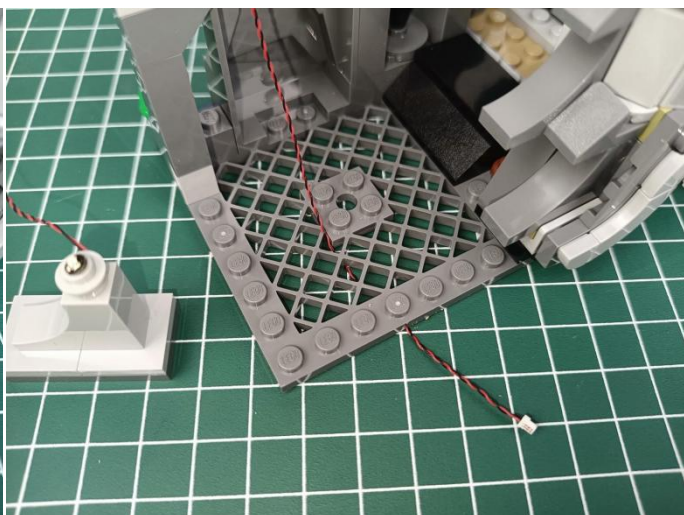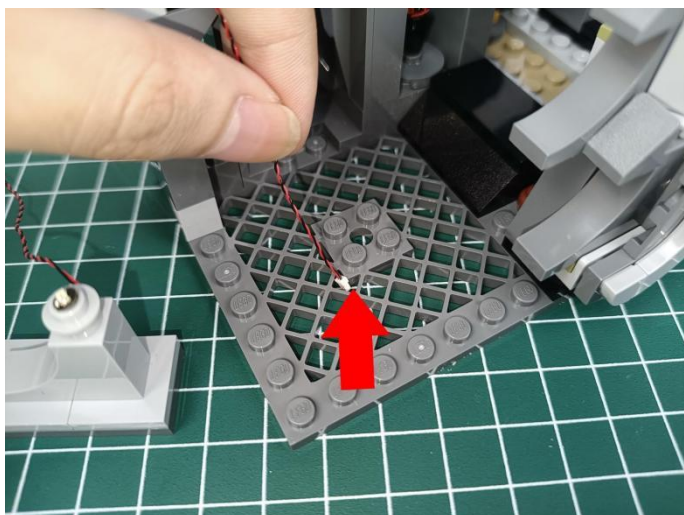



110

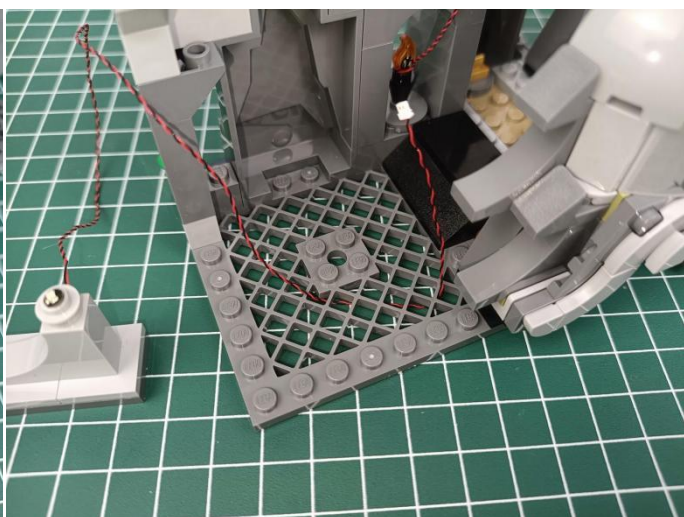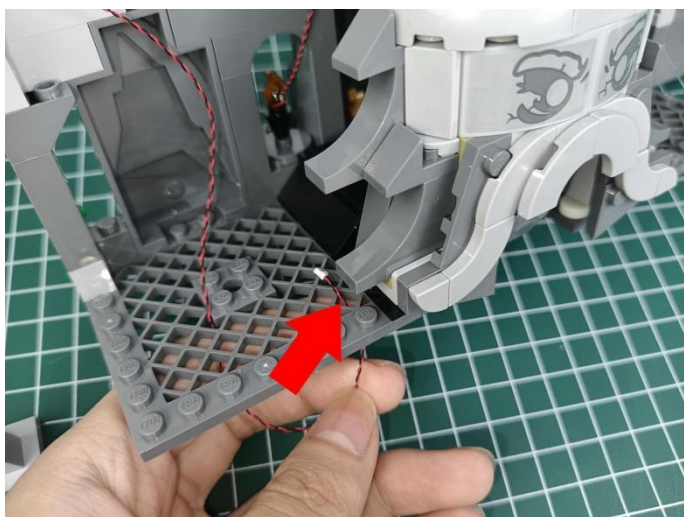



111

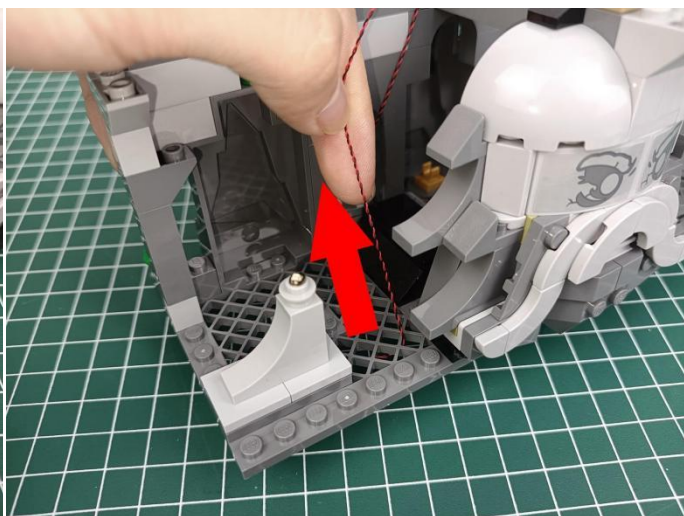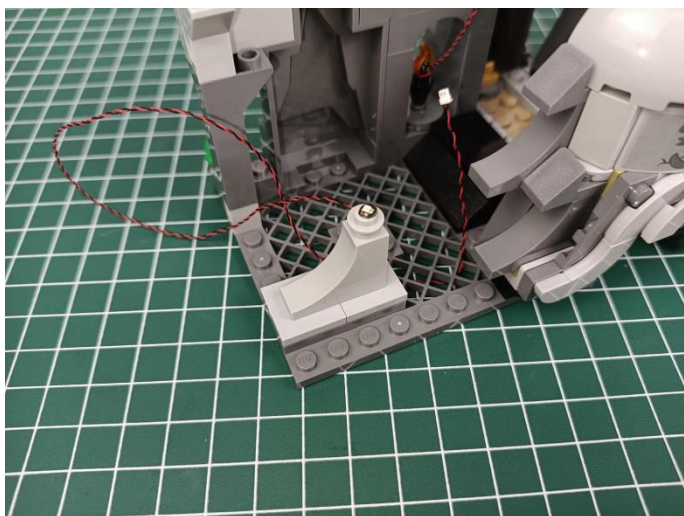



112

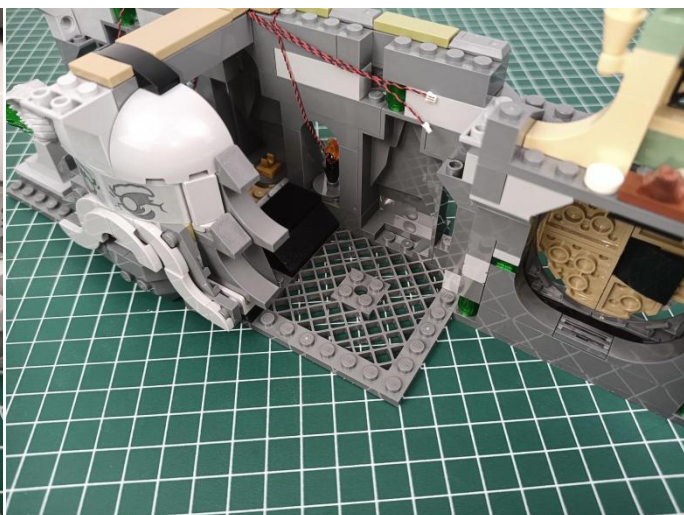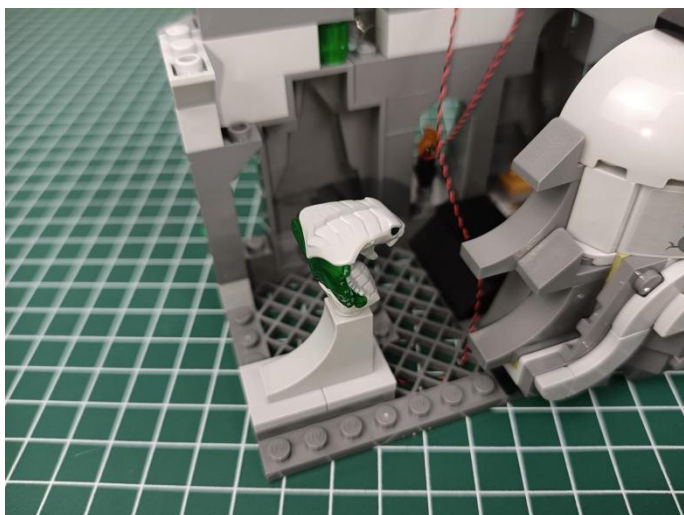



113

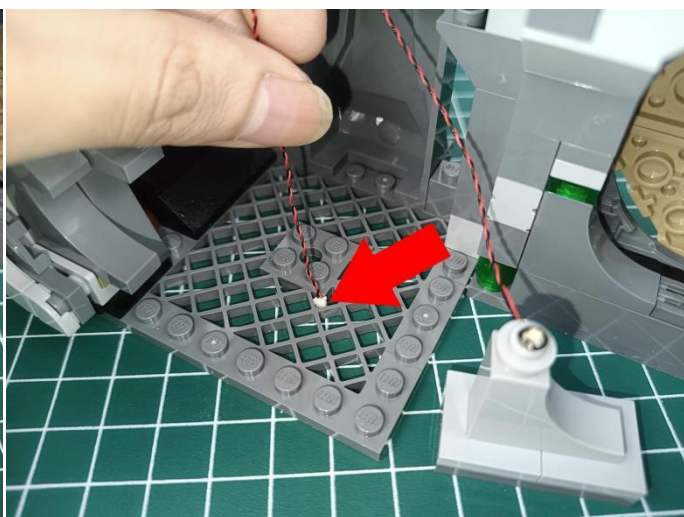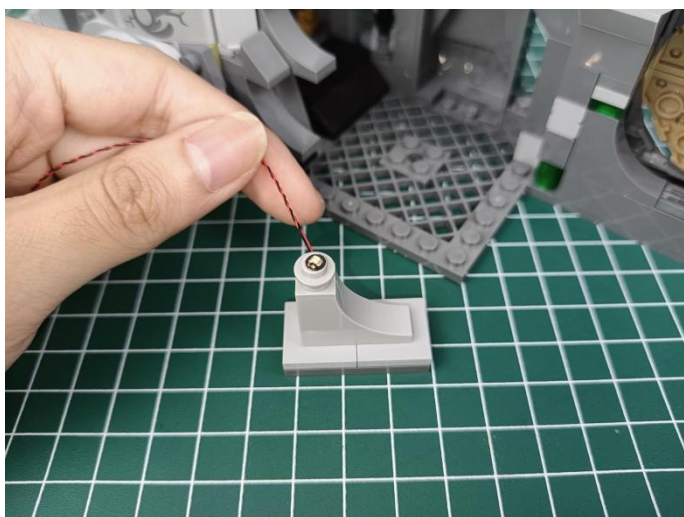



114

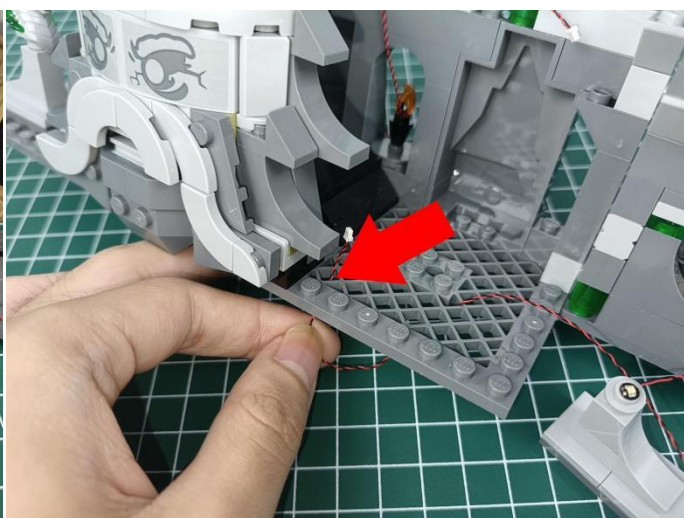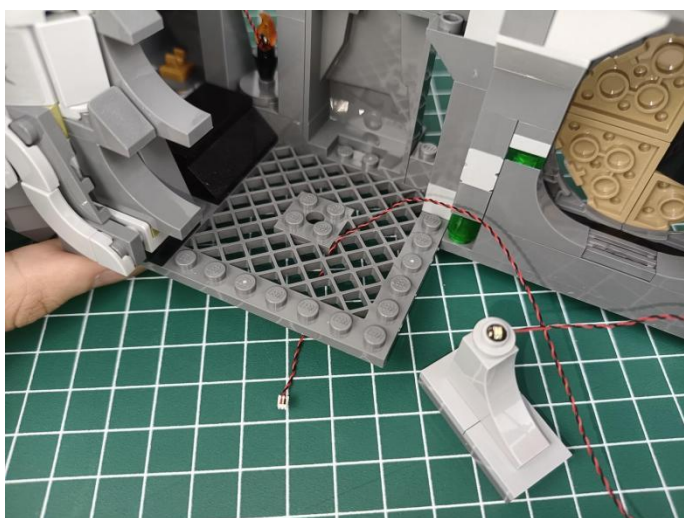



115

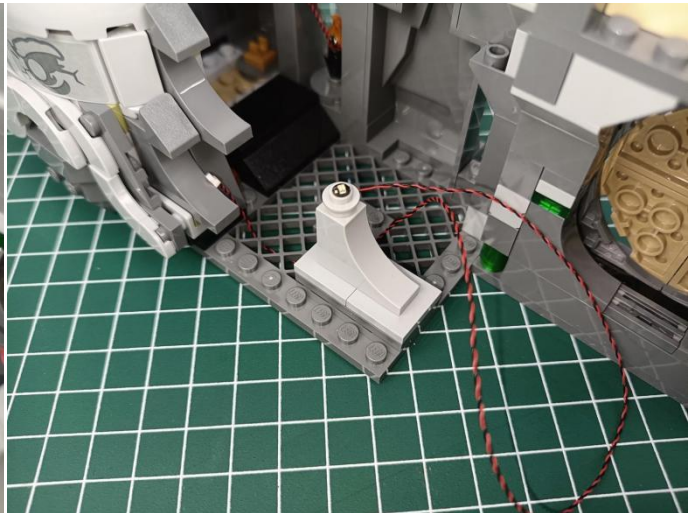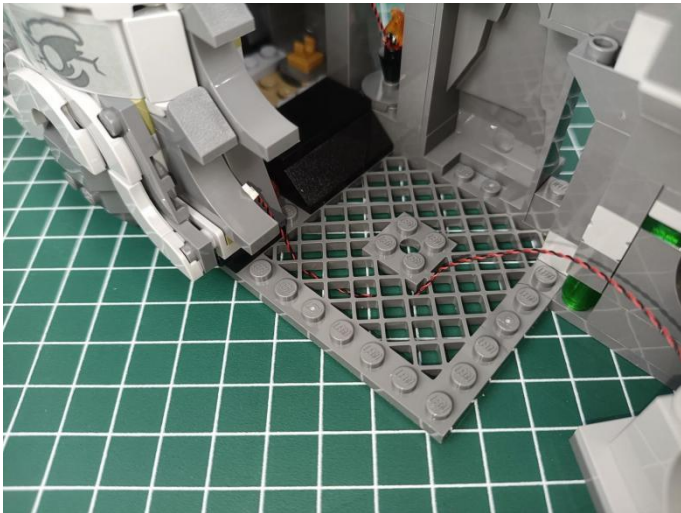



116

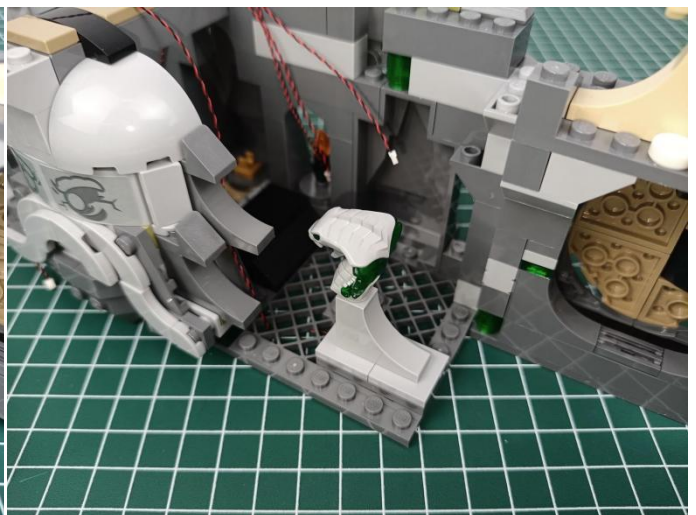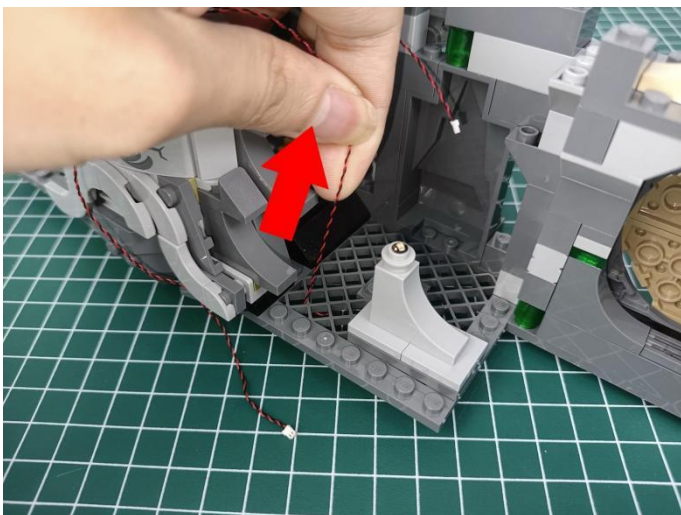


117

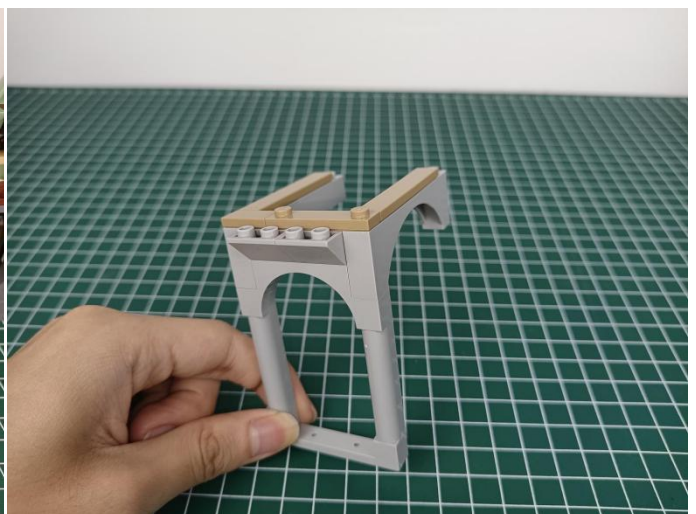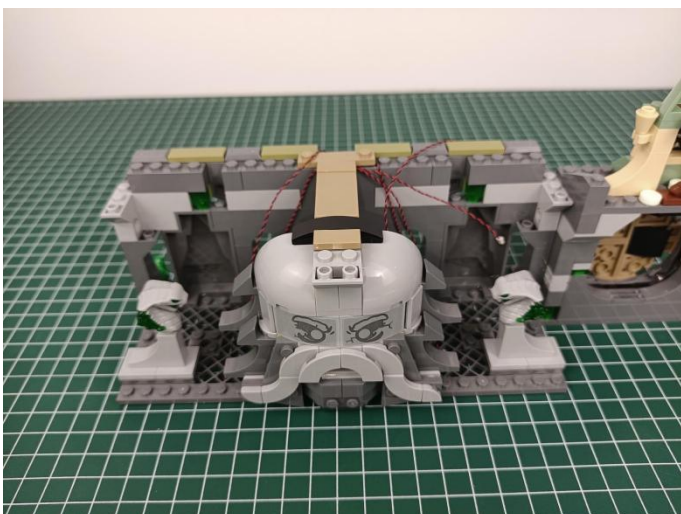


118

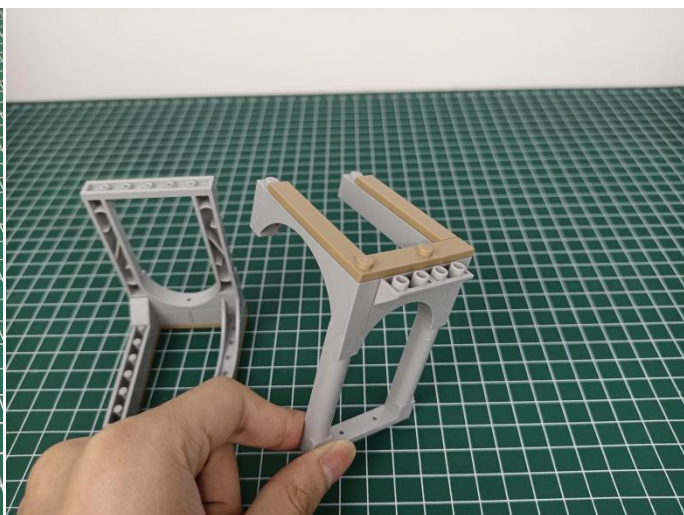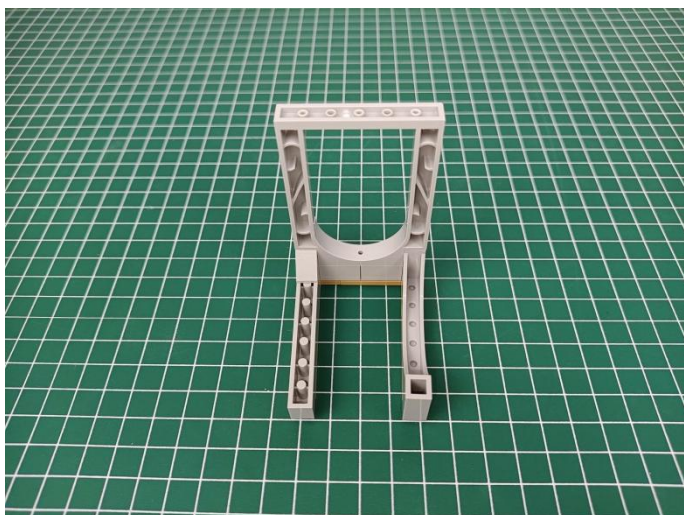



119

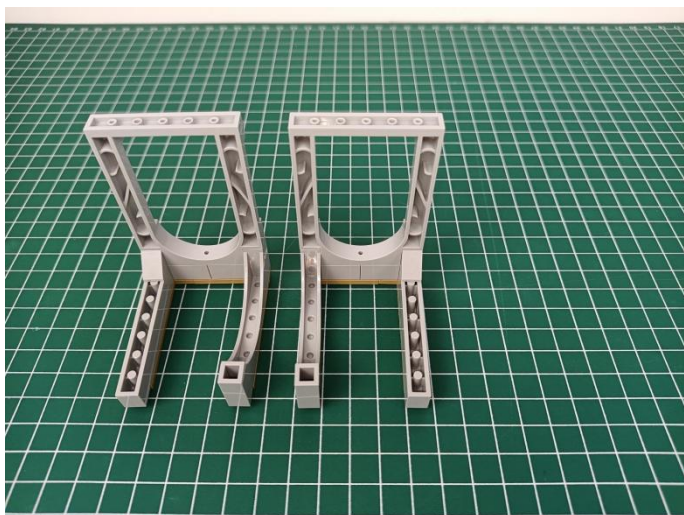



120

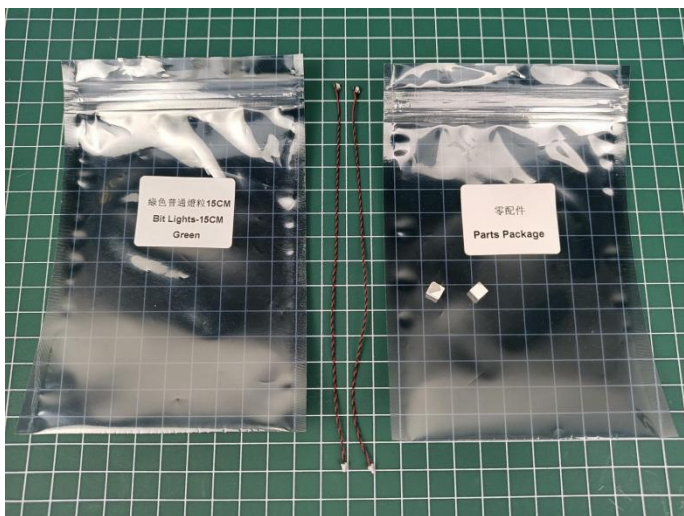



121

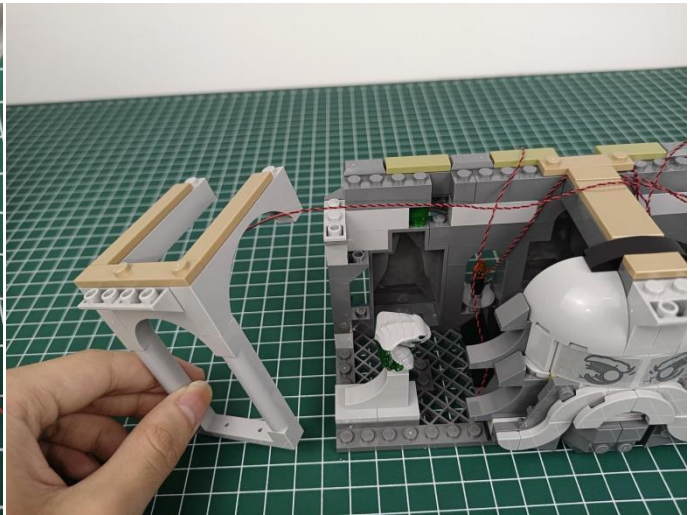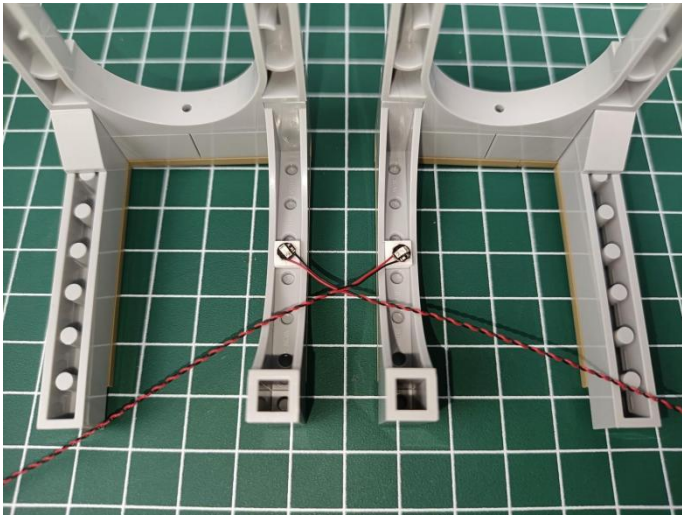



122

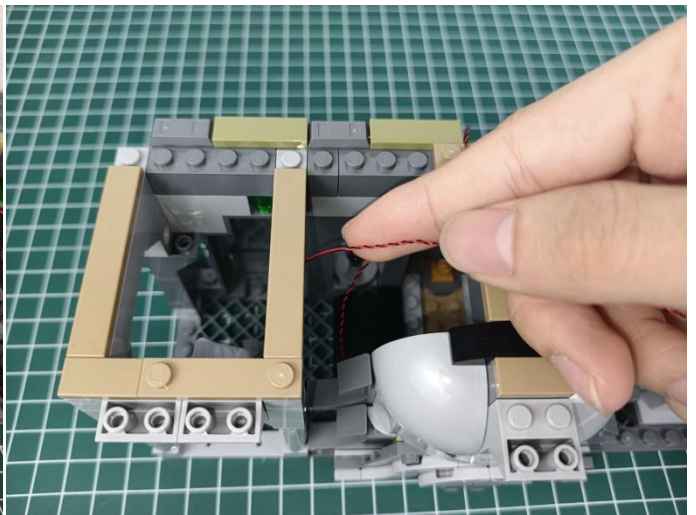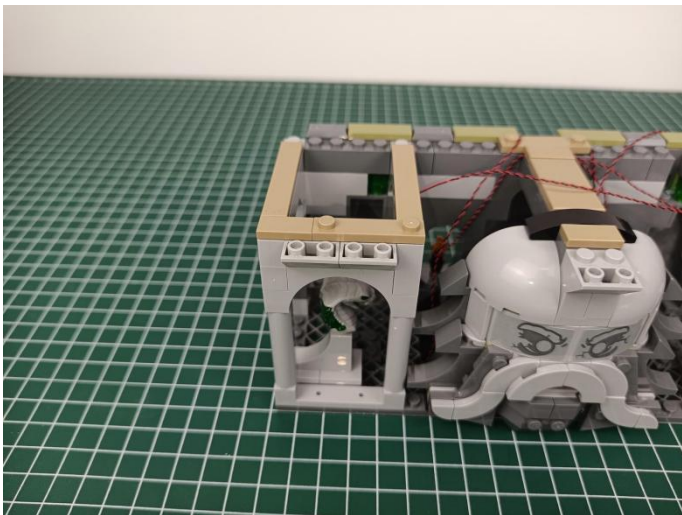



123

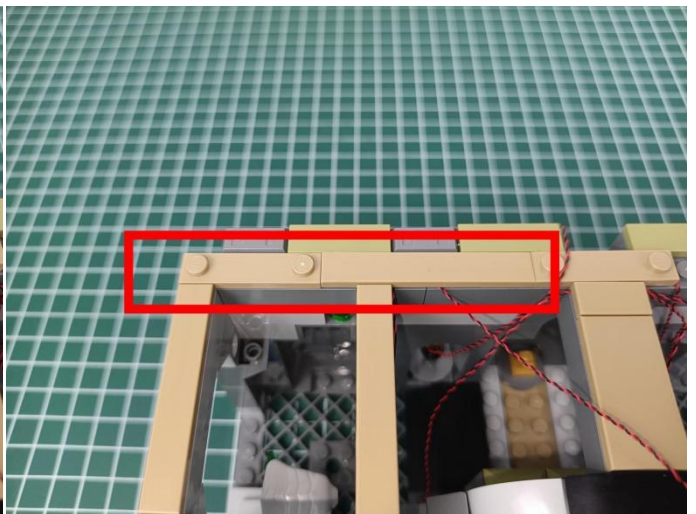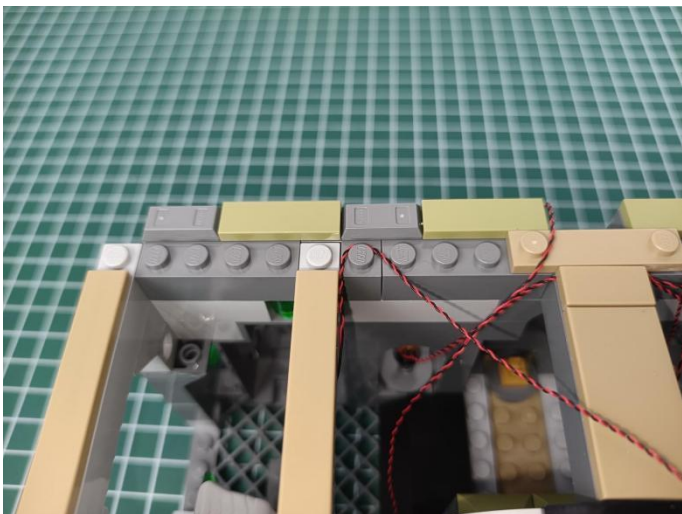



124

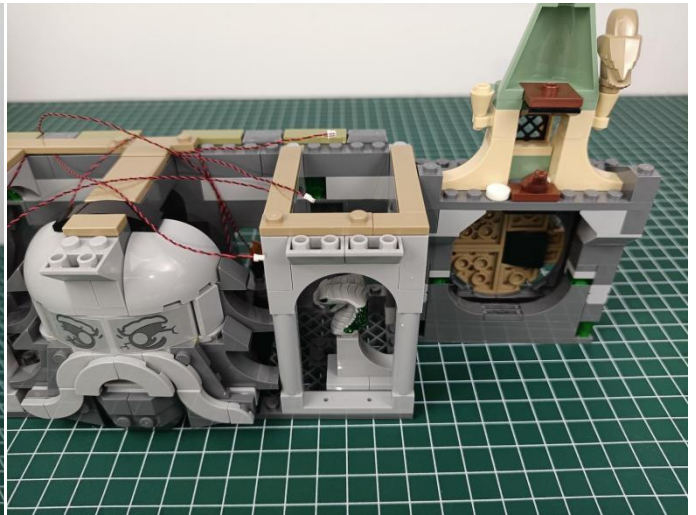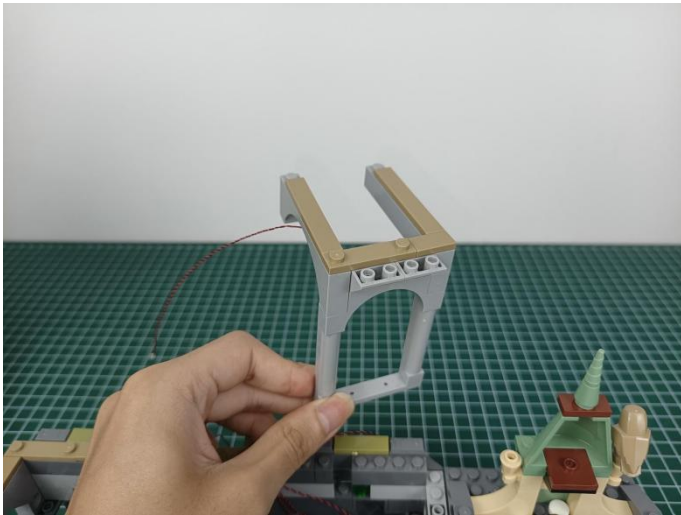



125

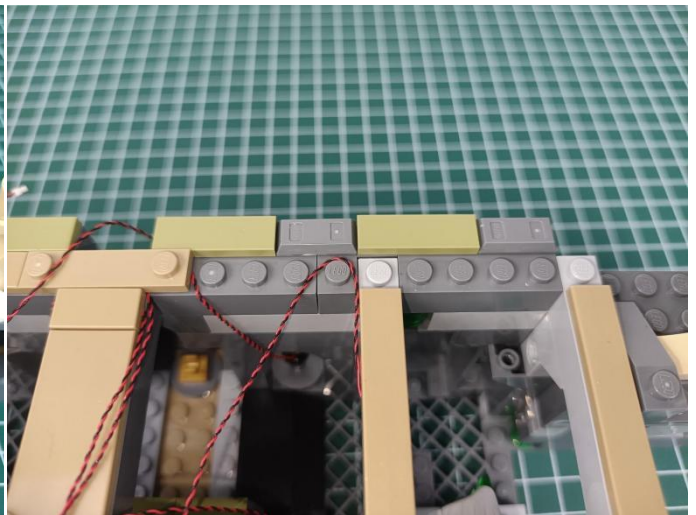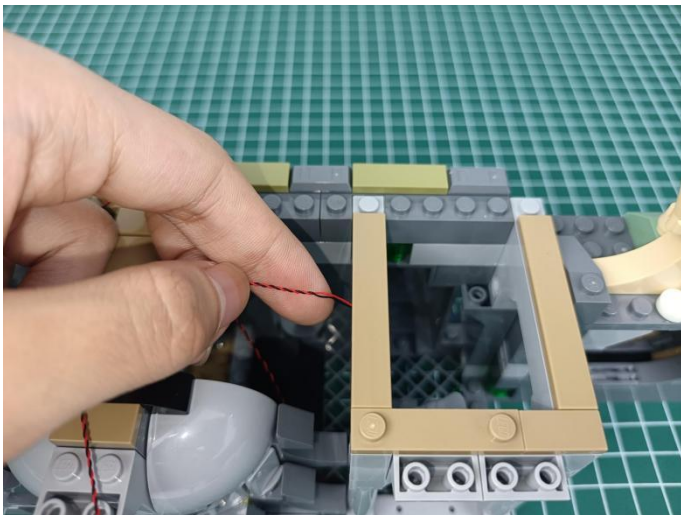



126

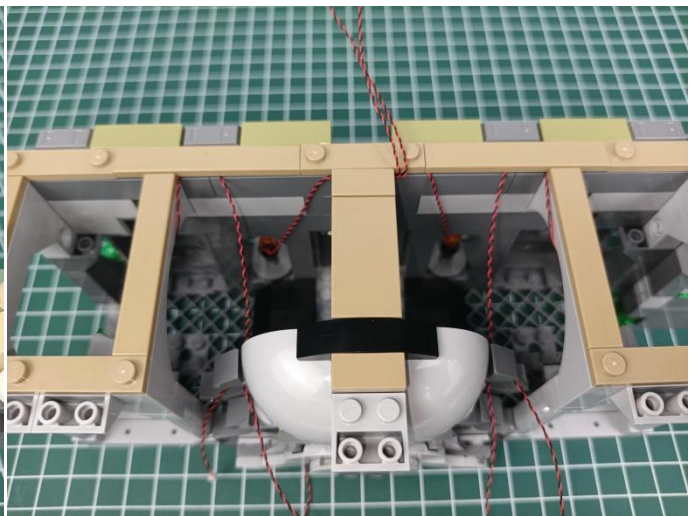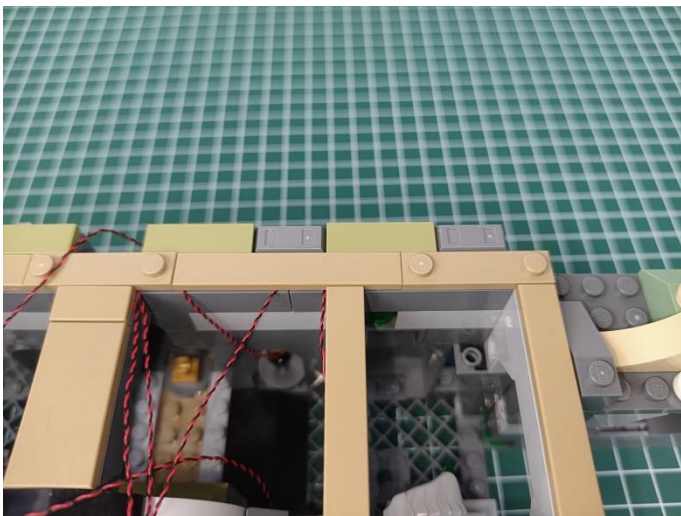



127

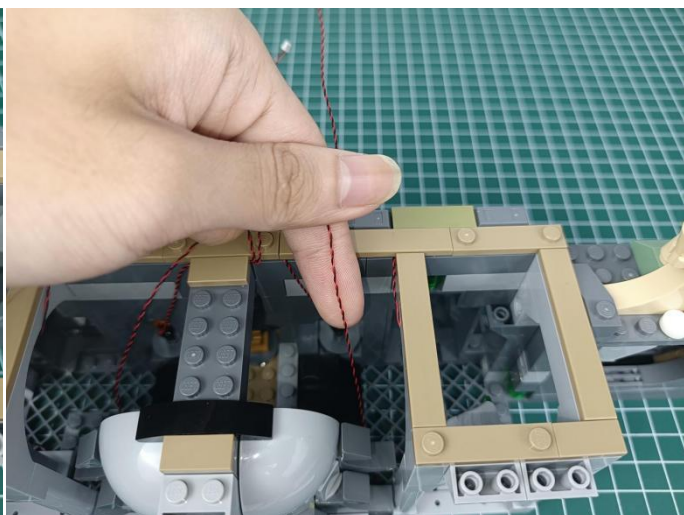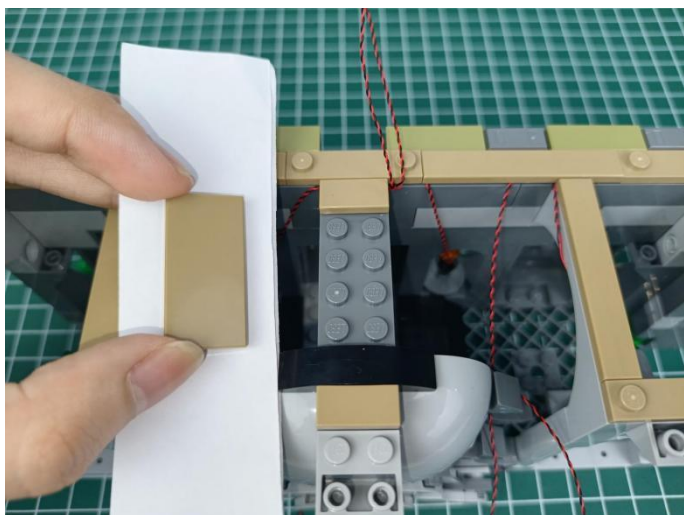



128

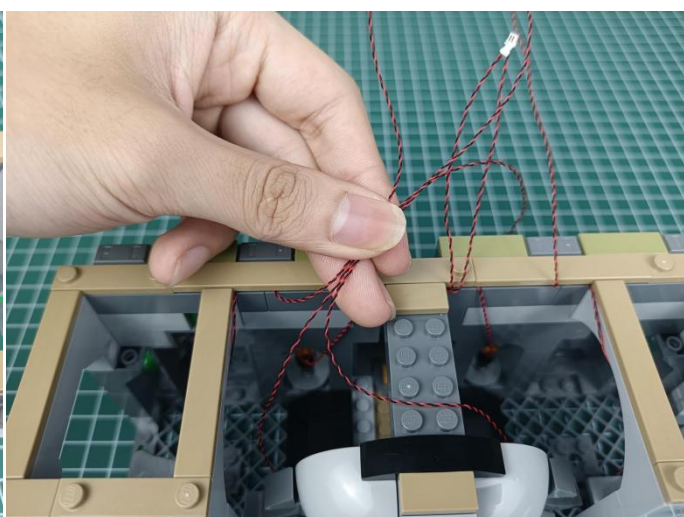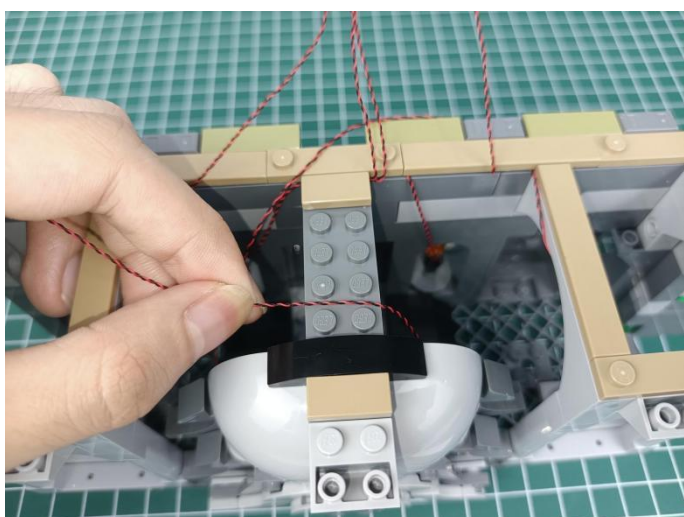


129

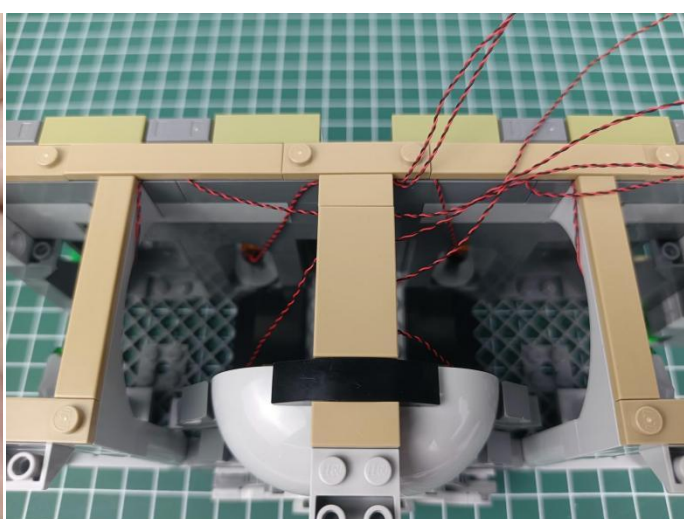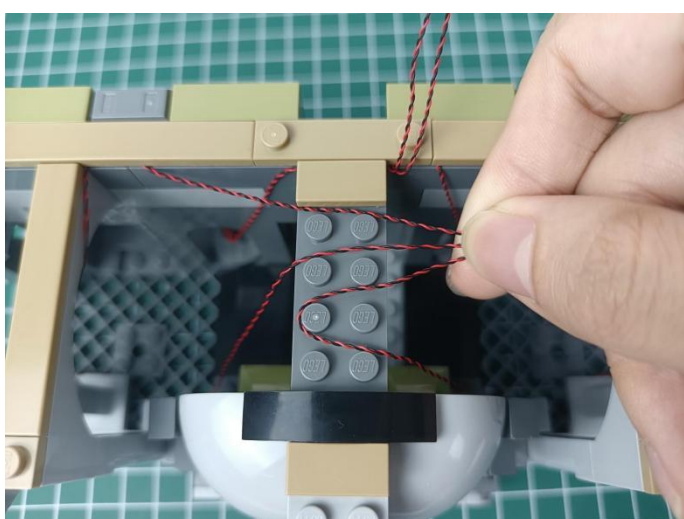


130

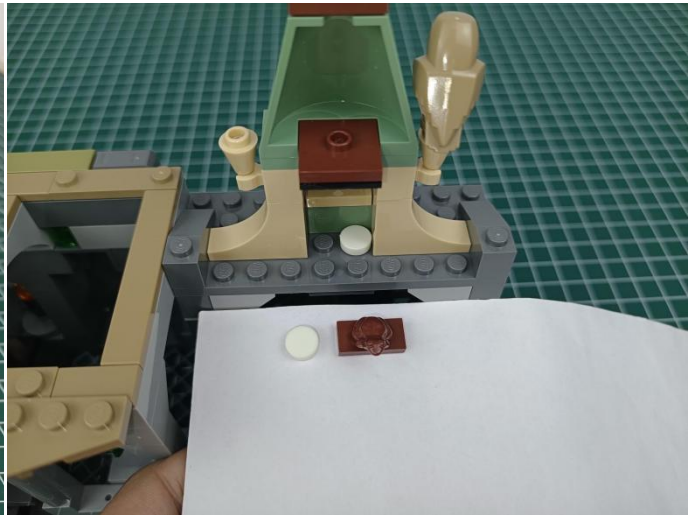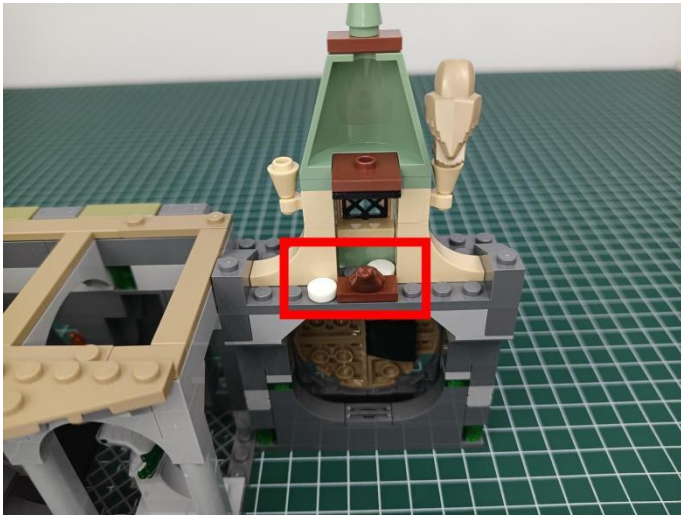



131

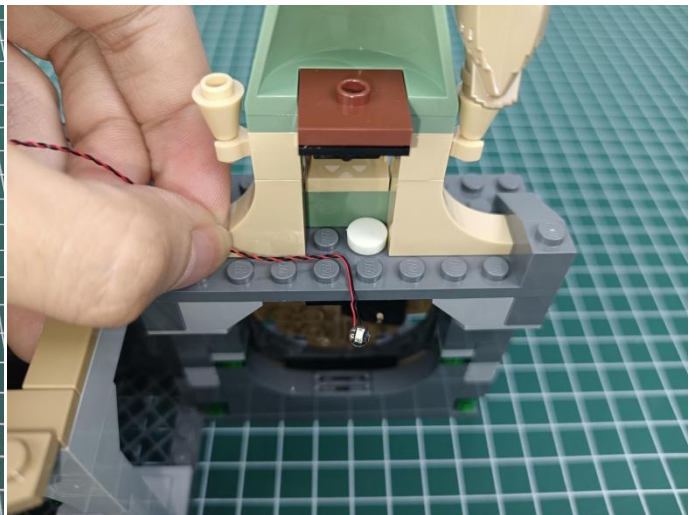


132

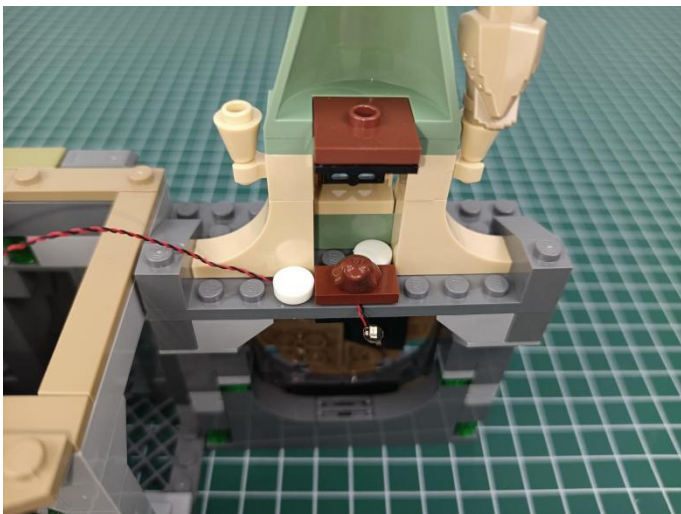



133

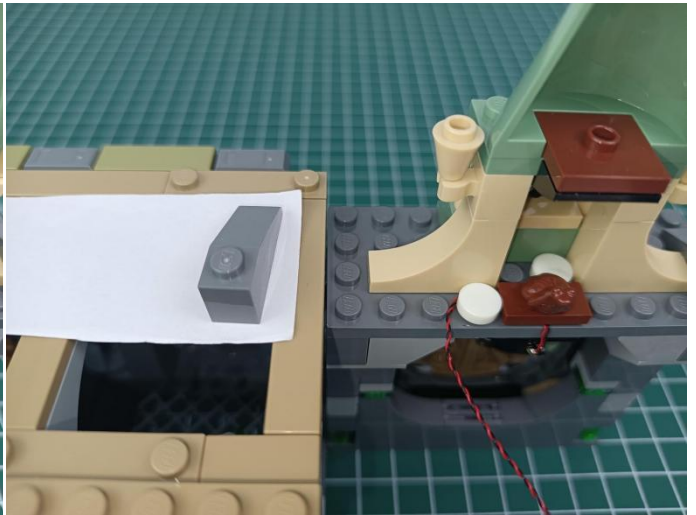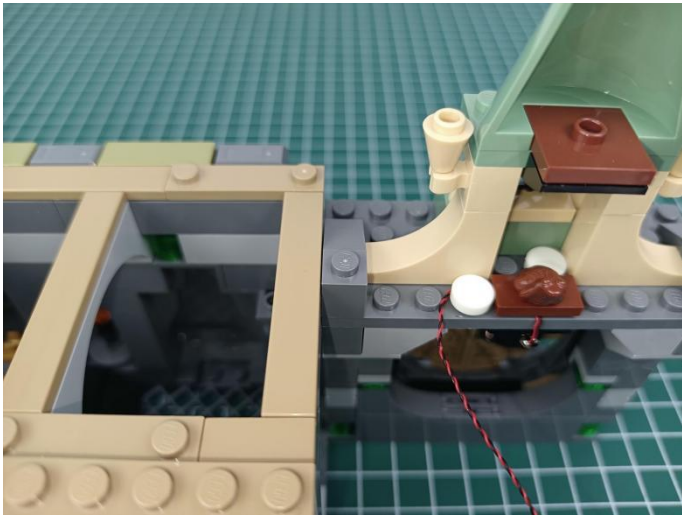


134

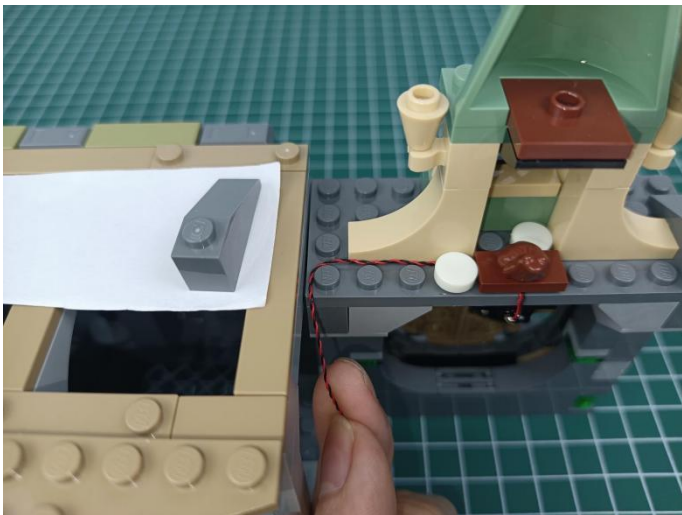


135

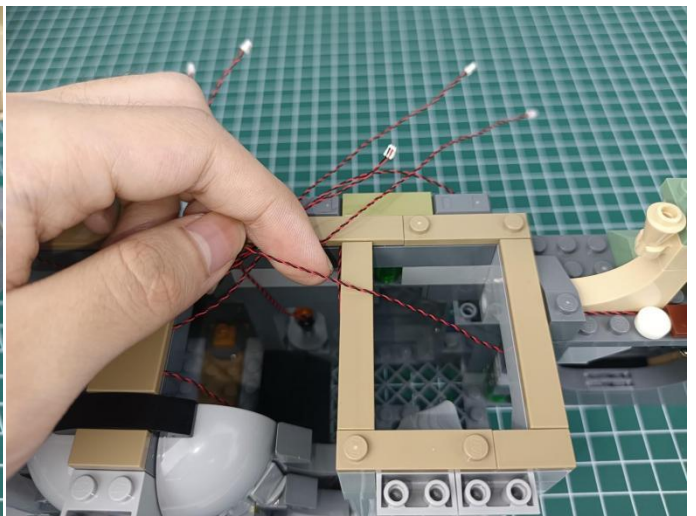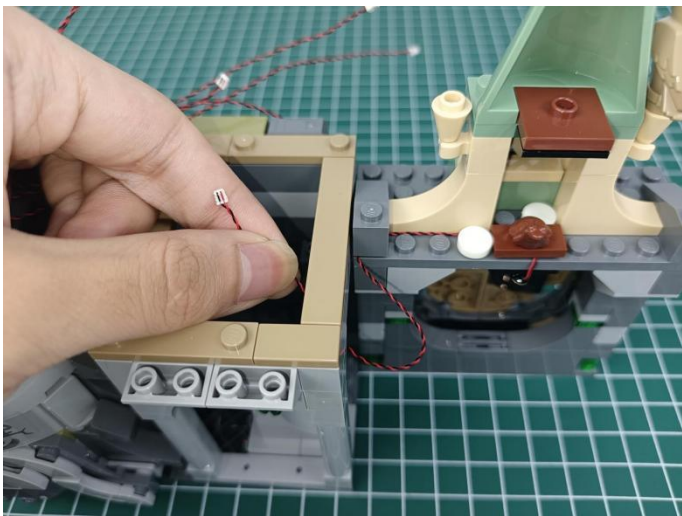


136

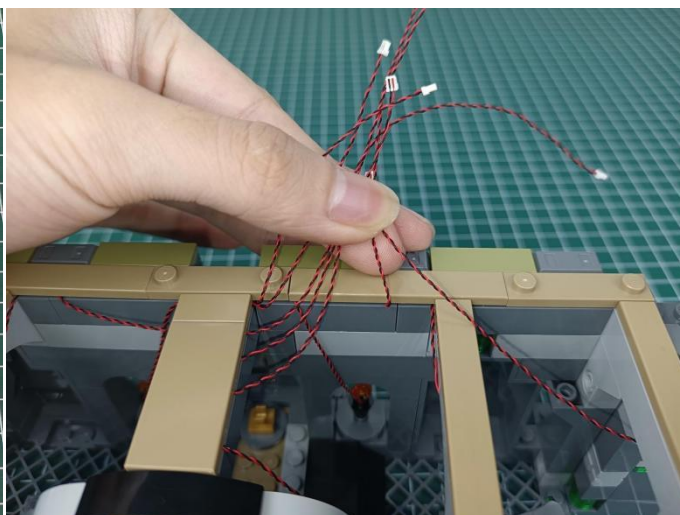

137

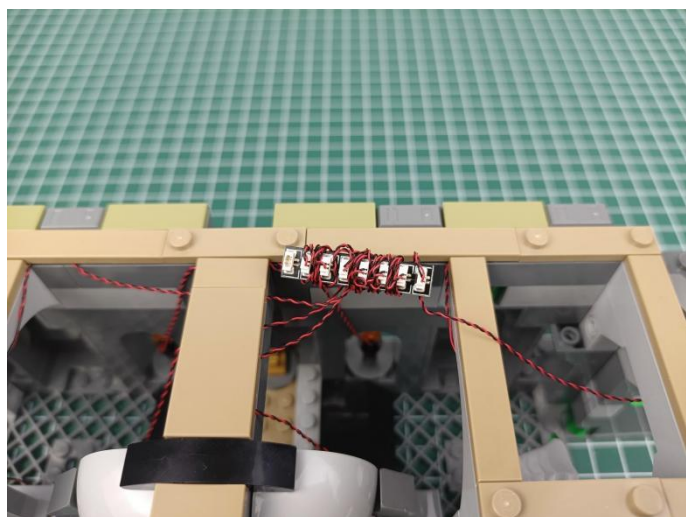



138

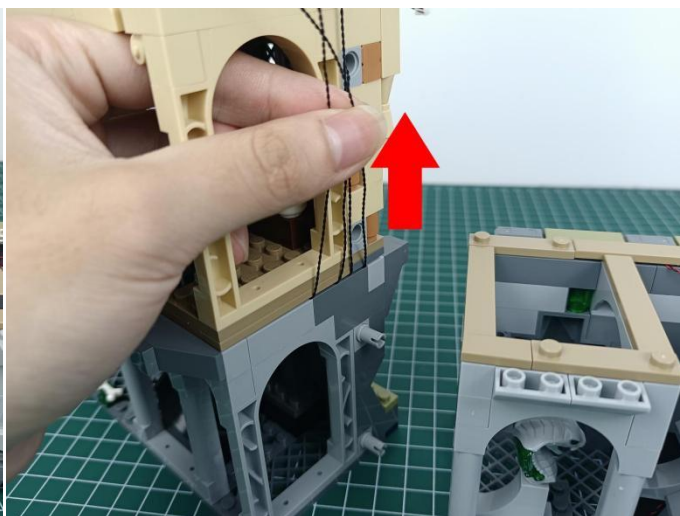


139





140

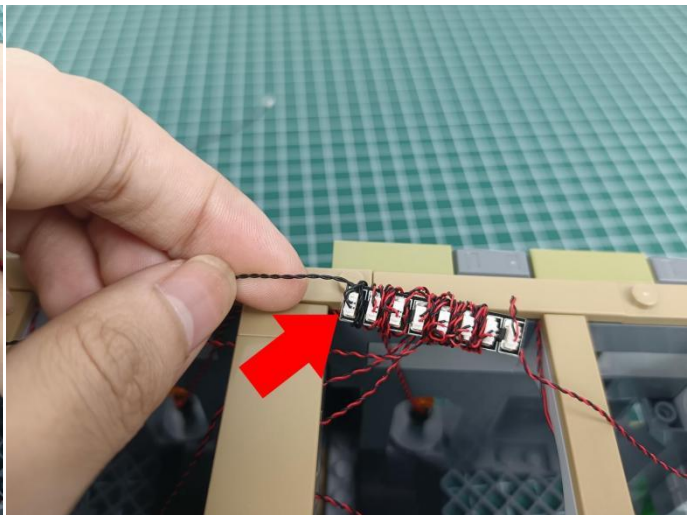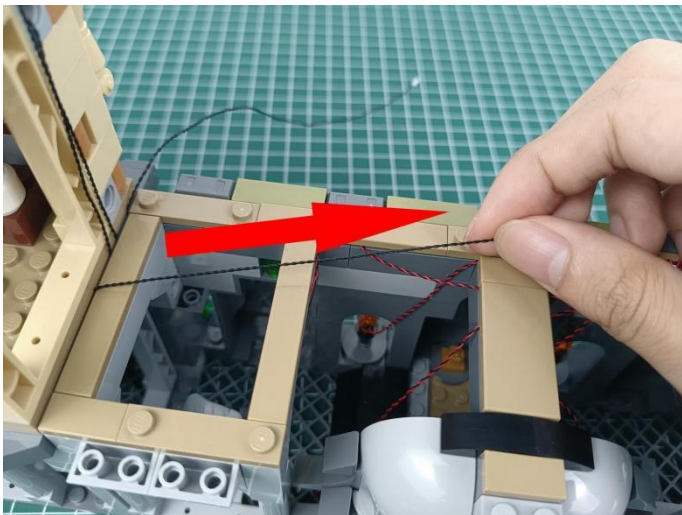

141

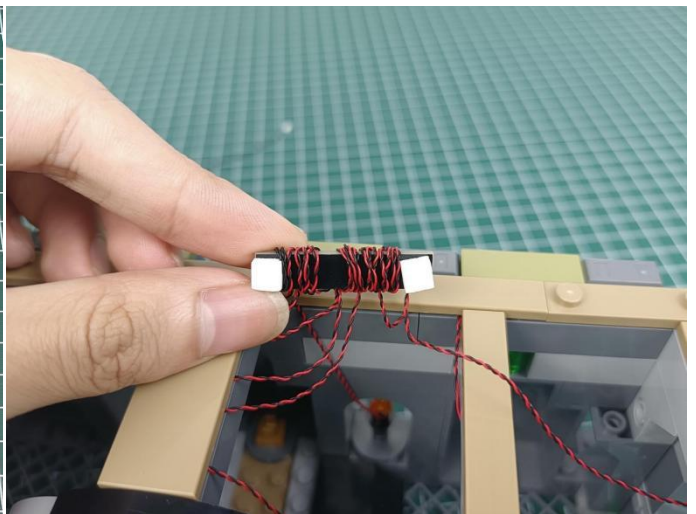

142

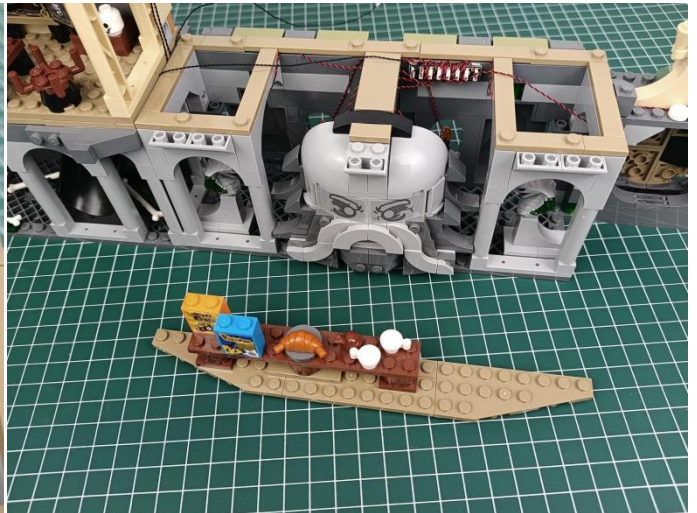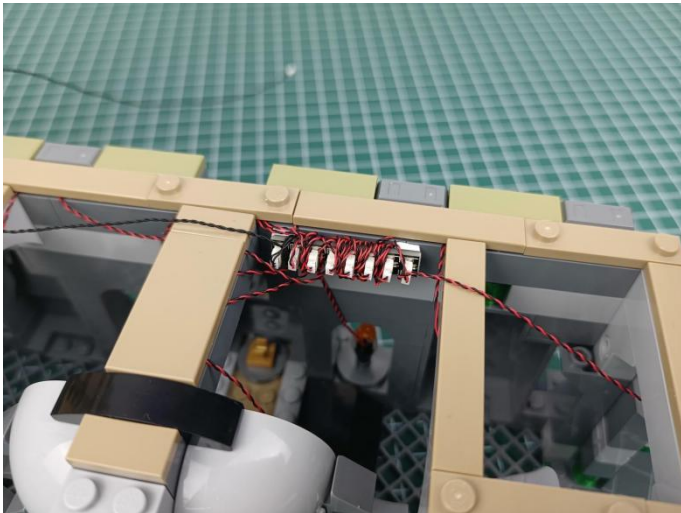


143





144





145

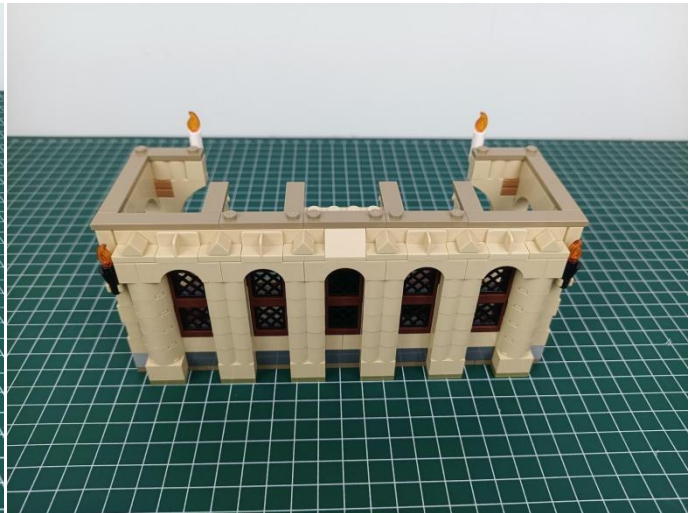


146

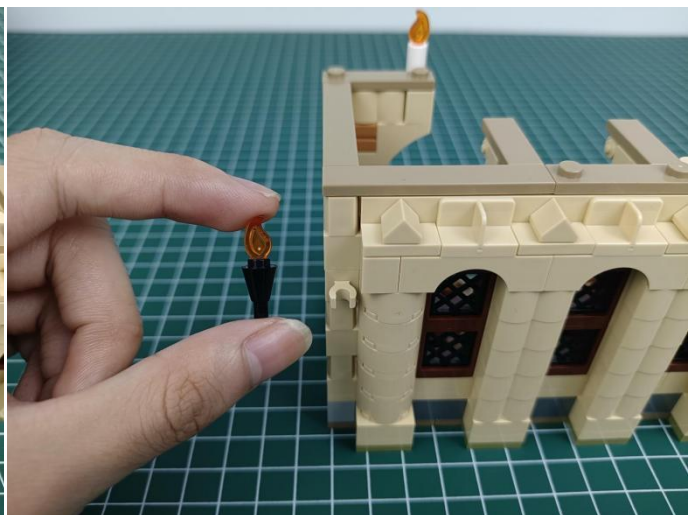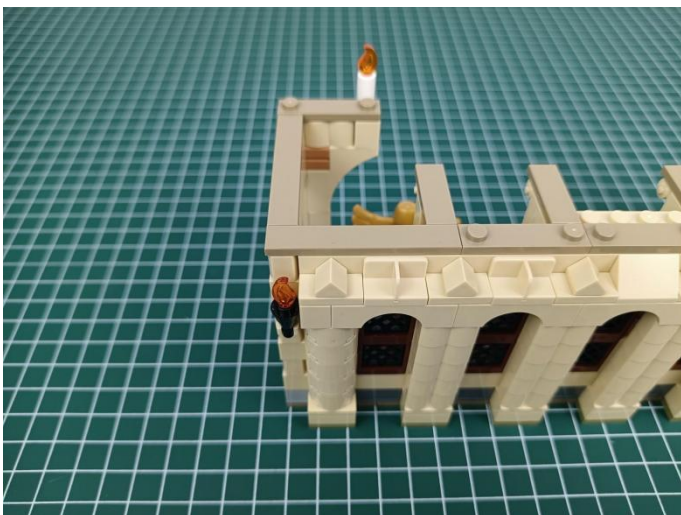

147

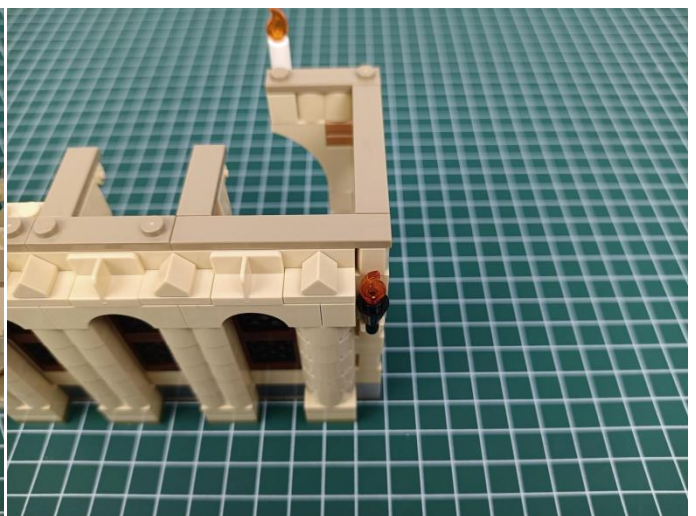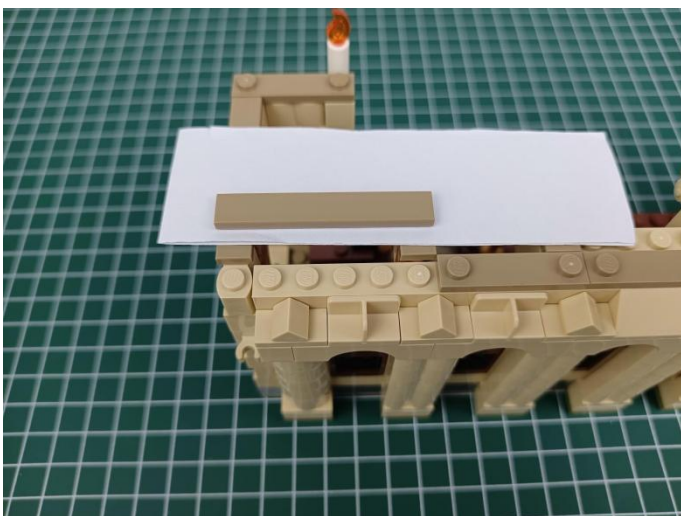

148

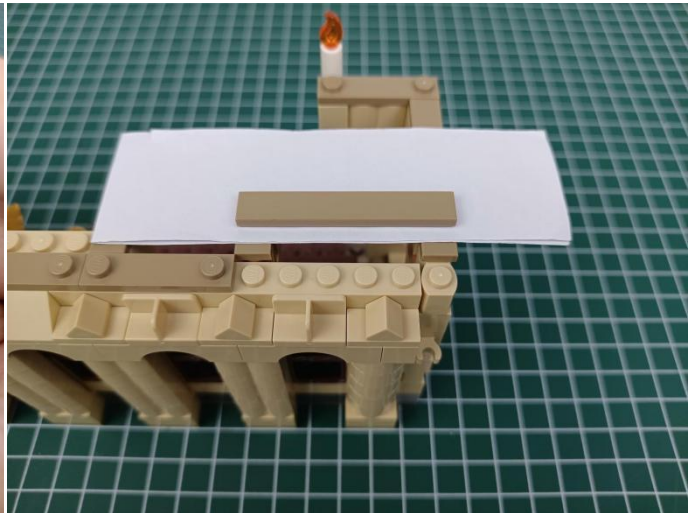


149




150




151

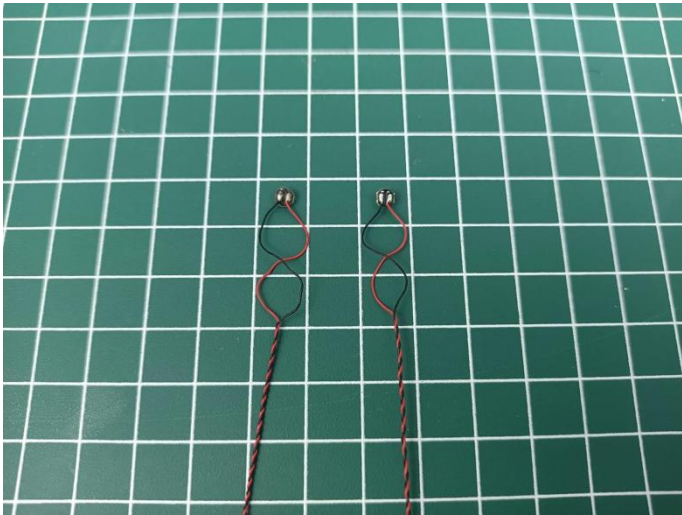



152

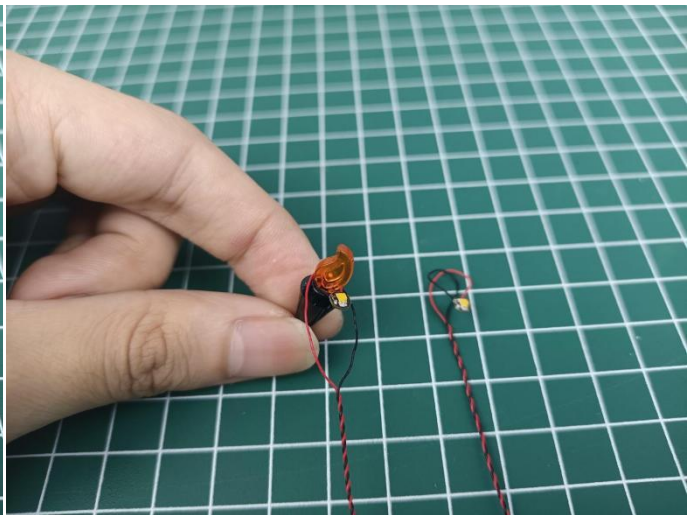


153

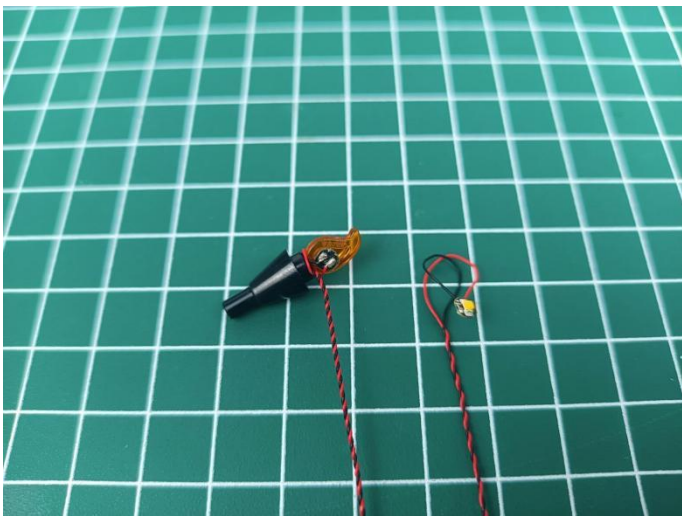



154

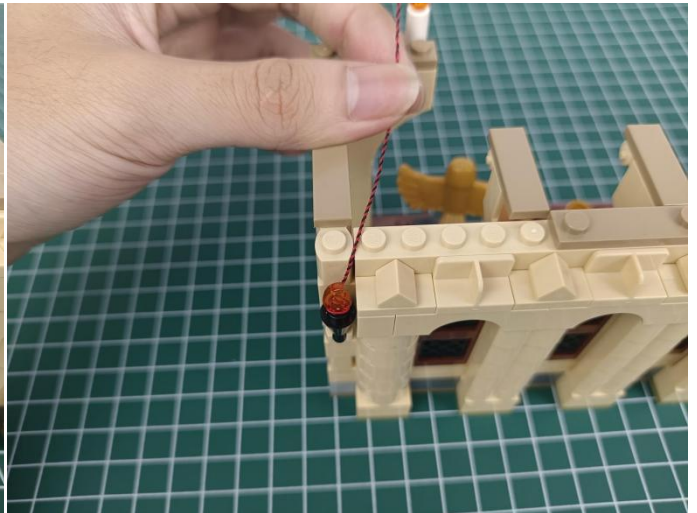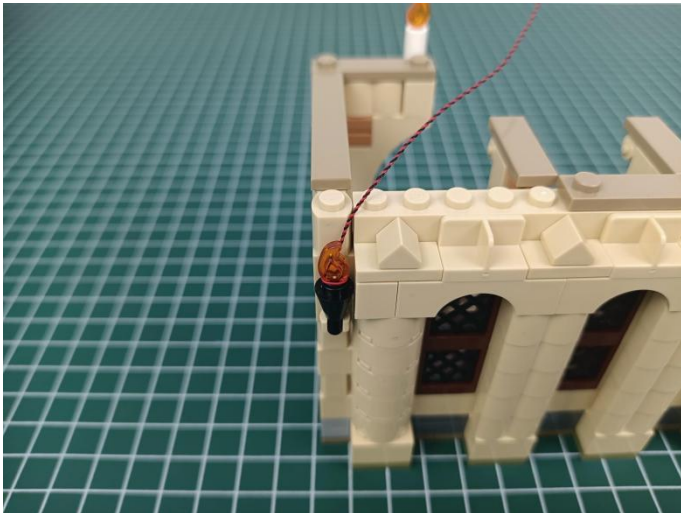


155

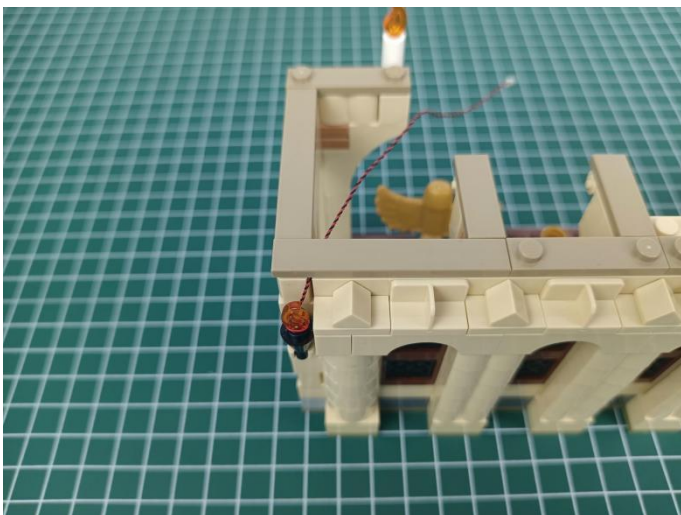



156

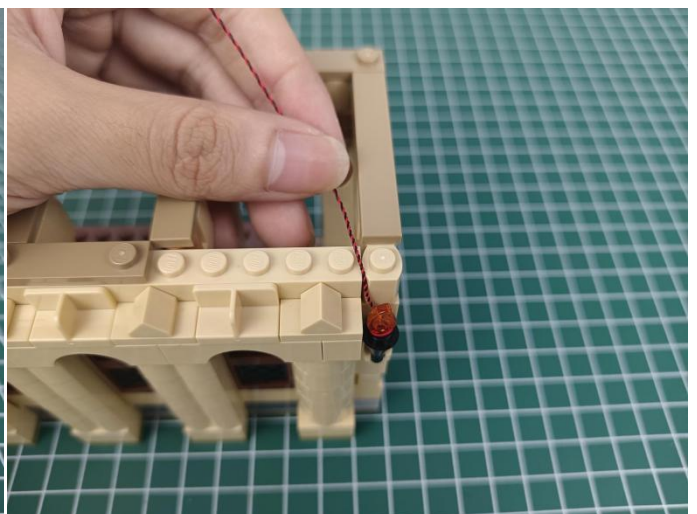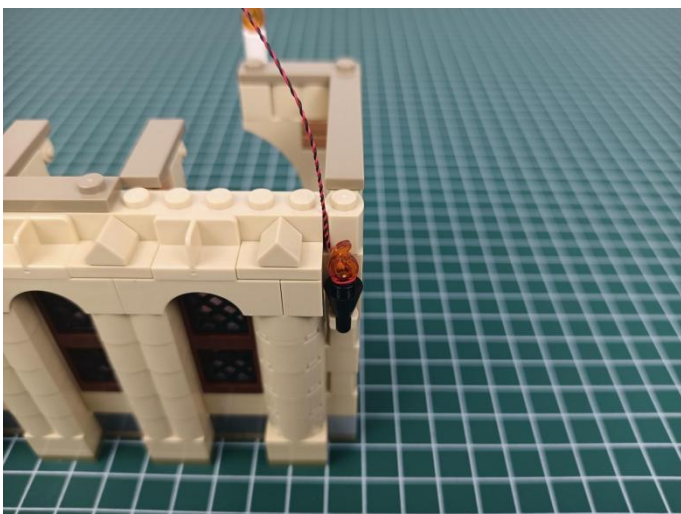

157

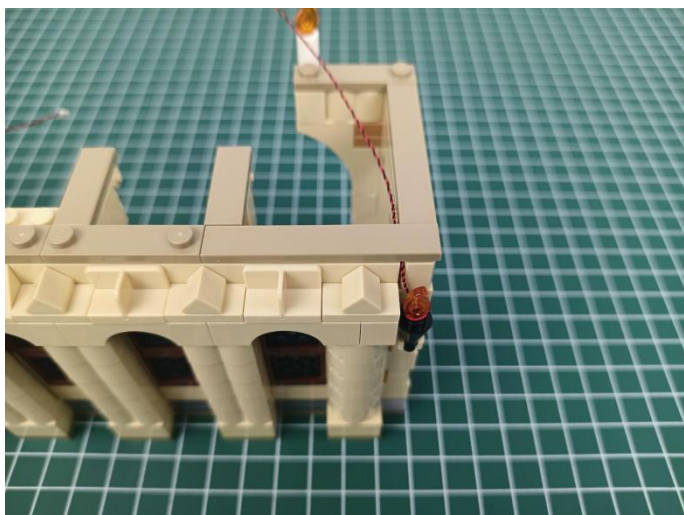


158

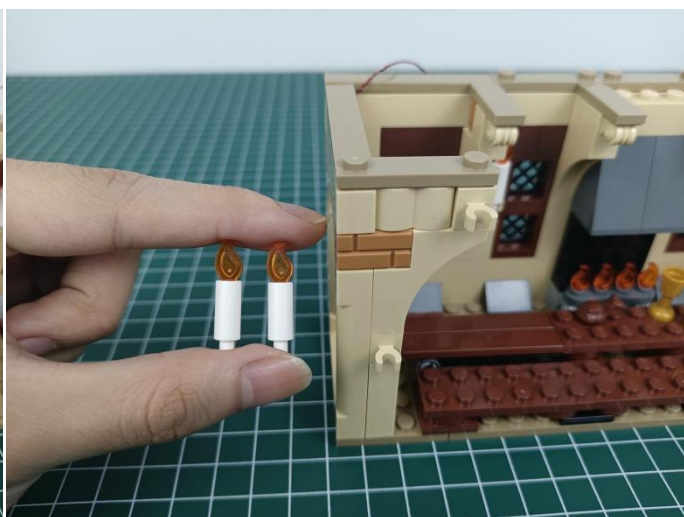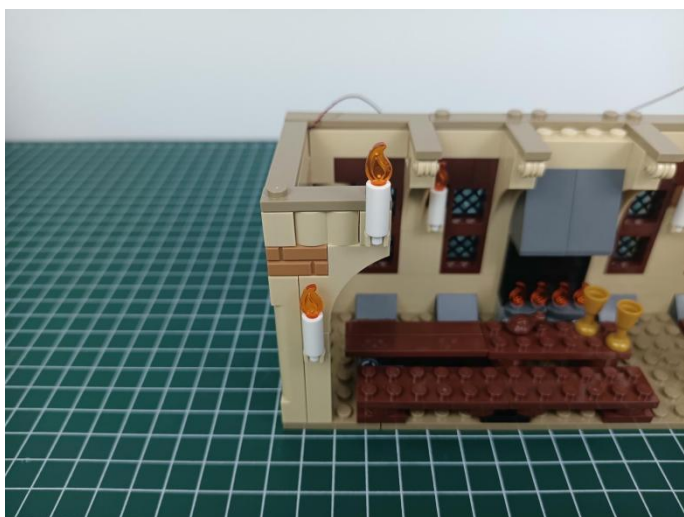


159



160

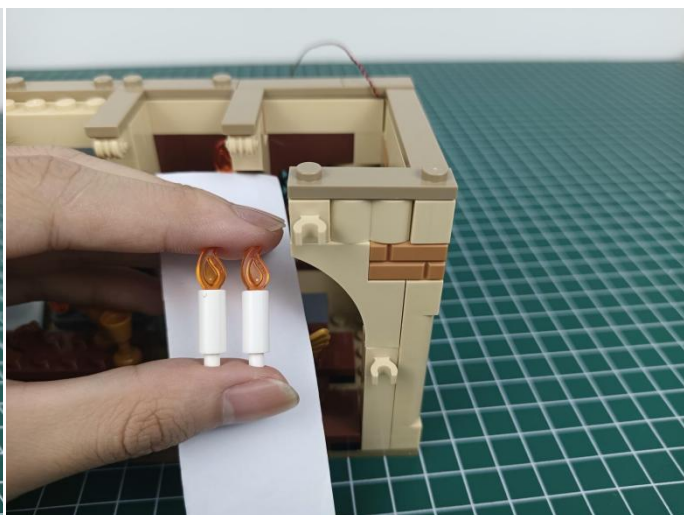



161

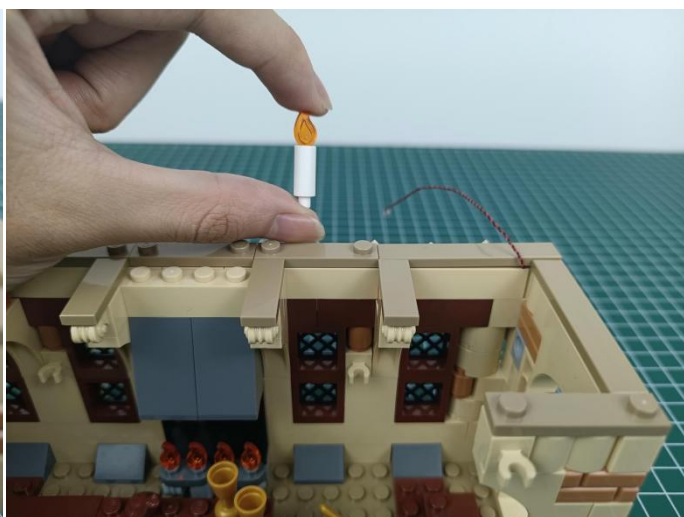


162




163

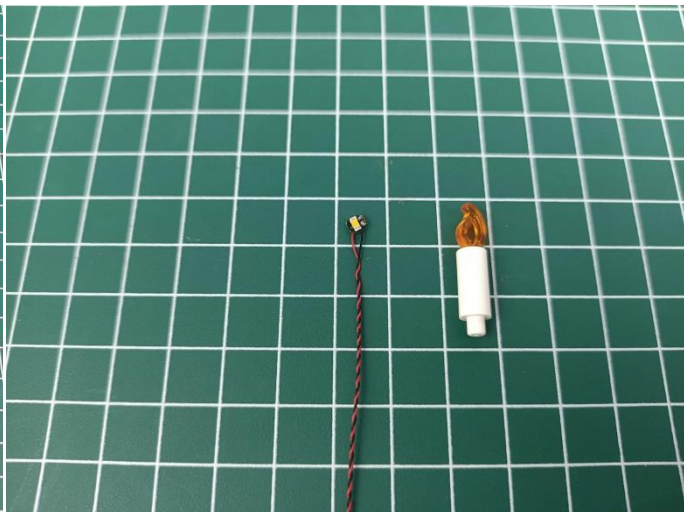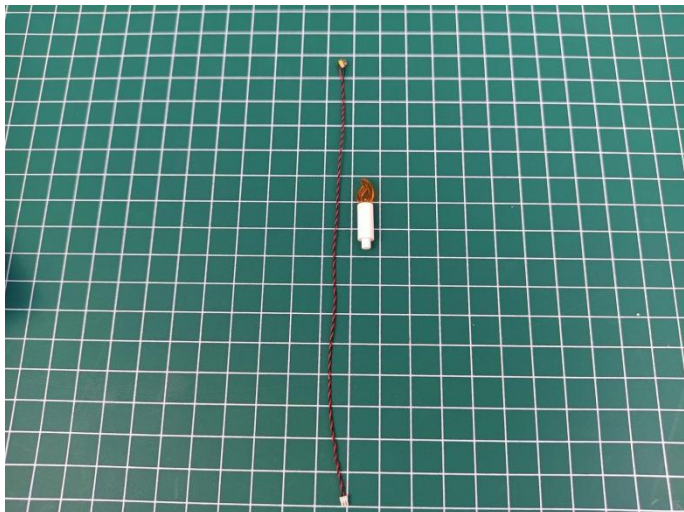



164

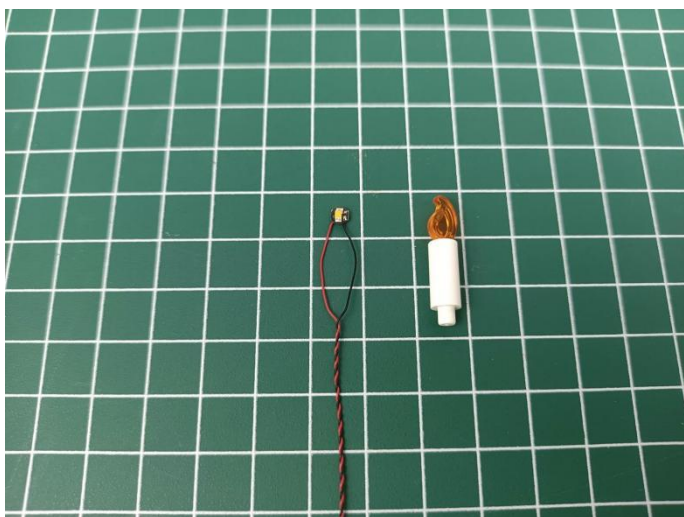


165

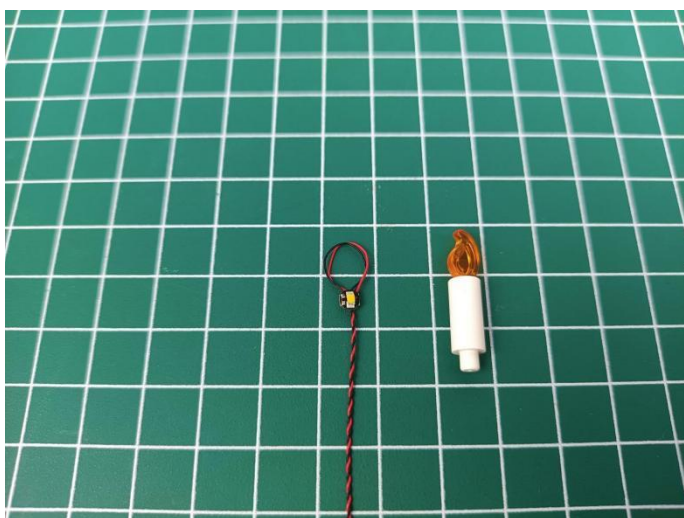



166

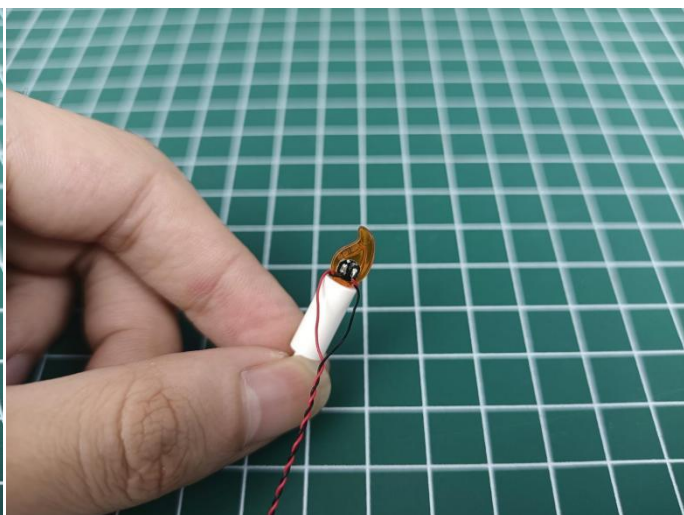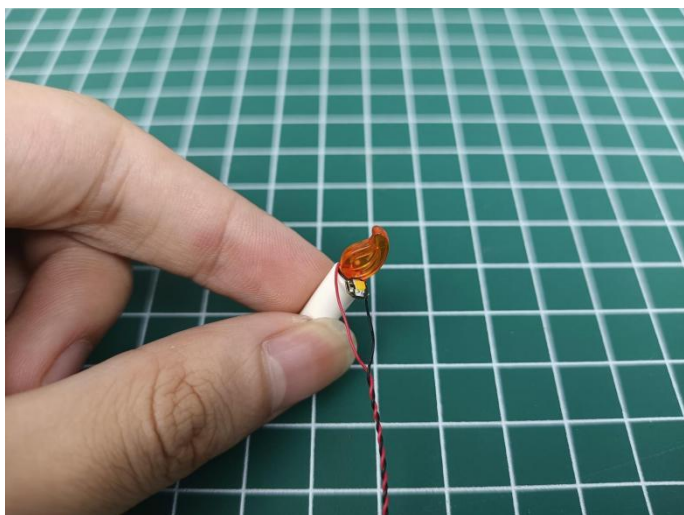



167

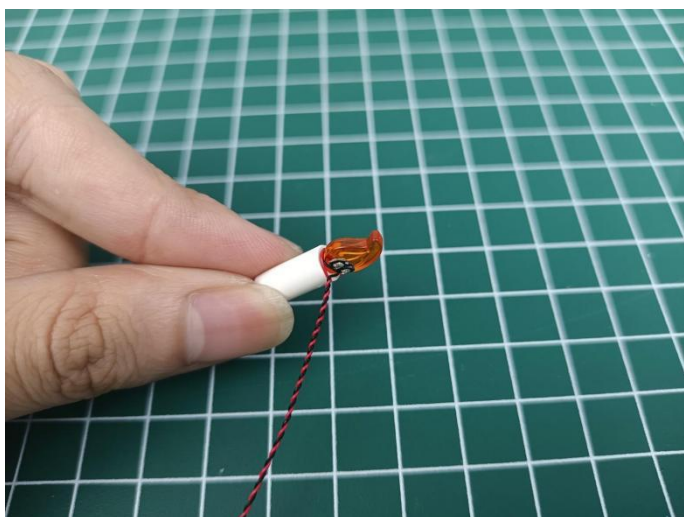


168

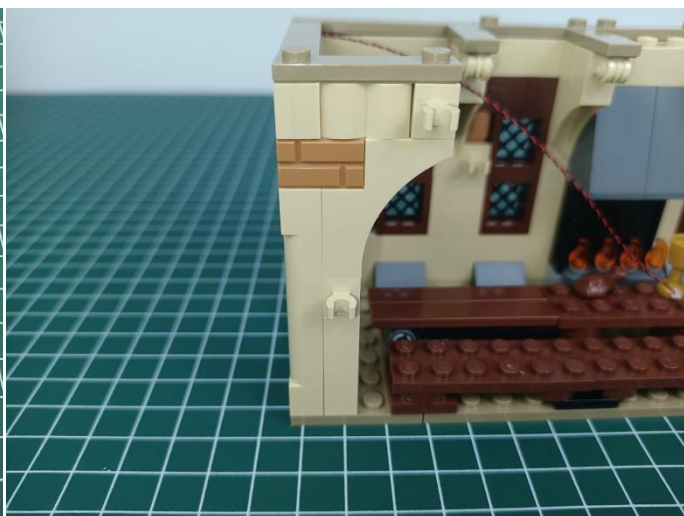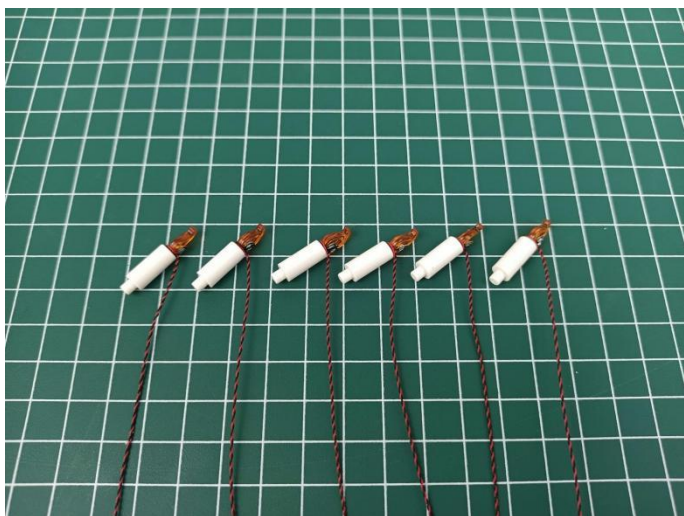


169

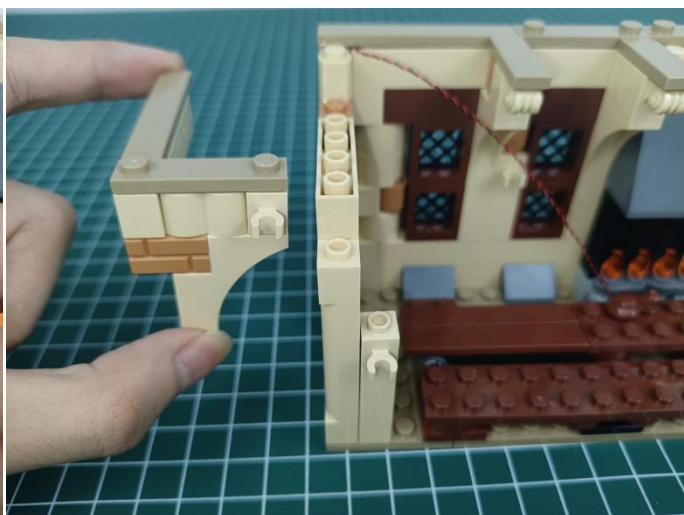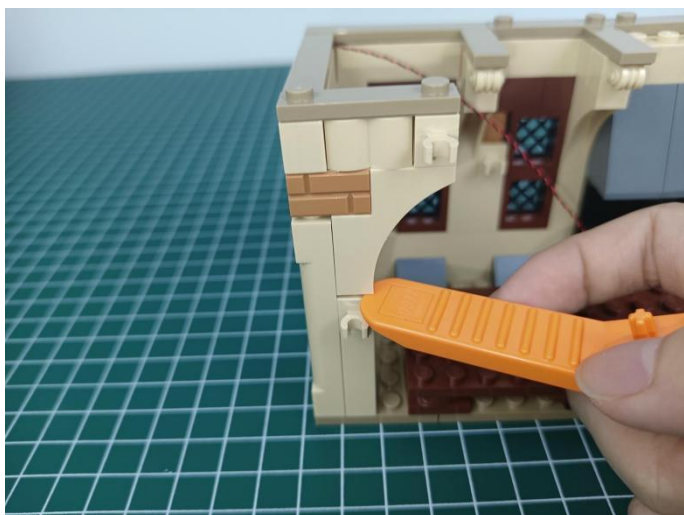



170

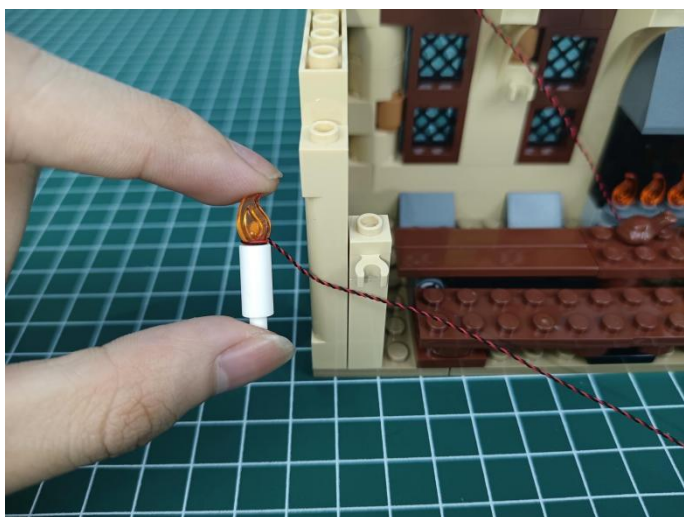



171

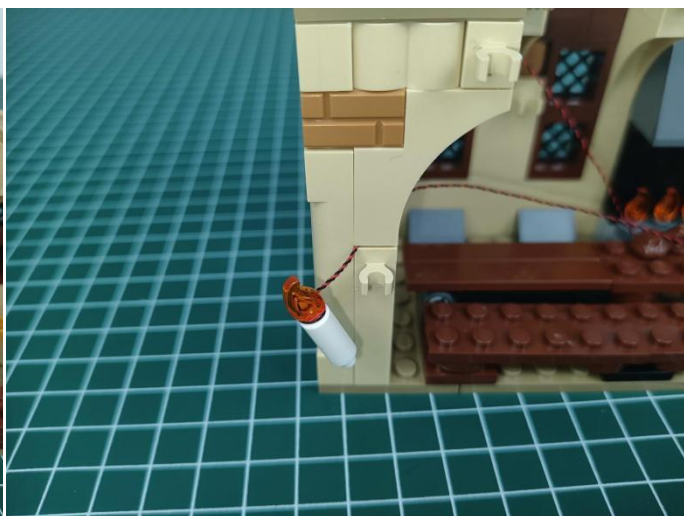


172

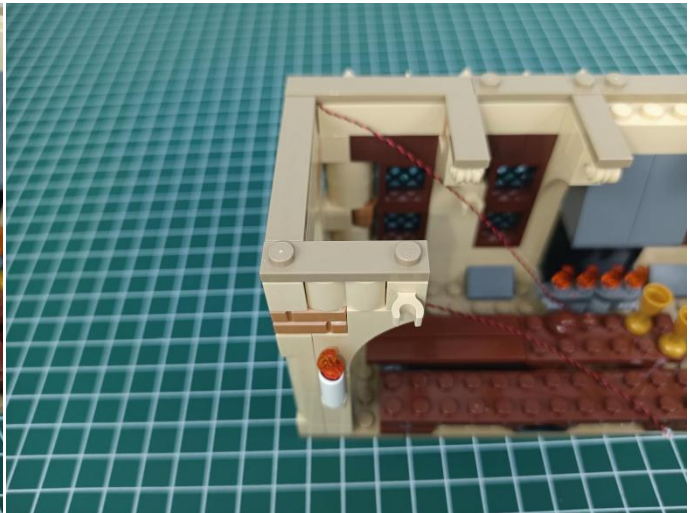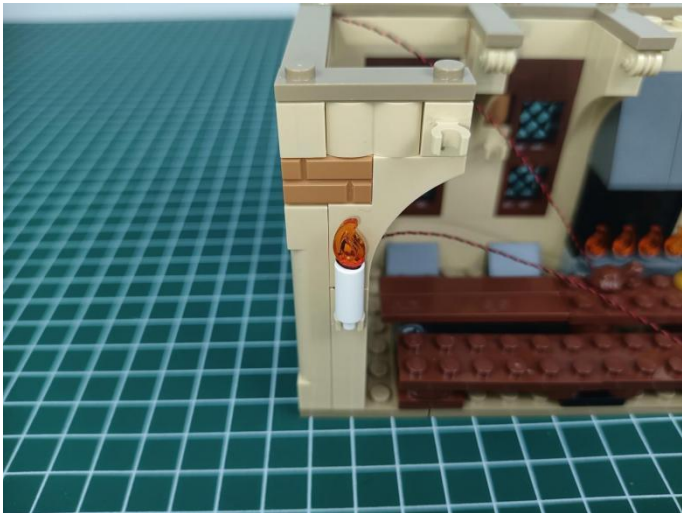


173

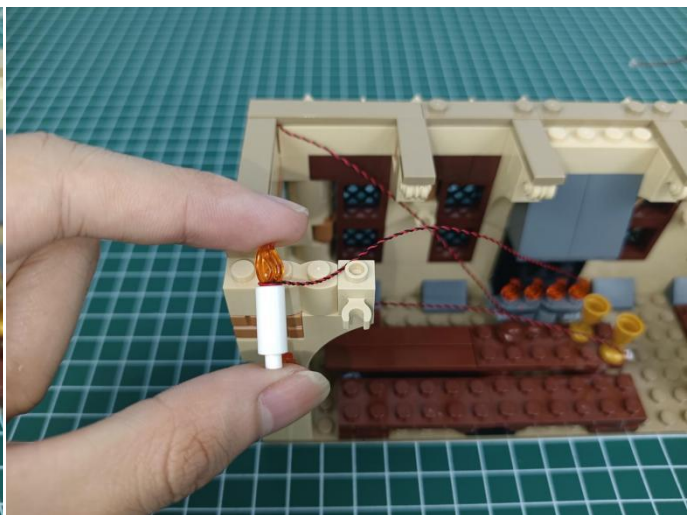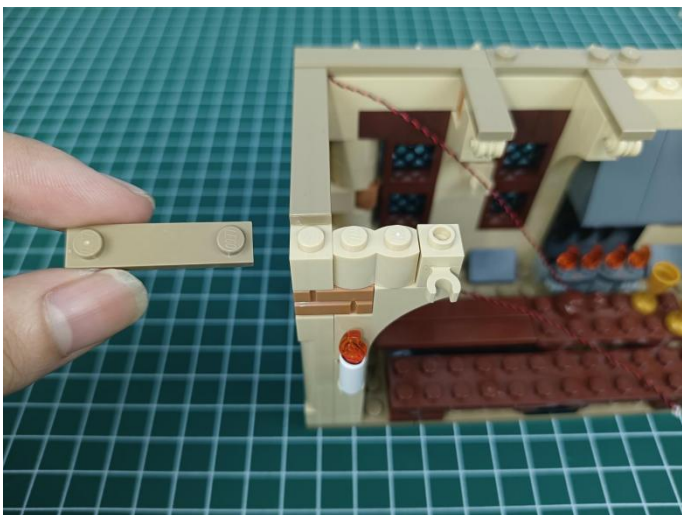


174

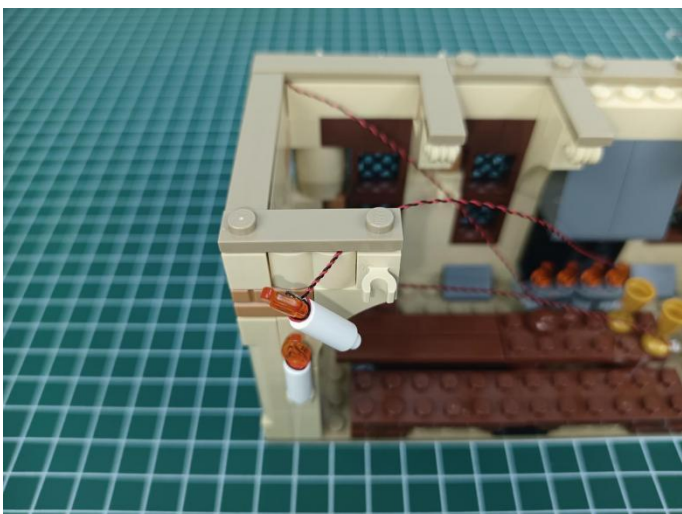


175

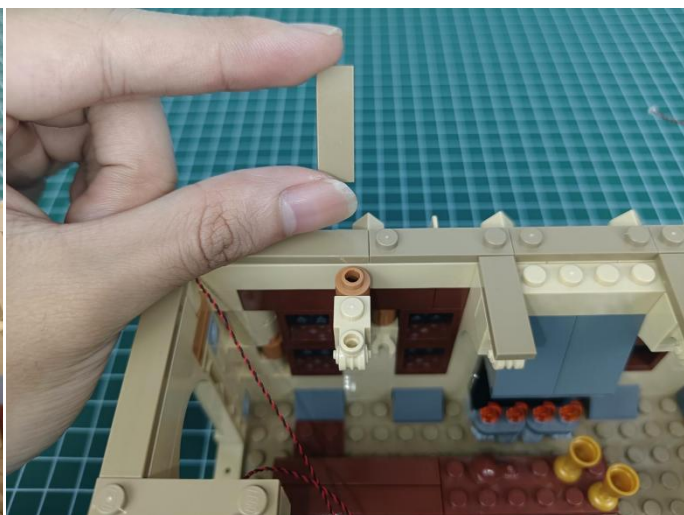



176

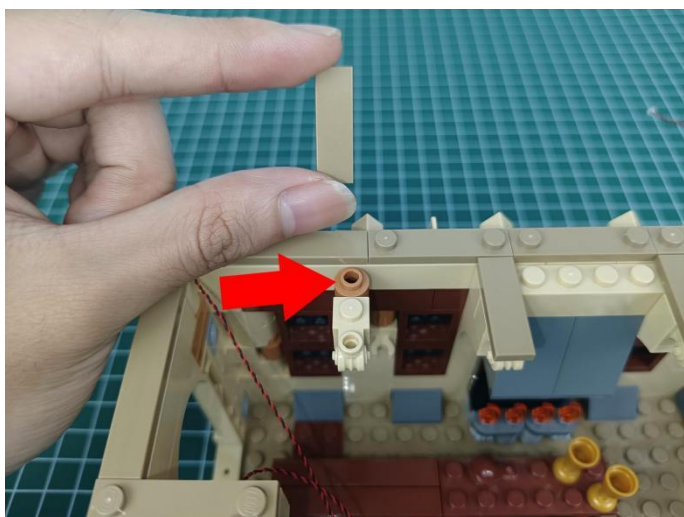



177

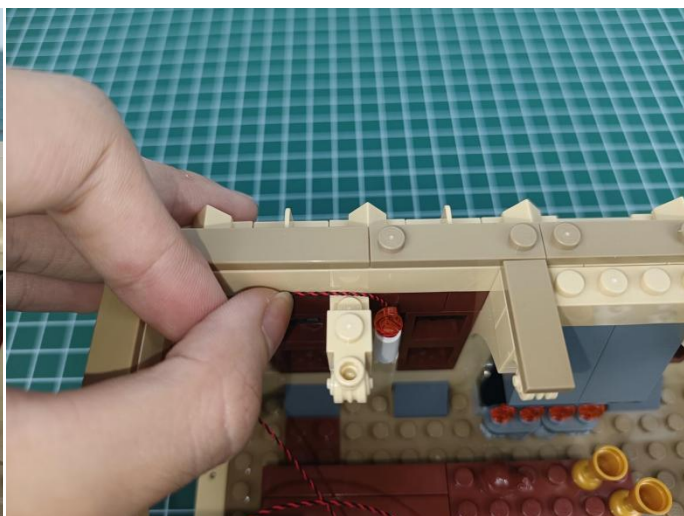


178

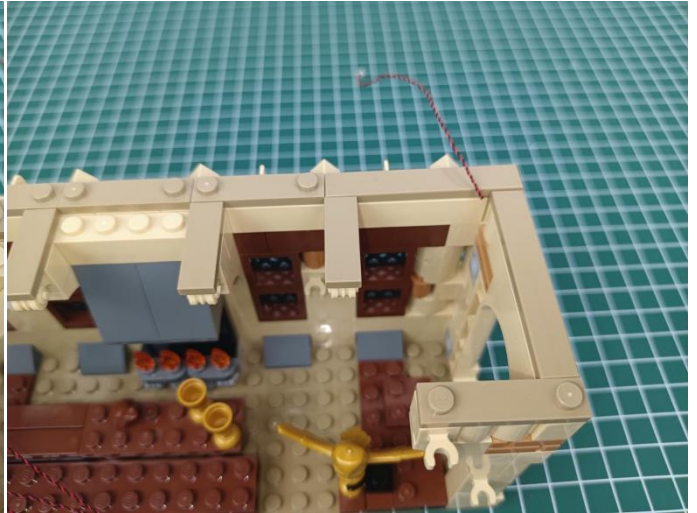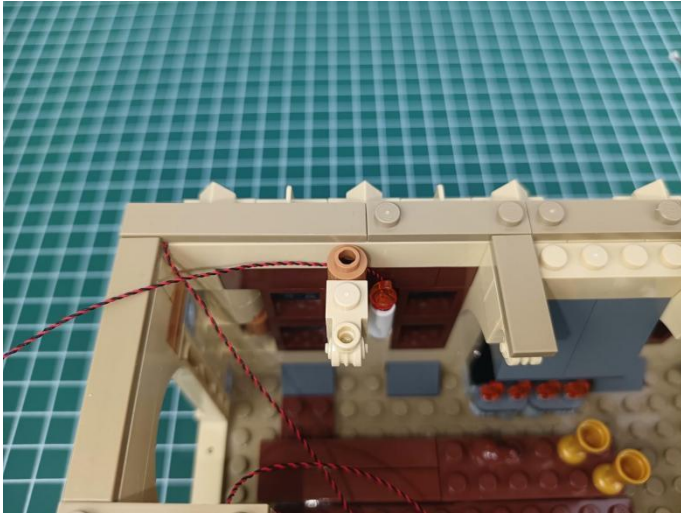


179

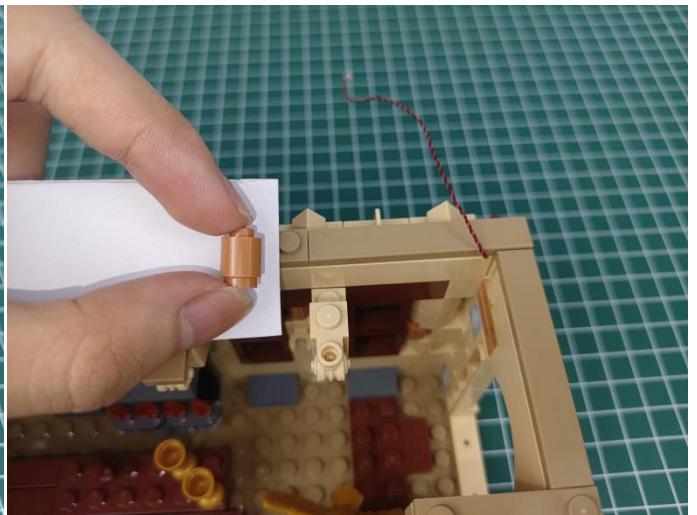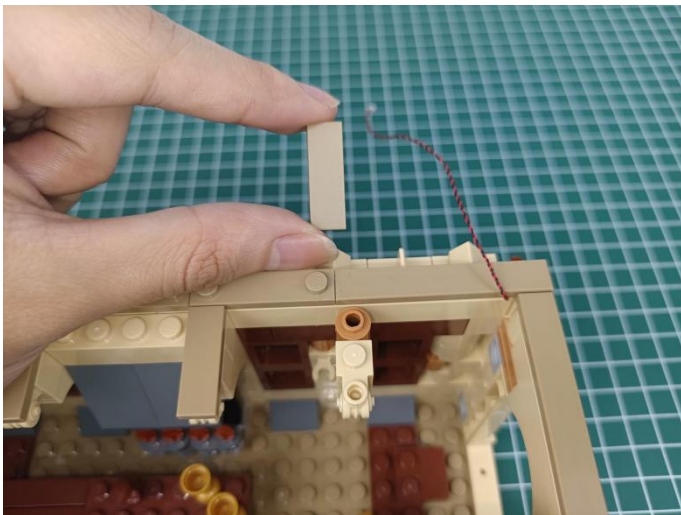



180

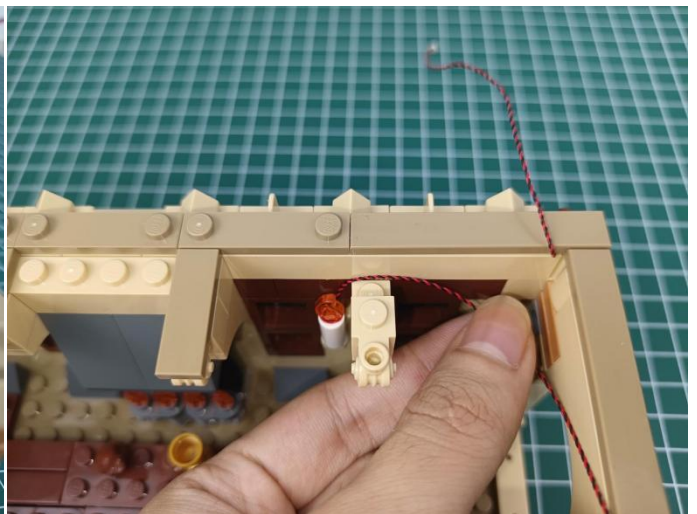



181

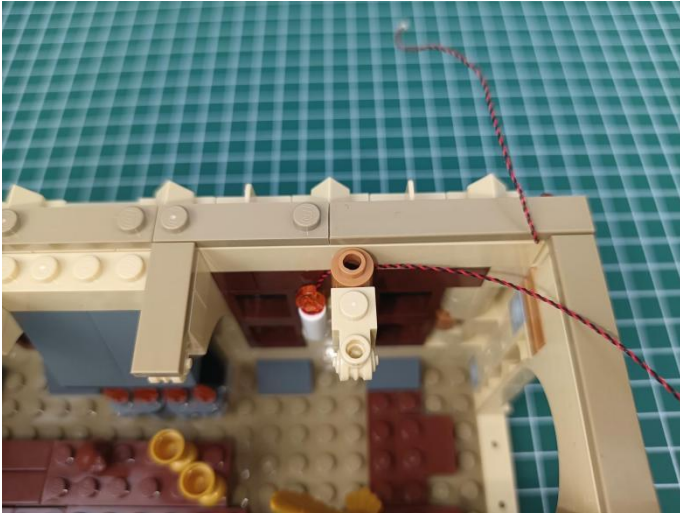



182

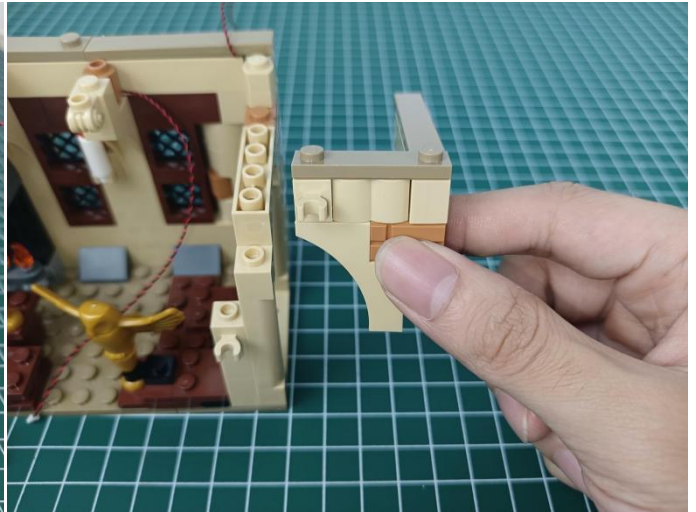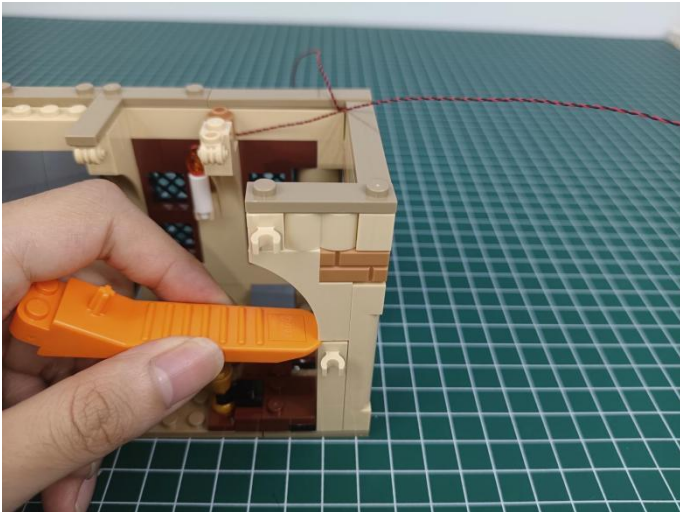



183

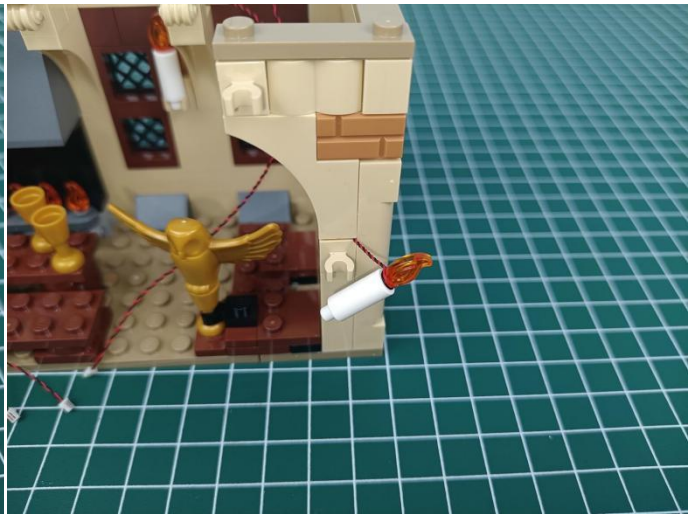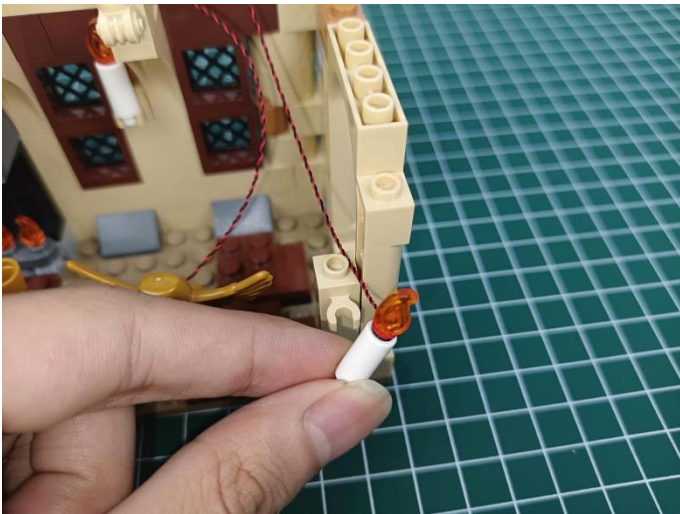

184

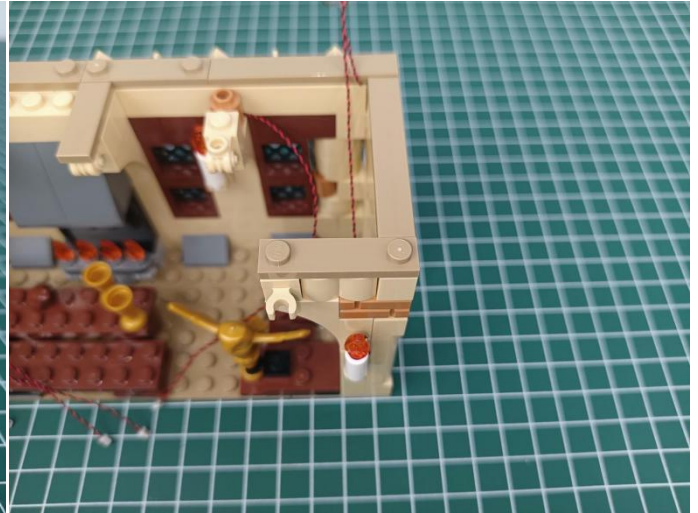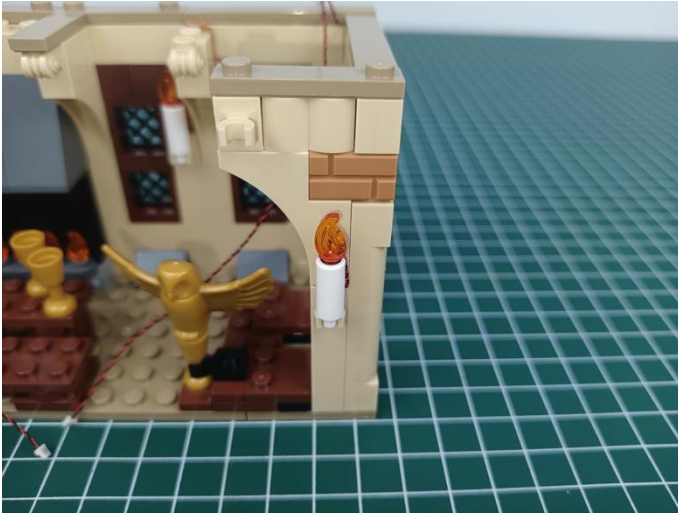

185

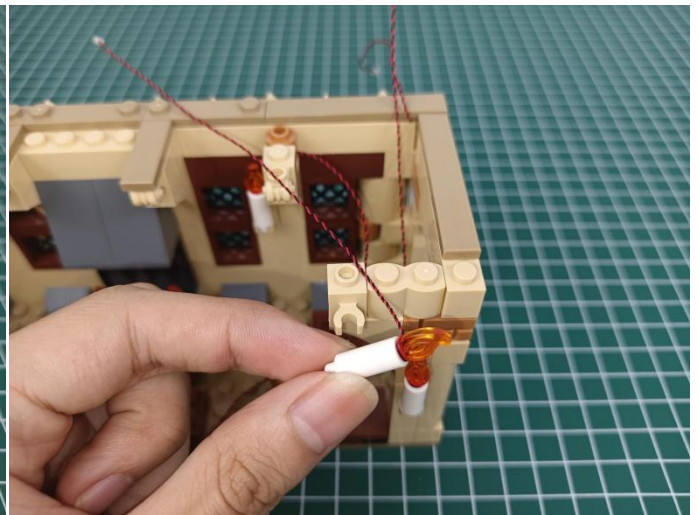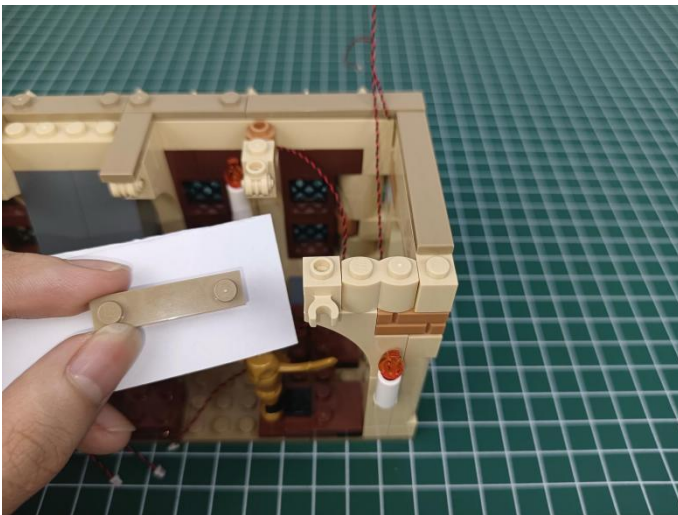



186




187





188

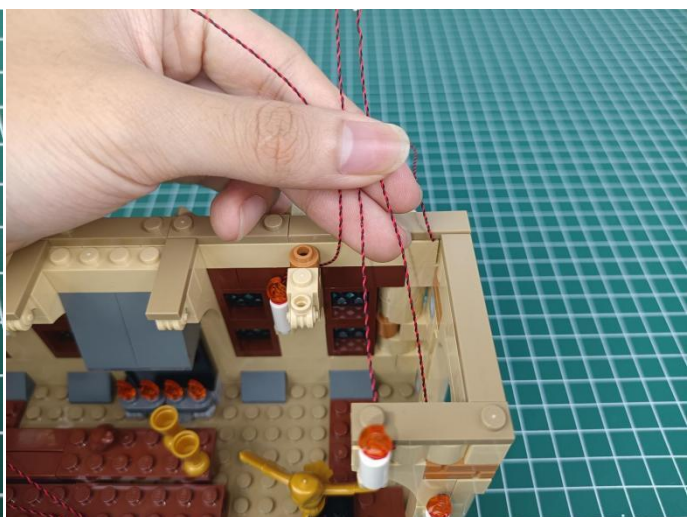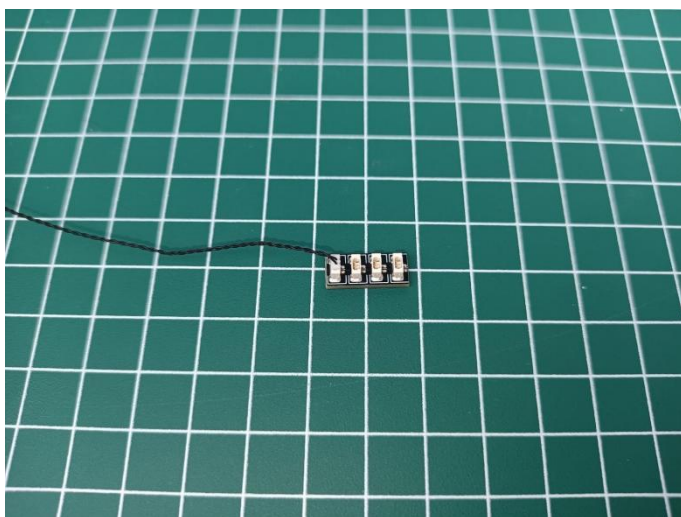


189

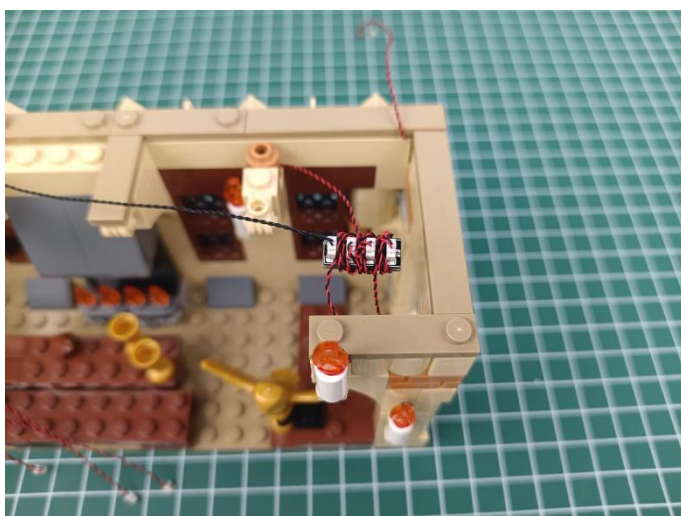


190

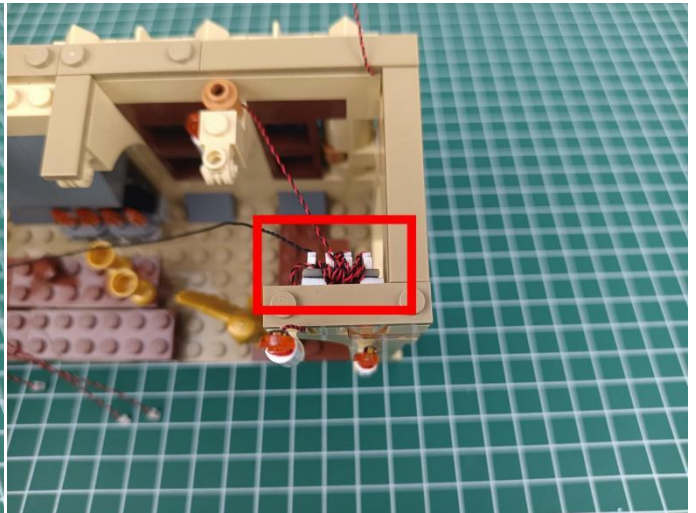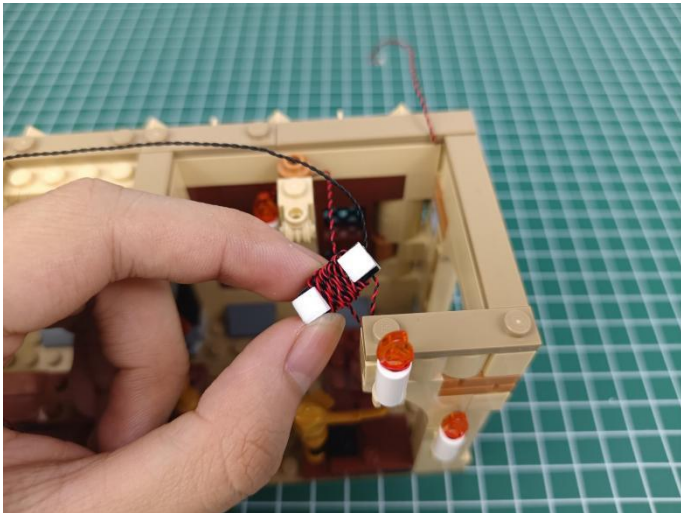



191

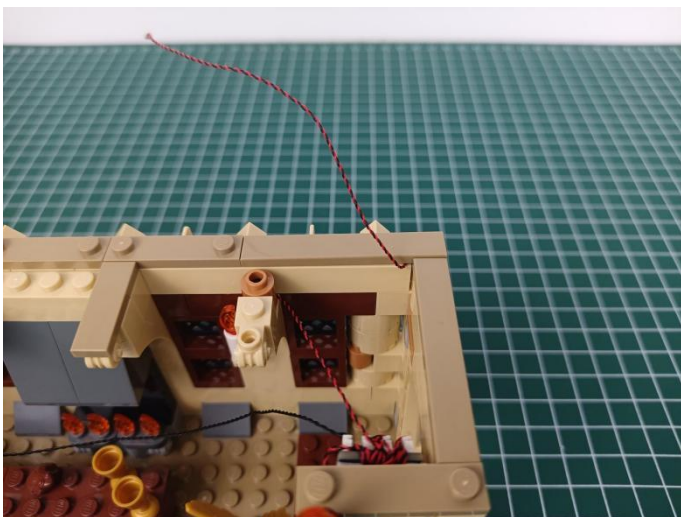



192

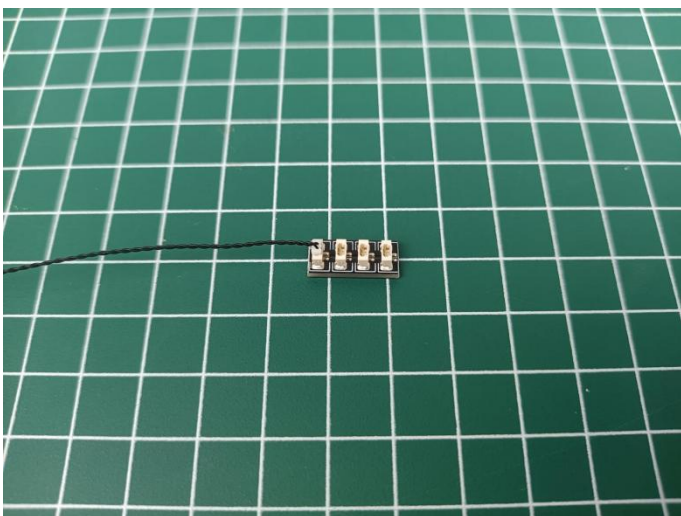


193

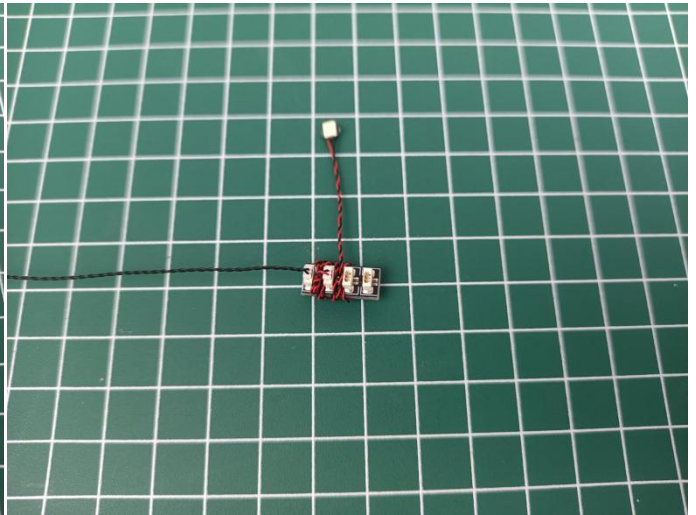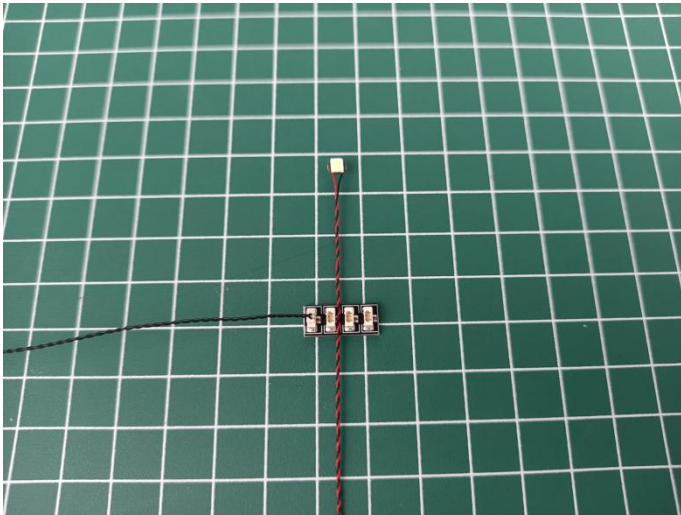


194

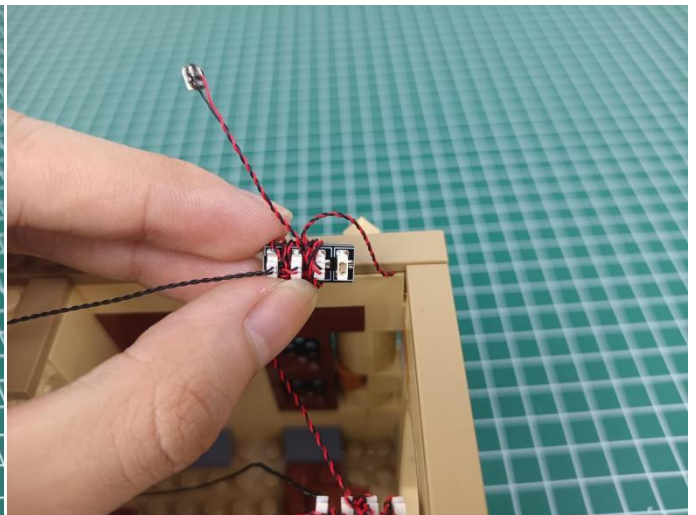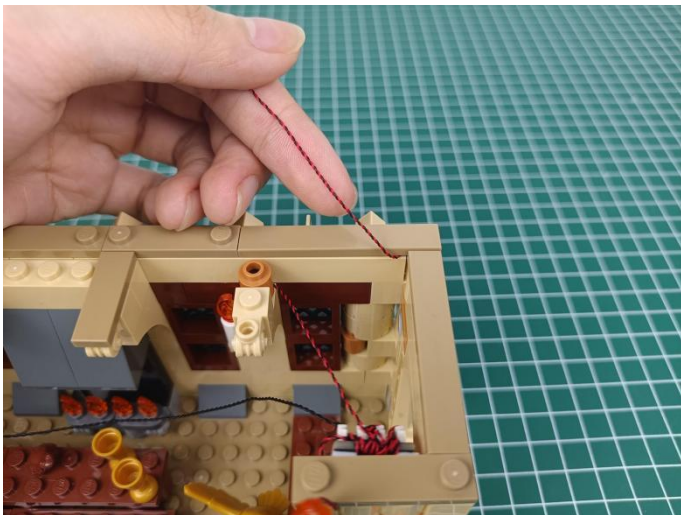


195

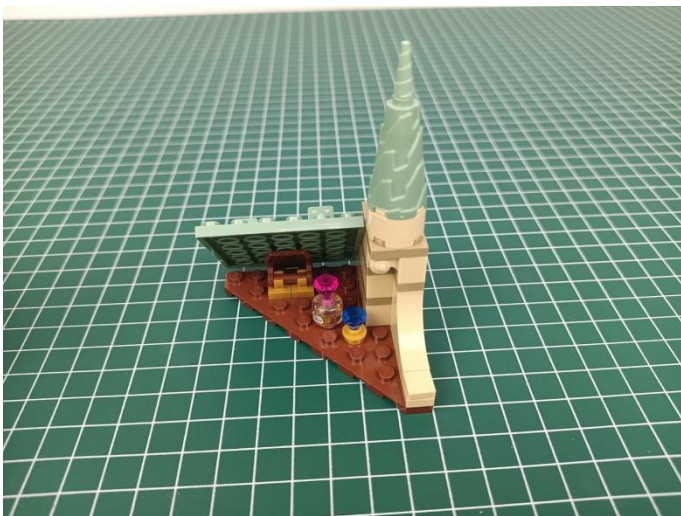


196

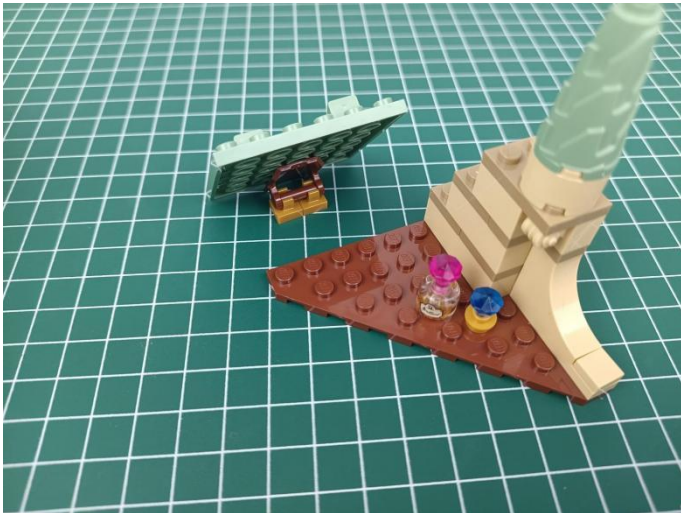

197

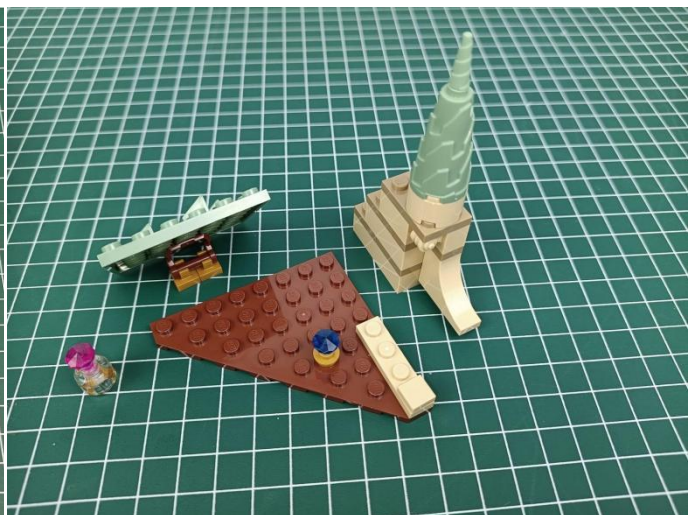

198

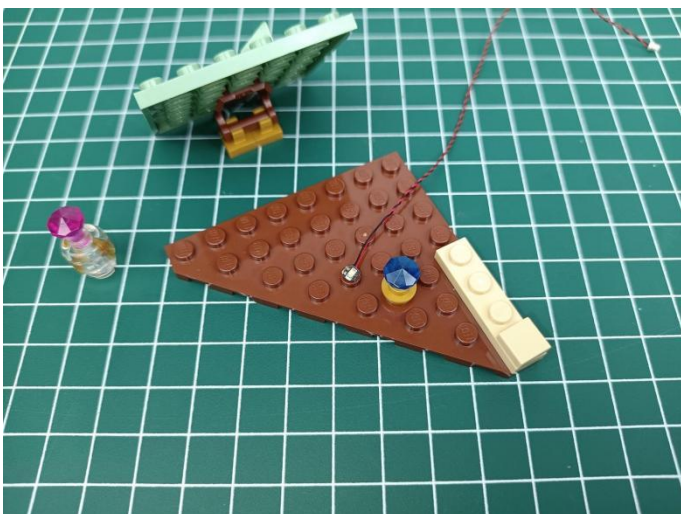

Tips

The plate without slit:

The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work.



The plate with slit:


The plate with slit:

The wire has enough space to avoid being squeezed endowed with longer service life and more stable effect.





The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormal heat during installation.

199

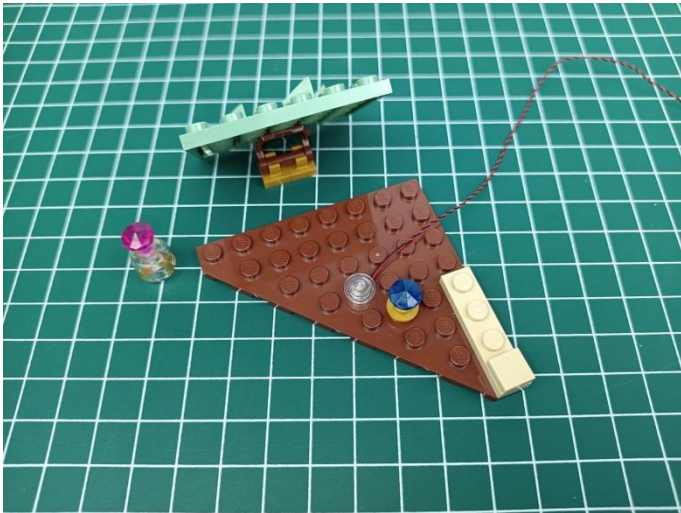


200

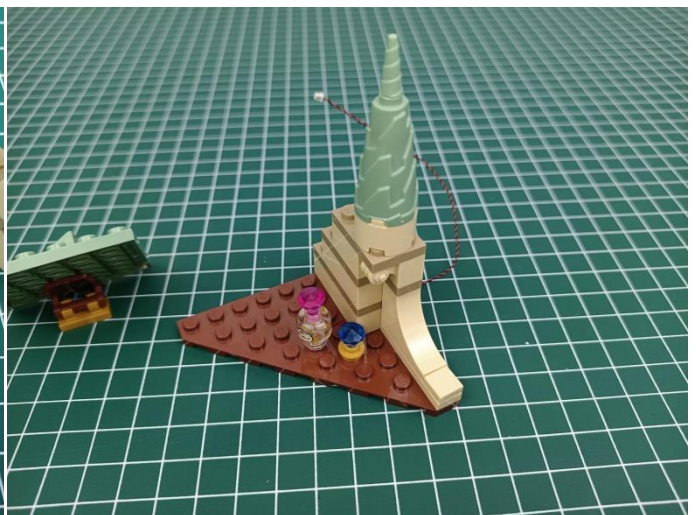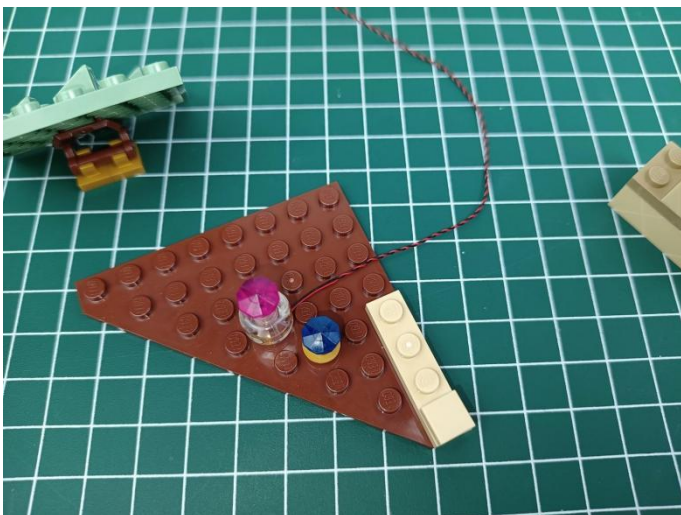


201





202

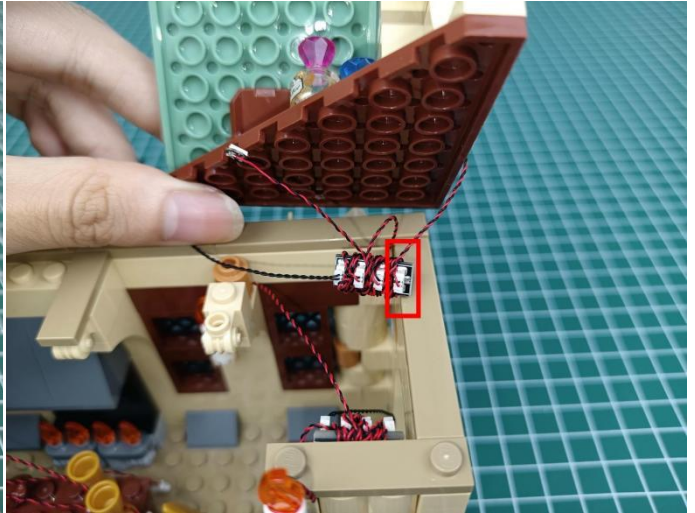


203

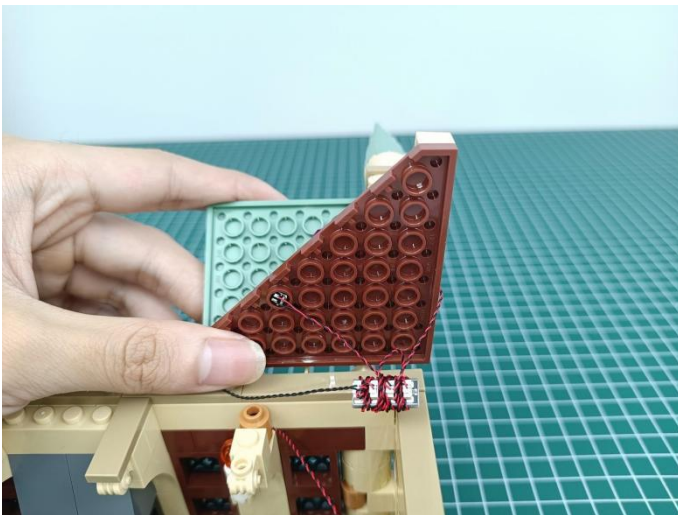


204

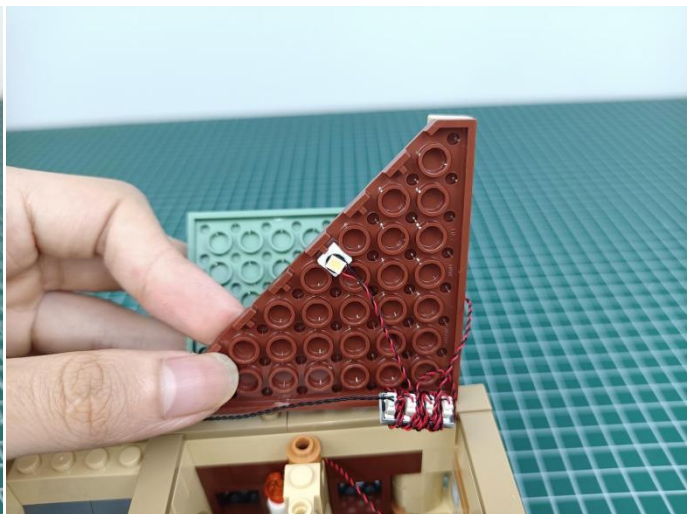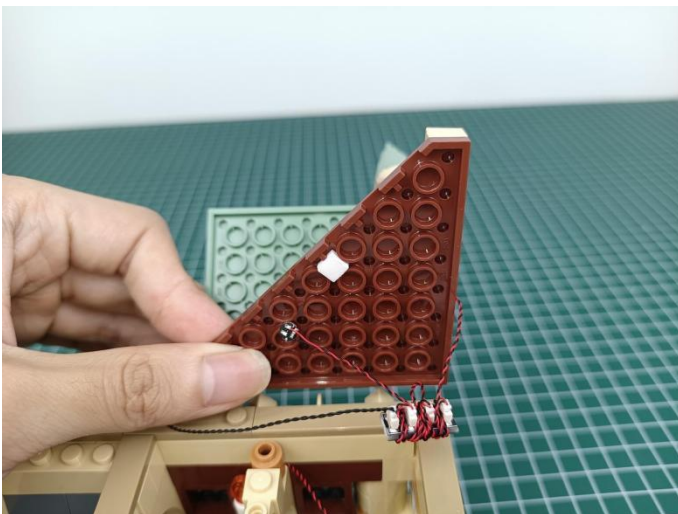



205

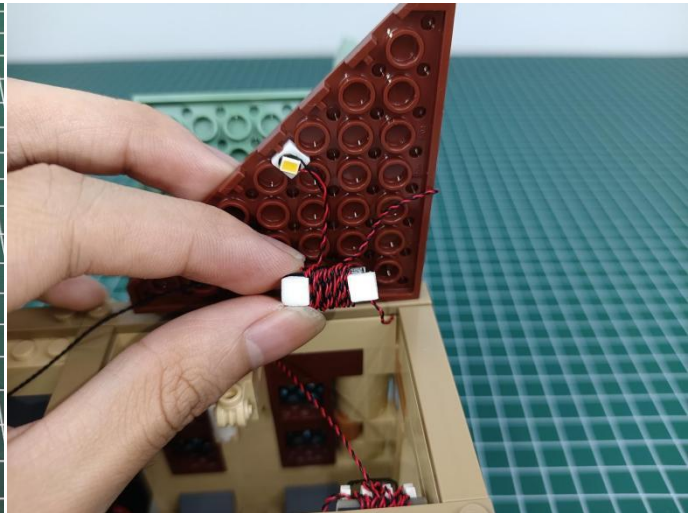

206

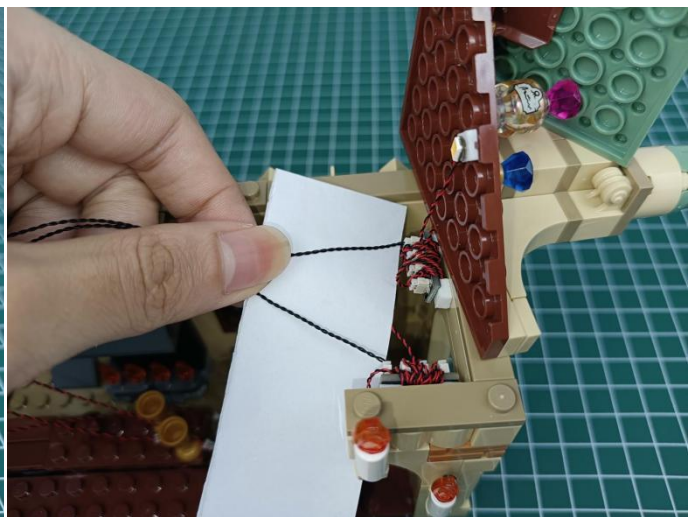



207

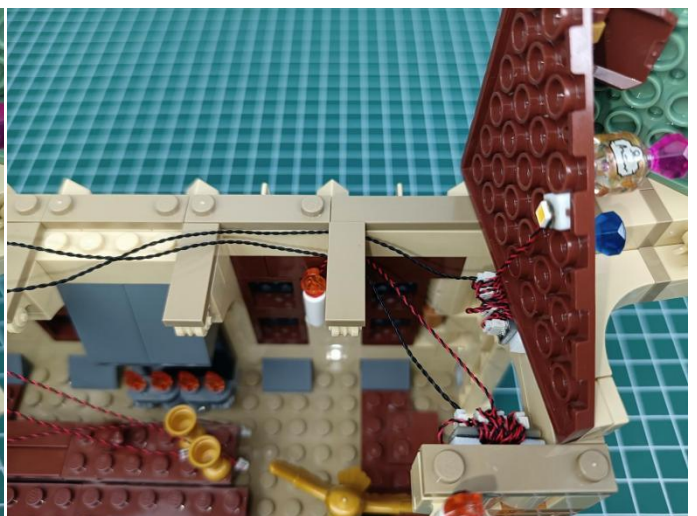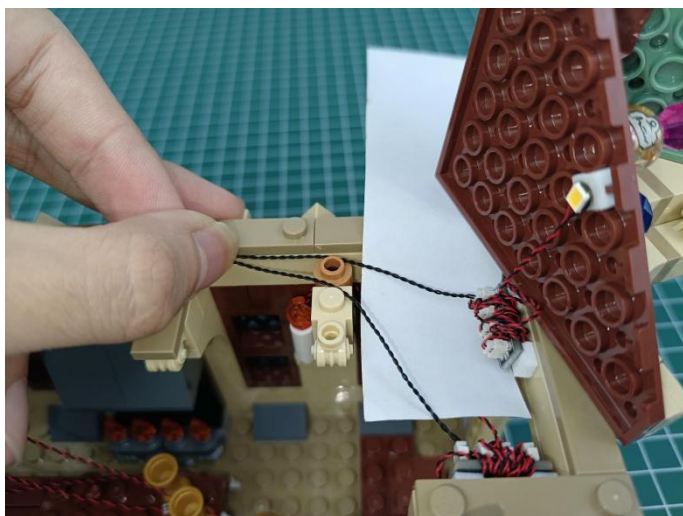


208




209

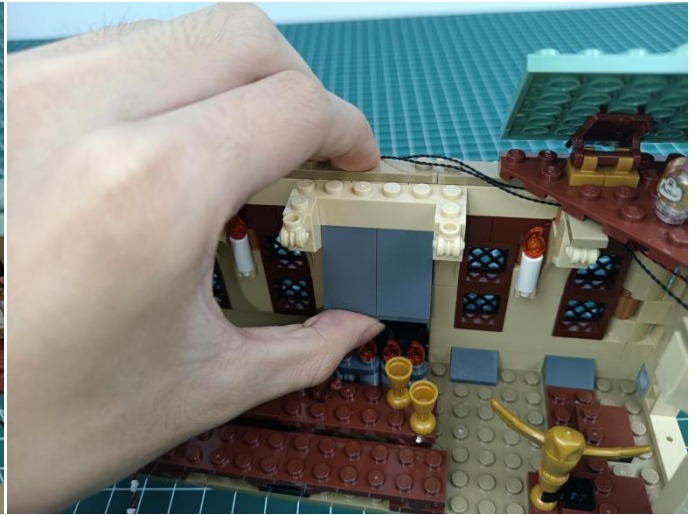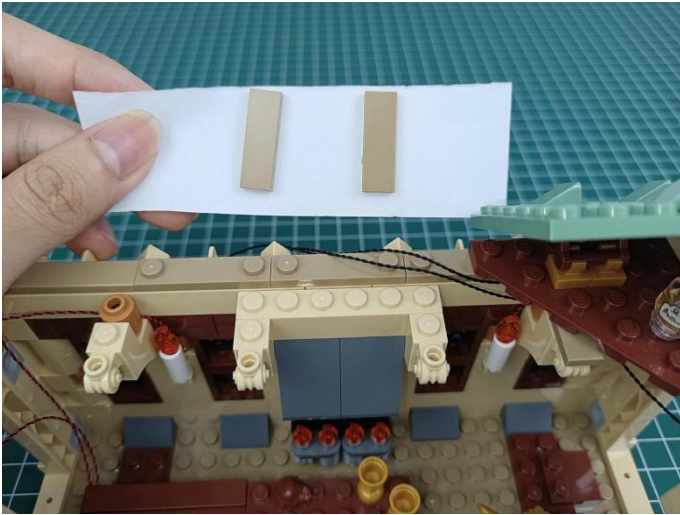


210

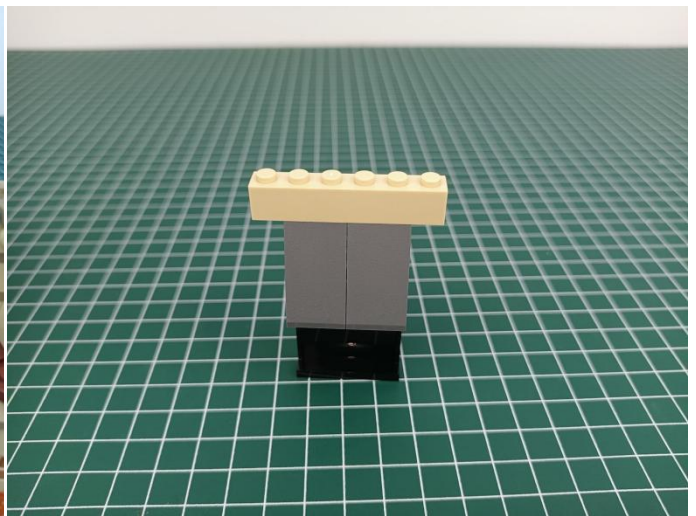


211

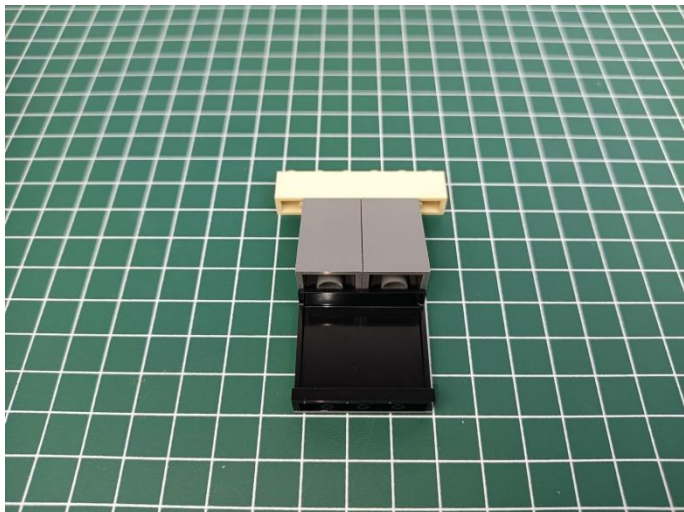



212

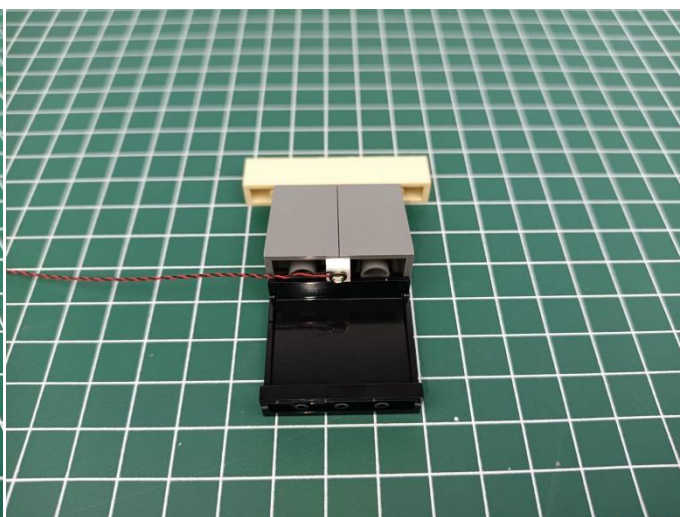



213

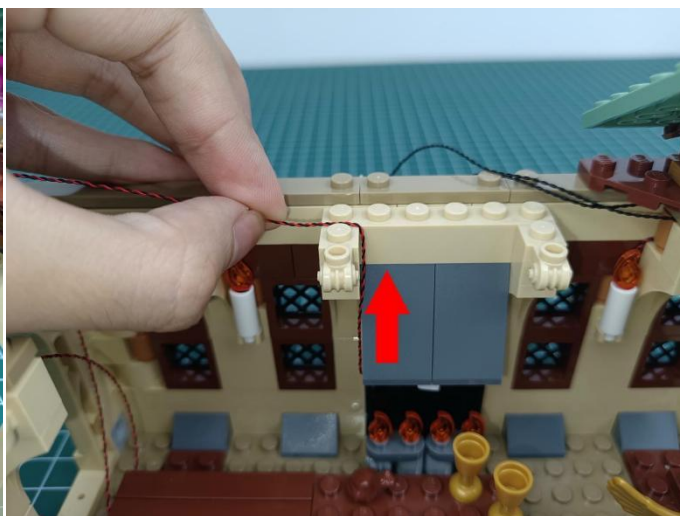


214

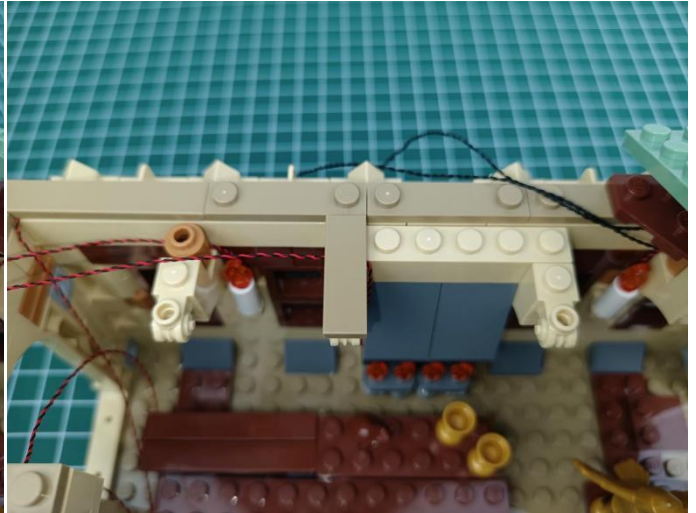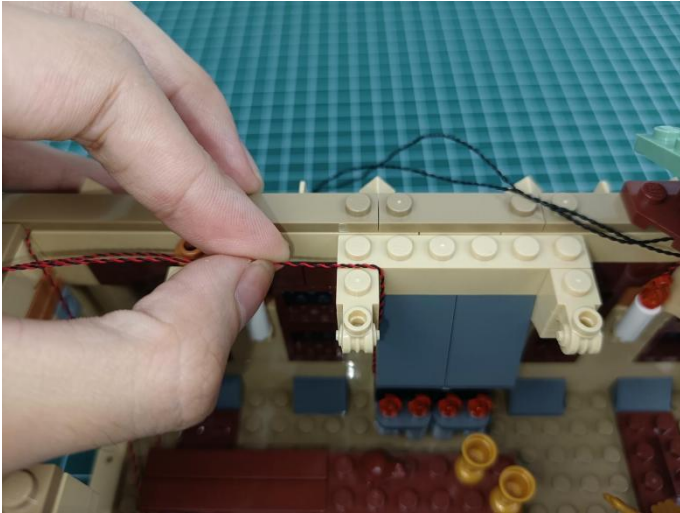



215

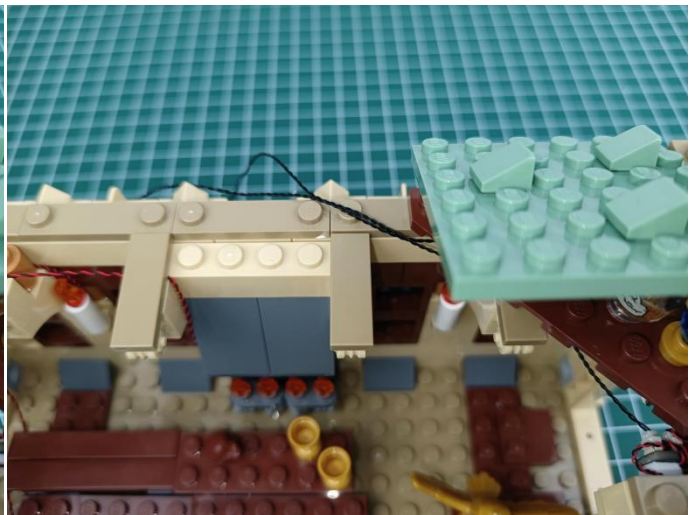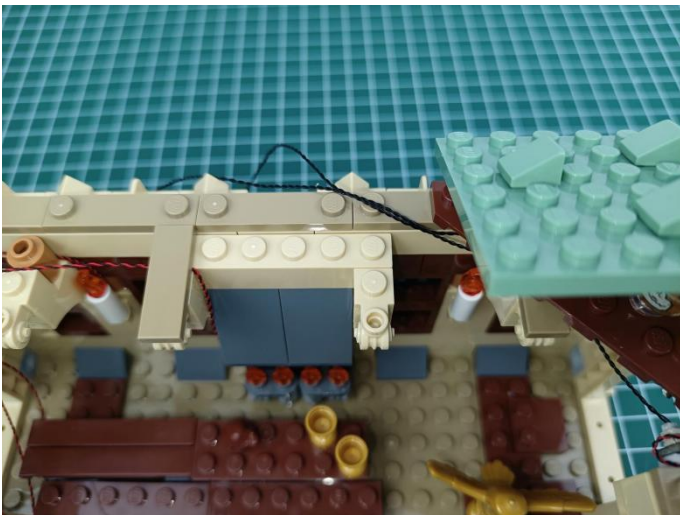


216

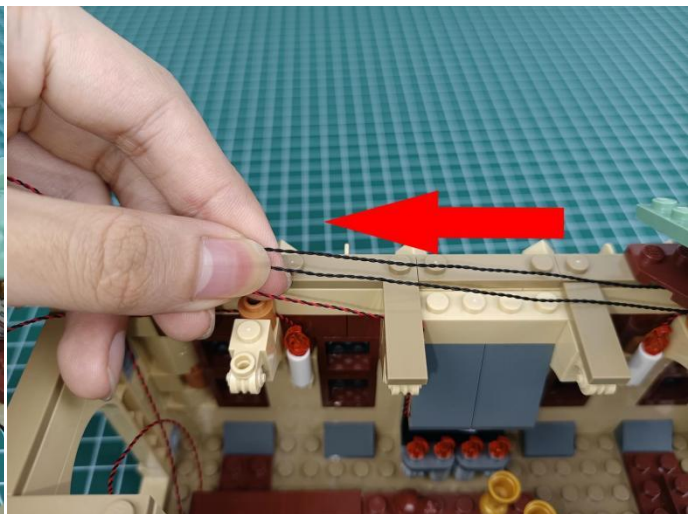


217

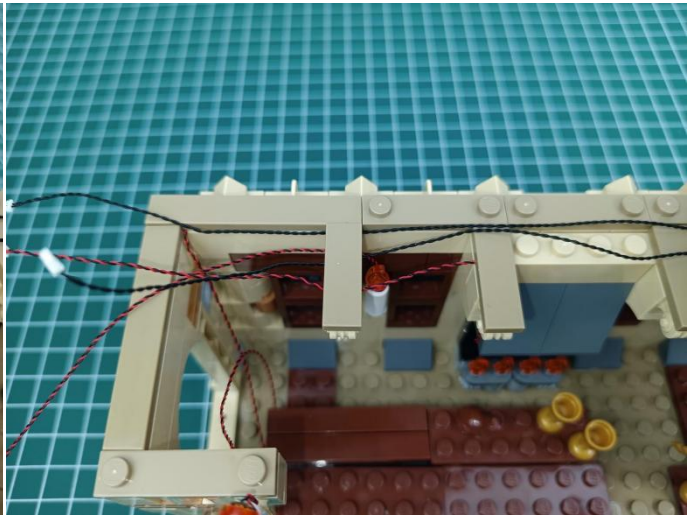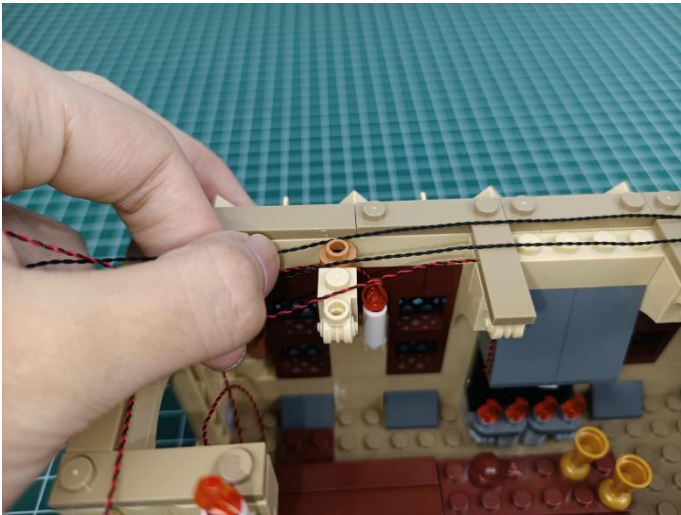



218

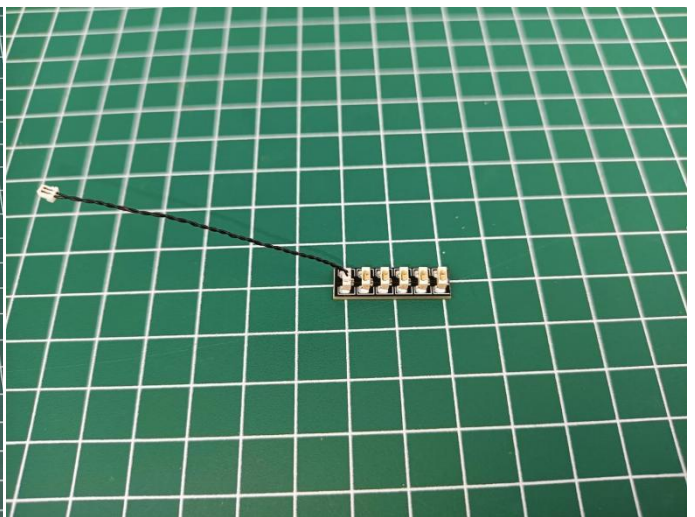



219

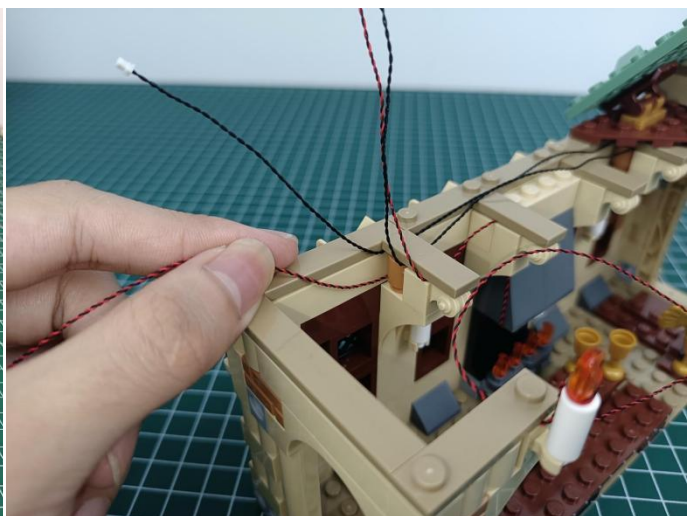



220

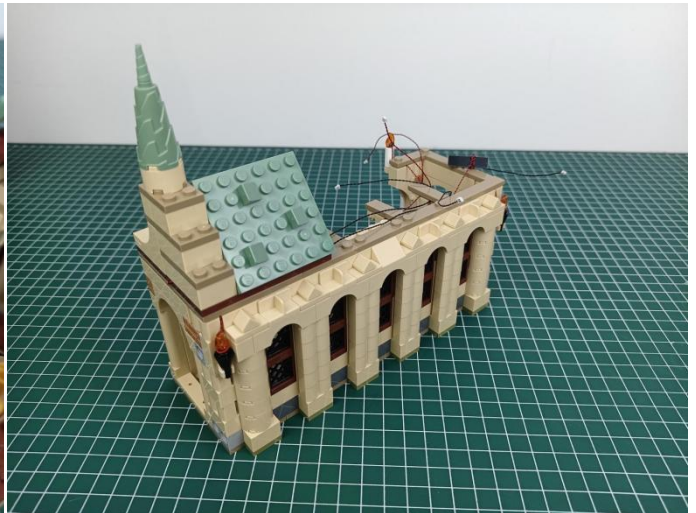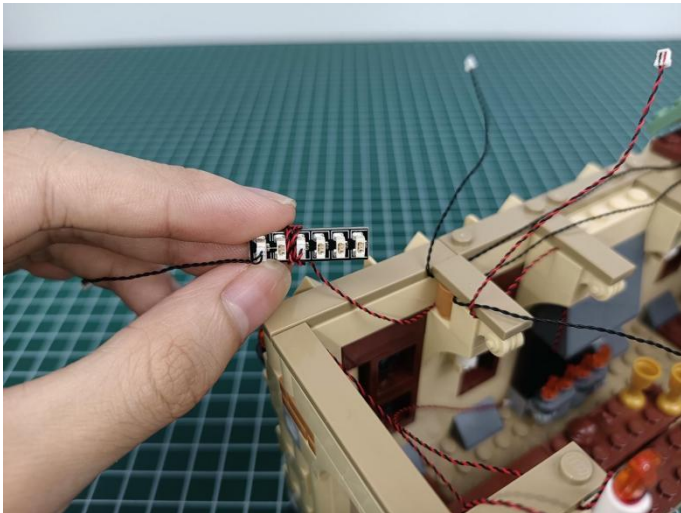


221

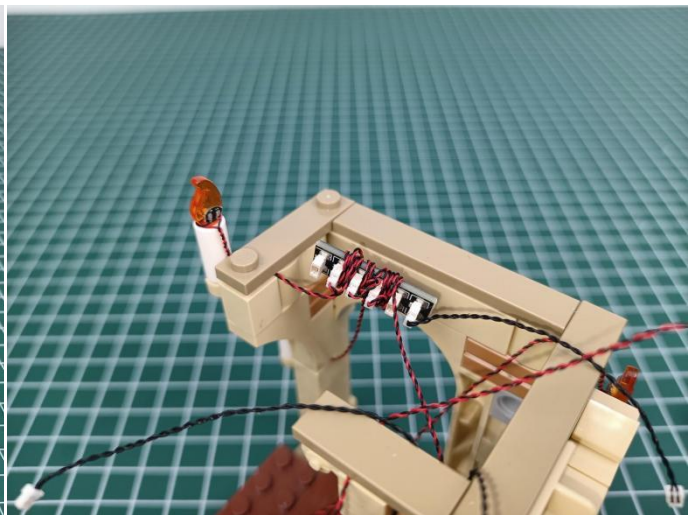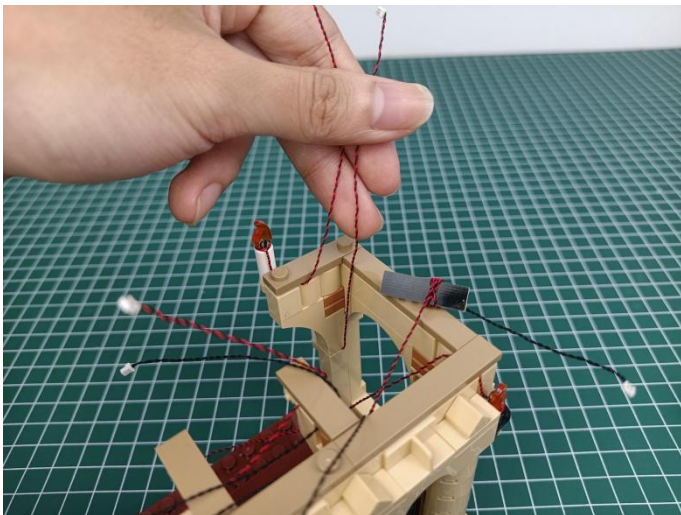


222

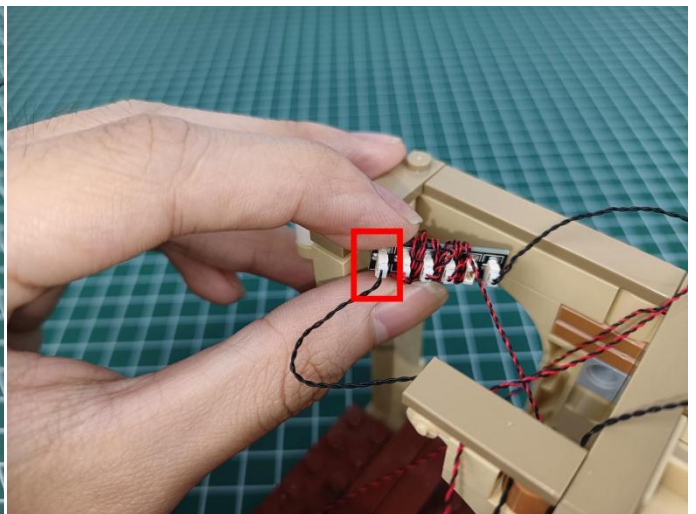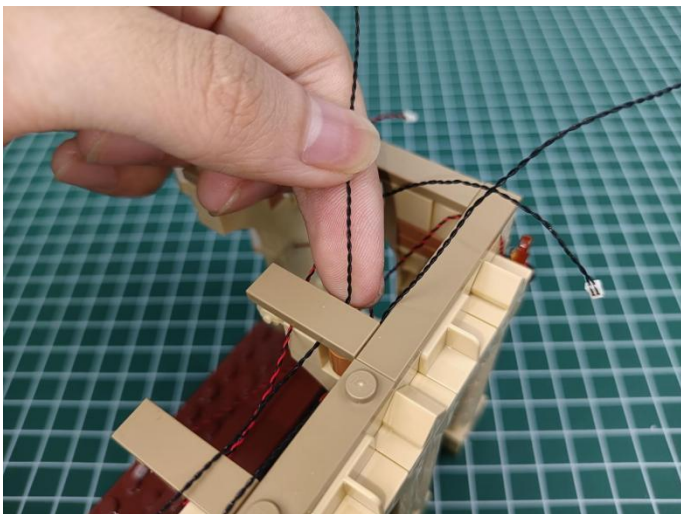



223

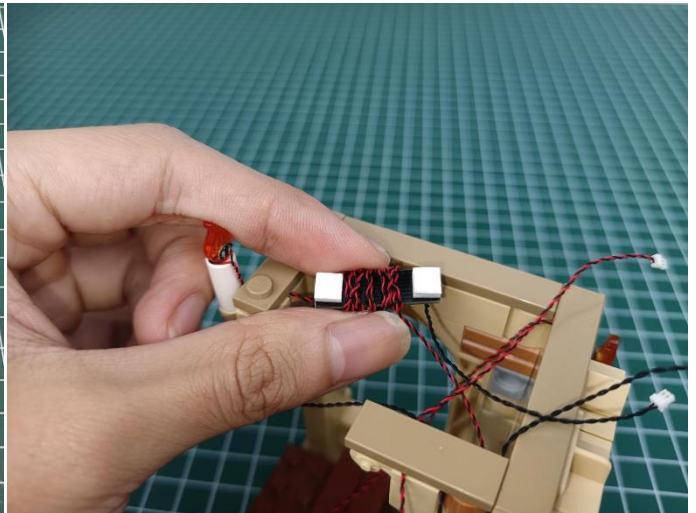

224

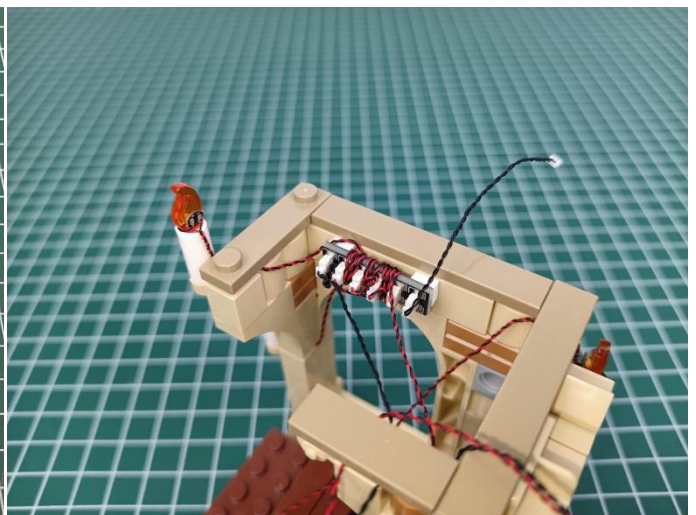


225

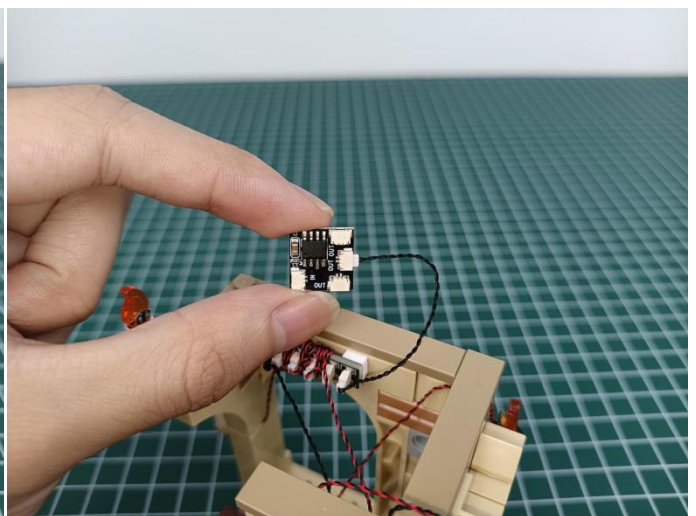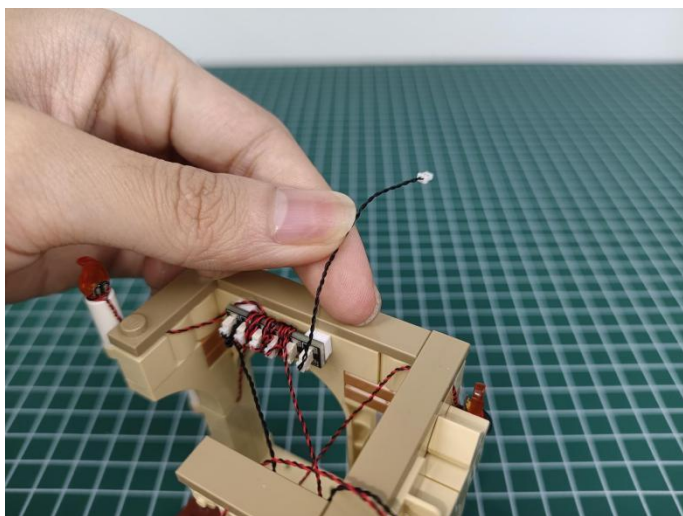



226




227

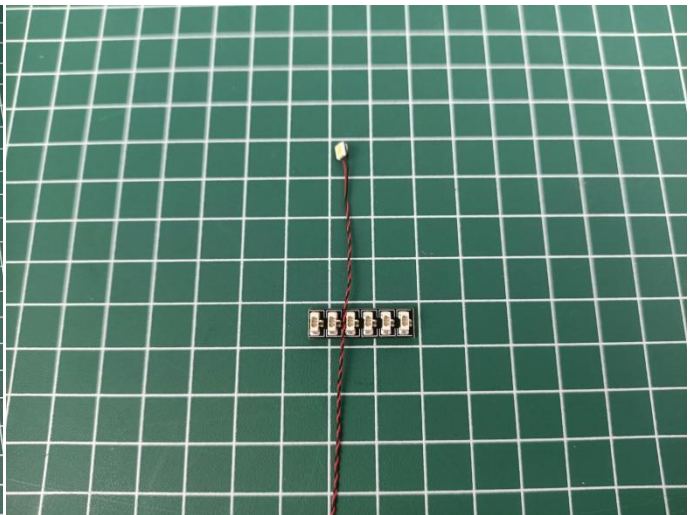


228

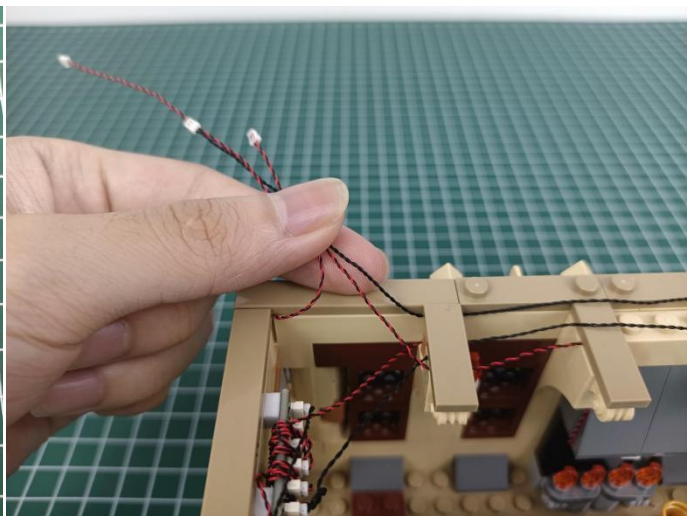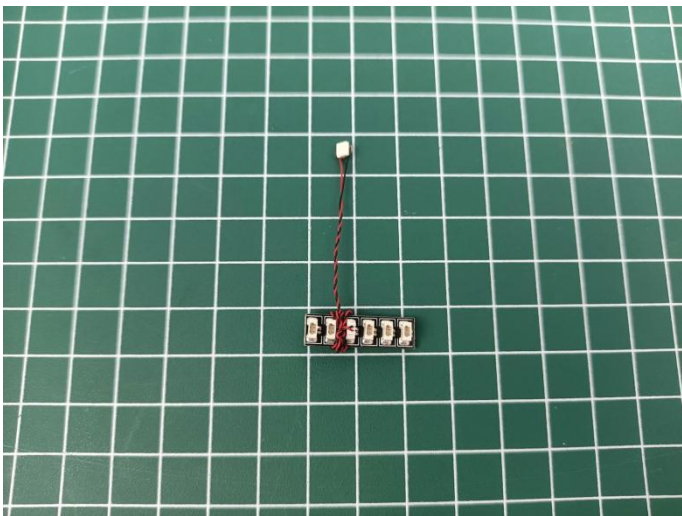


229

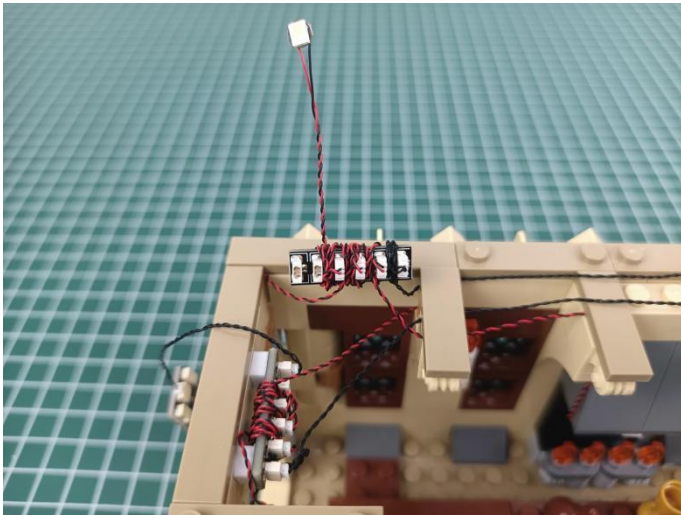

230

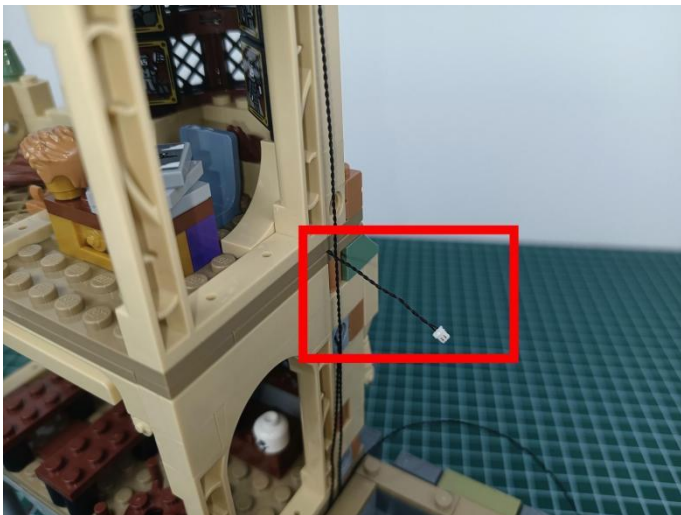


231

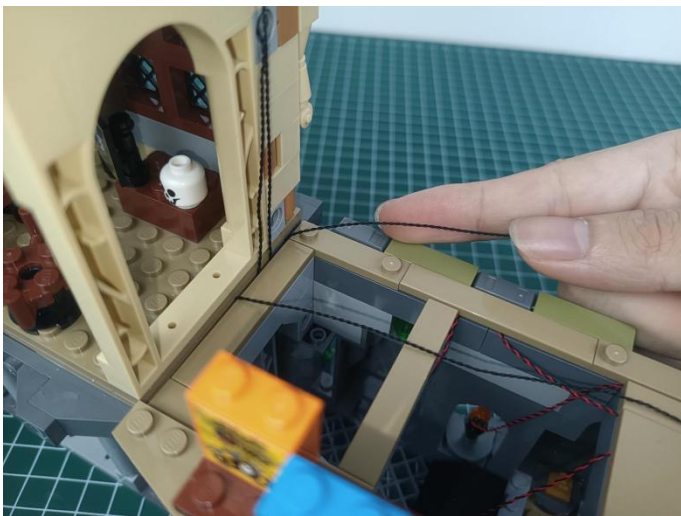



232




233

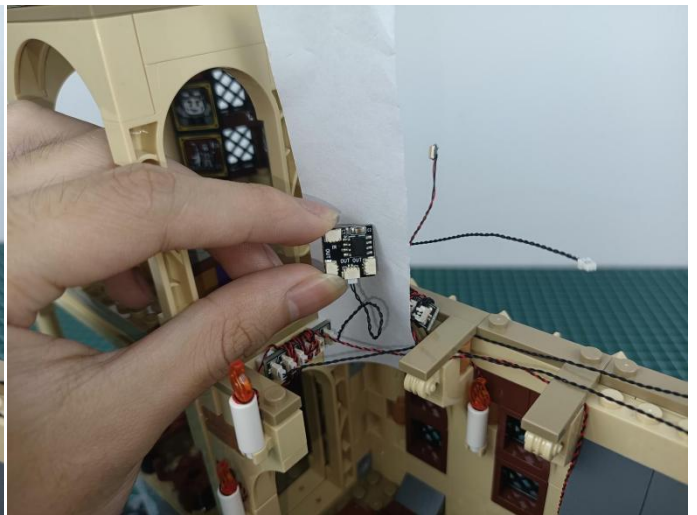


234

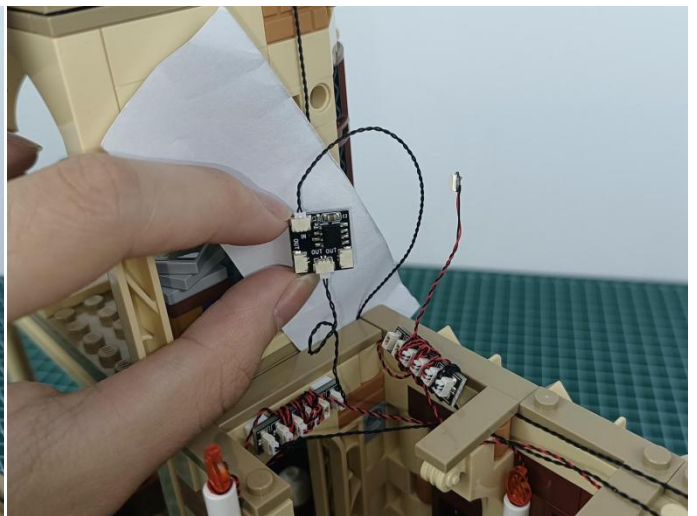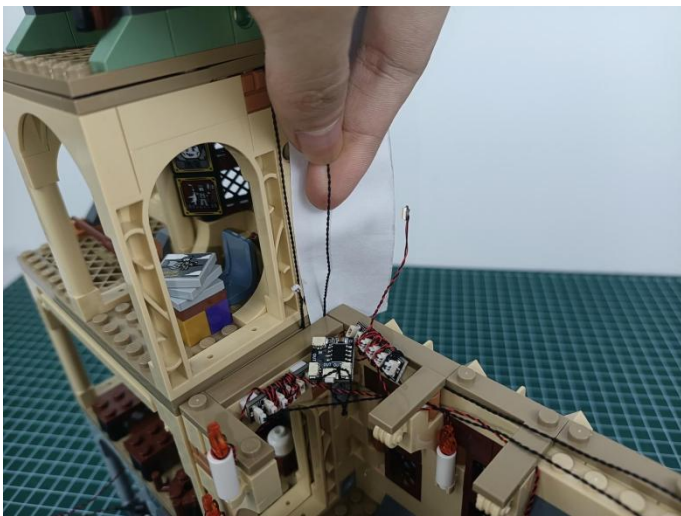


235

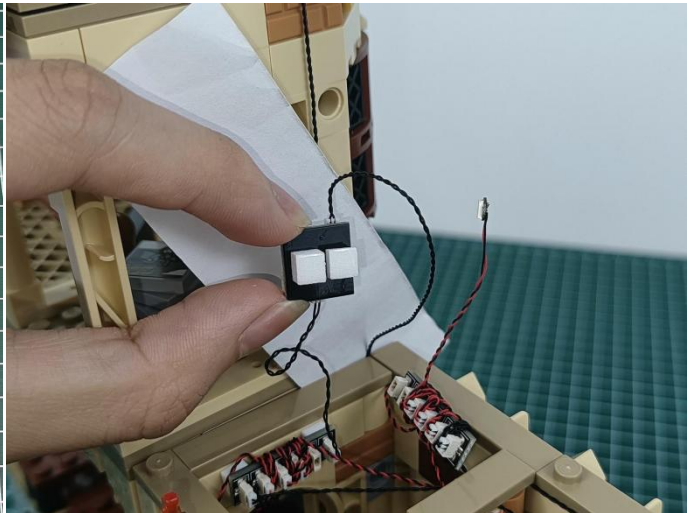


236

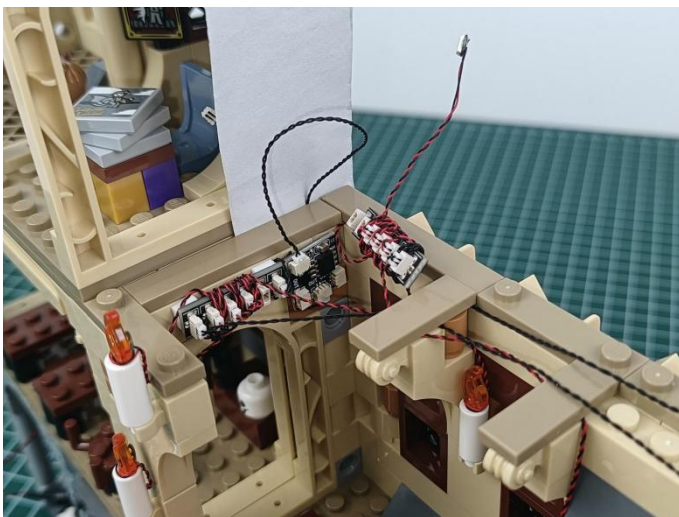



237

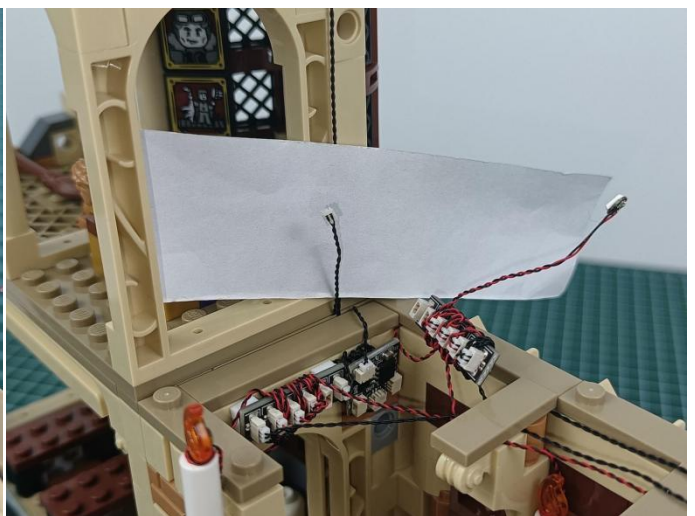



238

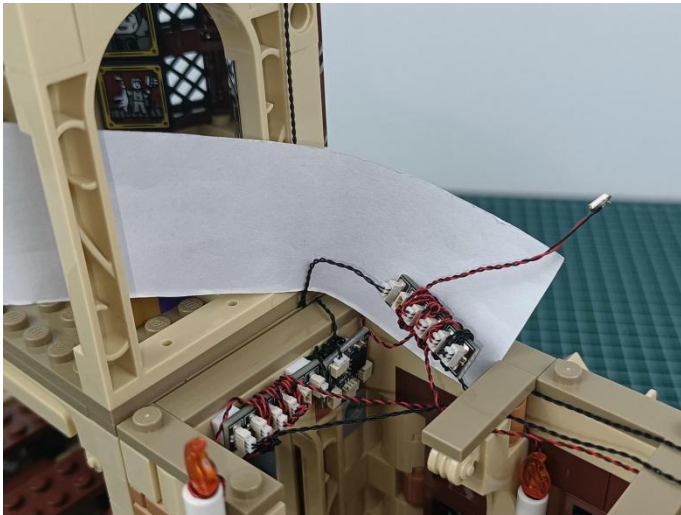


239

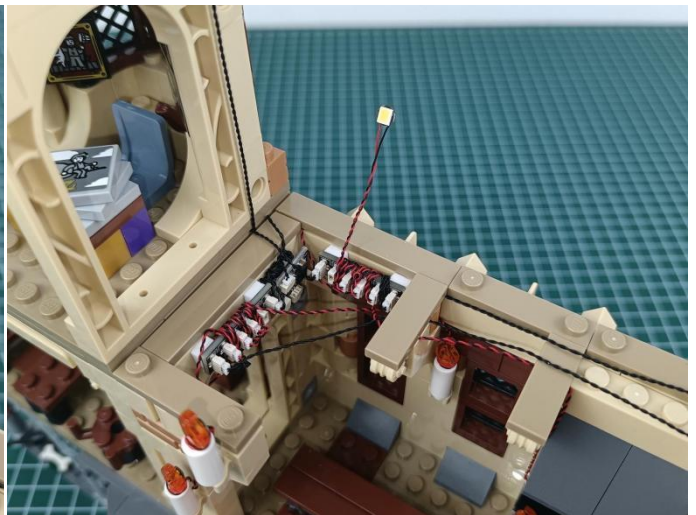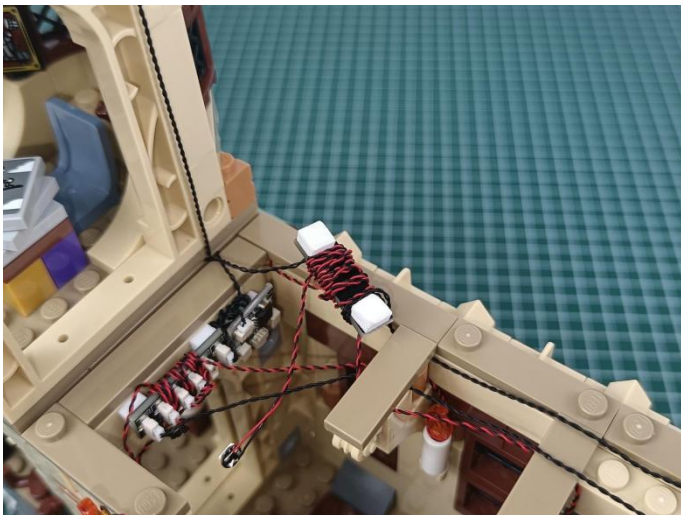


240

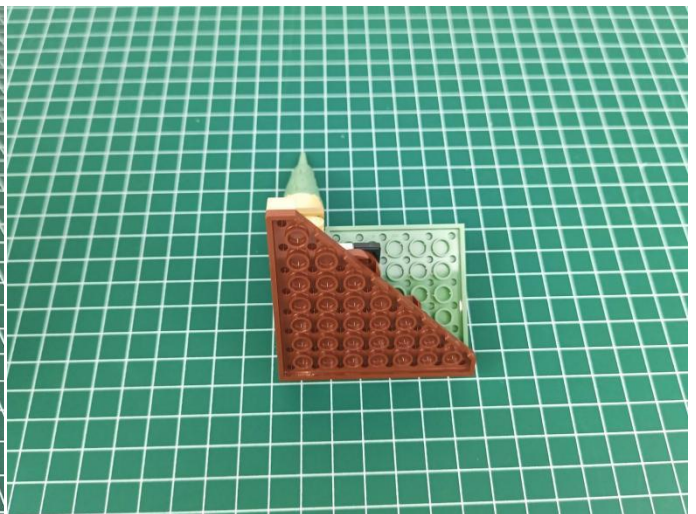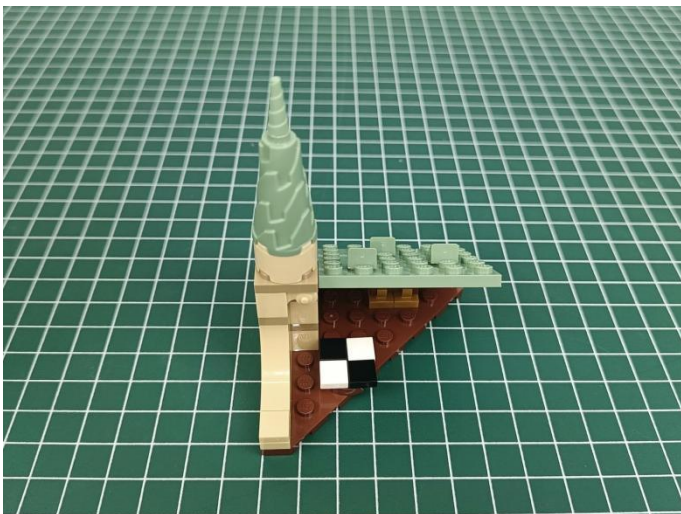

241

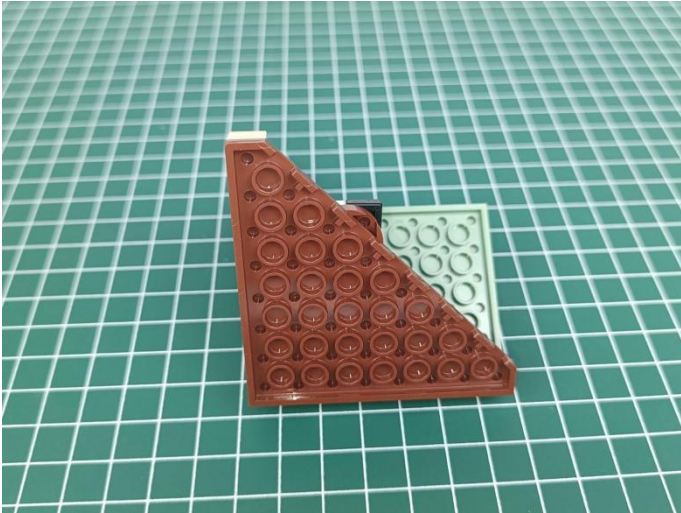

242

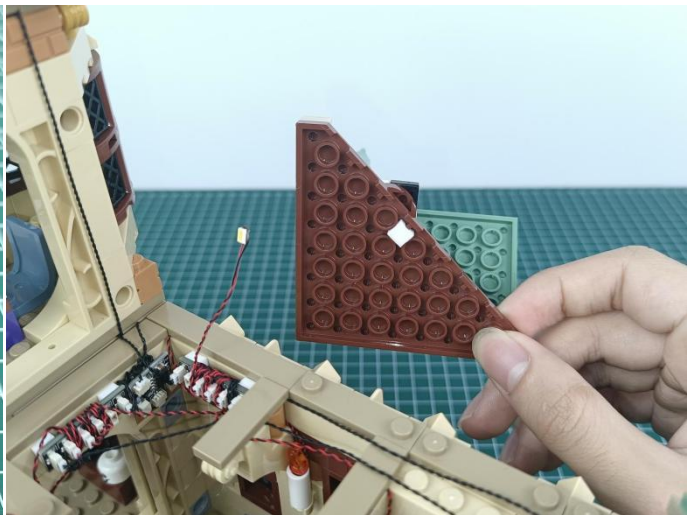

243



244



245



Good job, you've done all the installation steps, power it up and enjoy your work.



The battery box can also power the set. If it is necessary to change the power supply , prepare three AA batteries, install them in the battery box, turn on the switch on the battery box, remove the plug of the USB Power Cable from the socket of the expansion board,plug the plug of the battery box to the same socket in the expansion board to power the suit as well.

THANKS