# 21330 Home Alone LED lighting Kit (Classic Version) P28701

### Instructions for installing this kit:



## Step 1 Test:

#### The lighting materials are as follows:


Label	Content	Quantity
Bit Lights-15CM-Warm White	Bit Lights-15CM-Warm White	2
Headlights-30CM-Warm White	Headlights-30CM-Warm White	4
Headlights-15CM-Warm White	Headlights-15CM-Warm White	2
LED Strip Lights-Warm White	LED Strip Lights-Warm White	2
Expansion Board	6 Socket Expansion Board	1
	4 Socket Expansion Board	6
AA Battery Box	AA Battery Box	1
USB Power Cable	USB Power Cable	1
Connecting Cables-5CM	Connecting Cables-5CM	1
Connecting Cables-50CM	Connecting Cables-50CM	1
Connecting Cables-20CM	Connecting Cables-20CM	4
Light Strips-Warm White-28	Light Strips-Warm White-28	4
Light Strips-Warm White-21	Light Strips-Warm White-21	2
Wireless Power Connectors	Wireless Power Connectors	2
	Parts package	1

This set has a total of 14 bags. Take out the USB power cord .




The power supplies that can be used with the USB power cord are as follows (the voltage for normal use is 5V).

## **USB connectors to connect devices**

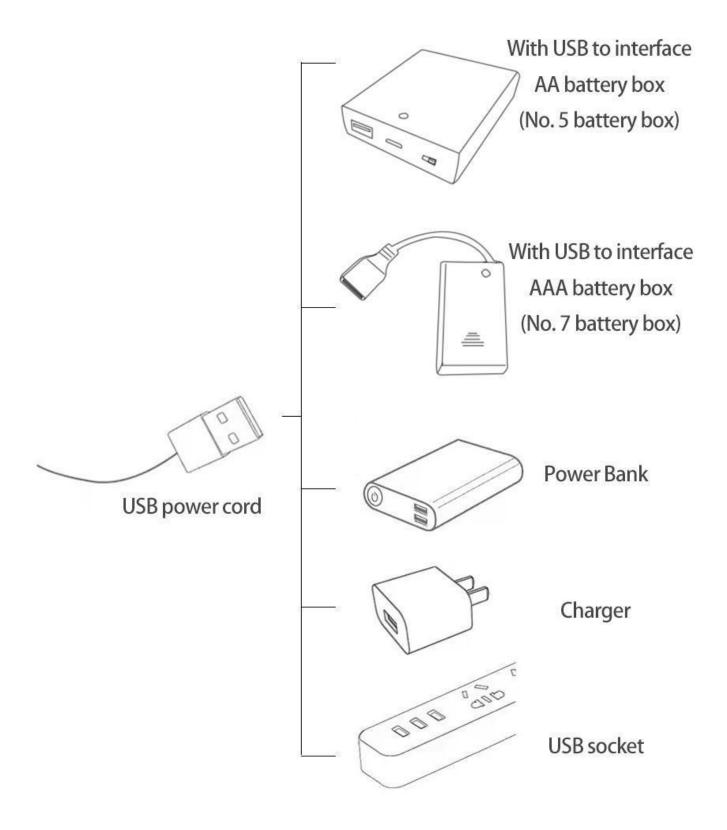


Connect the USB power cord to the mobile power supply (the power supply is self-provided, this article uses the mobile power supply, other power supply methods are shown in the figure above).

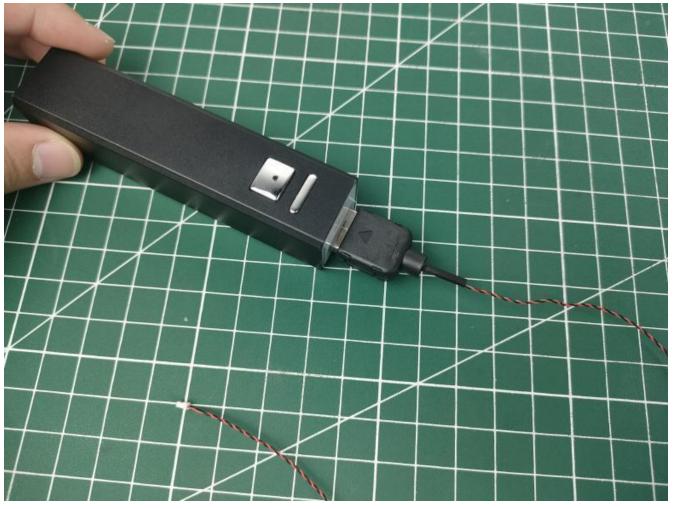


Take out a 6-seater expansion board.




Lift the seal of the expansion board.

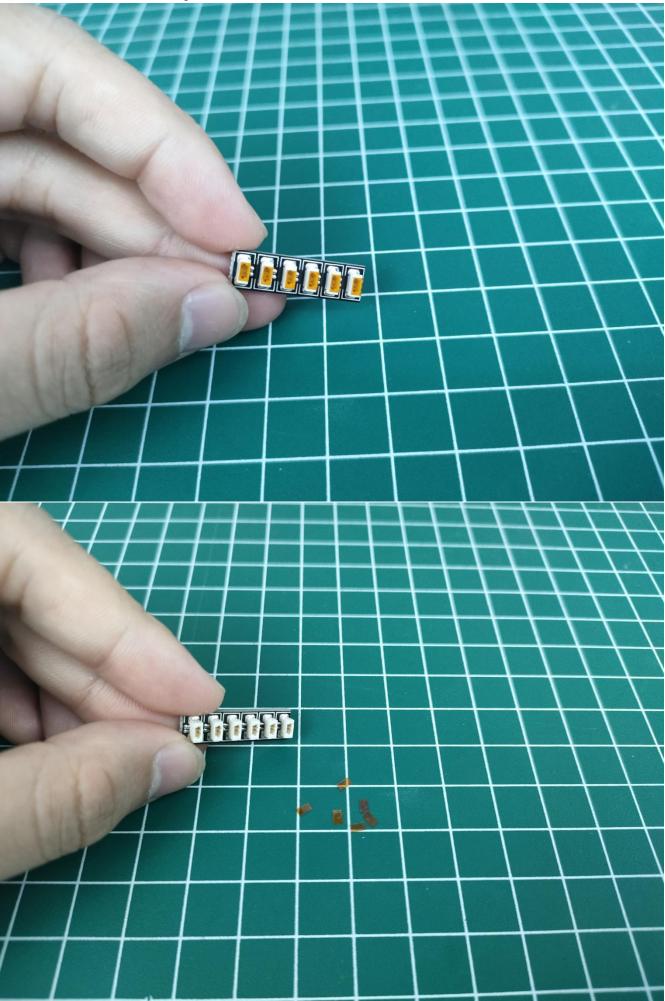


Please pay attention to the use of the interface. The interface is small. Please use it carefully: the = number of the 2P interface is aligned with the = number of the expansion board. The equal sign on the expansion board refers to the two solder joints on the outside, not the two inside the jack Metal pin.

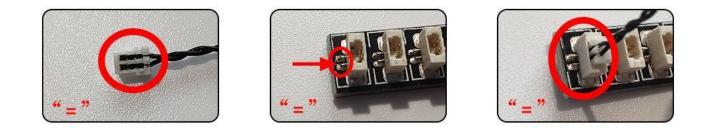

Connect the small plug of the USB power cord to the expansion board.

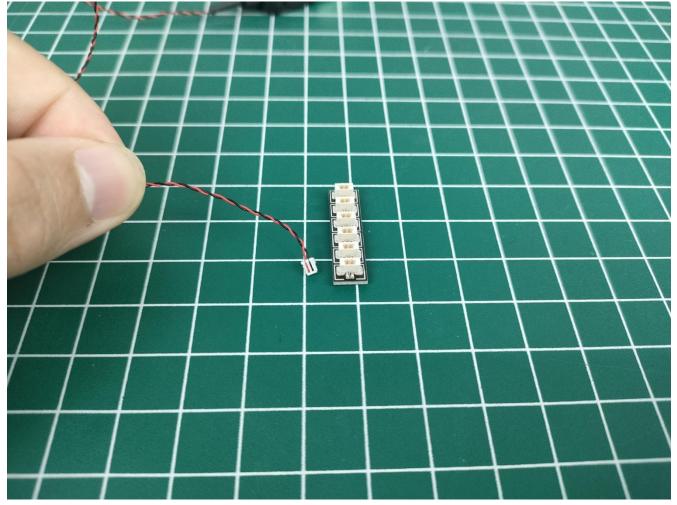


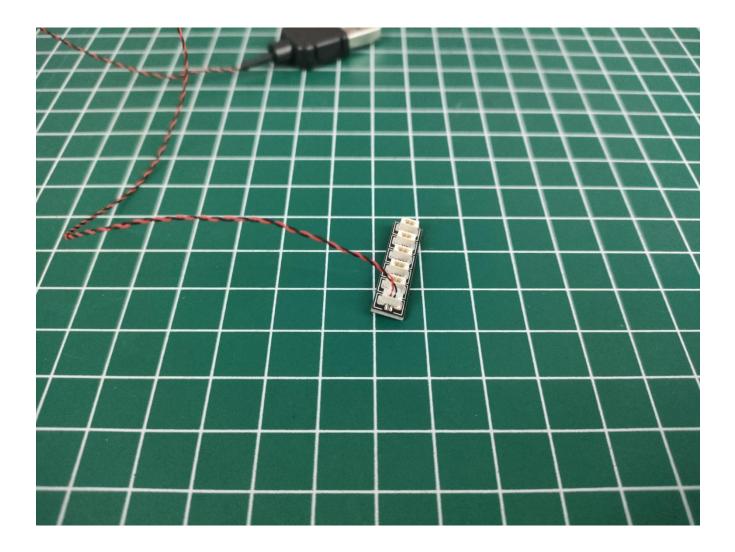


Take out the red light strip and prepare to test.




Connect them to the expansion board (you can test one by one). Turn on the power, test the lighting, and check whether it is normal. If there is any abnormality, please contact us in time.

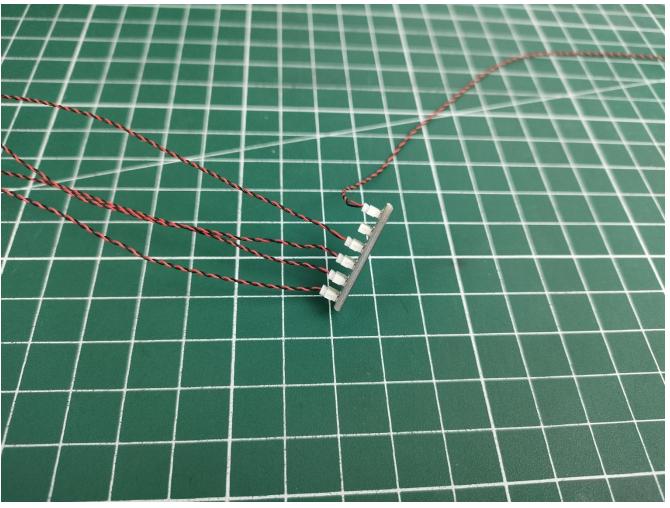

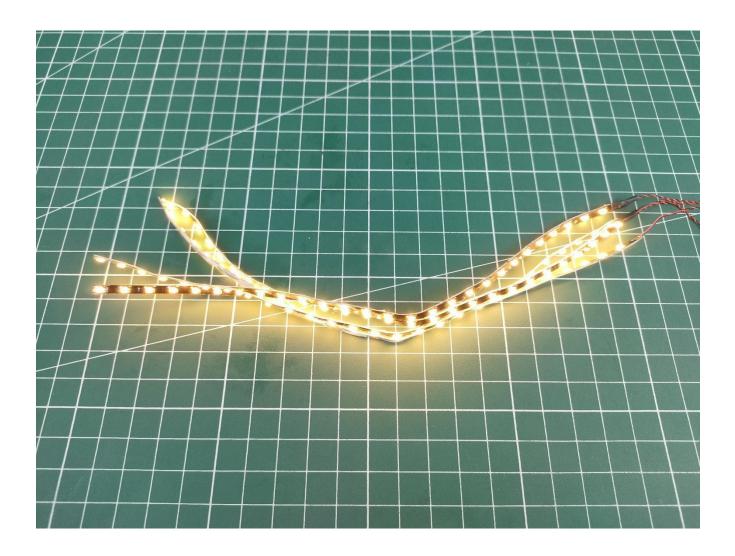

Pull out the lighting after the test is normal.

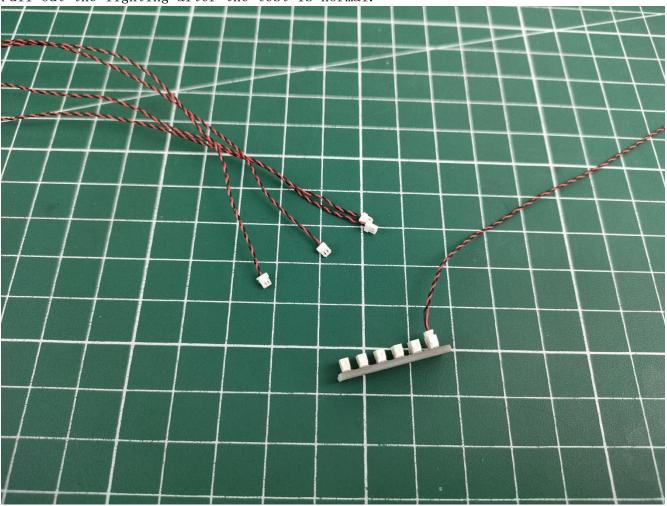


After there is no abnormality, first temporarily put the lighting back into the original bag, and prepare to test other lighting parts. In order to prevent the lighting from not bright after installation, the lighting in other bags are also tested in the same way. After testing a bag, please temporarily put it back in the original bag to avoid confusion with each other.



#### Note:


Please be careful when installing. The lamp wire is relatively slender and cannot be pressed on the raised position of the building block. It should pass along the gap, otherwise the lamp wire will be pinched.

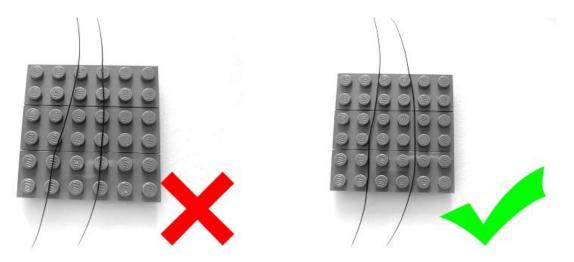



#### start installation:





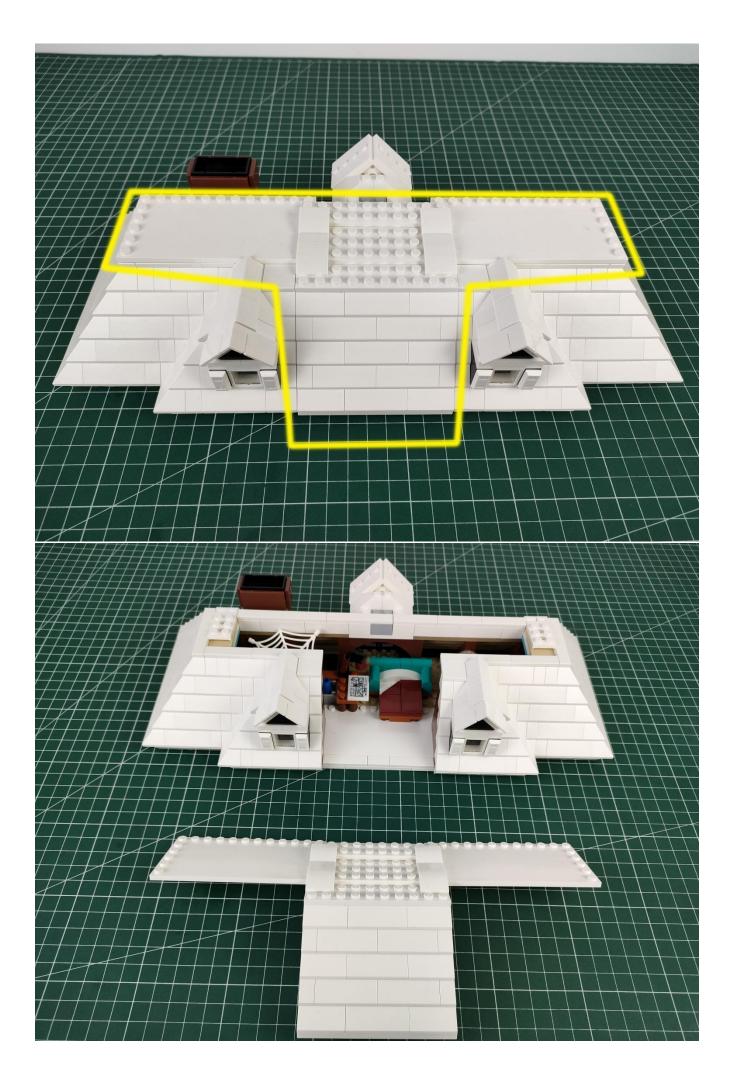

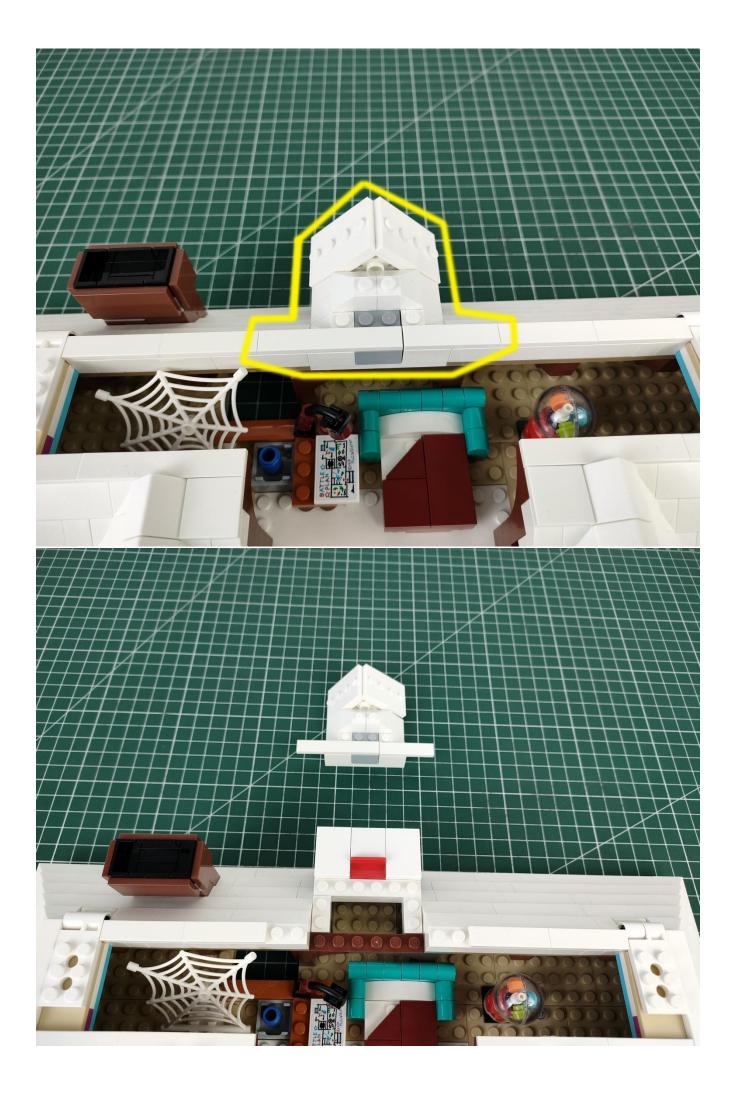


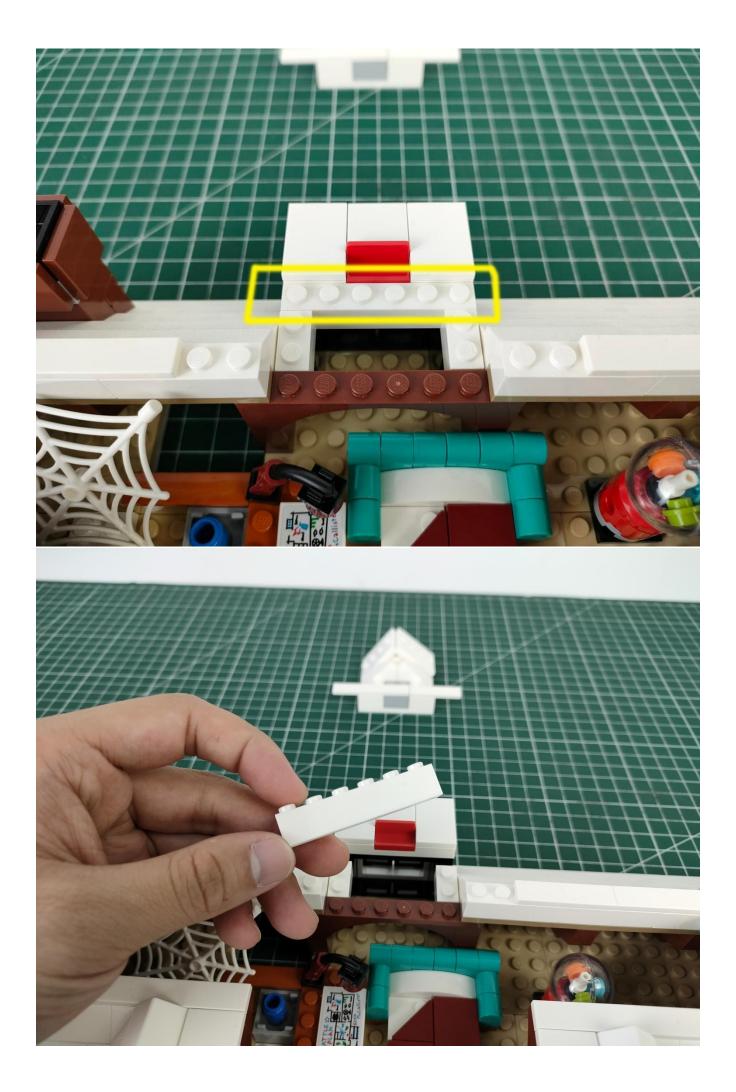






### The orange small round plate has no cutout




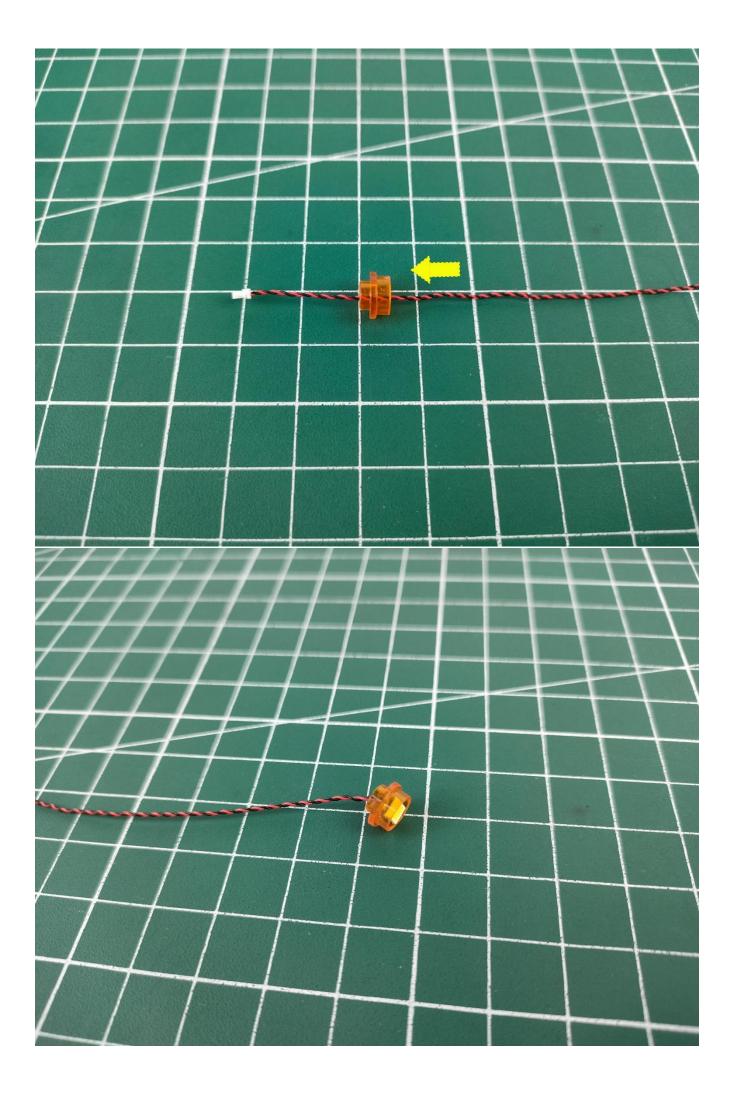


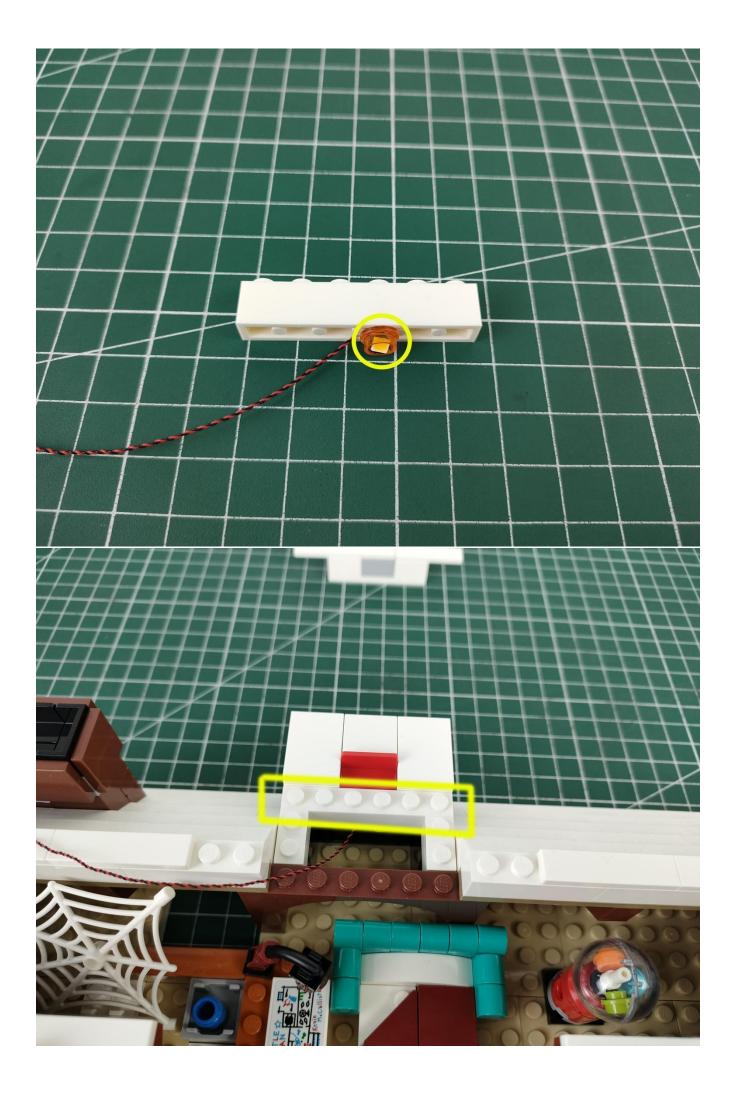


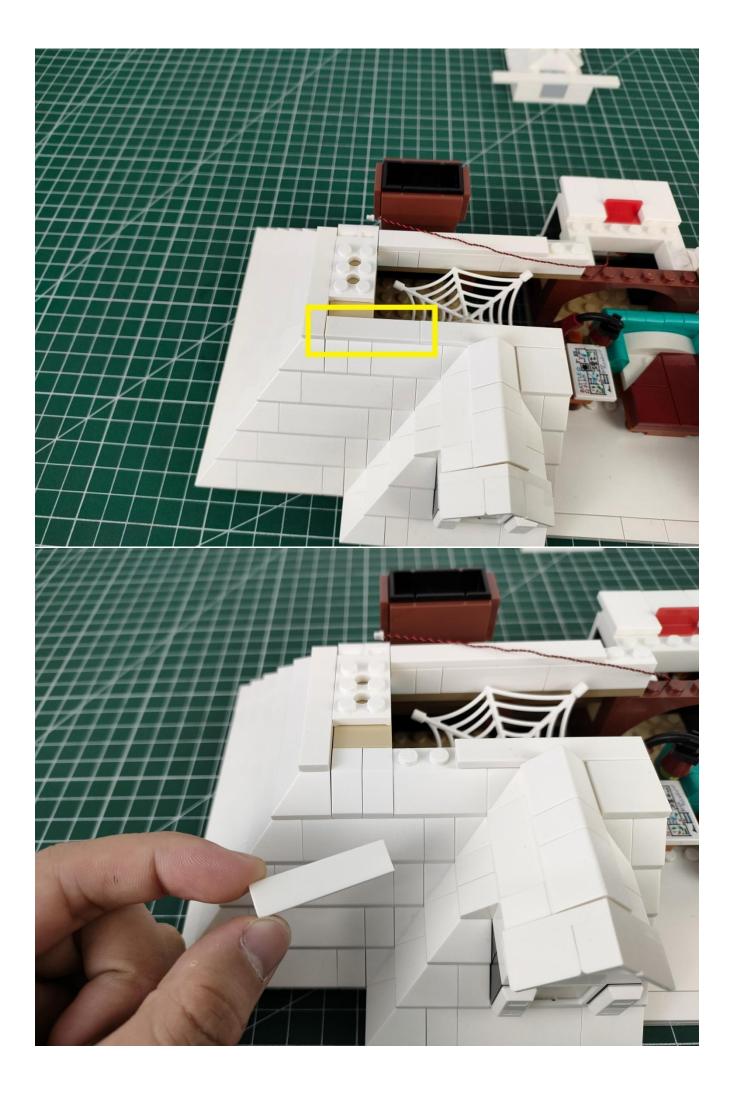


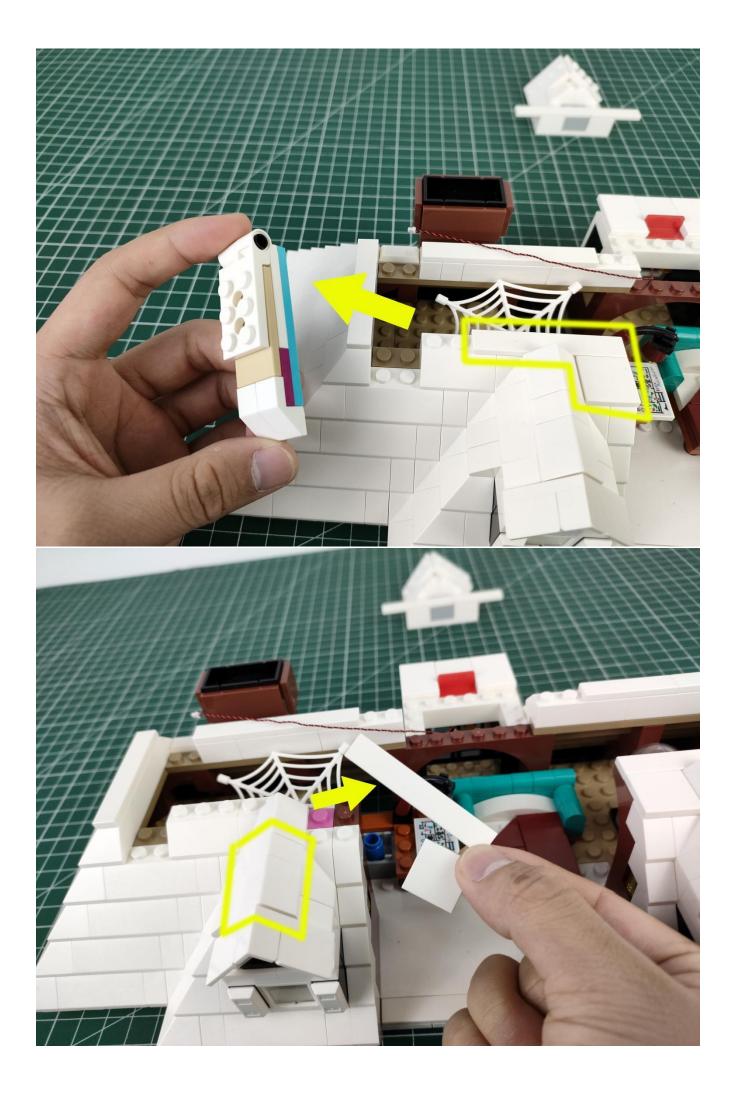


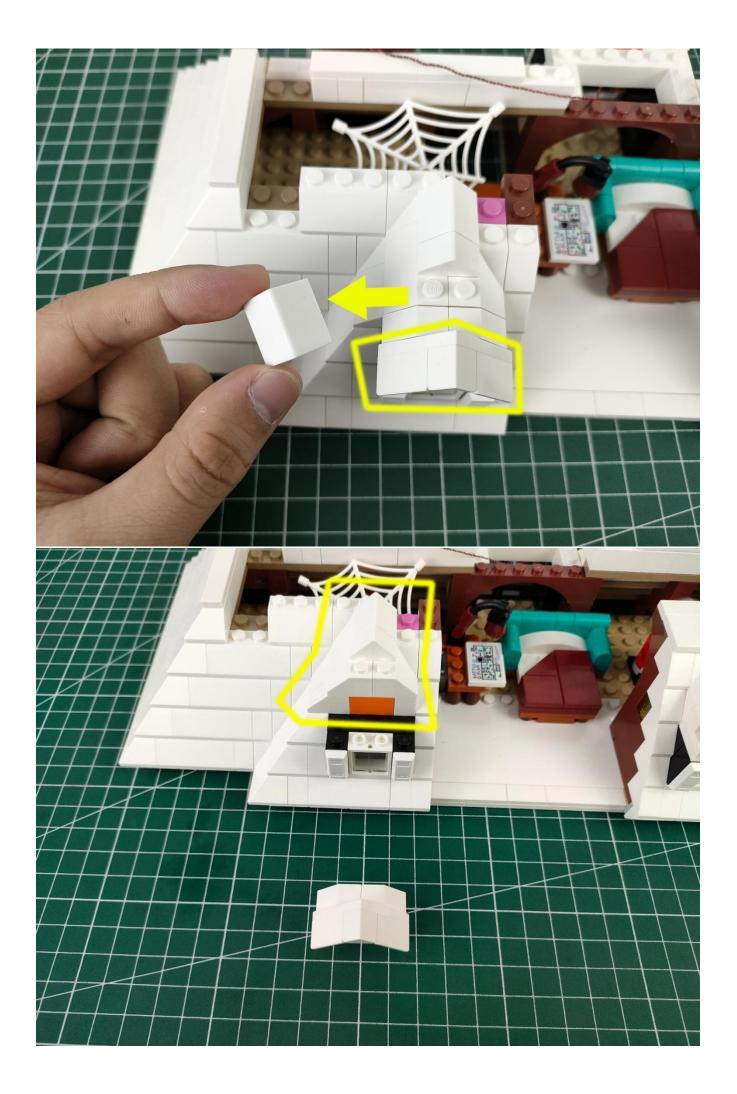


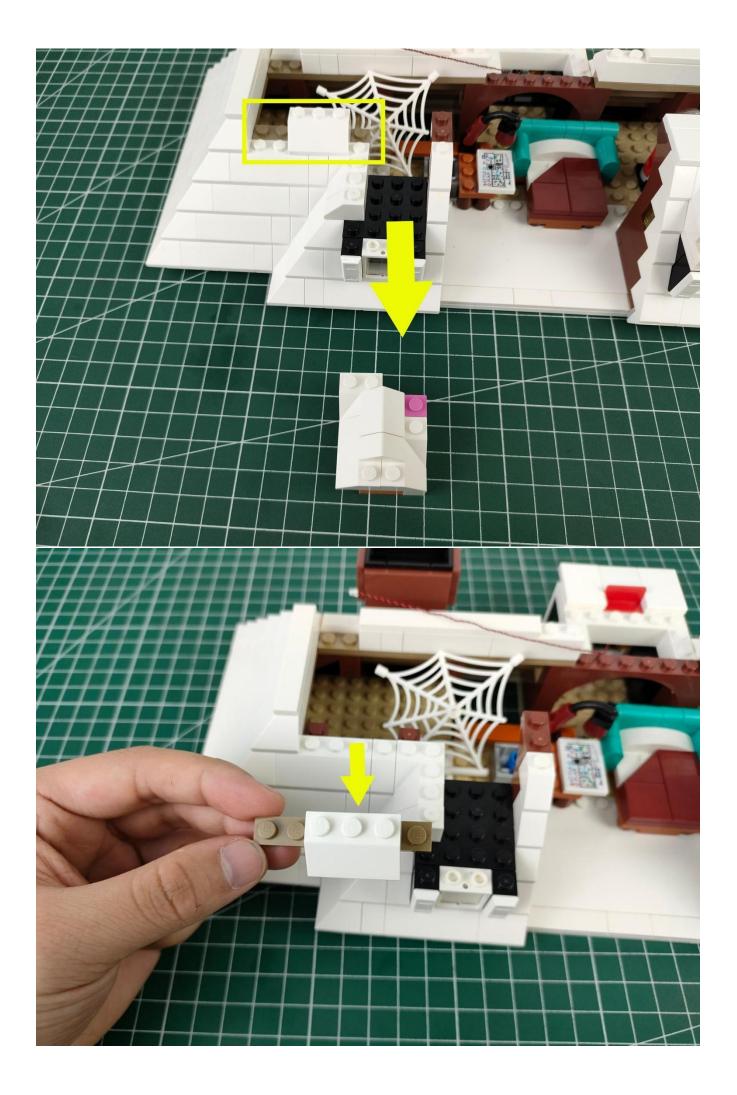

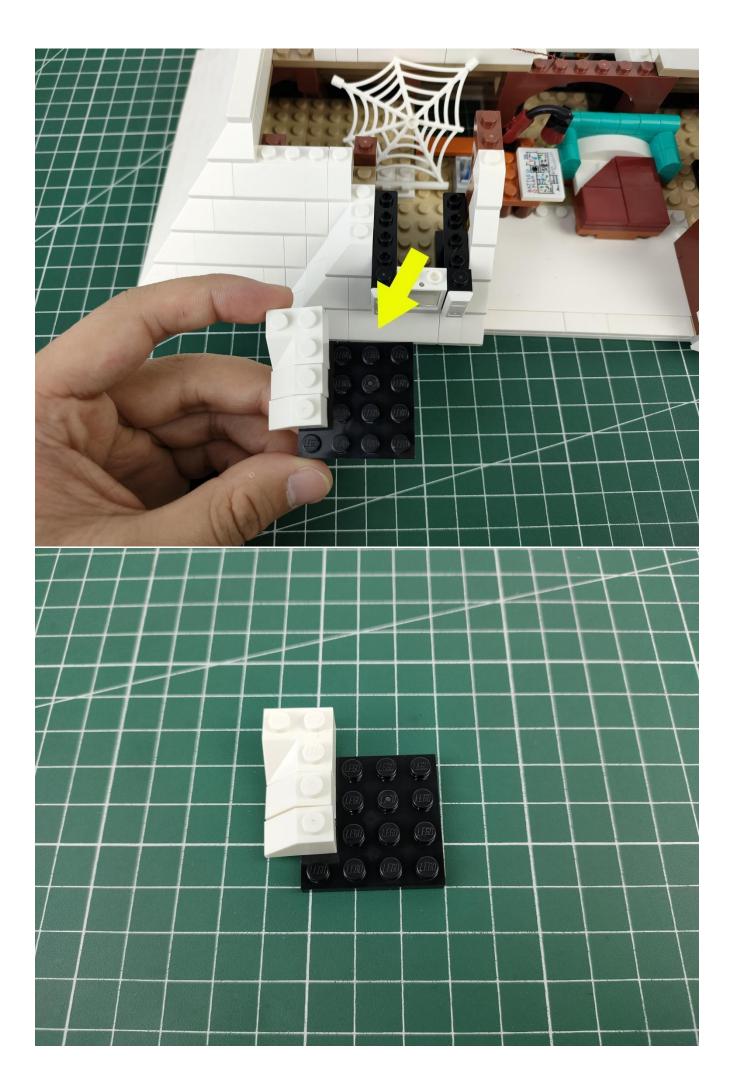

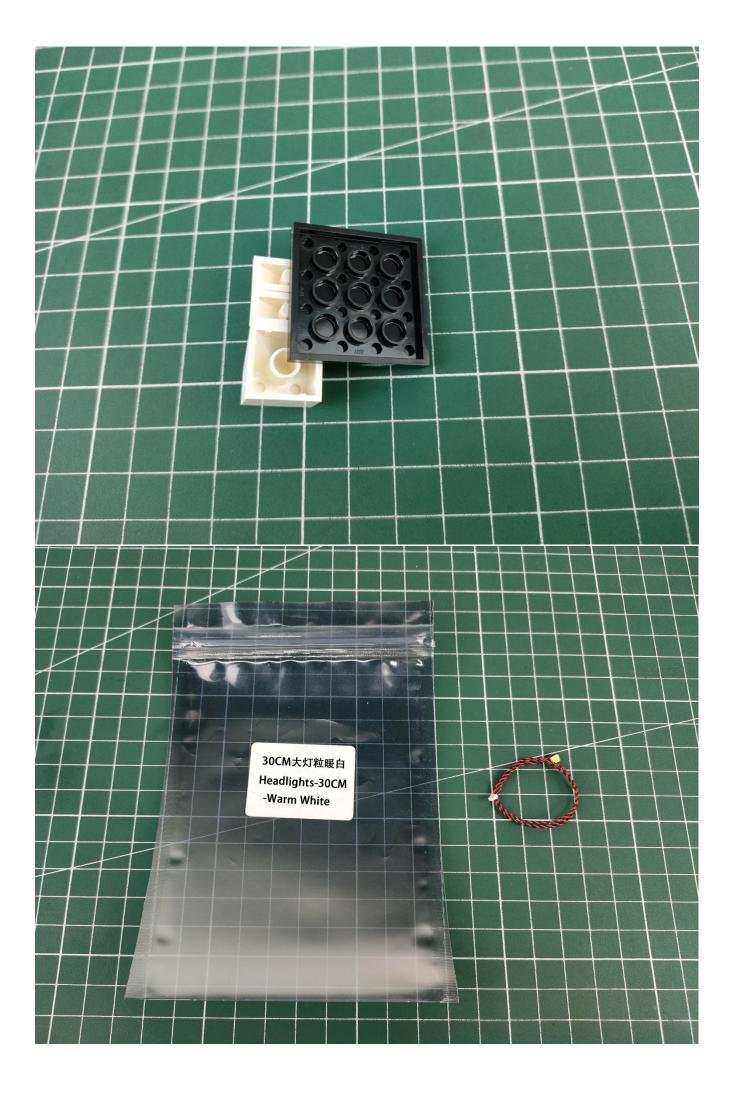


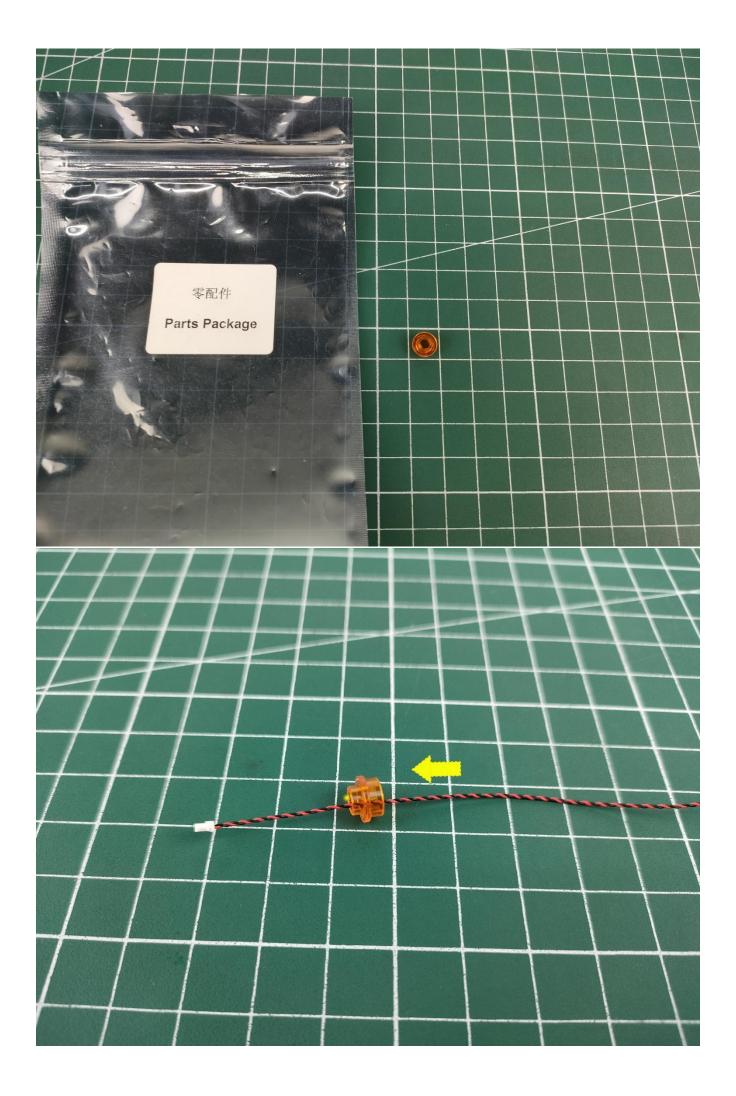


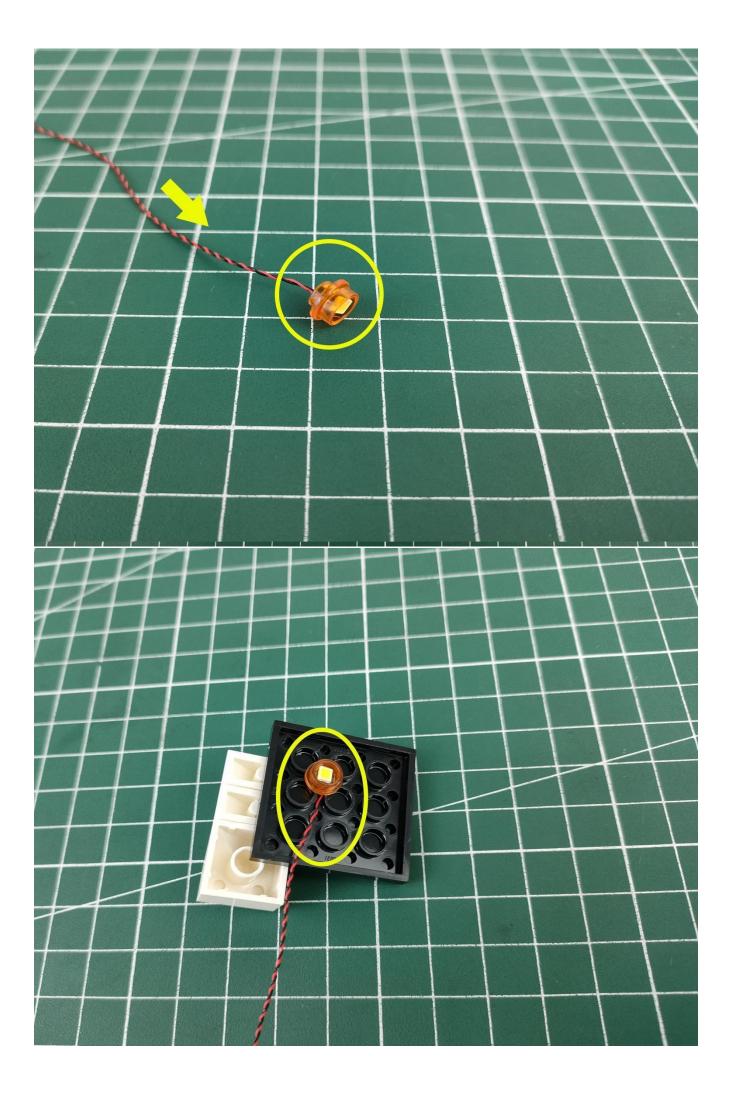








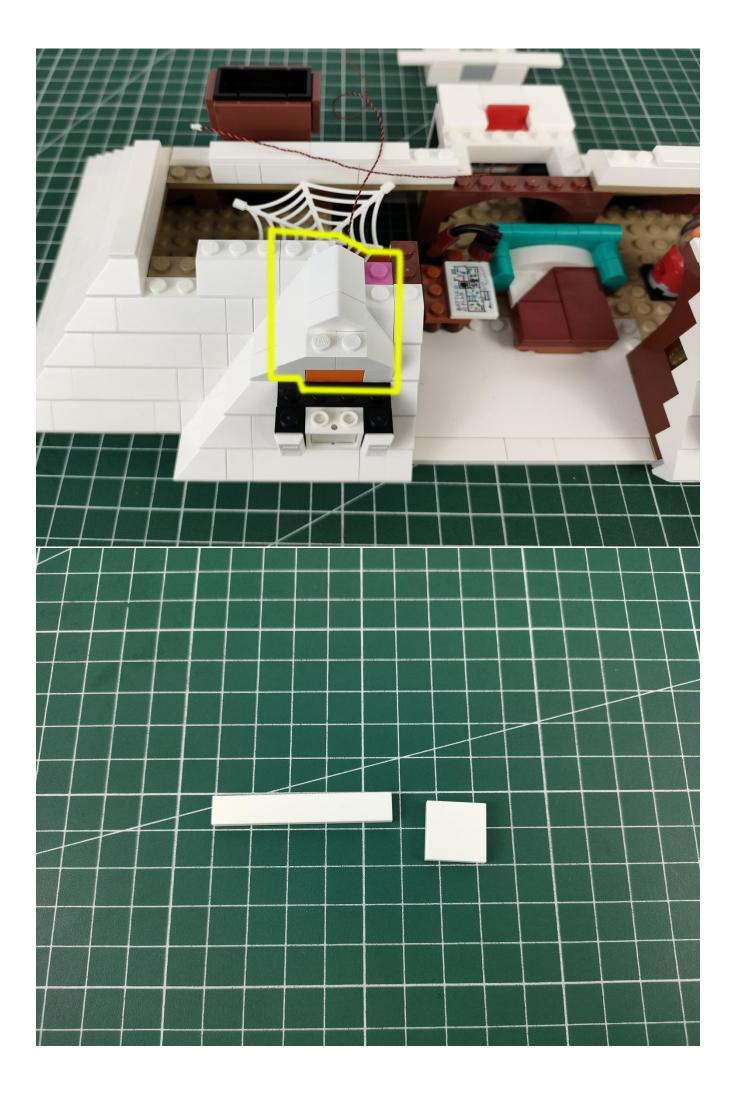


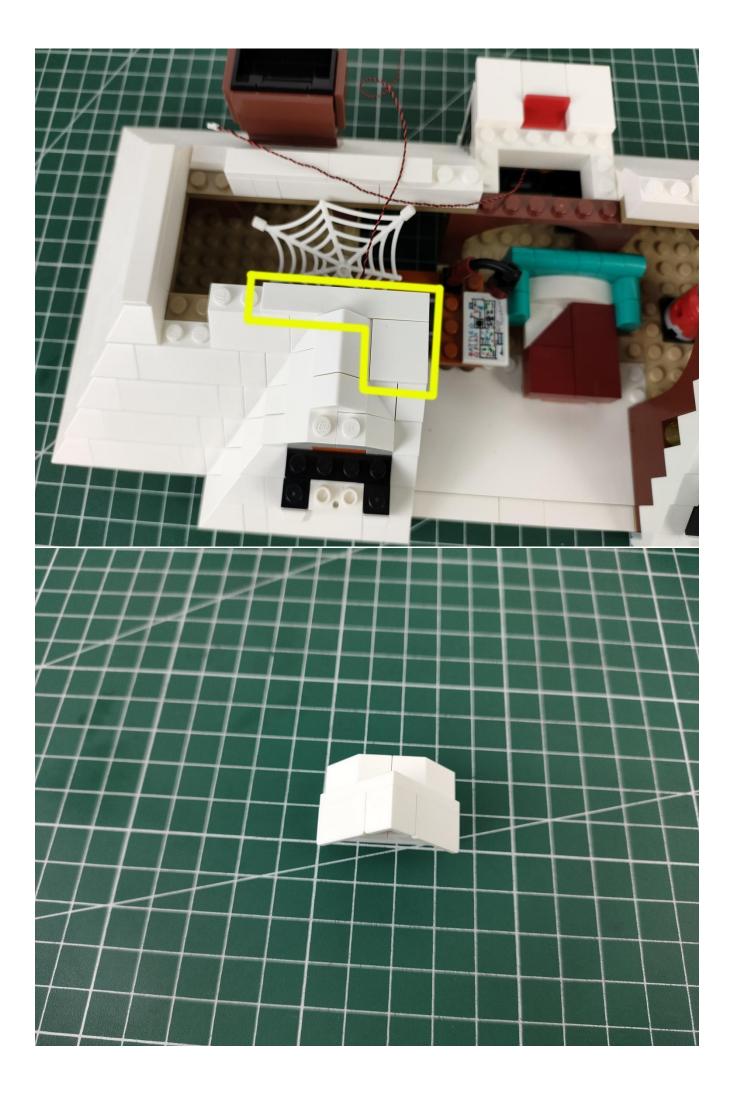


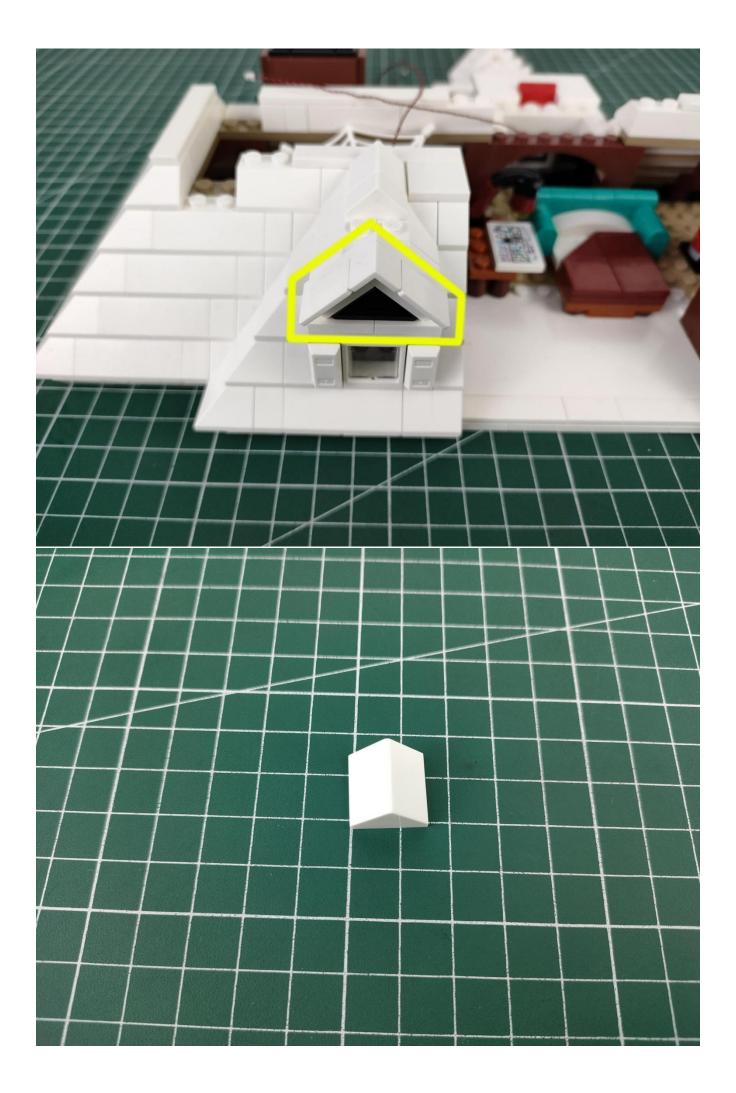


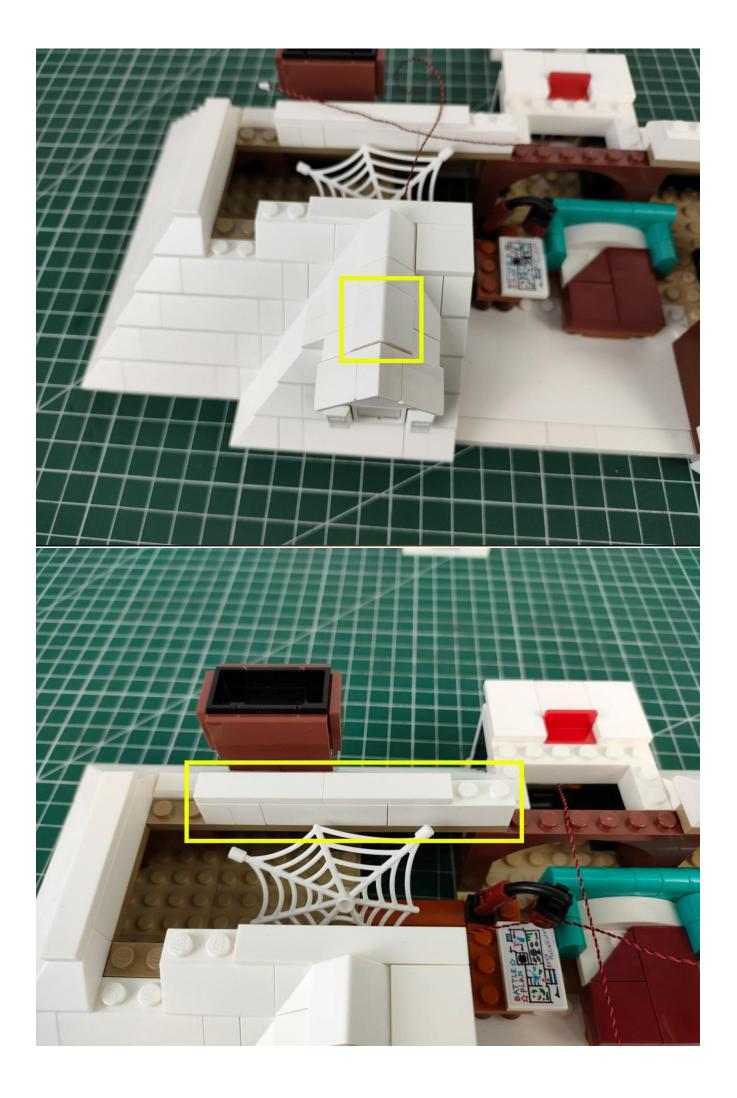


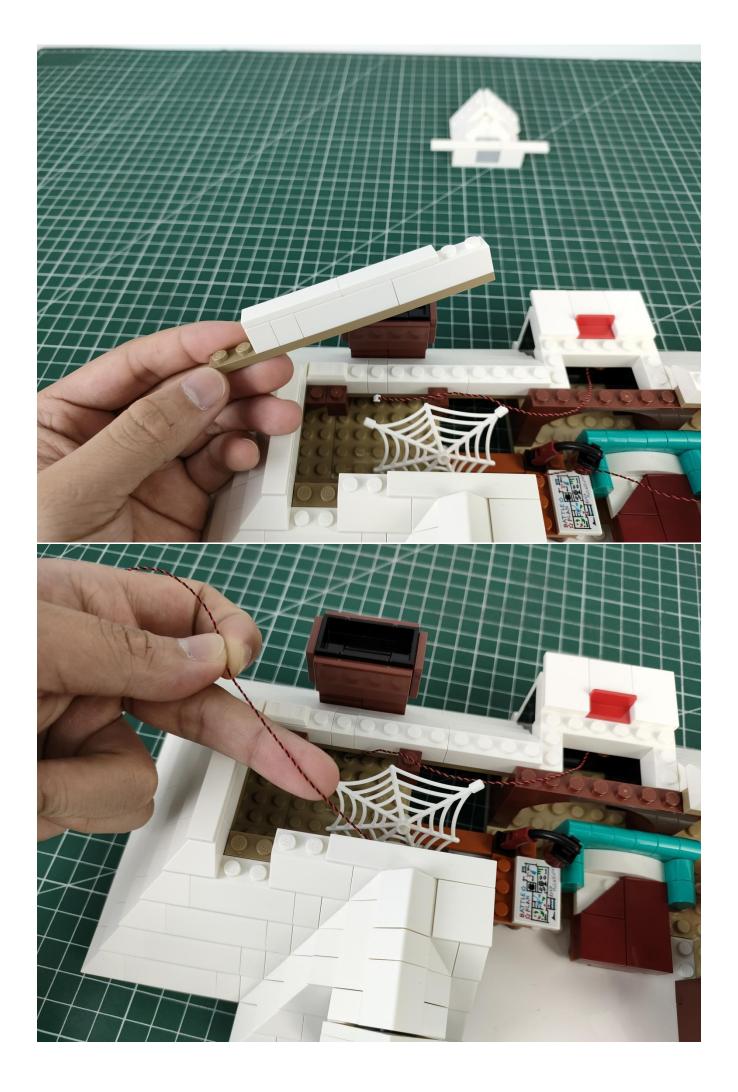


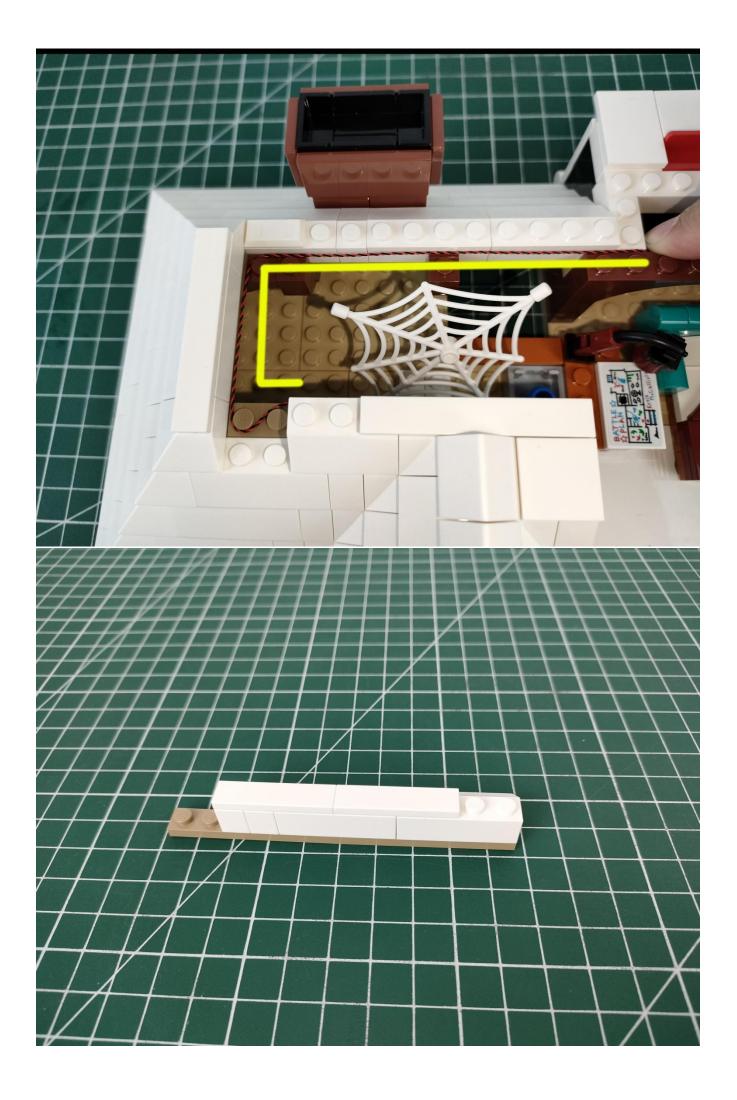


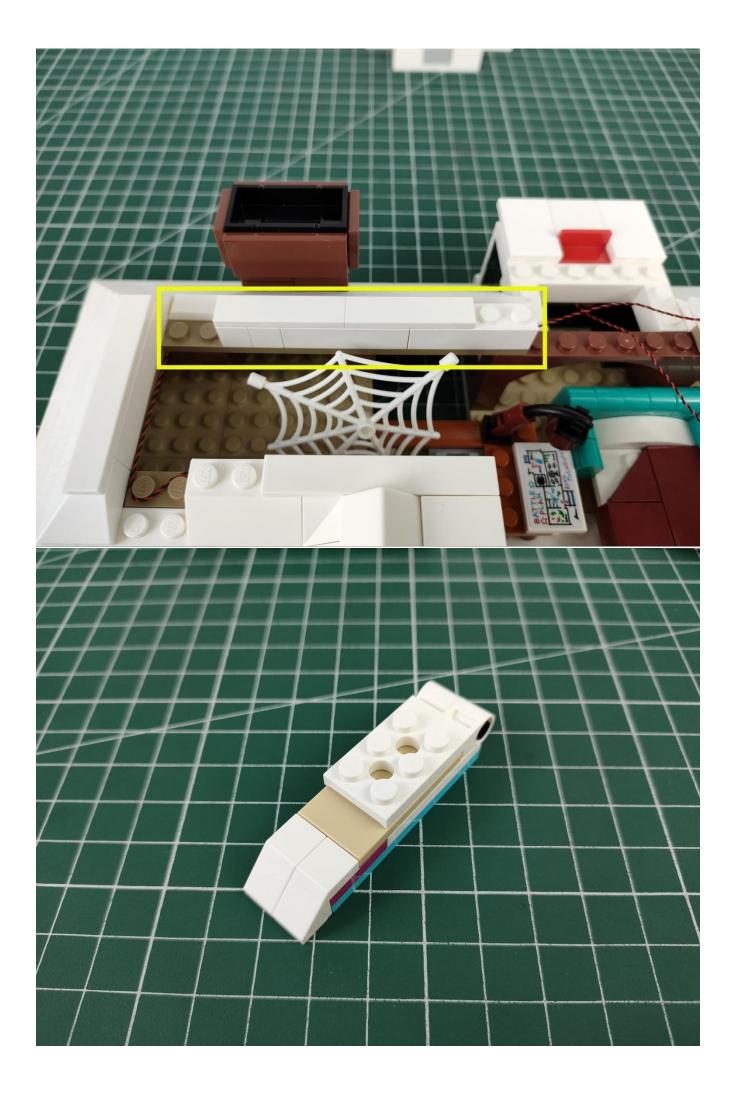


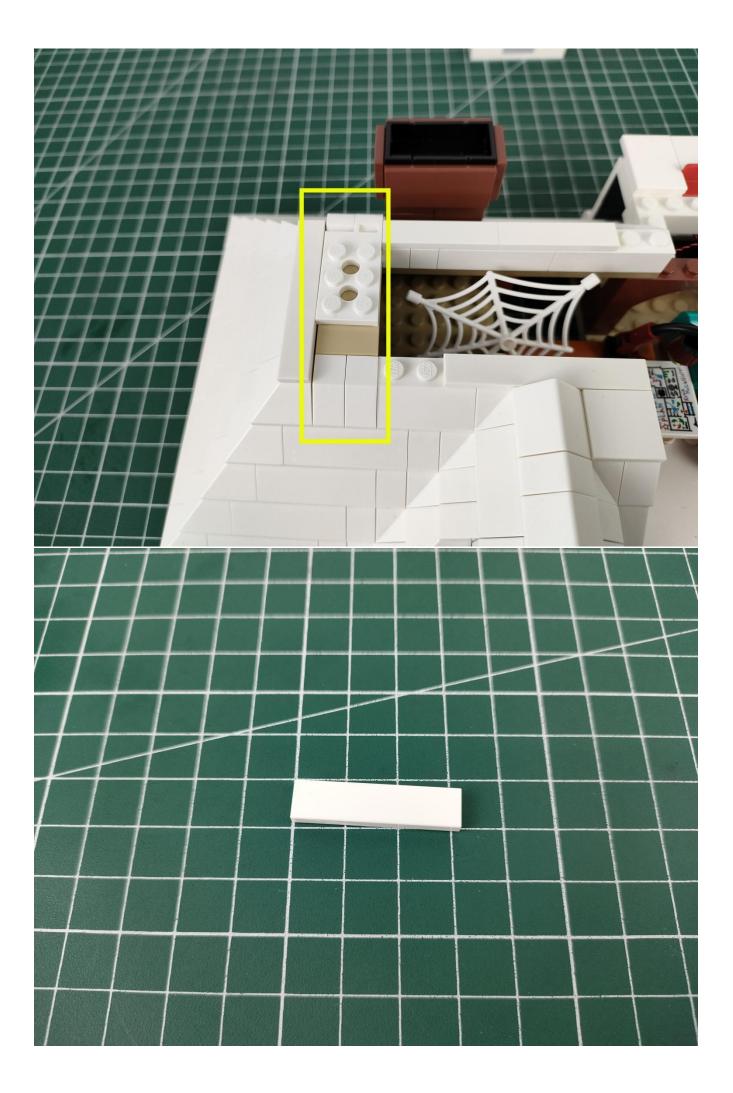


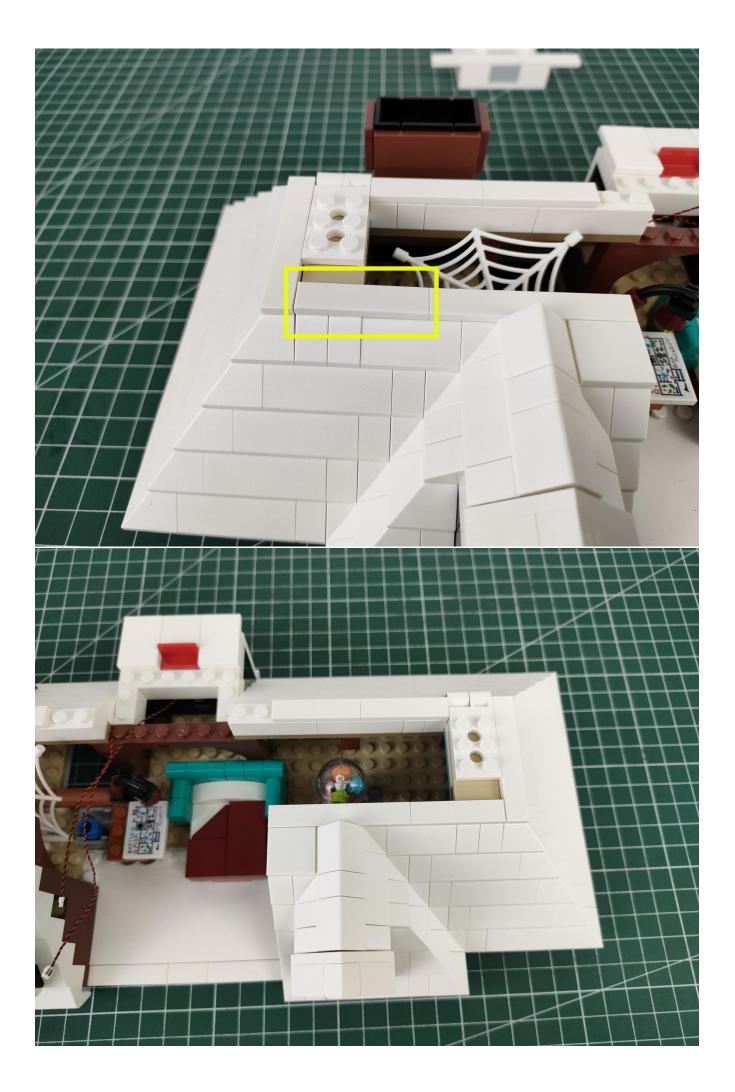


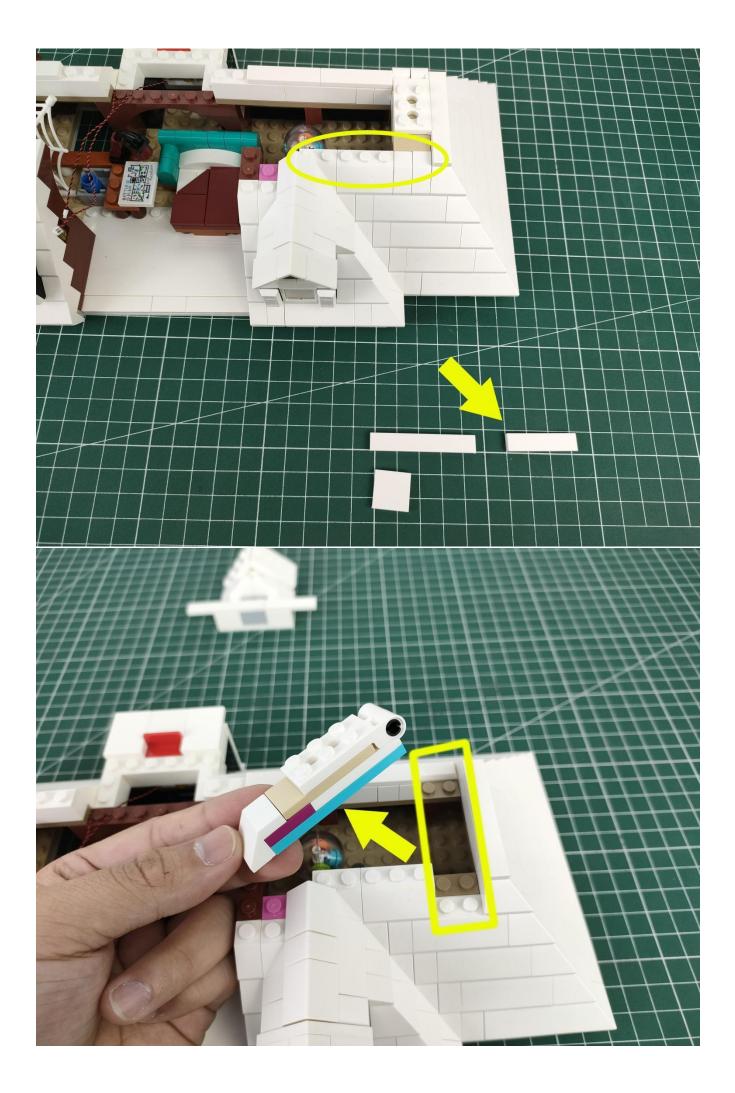

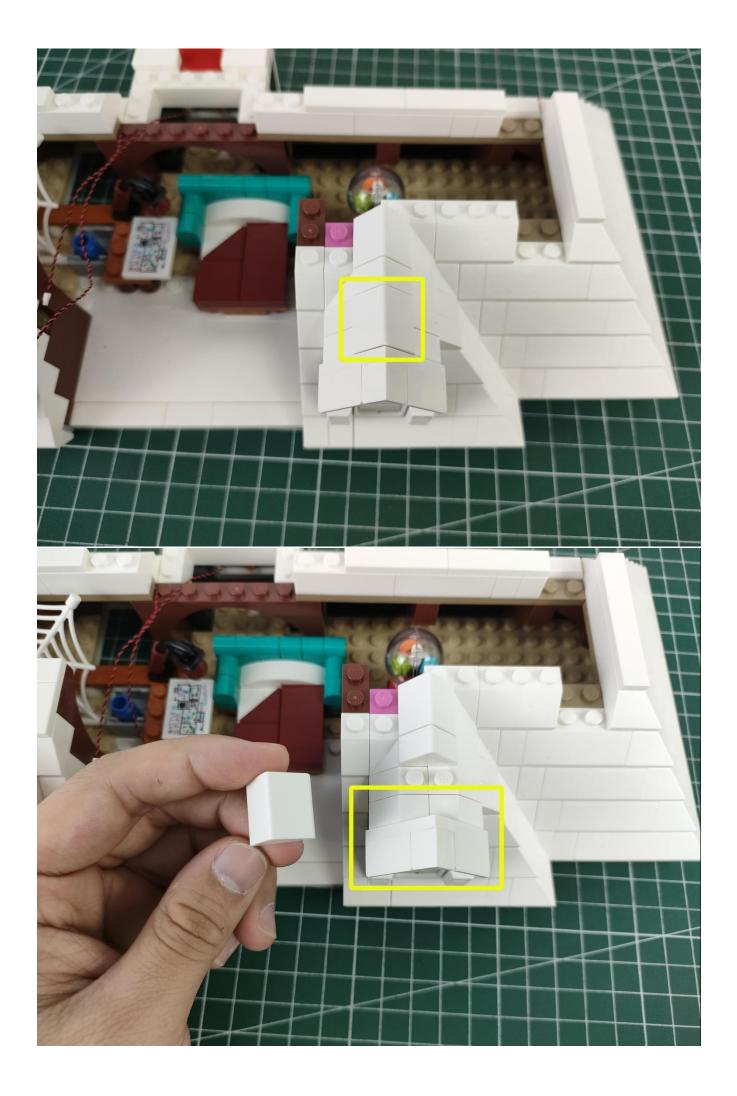


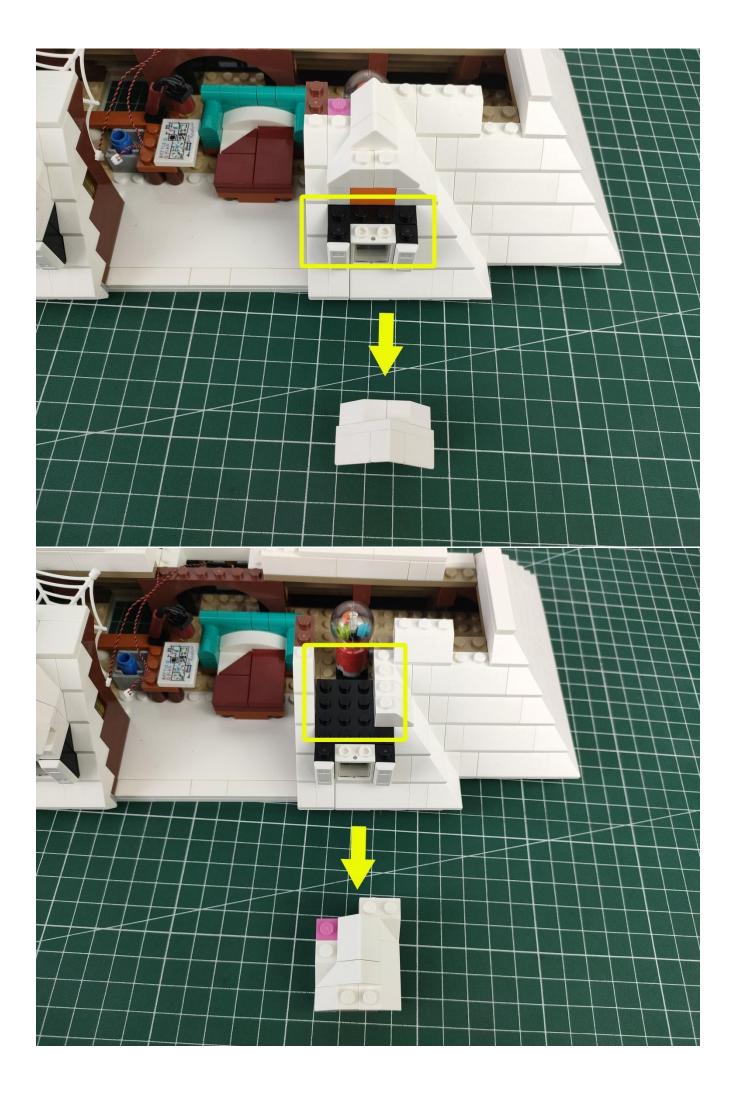


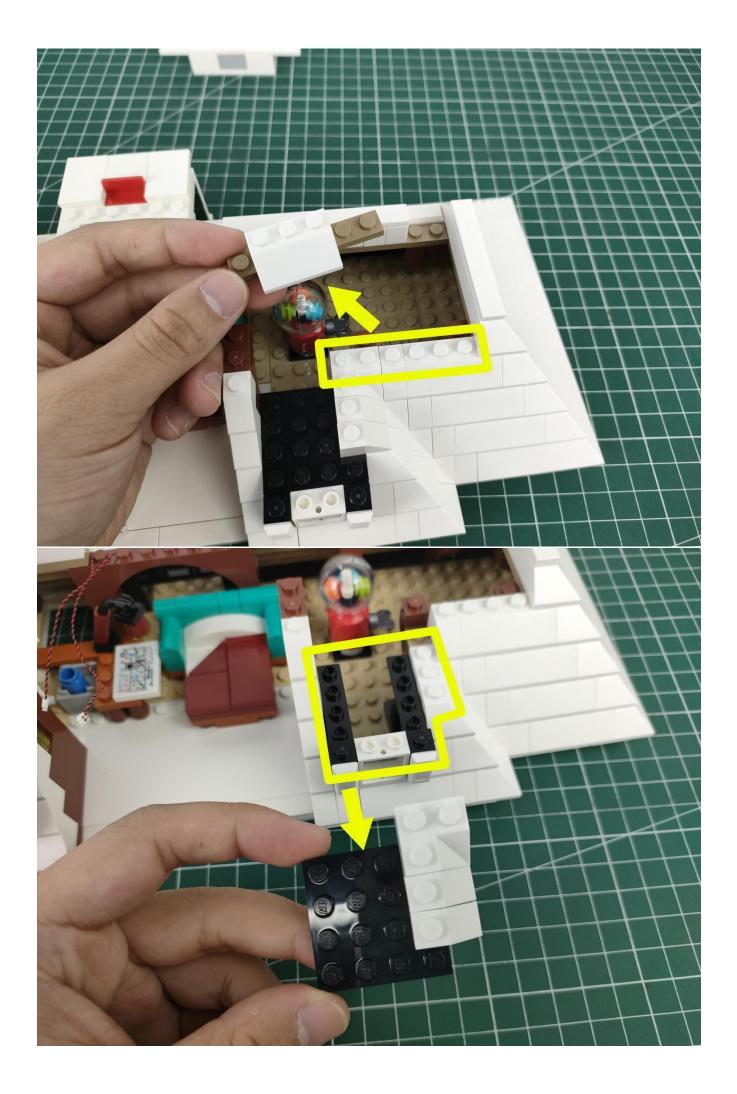


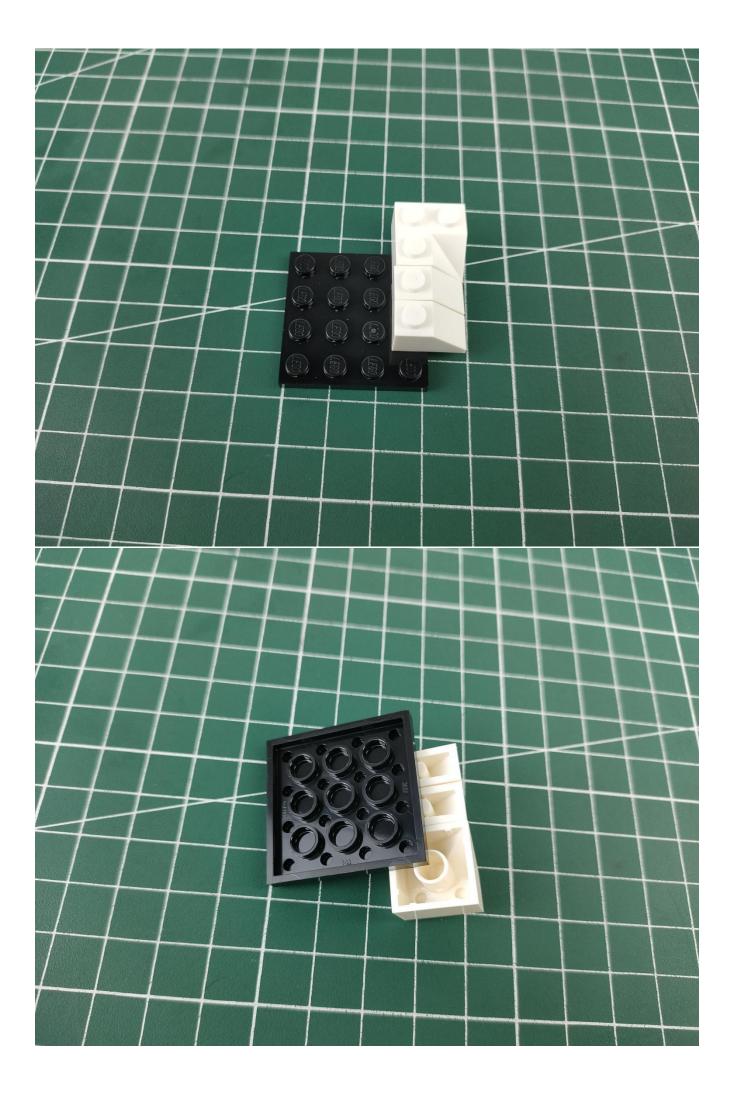





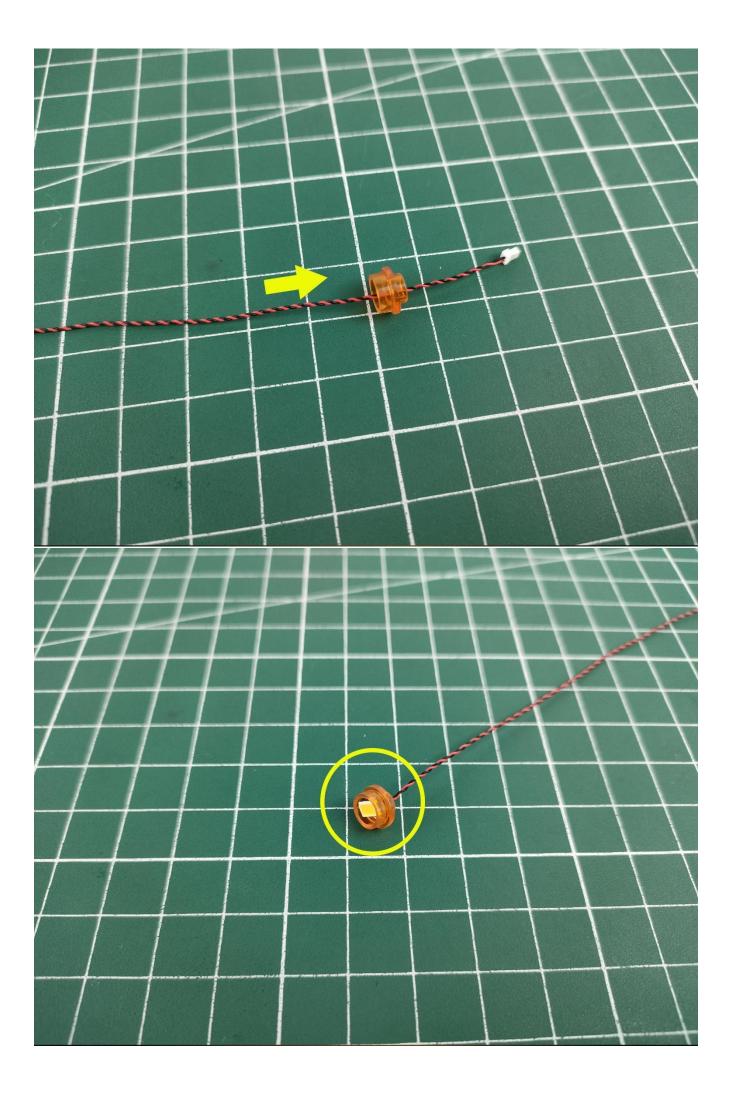


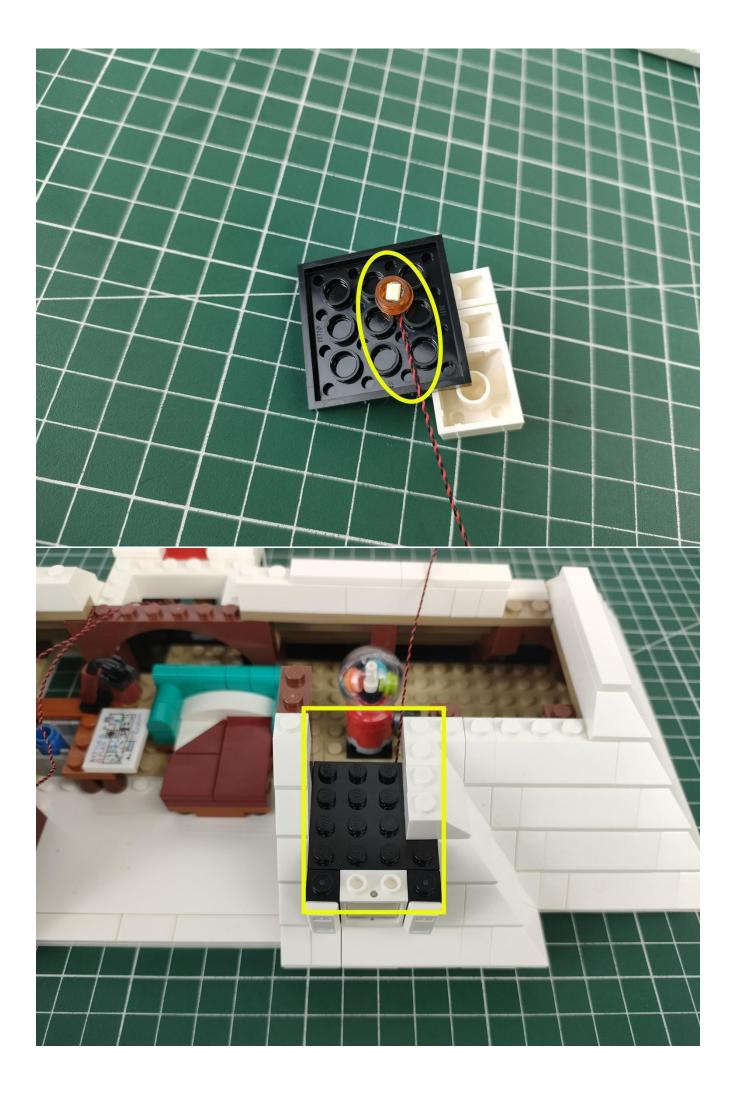


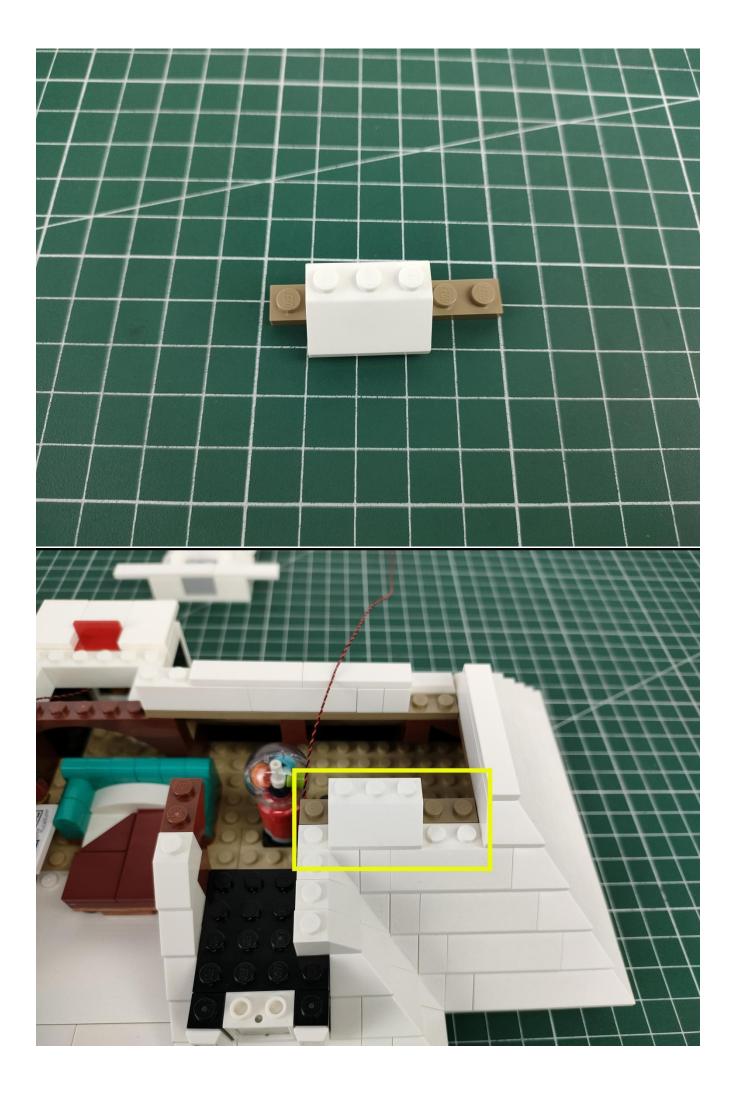


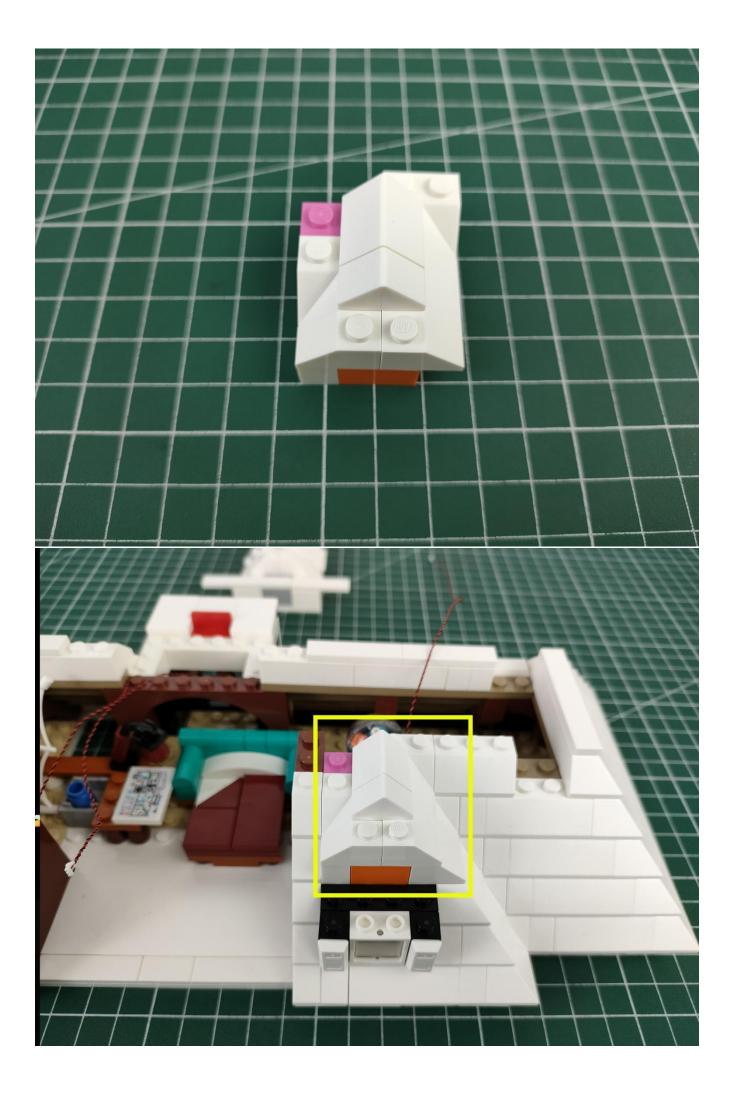


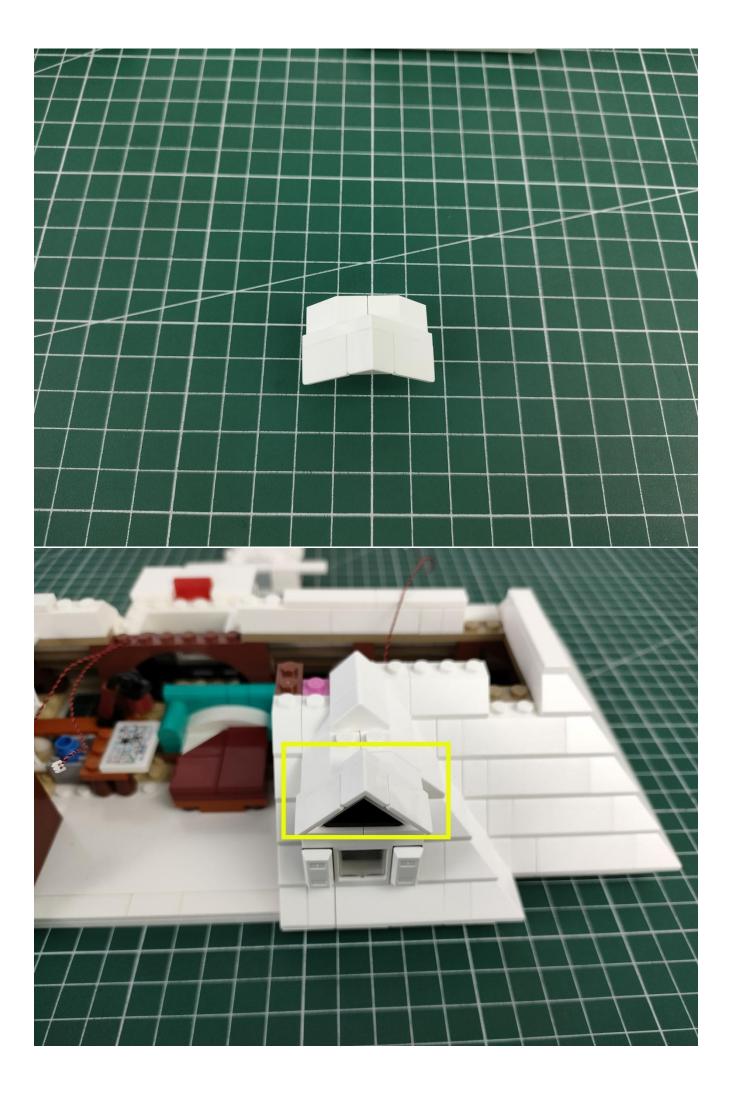


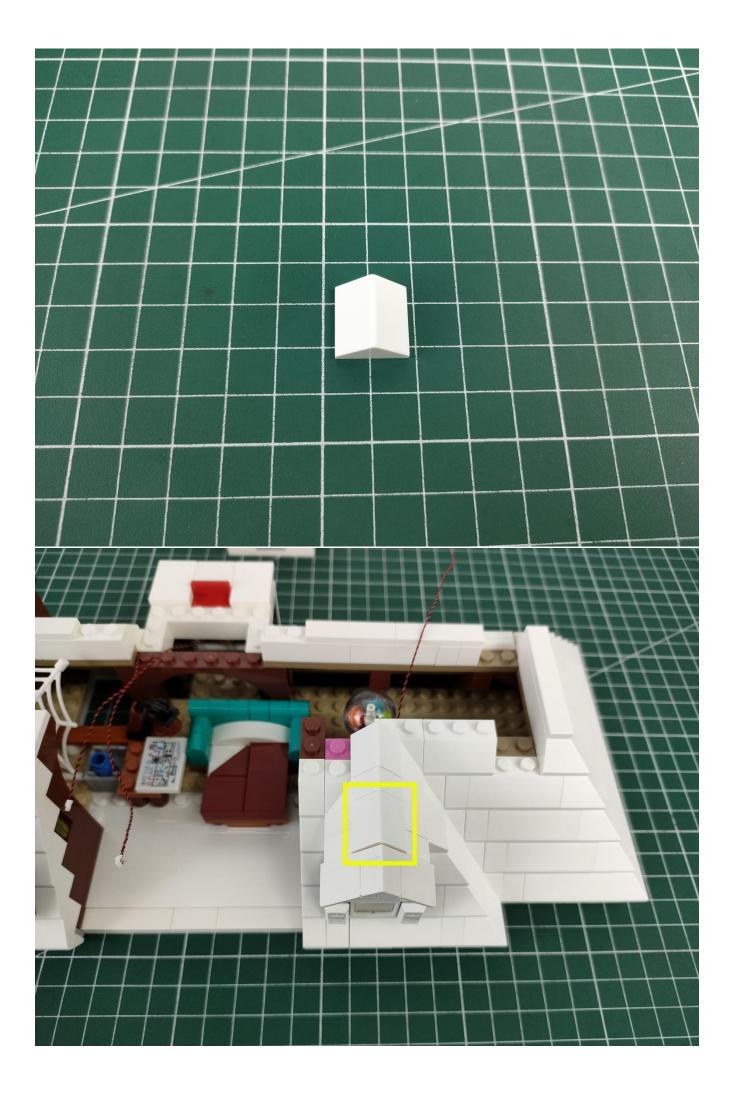


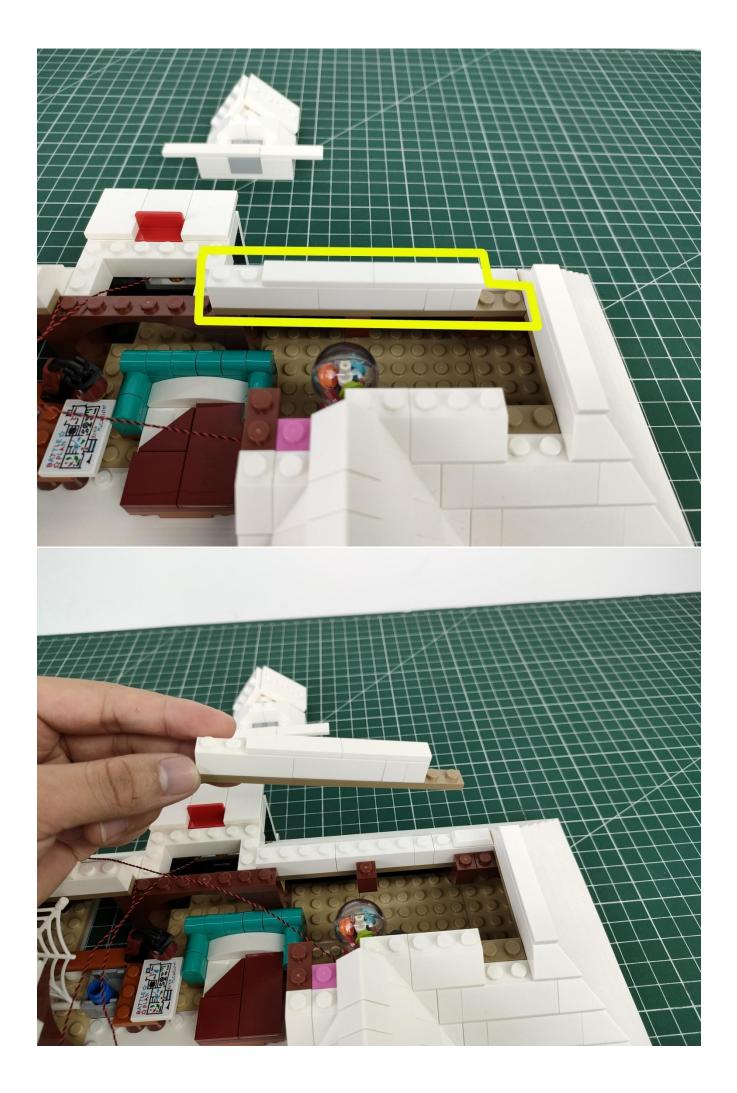


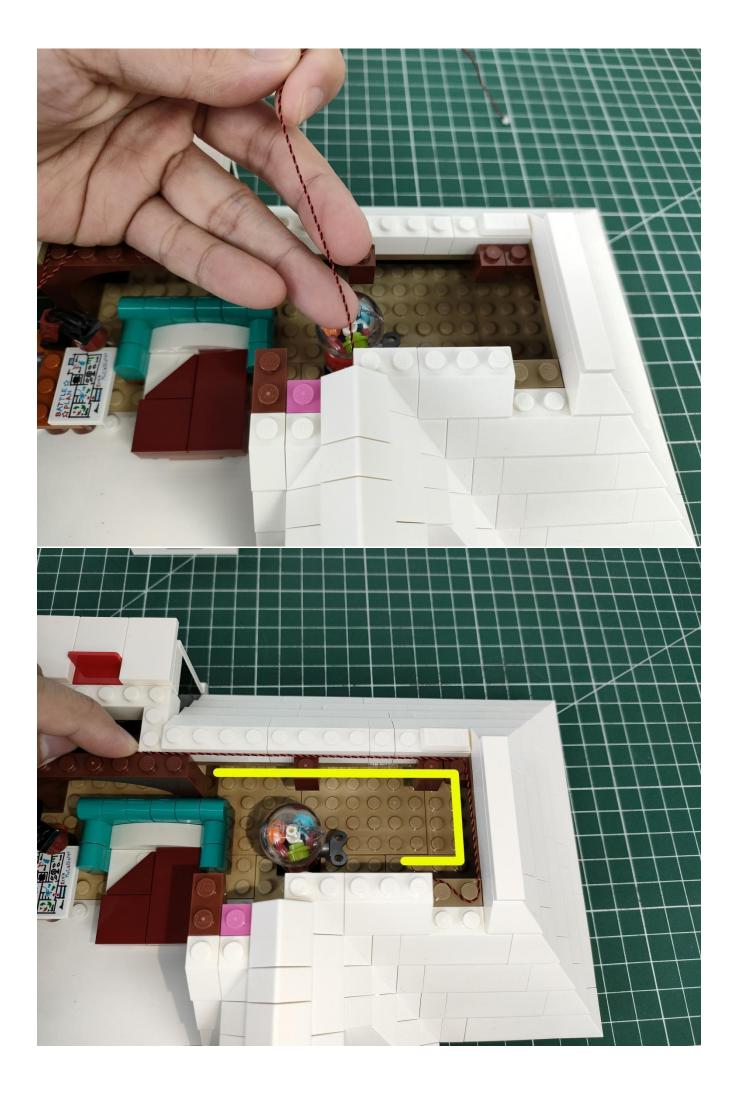

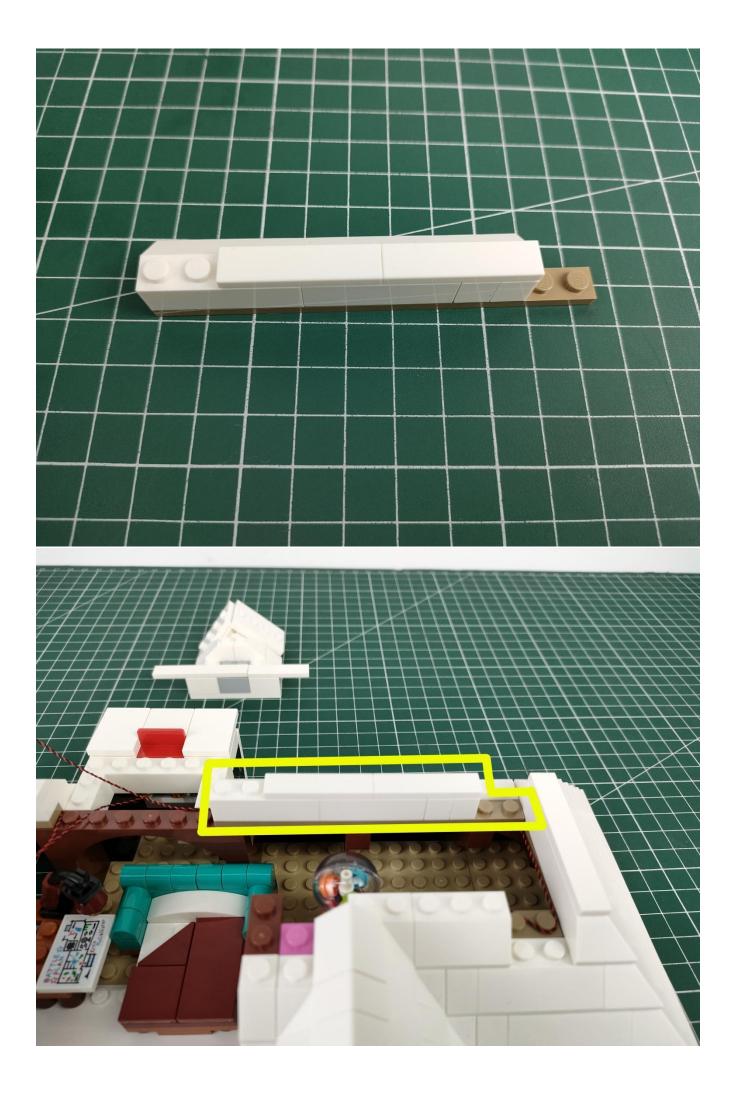

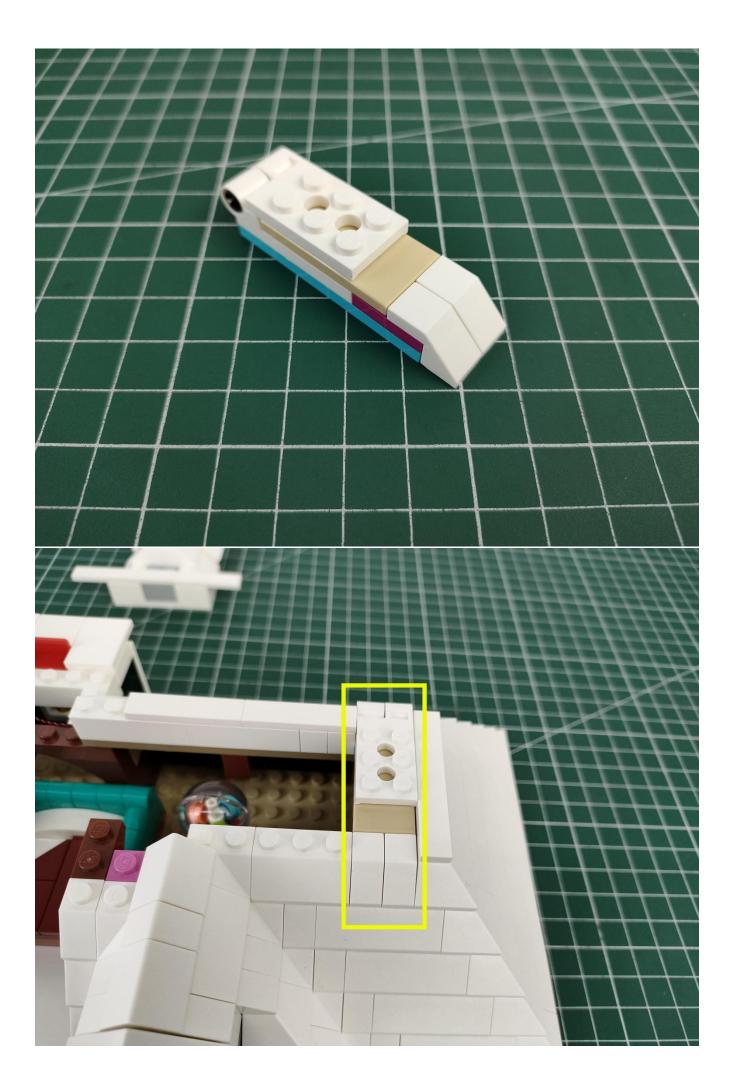


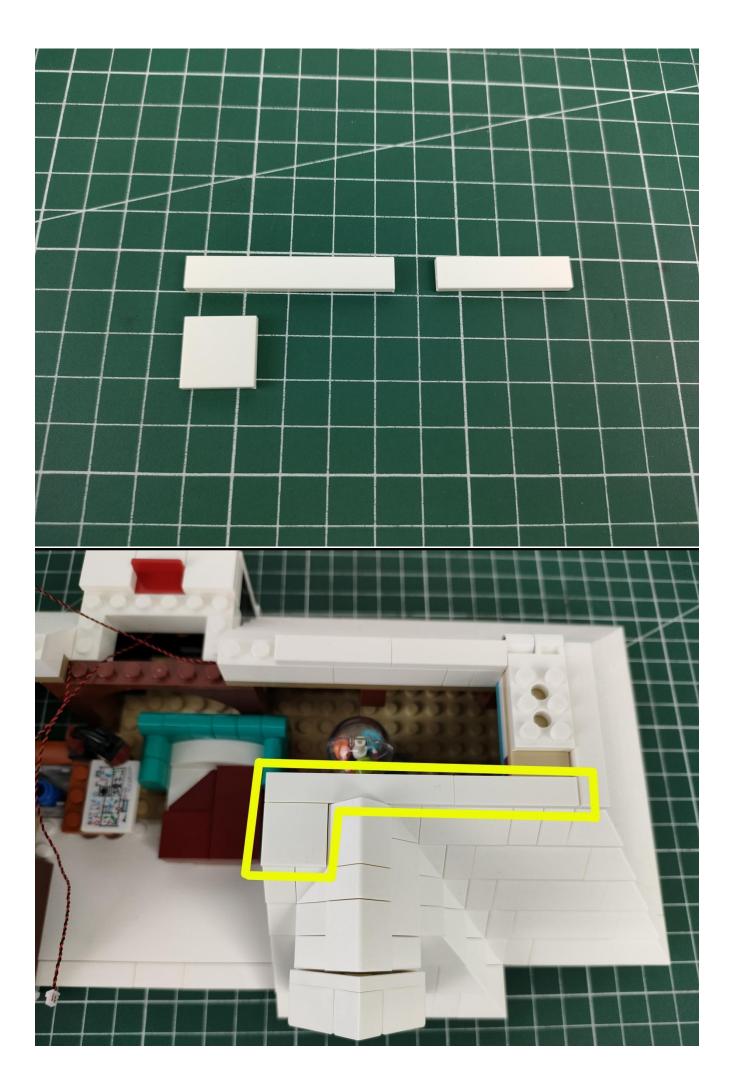


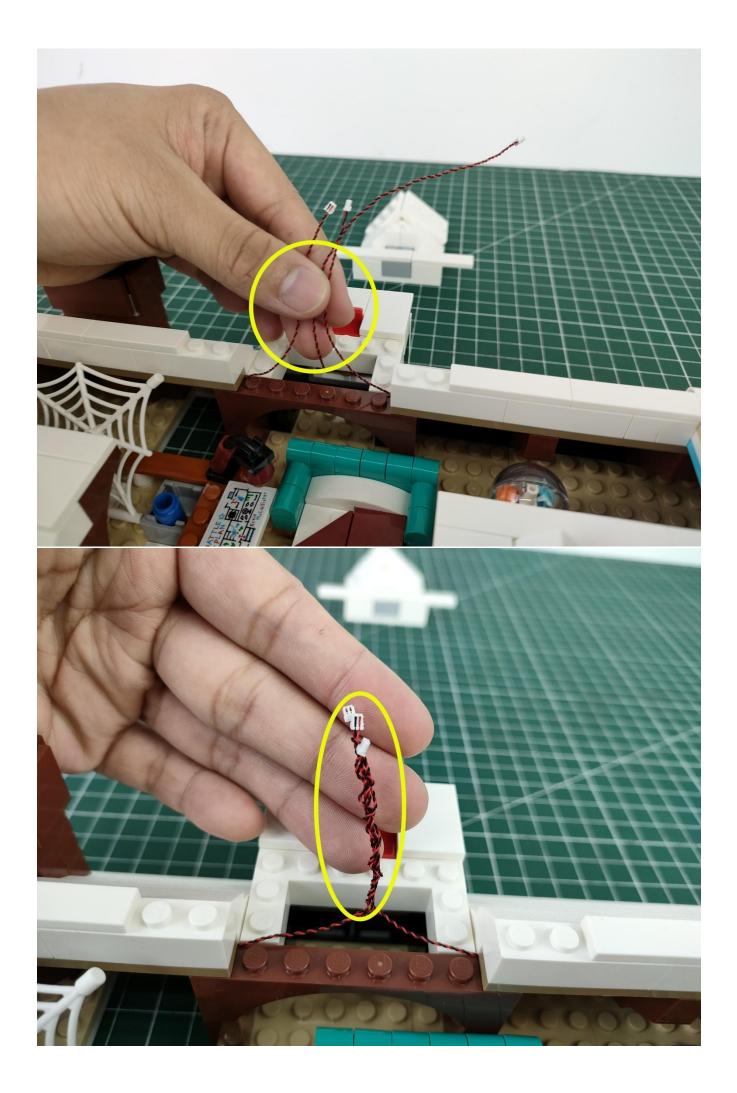





Please pay attention to the use of the interface. The interface is small. Please use it carefully: the = number of the 2P interface is aligned with the = number of the expansion board. The equal sign on the expansion board refers to the two solder joints on the outside, not the two inside the jack Metal pin.

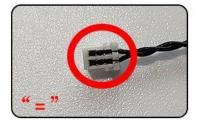


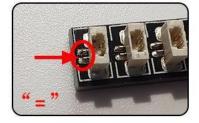





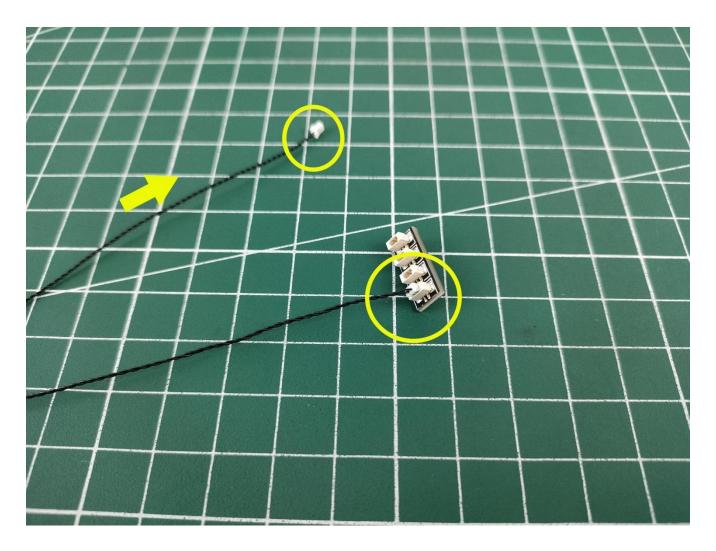


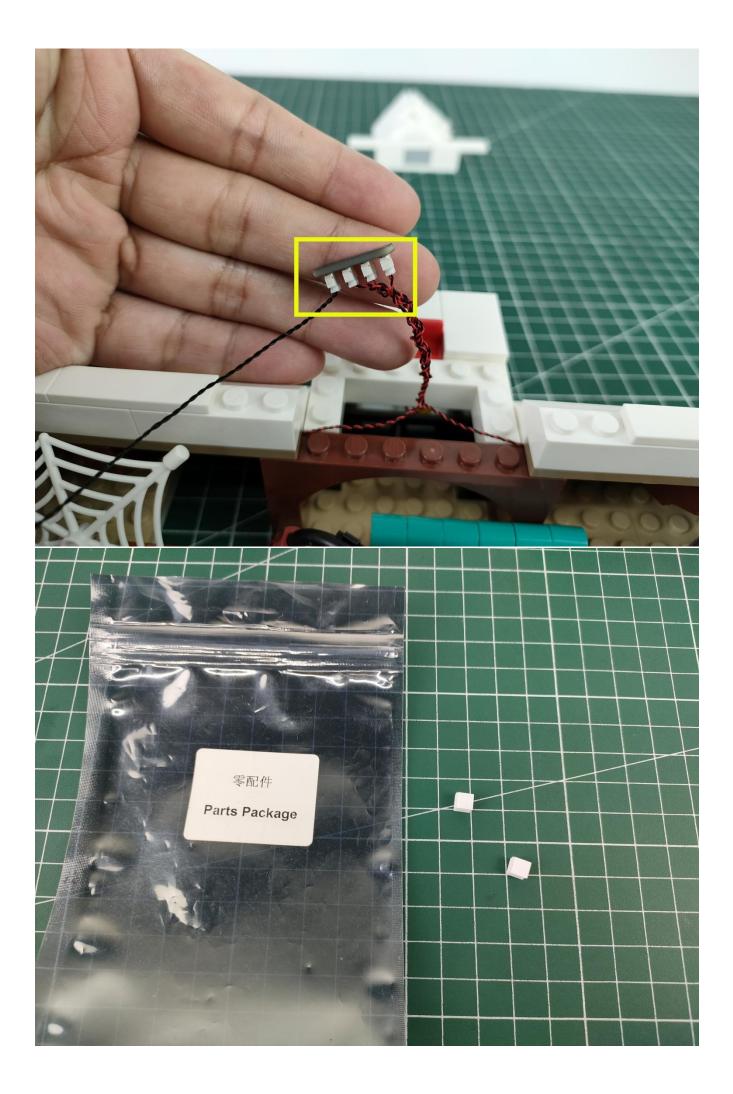


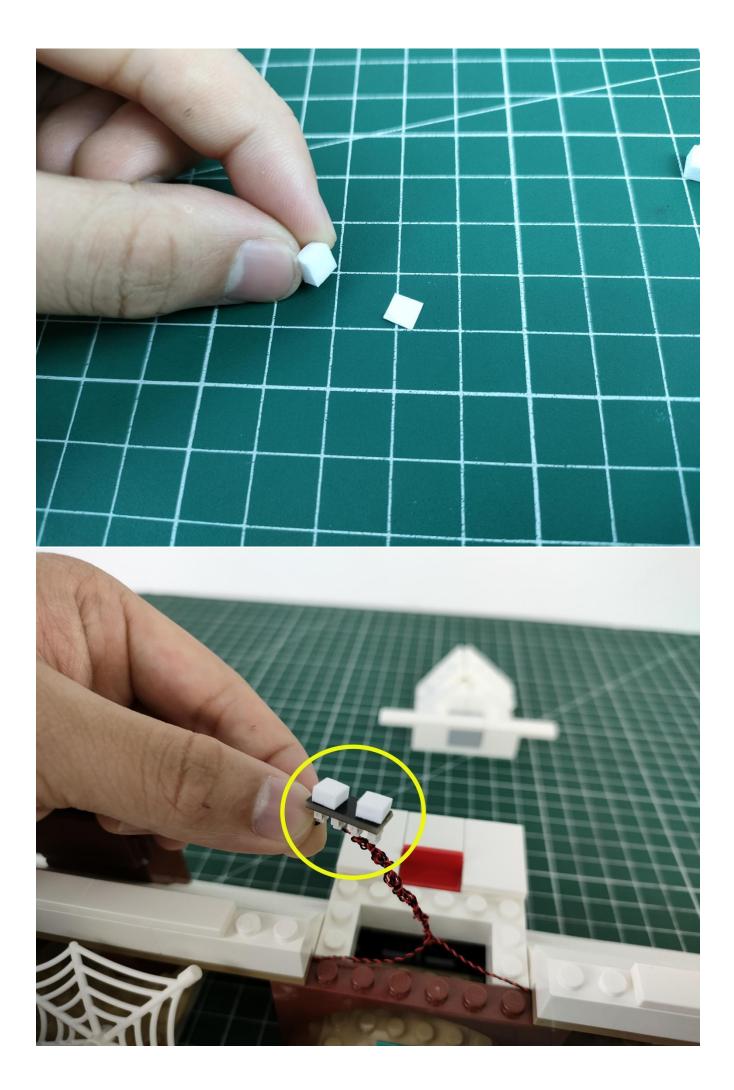


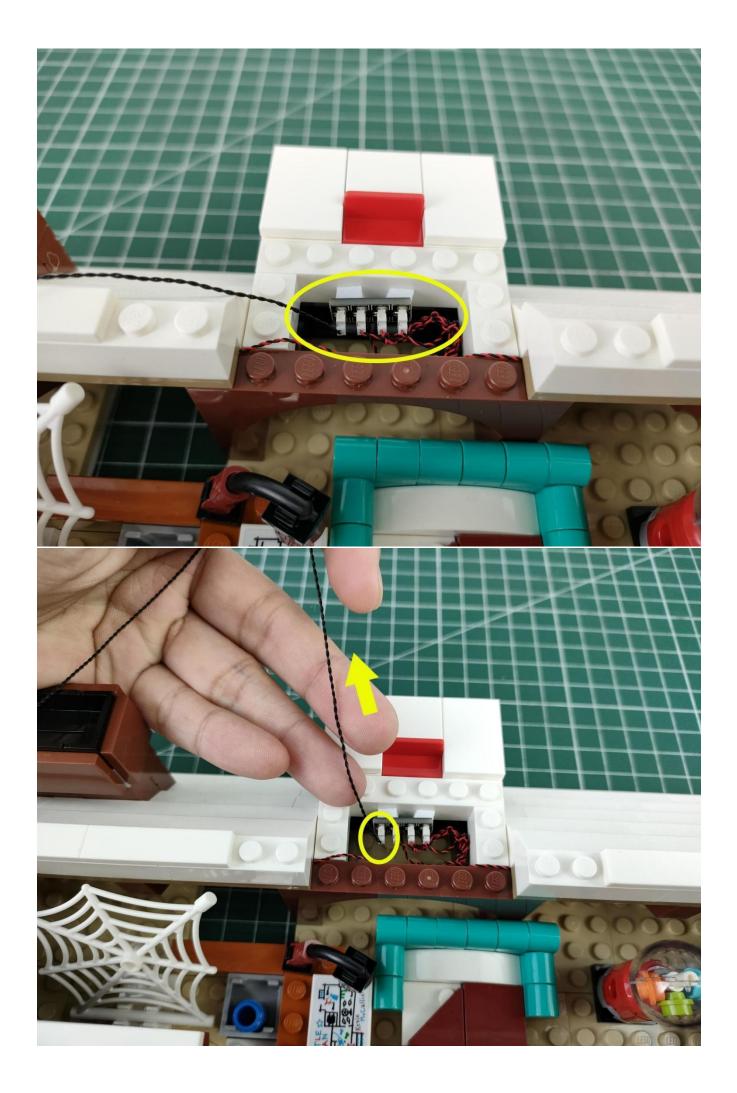


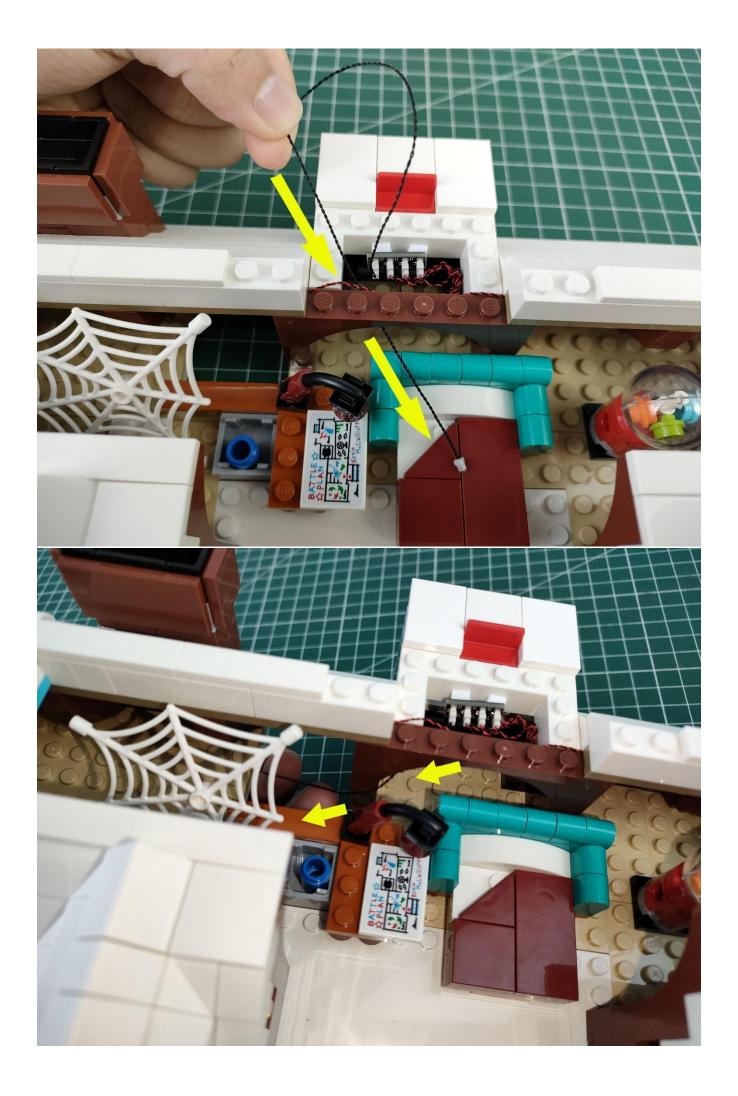

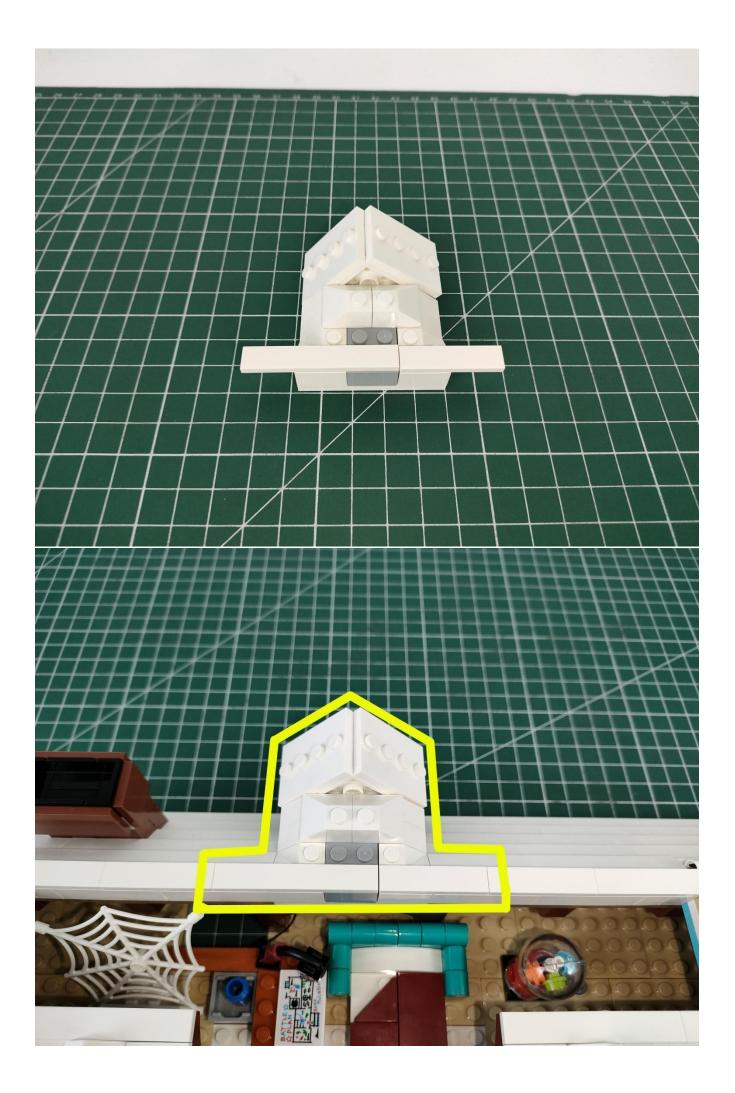


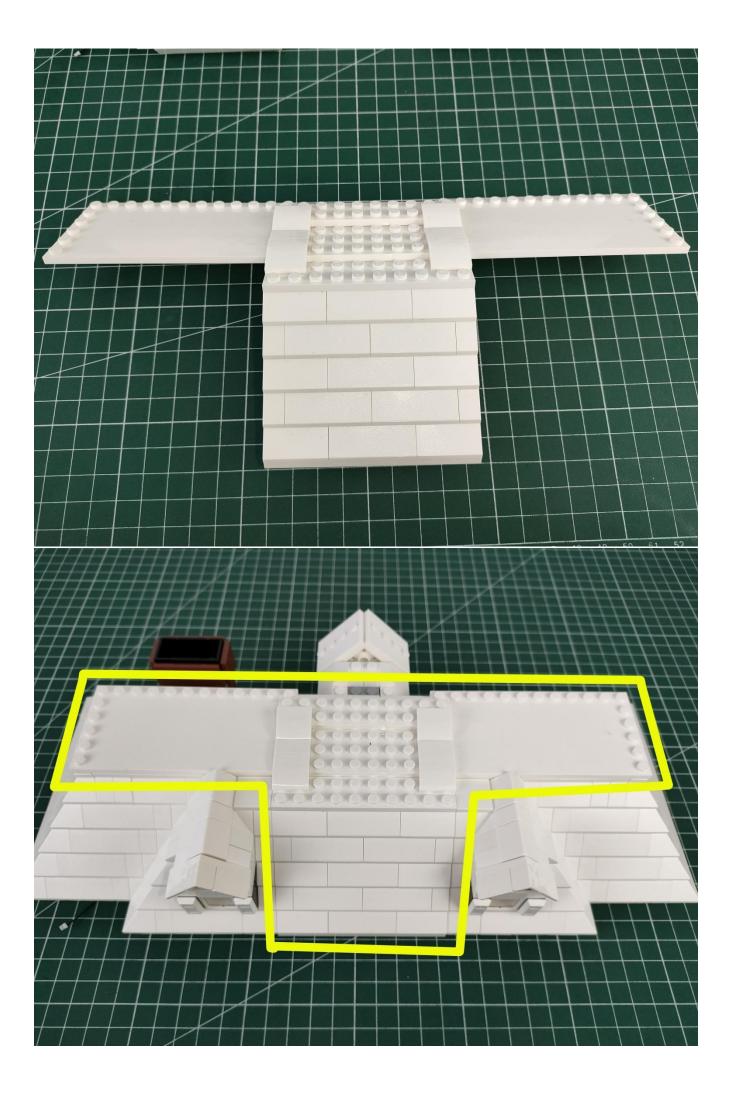


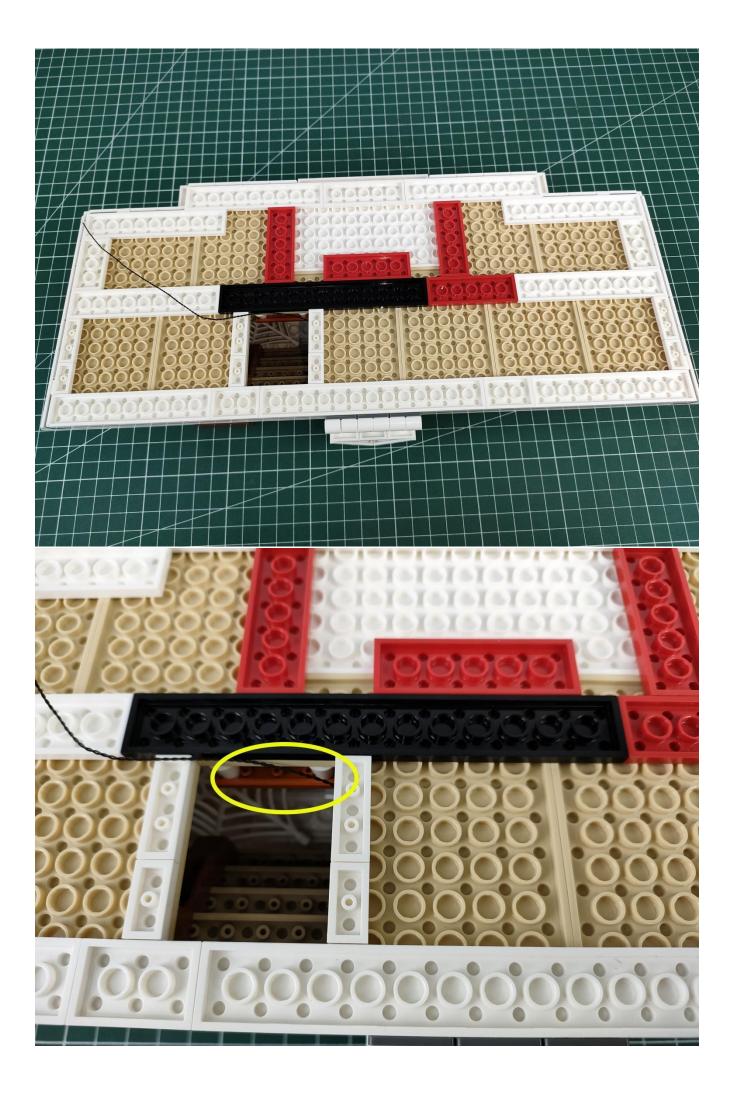


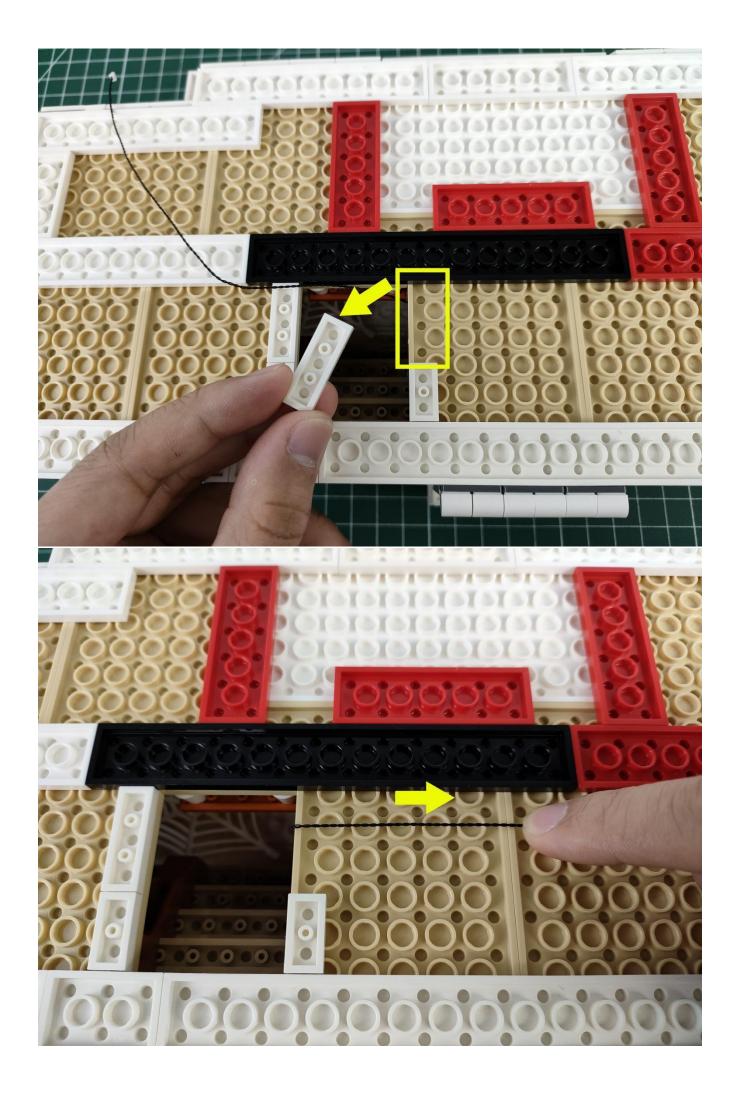




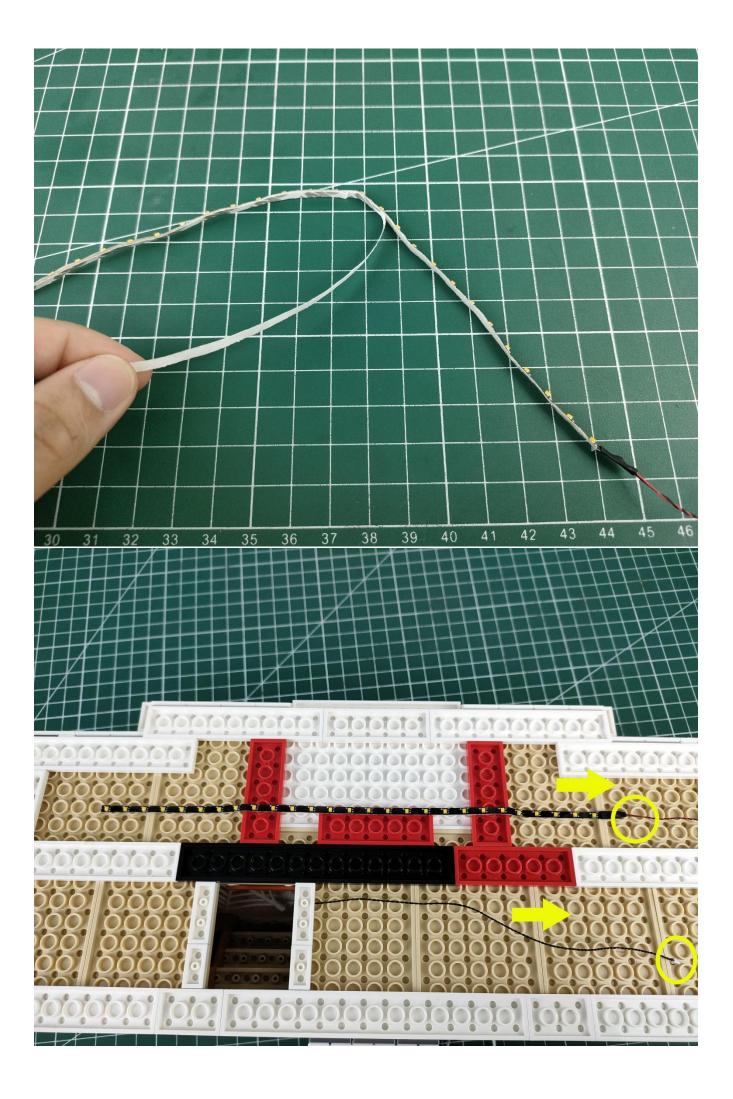

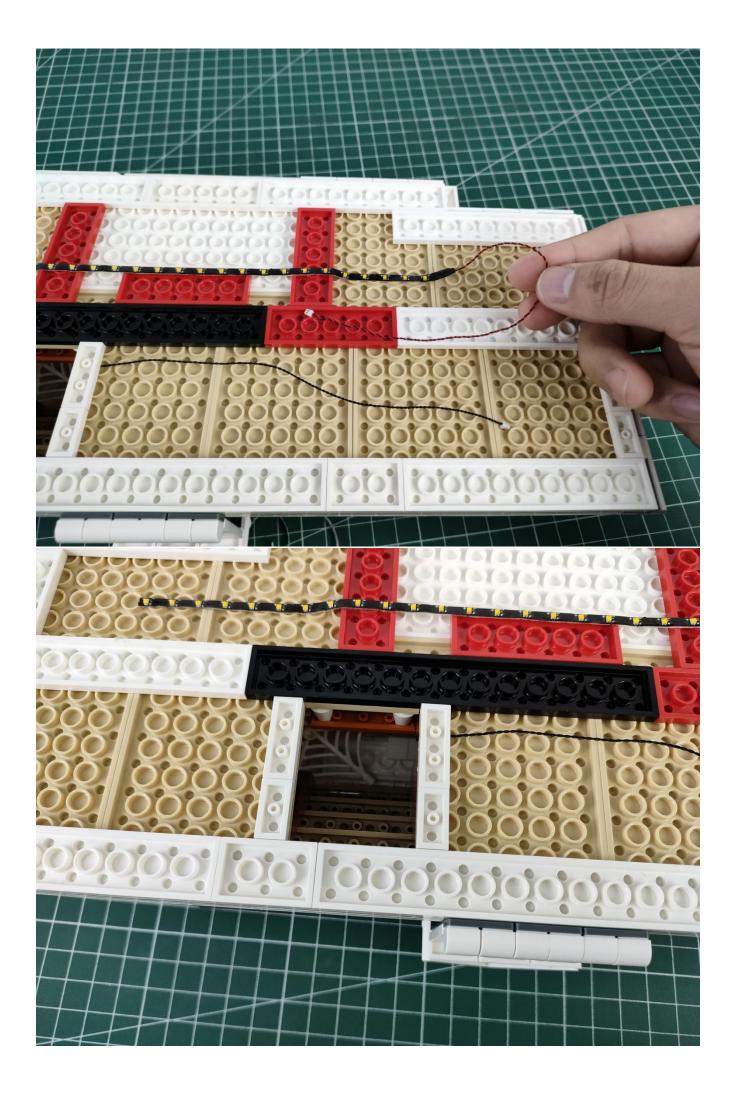


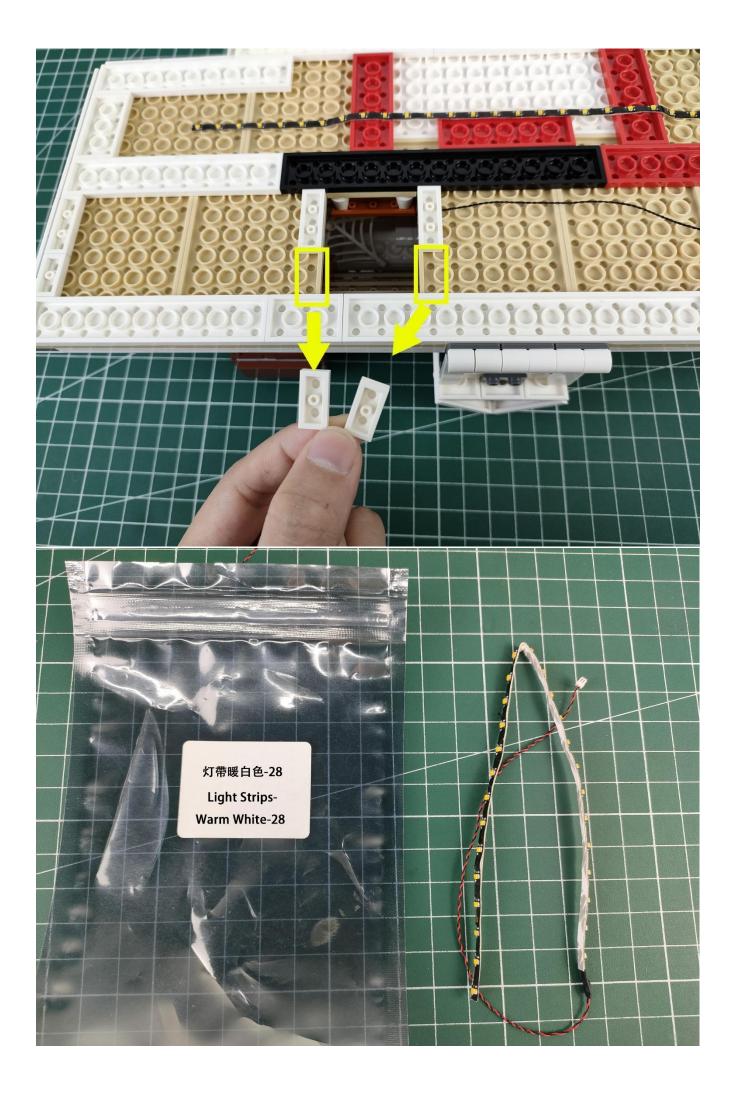


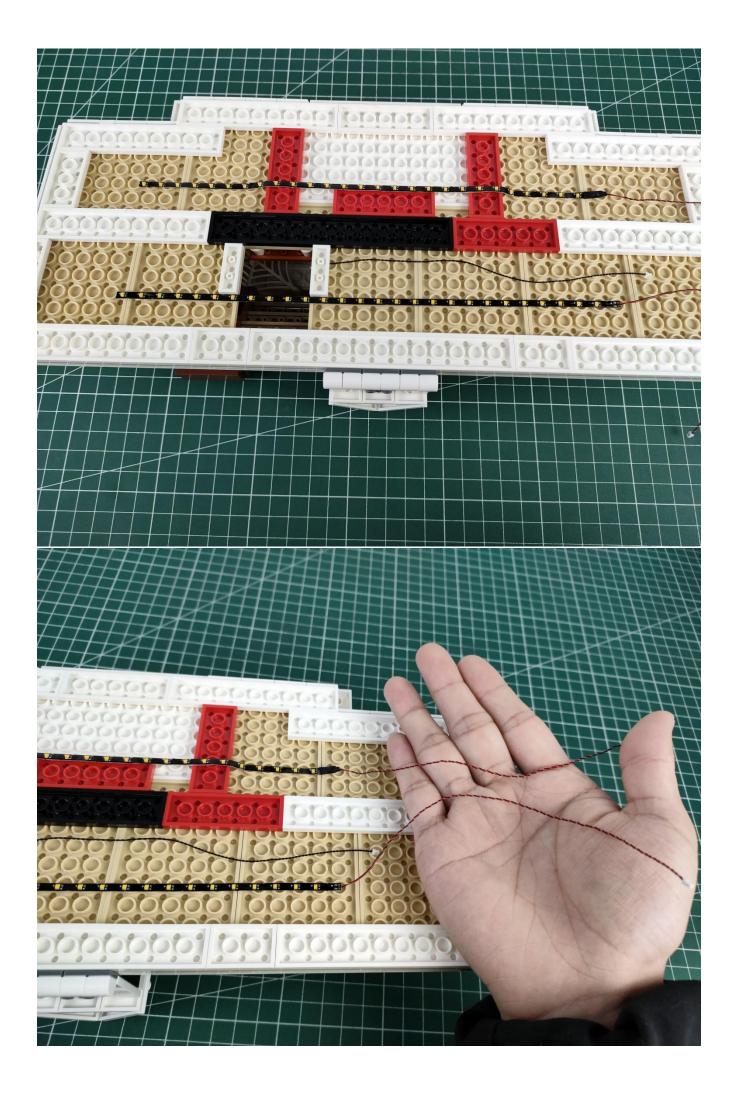





## Wireless Power Connectors

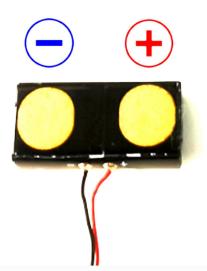

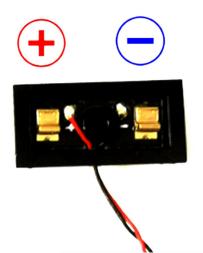


- 1. Wireless Power Connectors are divided into two parts.
- 2.The two parts need to be combined when connecting, The positive pole is connected to the positive pole, The negative pole is connected to the negative pole.

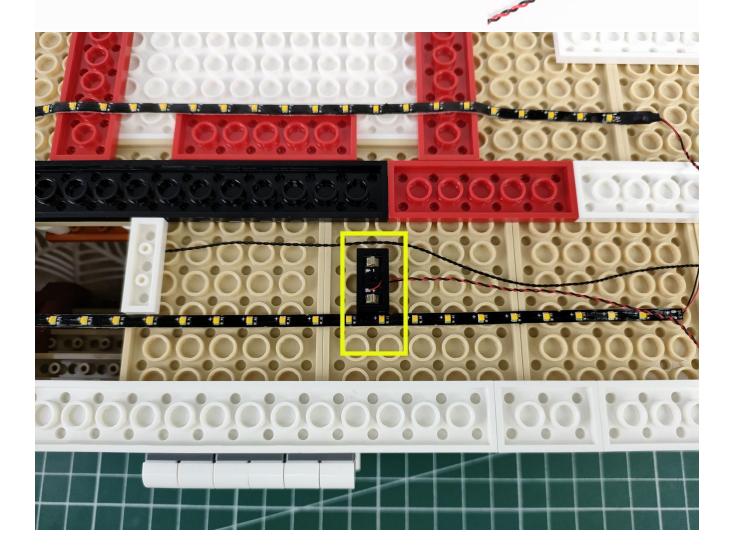

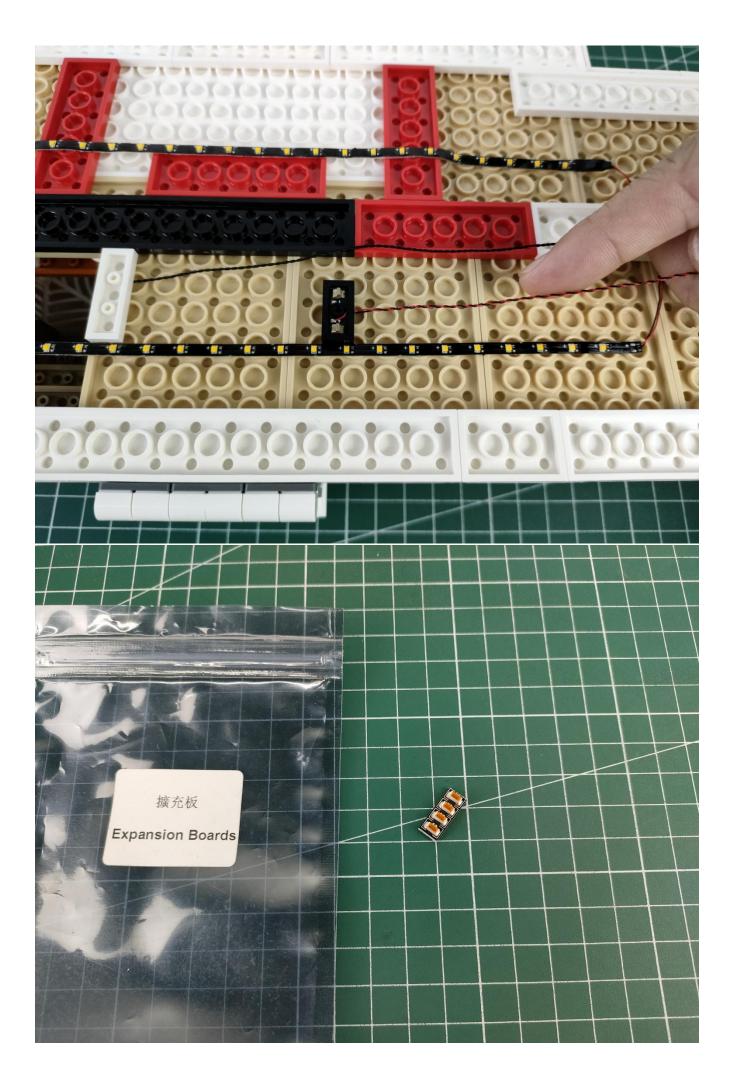


Please pay attention to the use of the interface. The interface is small. Please use it carefully: the = number of the 2P interface is aligned with the = number of the expansion board. The equal sign on the expansion board refers to the two solder joints on the outside, not the two inside the jack Metal pin.




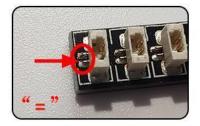




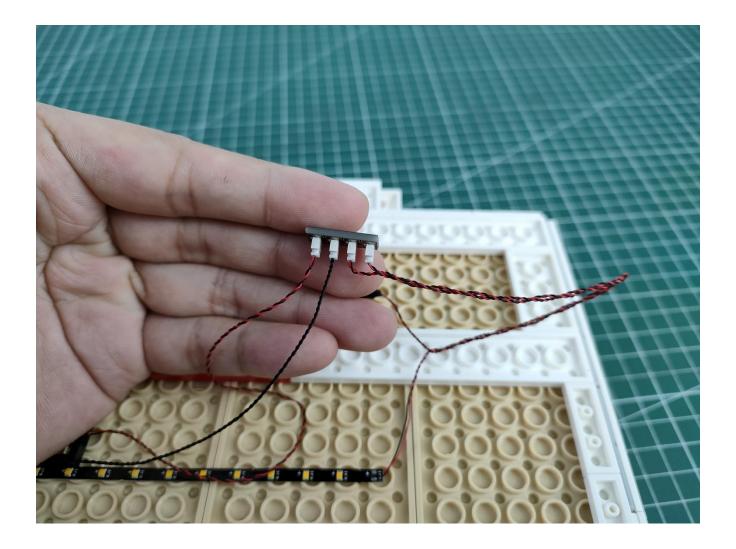




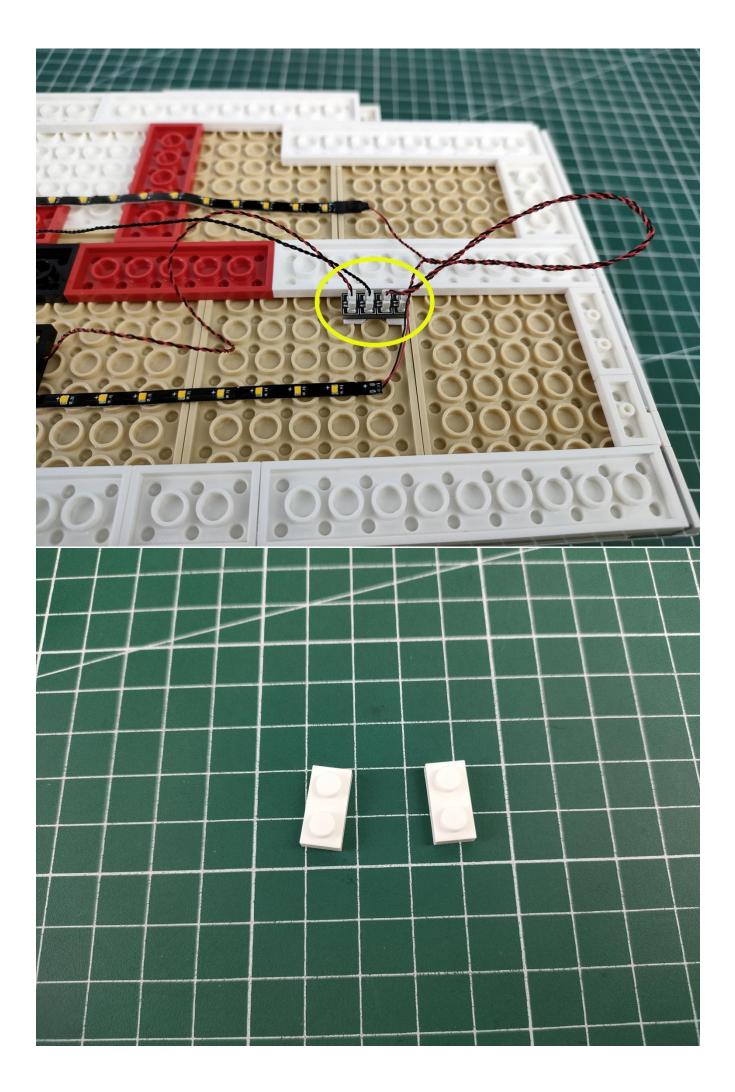


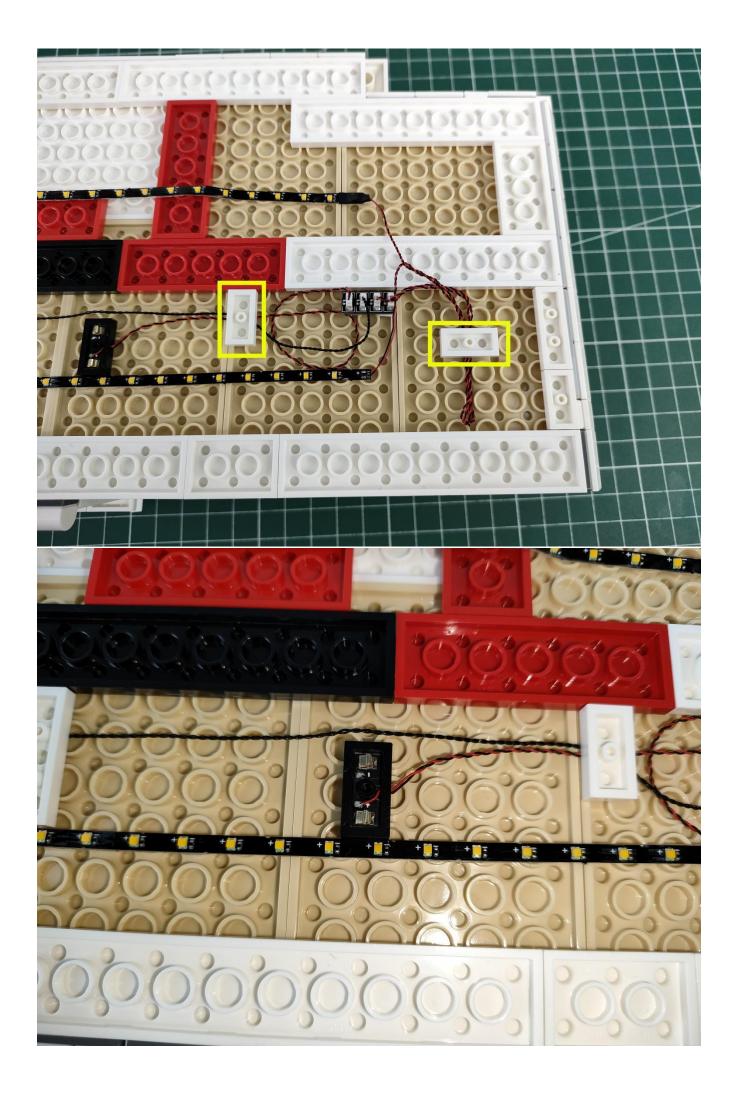








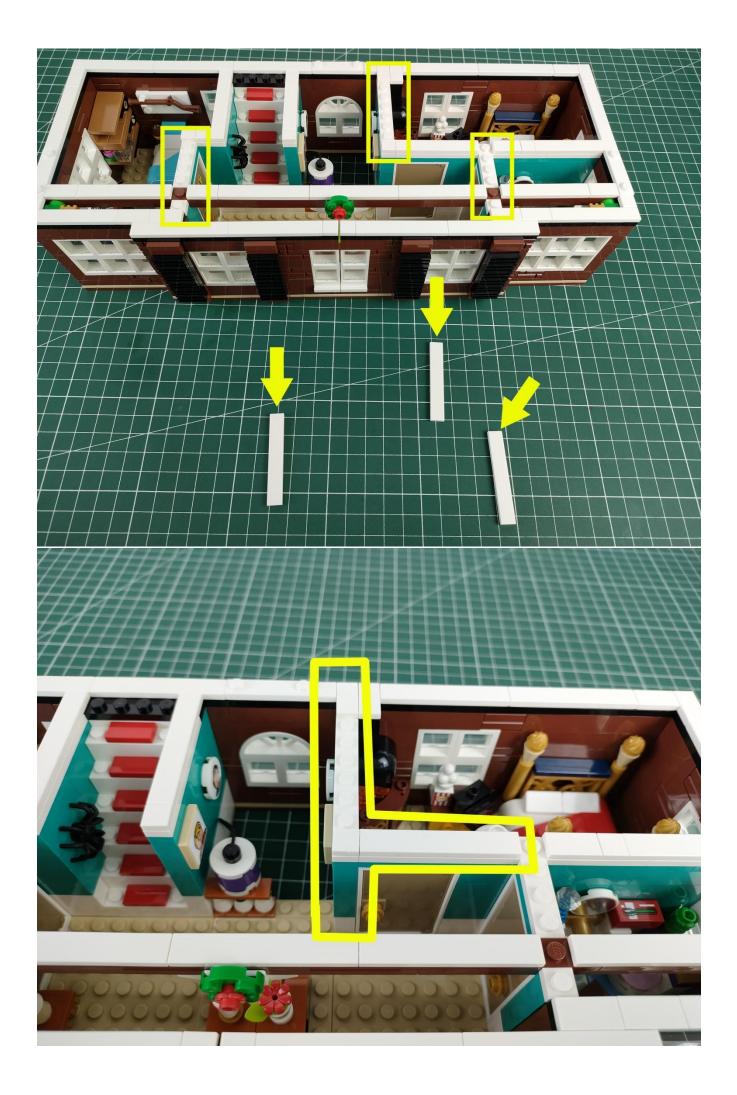


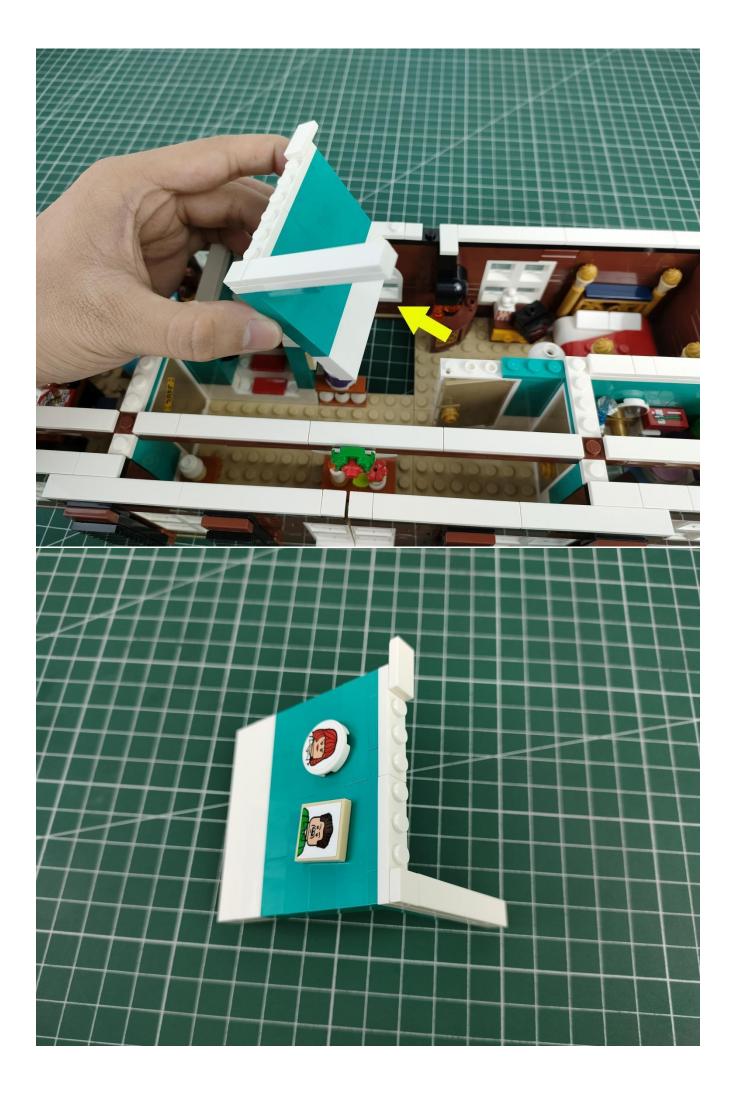

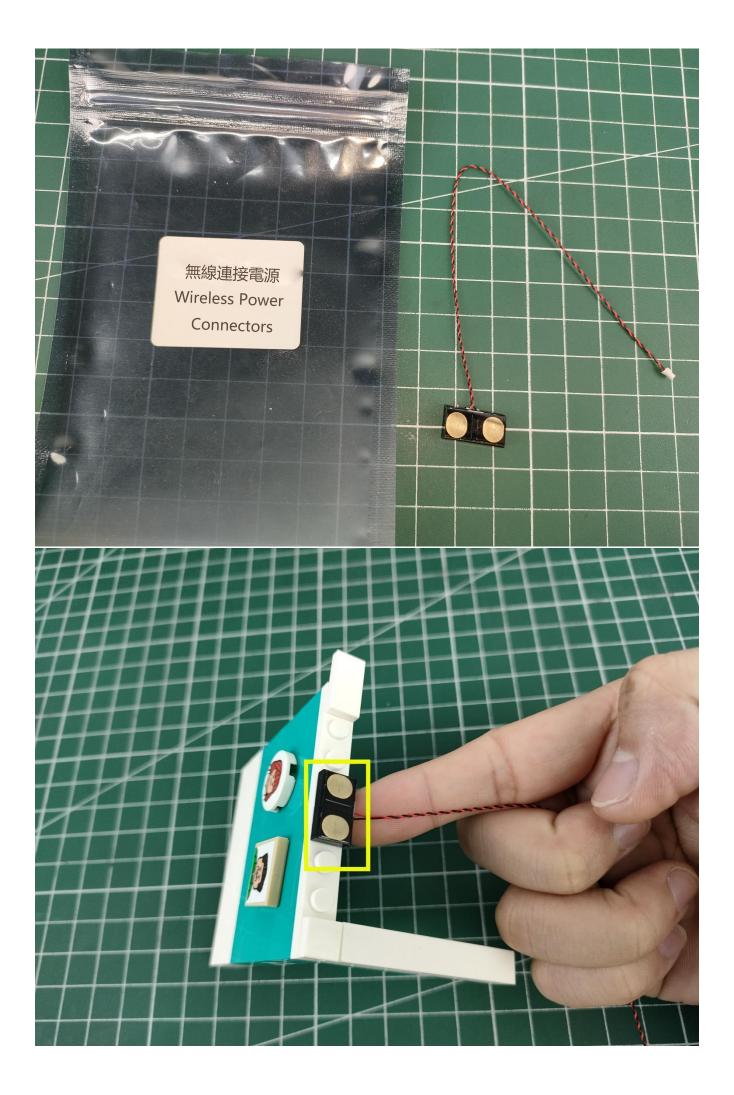


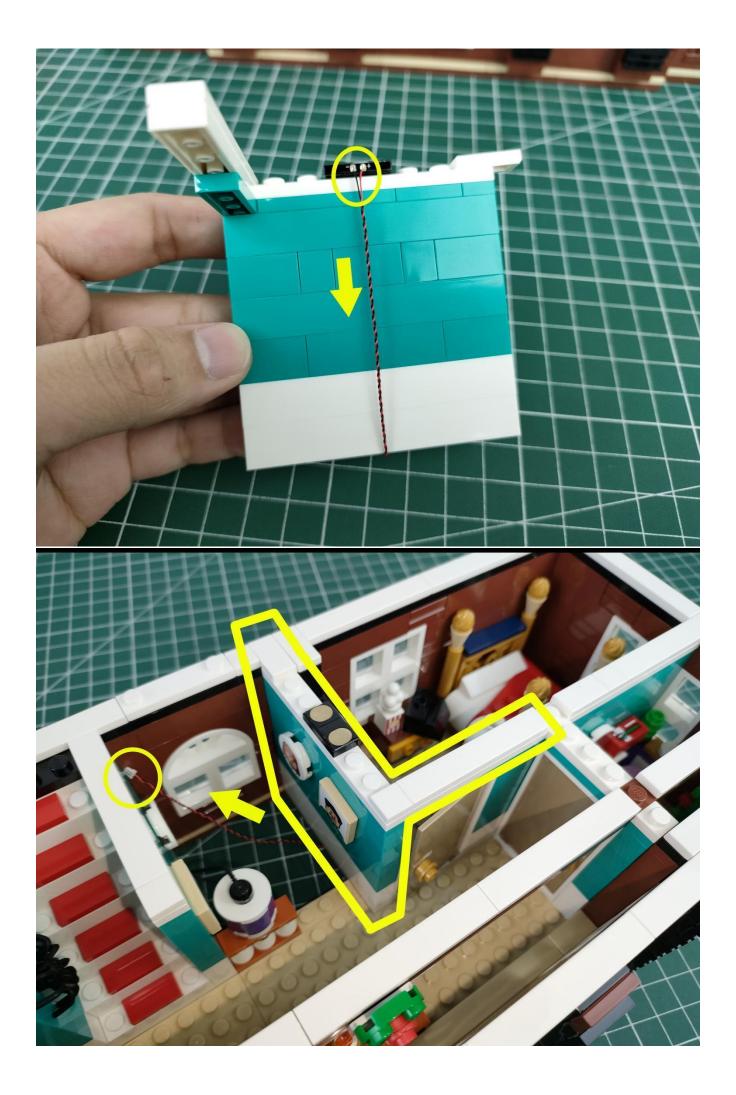


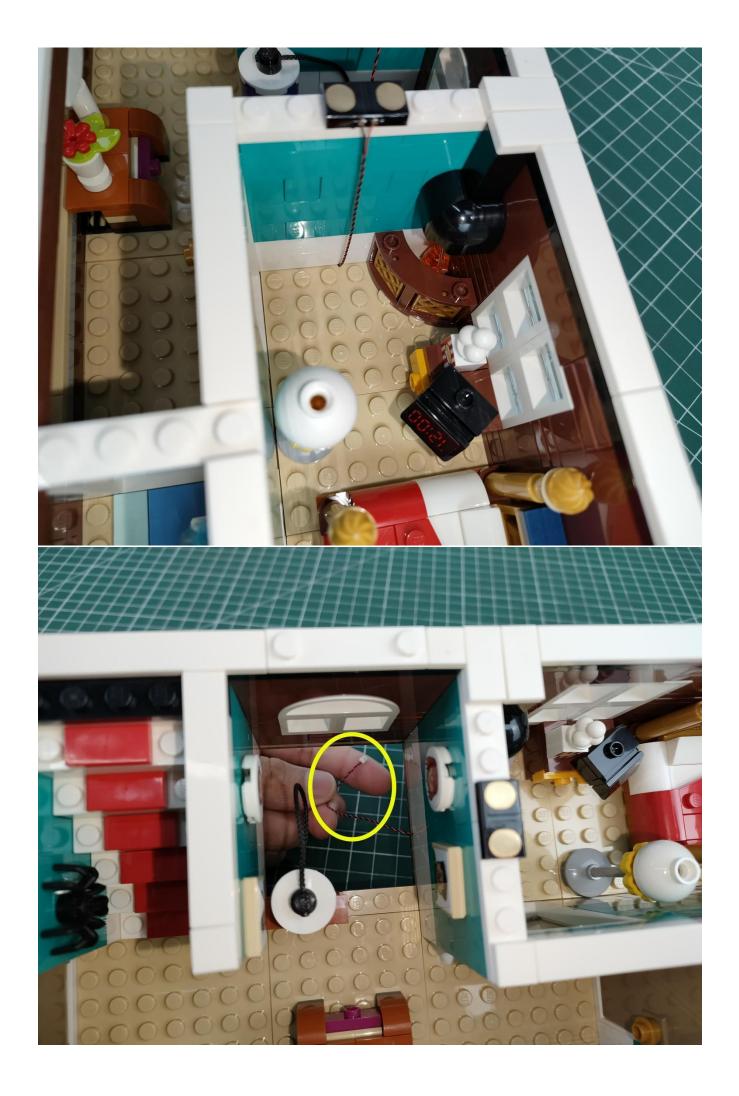


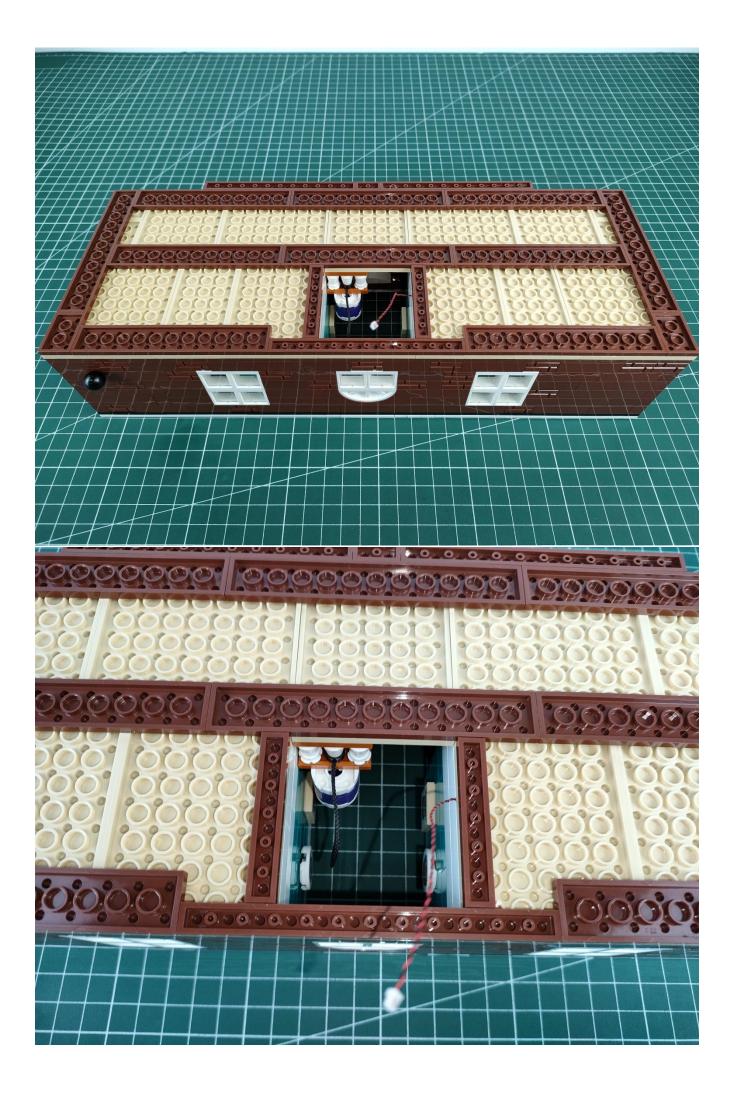





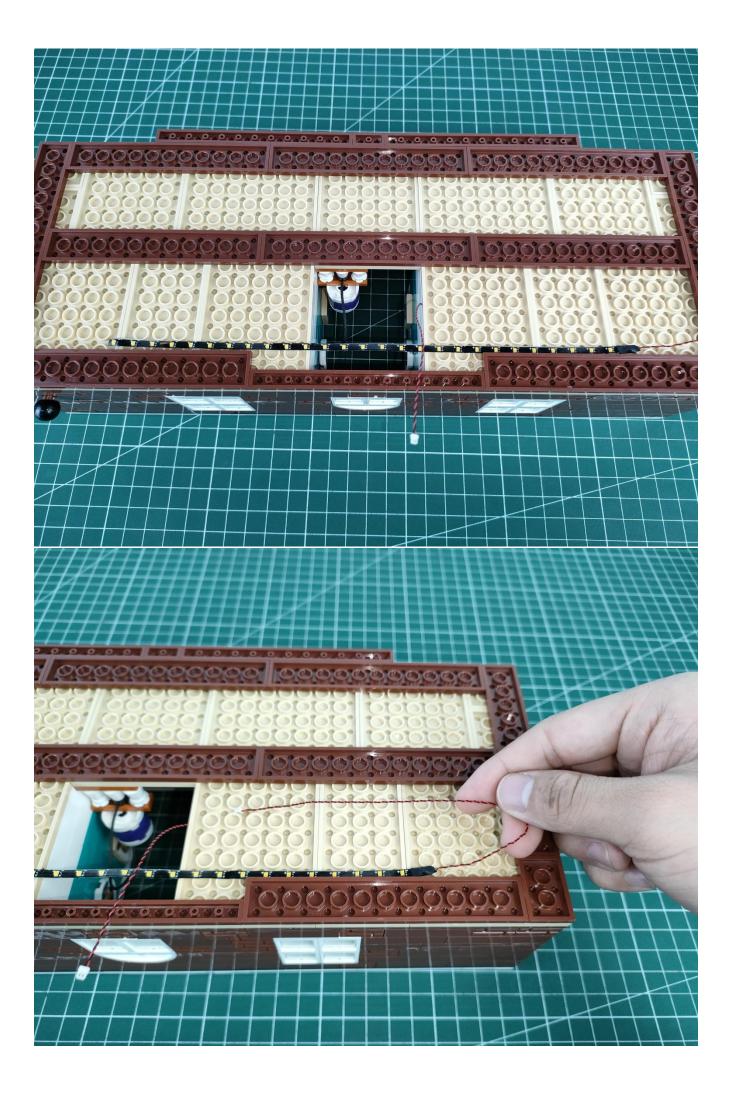

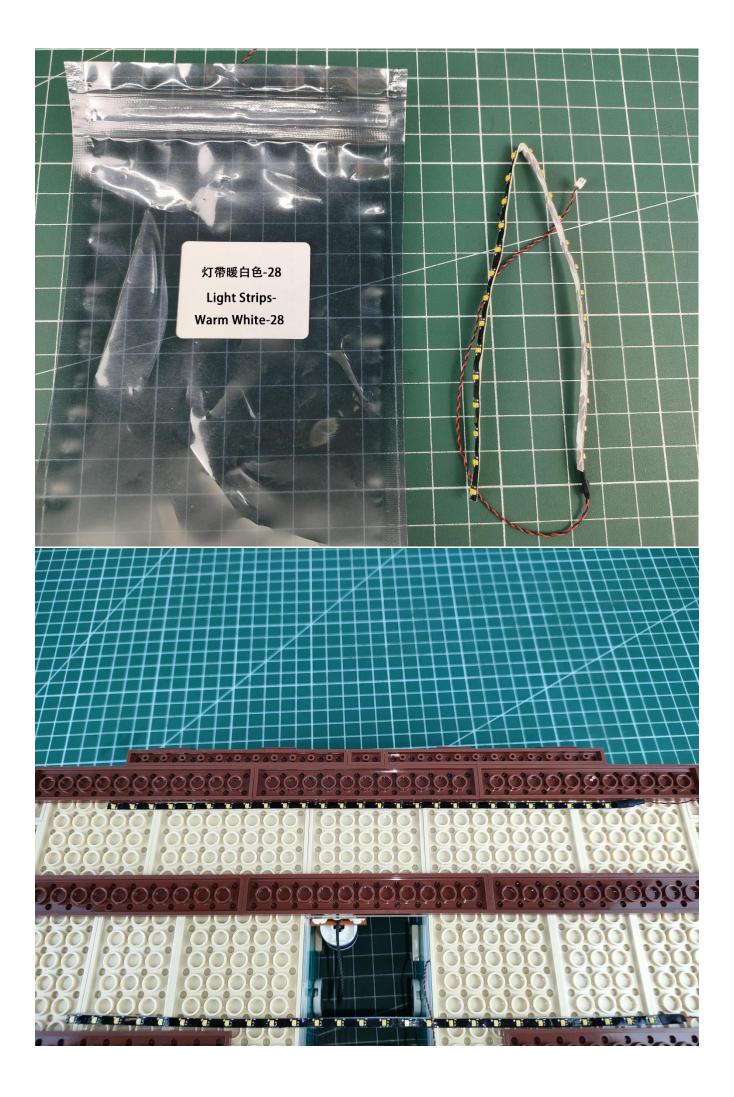


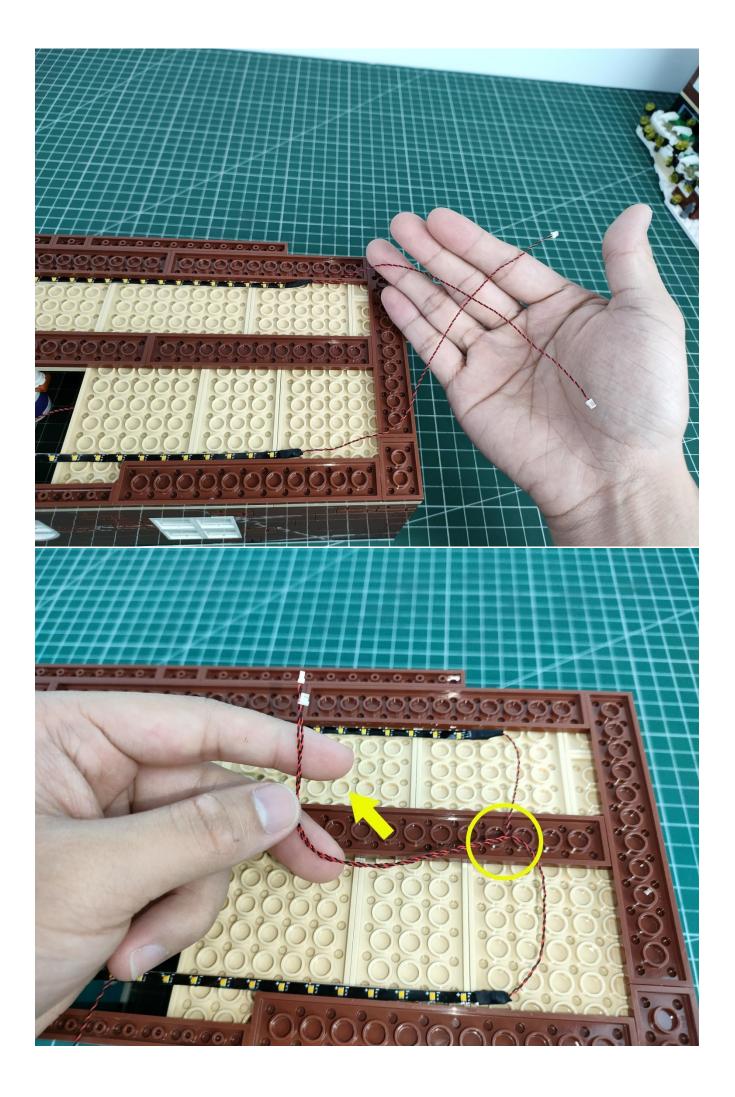


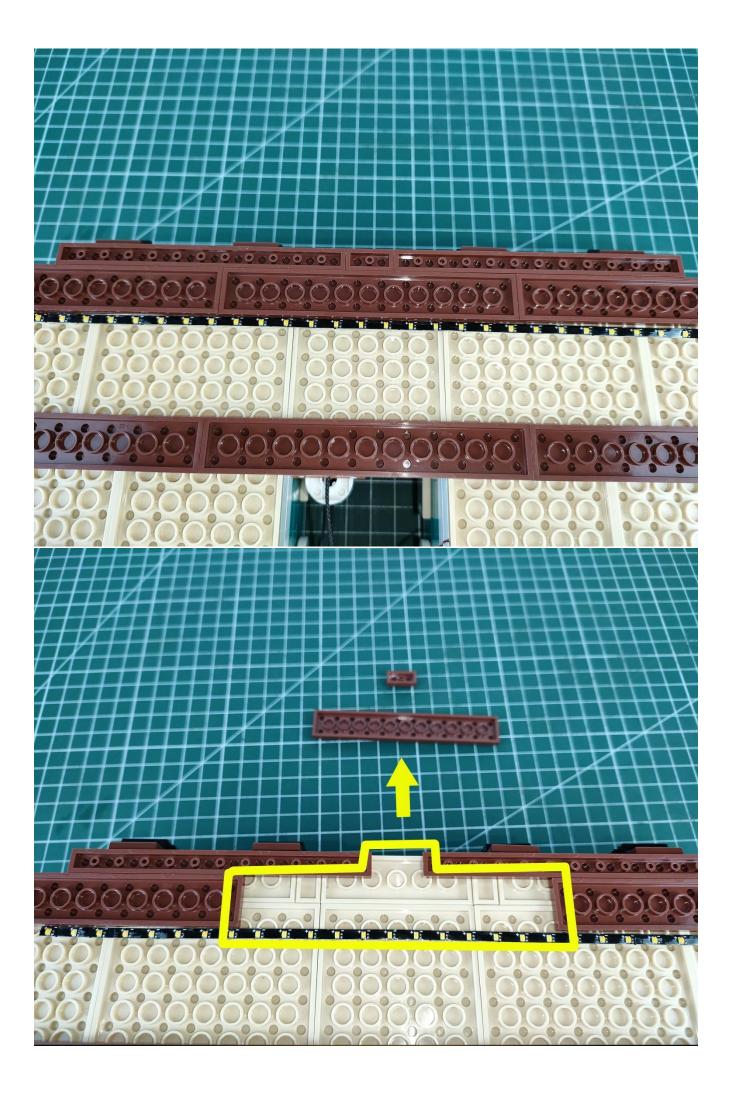

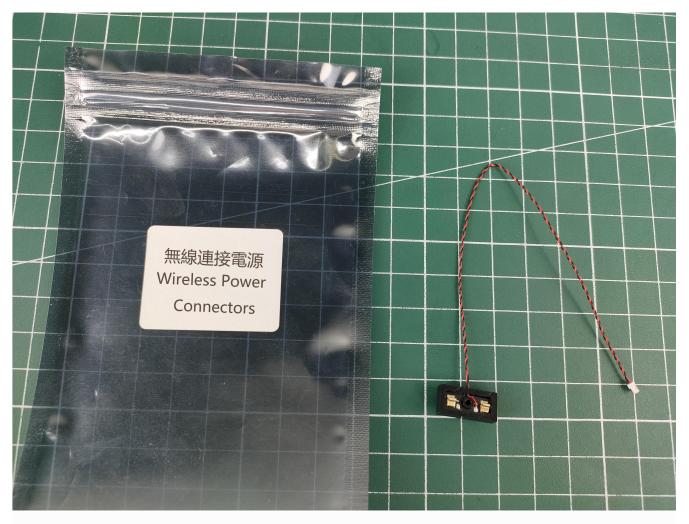



## Wireless Power Connectors

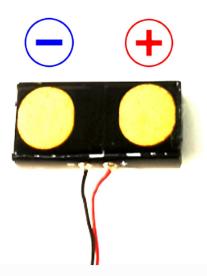


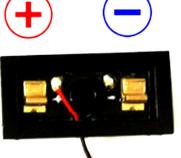

- 1. Wireless Power Connectors are divided into two parts.
- 2.The two parts need to be combined when connecting,The positive pole is connected to the positive pole,The negative pole is connected to the negative pole.

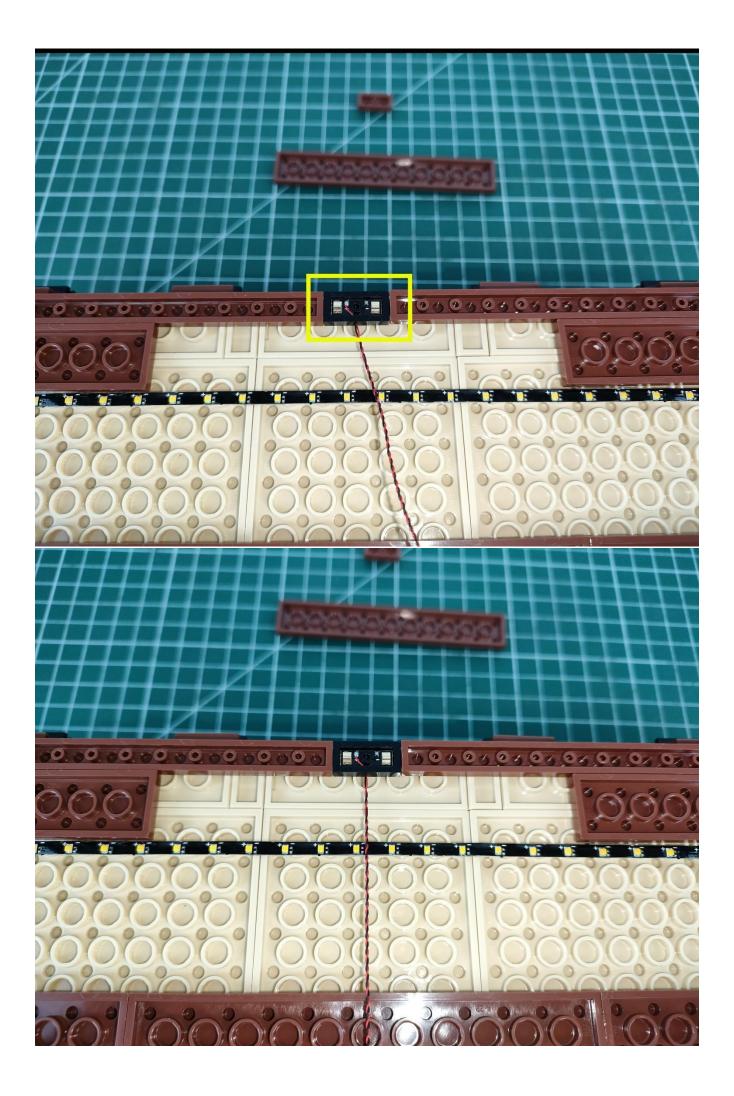

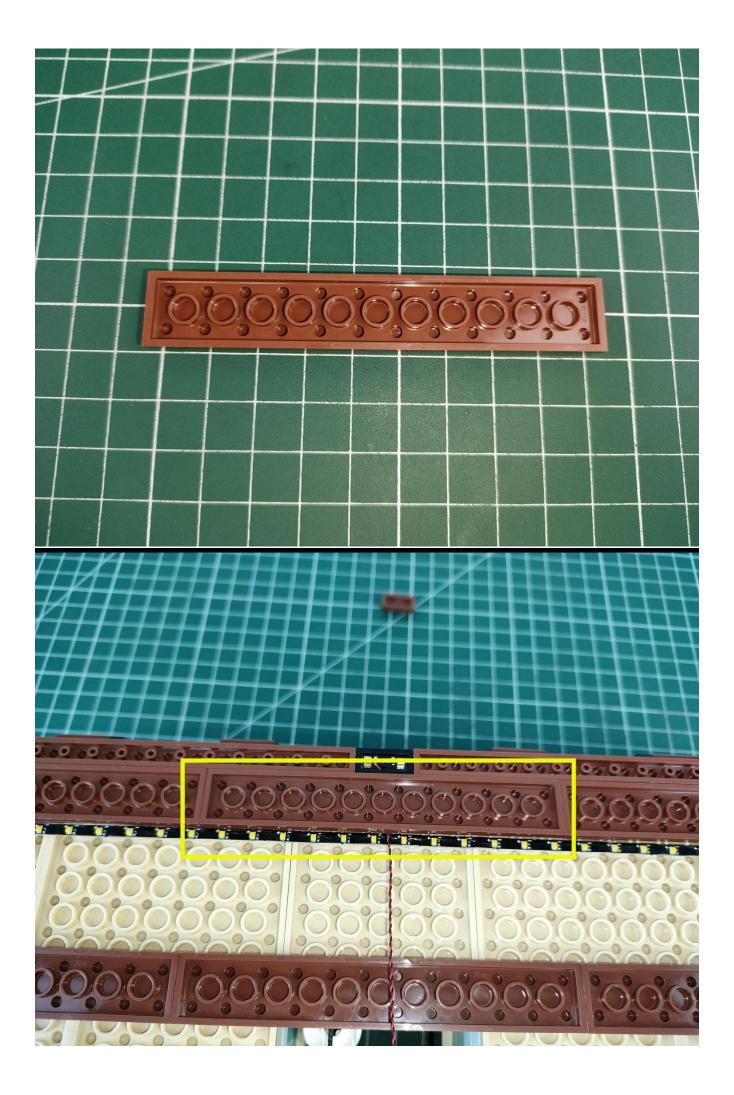


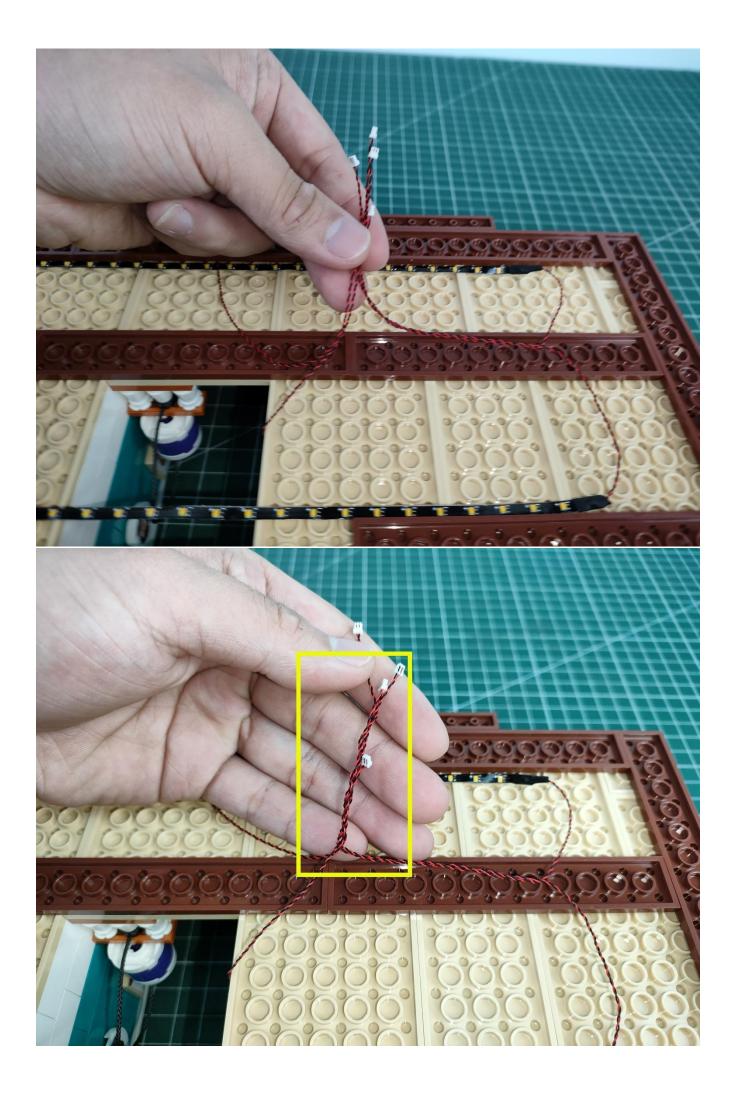




Please pay attention to the use of the interface. The interface is small. Please use it carefully: the = number of the 2P interface is aligned with the = number of the expansion board. The equal sign on the expansion board refers to the two solder joints on the outside, not the two inside the jack Metal pin.



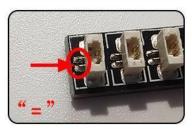





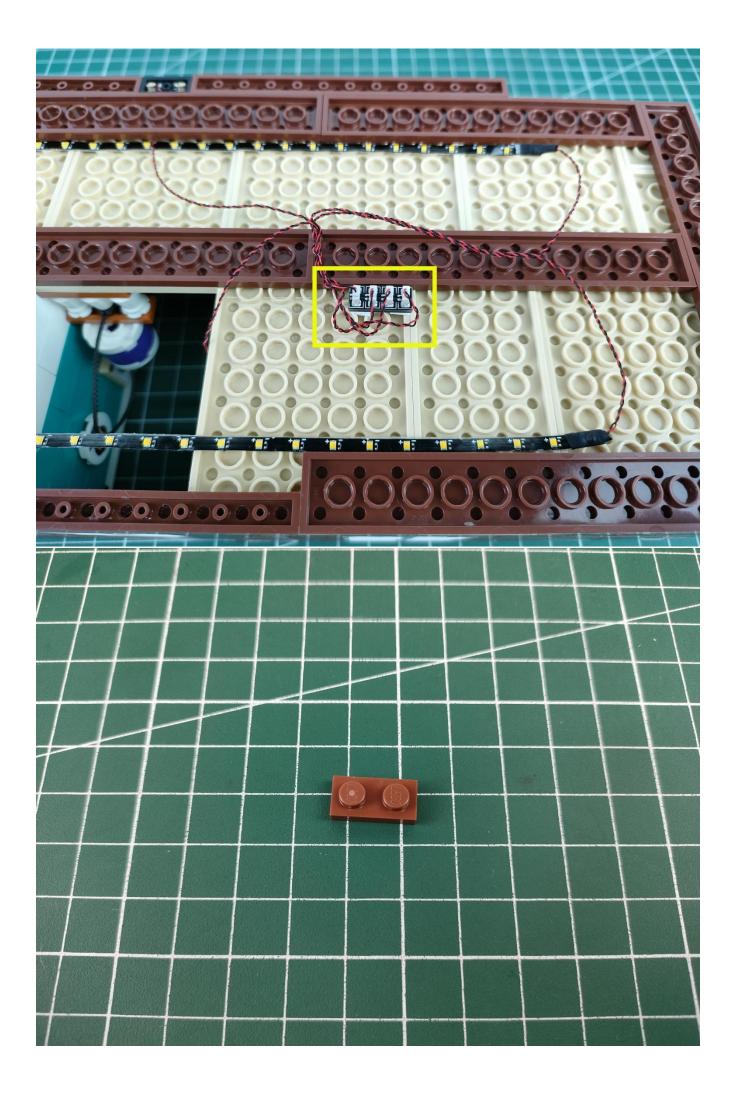














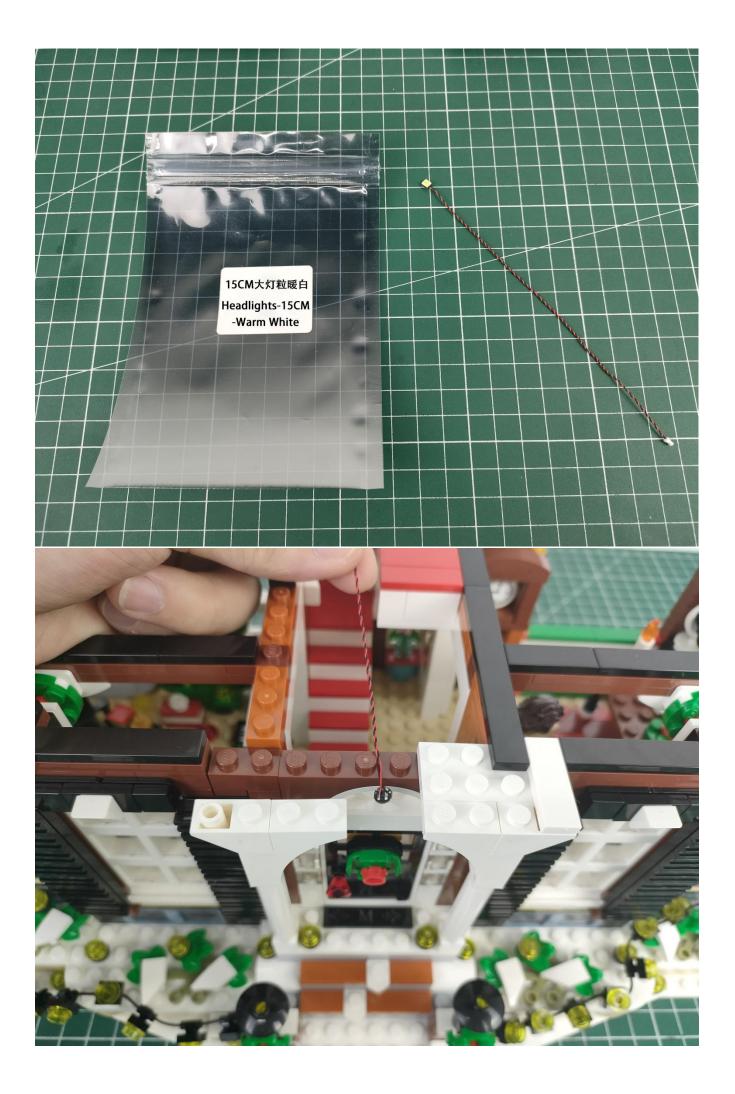


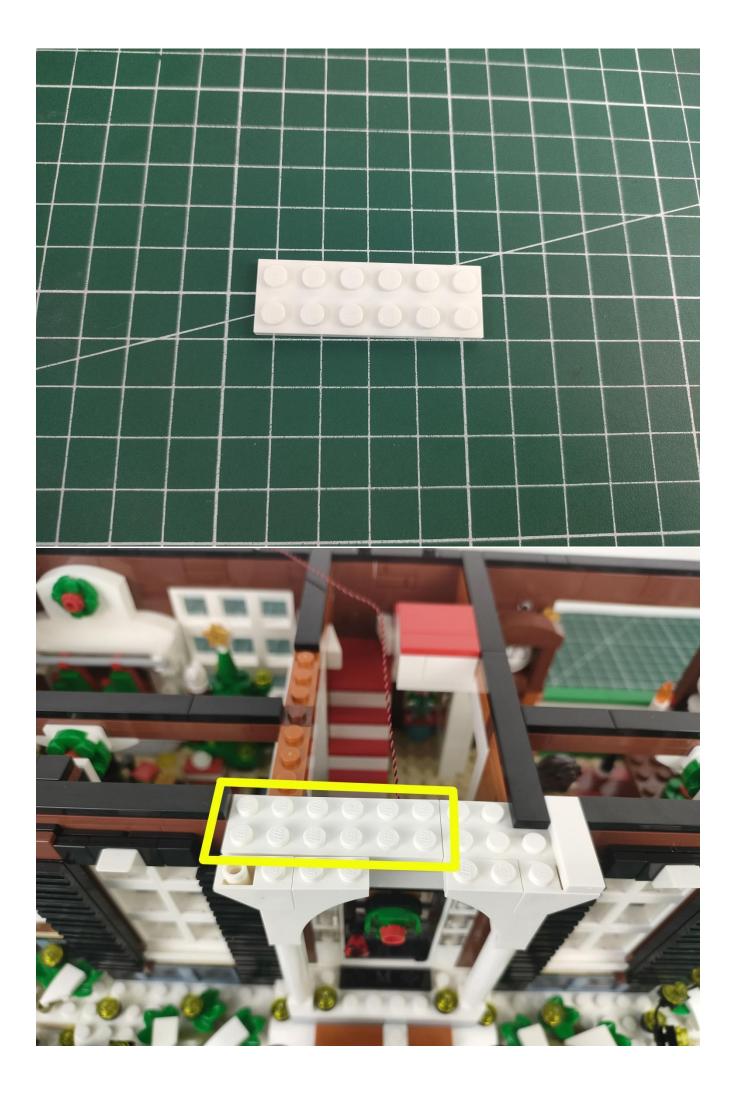

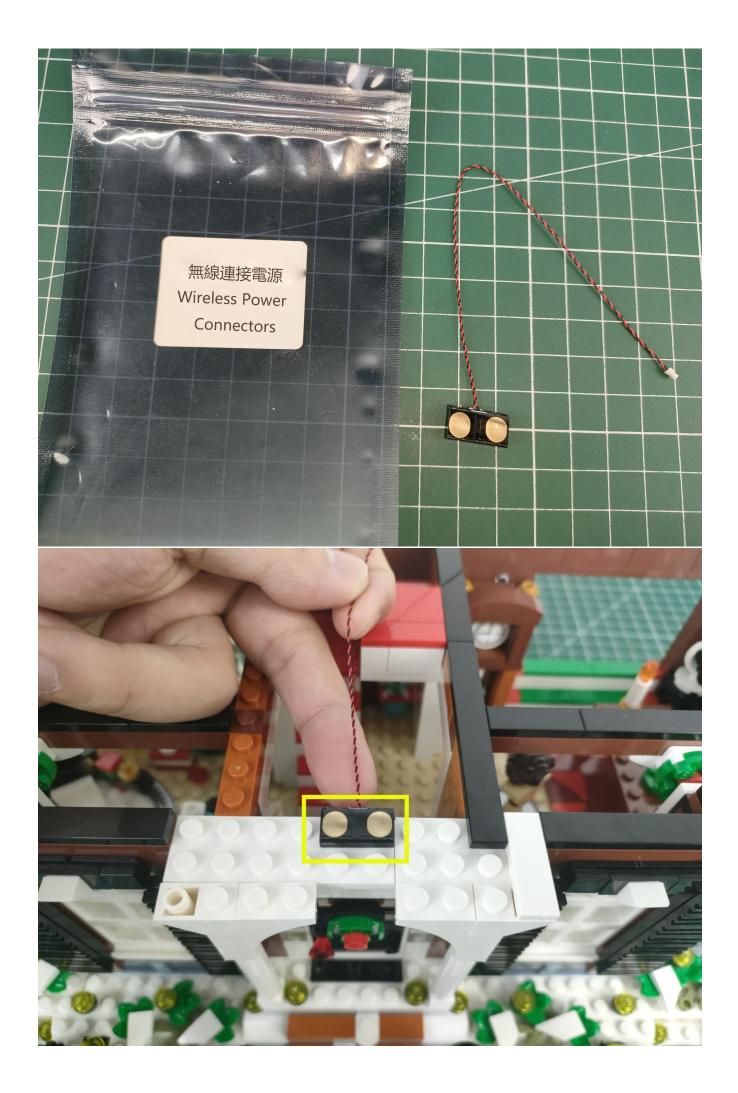


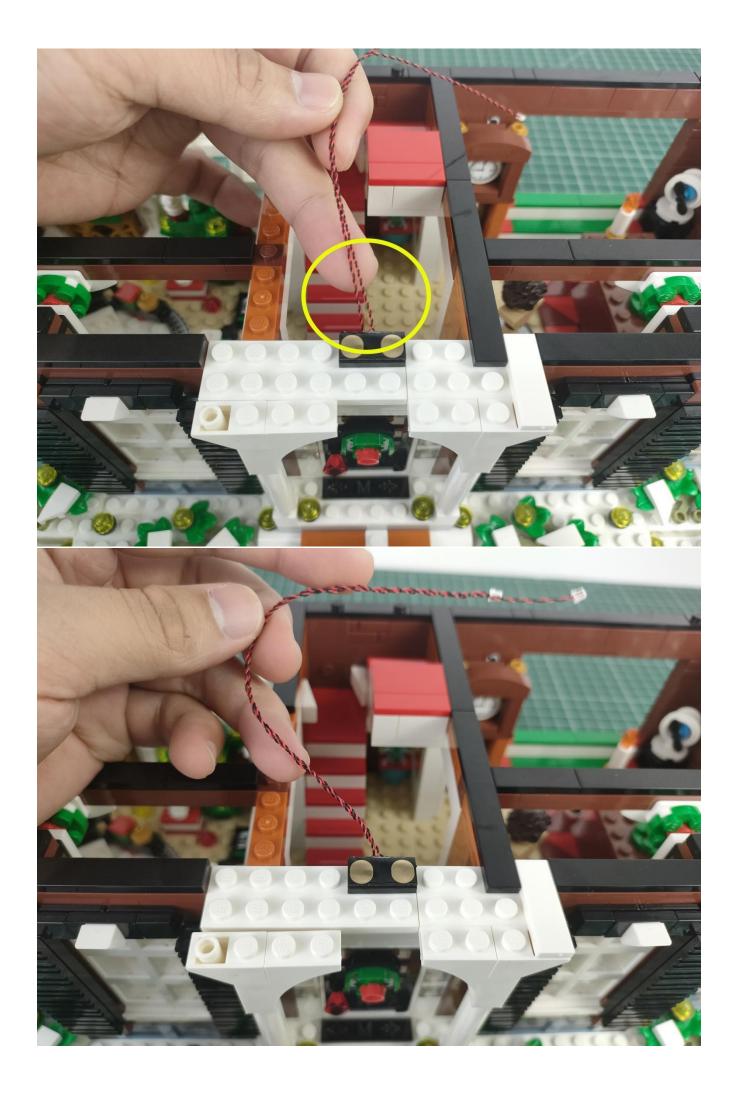

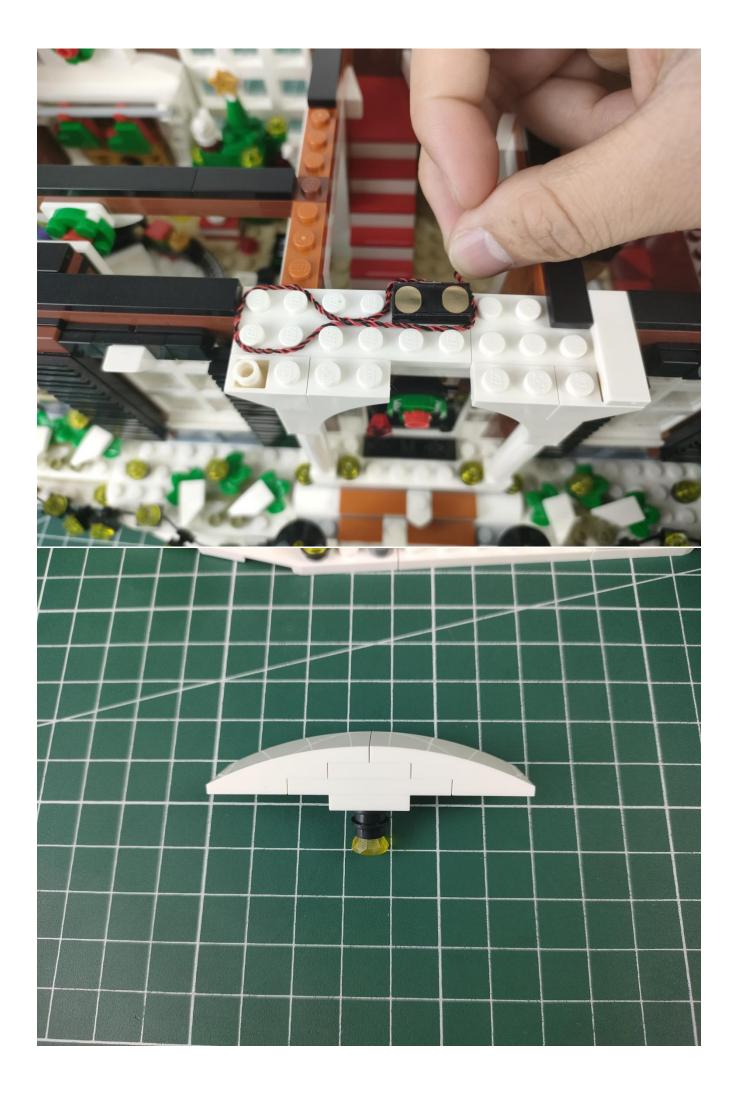


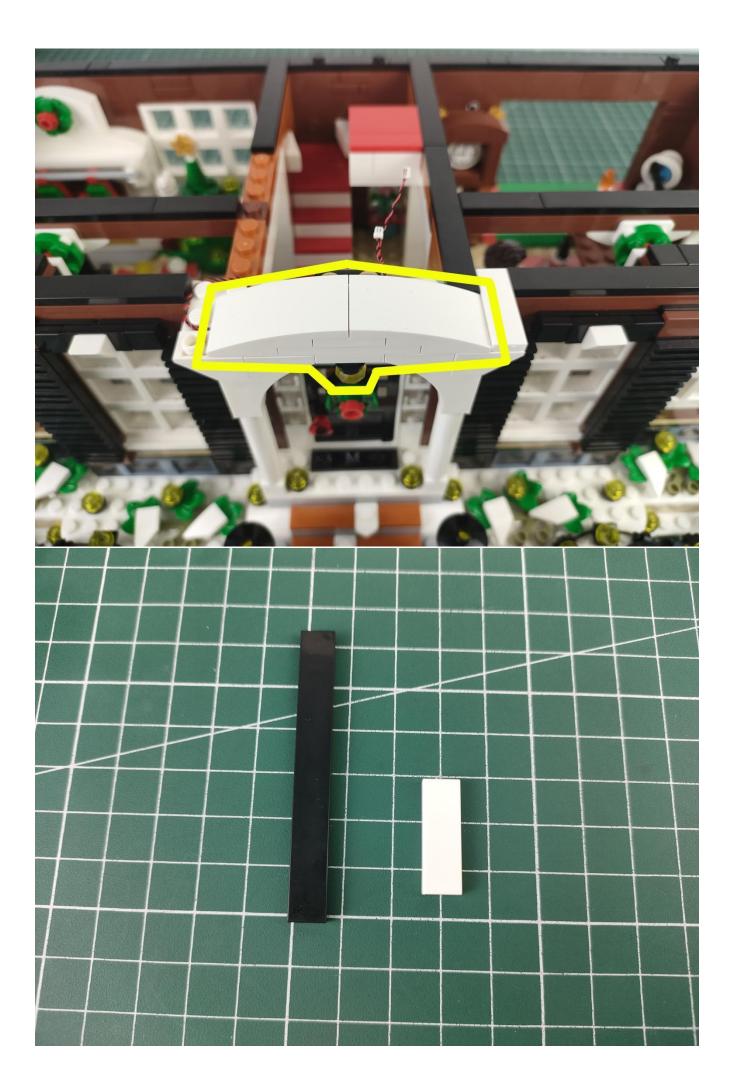




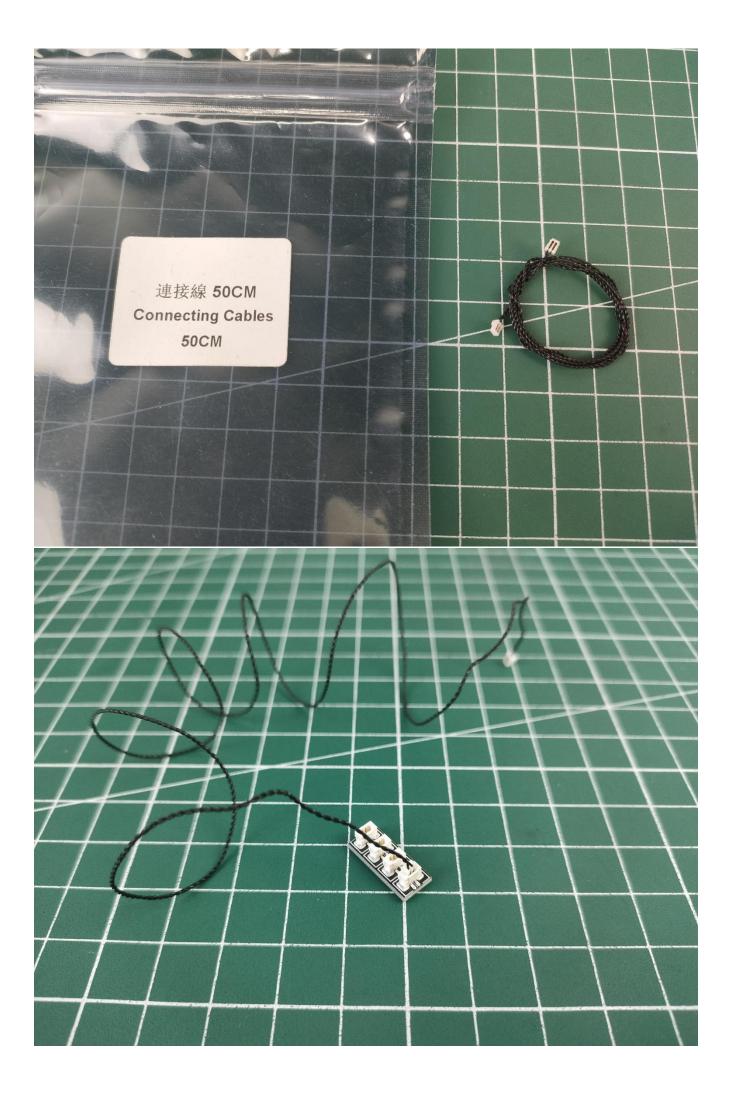





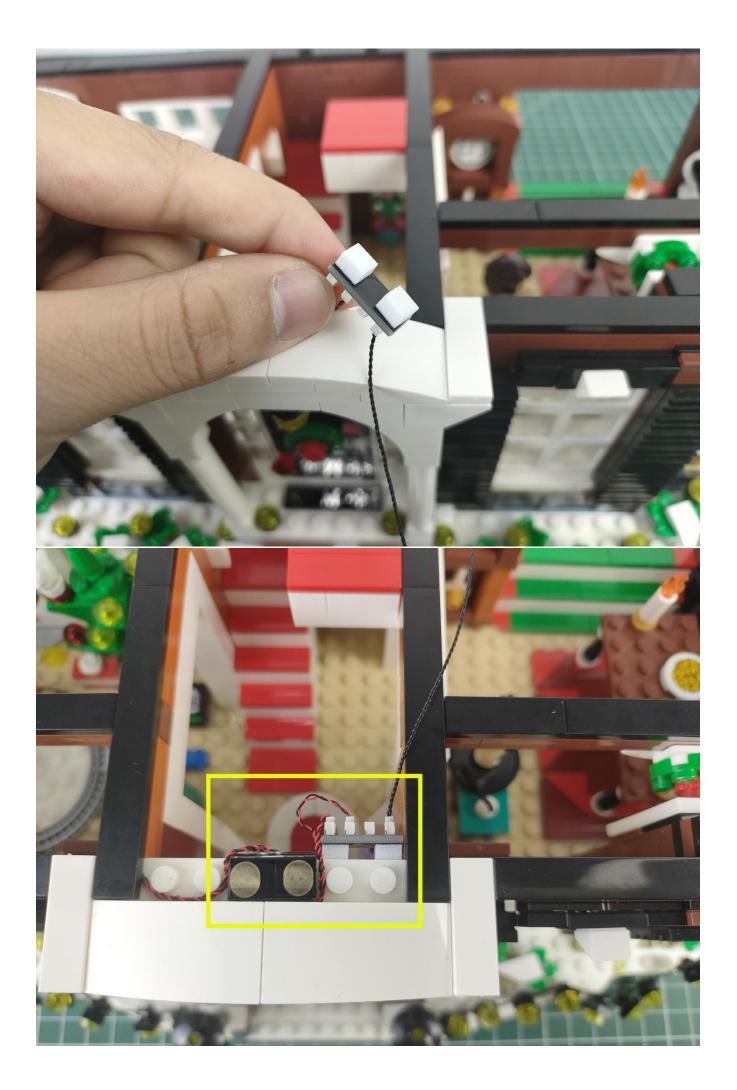




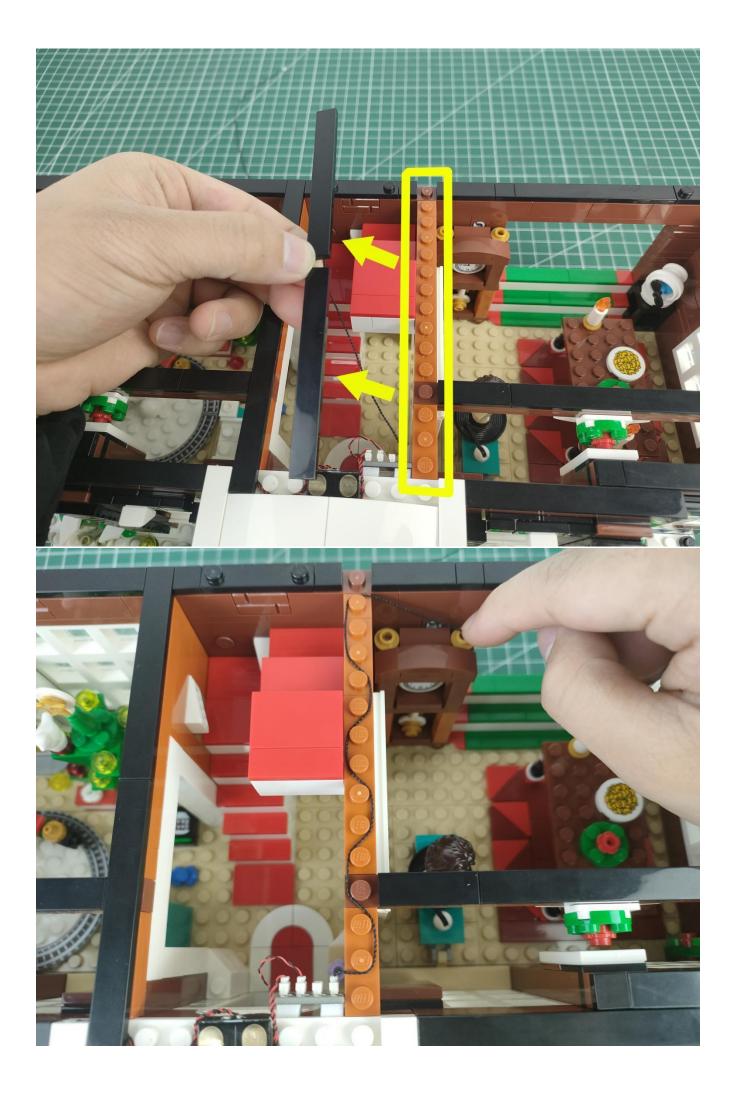


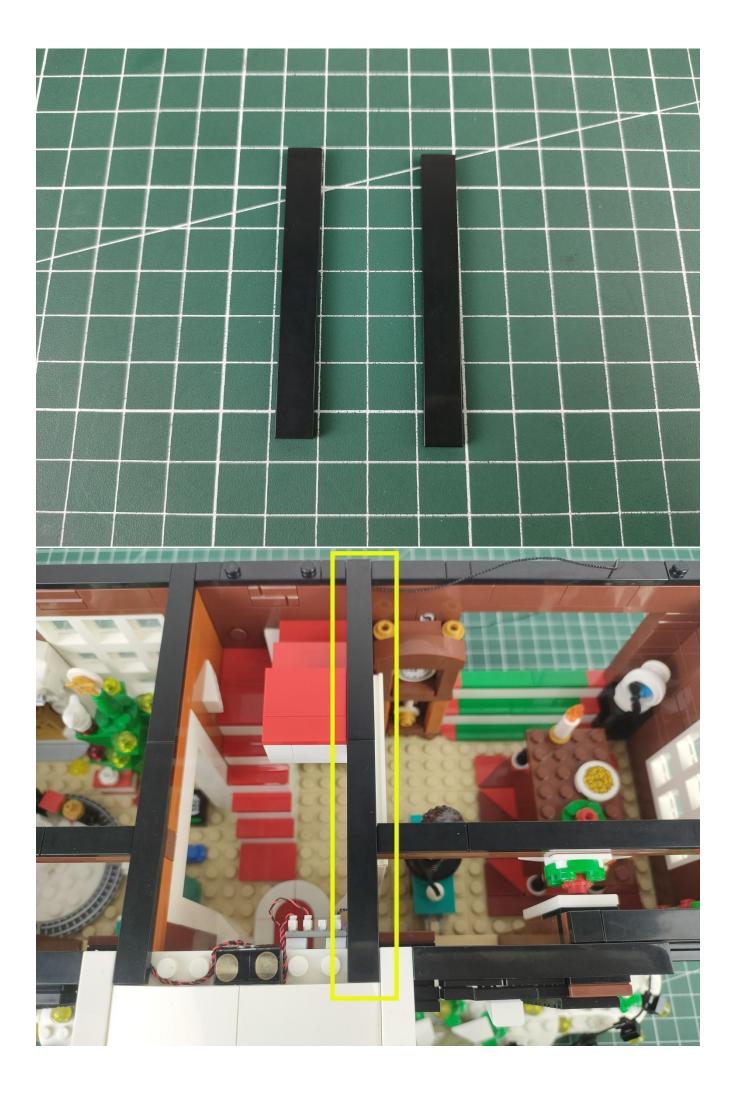

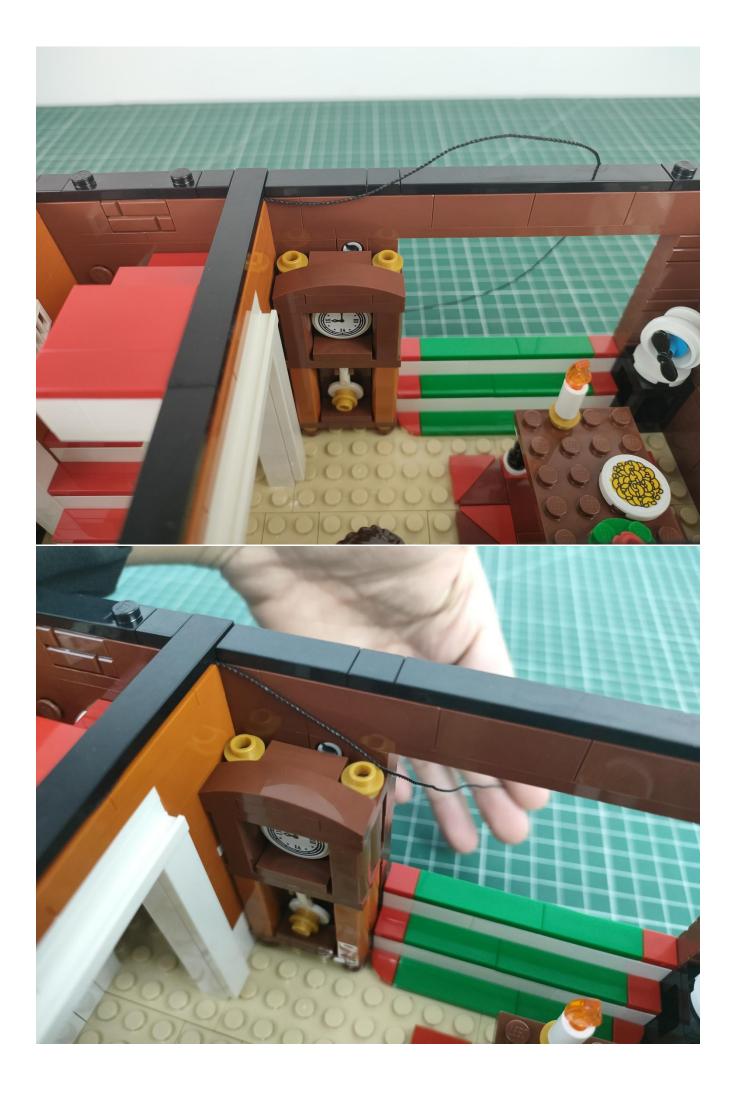

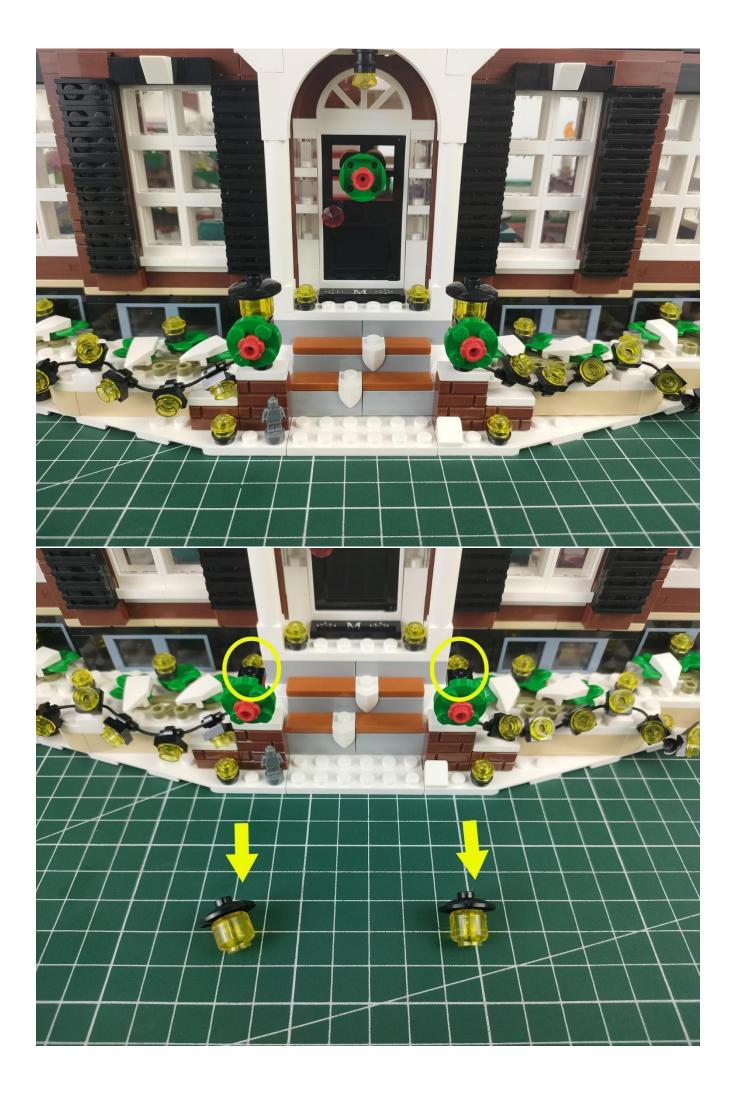




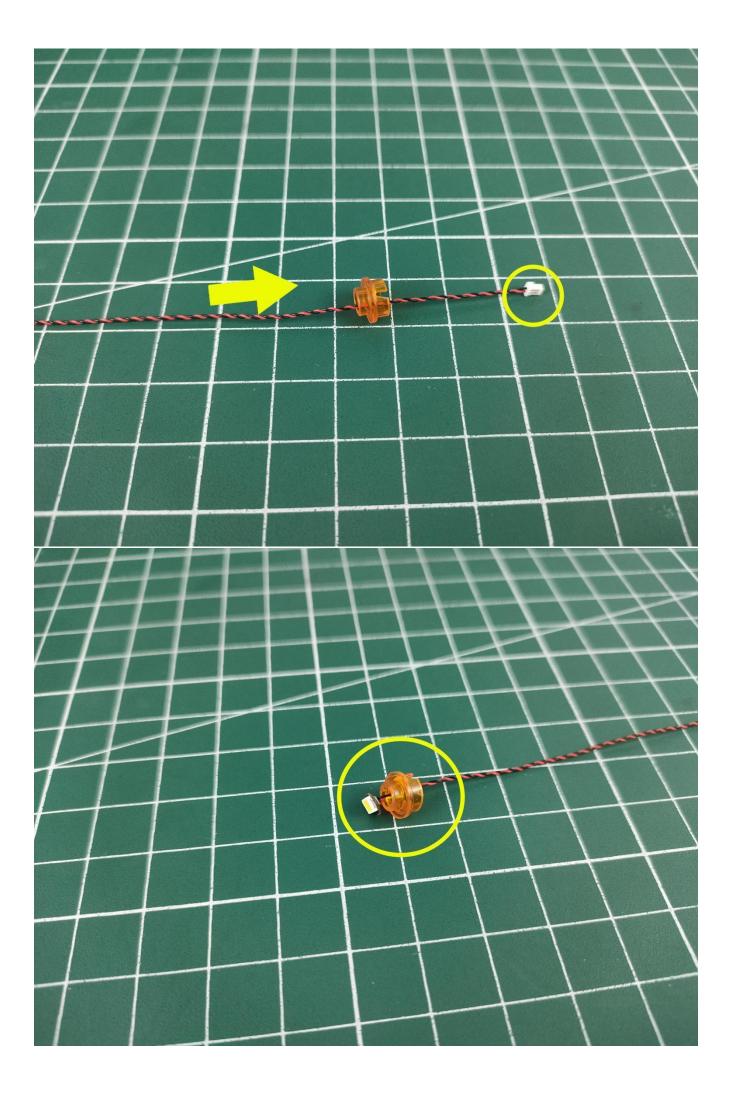




The plate without slit:


The plate without slit: The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work. The plate with slit:

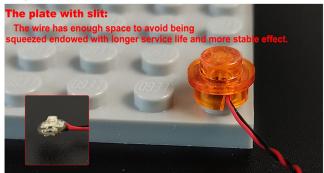



The slit on the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormalheat during installation.

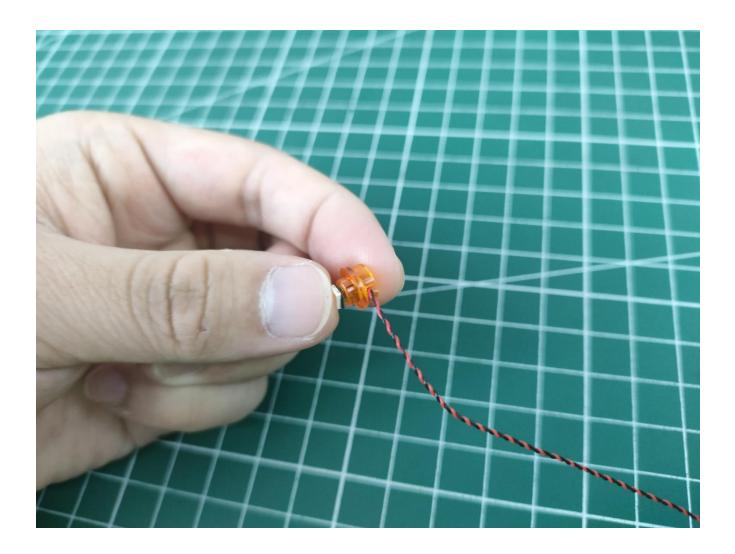



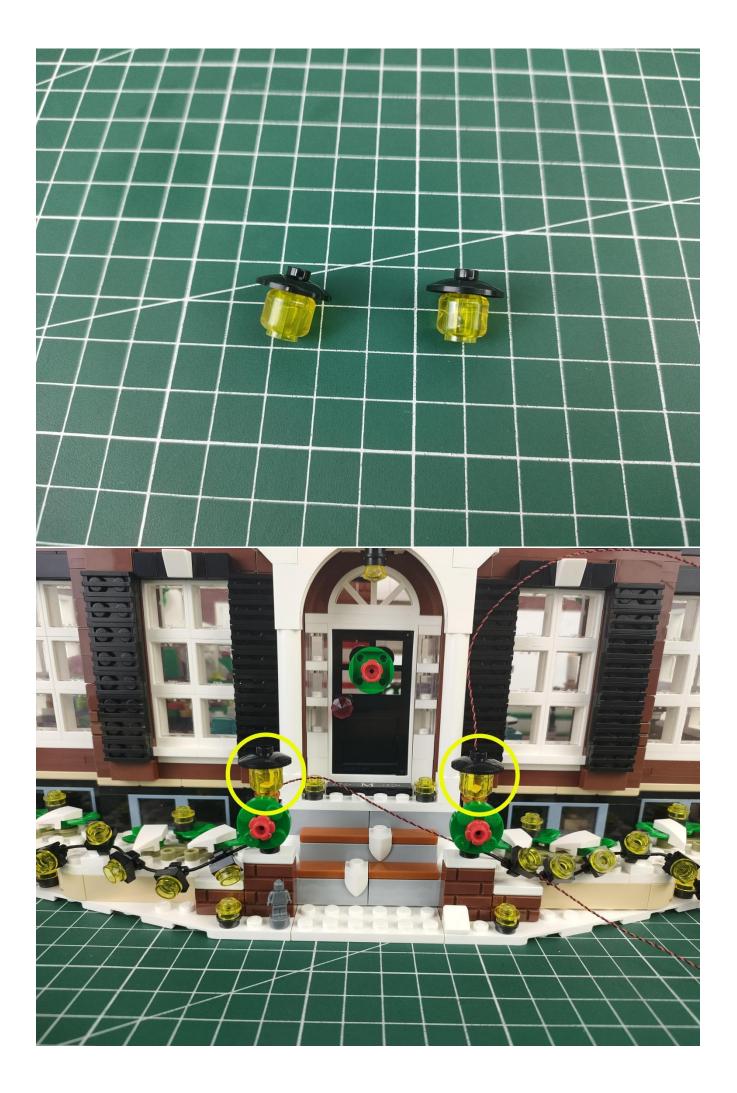


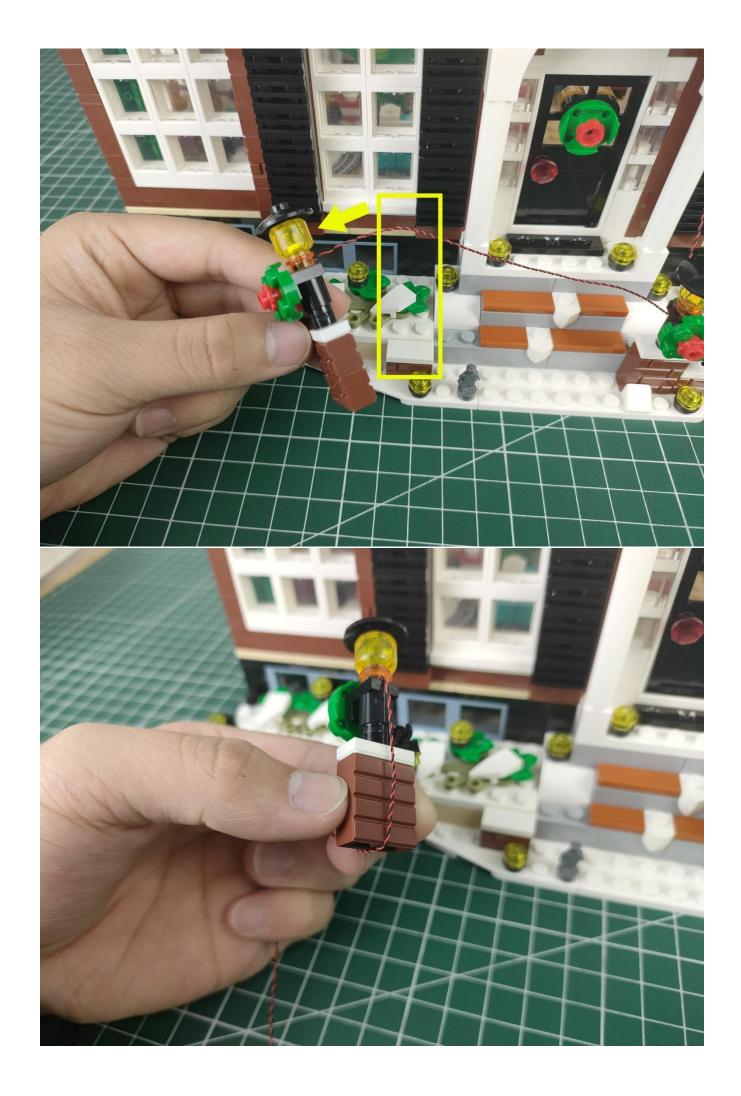


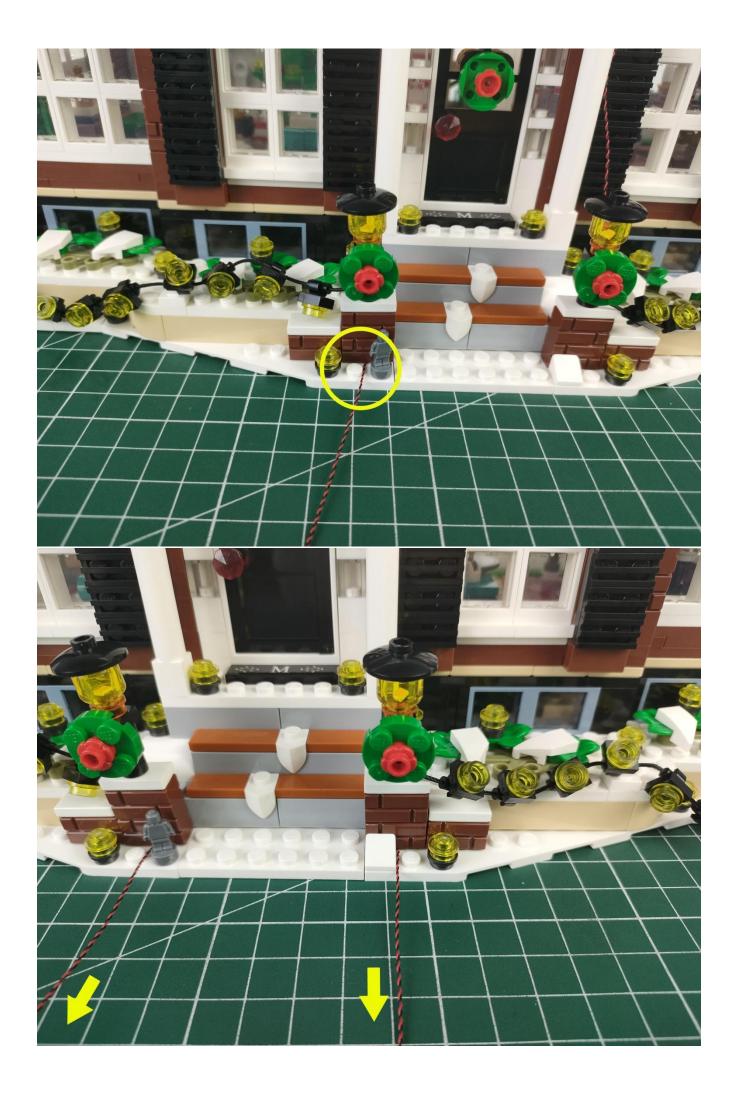







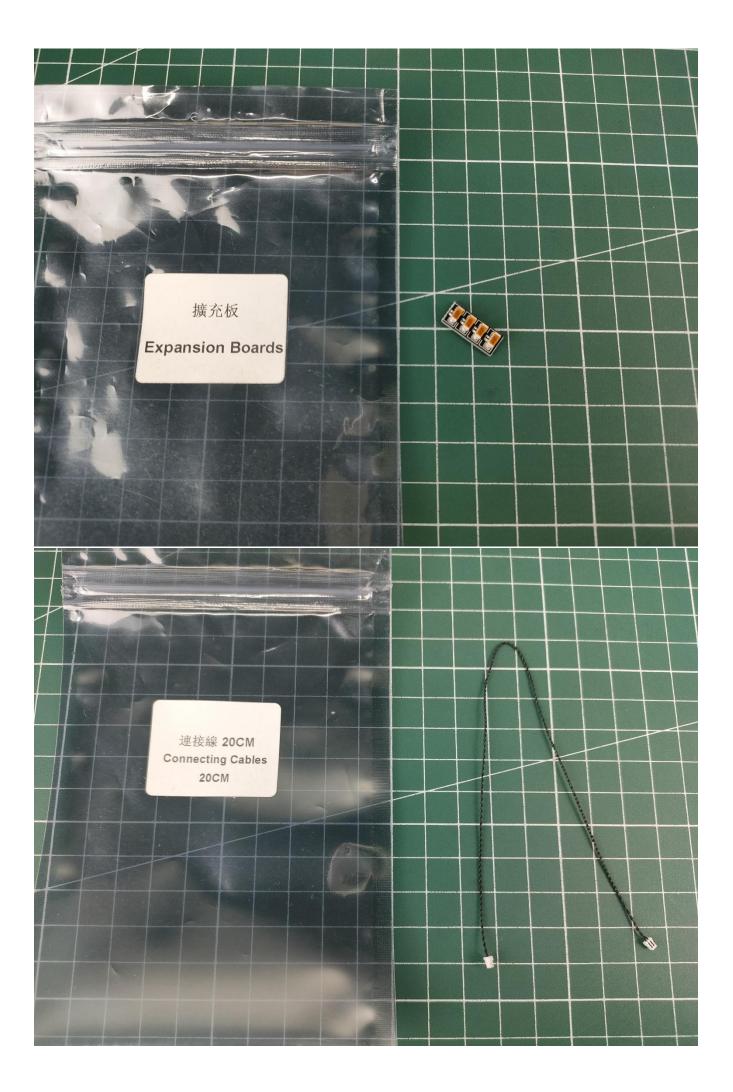

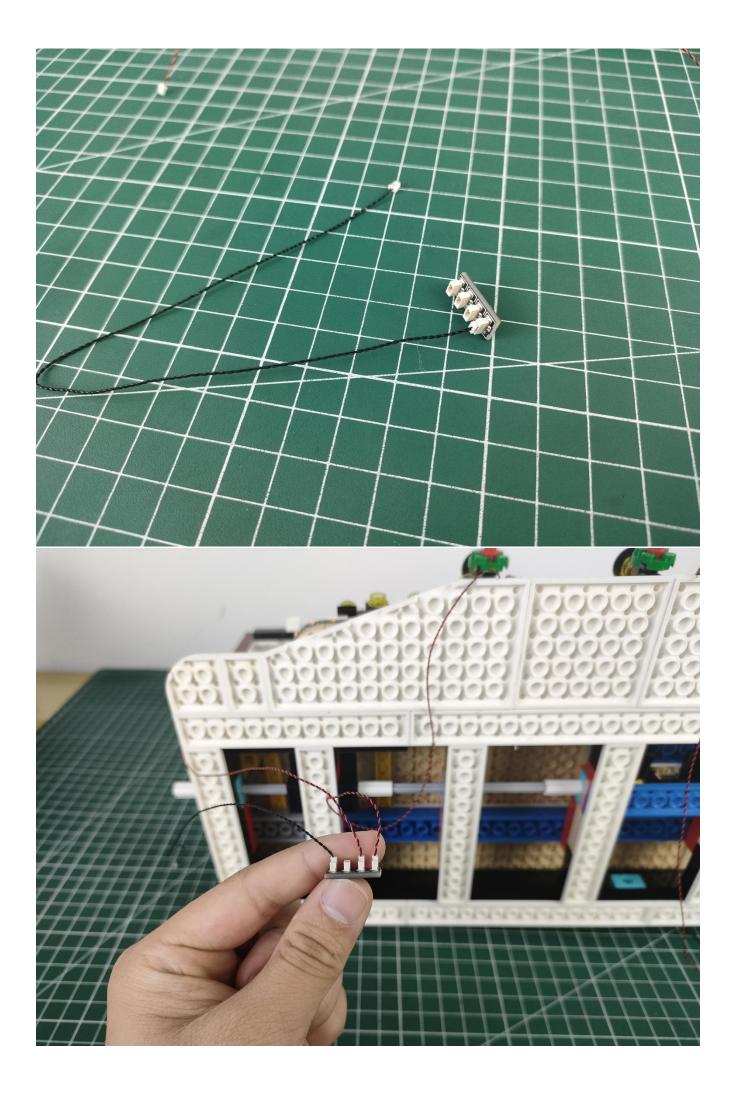


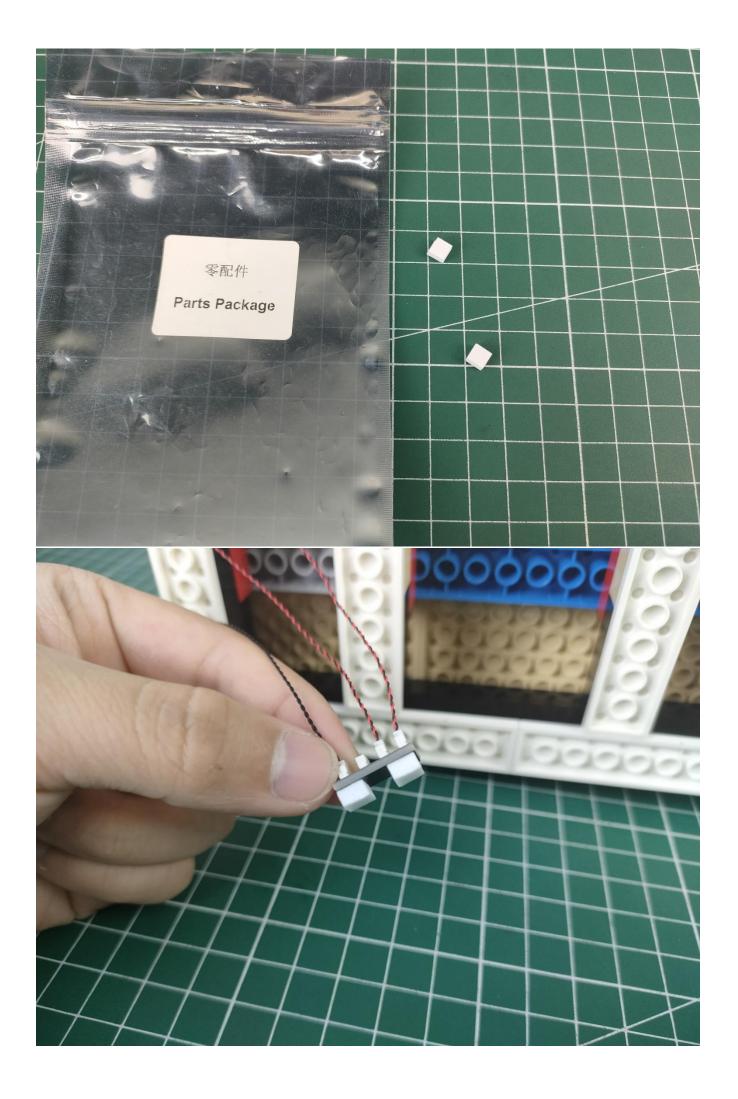





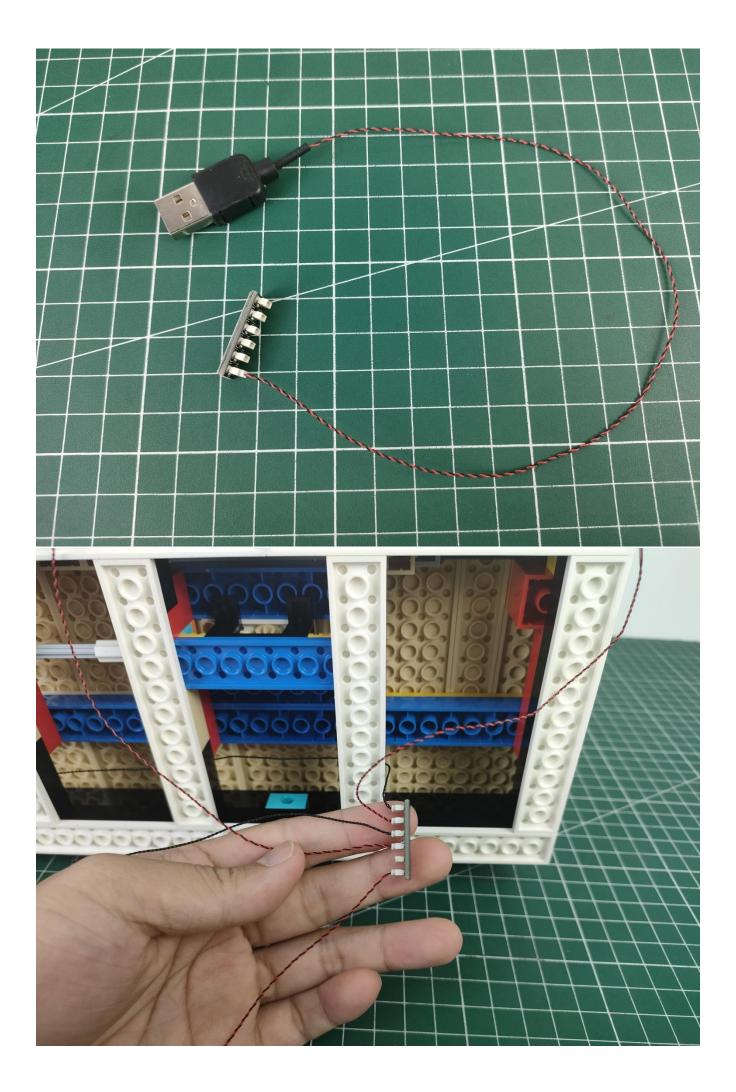





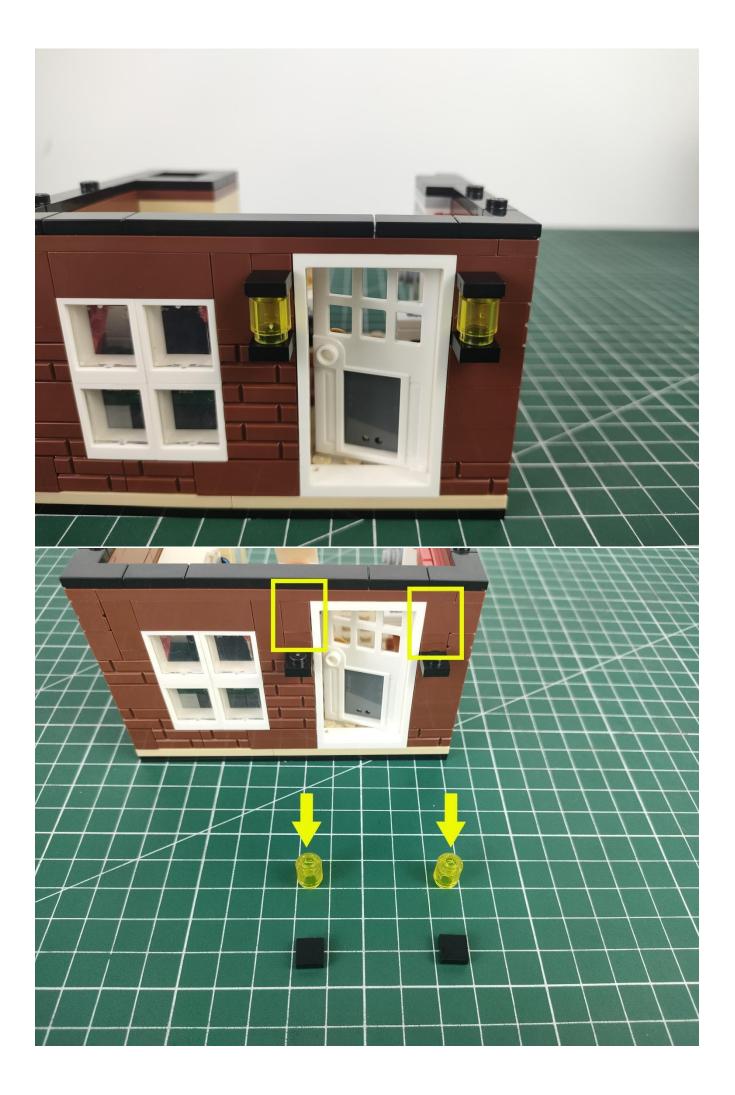

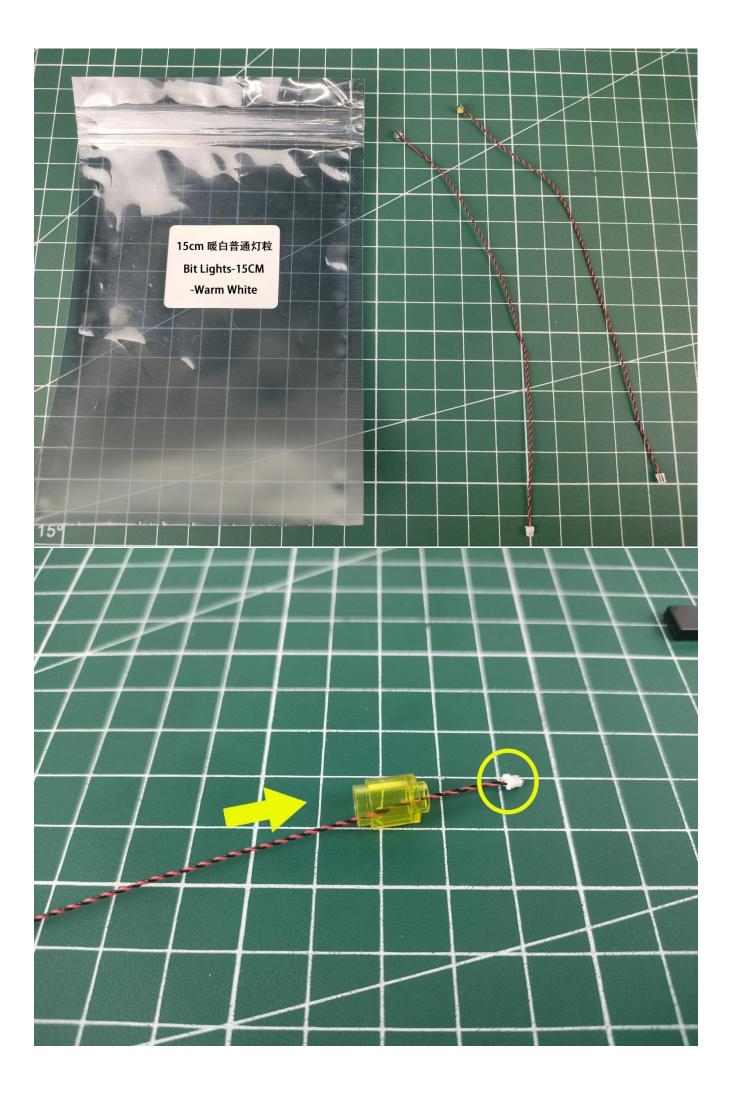


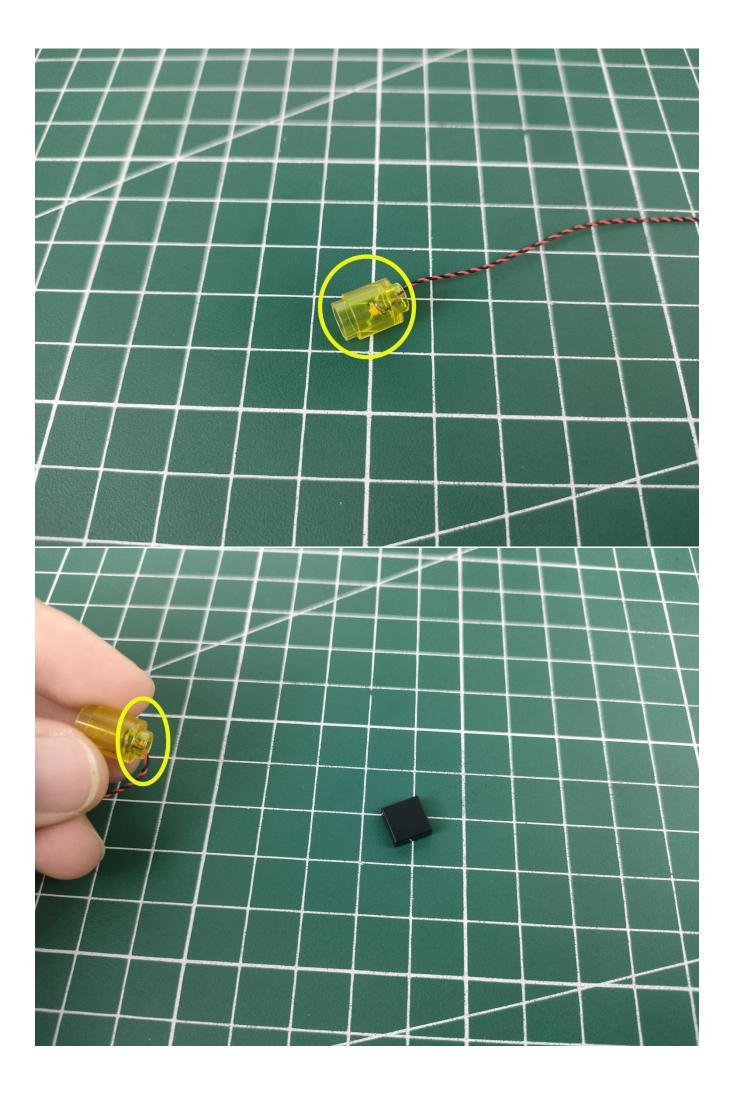


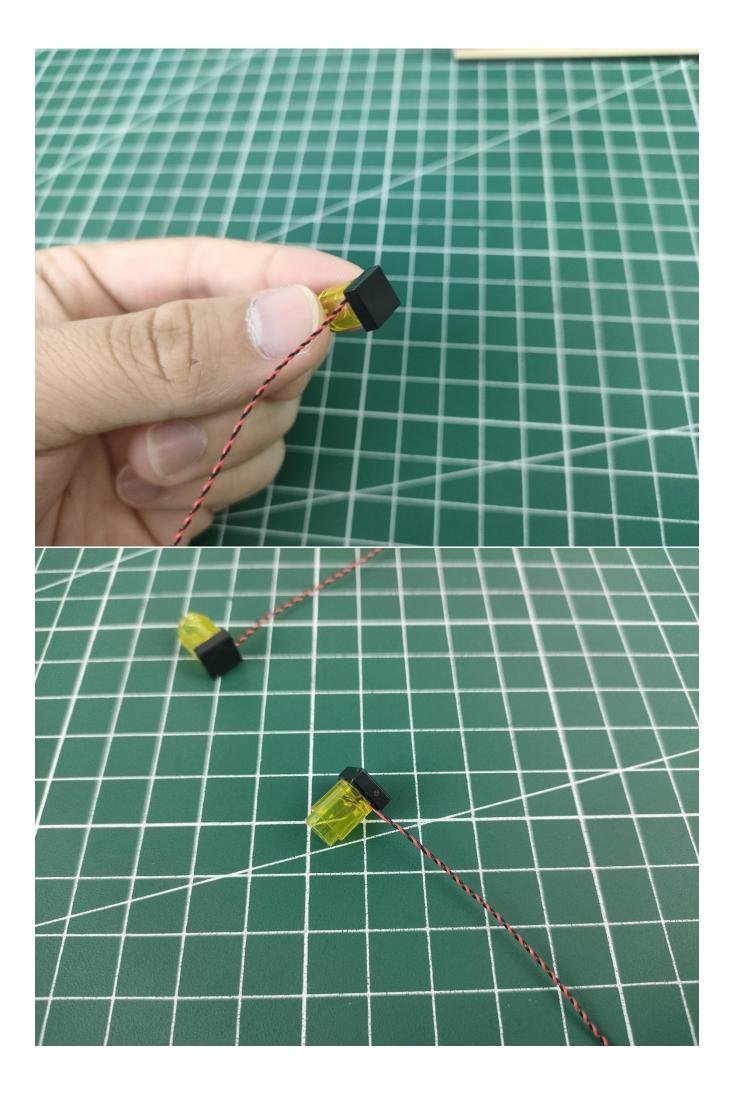


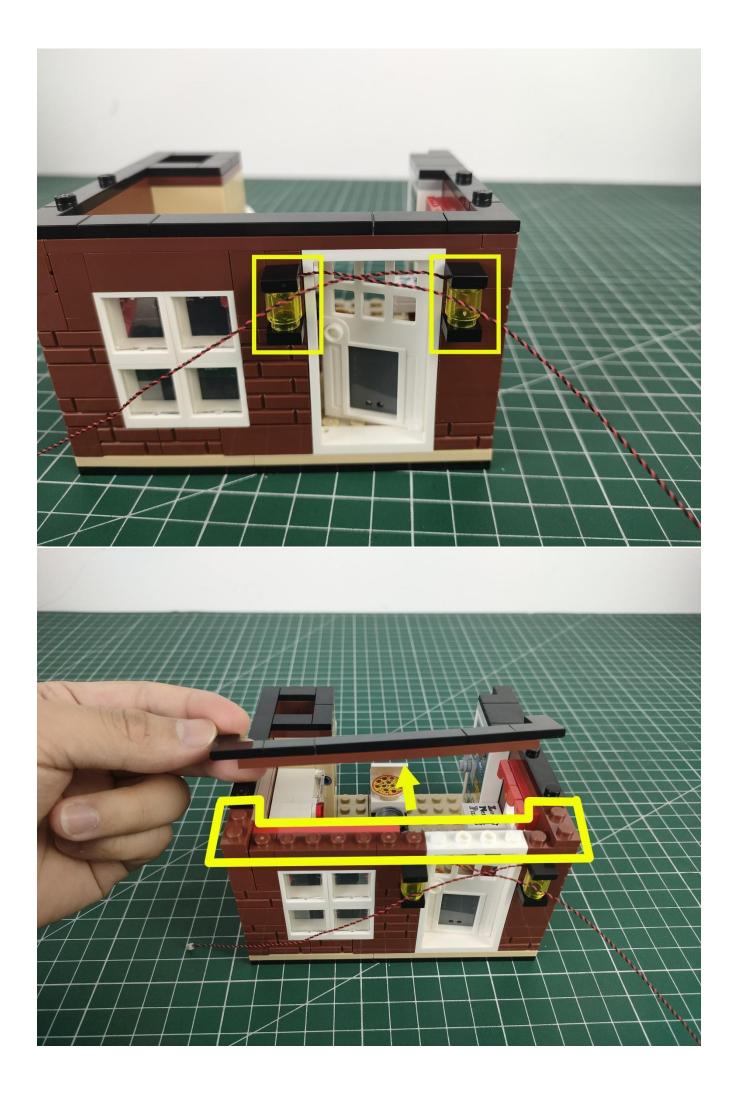




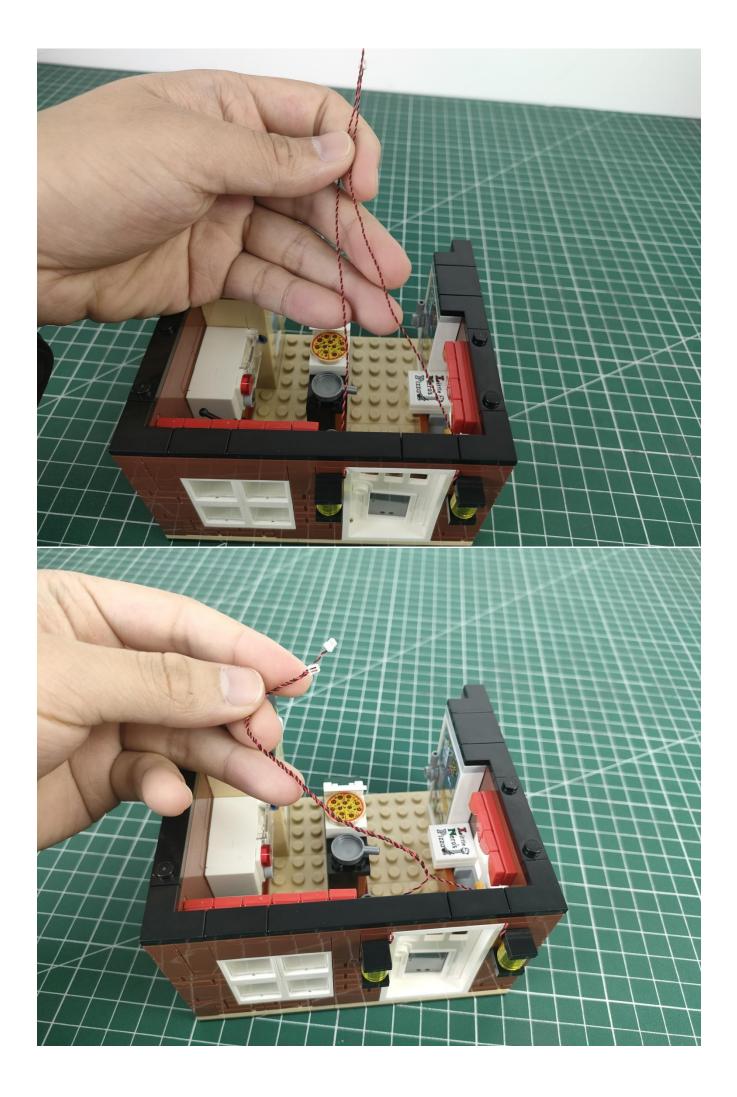

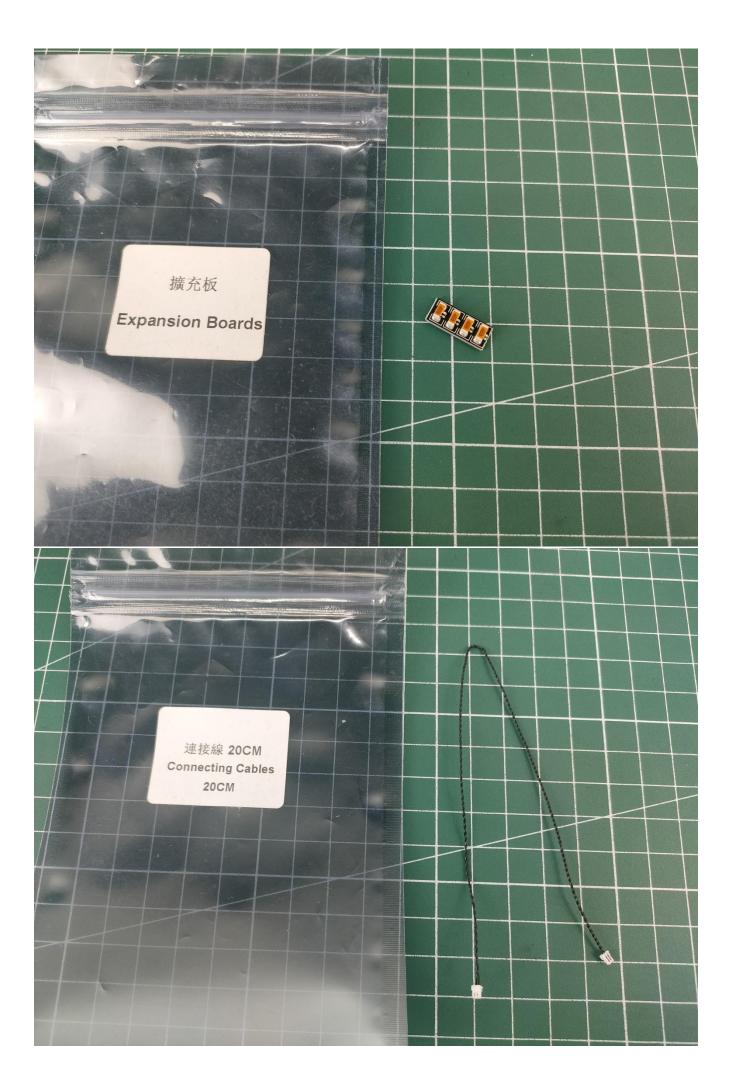


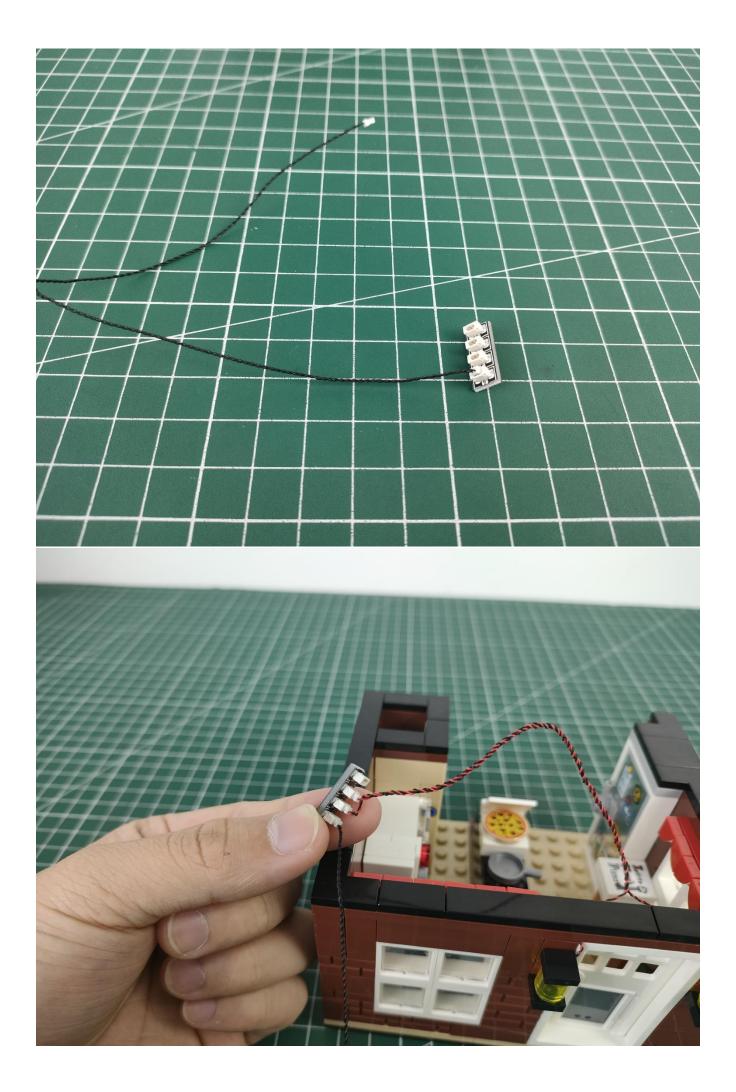





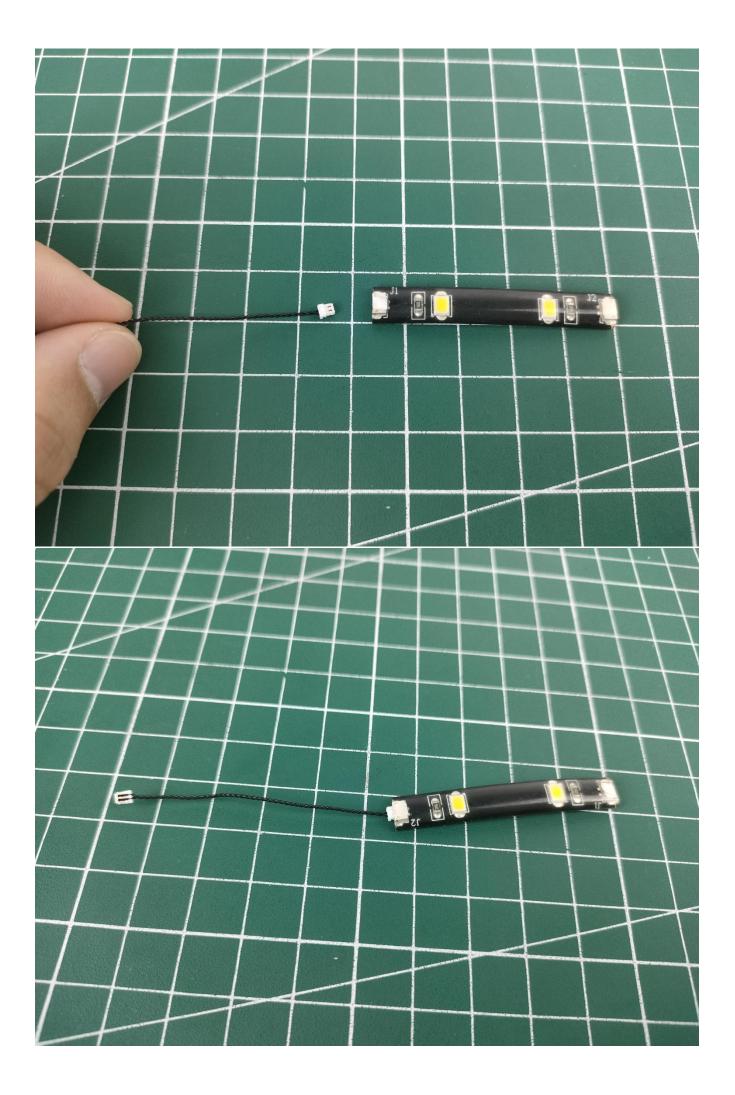



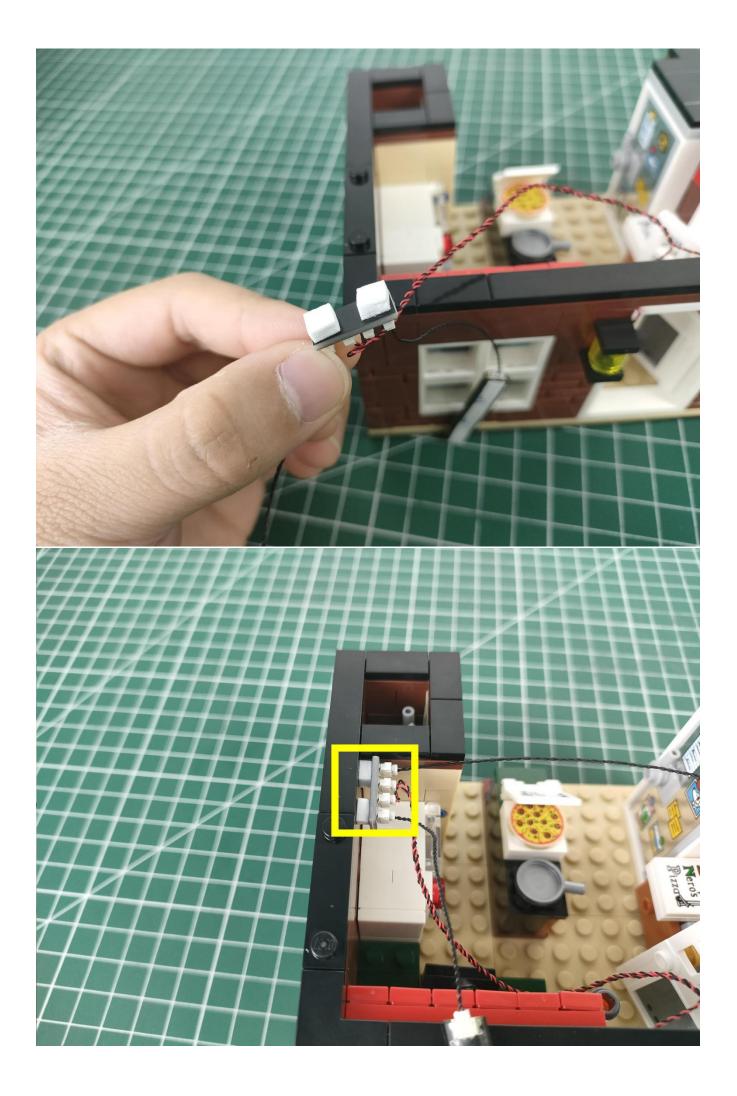


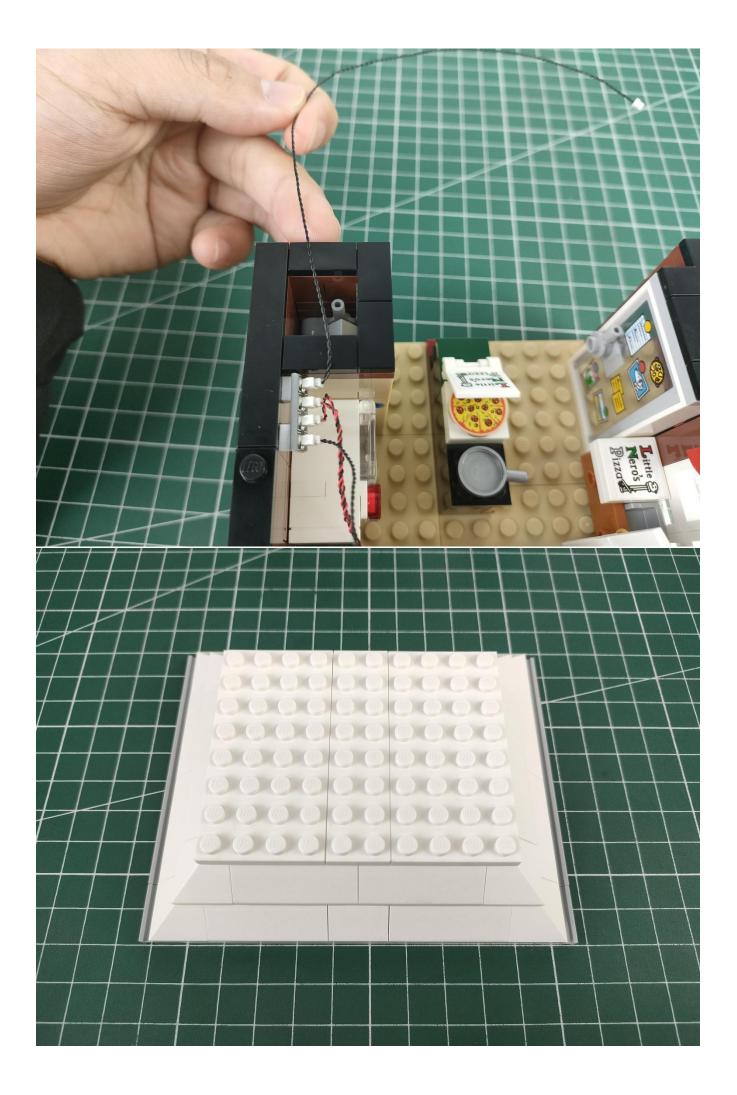


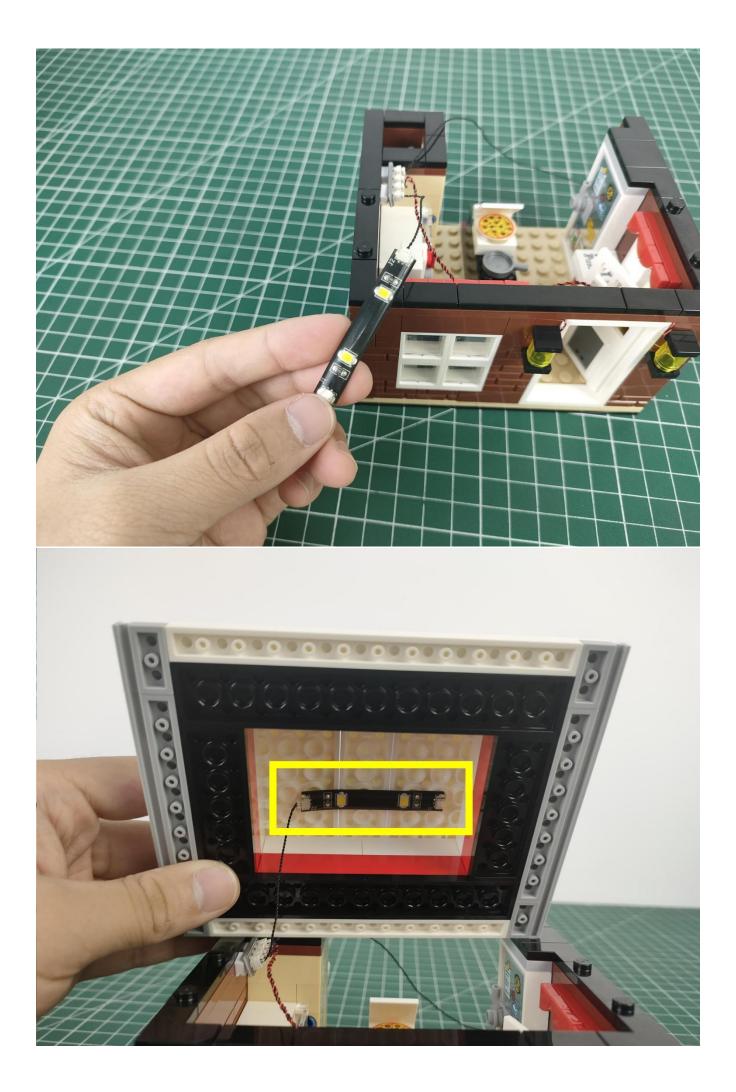





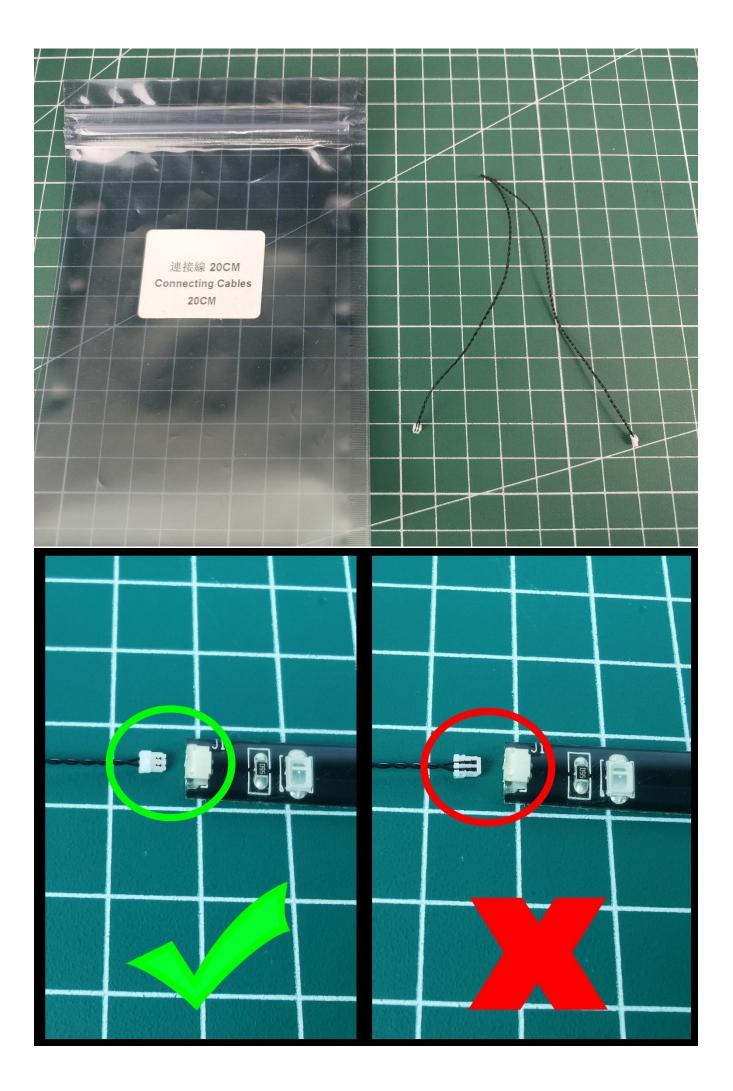


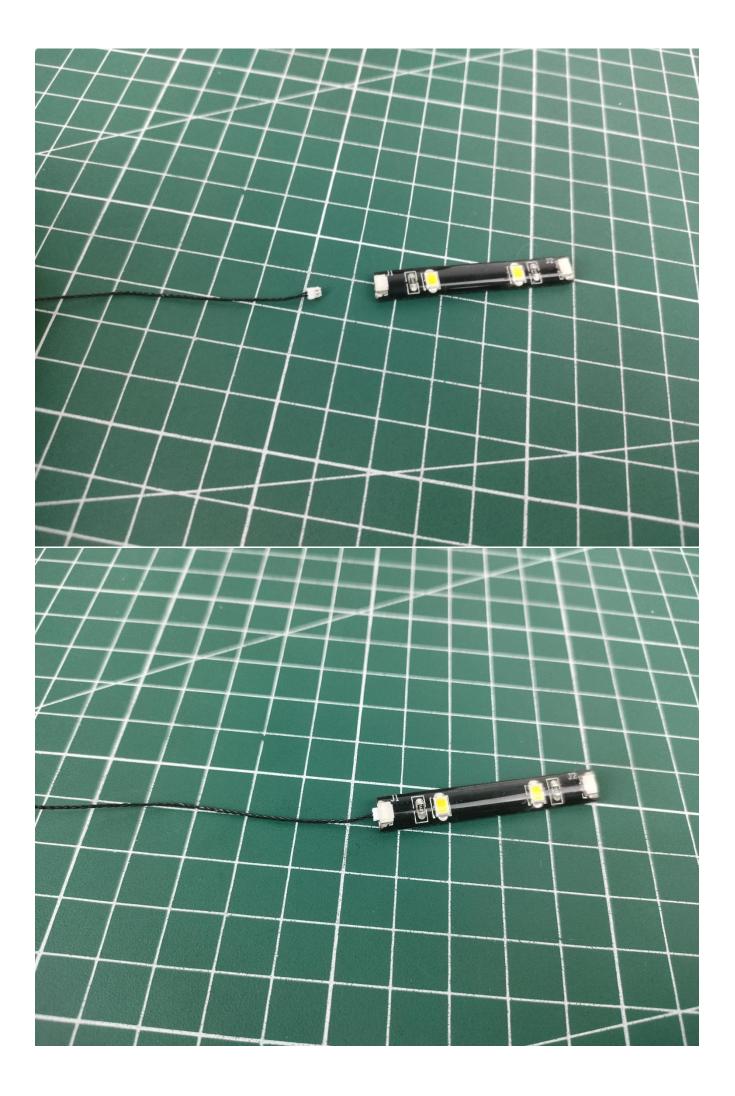








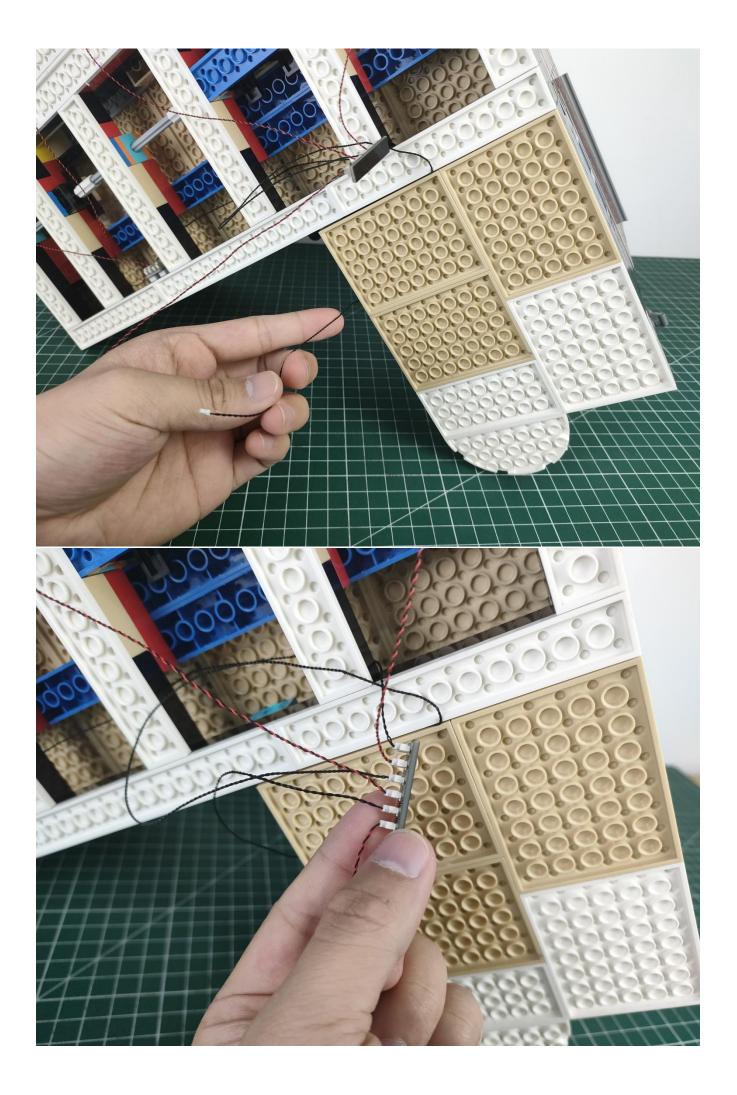

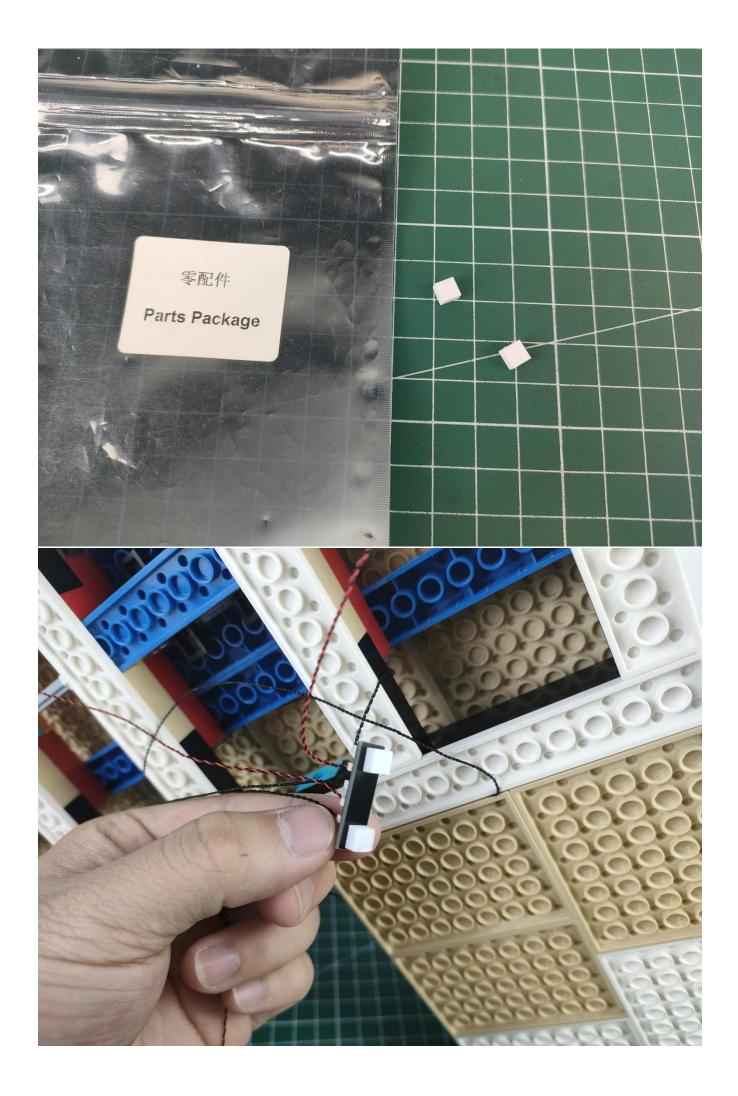







## The installation is complete.



The above are ideas and instructions provided by our designers. Please move on:

1: Do you have any suggestions about the material and quality of our products?

2: Do you have any suggestions on the installation instructions and the degree of difficulty of the installation?

3: If you have better installation method and ideas, please contact us in time.