#### 21188 The Llama Village P37602

- P37602 is the unique code of lighting set, we use this to accurately identify the product you purchased and the corresponding manuals and services you need to obtain. Please make sure your product code is the same as the label on the back of the box shown "21188 P37602".
- Installation requires a lot of patience and great observation that your LEGO bricks will come alive when you get this finished. The bricks with lighting as below, so make sure you're ready and let's get started.



#### Strategies for the Installation

This instruction divides three sections to complete the installation of the lighting set.

**Section A:** Check the type and quantity of components.

The quantity and type of components of each products are different and it needs to be carefully checked to make sure there do have enough material.

The type of components is indicated by the label on the bag.

**Section B:** Test that each components is working properly.

Each components is made individually so it is necessary to test that each components is working properly to avoid the situation that the lighting does not work.

Section C: laying out components following the instruction.

Our material is very small but not fragile, just be reminded that don't to pull the wires too hard. For different people, there may be some installation steps that you can't understand. Please look at the previous and later installation step

The PDF installation instructions are of great significance to the installation. If the content of the files cannot be understood, please return to our website to select the video instructions. Also if the video manual cannot be understood, please switch to the PDF manual.

**Section A:** Check the type and quantity of components.

There are 14 bags in this set. The name and quantities of specific components are as shown, please check carefully.

Label	Content	Quantity
Light-30CM Warm White	Light-30CM Warm White	2
High-Brightness Light 30CM-Warm White	High-Brightness Light 30CM-Warm White	4
LED Strip Green	LED Strip Green	1
LED Strip Blue	LED Strip Blue	1
LED Strip Warm White	LED Strip Warm White	2
Expansion Board	12 Socket Expansion Board	1
AAA Battery Case	AAA Battery Case	1
USB Power Cable	USB Power Cable	1
Connecting Cable 10CM	Connecting Cable 10CM	4
Connecting Cable 20CM	Connecting Cable 20CM	1
Sound Control Module	Sound Control Module	1
High-Brightness Light 15CM-White	High-Brightness Light 15CM-White	1
High-Brightness Light 30CM-White	High-Brightness Light 30CM-White	1
-	Components	'

Please contact us immediately if there have any missing components.


#### Section B: Test that each components is working properly.

We need a structure to test all lights, so take out the bag with label "USB Power Cord" and "Expansion Boards" as follows.





It is worth reminding that our products are all customized. They have a unique way of connecting. The white plug on wire and the socket of the expansion board need to be connected together to transmit power.

Note that on one side of the white plug you can see two very small golden wires that should be connected to the two golden needles in socket of the expansion board.shown as blow.

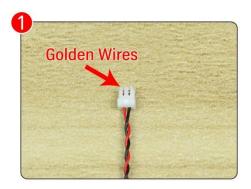




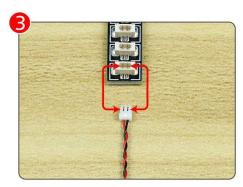

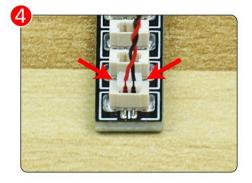


All our connections between plug and socket are all the same as shown above. So for any such structure with plug and socket, please pay attention to the golden wire of the plug and the golden needle of the socket, they must be touched together.

The connection method between the USB Power Cord and Expansion Boards is as follows:

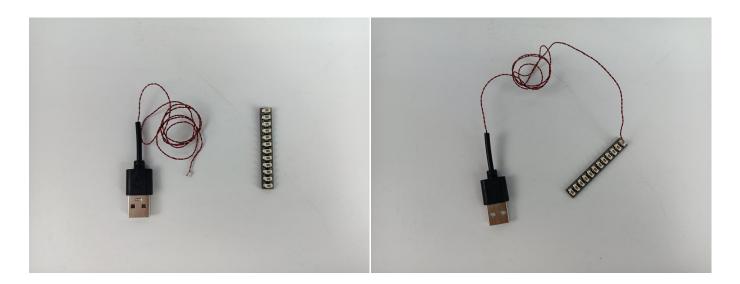


The USB Power Cord can be powered by phone chargers, power banks,etc.

#### USB connectors to connect devices

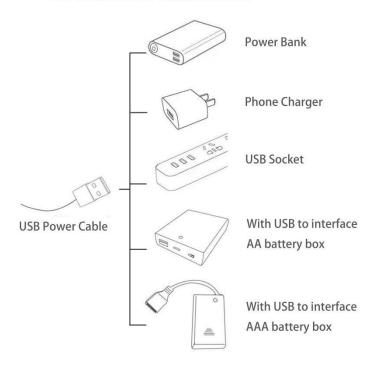


This instruction will use the power bank as power supply. The test structure is shown as follow. All lamp in this set will be tested by this structure.

The battery box can also power the set. If it is necessary to change the power supply, prepare three AAA batteries, install them in the battery box, turn on the switch on the battery box, remove the plug of the USB Power Cable from the socket of the expansion board, plug the plug of the battery box to the same socket in the expansion board to power the suit as well.

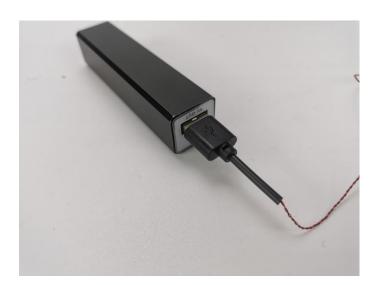

when we test "High-Brightness Light 30CM-White" particles, Take out the bag labelled "High-Brightness Light 30CM-White". Take out one of the light and connect it to the socket. Turn on the power bank, the light will turn on normally as shown below.

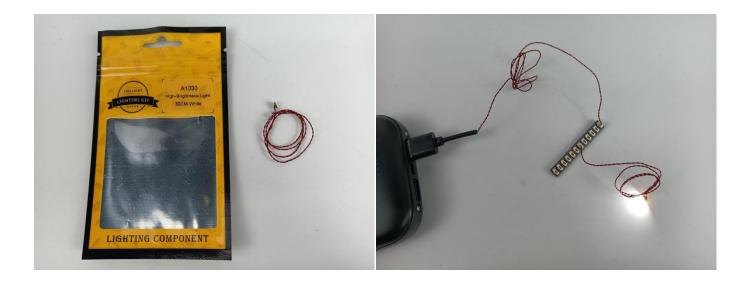

Test each lamp according to this method. It should be noted that after the test, the lamp must be returned to the corresponding bag to avoid confusion of types.



The components needs to be tested in this set is 1\*High-Brightness Light 15CM-White,2\*LED Strip Warm White,1\*LED Strip Blue,1\*LED Strip Green,4\*High-Brightness Light 30CM-Warm White,2\*Light-30CM Warm White.

Please contact us immediately if any components don't work.


#### Section C: laying out components following the instruction.












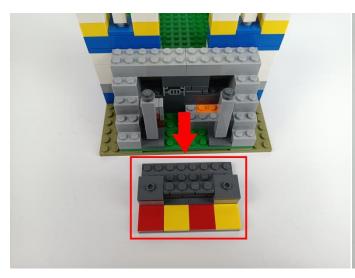

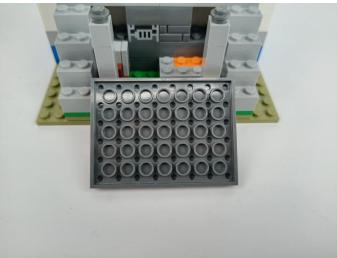





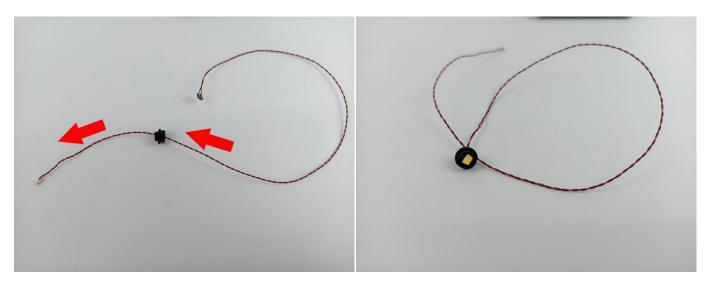

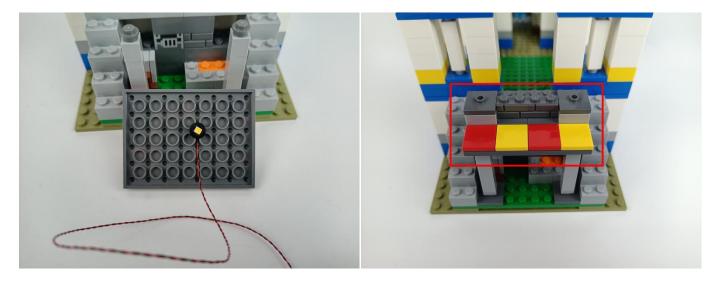




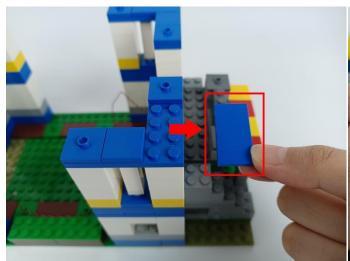

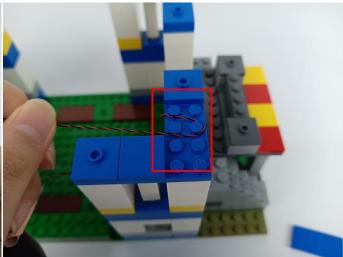





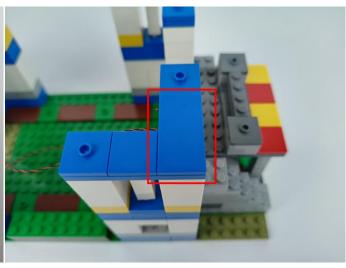





## 

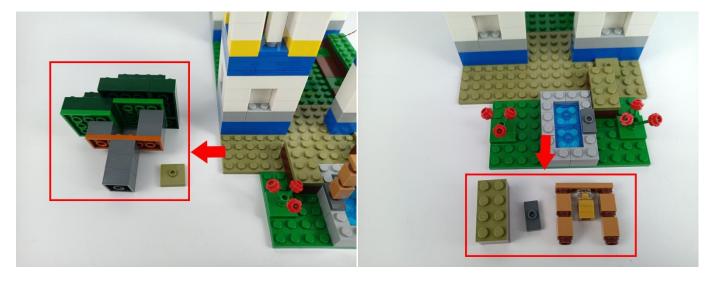


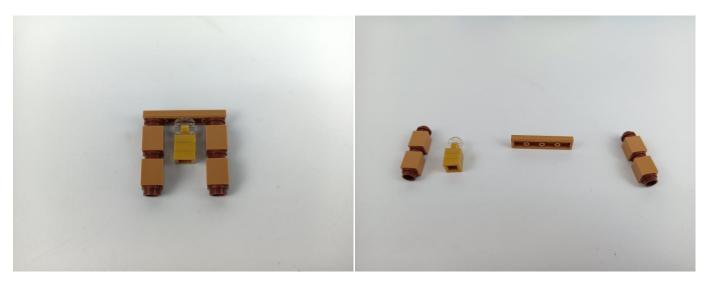


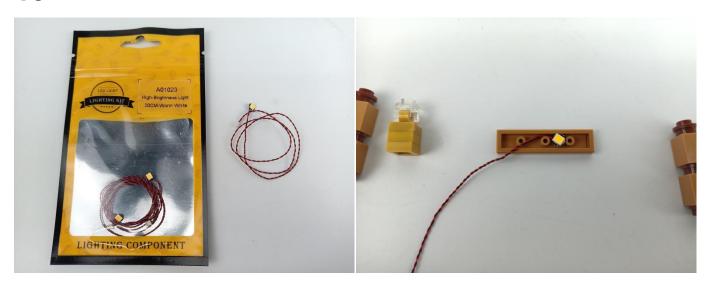


# 

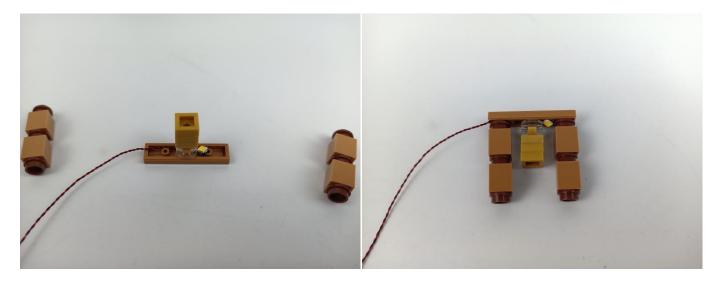


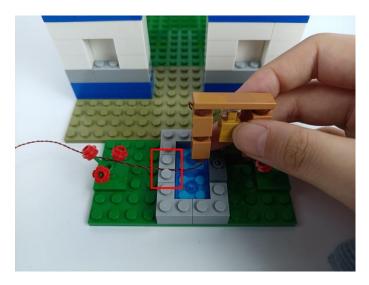


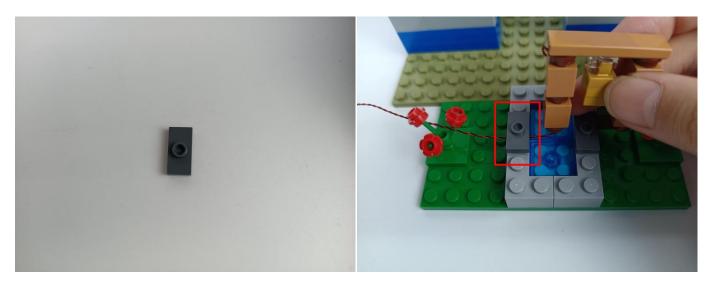

#### 

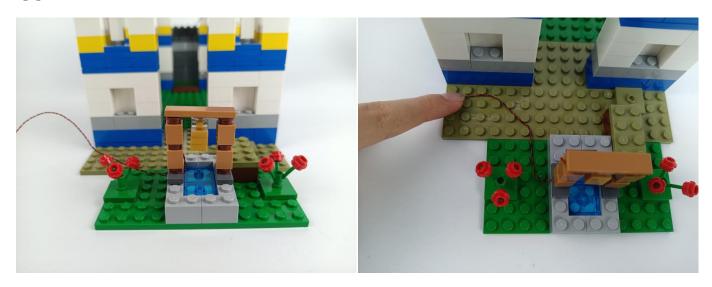

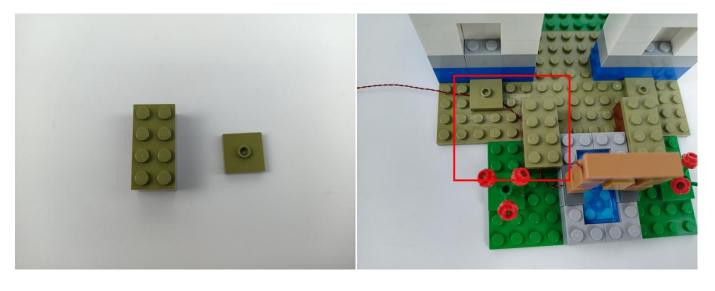

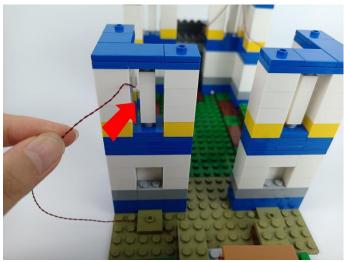












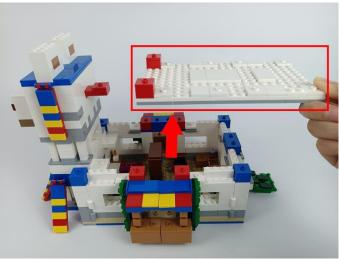


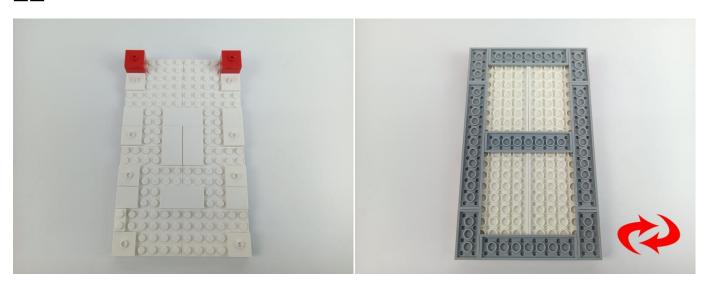


#### 




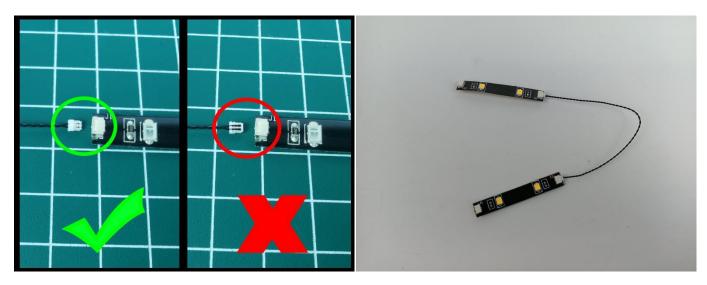

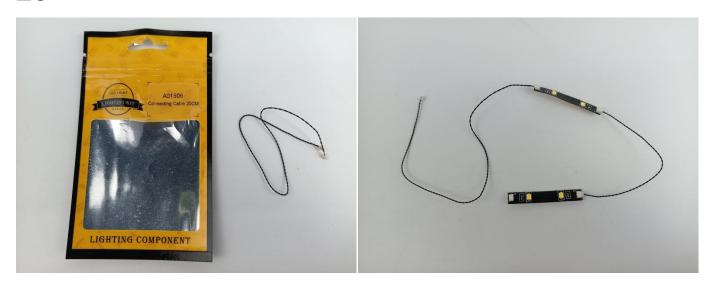


#### 

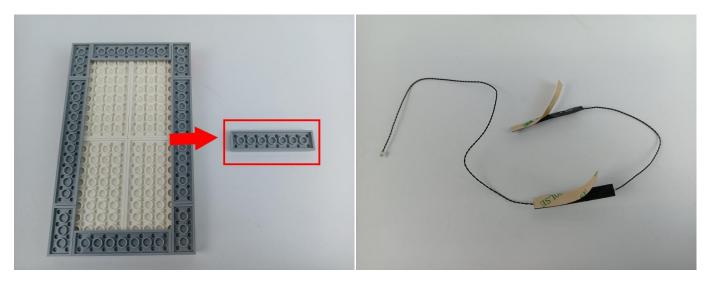

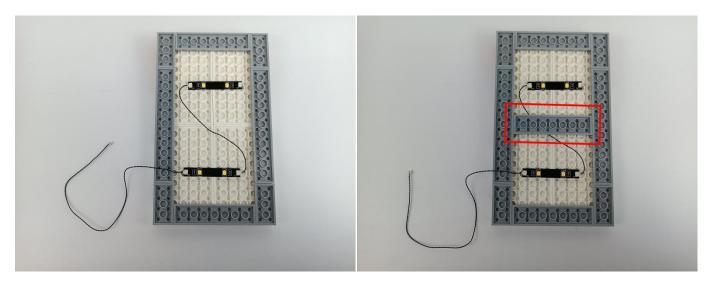





## 

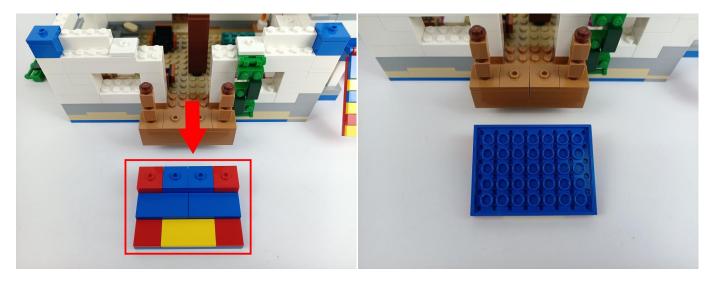





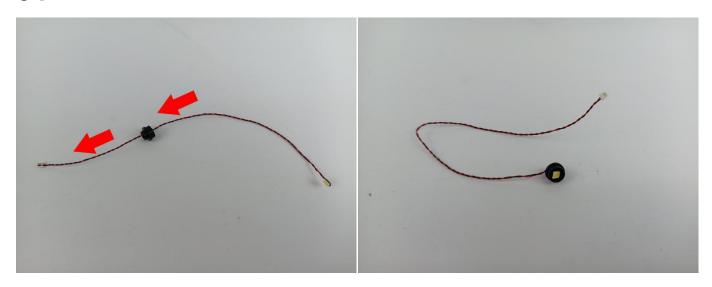


#### 

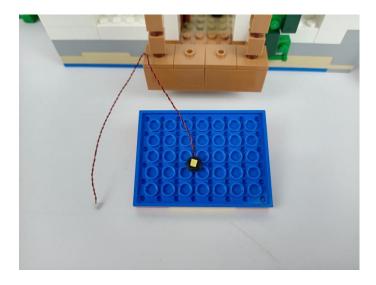


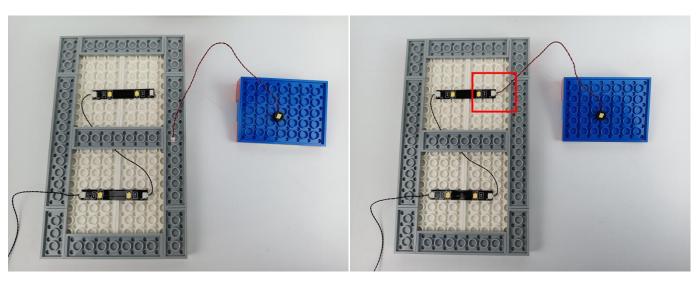


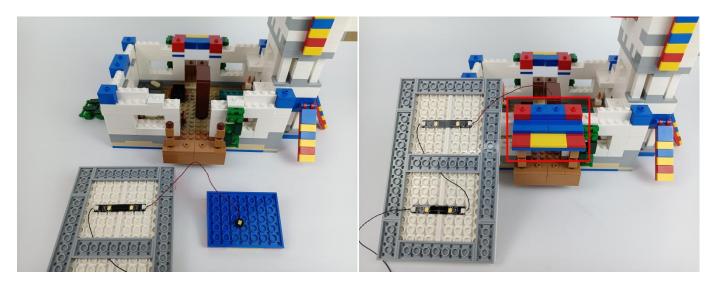



# 

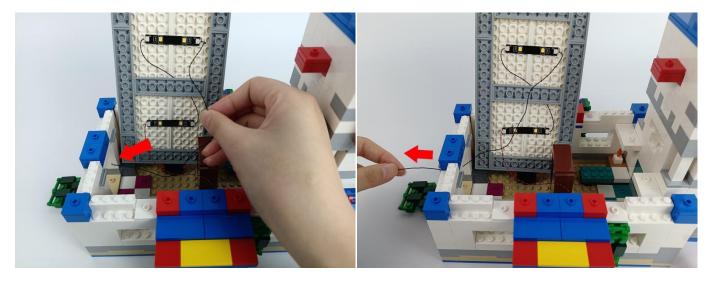

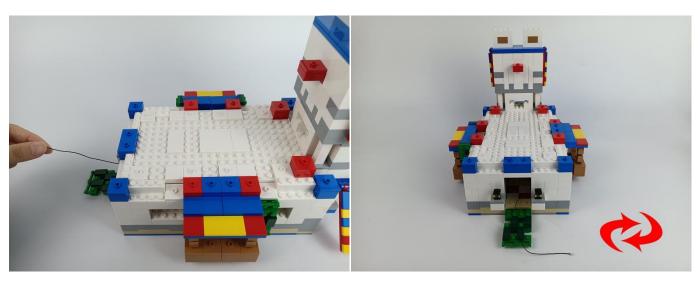

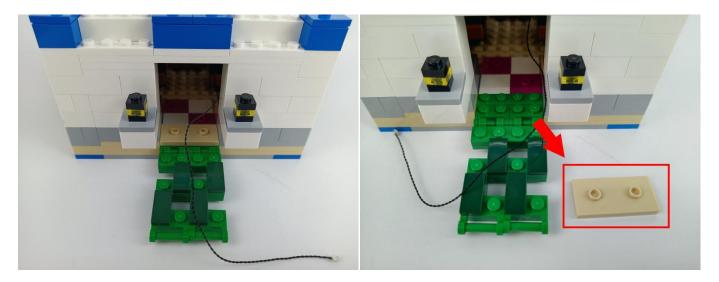


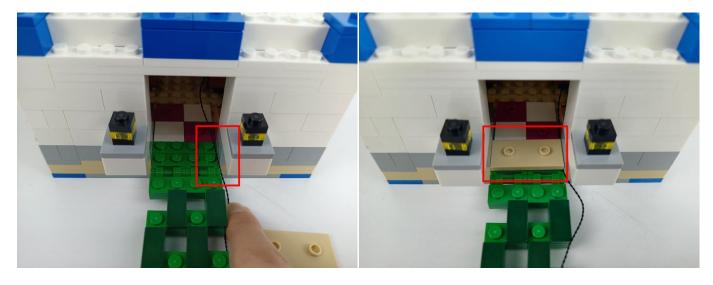

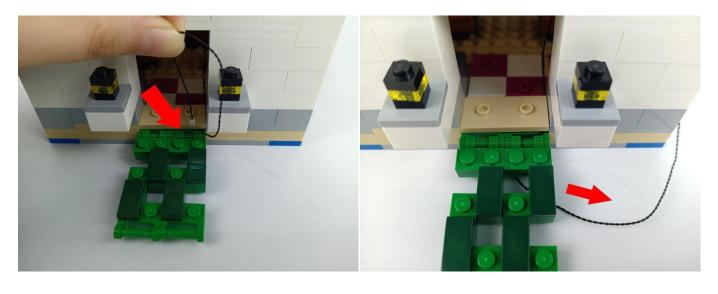





# 

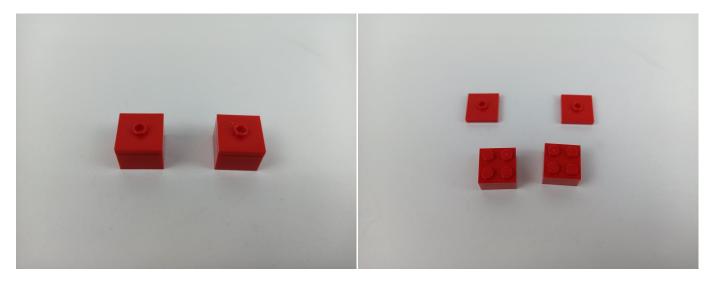





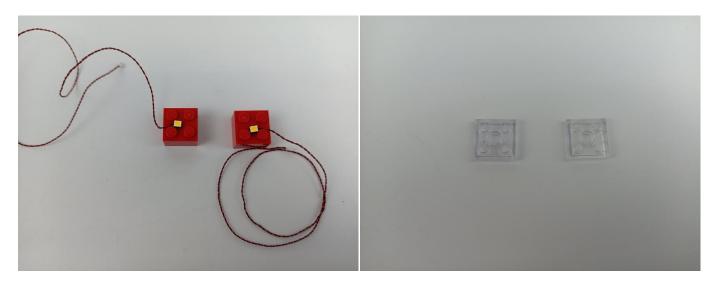



## 

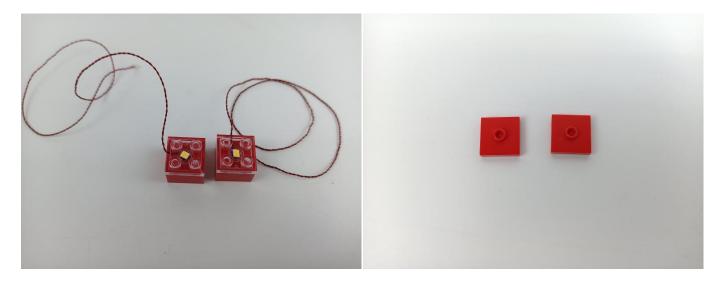

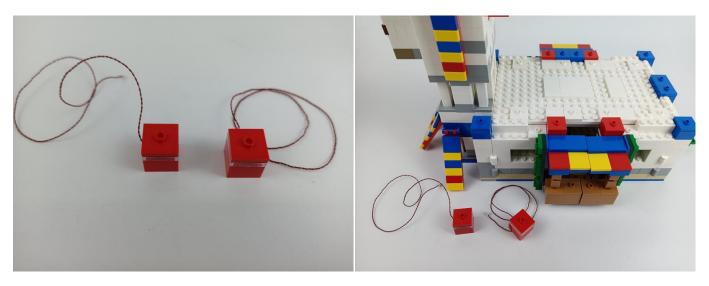

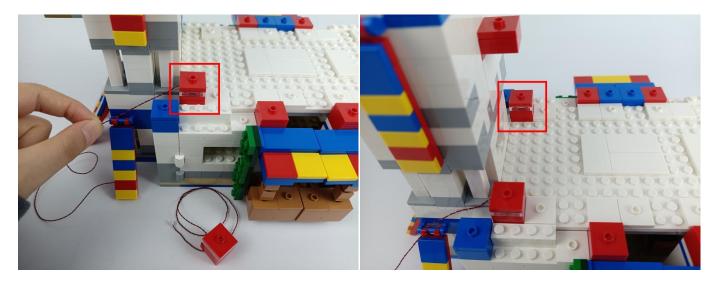

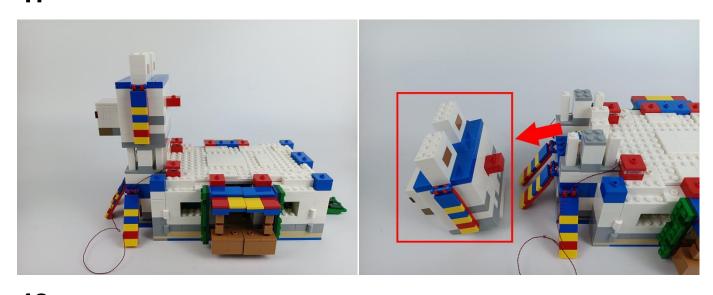

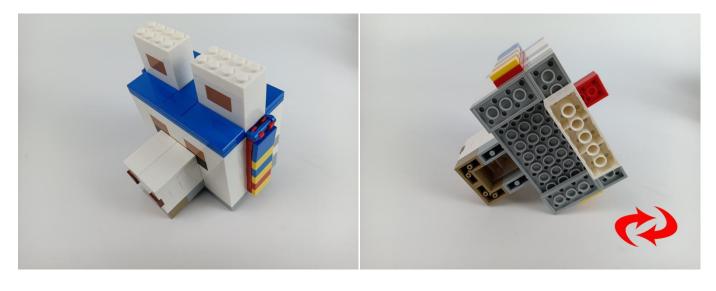








# 






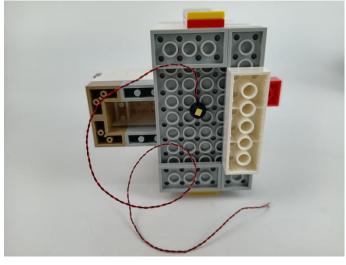


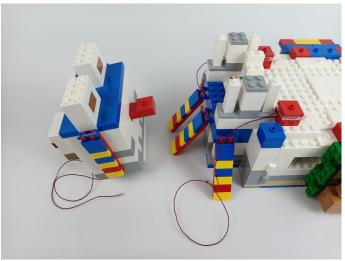

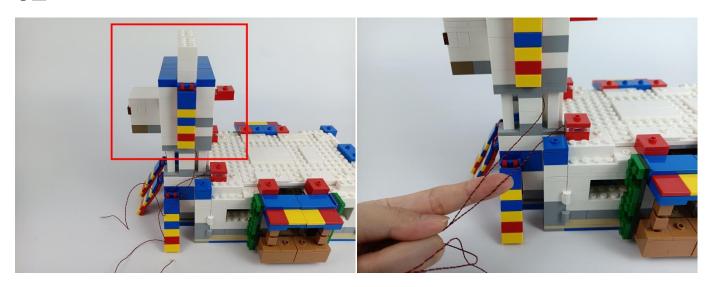

# 

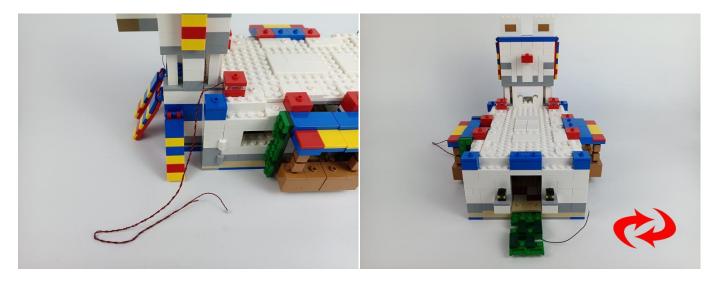


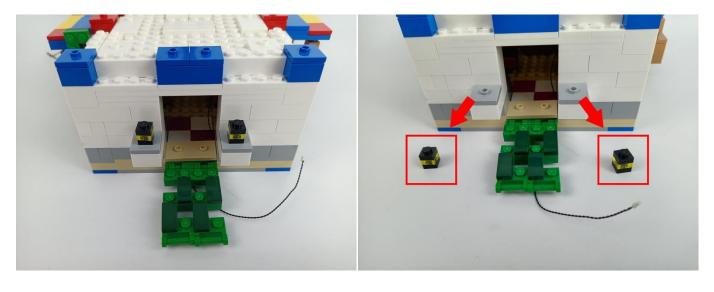






## 




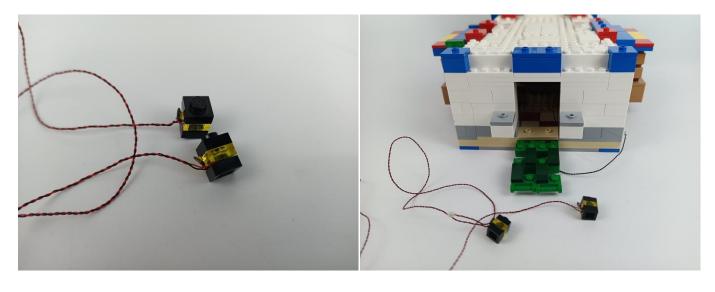


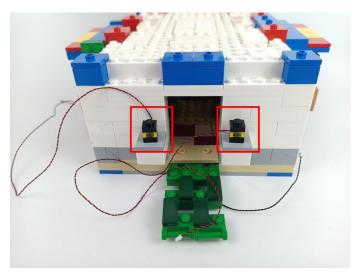


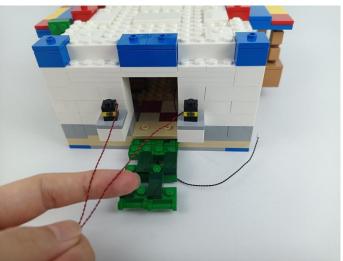

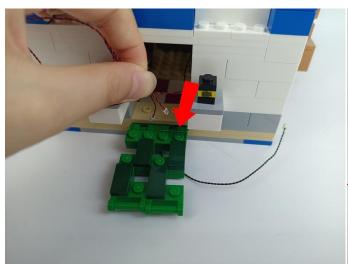


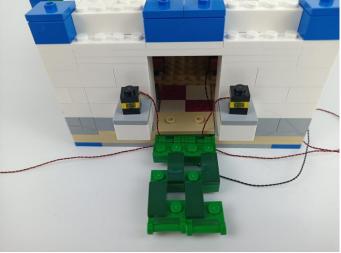

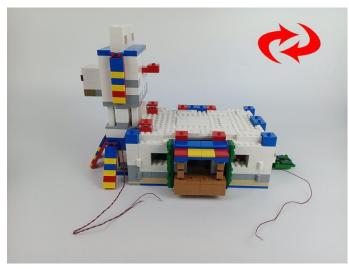

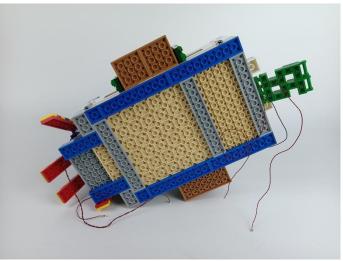




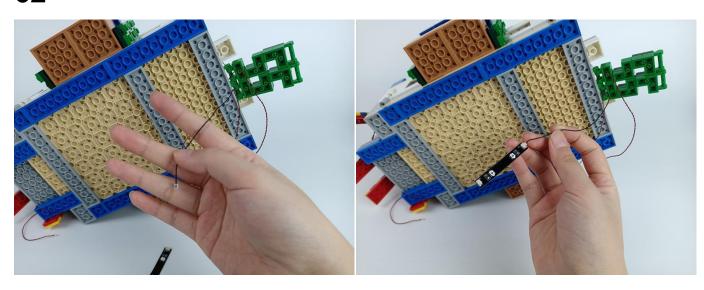









## 

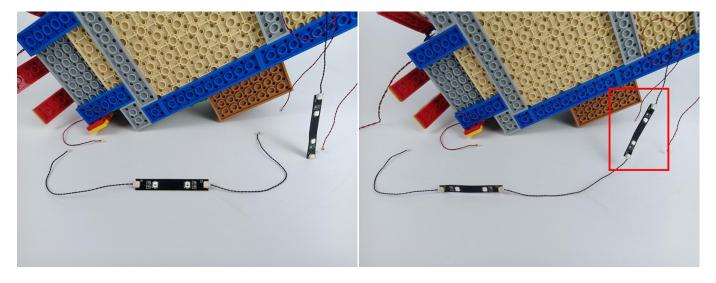


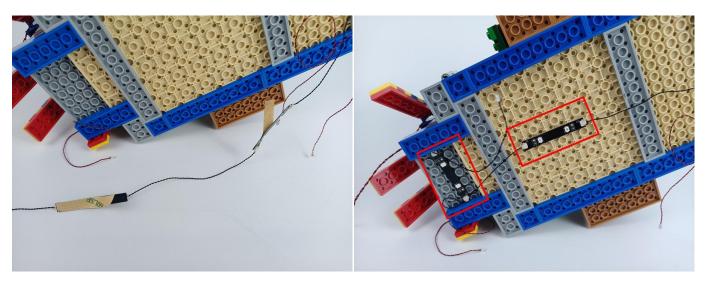

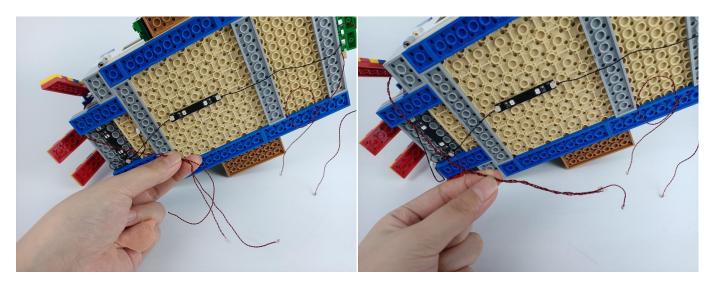

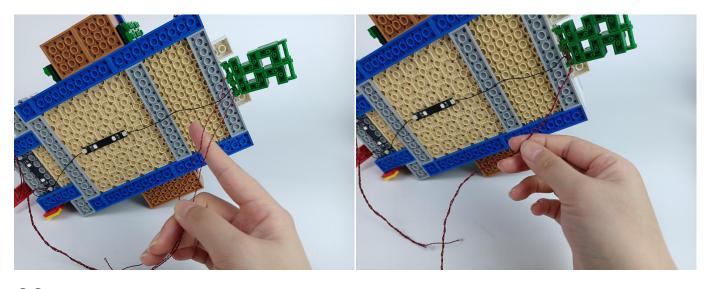

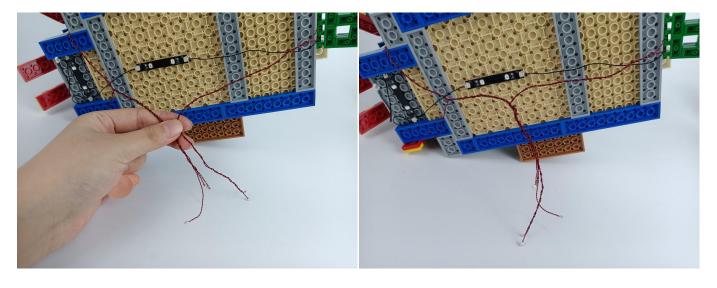

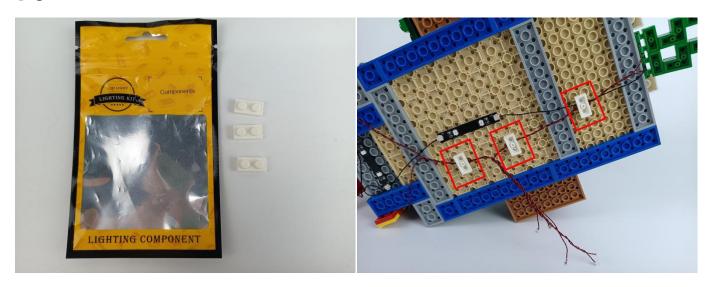



# 













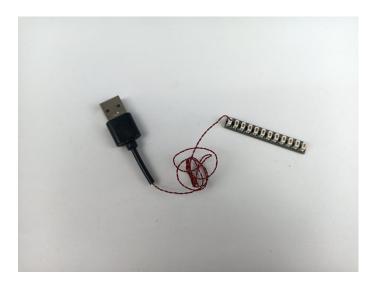

#### 



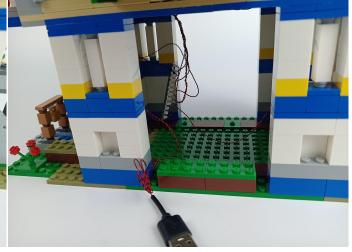





#### **Sound Control Module**


Module sensitive regulator receiving sound

Module sensitivity adjuster. There are three gears,1,2,and 3.The received decibels are 25dB,50dB,90dB.


In a noisy environment, using the 1st gear, the lights will always be on and off.At this time, you need to increase the gear to 2 or 3 gears to work normally. In a quiet environment, Gear 3 will be difficult to trigger. It is recommended to use gear 1 or 2.

Please replace the battery box with a power bank as the power supply if the light does not work properly after a period of time. The module consumes a lot of power and the battery with

normal capacity can only be used for three days or even less, the module is still working even if the light is off, so Please turnoff the switch on the battery compartment if the light is no longer needed.

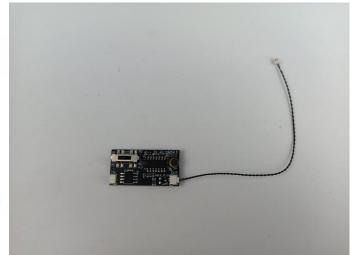



#### **77**

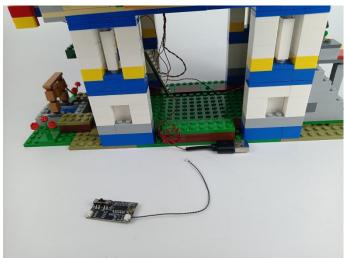







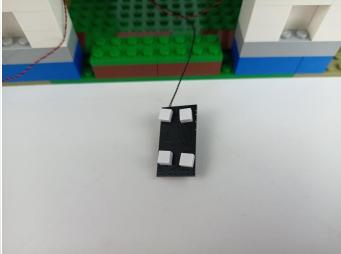

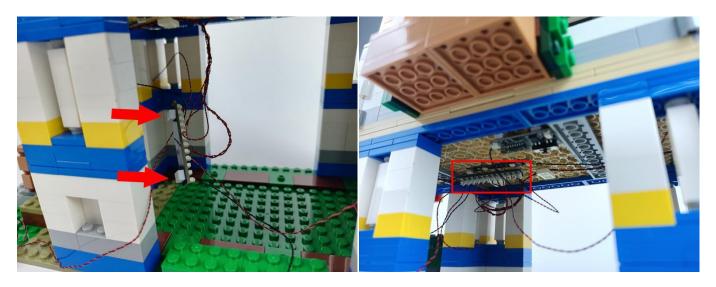

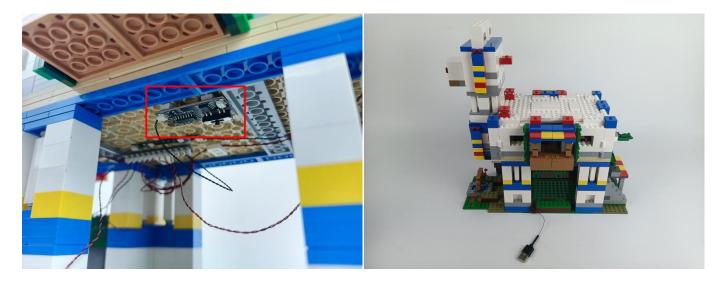

Good job, you've done all the installation steps, power it up and enjoy your work.

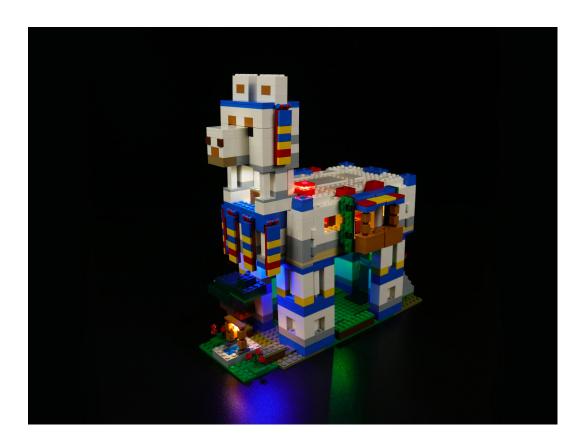

The battery box can also power the set. If it is necessary to change the power supply, prepare three AAA batteries, install them in the battery box, turn on the switch on the battery box, remove the plug of the USB Power Cable from the socket of the expansion board, plug the plug of the battery box to the same socket in the expansion board to power the suit as well.

#### **THANKS**