21338 A-Frame Cabin P44802

- P44802 is the unique code of lighting set, we use this to accurately identify the product you purchased and the corresponding manuals and services you need to obtain. Please make sure your product code is the same as the label on the back of the box shown "21338 P44802".
- Installation requires a lot of patience and great observation that your LEGO bricks will come alive when you get this finished. The bricks with lighting as below, so make sure you're ready and let's get started.



Strategies for the Installation

This instruction divides three sections to complete the installation of the lighting set.

Section A: Check the type and quantity of components.

The quantity and type of components of each products are different and it needs to be carefully checked to make sure there do have enough material. The type of components is indicated by the label on the bag.

Section B: Test that each components is working properly.

Each components is made individually so it is necessary to test that each components is working properly to avoid the situation that the lighting does not work .

Section C: laying out components following the instruction.

Our material is very small but not fragile, just be reminded that don't to pull the wires too hard. For different people, there may be some installation steps that you can't understand. Please look at the previous and later installation step.

Section A: Check the type and quantity of components.

There are 15 bags in this set. The name and quantities of specific components are as shown , please check carefully.

Label	Content	Quantity
A01001 Light-15CM Warm White	Light-15CM Warm White	3
A01024 High-Brightness light 15CM-Warm White	High-Brightness light 15CM-Warm White	3
A01105 LED Strip Warm White	LED Strip Warm White	3
A012 Expansion Board	6 Socket Expansion Board	1
	4 Socket Expansion Board	2
A01305 Power Supply	Power Supply	1
A01503 Connecting Cable 30CM	Connecting Cable 30CM	1
A01505 Connecting Cable 10CM	Connecting Cable 10CM	2
A01506 Connecting Cable 20CM	Connecting Cable 20CM	3
A02526 Light Strip-Warm White	Light Strip-Warm White	1
A02508 Light Strip-Red	Light Strip-Red	1
A02509 Light Strip-Green	Light Strip-Green	1
A02526 Light Strip-Warm White	Light Strip-Warm White	1
A03801 Remote Control	Remote Control	1
A1037 High-Brightness Light 15CM-Cyan	High-Brightness Light 15CM-Cyan	1

Please contact us immediately if there have any missing components.


Section B: Test that each components is working properly.

We need a structure to test all lights, so take out the bag with label "USB Power Cord" and "Expansion Boards" as follows.




It is worth reminding that our products are all customized. They have a unique way of connecting. The white plug on wire and the socket of the expansion board need to be connected together to transmit power.

Note that on one side of the white plug you can see two very small golden wires that should be connected to the two golden needles in socket of the expansion board.shown as blow.

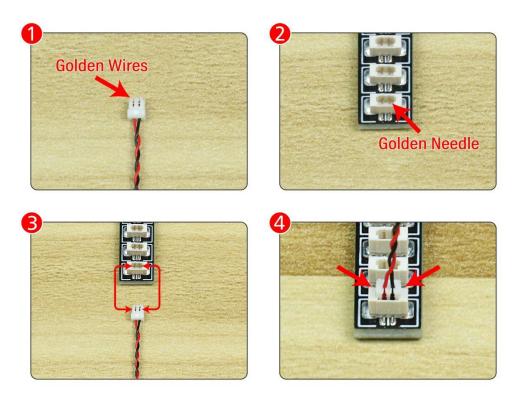


All our connections between plug and socket are all the same as shown above. So for any such structure with plug and socket, please pay attention to the golden wire of the plug and the golden needle of the socket, they must be touched together.

The connection method between the USB Power Cord and Expansion Boards is as follows:

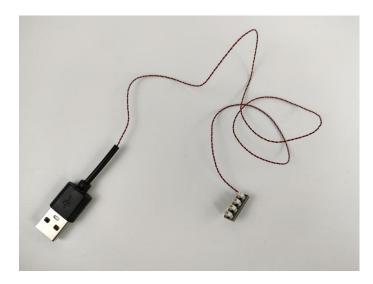

The USB Power Cord can be powered by phone chargers, power banks,etc.

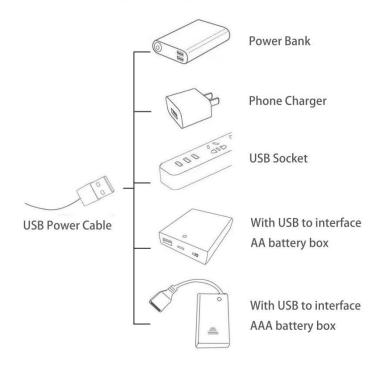

USB connectors to connect devices

This instruction will use the power bank as power supply . The test structure is shown as follow. All lamp in this set will be tested by this structure.



When we test "A02526 Light Strip-Warm White" particles, Take out the bag labelled "A02526 Light Strip-Warm White". Take out one of the light and connect it to the socket. Turn on the power bank, the light will turn on normally as shown below.



Test each lamp according to this method. It should be noted that after the test, the lamp must be returned to the corresponding bag to avoid confusion of types.



The components needs to be tested in this set is 3*Light-15CM Warm White,3*High-Brightness light 15CM-Warm White,3*LED Strip Warm White,1*High-Brightness Light 15CM-Cyan,1*Light Strip-Warm White,1*Light Strip-Red,1*Light Strip-Green.


Please contact us immediately if any components don't work.

Section C: laying out components following the instruction.






3

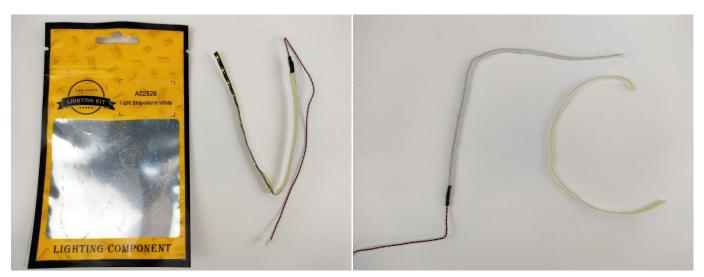



<image>

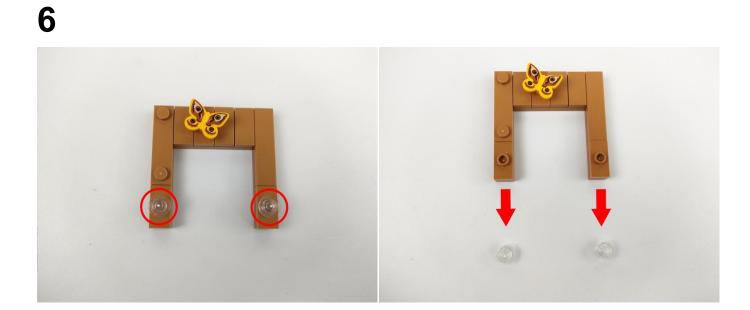






Tips

The plate without slit:






The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormalheat during installation.

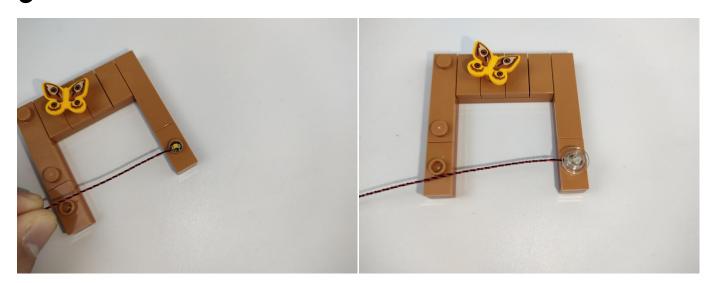



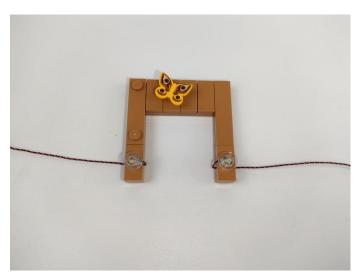
















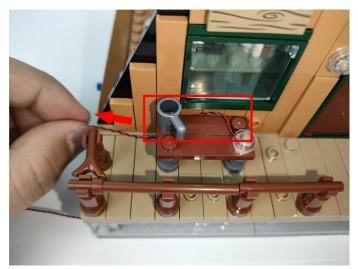












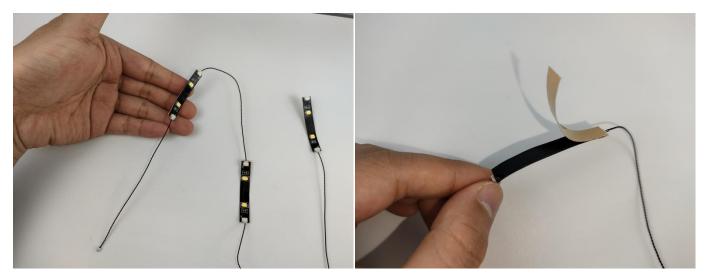

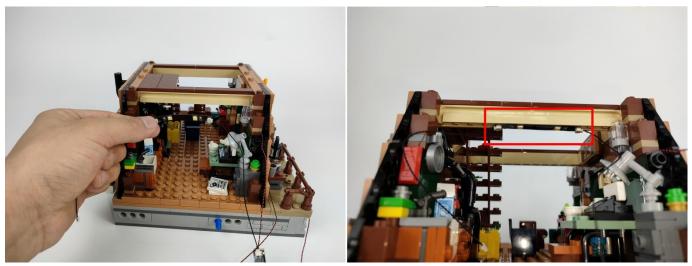


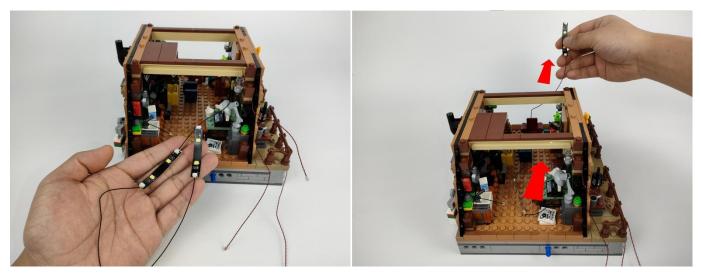










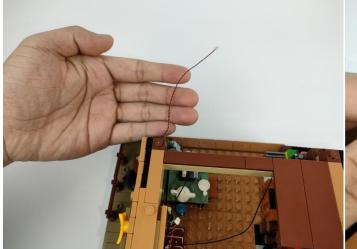


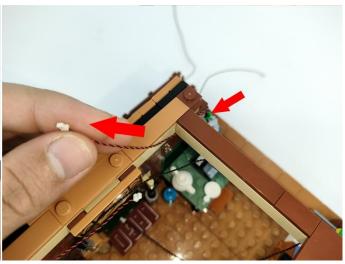

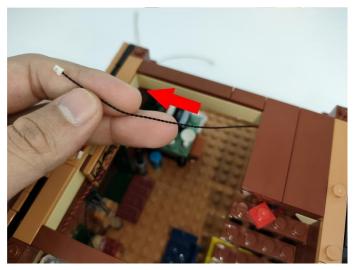



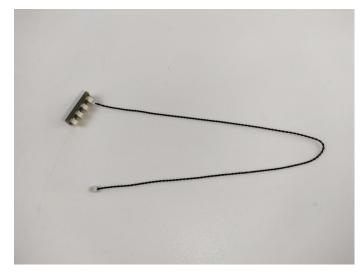


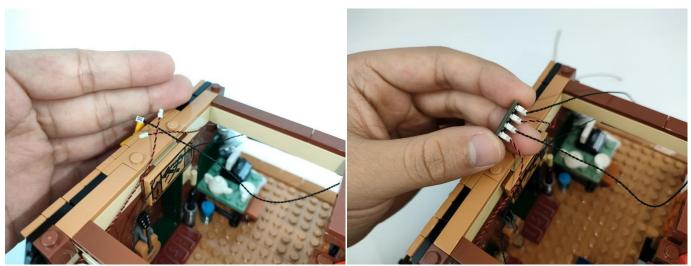










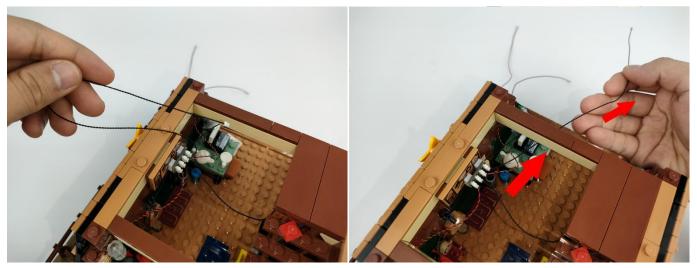




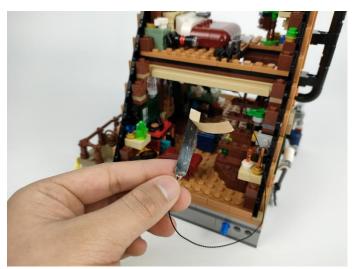


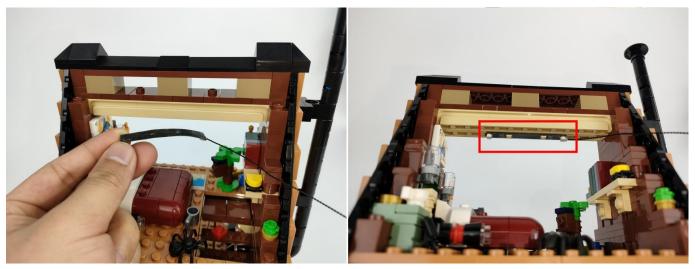

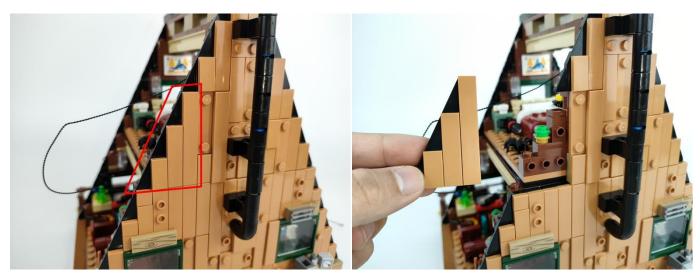


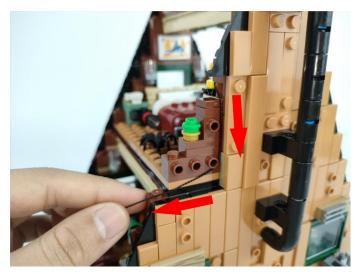




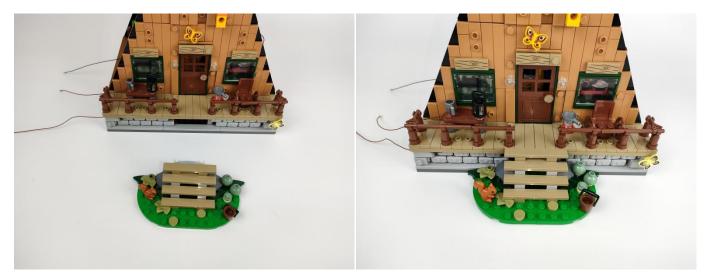



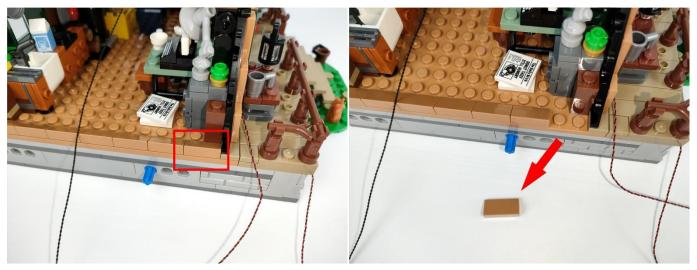




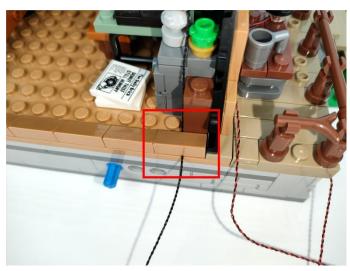







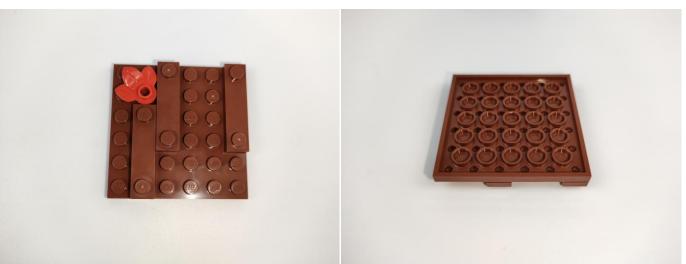



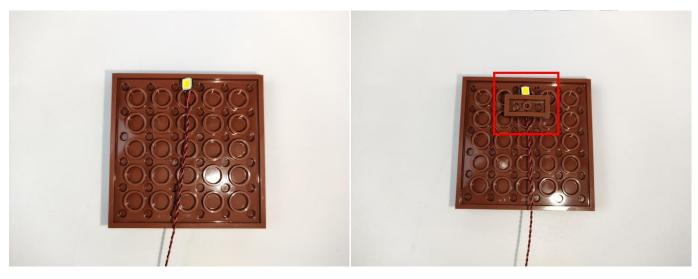




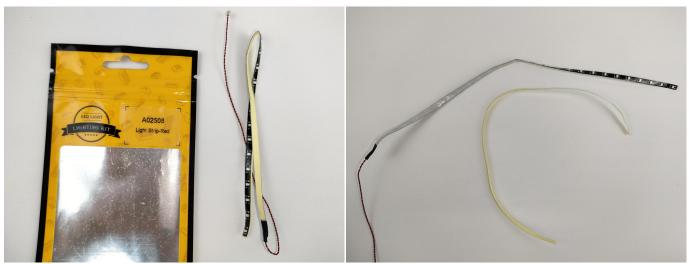







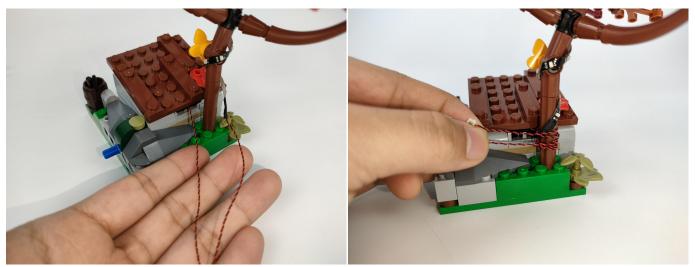



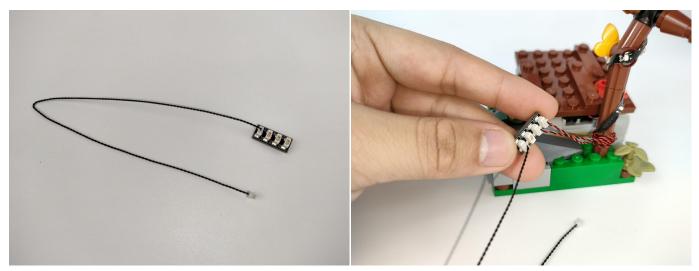




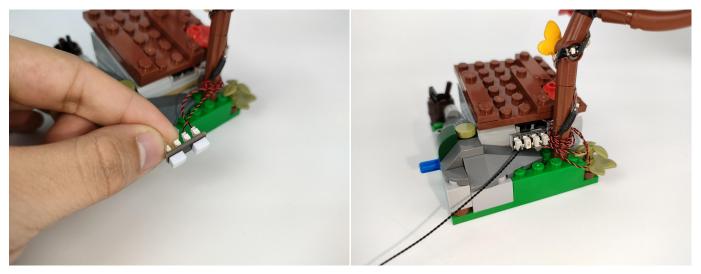






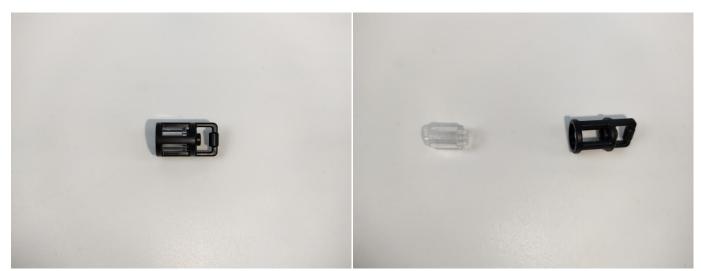






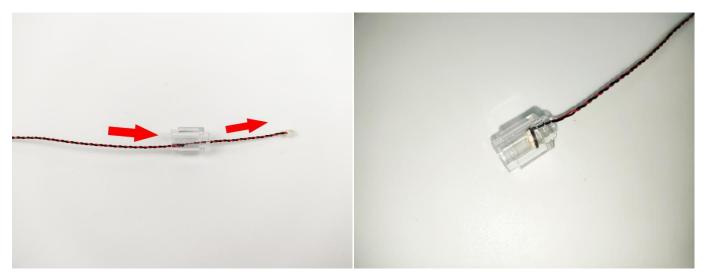




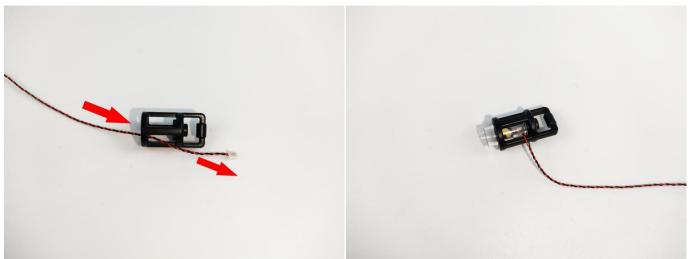








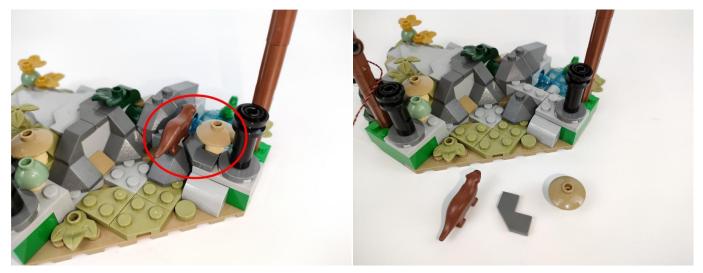







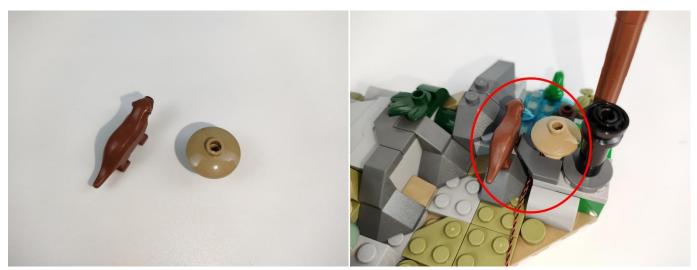



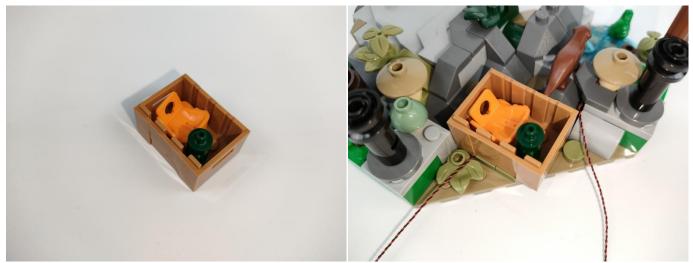


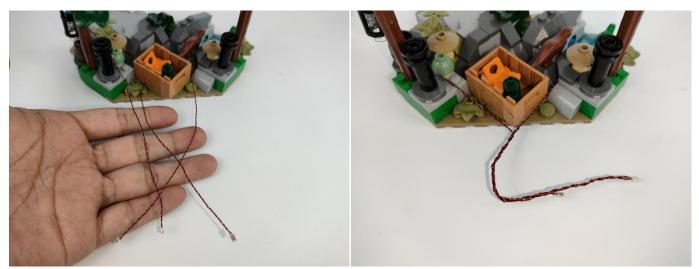








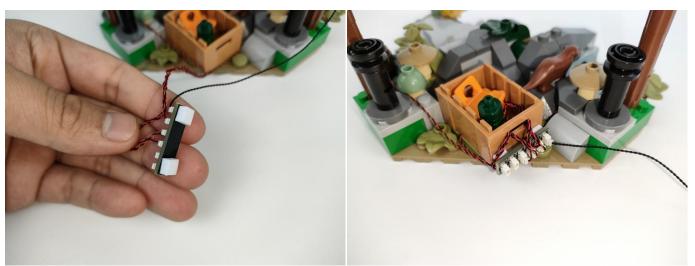


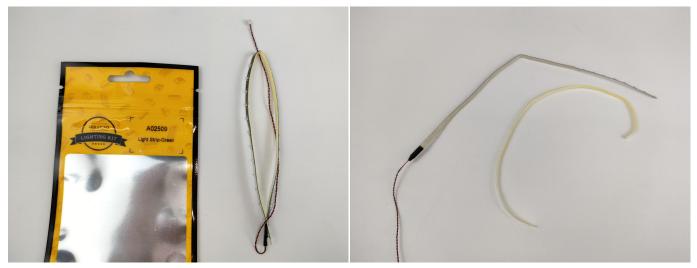









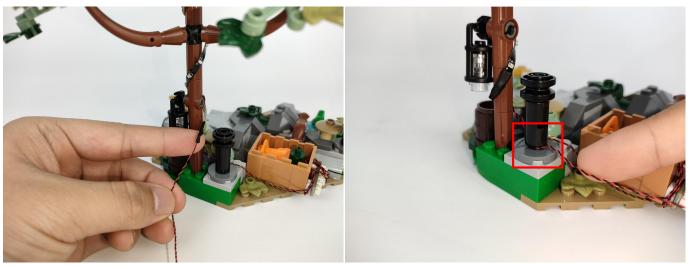


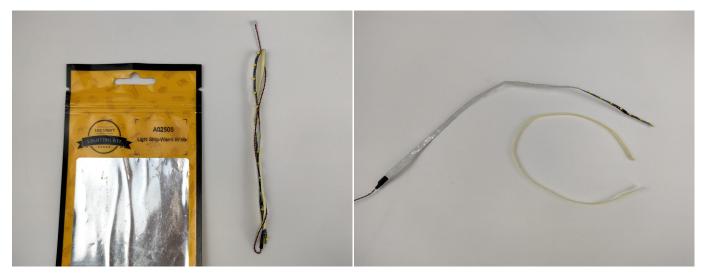







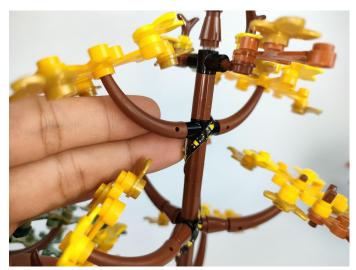


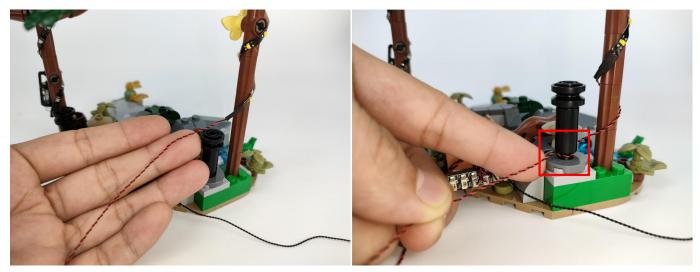

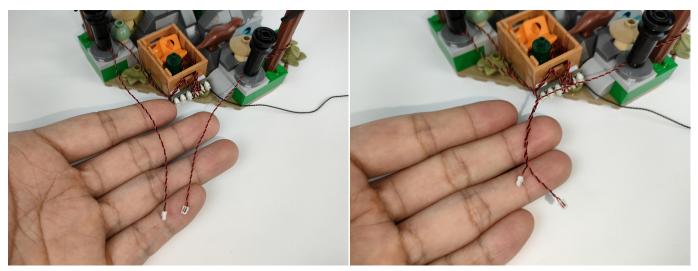

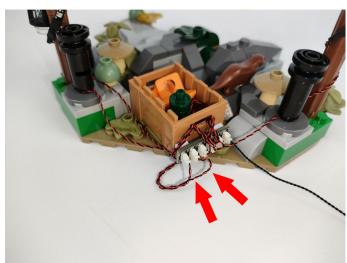




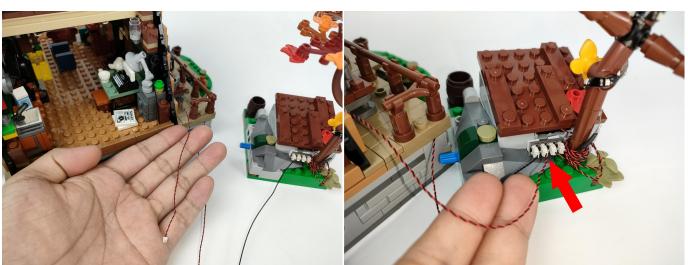










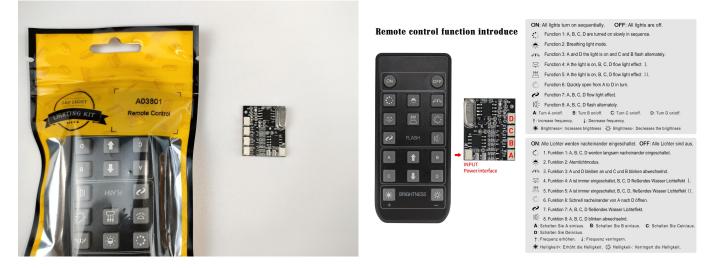



The remote control does not contain batteries, please buy a CR2025 or CR2032 button battery in the nearest store and install it in the remote control.

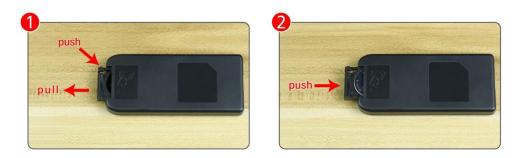


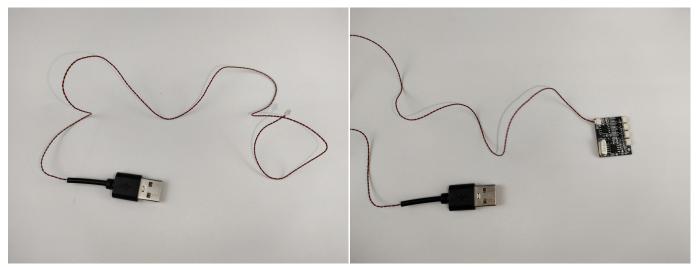

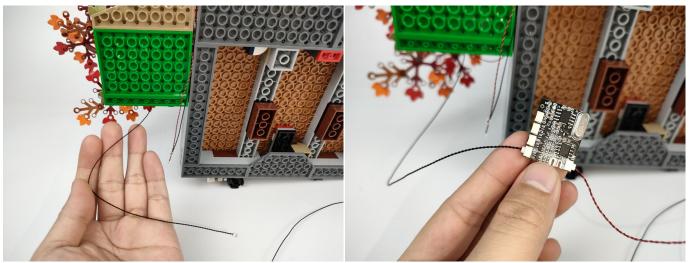


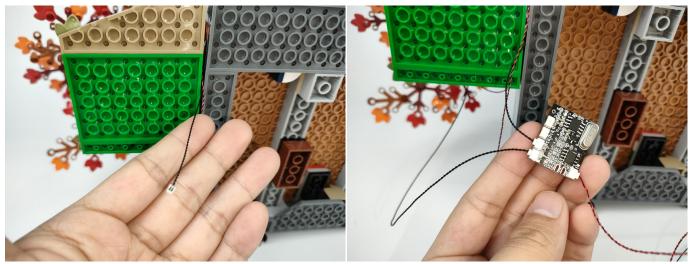

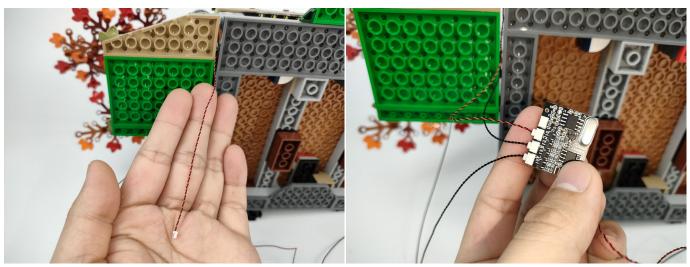

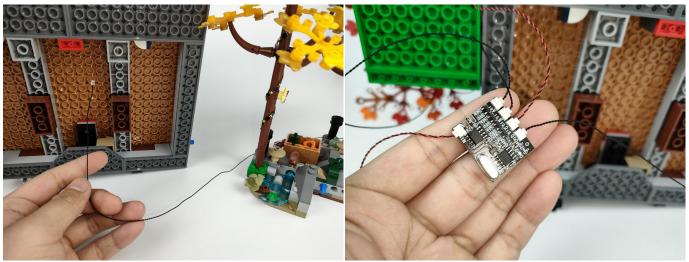



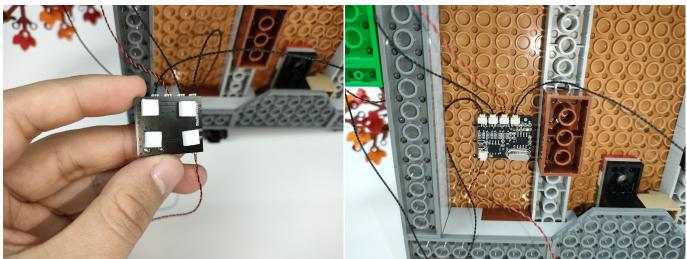









ON Dž *** 0°+ 000 10[: 0 в A Î I D c BRIGHTNESS

Remote control function introduce

- Function 4: A the light is on, B, C, D flow light effect 1.

 Function 5: A the light is on, B, C, D flow light effect 1I.

 Function 6: Quickly open from A to D in turn.
- Function 7: A, B, C, D flow light effect.

- [1]:
 Function 8: A, B, C, D flash alternately.

 A: Turn A solieff.
 B: Turn B solieff.
 C: Turn C solieff.

 D: Turn D solieff.
 D: Turn D solieff.
 D: Turn D solieff.

 †: Increase frequency.
 1: Decrease frequency.
 D: Turn D solieff.

 : Brightness: Increases brightness
 2: Brightness.: Decreases the brightness
- $\label{eq:one-optimal-optimal} \textbf{ON}: \mbox{Alle Lichter werden nacheinander eingeschaltet}. \textbf{OFF}: \mbox{Alle Lichter sind aus}.$
- 1. Funktion 1: A, B, C, D werden langsam nacheinander eingeschaltet.
 2. Funktion 2: Atemlichtmodus.

 40%
 3. Funktion 3: A und D bleiben an und C und B blinken abwechselnd.

- Aris 3. A rundo 19. A und D beleten an und C und B binken abwechseind.
 Ge 4. Funktion 4. A st immer eingeschaltet, B. C. D. fieldendes Wasser Lichteffelt 1.
 B Funktion 4. A st immer eingeschaltet, B. C. D. fieldendes Wasser Lichteffelt 11.
 G Funktion 6. Schnell audehinander von A nach D öffmer.
 7. Funktion 7. A. B. C. D. fieldendes Wasser Lichteffelt.

- T. Fundion 7: A. B. C. D Bildsondas Wasser Lichteffeldt.
 Struktion 8: A. B. C. D Bildson abworbsehrd.
 Schalten Silv A Aninus. B. Schalten Silv B einfaus. C. Schalten Silv Beinfaus.
 D schalten Silv Beinfaus.
 Schalten Silv Beinfaus.



Good job, you've done all the installation steps, power it up and enjoy your work.



If it is necessary to change the power supply, prepare three AAA batteries, install them in the battery box, turn on the switch on the battery box, remove the plug of the USB Power Cable from the socket of the expansion board,plug the plug of the battery box to the same socket in the expansion board to power the suit as well.

THANKS