75382 TIE Interceptor P65802

 Installation requires a lot of patience and great observation that your LEGO bricks will come alive when you get this finished. The bricks with lighting as below, so make sure you're ready and let's get started.



Strategies for the Installation

This instruction divides three sections to complete the installation of the lighting set.

Section A: Check the type and quantity of components.

The quantity and type of components of each products are different and it needs to be carefully checked to make sure there do have enough material.

The type of components is indicated by the label on the bag.

Section B: Test that each components is working properly.

Each components is made individually so it is necessary to test that each components is working properly to avoid the situation that the lighting does not work.

Section C: laying out components following the instruction.

Our material is very small but not fragile, just be reminded that don't to pull the wires too hard. For different people, there may be some installation steps that you can't understand. Please look at the previous and later installation step.

Section A: Check the type and quantity of components.

There are 12 bags in this set. The name and quantities of specific components are as shown, please check carefully.

| Label | Content | Quantity |
|---------------------------------------|---------------------------------|----------|
| A01009 Light-30CM Green | Light-30CM Green | 4 |
| A01101 LED Strip Red | LED Strip Red | 4 |
| A012 Expansion Board | 2 Socket Expansion Board | 4 |
| | 6 Socket Expansion Board | 2 |
| | 4 Socket Expansion Board | 1 |
| A01305 Power Supply | Power Supply | 1 |
| A01501 Connecting Cable 5CM | Connecting Cable 5CM | 5 |
| A01502 Connecting Cable 15CM | Connecting Cable 15CM | 6 |
| A02508 Light Strip-Red | Light Strip-Red | 1 |
| A1031 High-Brightness Light 15CM-Red | High-Brightness Light 15CM-Red | 2 |
| A1035 High-Brightness Light 15CM-Blue | High-Brightness Light 15CM-Blue | 1 |
| A1037 High-Brightness Light 15CM-Cyan | High-Brightness Light 15CM-Cyan | 4 |
| A03801 Remote Control | Remote Control | 1 |
| | Components | |

Please contact us immediately if there have any missing components.


Section B: Test that each components is working properly.

We need a structure to test all lights, so take out the bag with label "USB Power Cord" and "Expansion Boards" as follows.




It is worth reminding that our products are all customized. They have a unique way of connecting. The white plug on wire and the socket of the expansion board need to be connected together to transmit power.

Note that on one side of the white plug you can see two very small golden wires that should be connected to the two golden needles in socket of the expansion board.shown as blow.

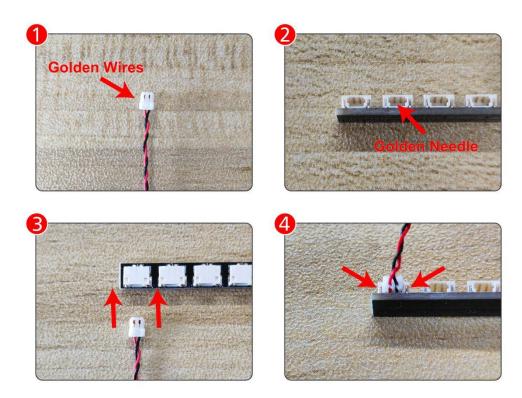



All our connections between plug and socket are all the same as shown above. So for any such structure with plug and socket, please pay attention to the golden wire of the plug and the golden needle of the socket, they must be touched together.

The connection method between the USB Power Cord and Expansion Boards is as follows:

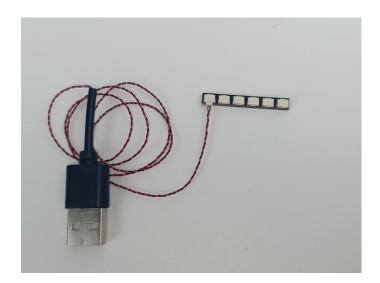

The USB Power Cord can be powered by phone chargers, power banks,etc.




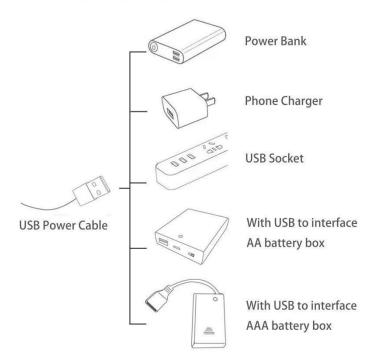

This instruction will use the power bank as power supply . The test structure is shown as follow. All lamp in this set will be tested by this structure.



When we test "A1035 High-Brightness Light 15CM-Blue" particles, Take out the bag labelled "A1035 High-Brightness Light 15CM-Blue". Take out one of the light and connect it to the socket. Turn on the power bank, the light will turn on normally as shown below.

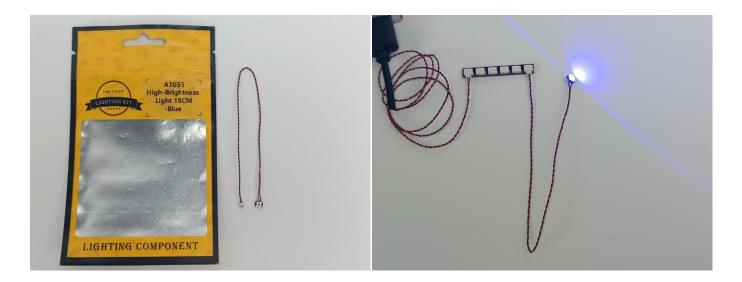


Test each lamp according to this method. It should be noted that after the test, the lamp must be returned to the corresponding bag to avoid confusion of types.



LED strip test:

Take out the bag labeled "A01101 LED Strip Red". Take out the LED light bar, connect the USB power cable, turn on the mobile power supply, the light will be on normally, as shown in the figure below.

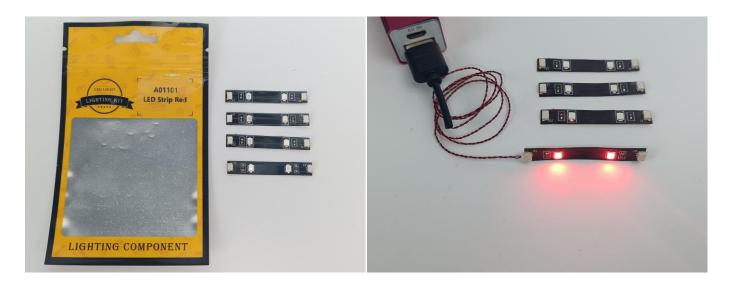



The components needs to be tested in this set is 4*A01009 Light-30CM Green, 1*A02508 Light Strip-Red, 2*A1031 High-Brightness Light 15CM-Red, 4*A1037 High-Brightness Light 15CM-Cyan.


Please contact us immediately if any components don't work.


Section C: laying out components following the instruction.




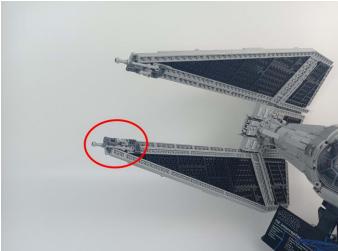

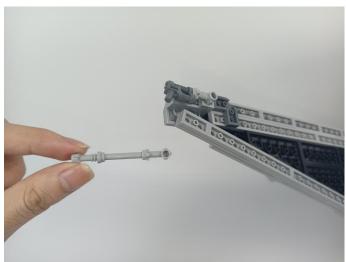

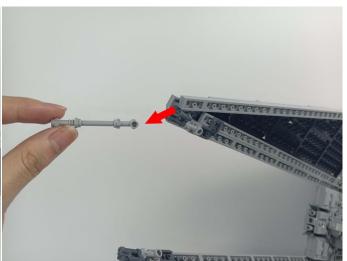


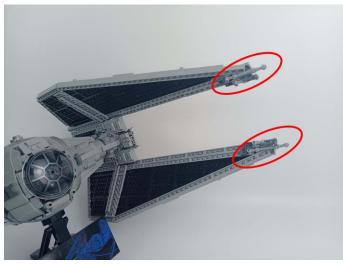

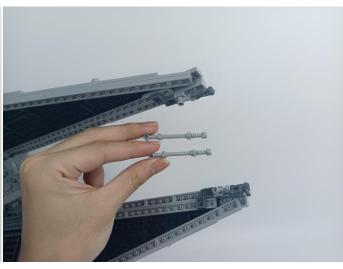






Tips

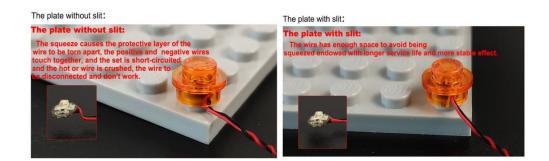


The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormalheat during installation.

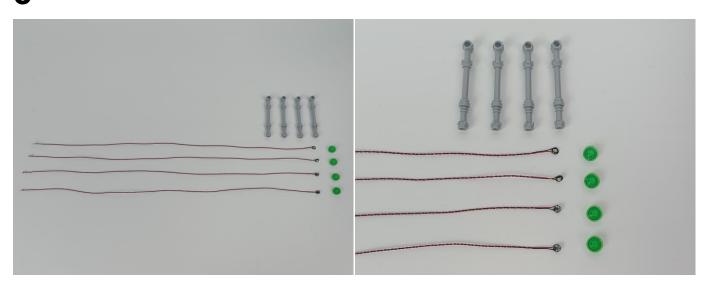

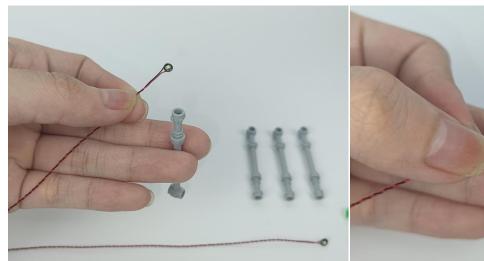

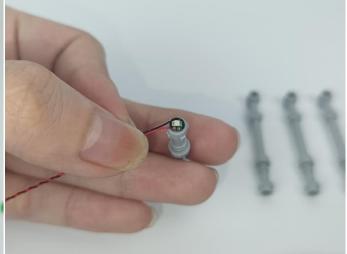


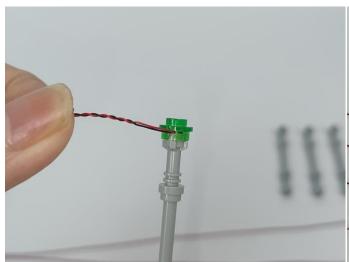










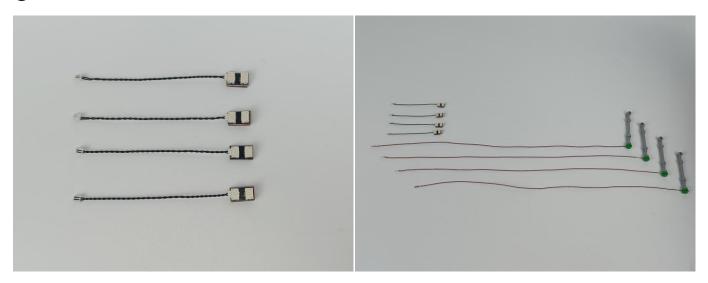





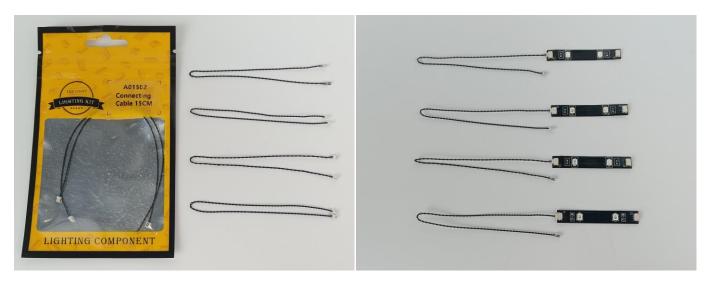


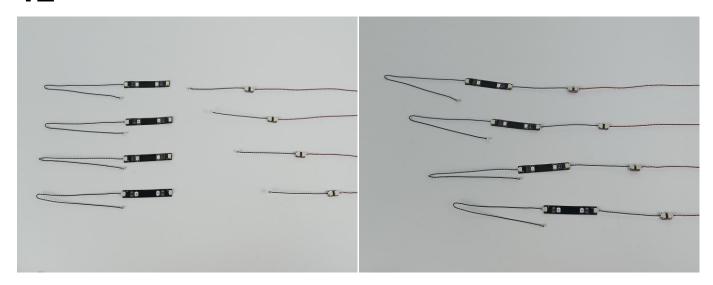


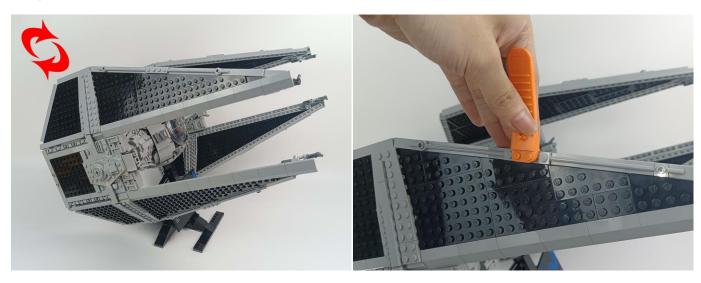


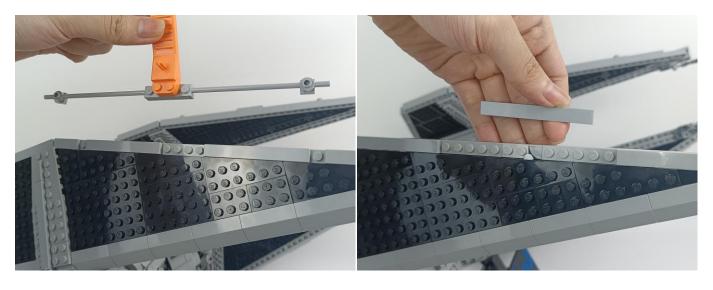


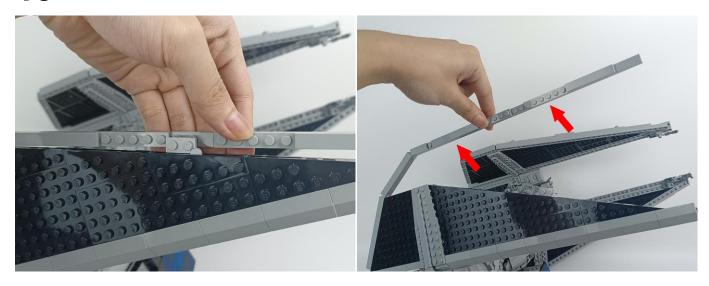


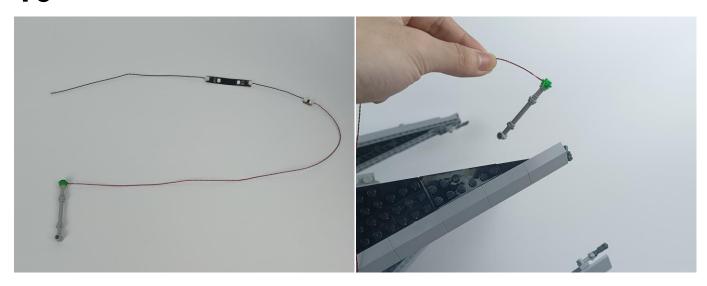


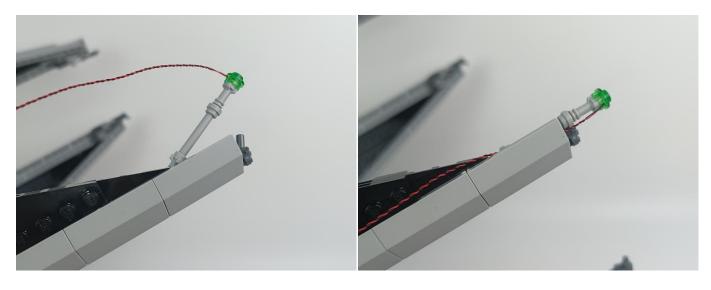


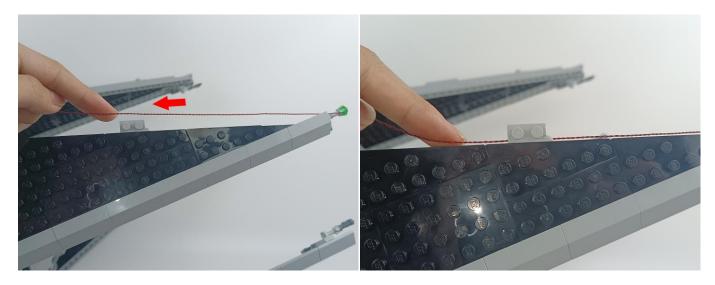


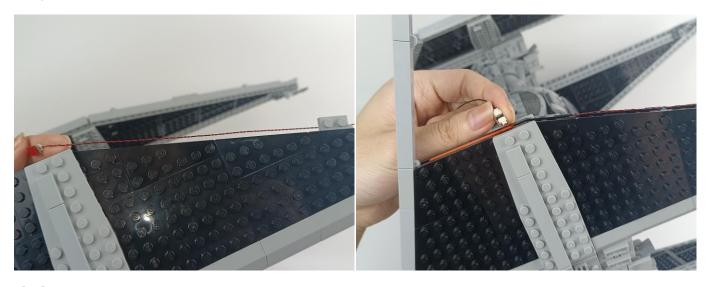


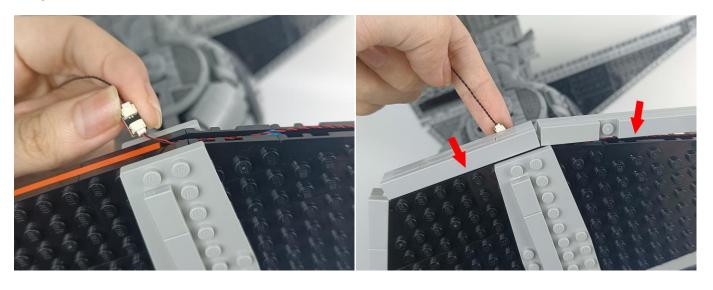


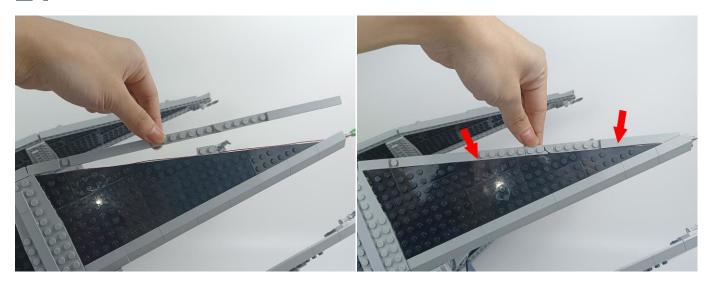


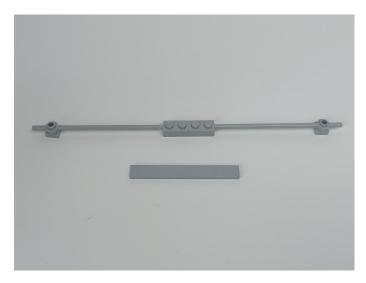


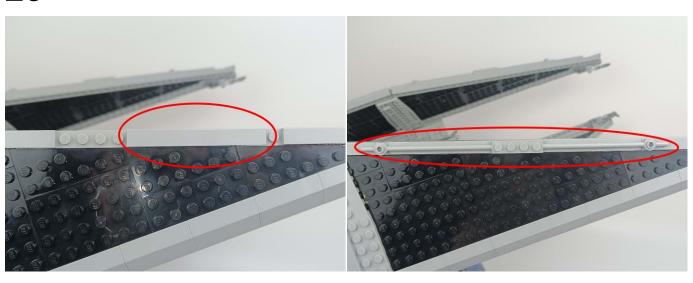

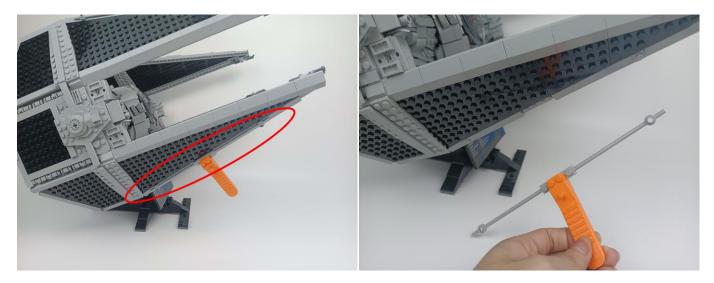


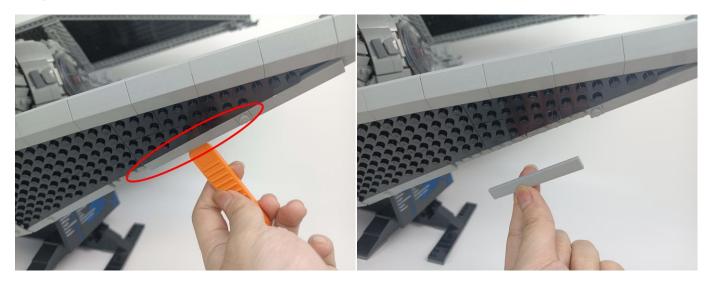


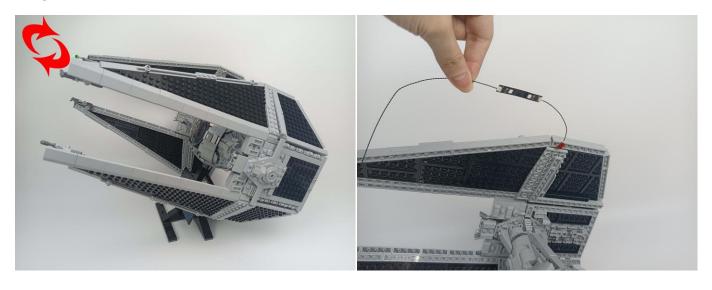


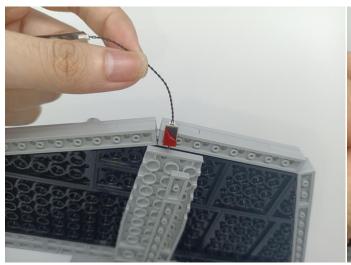





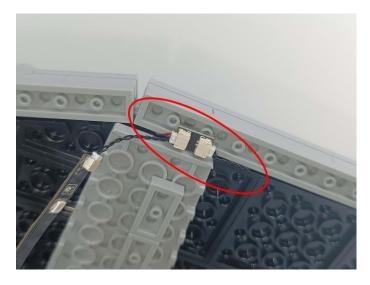


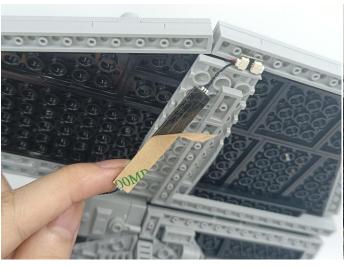


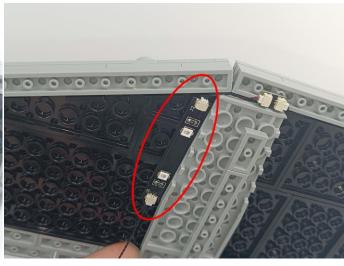


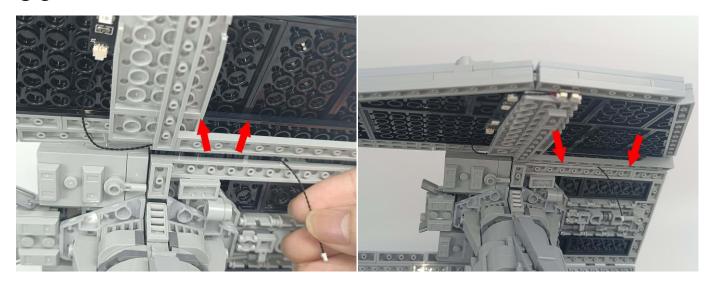


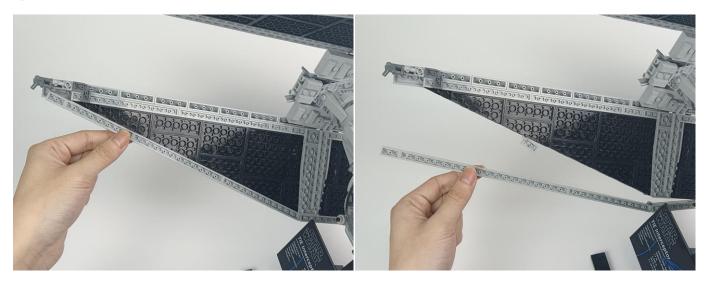


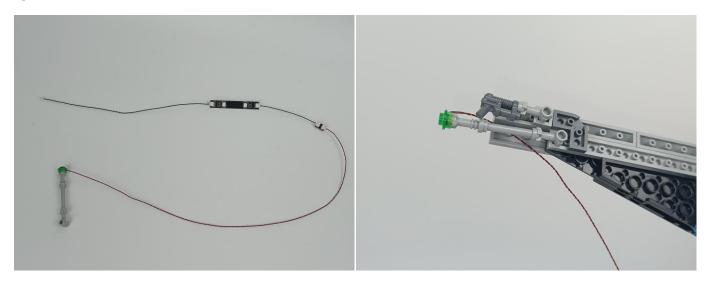


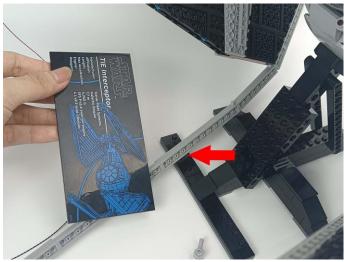


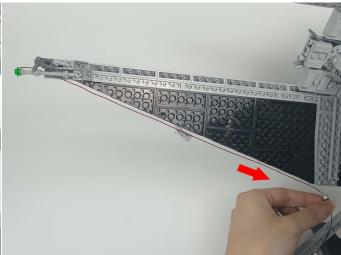


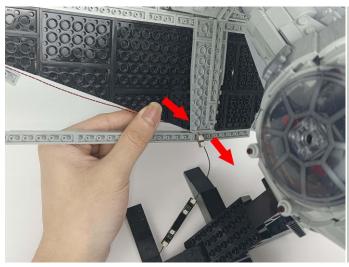


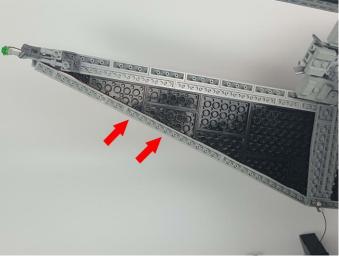


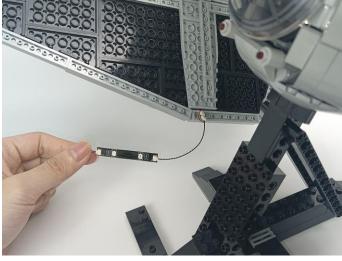


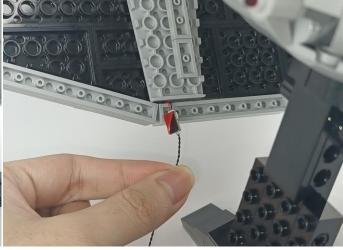


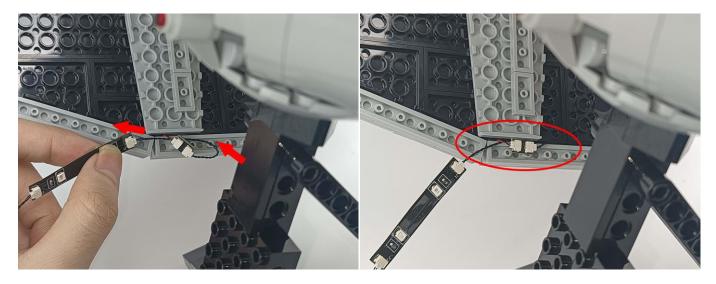


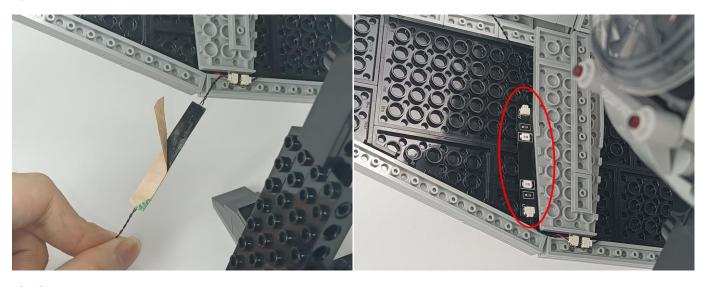


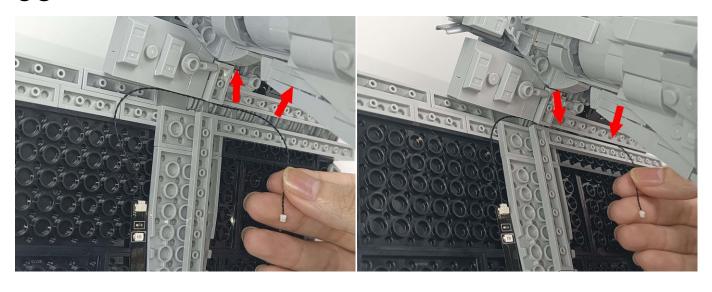


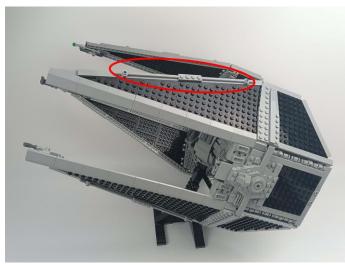


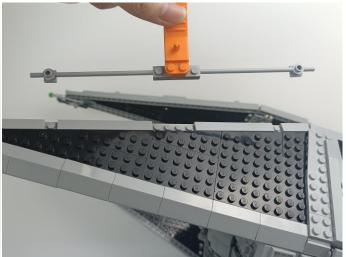


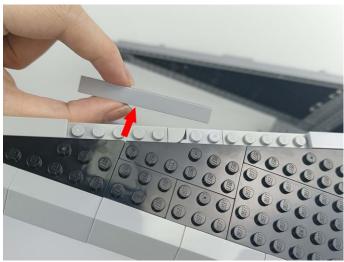

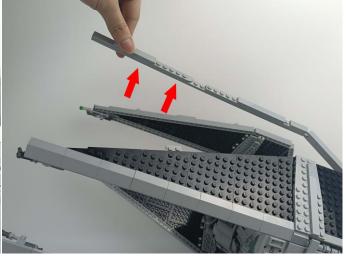


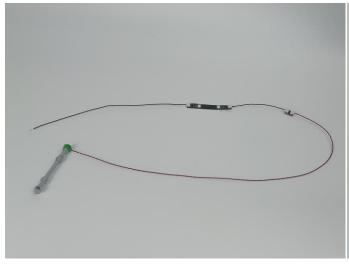


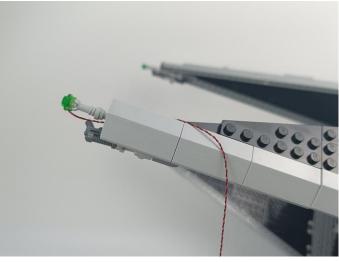


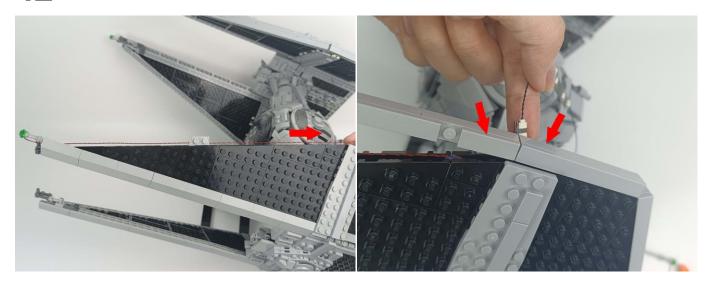





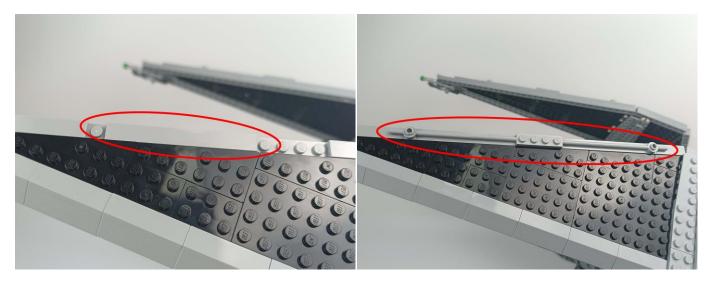


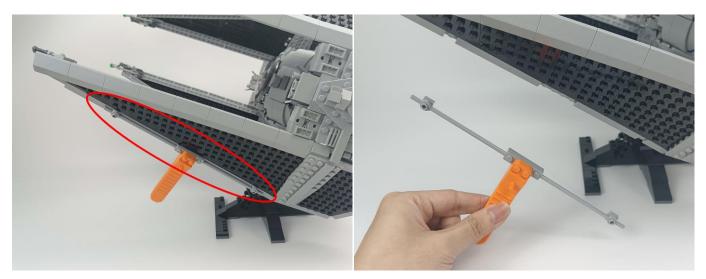


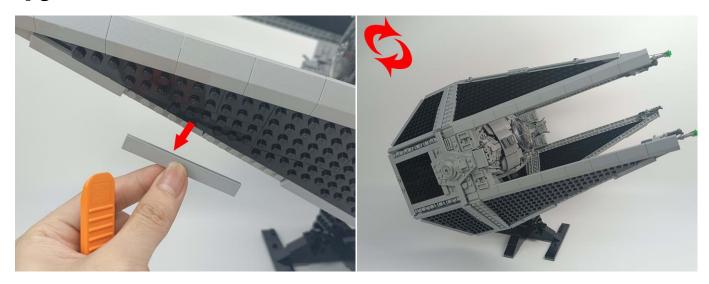


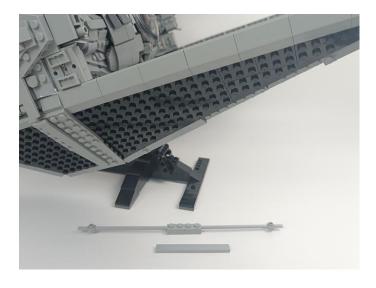

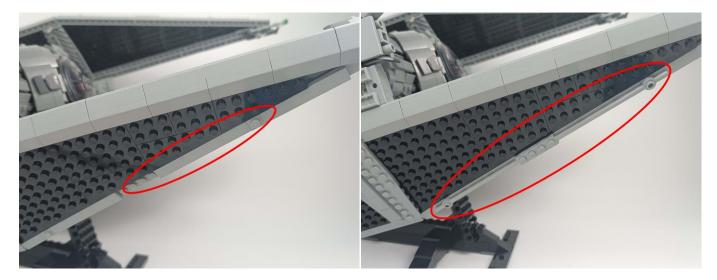


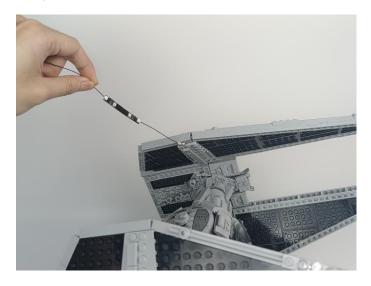


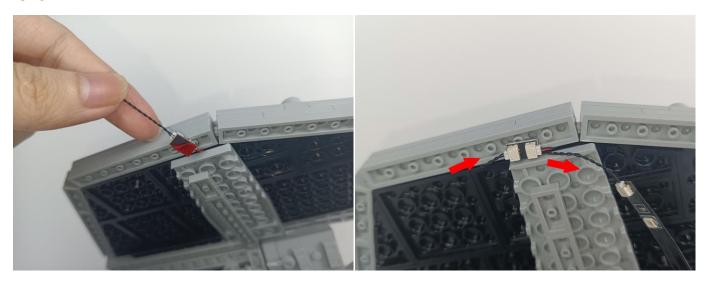


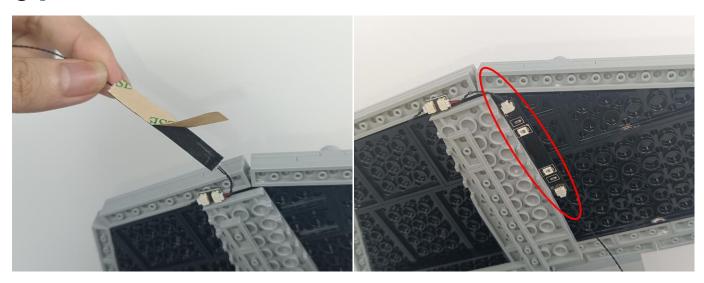





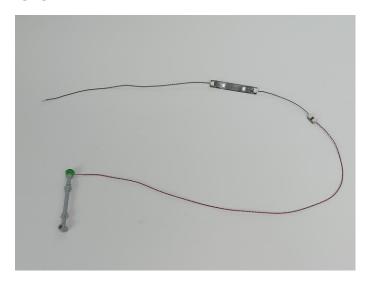


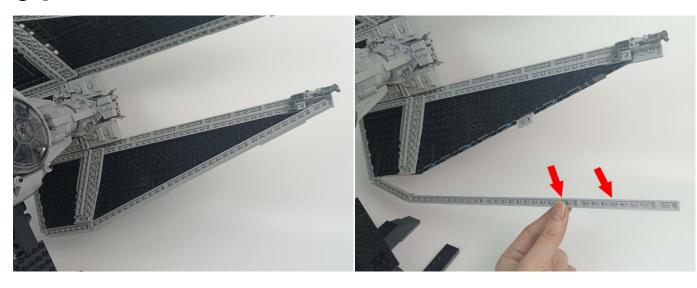


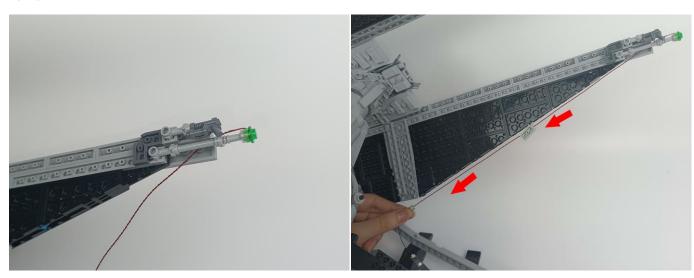


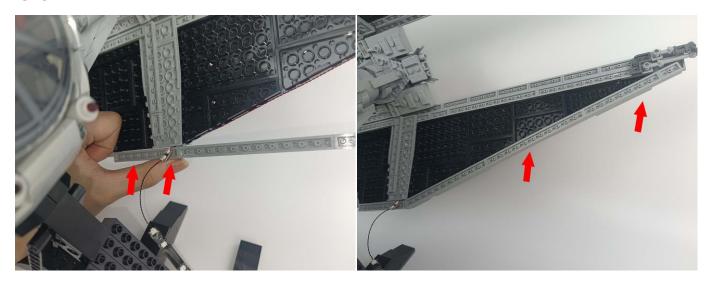

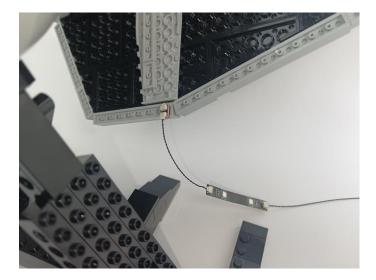


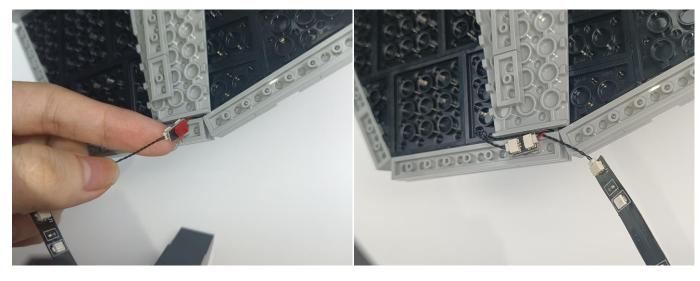


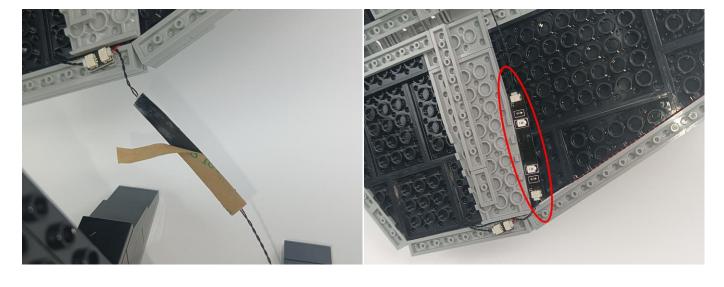


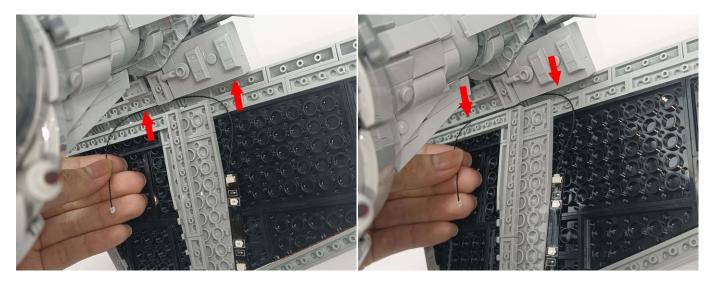





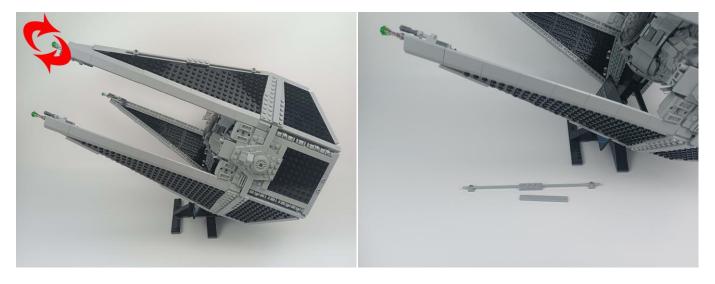


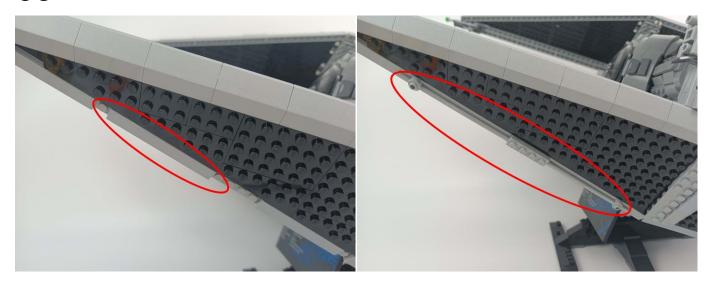

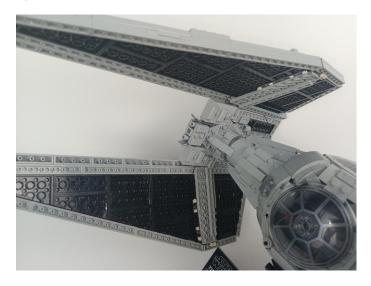

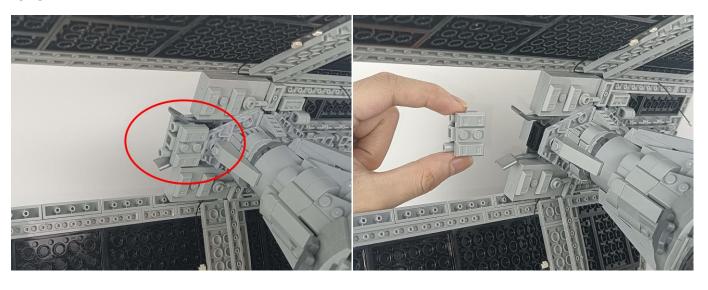

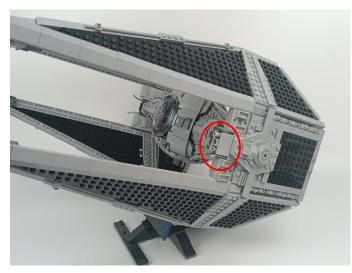

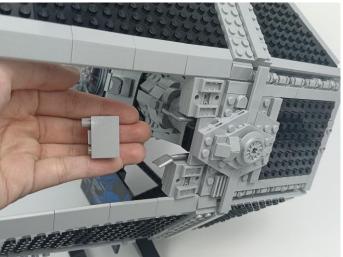














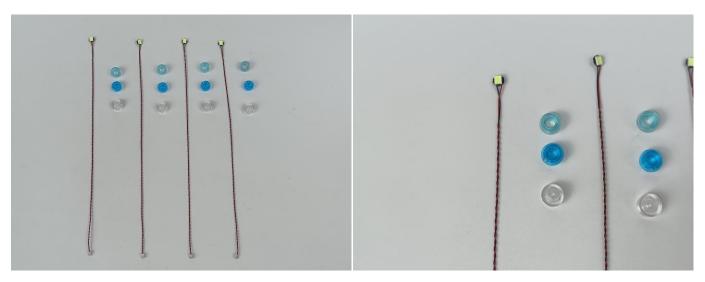


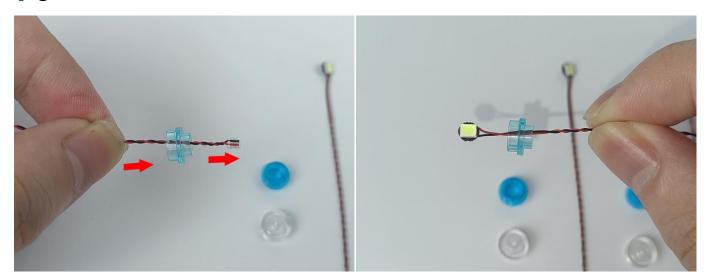


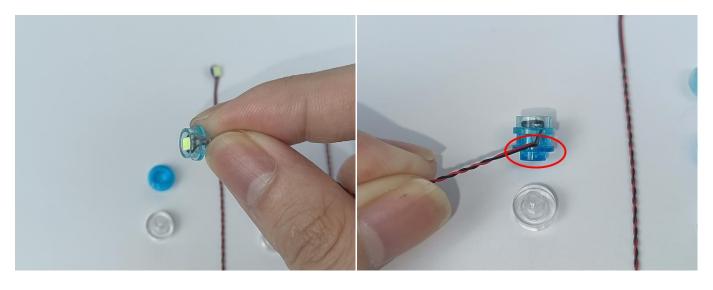

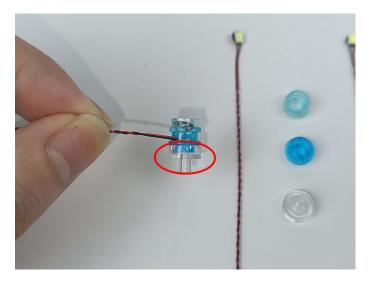

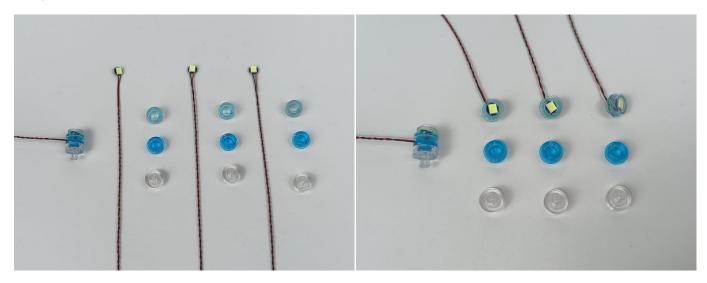


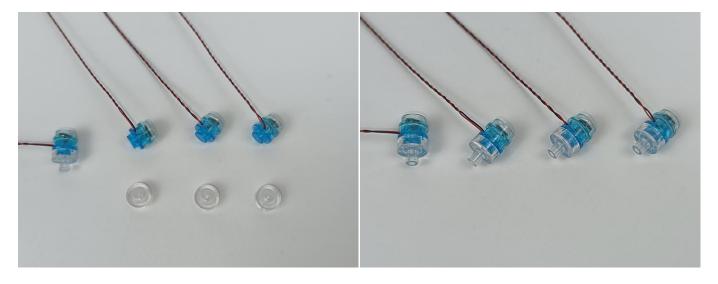


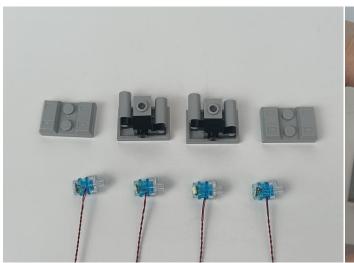







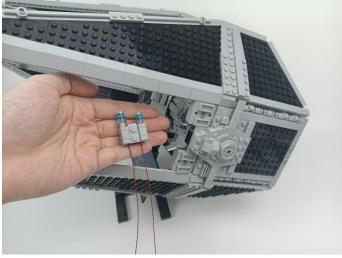

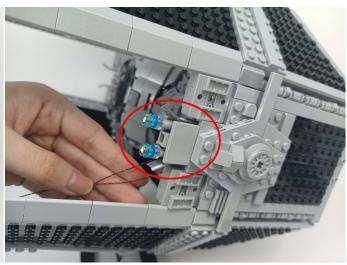


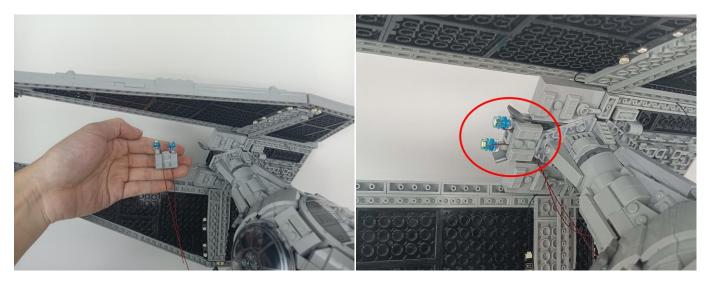





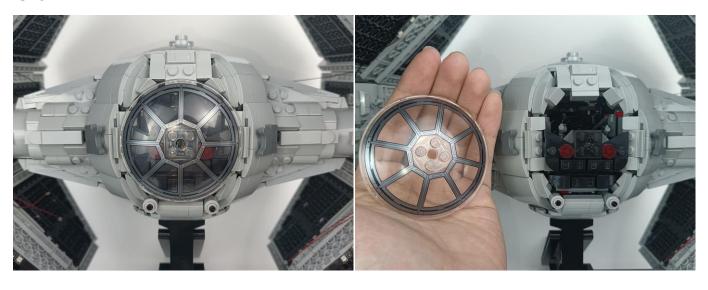





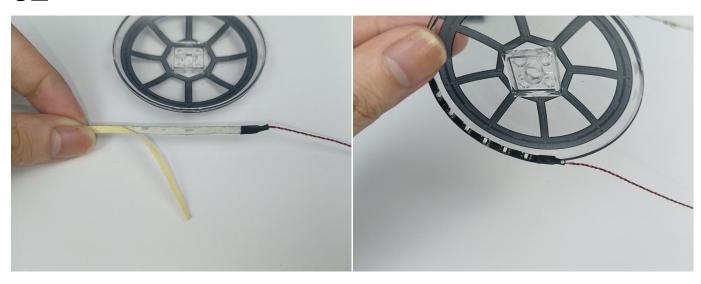

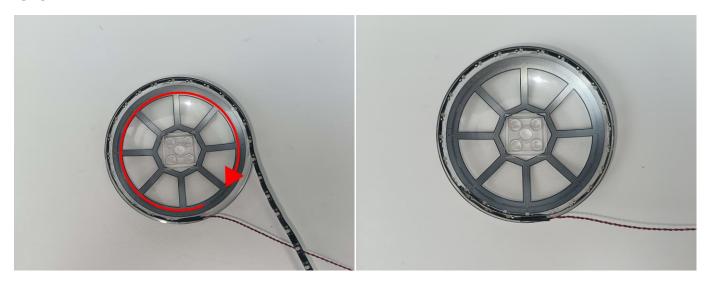


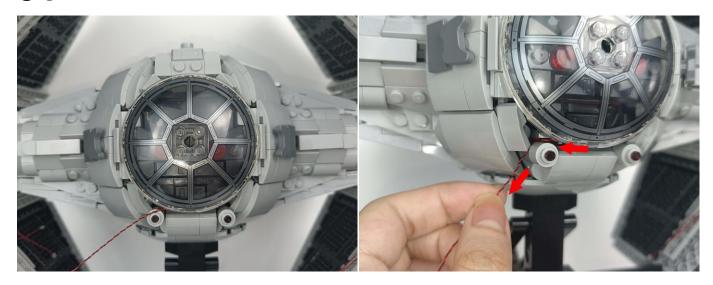


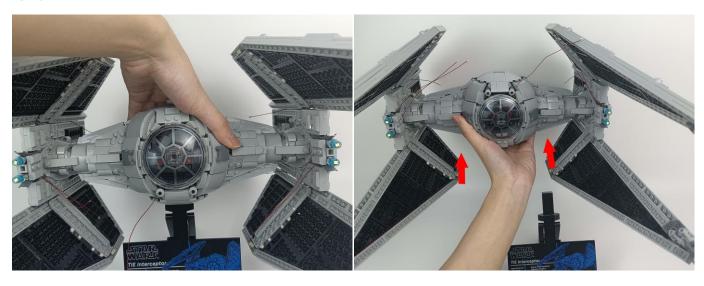


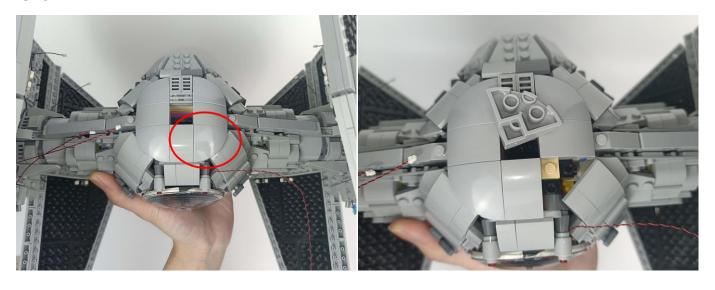



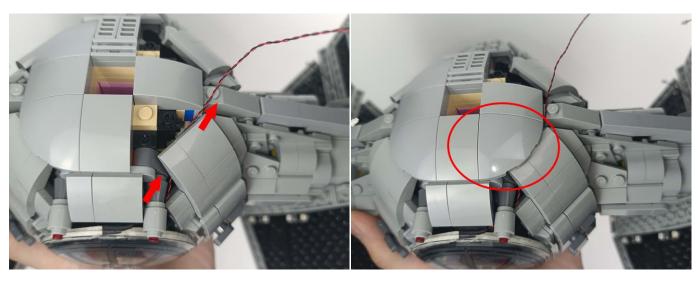


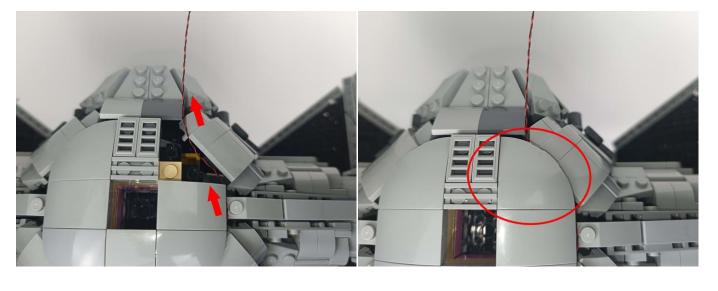


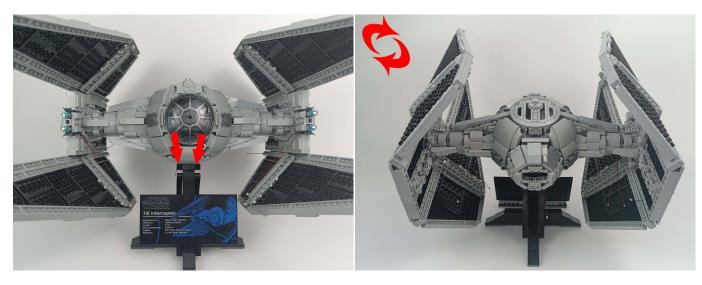








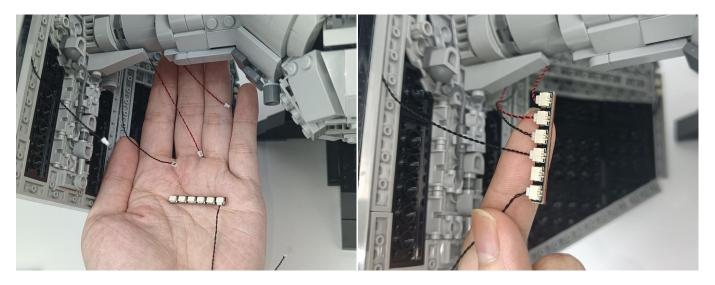


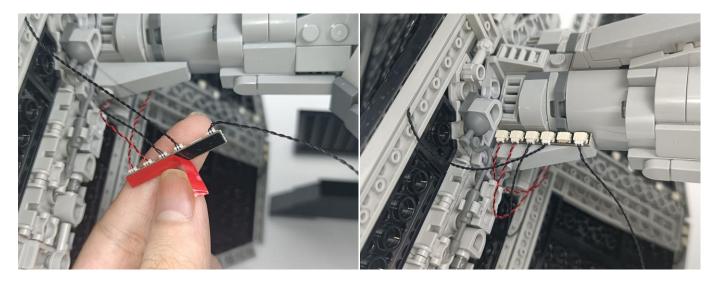


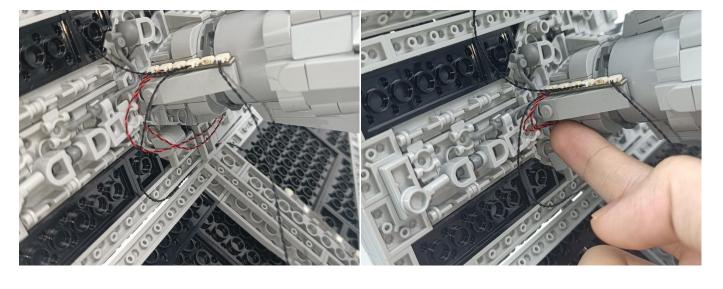

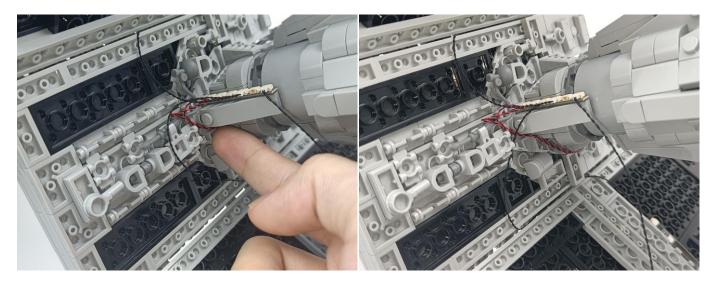


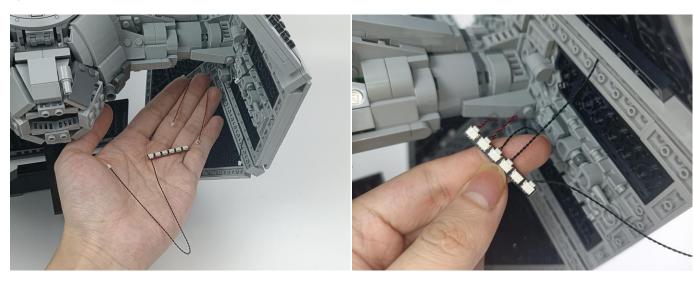


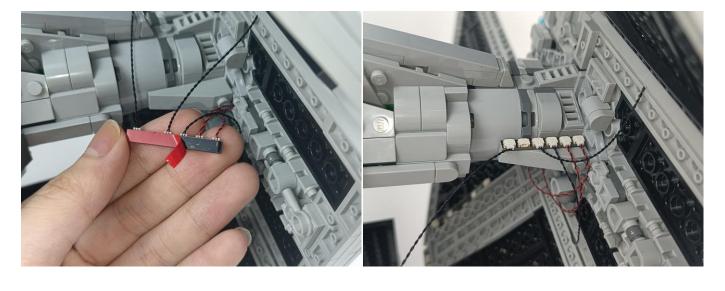


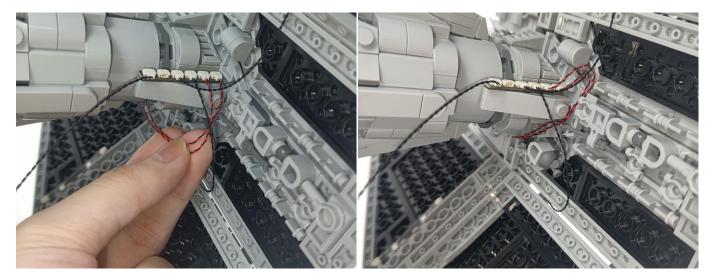




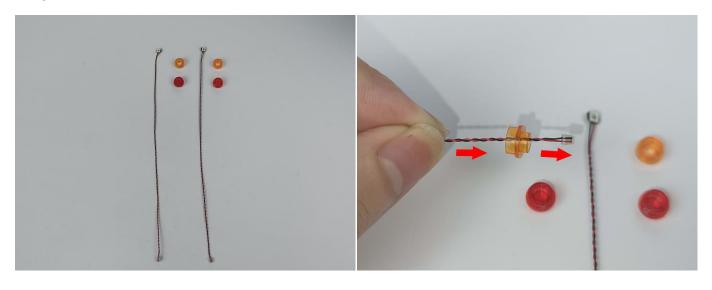


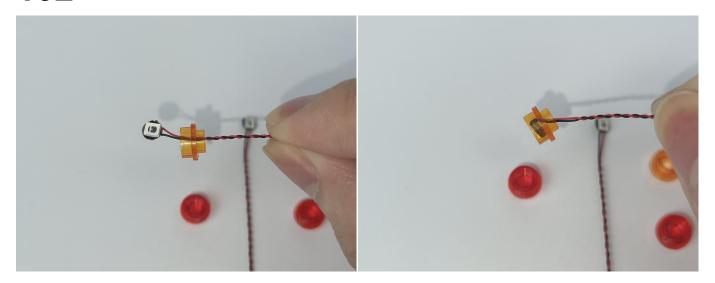

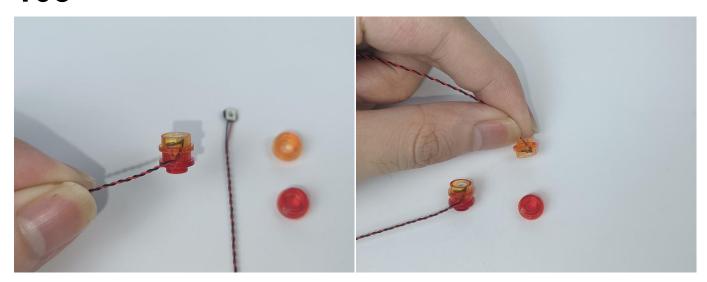





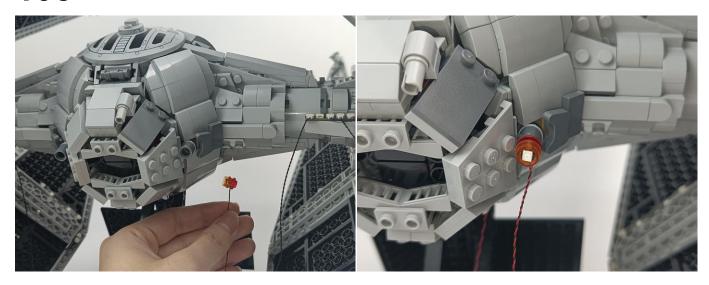


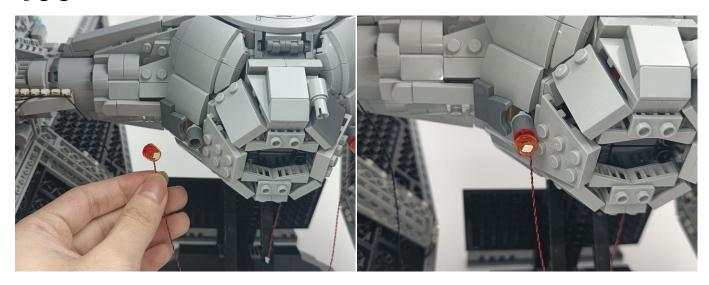




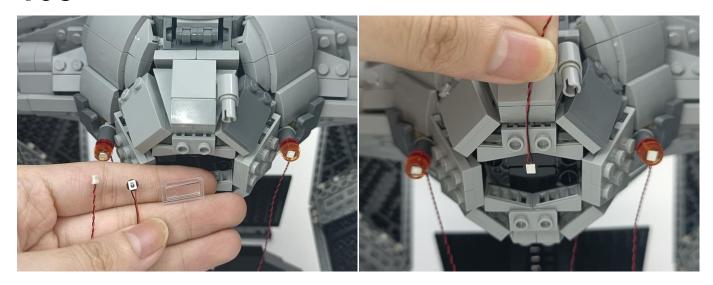

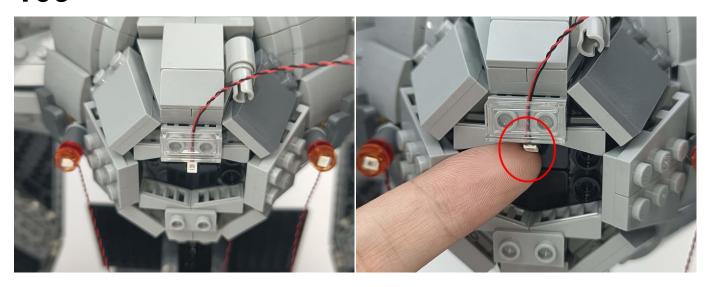


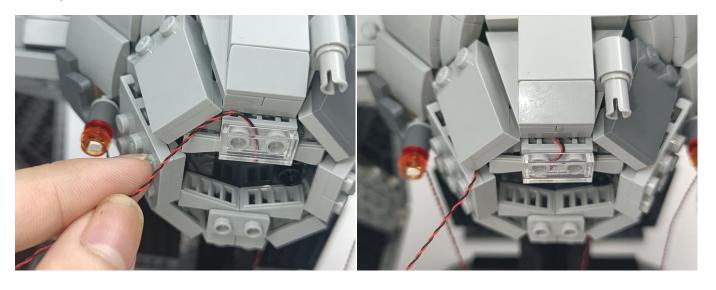

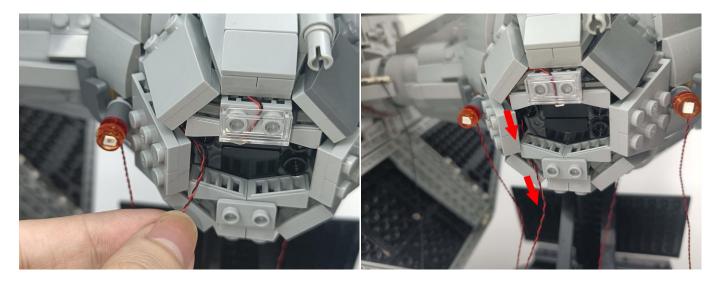








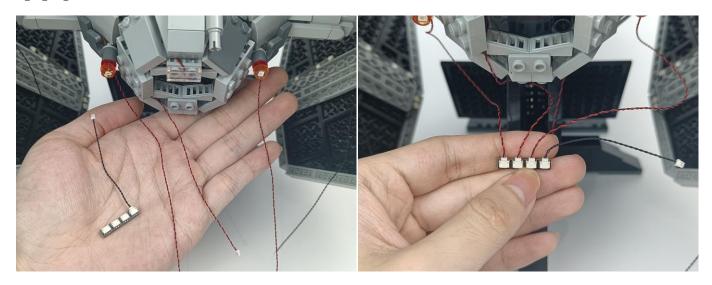





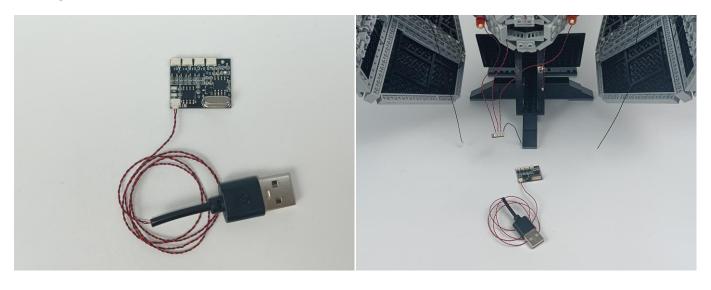


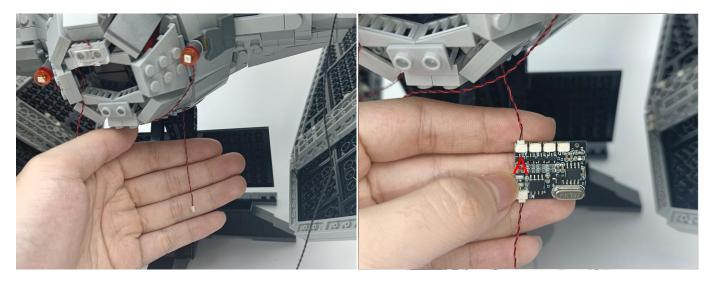


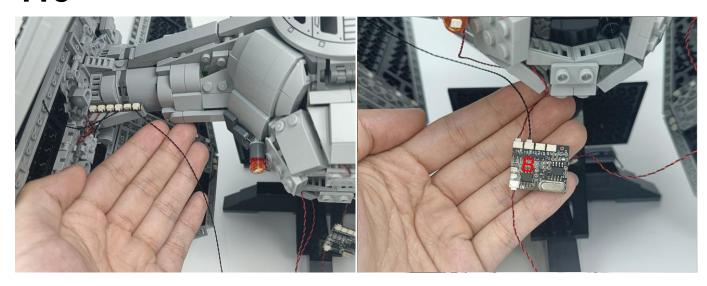


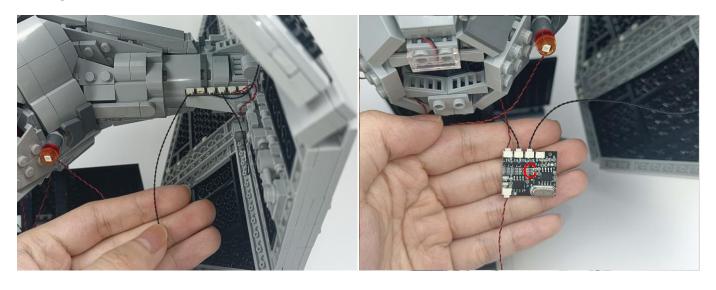


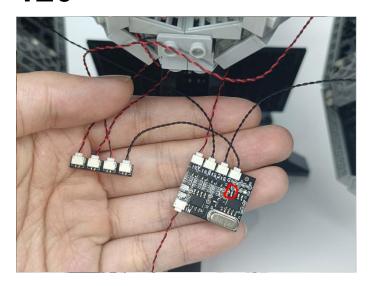


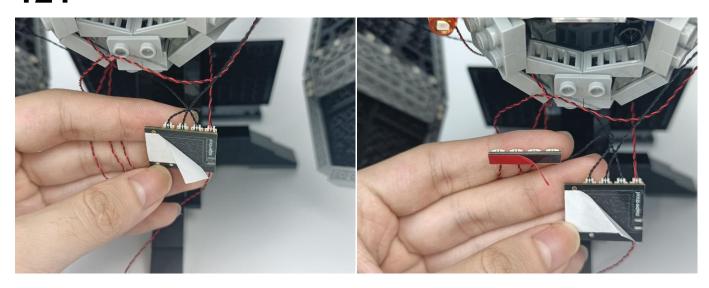


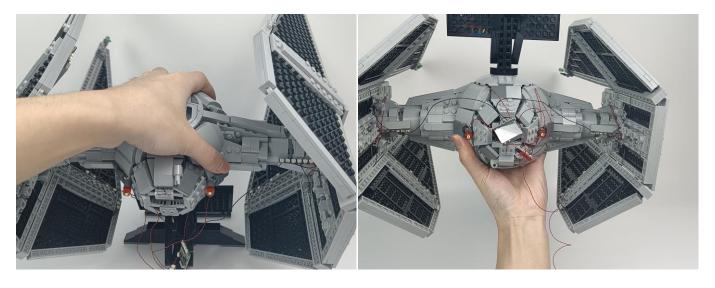


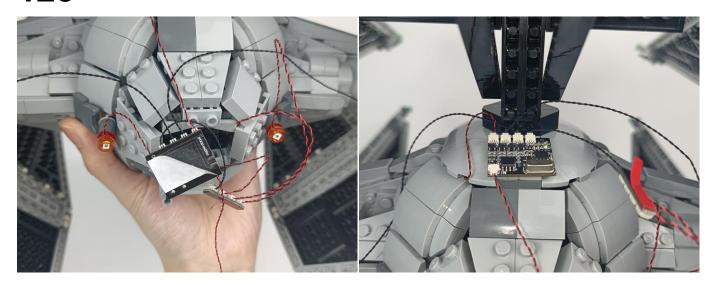


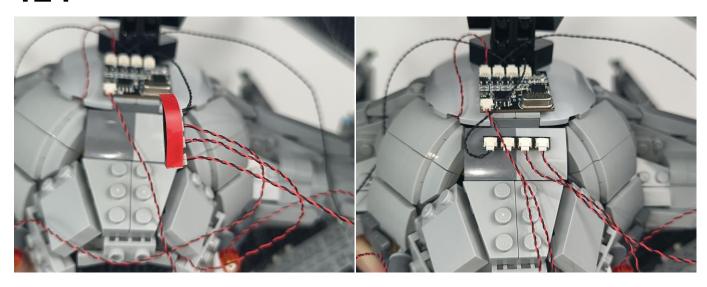


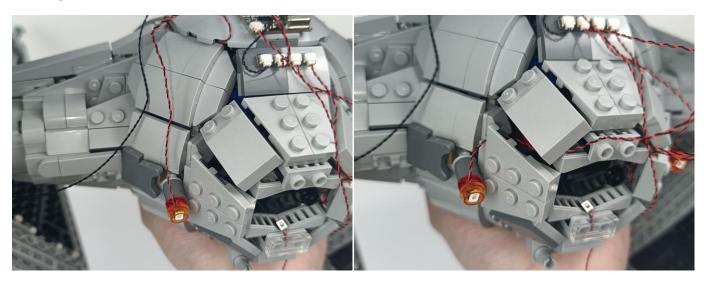


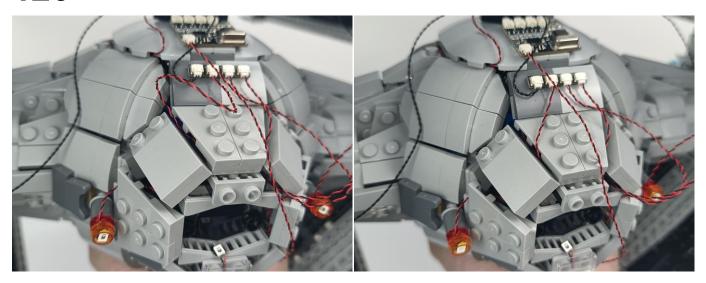


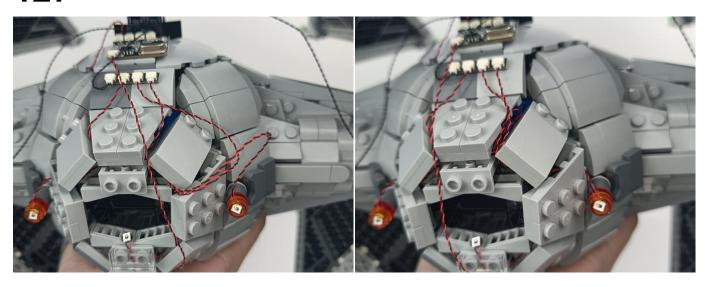

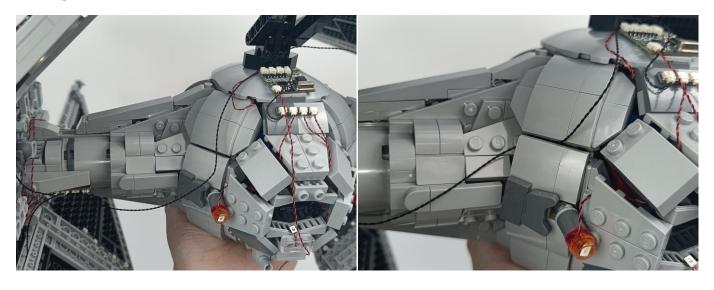

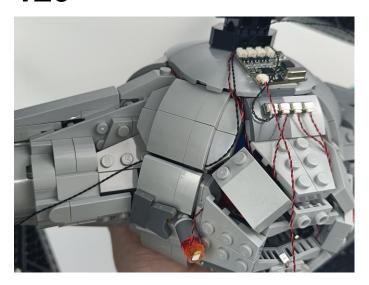

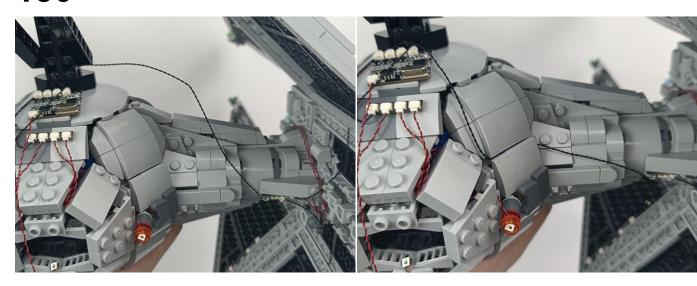

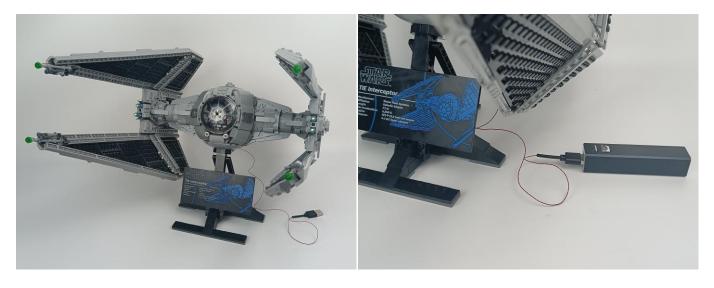



Remote control function introduce



OFF: All lights are off. ON: All lights turn on sequentially. Function 1: A, B, C, D are turned on slowly in sequence. Function 2: Breathing light mode. Function 3: A and D the light is on and C and B flash alternately. A: Turn A on/off. B: Turn B on/off. Function 4: A the light is on, B, C, D flow light effect I. C: Turn C on/off. Function 5: A the light is on, B, C, D flow light effect II. D: Turn D on/off. † : Increase frequency. Function 6: Quickly open from A to D in turn. ↓ : Decrease frequency. Function 7: A, B, C, D flow light effect. * : Brightness+: Increases brightness 10. Function 8: A, B, C, D flash alternately. 🔆 : Brightness-: Decreases the brightness

ON: Alle Lichter werden nacheinander eingeschaltet. OFF: Alle Lichter sind aus.

Funktion 1: A, B, C, D werden langsam nacheinander eingeschaltet.

Funktion 2: Atemlichtmodus.

Funktion 3: A und D bleiben an und C und B blinken abwechselnd.

Funktion 4: A ist immer eingeschaltet, B, C, D fließendes Wasser Lichteffekt $\, {
m I} \, .$

Funktion 5: A ist immer eingeschaltet, B, C, D, fließendes Wasser Lichteffekt II. D: Turn D on/off.

Funktion 6: Schnell nacheinander von A nach D öffnen. | † : Increase frequency.

Funktion 7: A, B, C, D fließendes Wasser Lichteffekt.

10: Funktion 8: A, B, C, D blinken abwechselnd.

↓ : Decrease frequency

* : Brightness+: Increases brightness


☆ : Brightness-: Decreases the brightness

A: Turn A on/off. B: Turn B on/off.


C: Turn C on/off.





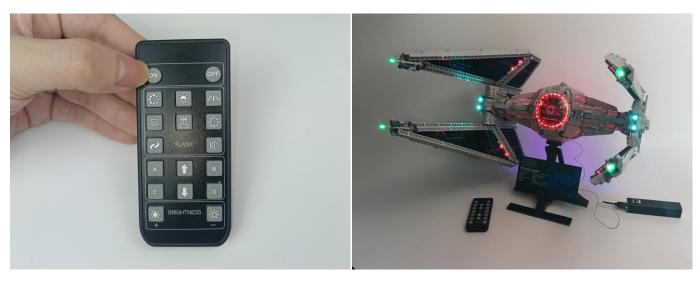

Good job, you've done all the installation steps, power it up and enjoy your work.

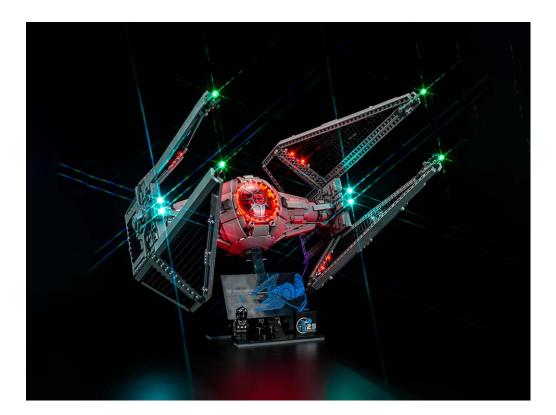

The battery box can also power the set. If it is necessary to change the power supply, prepare three AAA batteries, install them in the battery box, turn on the switch on the battery box, remove the plug of the USB Power Cable from the socket of the expansion board, plug the plug of the battery box to the same socket in the expansion board to power the suit as well.

THANKS