


76429 Talking Sorting Hat

- Installation requires a lot of patience and great observation that your LEGO bricks will come alive when you get this finished. The bricks with lighting as below, so make sure you're ready and let's get started.

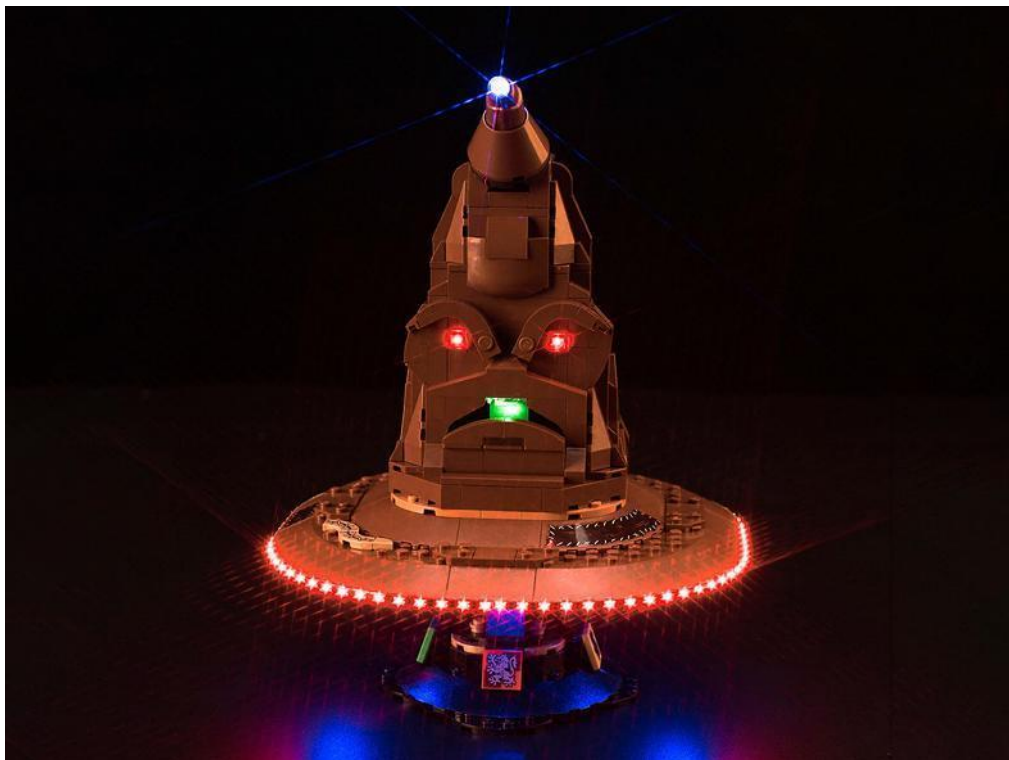

Strategies for the Installation

This instruction divides three sections to complete the installation of the lighting set.

Section A: Check the type and quantity of components.

The quantity and type of components of each products are different and it needs to be carefully checked to make sure there do have enough material. The type of components is indicated by the label on the bag.

Section B: Test that each components is working properly.

Each components is made individually so it is necessary to test that each components is working properly to avoid the situation that the lighting does not work .

Section C: laying out components following the instruction.

Our material is very small but not fragile, just be reminded that don't to pull the wires too hard. For different people, there may be some installation steps that you can't understand. Please look at the previous and later installation step.

The PDF installation instructions are of great significance to the installation. If the content of the files cannot be understood, please return to our website to select the video instructions. Also if the video manual cannot be understood, please switch to the PDF manual.

Section A: Check the type and quantity of components.

There are 11 bags in this set. The name and quantities of specific components are as shown , please check carefully.

Label	Content	Quantity
A01003 Light-15CM Red	Light-15CM Red	2
A01005 Light-15CM Blue	Light-15CM Blue	1
A012 Expansion Board	6 Socket Expansion Board	1
	6 Socket Expansion Board	1
	4 Socket Expansion Board	1
A01305 Power Supply	Power Supply	1
A01501 Connecting Cable 5CM	Connecting Cable 5CM	2
A01506 Connecting Cable 20CM	Connecting Cable 20CM	1
A02508 Light Strip-Red	Light Strip-Red	3
A03801 Remote Control	Remote Control	1
A1033 High-Brightness Light 15CM-Green	High-Brightness Light 15CM-Green	1
A1035 High-Brightness Light 15CM-Blue	High-Brightness Light 15CM-Blue	4
Components		

Please contact us immediately if there have any missing components.


Section B: Test that each components is working properly.

We need a structure to test all lights, so take out the bag with label “USB Power Cord”and “Expansion Boards”as follows.




It is worth reminding that our products are all customized. They have a unique way of connecting. The white plug on wire and the socket of the expansion board need to be connected together to transmit power.

Note that on one side of the white plug you can see two very small golden wires that should be connected to the two golden needles in socket of the expansion board. shown as blow.

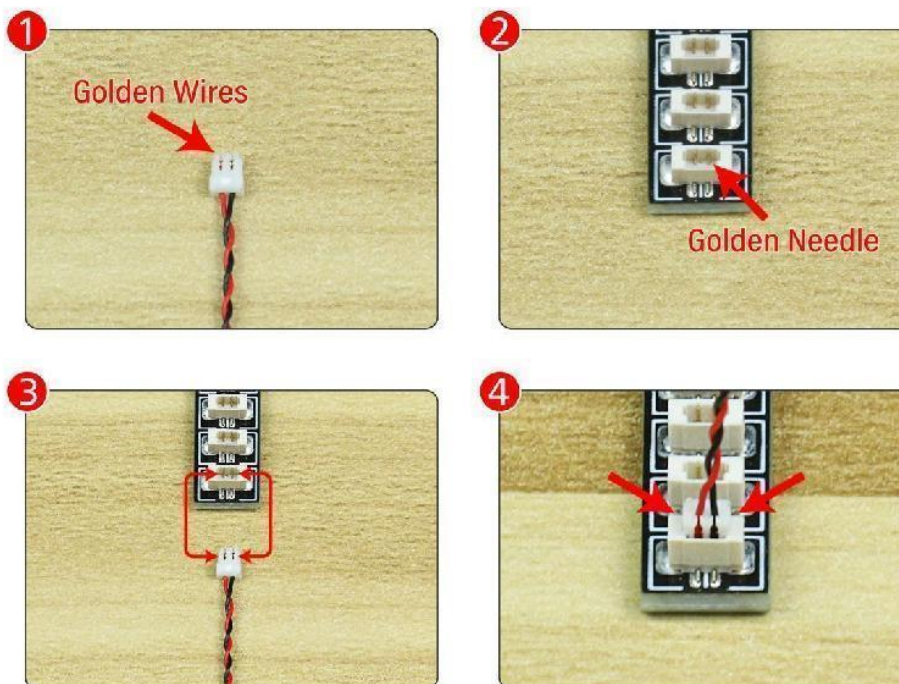

All our connections between plug and socket are all the same as shown above. So for any such structure with plug and socket, please pay attention to the golden wire of the plug and the golden needle of the socket, they must be touched together.


The connection method between the USB Power Cord and Expansion Boards is as follows:

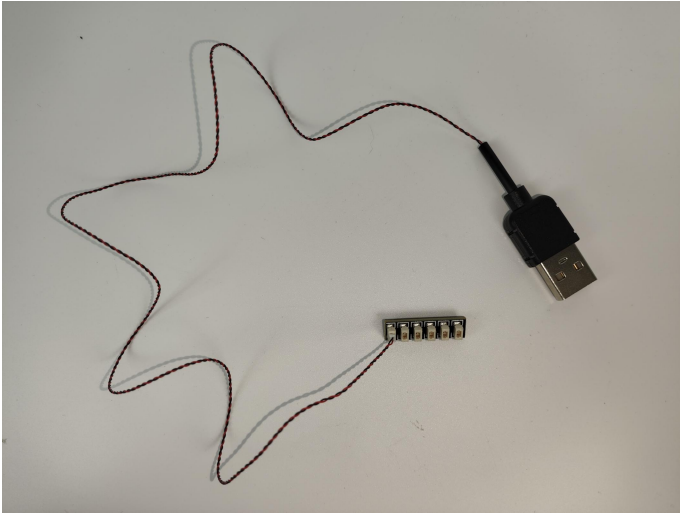

This instruction will use the power bank as power supply . The test structure is shown as follow. All lamp in this set will be tested by this structure.



The USB Power Cord can be powered by phone chargers, power banks, etc.

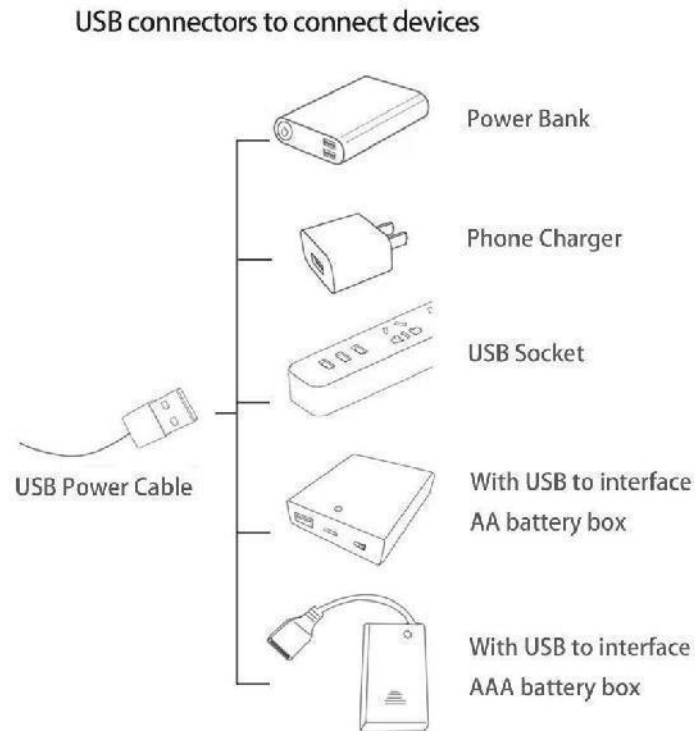

Remote control test:


Take out the remote control and the remote control module.



Please purchase CR2025 model batteries in advance at the store.




Take out the lights.(Attention:The lights shown are for demonstration purposes only and are not included in the package.)

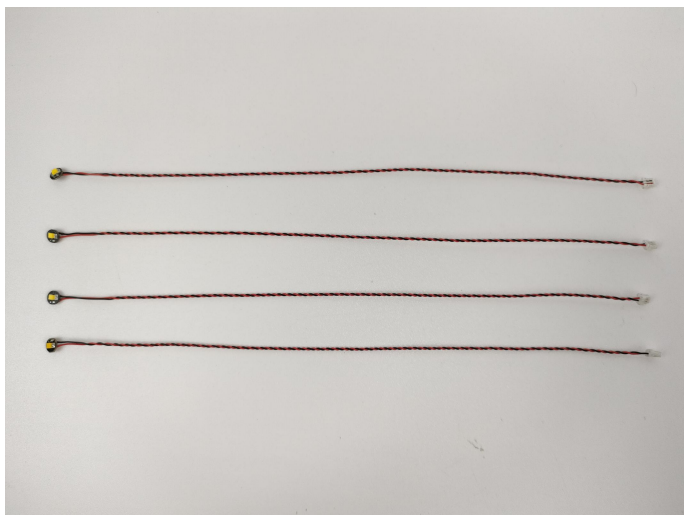


Take out the USB power cable.



Connect them to the remote control module.

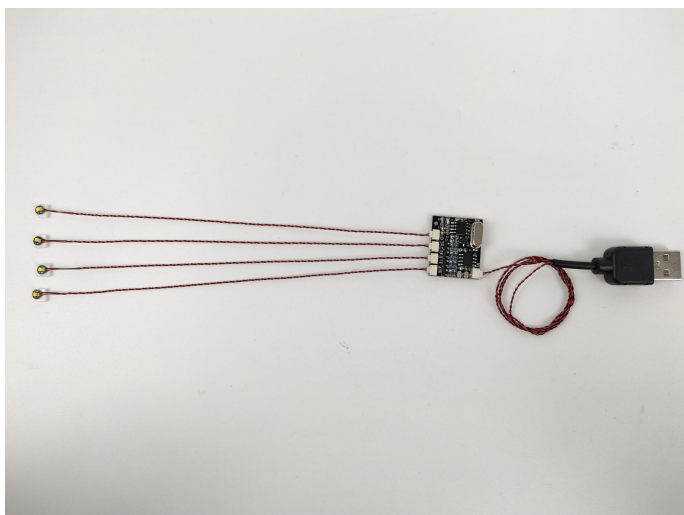


Connect the power.

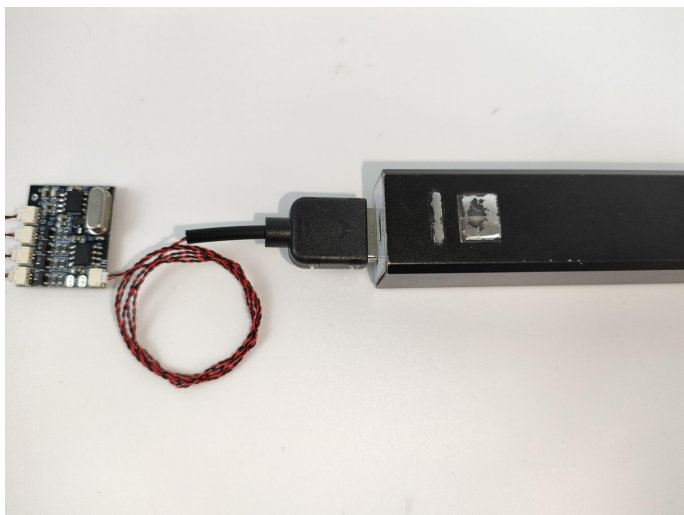


Press the on button and the light will come on normally.

If there is any problem with the parts, please contact our after-sales service for replacement.

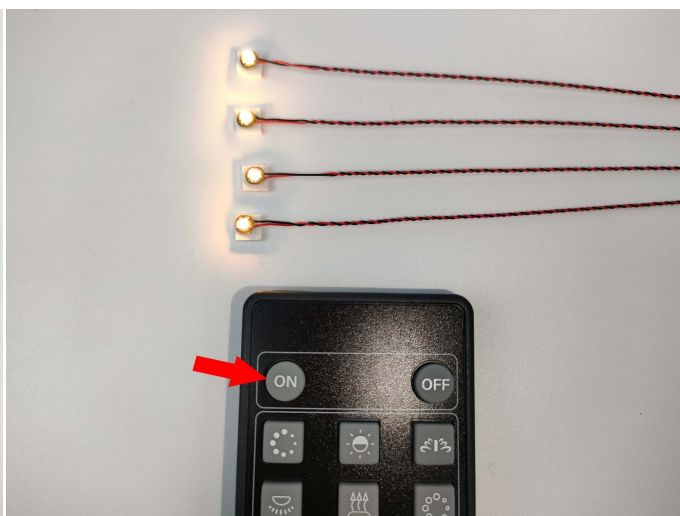

**If there is any problem with the spare parts,
please contact our after-sales service for replacement!**

When we test "A01003 Light-15CM Red" particles,Take out the bag labelled "A01003 Light-15CM Red".Take out one of the light and connect it to the socket. Turn on the power bank, the light will turn on normally as shown below.

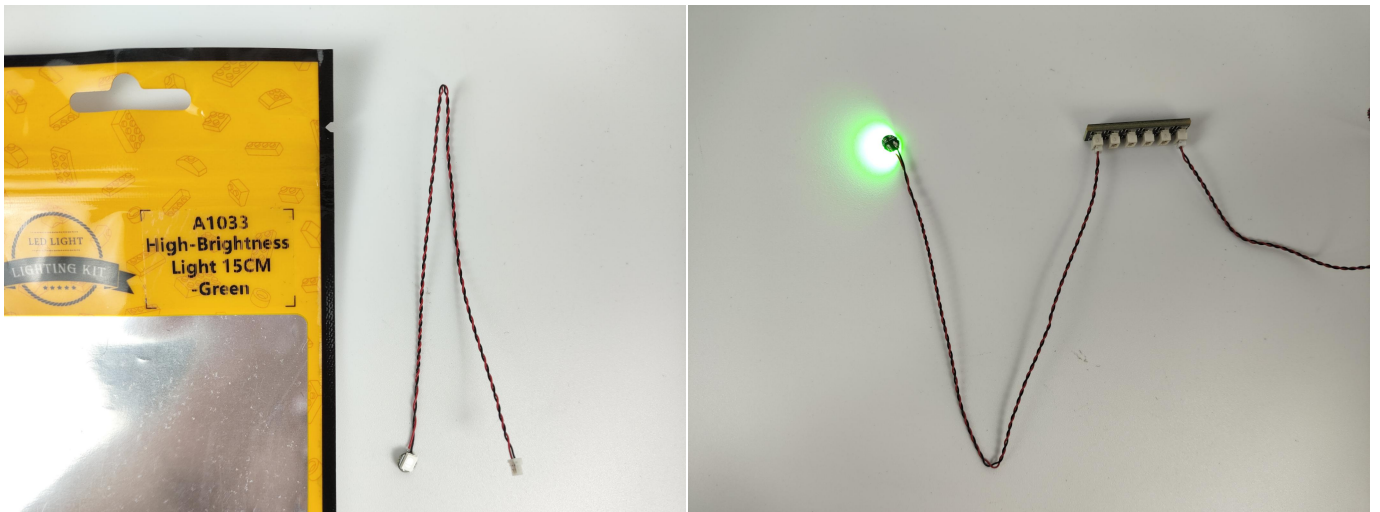

Test each lamp according to this method. It should be noted that after the test, the lamp must be returned to the corresponding bag to avoid confusion of types.




**The components needs to be tested in this set is 4* High-Brightness Light 15CM-Blue,1* High-Brightness Light 15CM-Green,3* Light Strip-Red,1* Light-15CM Blue.
Please contact us immediately if any components don't work.**

Section C: laying out components following the instruction.


1




2

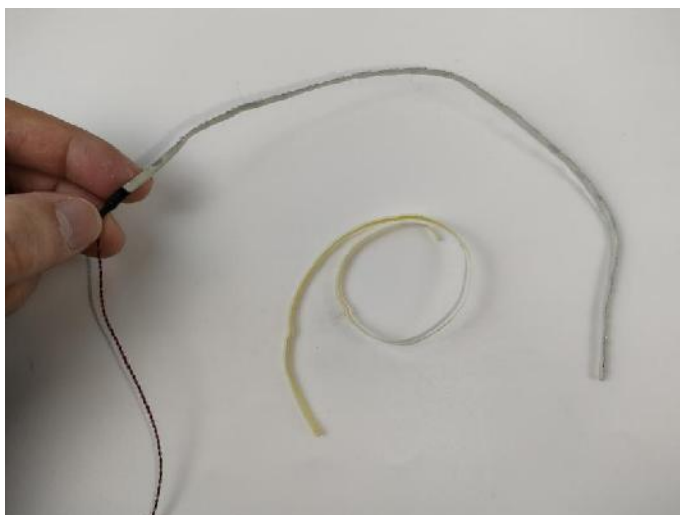



3

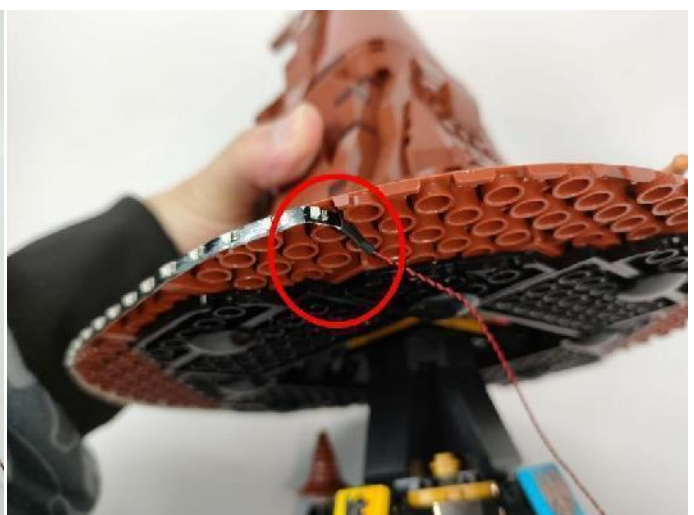



4

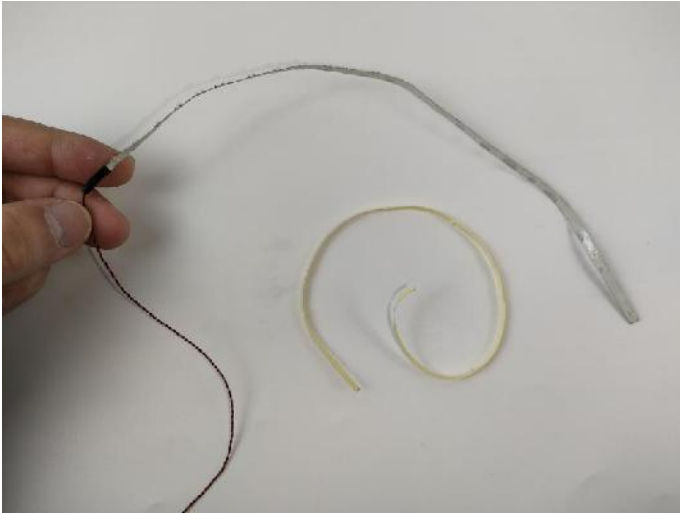


5

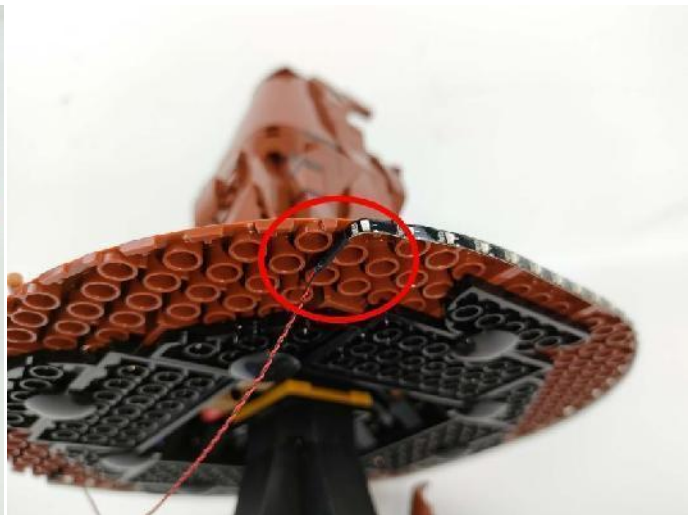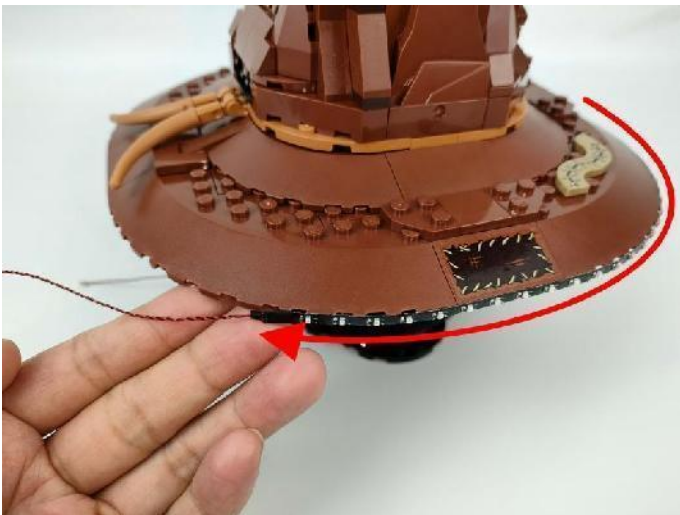

6

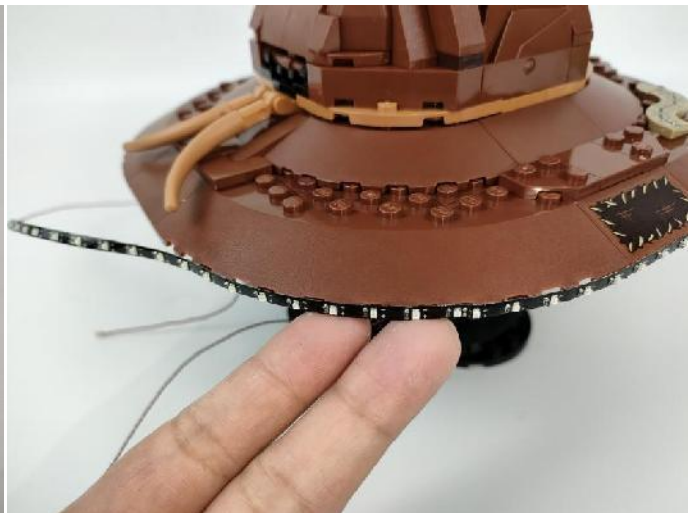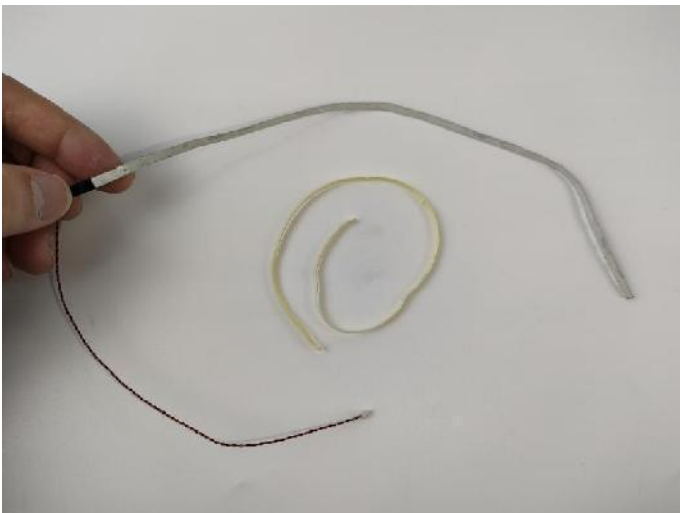



7

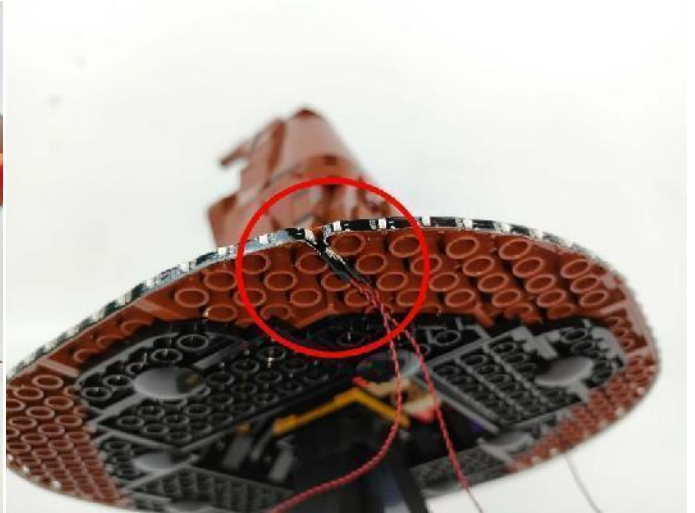

8



9

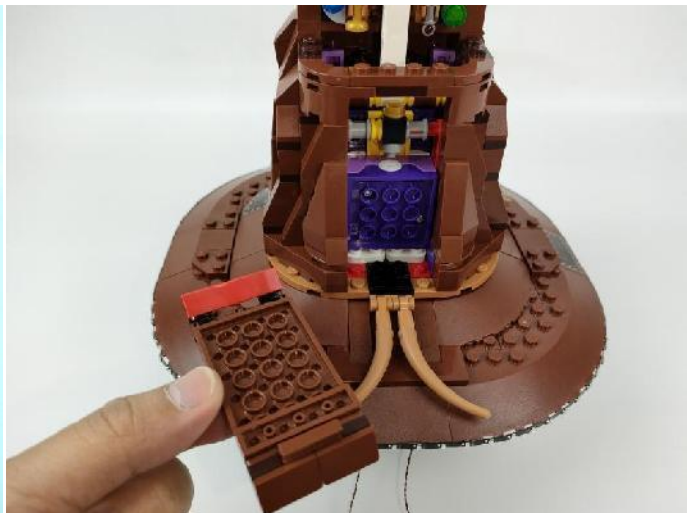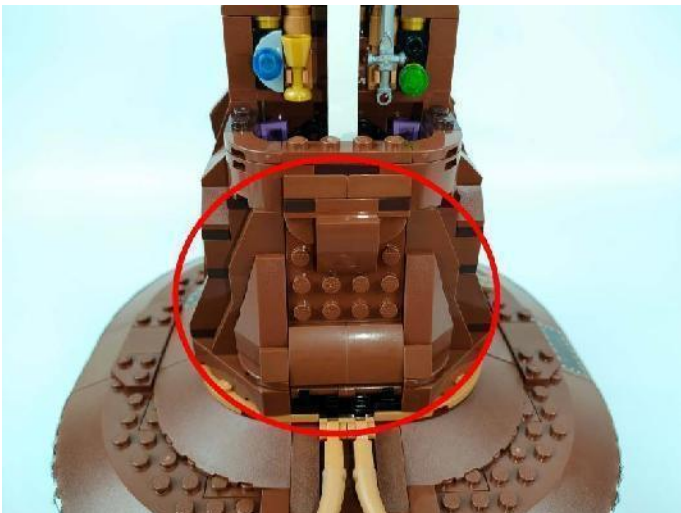

10



11



12



Tips

The plate without slit:

The plate without slit:

The squeeze causes the protective layer of the wire to be torn apart, the positive and negative wires touch together, and the set is short-circuited and the hot or wire is crushed, the wire to be disconnected and don't work.



The plate with slit:


The plate with slit:

The wire has enough space to avoid being squeezed endowed with longer service life and more stable effect.




The slit on the the plate round 1X1 are hand-made to avoid squeeze the wire and cause short circuit and abnormalheat during installation.


13

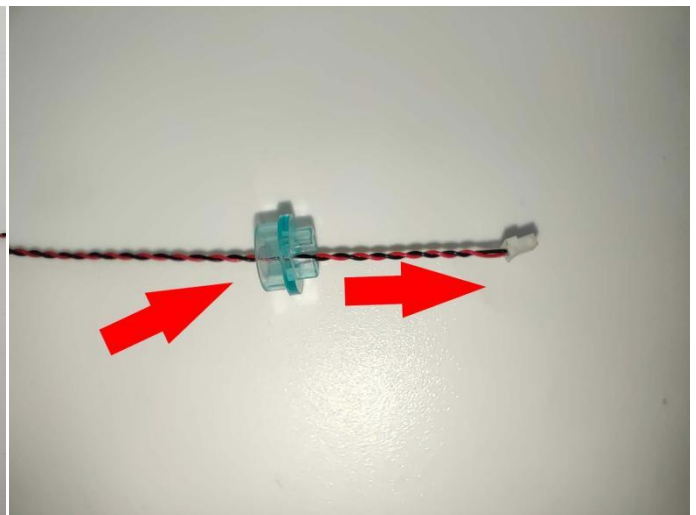



14

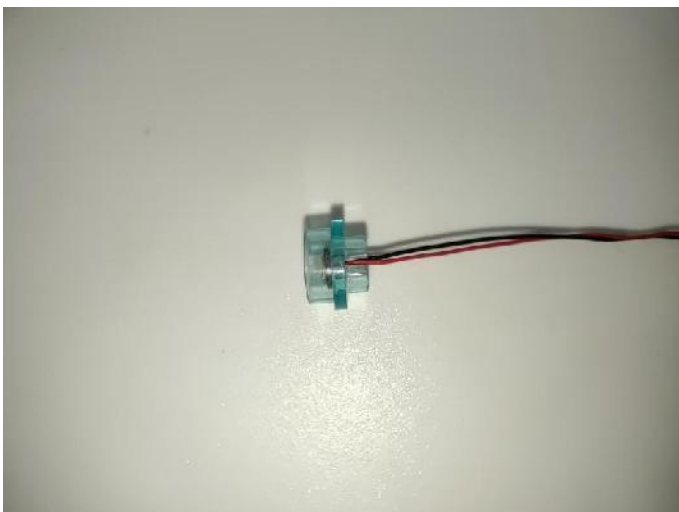

15

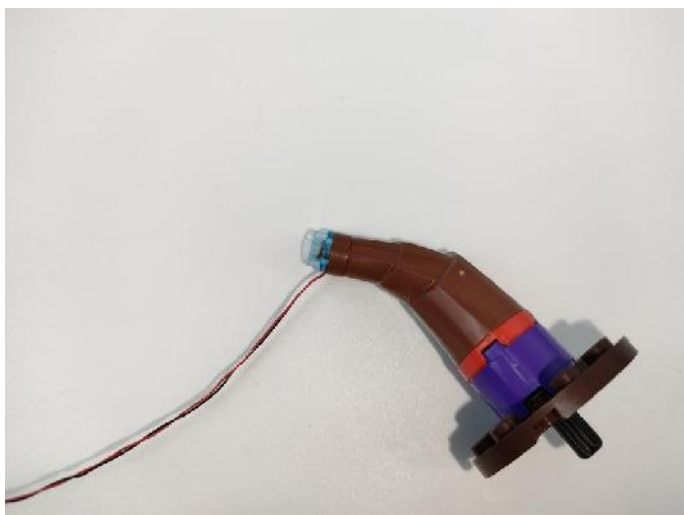


16

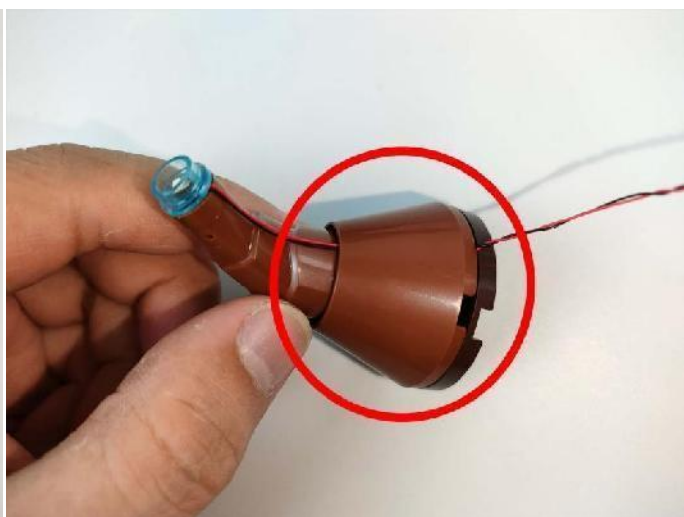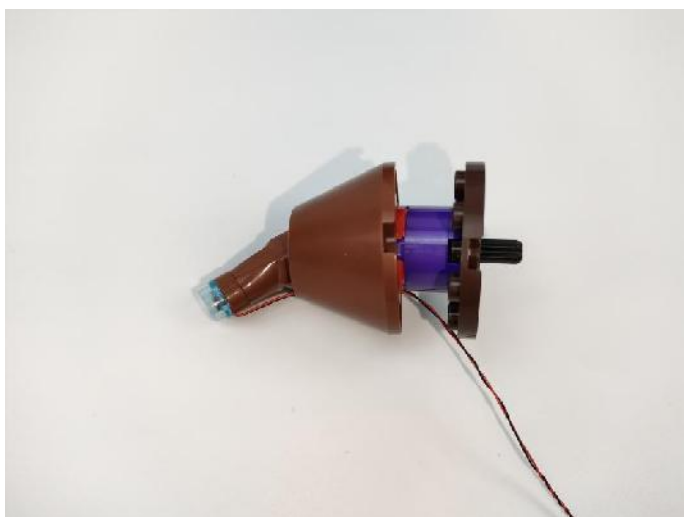

17




18

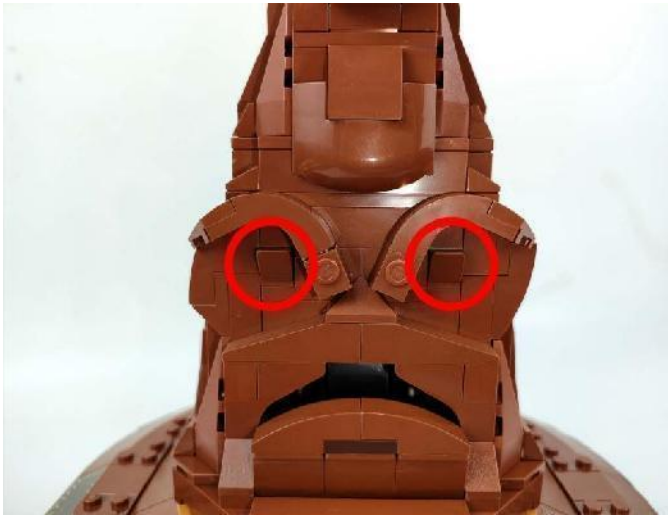


19




20

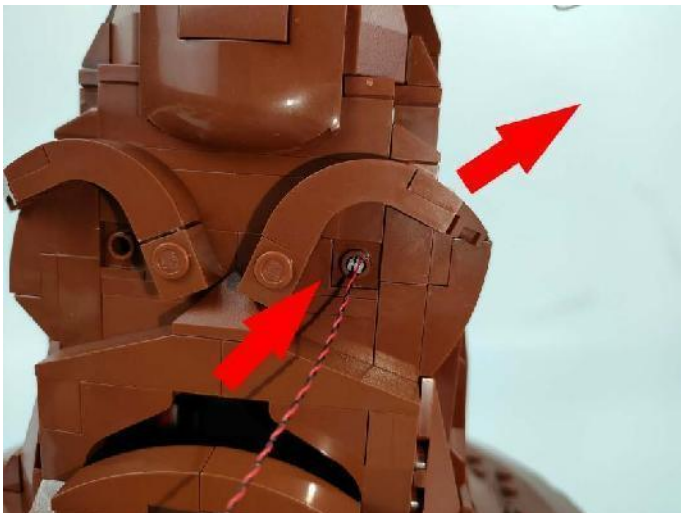

21

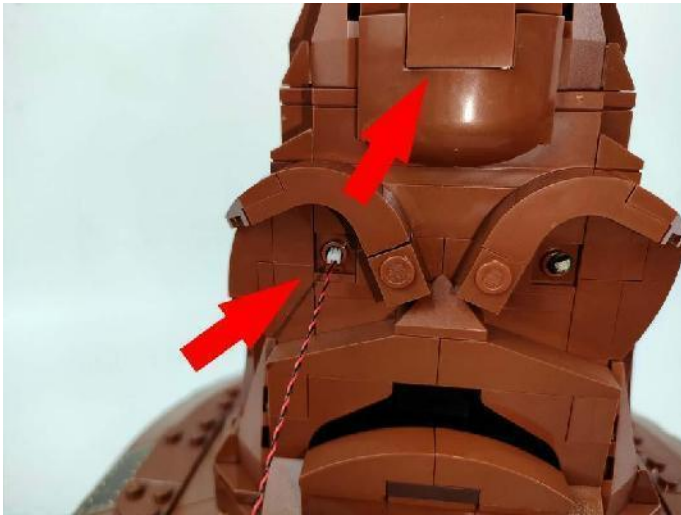


22

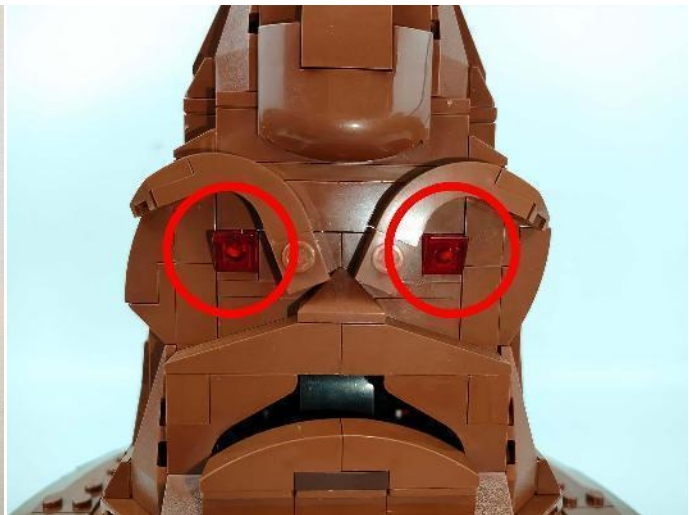



23



24

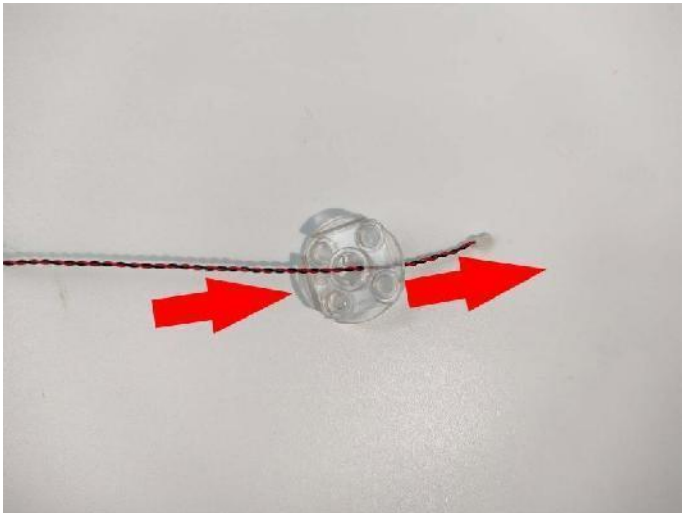

25

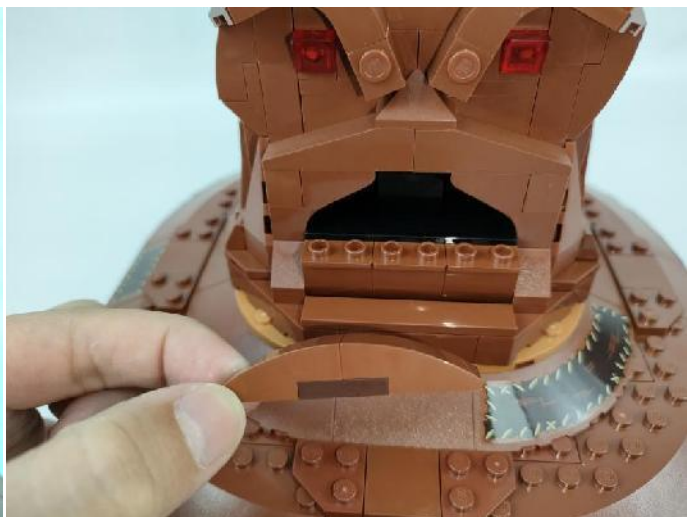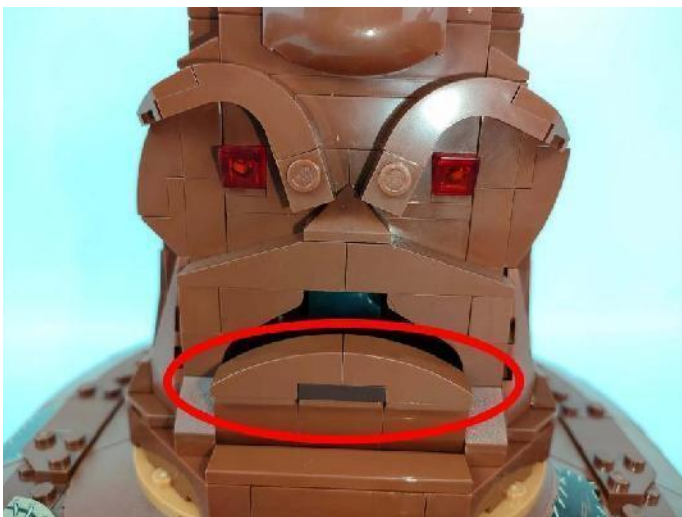

26




27




28



29

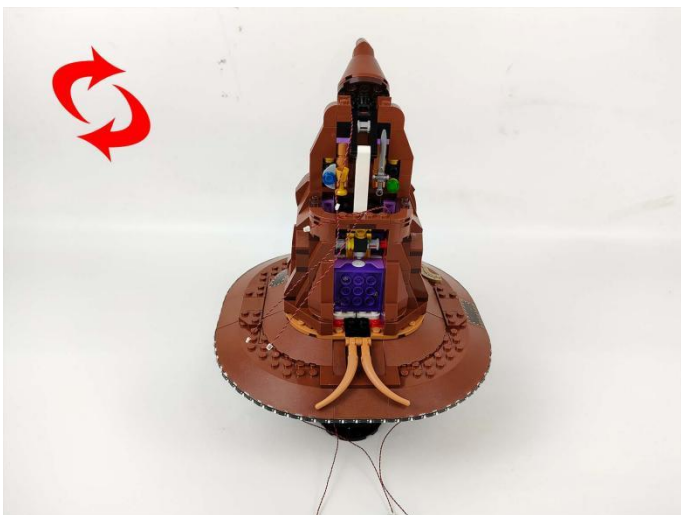

30

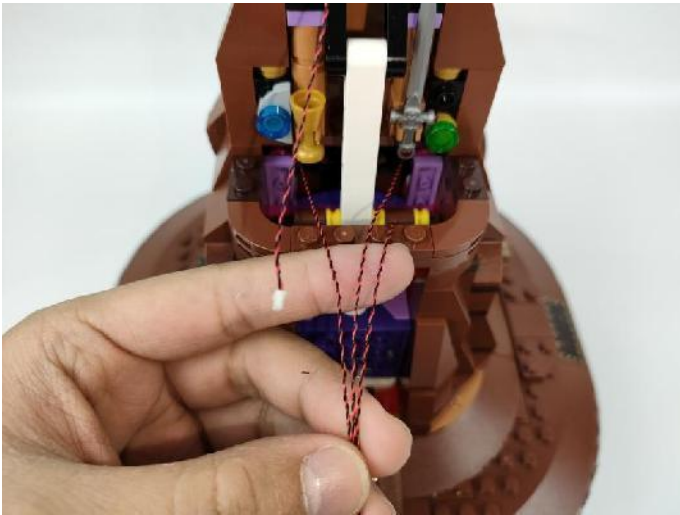


31




32




33

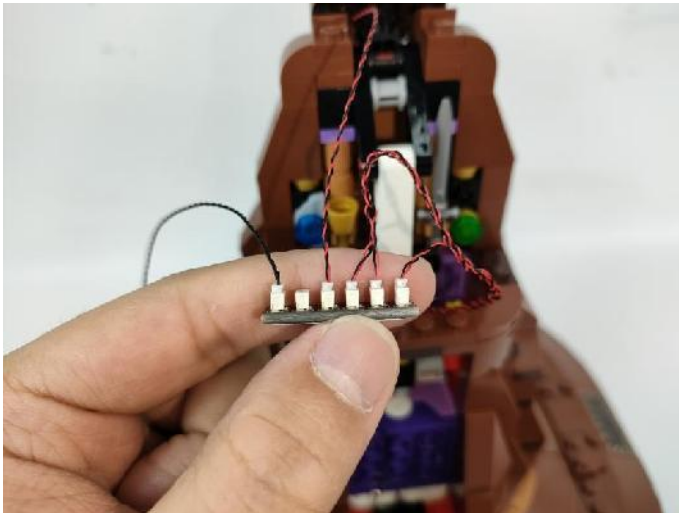

34

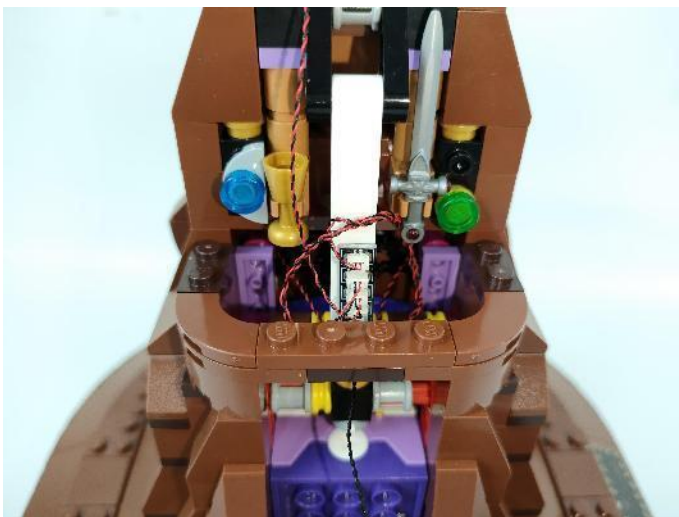



35

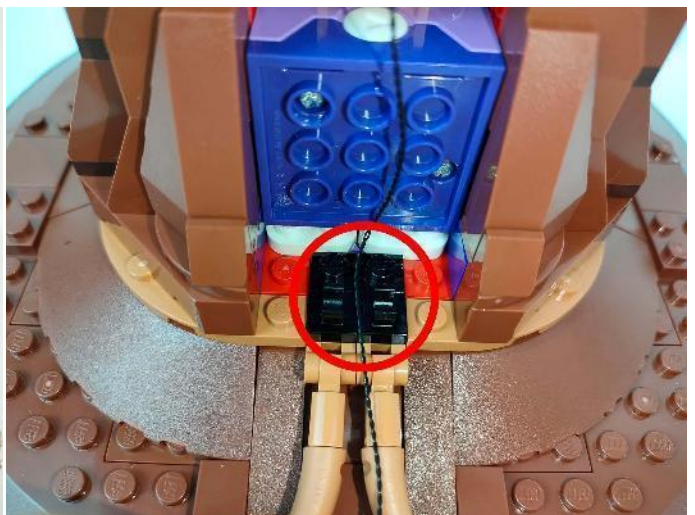

36



37

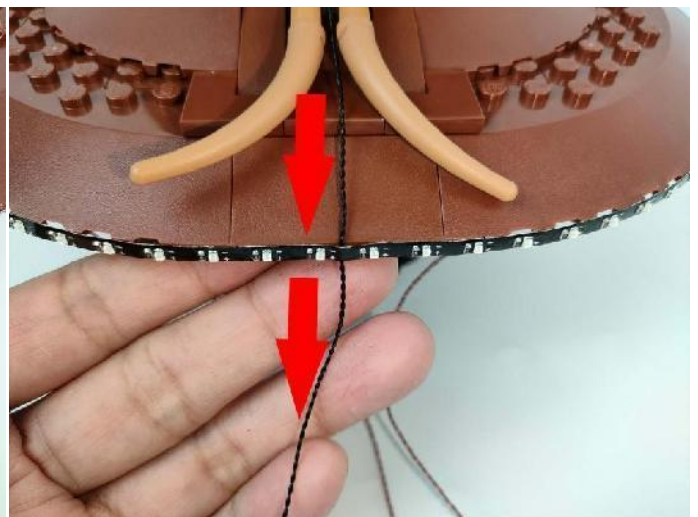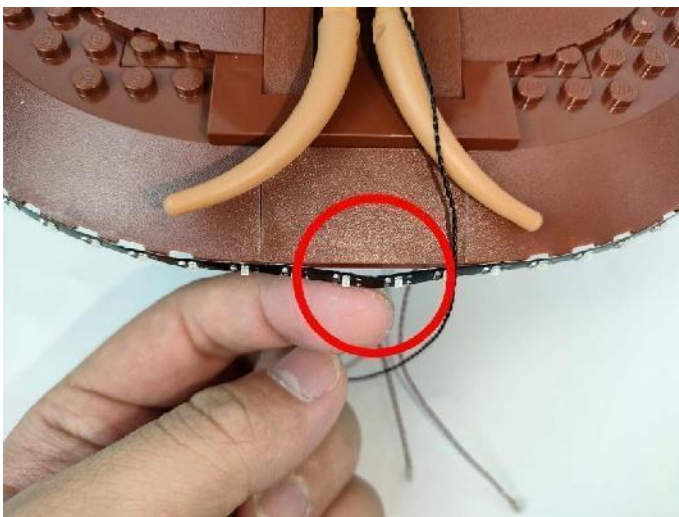



38



39




40

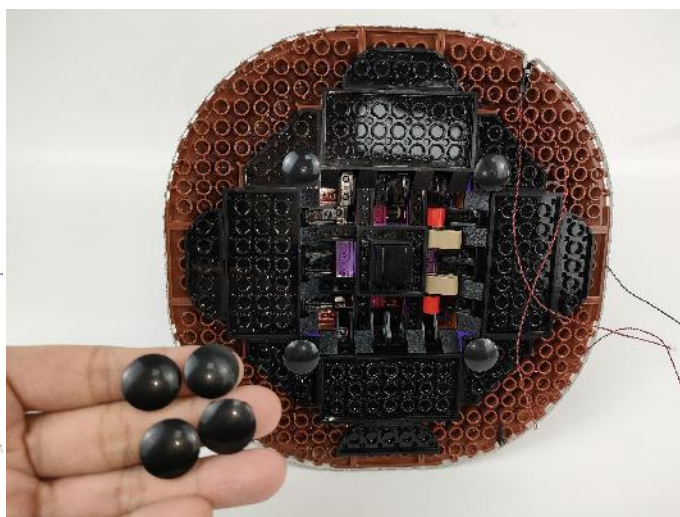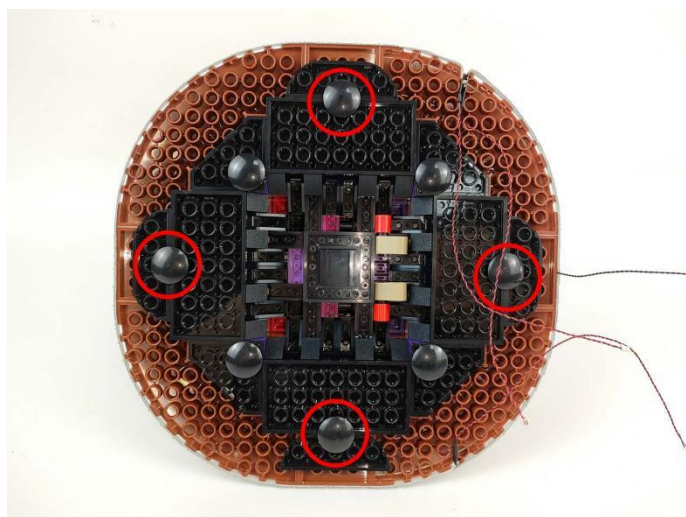


41





42

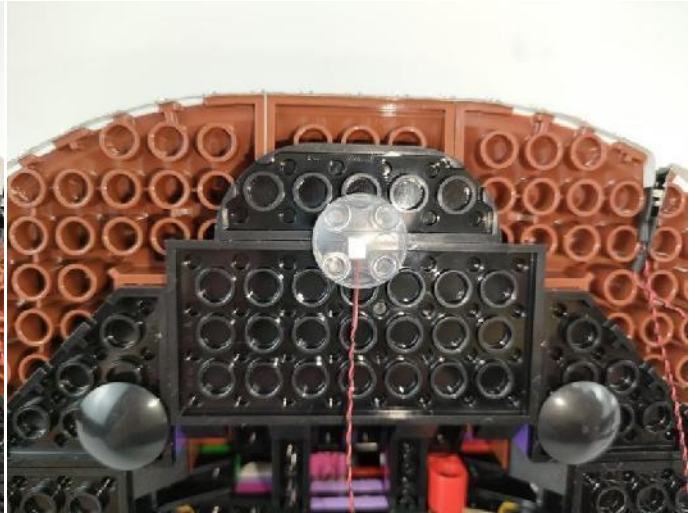



43

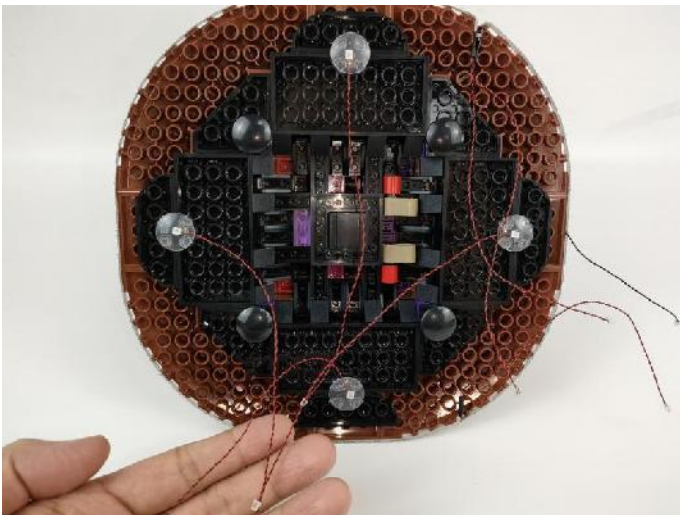

44

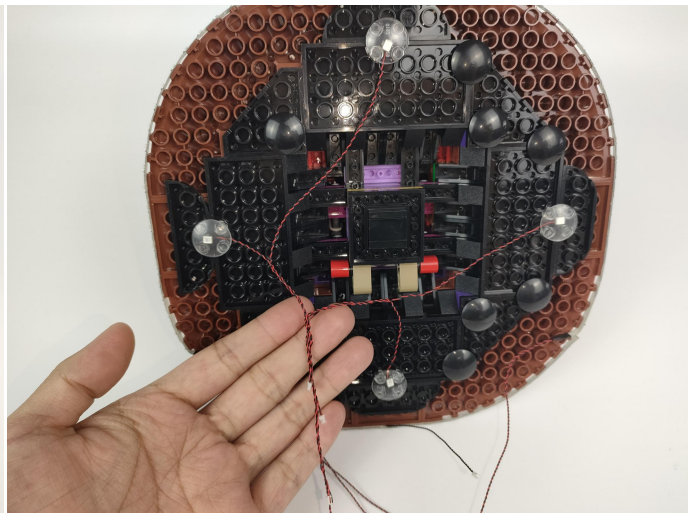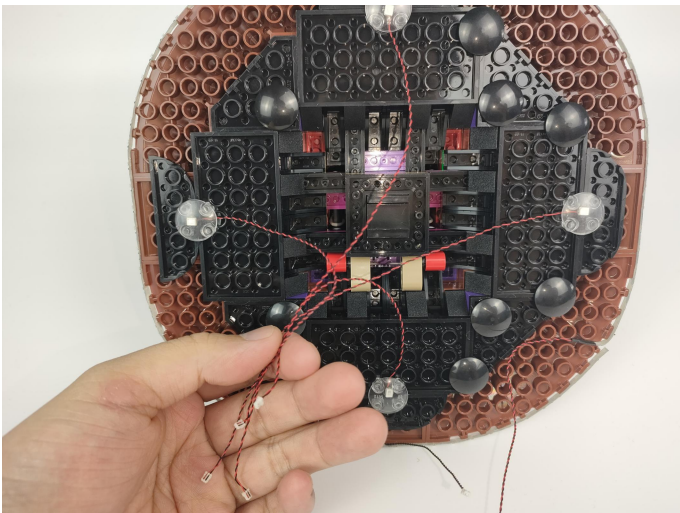


45

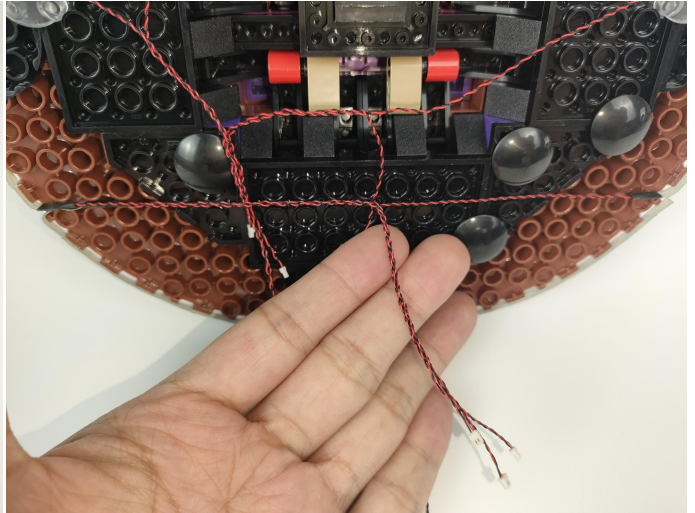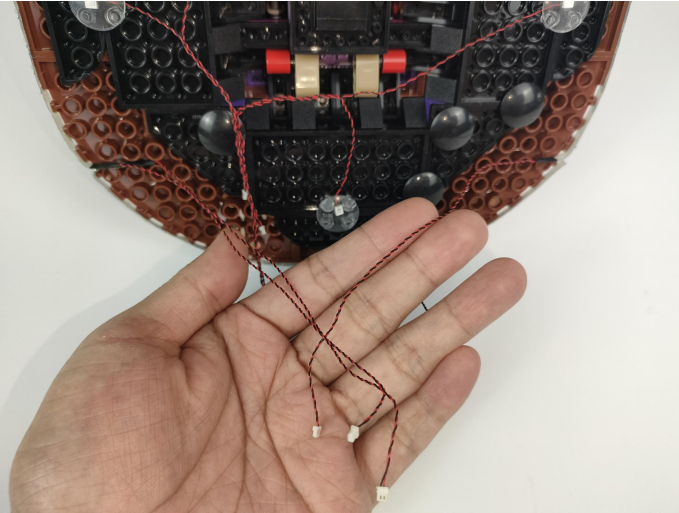



46



47

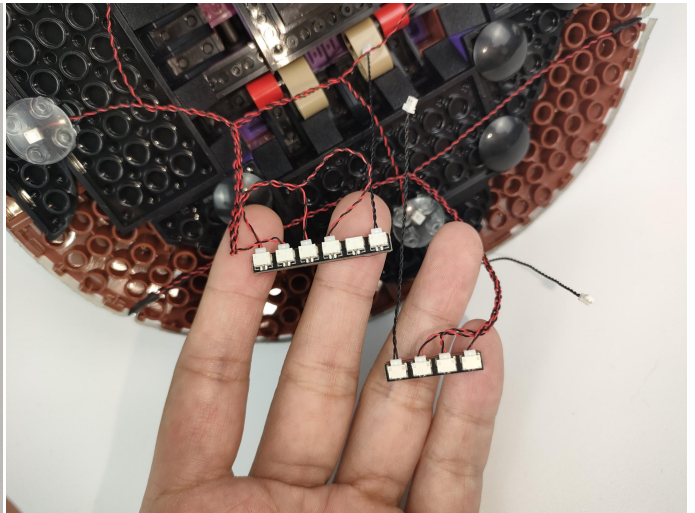

48

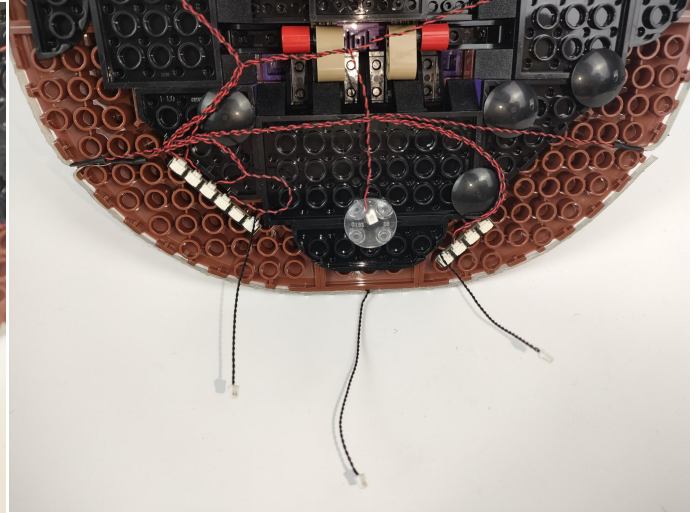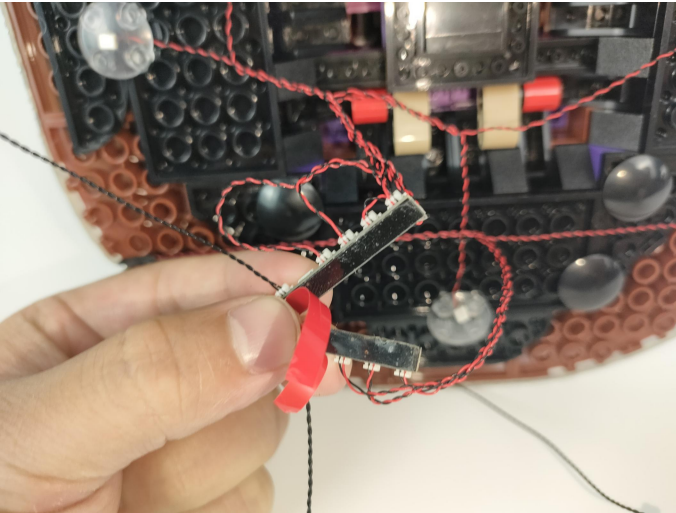

49




Remote control function introduce




- | | |
|---|--|
| ON: All lights turn on sequentially. | OFF: All lights are off. |
| ☼: Function 1: A, B, C, D are turned on slowly in sequence. | |
| ☀: Function 2: Breathing light mode. | |
| ⚡: Function 3: A and D the light is on and C and B flash alternately. | A: Turn A on/off. |
| ☼: Function 4: A the light is on, B, C, D flow light effect I. | B: Turn B on/off. |
| ☼: Function 5: A the light is on, B, C, D flow light effect II. | C: Turn C on/off. |
| ⚡: Function 6: Quickly open from A to D in turn. | D: Turn D on/off. |
| ⚡: Function 7: A, B, C, D flow light effect. | ↑: Increase frequency. |
| ⚡: Function 8: A, B, C, D flash alternately. | ↓: Decrease frequency. |
| | *: Brightness+: Increases brightness |
| | *: Brightness-: Decreases the brightness |

- | | |
|--|--|
| ON: Alle Lichter werden nacheinander eingeschaltet. | OFF: Alle Lichter sind aus. |
| ☼: Funktion 1: A, B, C, D werden langsam nacheinander eingeschaltet. | |
| ☀: Funktion 2: Atemlichtmodus. | |
| ⚡: Funktion 3: A und D bleiben an und C und B blinken abwechselnd. | A: Turn A on/off. |
| ☼: Funktion 4: A ist immer eingeschaltet, B, C, D fließendes Wasser Lichteffect I. | B: Turn B on/off. |
| ☼: Funktion 5: A ist immer eingeschaltet, B, C, D, fließendes Wasser Lichteffect II. | C: Turn C on/off. |
| ⚡: Funktion 6: Schnell nacheinander von A nach D öffnen. | D: Turn D on/off. |
| ⚡: Funktion 7: A, B, C, D fließendes Wasser Lichteffect. | ↑: Increase frequency. |
| ⚡: Funktion 8: A, B, C, D blinken abwechselnd. | ↓: Decrease frequency. |
| | *: Brightness+: Increases brightness |
| | *: Brightness-: Decreases the brightness |


The remote control does not contain batteries, please buy a CR2025 or CR2032 button battery in the nearest store and install it in the remote control.

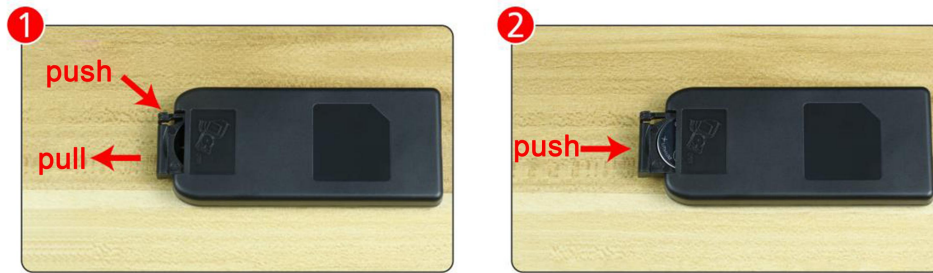


50

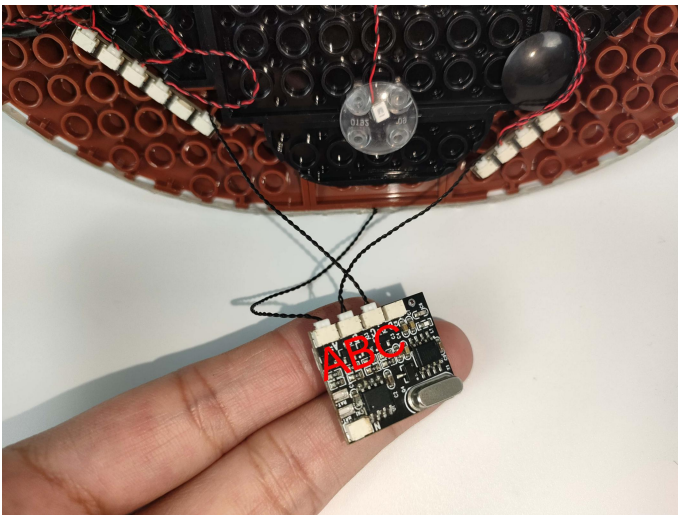


51

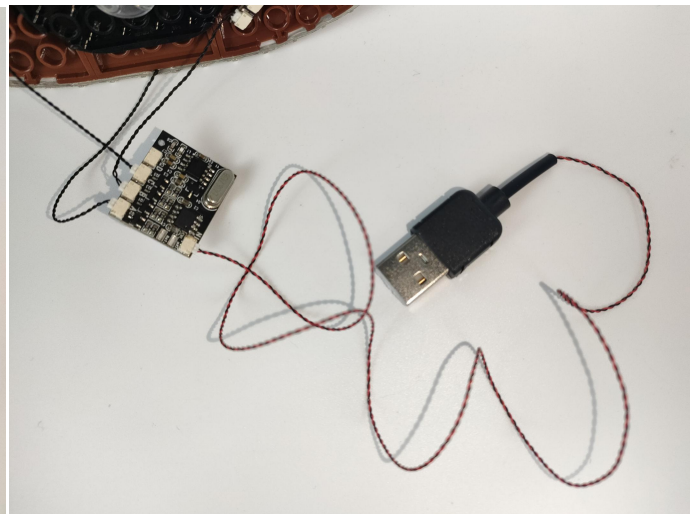

52

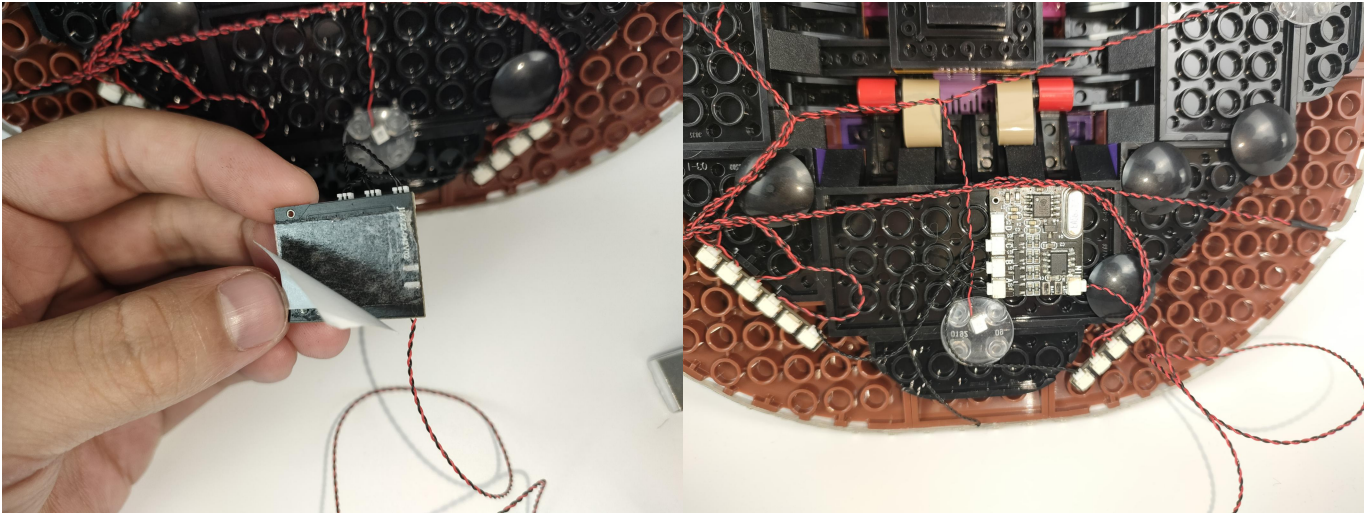

53

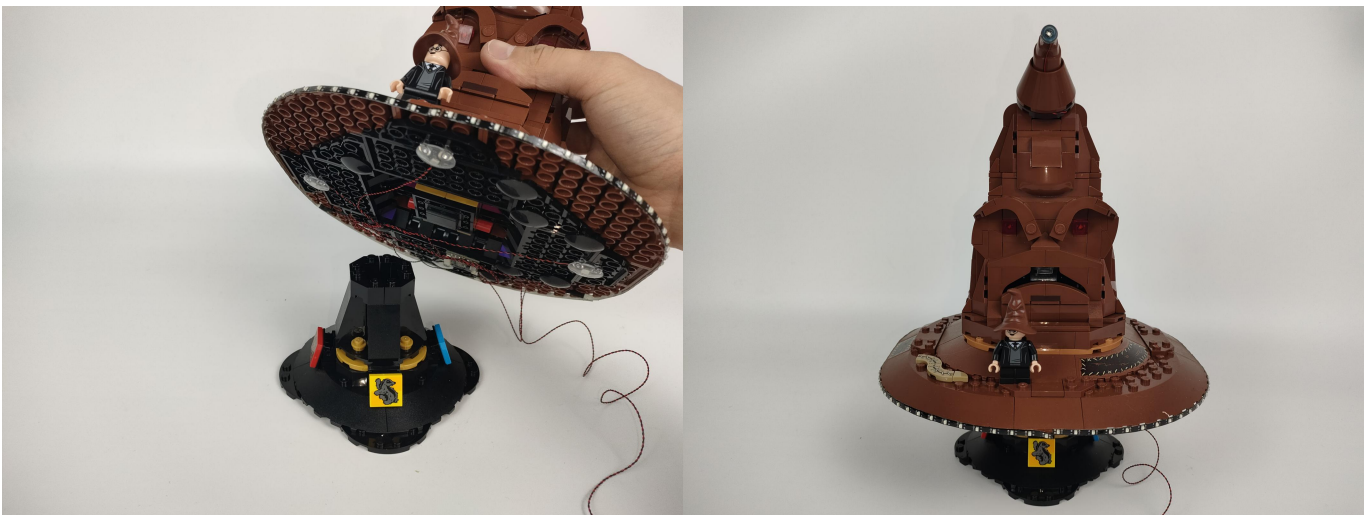


54



**If there is any problem with the spare parts,
please contact our after-sales service for replacement!**

Good job, you've done all the installation steps, power it up and enjoy your work.

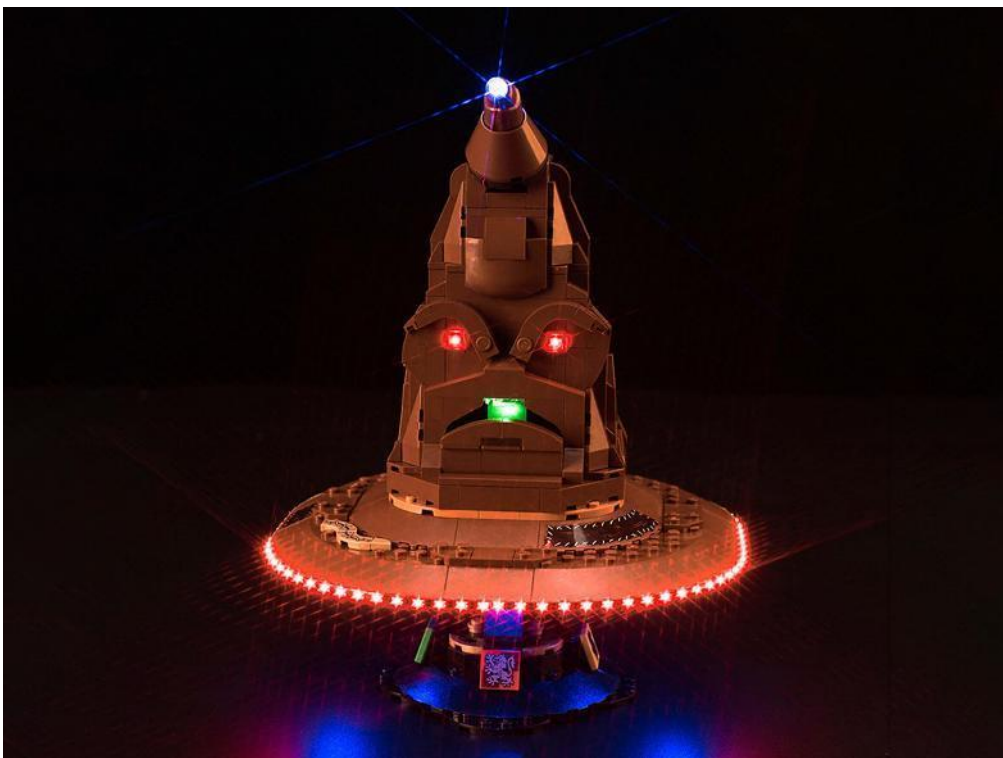

The battery box can also power the set. If it is necessary to change the power supply , prepare three AAA batteries, install them in the battery box, turn on the switch on the battery box, remove the plug of the USB Power Cable from the socket of the expansion board,plug the plug of the battery box to the same socket in the expansion board to power the suit as well.

THANKS